



PAGE PRINTER

FS-680



PARTS CATALOGUE

14-12-1999

FS-680 Parts Catalogue

Table of Contents

Enclosure (Fig.1)	3
Frame (Fig.2)	5
Drive Assy (Fig.3)	8
Controller (Fig.4)	10
Fuser (Fig.6)	12
Processor Unit (Fig.8)	14
Scanner Unit (Fig.9)	16
Developer Unit (Fig.10)	18

Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:


'Ref No.'	Reference number which corresponds to the parts in the figure
'Part code'	Part code which identifies the part
'Part description'	A brief description of the part
'Quantity'	Quantity of the part used in the printer or option

Only the parts highlighted in **BOLD** should be ordered. All other parts are for reference only and are not stocked.

Consumables and Maintenance Kits


TK-16	Toner Kit
-------	-----------

Fig.1 – Enclosure

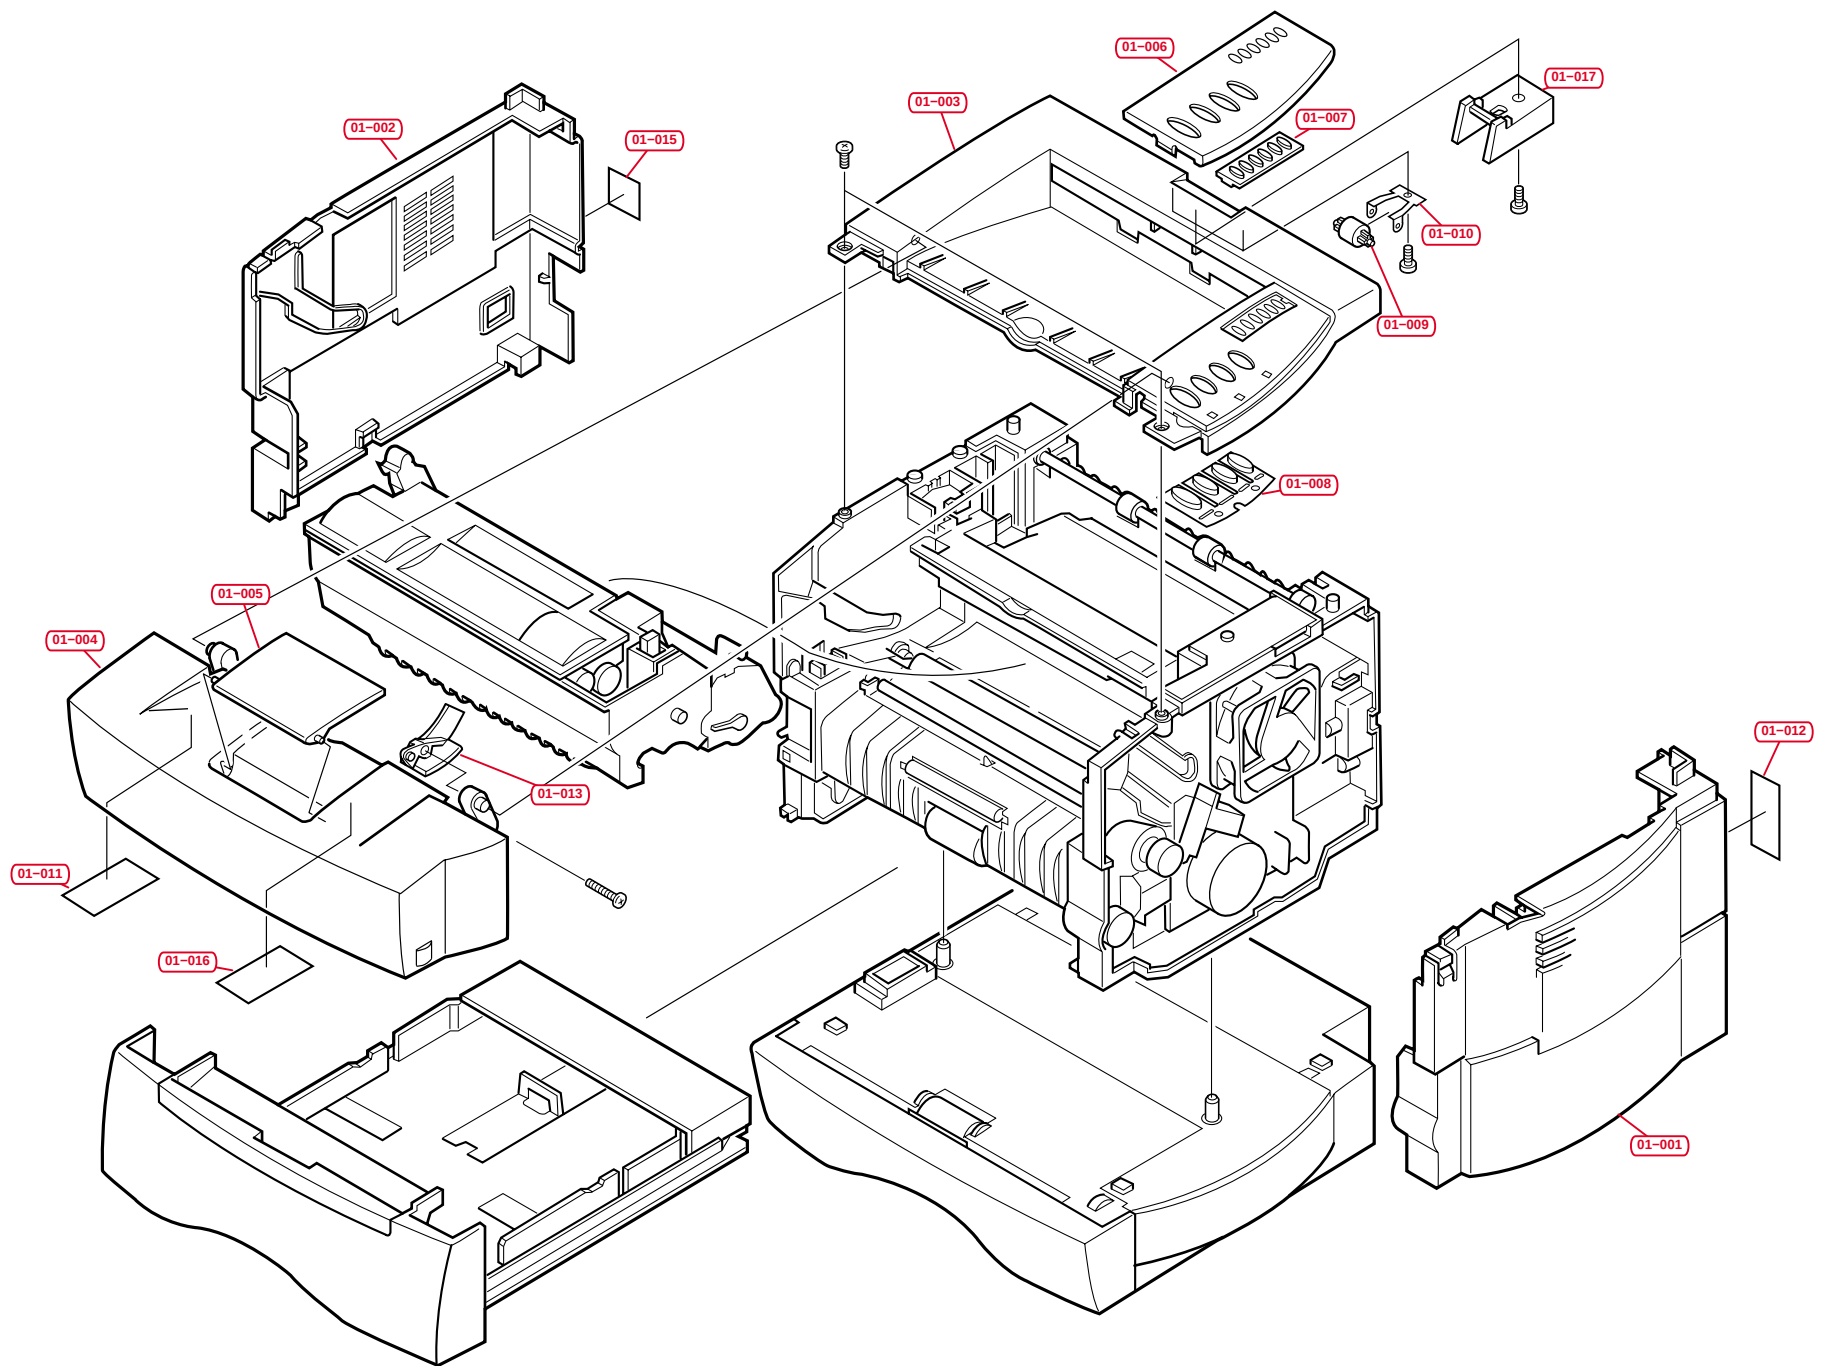

Ref No.	Part Code	Description	Quantity
01-000	PU-18	Process Unit 5PLPZXPAEKE	1
01-000	LK-18	Scanner Unit 5PLPZ6CAEKE	1
01-001	5MVB886CH006	Cover Right	1
01-002	5MVB885CH001	Cover Left	1
01-003	5MVB886CH005	Cover Top	1
01-004	5MVB876CH009	Lid Top	1
01-004	5MVB876CH002	Lid Top R	1
01-005	5MVX661SH003	Tray Exit FD	1
01-006	5MVX762SH004	Panel Top English	1
01-006	5MVX762SH007	Panel Top German	1
01-006	5MVX762SH008	Panel Top French	1
01-006	5MVX762SH009	Panel Top Japanese	1
01-007	5MVX621SC001	Cover LED	1
01-008	5MVX662SB018	Button	1
01-009	5MVM273DB003	Roller Pinch	1
01-010	5MMX322LD018	BKT Pulley FD	1
01-011	5MVVL771WN16	Label Diagram	1
01-012		Ser No Plate (U)	1
01-013	5MVX322SH002	Lever Shutter	1
01-015		Label Ser Caution	1
01-016	5MVVL771WN17	Label Diagram B	1
01-017	5MVX322DW006	Rib Stocker	1
01-018	5AAVCASET202	PC-17 Paper Cassette	1
01-000	5AAVCOVER192	Cover Top Assy	1
01-000	5AAVCOVER197	Cover Rear Assy	1
09-002	5MVQ711GX002	Mirror Exit	1
09-003	5MVS721GC001	Glass Exit	1
09-004	5MVX711SB001	Shutter Scan	1
09-005	5MMW161LD032	Spring Shutter	1
09-009	5MVX711SB001	Lever Interlock	1

Fig.2 – Frame

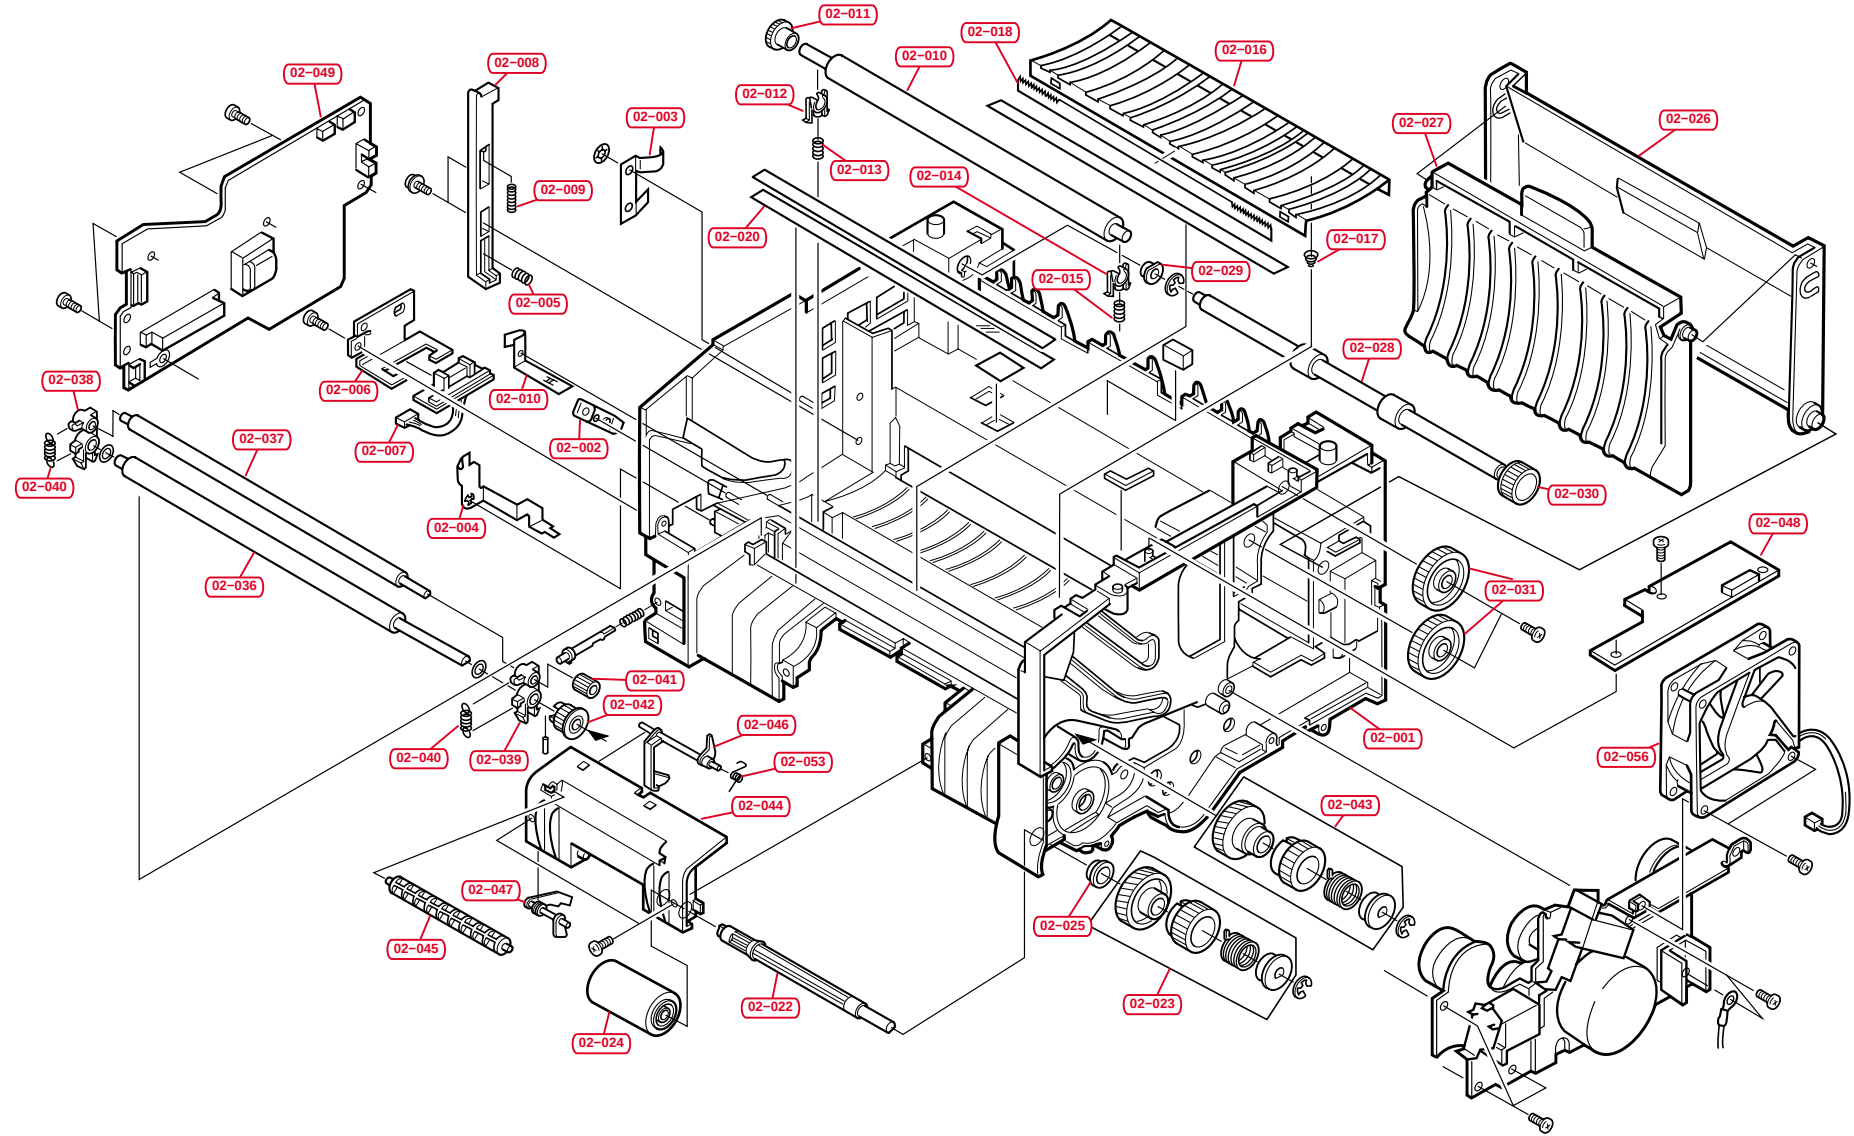

Ref No.	Part Code	Description	Quantity
02-001	5MVB887CB001	Frame Base	1
02-002	5MMX421LD014	Contact Bias	1
02-003	5MMX431LD008	Contact Main	1
02-004	5MMX433LD006	Contact Earth Regist	1
02-005	5MMX522LD011	Contact Transfer	1
02-006	5MML543SL002	Plate Connector DLP	1
02-007	5MVS531KN001	Sheet Insulator	1
02-008	5MVQ622SB001	Rod Interlock	1
02-009	5MMW261LD024	Spring Interlock A	1
02-010	5MMW261LD029	Spring Interlock B	1
02-010	5MVT443DW001	Pin Size Select	1
02-011	5MMT876SN063	Roller Transfer	1
02-011	5MMW241LD012	Spring Size Select	1
02-012	5MVG127DB035	Gear TC Z18	1
02-013	5MVX221DB010	Bush Transfer R	1
02-014	5MVX221DW004	Bush Transfer L	1
02-015	5MMW211ld004	Spring Transfer	1
02-016	5MMW251SX002	Spring Transfer R	1
02-017	5MMC862SD004	Plate Earth Guide	1
02-018	5MMW261LD025	Spring Earth	1
02-019	5MVS825XF005	Brush Discharger	1
02-020	5MVS722KN001	Sheet Regist	1
02-021	5MVS722KN003	Sheet Regist B	1
02-022	5MMT766SN006	Shaft Feed	1
02-023	5AAVCLTCH011	Clutch Feed	1
02-024	5AAVROLL*029	Roller Feed Assy	1
02-025	5MVM122DB003	Bush Pom	1
02-026	5AAVCOVER197	Cover Rear	1
02-026	5MMT874LD002	Roller Exit	1
02-027	5MVM176DW001	Bush Exit	1
02-028	5MVG137DW003	Gear Exit Z22	1
02-029	5MVG148DN035	Gear Z38	1
02-030	5MVX651SB006	Cover Cord	1
02-031	5AACCNQHOGEA	Conn Cord S02210 Polygon Motor	1
02-032	5AACCNQH5GEA	Conn Cord S02215 Main Motor	1
02-033	5AACCNP2GEA	Conn Cord S02302 Panel	1
02-034	5AACCNP4GEA	Conn Cord S02304 Laser	1
02-035	5AACCNQG3GEA	Conn Cord S02203	1
02-036	5MMT876SN055	Roller Regist Low	1
02-037	5MMT865SN009	Roller Regist Up	1
02-038	5MVX221DB019	Bush Regist Left	1
02-039	5MVX221DW006	Bush Regist Right	1
02-040	5MMW261LD023	Spring Regist R	1
02-041	5MVG126DN013	Gear Regist Z16	1
02-042	5MVG148DN036	Gear Regist Z35	1

Ref No.	Part Code	Description	Quantity
02-043	5AAVCLTCH012	Clutch Regist	1
02-044	5MVX766DB001	Holder Feed	1
02-045	5MVT763SB001	Pulley Feed	1
02-046	5MVX642SB010	Actuator Feed	1
02-047	5MVX442SB009	Actuator Empty	1
02-048	5AAPRPWC1009AH	H.V Supply Assy	1
02-048	5AAXTR038VDA	Trans Assy	1
02-049	5EZNF2401901*01	Fan Motor	1
02-050	5MMW261LD029	Spring Interlock B	1
02-051	5MVS329RN003	Seal Frame	1
02-052	5MVQ432RB003	Cord Press	1
02-053	5MMW151LD003	Spring Actuator Reg	1
02-053	5MVS825KN001	Sheet Discharger	1
02-054	5MVS327SN001	Spacer Frame L	1
02-055	5MVS327SN002	Spacer Frame R	1
02-056	5AAY800E**09	Fan Motor	1


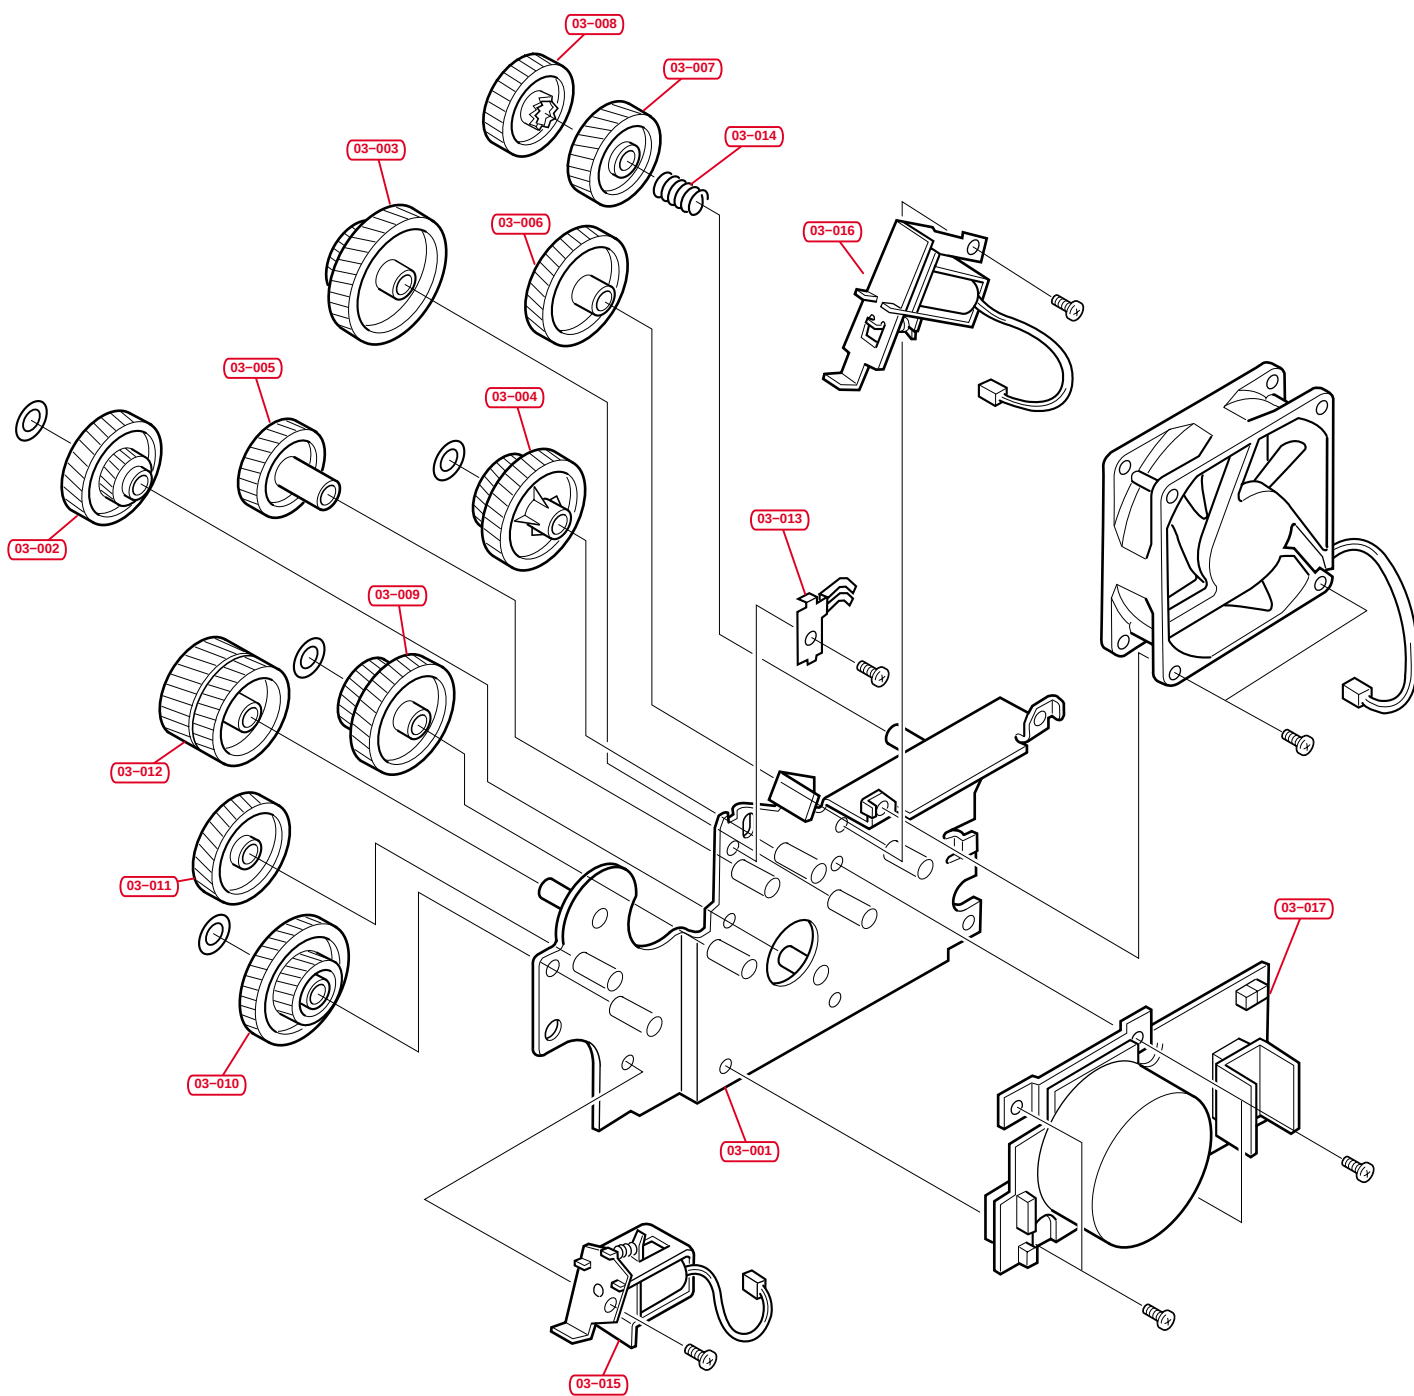


Fig.3 – Drive Assy


Ref No.	Part Code	Description	Quantity
03-000	5AAY800**09	Drive Assy	1
03-001	5MMX776SD004	Plate Drive	1
03-002	5MVG168DN012	Gear Z64H-Z19H	1
03-003	5MVG159DN009	Gear Z49H-Z22H	1
03-004	5MVG158DN025	Gear Z42H-Z25H	1
03-005	5MVG148DN034	Gear Z31H	1
03-006	5MVG158DN026	Gear Z42H	1
03-007	5MVG148DN032	Gear Free Z32H	1
03-008	5MVG148DN033	Gear Free Z32S	1
03-009	5MVG168DN013	Gear Z66H-Z27H	1
03-010	5MVG158DN027	Gear Z45H-Z24H	1
03-011	5MVG148DN030	Gear Z39H	1
03-012	5MVG148DN031	Gear Z37H-Z36H	1
03-013	5MMX331LD002	Plate Earth Drum	1
03-014	5MMW211SZ001	Spring Free	1
03-015	5EZSA2402410201	Free Solenoid Assy	1
03-016	5EZSA2402410101	Regist Soleniod Assy	1
03-017	5AAXMT033GEA	Main Motor	1

Fig.4 – Controller

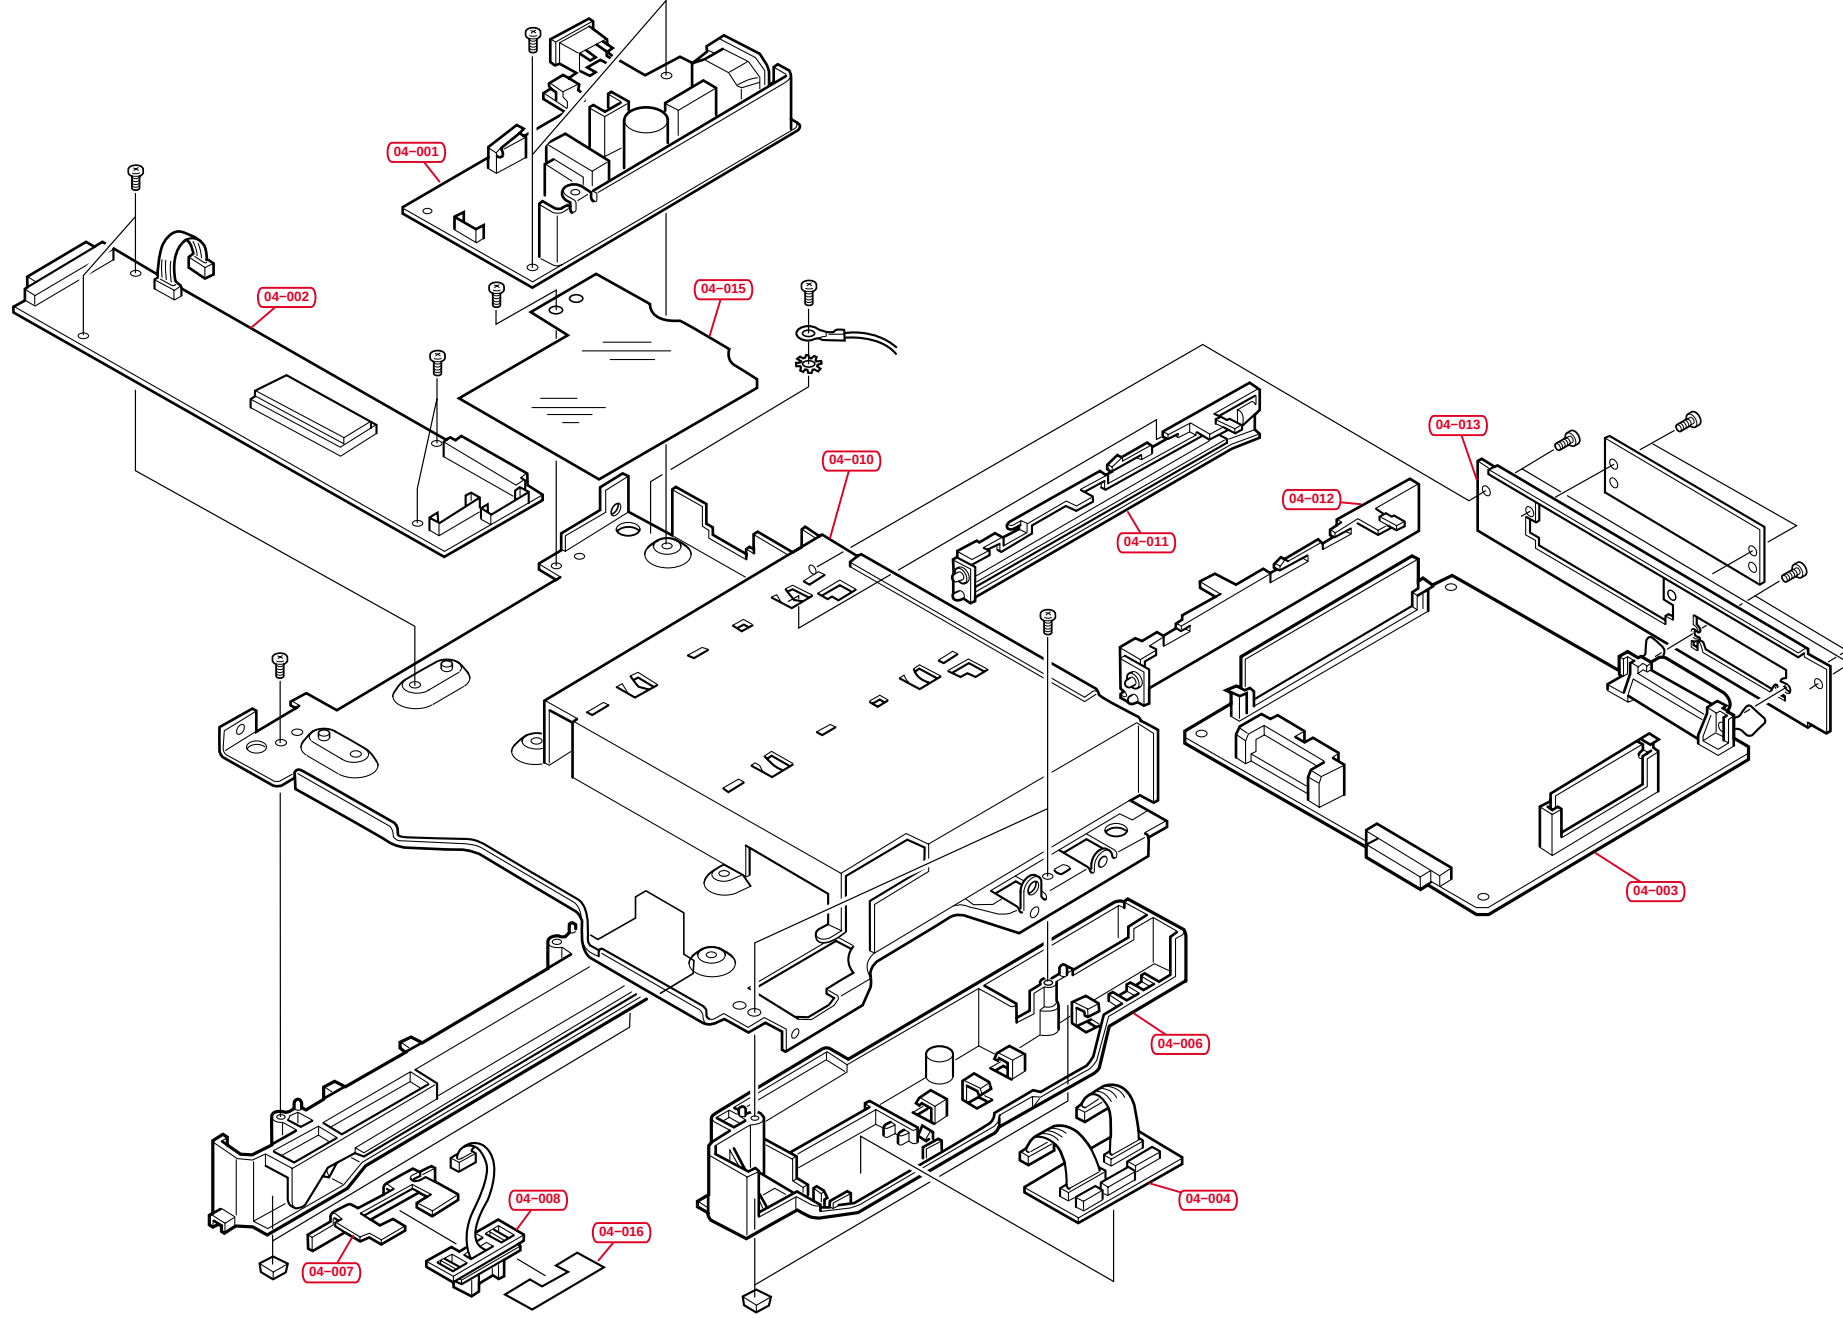


Ref No.	Part Code	Description	Quantity
04-000	5AAPRMEG4019TH	DIMM PWB Assy	1
04-001	5AAEZFS600E1	Switching Regulator 230v	1
04-001	5AAEZFS600A1	Switching Regulator 120v	1
04-002	5AAPRCZC2006AH	Engine PWB Assy	1
04-002	5AAPRCZC2006BH	Engine PWB Assy	1
04-002	5AAPRCZC2006CH	Engine PWB Assy	1
04-003	5AAPRIFC2011AH	Engine Relay PWB Assy	1
04-004	5AAPRLGC2016CH	Main PWB Assy	1
04-006	5MVB845SB002	Guide Cassette Left	1
04-007	5MVB864SB012	Guide Cassette Right	1
04-008	5MML643SL004	Plate Connector PF	1
04-010	5MVS228RB019	Foot	1
04-011	5AAVBOX**005	Box Controller Assy	1
04-012	5MMU841SD002	Panel Rear	1
04-013	5MMS636SD009	Plate Option	1
04-015	5MVS774CN001	Sheet PWB	1
04-016	5MVS522KN001	Sheet Connector	1

Fig.6 – Fuser

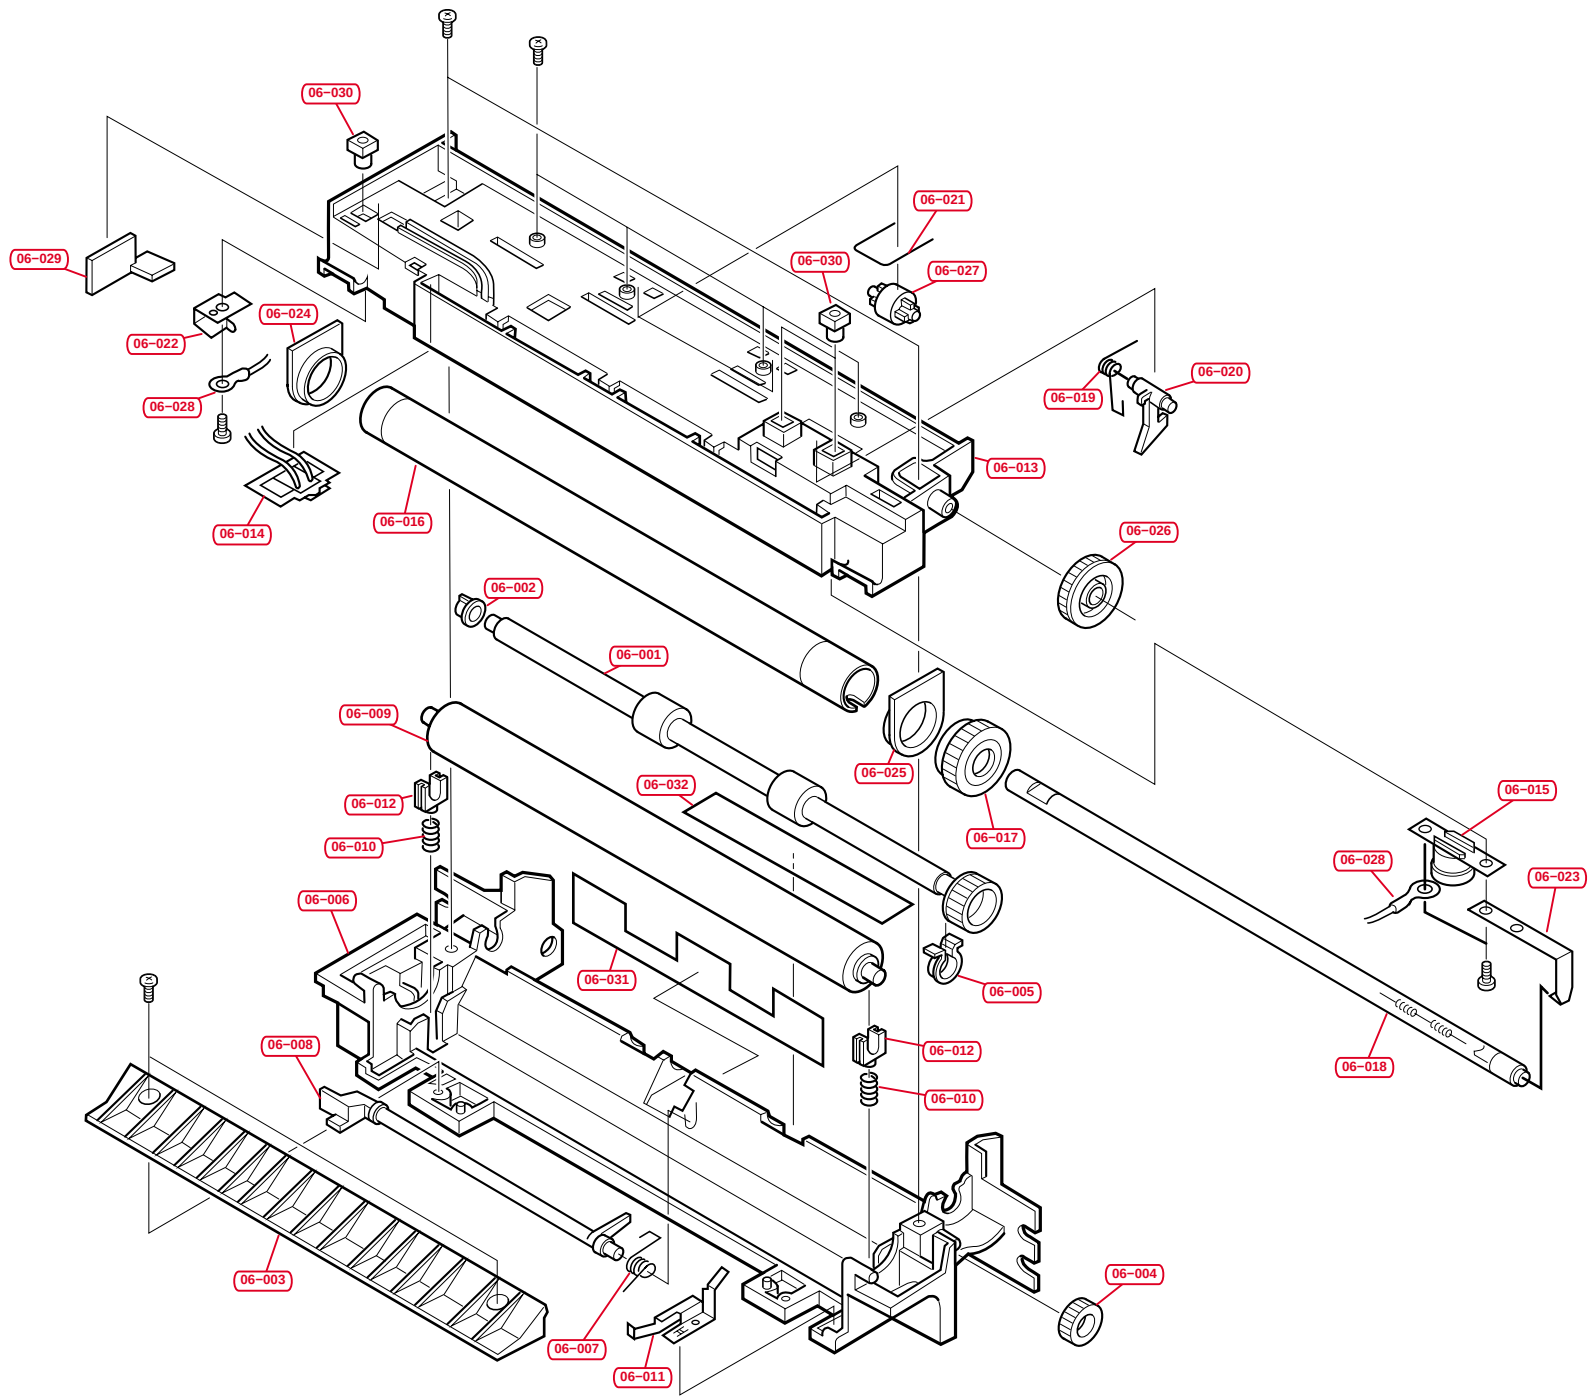


Ref No.	Part Code	Description	Quantity
06-000	FK-19	Fuser Unit(E) (5PLPZ9WAEKE)	1
06-000	FK-19	Fuser Unit (U)(5PLPZ0XAAK1)	1
06-001	5MVT876CX001	Roller Exit	1
06-002	5MVM176DN016	Bush A	1
06-003	5MVX833KB001	Paper Chute Fuser	1
06-004	5MVG127DN047	Gear Idle Z18	1
06-005	5MVM162DN005	Bush FD R	1
06-006	5MVX875KB001	Frame Fuser Low	1
06-007	5MMW261LD017	Spring Actuator	1
06-008	5MVX721CB002	Actuator Fuser	1
06-009	5MMT876SN040	Roller Press	1
06-010	5MMW261LD022	Spring Fuser	1
06-011	5MMX323LD001	Plate Earth Fuser	1
06-012	5MVX221XN002	Bush Press	1
06-013	5MVB864KB003	Frame Fuser Up	1
06-014	5AAXTM011GEA	Thermistor Assy	1
06-015	5EYFFQ15001**01	Thermo Cut Out	1
06-016	5MMT877AX003	Roller Heat	1
06-017	5MVG138XN008	Gear Fuser Z30	1
06-018	5EZPB2411920101	Lamp Heater 230v	1
06-018	5EZPB1213820101	Lamp Heater 120v	1
06-018	5EZPB1014520101	Lamp Heater 100v	1
06-019	5MMW261LD015	Spring Separator	1
06-020	5MVX222XN001	Separator	1
06-021	5MMW603LD001	Spring Exit	1
06-022	5MMX222LD016	Holder Lamp L	1
06-023	5MMX531RD002	Holder Lamp R	1
06-024	5MVM188XN013	Bush Heat L	1
06-025	5MVM288XN001	Bush Heat R	1
06-026	5MVG138DN037	Gear Fuser	1
06-027	5MVM273DB003	Roller Pinch	1
06-028	5AACCNQH1GEA	Conn Cord S02211	1
06-028	5AACCNQH2GEA	Conn Cord S02212	1
06-028	5AACCNQH6GEA	Conn Cord	1
06-029	5MVX322KB002	Support Lamp	1
06-030	5MMK116SZ001	Nut Fuser	1
06-031	5MVS821KF021	Sheet Exit	1
06-032	5MVVL731WN14	Label Fuser Caution	1

Fig.8 – Processor Unit

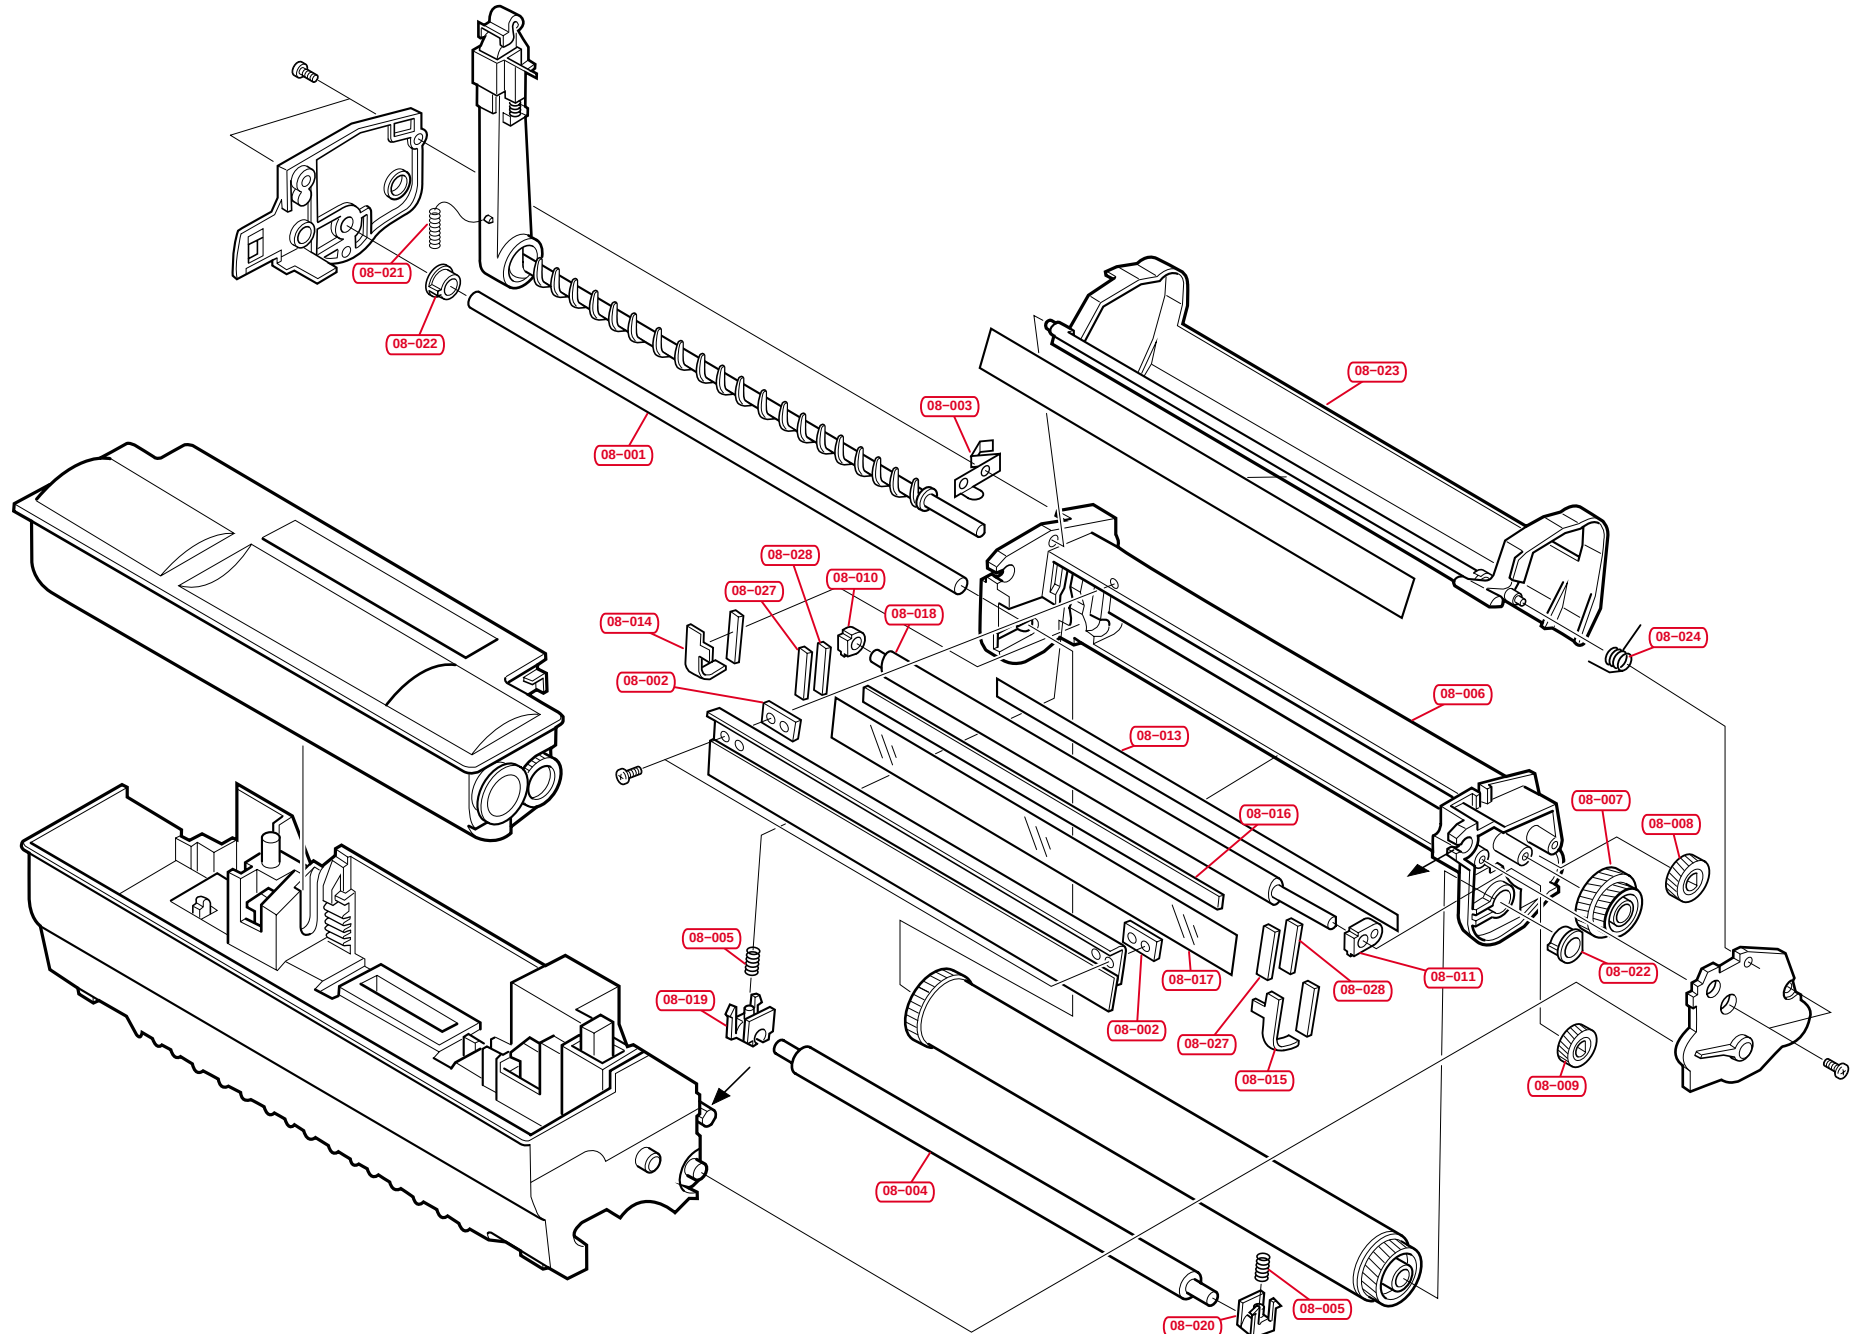


Ref No.	Part Code	Description	Quantity
08-000	PU-18	Processor Unit (5PLPZ5CAEKE)	1
08-001		Shaft Drum	
08-002		Spacer Blade	
08-003		Plate Bias Main	
08-004		Roller Main	
08-005		Spring MC	
08-006		Frame Drum	
08-007		Gear Idle Z24H-Z30H	
08-008		Gear Screw Z17H	
08-009		Gear Sweep Z15H	
08-010		Bush Sweep Left	
08-011		Bush Sweep Right	
08-013		Sheet Drum	
08-014		Seal Drum Left	
08-015		Seal Drum Right	
08-016		Seal Blade Long	
08-017		Sheet Sweep	
08-018		Roller Sweep	
08-019		Bush Main Left	
08-020		Bush Main Right	
08-021		Spring Case Belt	
08-022		Bush A	
08-023		Cover Drum	
08-024		Spring Cover Drum	
08-027		Seal Blade Upper	
08-028		Seal Blade Lower	
08-029		Seal Cover Drum	
08-A01	5AAVBLADE031	Blade Assy	
08-B01		Case Belt Assy	
08-B02	5MVB752PB004	Case Feed Toner	
08-B03	5MVM266DN003	Roller Belt	
08-B04	5MVM190EN001	Belt Feed Toner	
08-B05	5MVX332SB017	Shutter Case Belt	
08-B06	5MMW355LN001	Spring Shutter	
08-B07	5MVS528MH001	Seal Case Belt	
08-B08	5MVT876CB006	Screw Cleaner	
08-B09	5MMW155SN005	Spring Stopper	
08-B10	5MVX222SB011	Stopper Case Belt	
08-C01		Drum Assy	

Fig.9 – Scanner Unit

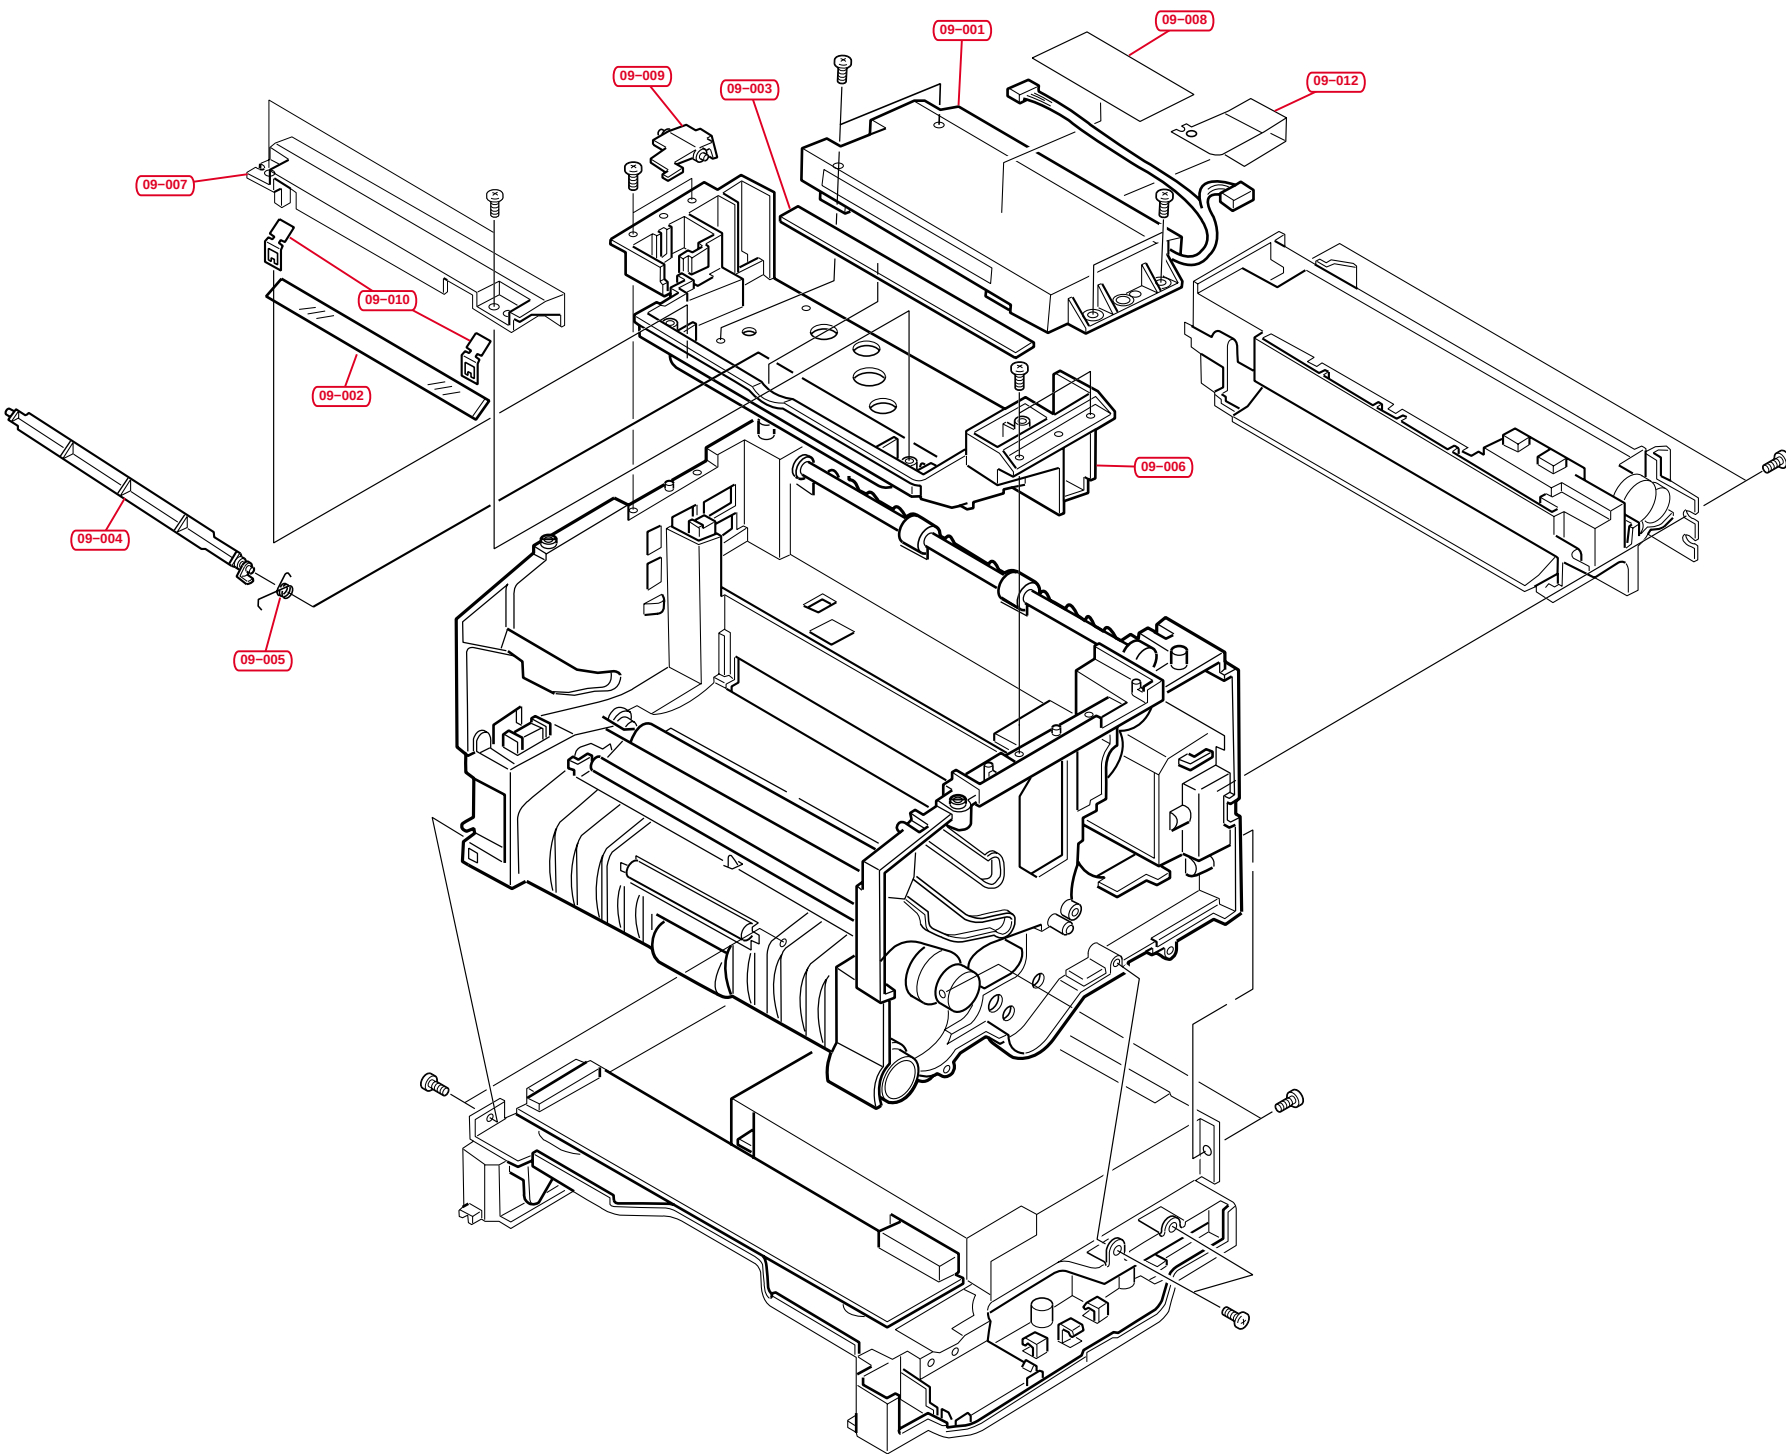

Ref No.	Part Code	Description	Quantity
09-001	LK-18	Scanner (5PLPZ6CAEKE)	1
09-002		Mirror Exit	
09-003		Glass Exit	
09-004		Shutter Scan	
09-005		spring Shutter	
09-006		Frame Middle	
09-007		Cover Scan	
09-008		Label Caution	
09-009		Lever Interlock	
09-010		Spring Mirror E	
09-011		Bind T.T. Screw (+)	
09-012		Earth AC	

Fig.10 – Developer Unit

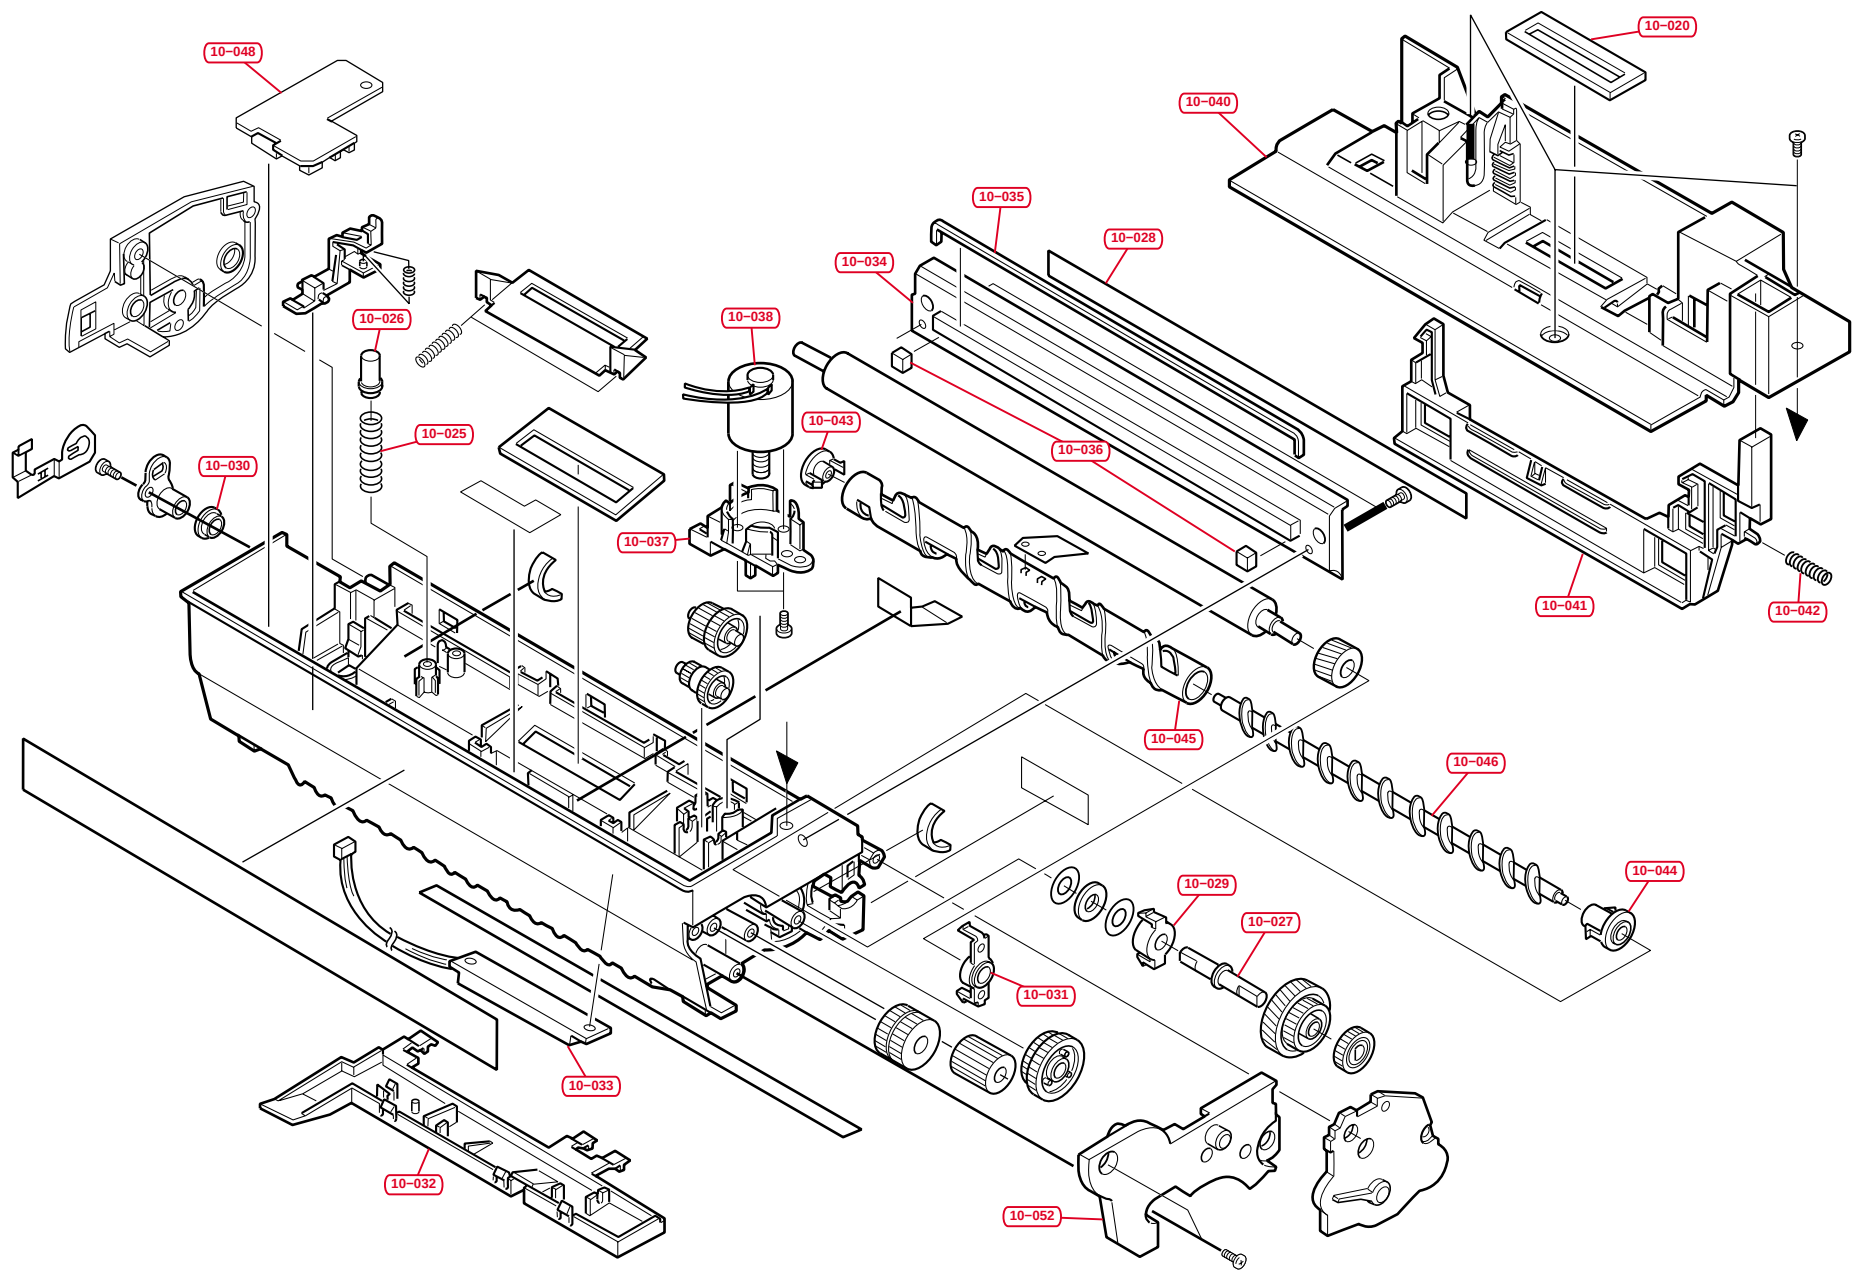

Ref No.	Part Code	Description	Quantity
10-000	PU-18	Processor Unit	1
10-020		Seal Shutter Guide	
10-025		Spring Lid DLP	
10-026		Cap DLP	
10-027		Pin Mixer	
10-028		Seal Cover Mag	
10-029		Bush Mixer	
10-030		Bush Mag L	
10-031		Bush Mag R	
10-032		Guide Paper DLP	
10-033		Toner Sensor	
10-034		Blade DLP	
10-035		Seal Blade	
10-036		Seal Blade Side	
10-037		Bracket Motor	
10-038		DC Motor	
10-039		Conn. Cord S02208	
10-040		Lid DLP	
10-041		Lever DLP	
10-042		Spring Lever	
10-043		Flange Tube L	
10-044		Flange Tube R	
10-045		Tube Mixer	
10-046		Shaft Mixer	
10-047		Scaper Sensor	
10-048		P.W. Board Assy	
10-052		Cover DLP	
10-A01		DLP Mech Elec Assy	
10-B01		P.W. Board Assy	
10-C01	5AAYFS600E19	Tube Mixer Assy	
10-E01	5AAYFS600E22	Bracket Motor Assy	
10-G01	5AAYFS600E18	Guide Paper Assy	