



This manual is for reference and historical purposes, all rights reserved.

This creation is copyright© by M. Butkus, NJ, U.S.A.

These creations may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

If you find this manual useful, how about a donation of \$2 to:

M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701

and send your e-mail address so I can thank you.

Most other places would charge you \$7.50 for a electronic copy or

\$18.00 for a hard to read Xerox copy.

This will allow me to continue this site, buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

If you use Pay Pal, go to my web site

www.orphancameras.com and choose the secure PayPal donation icon.

ROLL FILM HOLDER Model K


FOR MAMIYA PRESS

This is an economical, simplified roll film holder used to changed picture sizes to 6×9 , 6×6 , or 6×4.5 cm. The film exposure number is observed through the back cover window.

It is necessary to change the finder field of view simultaneously with changing the holder picture frame when photographing with 6×6 and 6×4.5 film sizes, not using 6×9 size.

To change the picture frame of the holder, insert the frame for 6×6 size or 6×4.5 size in the holder picture portion from the outside.



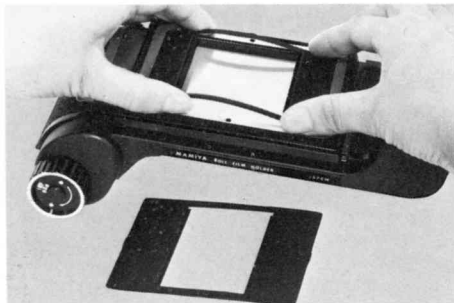

Attaching method of picture frame

Insert the picture frame so that the folded portion enters the dark slide side (inner side). Now, insert the claws on both ends into the grooves of the picture portion while slightly bending the picture frame as shown in the photo.


To change the finder field of view, use a finder mask for 6×6 or 6×4.5 size exclusively used for the respective lens.

When using the Mamiya Press Super 23 and/or Mamiya Universal, attach a finder mask for 6×6 size in front of the top cover. (This mask is for the 100mm lens)

To attach this mask, raise the flat spring attached in front of the mask, then insert the 6×6 mask through the raised spring, fitting the mask to the top cover front frame and releasing the raised flat spring.

When taking 6×6 size, by setting the figure in the camera finder-frame



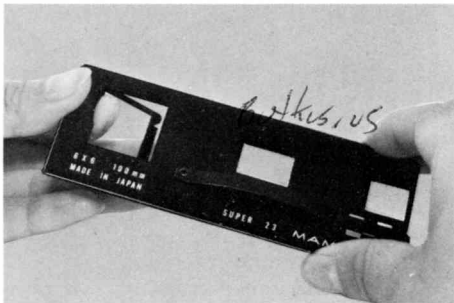

indicator window to 250, a bright frame for the 250mm lens can be observed in the finder. Determine the field of view center based on this frame.

The finder mask for 6×4.5 size should be inserted from the back side of the above-mentioned mask, attached in the same method as above.

The finder mask for the Mamiya Press Super 23 and/or Mamiya Universal is prepared only for a 100mm lens.

When using a Mamiya Press other than the Super 23 or Mamiya Universal, use a finder mask for the Mamiya Press instead of the above-mentioned finder mask.


There are masks for 6×6 and 6×4.5 sizes, both masks used by attaching them to the finder window from the outside.

FILM LOADING METHOD

When loading or unloading film, avoid direct sunlight.

While pressing the back cover toward the holder, by pulling out the back cover latch, the back cover can be opened.

Insert a new roll of film into the film chamber, and pull out the film backing paper to insert its end in the slit of the take-up spool; then turn the film wind knob one full turn.

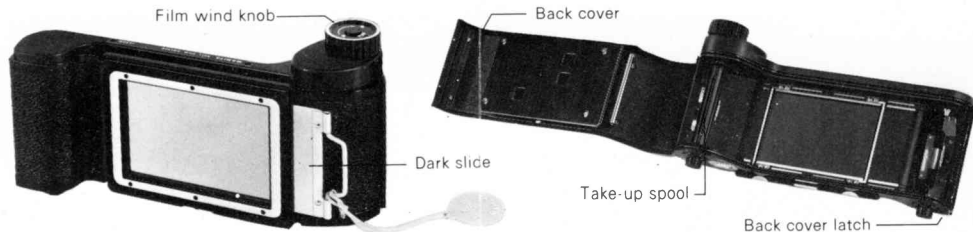

With the back cover latch pulled out, close and lock the back cover by pushing in the latch while pressing the back cover toward the holder. While observing the window which should indicate the picture size to be photographed, turn the film wind knob clockwise until figure 1 (printed on the backing paper) appears in the window.

When opening the back window, avoid direct sunlight.

The first picture frame is now ready for photography, so attach the holder to the camera, and pull out the dark slide. Each time a picture is taken, open the back window and take up the film by turning the knob until the next figure appears in the window.

When removing the holder from the camera while the film is in the camera, **always insert the dark slide completely.**

MAMIYA CAMERA CO., LTD.