17 INCH LCD COLOR MONITOR



OPERATING INSTRUCTIONS

Copyright © 2002
All rights reserved.
This manual is protected by Copyright.
The Copyright is owned by Medion®.
Trademarks:
MS-DOS® and Windows® are registered trademarks of Microsoft®.
Pentium® is a registered trademark of Intel®.
Other trademarks are the property of their respective owners.

Medion® makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Medion® shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

 $\label{eq:median} \textbf{Medion}^{\$} \text{ assumes no responsibility for the use or reliability of its software on equipment that is not furnished by <math>\textbf{Medion}^{\$}.$

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of **Medion**®.

The information in this document is subject to change without notice.

Contents:

SAFETY AND PRECAUTIONS	1
Operating Safety	1
Repair	
Notes for Service Engineers	
Point of use	3
Environmental conditions	
Connecting	
Standards/Electro-Magnetic Compatibility	
Precautions	
Important Additional Safety Instructions	
FCC Compliance Statement	/
INTRODUCTION	9
Notes on these instructions	9
Our Target Group	
Quality	
Service	
Included Equipment	
Performance Characteristics	10
START-UP	11
Preparations on Your Computer	11
Supported Monitor Settings	
Display Properties	
Fixing the Monitor base	
Connecting VGA Signal Cable	
Connecting the Power Supply	
Setting the Monitor Position	
Positioning of the Monitor	
Your posture	
Working Ergonomics	
Controls	18

SETTING THE LCD MONITOR	19
OSD Menu (On screen display)	19
SERVICE	21
TroubleshootingFinding the problemTroubleshooting	21 21
SPECIFICATIONS	23
Guarantee Liability limitations Copying this manual	24

SAFETY AND PRECAUTIONS

Please read through this section carefully and follow the instructions given. In this way you will guarantee reliable operation and a long life for your LCD monitor. Always keep these instructions handy and close by your LCD monitor. Keep the instructions and the packaging so that if you sell or give away your LCD monitor you can give them to the new owner.

OPERATING SAFETY



- Never open the housing of the LCD monitor/power supply! When the housing is open there is a danger of injury from electric shock!
- Do not insert any objects through the slots and openings into the inside of the LCD. This may lead to an electrical short-circuit or even fire resulting in damage to your LCD monitor.



- Slots and openings in the LCD monitor are for ventilation purpose. Do not cover these openings, as otherwise this may lead to overheating.
- Do not allow children to play unattended on electrical equipment. Children may not always correctly recognize danger.
- This LCD monitor is intended for personal use only. It not intended for commercial use in a heavy industry environment.
- An injury hazard exists when the display breaks. Wear protective gloves to pack the broken parts and send them into your service center for proper disposal. Then wash your hands with soap, because it is possible for chemicals to escape.

- Never exert pressure on the display. This could break the monitor.
- Do not touch the display with your fingers or with sharp objects to avoid damage.

Please proceed as outlined in the "Customer Service" section:

- if the power cable/power supply overheats or is damaged
- if liquid has gotten into the monitor
- if the LCD monitor is dropped or the housing damaged

REPAIR

- Leave all repairs of your LCD monitor to authorized and qualified personnel only.
- Should a repair be necessary, please contact one of our authorized **service partners** only.

Notes for Service Engineers

- Before opening the housing, disconnect the monitor from all power sources and remove any connecting cables. If the monitor has not been disconnected from the power outlet before being opened, there is a danger to life through electric shock. There is also a risk of damage to the components.
- Internal components of the LCD monitor may be damaged by electrostatic discharge (ESD). Carry out system upgrades and changes in an ESD-protected workshop. If no such workshop is available, wear an antistatic wrist strap or touch a highly conductive metal object. We can repair damage sustained by inappropriate handling for a fee.
- Use only original spare parts.

POINT OF USE

- Keep your LCD monitor and all units connected to it away from moisture and avoid dust, heat and direct sunlight. Failure to observe these instructions can lead to malfunctions or damage to the LCD monitor.
- Place and operate all units on a stable, level and vibration-free surface in order to avoid the LCD monitor from falling.
- Avoid dazzle, reflections, extreme light/dark contrast in order to save your eyes and ensure a pleasant, ergonometric work station.
- Take **regulator breaks** when working with your LCD monitor in order to avoid tension and fatigue.

ENVIRONMENTAL CONDITIONS

- The LCD monitor can be operated at an ambient temperatures of between **+41°F** and **+95°F** (5° C to 35° C) and at a relative humidity of between 10% and 80% (without condensation).
- When switched off, the monitor can be stored at between 4°F and +140°F (-20° C +60° C), up to the maximum height of 39,000 ft (12,000 m) above sea level at a relative humidity of between 10% and 85% (without condensation).
- After transporting your LCD monitor please wait until it
 has assumed the ambient temperature before connecting and switching it on. Extremely high variations in the
 temperature or humidity may result in condensation
 forming on the inside of the LCD monitor which could
 cause an electrical short-circuit.

CONNECTING

Observe the following instructions to connect your LCD monitor properly:

POWER SUPPLY



- Do not open the housing of the mains (power supply). An open housing presents a **lethal** hazard from electrical shock. There are no parts inside to be cleaned or serviced.
- Operate your LCD monitor mains (power supply) only on grounded sockets with AC 100-240V~/ 50-60 Hz. If you are not sure about the power supply at your location, check with your power company. (Mains/Power Supply = Chi Sam Electronic model CH-1932)
- Use only the mains (power supply) and power connection cable **provided.**
- For additional safety we recommend use of an excessive voltage protection device to protect your LCD monitor from damage resulting from voltage surges or lightning.
- To interrupt the LCD monitor from mains (power supply) disconnect the plug from the socket.
- The power socket must be in the vicinity of your LCD monitor and within reach of the power cables. DO NOT stretch the power cables tightly to reach a power socket.
- If you use an extension cable, ensure that it fulfills the VDE requirements. Please ask your electrician.
- You should lay the LCD Monitor cables in a manner that no one can trip or step on it.
- To avoid damage of cable do not place any objects or furniture on the cable.
- You can adjust your LCD monitor a maximum of about 5° downward and a maximal 20° upward (see page 15). If you attempt to go beyond these points with force, the danger of damage exists.

STANDARDS/ELECTRO-MAGNETIC COMPATIBILITY

Your monitor fulfils the requirements for electro-magnetic compatibility and electrical safety specified in the following standards:

EN 55022, EN 55024, EN 60950, EN 61000-3-2, EN 61000-3-3 UL60950 / CAN CSA 22.2 No 60950, FCC

- When connecting ensure that Guidelines for Electro-Magnetic Compatibility (EMC) are observed.
- Provide an interval of at least one meter from high-frequency and magnetic sources of interference (television sets, loudspeakers, mobile telephones, etc.) in order to avoid malfunctions and data loss.

ERGONOMICS

- This monitor complies with all relevant regulations such as DIN EN ISO 9241-3, DIN EN ISO 9241-7 and DIN EN ISO 9241-8.
- For ergonomic reasons we suggest not to use the base-color blue on dark subfonds. This would cause bad readability and would increase eye strain.
- While working with screens you should take breaks periodically to avoid tension and fatique.
- In order to save your eyes and to assure a convenient working area
 you should avoid glare, reflections and strong contrasts on the
 screen. For more detailed information on workplace ergonomics,
 see page 17.

ELECTRICAL SAFETY

EN 60950 Safety of information technology equipment.

- The connection of devices is limited to equipment that complies with EN60950 "Safety of information technology equipment" or EN60065 "Audio, video and similar electronic apparatus. Safety requirements"
- For U.S. / Canadian purposes:
 The PC should only be connected to equipment which complies with UL 60950 / CAN CSA 22.2 No 60950

TRANSPORT AND RECYCLING

- Keep the original packaging and use it to protect the LCD monitor during transport or storage.
- Packing materials and product are recyclable.

PRECAUTIONS

 Caution! There are no parts which can be serviced or cleaned inside of the monitor housing.

You can increase the service life of your LCD monitor by taking the following precautions:

- Before cleaning **always disconnect the power line** and all connection cables.
- Do not use any solvents, caustic or gaseous cleaning agents.
- Clean the display with a soft, lent-free cloth.
- Ensure that no water droplets remain on the screen. Water can cause **permanent discoloration**.
- Do not expose the screen to bright sunlight or ultraviolet radiation.

IMPORTANT ADDITIONAL SAFETY INSTRUCTIONS

When using any electronic equipment, basic safety precautions should always be taken. Following the guidelines below can reduce the risk of fire, electric shock and injury to person:

- Do not use this product near water (e.g., near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool).
- Avoid using a telephone/modem (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone/modem to report a gas leak in the vicinity of the leak.
- Use only the power cord indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Keep batteries away from children at all times.

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cables, if any, must be used in order to comply with the emission limits.

INTRODUCTION

NOTES ON THESE INSTRUCTIONS

We have arranged these instructions so that you can quickly find the subject related information in the table of contents. The purpose of these instructions is helping you operate your LCD display safely, quickly and easily.

OUR TARGET GROUP

Thank you for purchasing our LCD display. We thank you for your confidence in our products and are pleased to greet you as a new customer. These instructions are intended for initial users as well as advanced users. Regardless of the possible professional utilization, this display is intended for private use only.

QUALITY

We focused on great features, ease of use and reliability in manufacturing your LCD monitor. The balanced hardware and software concept offers you an advanced display design which will provide you a great deal of pleasure for your work and entertainment.

SERVICE

Service and support will be available every time you use your new LCD Display. Contact us, we will be glad to help. This manual contains a separate chapter on the subject of service beginning on page 21.

INCLUDED EQUIPMENT

Please check your new LCD Display for completeness. Notify <u>us within 14 days after purchase</u> if it is not complete. With your LCD monitor you receive:

- 1- LCD monitor
- 1- Connection cable
- 1- Mains Power pack
- 1- Mains power cable
- 1- Operating instructions
- 1- Guarantee card
- 1- Audio cable (optional)

PERFORMANCE CHARACTERISTICS

Advantages in relation to cathode ray tubes

- Less space required
- > Lower weight
- Power savings

High image quality

- > XGA standard: resolution up to 1280 x 1024
- > Full image for all resolutions
- Over 16 million colors (simulated)

Further features

- ➤ The LCD monitor is a plug and play device which is automatically recognized by your operating system.
- ➤ The power management fulfills the VESA DPMS standard. During idle times (OFF mode) the power consumption is automatically reduced by up to 95 %.

Before start-up always read the Chapter "Safety and Precautions" on page 1ff.

PREPARATIONS ON YOUR COMPUTER

If you have operated your computer previously with a CRT monitor, it will be necessary for you to make a few preparations. This is required when your previous monitor was operated with settings which are not supported by your new LCD monitor.

SUPPORTED MONITOR SETTINGS

		Analog		
Resolution			Horizontal	Vertical
			Frequency	Frequency
	VGA	640 x 480	31.5 KHz	60 Hz
			37.5 KHz	75 Hz
			37.9 KHz	72.8 Hz
		720 x 400	31.5 KHz	70.1 Hz
		800 x 600	35.2 KHz	56.3 Hz
	SVGA		37.9 KHz	60.3 Hz
VESA			46.9 KHz	75.0 Hz
VESA			48.1 KHz	72.0 Hz
	XGA	1024 x 768	48.4 KHz	60.0 Hz
			56.5 KHz	70.1 Hz
			58.1 KHz	72.0 Hz
			60.0 KHz	75.0 Hz
	SXGA	1280 x 1024	63.98 KHz	60.02 Hz
		1200 X 1024	79.97 KHz	75.02 Hz
Macintosh	VGA	640 x 480	35.0 KHz	66.7 Hz
Macintosii		832 x 624	49.7 KHz	74.6 Hz
MS-DOS		640 x 350	31.5 KHz	70.1 Hz
PC-9800		640 × 400	24.8 KHz	56.4 Hz
FC-3600	640 x 400		31.5 KHz	70.1 Hz

START-UP

DISPLAY PROPERTIES


This Windows program offers you the possibility of adapting the display to your monitor. This includes items such as the background image, the screen saver, the Active Desktop (Web) as well as other settings for your monitor and video card.

The program can be started as follows:

> Right mouse click on Windows desk top and left mouse click on "Properties".

Or

Start the "Display" program in "System control".

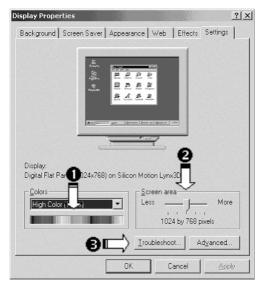

(Diagram the same)

Then click "*Colors*" to set the color depth (number of colors displayed). Your monitor supports a maximum color depth of 16 million colors corresponding to 32 bit or "True Color".

The resolution can be set under "Screen area". Your monitor can display a maximum of 1280 x 1024 image dots.

The image repeat frequency can be set under "Advanced". A window with the characteristics of your video card appears depending on the configuration of your computer.


Under "*Adapter*" you can change the desired value in the selection field "List All Modes...".



(Diagram the same)

 Caution! If your setting does not coincide with the values supported by your display, you may not see any image. The value for the LCD should be 60 Hz and, depending on the setting, not exceed 75 Hz.

FIXING THE MONITOR BASE

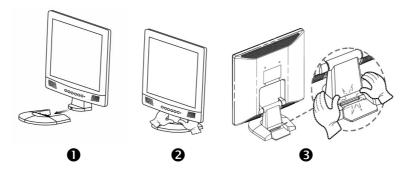

(Diagram the same)

CONNECTING VGA SIGNAL CABLE


- 1. Ensure that the LCD monitor is not yet connected to the line power (power cord not yet plugged in) and neither the LCD monitor nor the computer is switched on.
- 2. Prepare your computer for the LCD monitor if necessary (see previous pages) with the correct settings for your LCD.
- 3. Plug the signal cable into the matching VGA sockets on the computer.



If your LCD Monitor model is shipped with integrated speakers, which is an optional feature, you should connect your PC's audio out to the related socket of your LCD Monitor.

CONNECTING THE POWER SUPPLY

1. Connect the line power cable to the power pack and plug the plug into a socket in the vicinity of the LCD.



2. Plug the power supply cable from the power pack into the power supply socket on the LCD monitor.



- 3. Switch on your display monitor with the ON/OFF switch (see page 18).
- 4. Then switch on your computer.

SETTING THE MONITOR POSITION


Position the LCD monitor according to your working environment. You can adjust the monitor **upward to 20°** and **downward to 5°.**



POSITIONING OF THE MONITOR

Please ensure that the monitor is set up in such a way that that reflections, glare and light-dark contrast are avoided (as this will make the screen less attractive to look at).



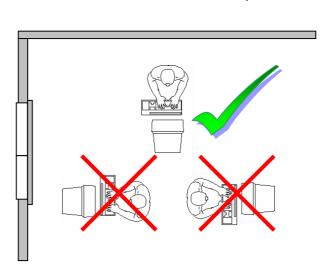

Your posture

Sitting in one position for long periods can be uncomfortable. To minimize the potential for physical discomfort or injury, it's important that you maintain proper posture.

Back - While sitting at your work surface, make sure your back is supported by the chair's backrest in an erect position or angled slightly backwards.

Arms - Your arms should be relaxed and loose, elbows close to your sides, with forearms and hands approximately parallel to the floor.

Wrists - Your wrists should be as straight as possible while using the keyboard, mouse or trackball. They should not be bent sideways, or more than 10 degrees up or down.

Head - Your head should be upright or tilted slightly forward. Avoid working with your head or trunk twisted.

Legs - Your thighs should be horizontal or angled slightly downward. Your lower legs should be near a right angle to your thighs. Your feet should rest flat on the floor. If necessary, use a footrest, but double check that you have your seat height adjusted correctly before getting a footrest.

Overall - Change your position frequently and take regular breaks to avoid fatigue.


WORKING ERGONOMICS



- Hand's support rest: 2" 4"
- Top line of screen should keep eye's level or be a little beneath
- Eye's distance to screen: 20" 28"
- Legroom (vertical): at least 26"
- Legroom (horizontal): at least 24"

The illustration above should give you a guideline for an ergonomic workplace.

CONTROLS



(1) Exit OSD

(2) **←** Function selection key

With this key you can select the parameter whose value you want to change.

(3) Enter

When this key is pressed the OSD (ON screen display) starts on your LCD monitor.

(4) ▶ Function selection key

With this key you can select the parameter whose value you want to change.

(5) **Auto**

With this key you can automatically adjust the image.

(6) ON/OFF switch

With this switch you can switch the LCD monitor ON and OFF.


(7) Operation indicator

Indicates the operating state.

SETTING THE LCD MONITOR

You can set certain parameters for the LCD monitor on the OSD menu (ON screen display).

OSD MENU (ON SCREEN DISPLAY)

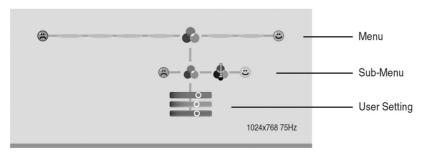

Press enter (see (3), page 18) to activate the OSD.

- Select the options from the main menu with the ◀ or
 function selection keys.
- 2. Press enter to activate the sub-menu.
- 3. Select the options from the sub-menu with the ∢ or ▶ function selection keys.
- 4. Press enter to start the adjustment possibility.
- 5. Set the desired value with the ∢ or ▶ function selection keys.
- 6. Press exit to deactivate OSD.

The main functions and adjustment possibilities using the OSD are explained on the next pages.

□ Caution! The setting possibilities for the LCD monitor lead only to marginal changes due to this technology.

Main Menu	Sub-Menu	Function
	*	All reset
	<u>(a)</u> :	Auto Adjust
		Reset Color
	••••	Reset OSD
(1)	≠ ⁄i)	Mute
	4)))	Volume
D	*	Brightness
	•	Contrast
3	8	RGB Adjust
	•	Color Temperature
		Clock Adjust
		Phase Adjust
		H-Position
		V-Position
•••		OSD Time Out
	(····)	OSD Position
\odot		Accept and Exit
		Reject and Exit

SERVICE

TROUBLESHOOTING

If your LCD monitor should have problems please check if it is properly installed and plugged according to the information given in the "Start-Up" section beginning on page 11). If the problems cannot be solved, read the following chapter for possible solution.

FINDING THE PROBLEM

Many times, problems have simple causes. We would like to give you some tips to solve some common problems. Should these tips not help, please call us!

CHECK CONNECTIONS AND CABLES

Start by carefully checking all cable connections visually. If the indicator lamps do not function, ensure that the LCD monitor and computer are properly connected to the line power.

TROUBLESHOOTING

No	display	on	screen:
110	uispiay	011	screen.

Che	Check:			
	Image refresh frequency. The current image refresh frequency must be suitable for the LCD monitor.			
	Power saving mode. Press any desired key and move the mouse to deactivate the mode.			
	Signal cable pins. If pins are bent, please contact your service dealer.			
	Set the appropriate values for your LCD monitor (see "Preparations on your computer", page 11).			
Characters displayed dark, picture too small, too large or not centered, etc.:				
	Readjust the corresponding settings. (Setting LCD monitor, page 19)			

Picture runs or not stable:					
I		Signal cable pins. If pins are bent, please contact your service dealer.			
I		Video card. Check whether the settings are correct.			
l		Image refresh frequencies. Select permissible values for your graphic settings.			
ĺ		Remove any interfering equipment (portable telephones, loudspeakers, etc.) from the vicinity of your LCD monitor.			
ĺ		Avoid using monitor extension cables.			
Cold	ors i	not displayed cleanly:			
l		Check the signal cable pins. If pins are bent, please contact your service dealer.			
1		Readjust the corresponding settings.			
I		Avoid using monitor extension cables.			

DO YOU REQUIRE ADDITIONAL SUPPORT?

If the suggestions in the above section have not solved your problem, please contact the hotline. We will try and help you over the telephone. However, before you contact your Technology Center, please keep the following information available:

- How is your computer configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- If you have already been given a customer number, please keep this available.

SPECIFICATIONS

Visible display size	17", TFT		
LCD-Monitor:			
Input voltage Power consumption	DC 19 V max. 2.2 A max. 42 Watt		
·			
Power Supply	IN: (Chi Sam Electronic CH-1932)		
Voltage Current Frequency	AC 100 – AC 240 V ~ max. 1.5 A 50 – 60 Hz		
	Out:		
Voltage Current	DC 19 V max. 2.6 A		
Resolution Refresh rate	max. 1280 x 1024 max. 75 Hz		
Video input	15-wired SUB-D connector		
User control	ON/OFF, OSD		
Dimensions (W x H x D)	15.75" x 16.54" x 9.37"		
	400 mm x 420 mm x 238 mm		
	Operating	+41°F ~ +95°F	
Ambient Temperaustus		+5°C ~ +35°C	
Ambient Temperature	Storage	-4°F ~ +140°F	
		-20° C ~ +60°C	
Humidity	Operating	10% ~ 80%	
	Storage	10% ~ 85%	
Speakers (optional)	2 x 1 Watt		

GUARANTEE

The receipt serves as proof of first purchase and should be kept in a safe place. It is required should you need to make use of the guarantee.

If the product is passed onto another user, then he shall be entitled to guarantee services for the remaining period of the guarantee. The receipt of purchase as well as this declaration should be passed onto the new user.

We guarantee that this equipment is in perfect working order and from a technical point of view it complies with the descriptions in the enclosed documentation. Upon production of the receipt, the remaining period of guarantee shall pass on from the original parts to the respective replacement parts. If you hand in this equipment to make use of the guarantee, you must remove all programs, data and removable storage media. Products which are sent without accessories will be replaced without accessories. The warranty obligation does not apply in the case of the problem being caused by an accident, a catastrophe, vandalism, misuse, incorrect use, ignoring the safety and maintenance regulations, changes by software, viruses or another piece of equipment or accessories or by other modifications not approved by ourselves. This limited guarantee declaration replaces all other quarantees of express or implied nature. This includes the guarantee of saleability or the suitability for a certain purpose but is not limited to this. In some countries the exclusion of implied guarantees is not permissible upon principle. In this case the validity of all express and implied guarantees is limited to the guarantee period. Once this period has expired, all guarantees become invalid. In some countries limiting the period of validity for implied guarantees is not permitted, so that the above limitation does not come into force. If you have any questions with regard to these guarantee conditions, please contact us.

The TFT display technology is highly superior to the traditional DSTN technology. More than 2 million color dots are controlled individually by transistors. Despite of state-of-the-art assembly methods we cannot eliminate scattered defective color dots causing display errors in range of micro meters. These so called pixel errors constitute at a rate up to 0,0005 % neither a reduction of usability nor a claim of warranty (see regional court of appeal Cologne [OLG Köln] 1993, AZ 19 U 92/91: CR1993,208 and OLG Cologne 1994, AZ 19 U 183/93: NJW RR 1994, 1077).

LIABILITY LIMITATIONS

The contents of this manual are subject to unannounced changes caused by technical progress. Manufacturer and sales shall not be responsible for any damages which have been caused as a result of omissions or errors in the information provided in this manual.

Under no circumstances shall we be liable for any of the following:

- 1. Claims made against you by third parties based on loss or damage.
- 2. Loss or damage to your blanks, recordings or data.
- Economic follow-on damage (including lost profit or savings) or associated damage even in the case that we have been informed of the possibilities of this type of damage.

In some countries the exclusion or limitation of accompanying or follow-on damage is not legally accepted so that the above limitations do not come into force.

COPYING THIS MANUAL

This document contains legally protected information. All rights reserved. Copying in mechanical, electronic and any other form without the written approval of the manufacturer is prohibited.