


AD500

(A424)

1. Exterior (A424)	2
2. Jogger Section (A424)	4
3. Transport Section (A424)	6
4. Duplex Harness (A424)	8
5. Relay Harness (A424)	10
6. Decal & Document (A424)	12
Parts Index	16

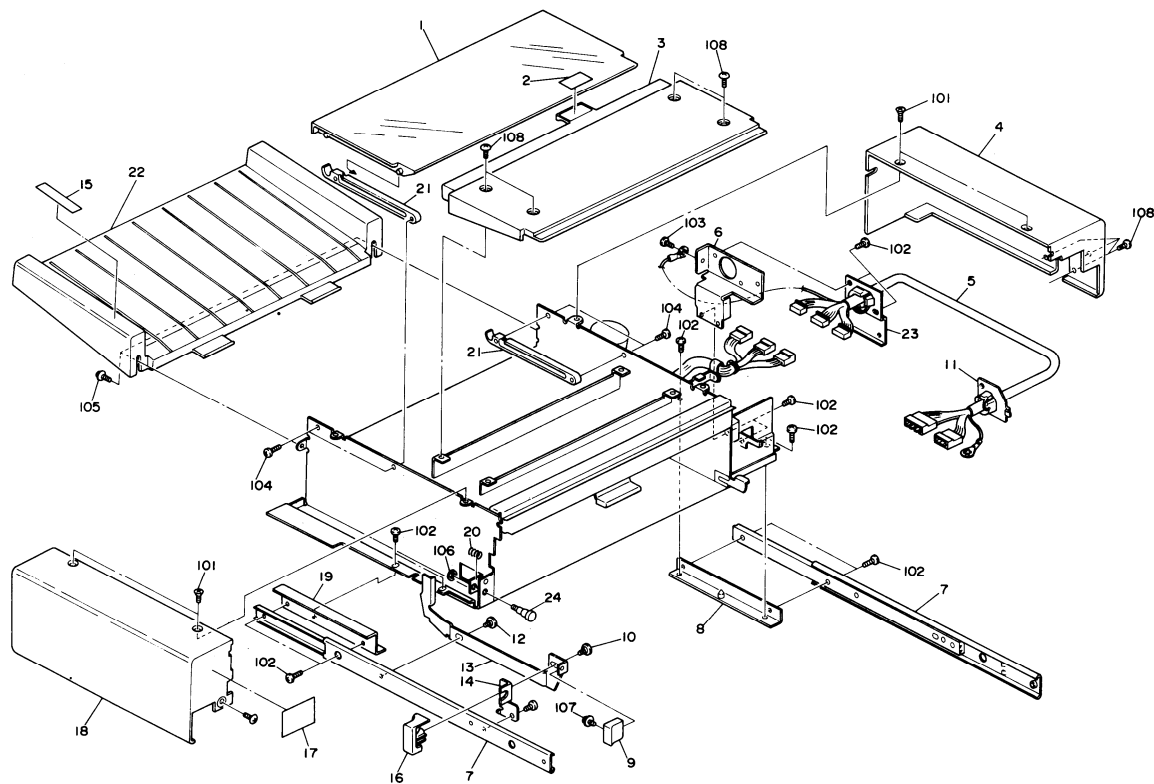

1. EXTERIOR (A424)


Feb. 28, '89

Index No.	Part No.	Description	Q'ty Per Assembly
1	A416 2289	Duplex Tray Cover	1
2	A424 2511	Decal - E2	1
3	A424 2331	Upper Cover	1
4	A424 2311	Rear Cover	1
5	A424 5301	Relay Harness	1
6	A424 2280	Harness Bracket	1
7	AA07 0002	Rail	2
8	A424 2277	Support Plate	1
9	AG05 1013	Release Lever	1
10	AA14 3043	Shoulder Screw - M6x8	1
11	A424 5802	Bracket - Harness - Duplex Unit	1
12	5403 2075	Stepped Screw	1
13	A424 2273	Release Link	1
14	A424 2275	Lever Bracket	1
15	A424 2502	Decal - Misfeed - LT	1
16	A424 2503	Decal - Misfeed - A4	1
17	AG05 1014	Slide Lever	1
17	A424 2522	Front Cover Decal - English	1
18	A424 2301	Front Cover	1
19	A424 2270	Support Plate	1
20	5205 2698	Relay Roller Spring	1
21	5919 2290	Duplex Tray Cover Holder	2
22	A424 2321	Duplex Tray	1
23	A424 5801	Harness Bracket	1
24	A424 2281	Cushion Stud	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0324 0080W	Philips Sunken Head Screw - M4x8	
102	0314 0050W	Philips Pan Head Screw - M4x5	
103	0314 0080M	Philips Pan Head Screw - M4x8	
104	0434 0082W	Tapping Screw - M4x8	
105	0951 4010W	Philips Screw With Flat Washer - M4x10	
106	0720 0030E	Retaining Ring - M3	
107	0960 4006W	Philips Flange Screw - M4x6	
108	0344 0080W	Philips Truss Head Screw - M4x8	

2. JOGGER SECTION (A424)

Feb. 28, '89

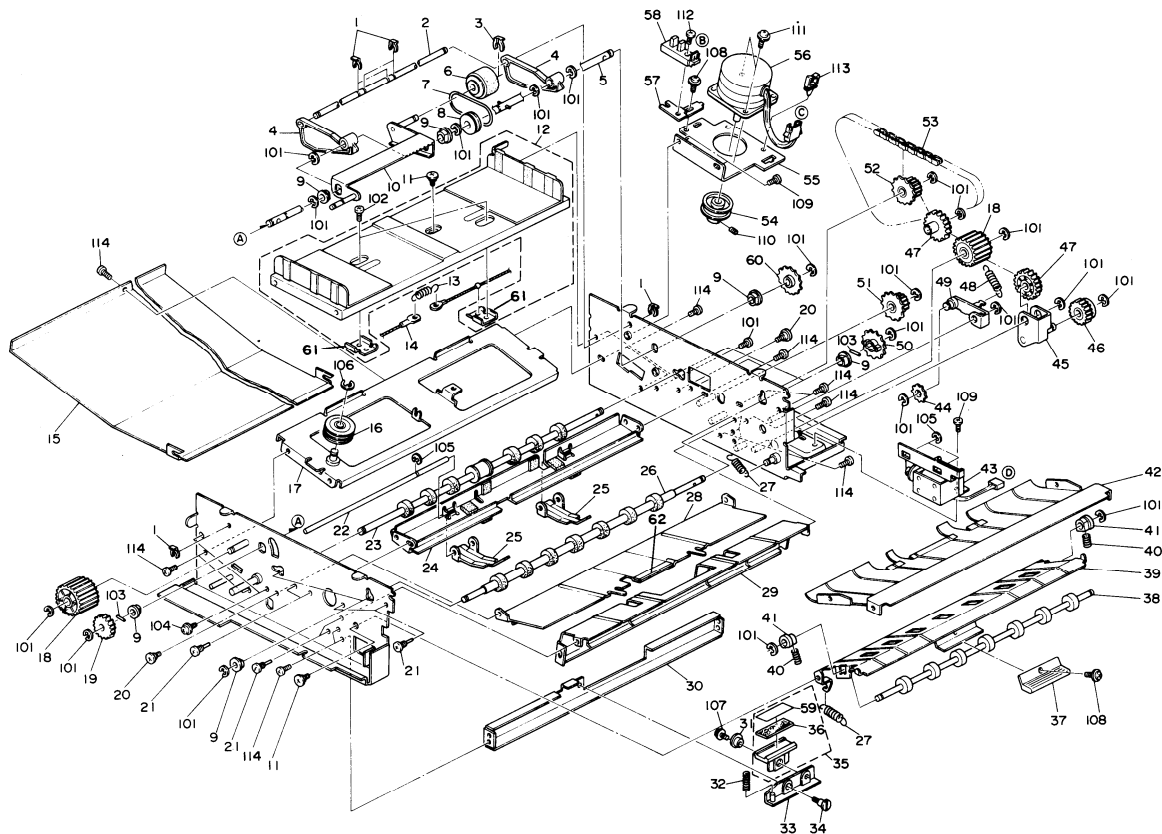

2. JOGGER SECTION (A424)


Feb. 28, '89

Index No.	Part No.	Description	Q'ty Per Assembly
1	5206 2686	Snap Ring	6
2	AA14 0117	Upper Guide Shaft	1
3	5447 2681	Snap Ring	1
4	A424 2171	Upper Jogger Guide	2
5	A424 1104	Roller Shaft	1
6	5206 2671	Positioning Roller	1
7	5919 2132	Positioning Roller Belt	1
8	5919 2127	Positioning Roller Pulley	1
9	5053 0447	Bushing - M6	8
10	A424 2223	Roller Arm	1
11	5403 2075	Stepped Screw	3
12	A424 2160	Jogger Fence Table	1
13	5206 2876	Spring - Wire	1
14	5919 2172	Jogger Wire	1
15	A424 2291	Lower Cover	1
16	5442 1735	Pulley	1
17	A424 2141	Stay	1
18	AB01 3162	Gear - 28T	2
19	AB01 3149	Gear - 20T	1
20	5419 5714	Stepped Screw - M4	2
21	5887 4162	Screw - Driven Guide Plate	4
22	AA14 0095	Shaft	1
23	AF02 0111	Fork Gate Roller	1
24	A424 2126	Front Guide Plate	1
25	A424 2137	Paper Support Guide	2
26	AF02 0050	Transport Roller	1
27	AA06 0090	Spring	2
28	A424 1062	Paper Feed Tray	1
29	A424 2124	Guide Plate	1
30	5919 2105	Friction Pad Arm	1
31	AA13 2014	Spacer	1
32	5442 2645	Spring - Friction Pad	1
33	5442 2630	Arm - Friction Pad	1
34	5442 2642	Shoulder Screw - M3	1
35	A424 2146	Friction Pad Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	AF03 3004	Friction Pad	1
37	AG05 1017	Guide Plate Lever	1
38	AF02 0052	Lower Transport Roller	1
39	A424 2260	Guide Plate	1
40	5938 2598	Spring - Lower Transport Roller	2
41	5205 2697	Bushing - Upper Registration Roller	2
42	A424 2127	Guide Plate	1
43	A424 1120	Junction Gate Solenoid	1
44	5403 2016	Tension Sprocket (11T) - Paper Feed	1
45	A424 2201	Gear Bracket	1
46	AB01 3160	Gear - 24T	1
47	AB01 3161	Gear - 28T	2
48	AA06 0013	Spring	1
49	A424 2246	Bracket	1
50	AB02 3025	Sprocket - 18T	2
51	AB01 7054	Gear - 17T	1
52	AB01 7055	Gear - 20T	1
53	A424 2361	Bushed Roller Chain - 94P	1
54	5919 2169	Wire Drive Pulley	1
55	5919 2168	Jogger Motor Bracket	1
56	AX05 0021	Stepper Motor - DC4.8W	1
57	A424 2149	Sensor Bracket	1
58	5215 5230	Photointerrupter - L-Type	1
59	AA15 0096	Guide Sheet	1
60	AB02 3003	Pulley - 11T	1
61	5206 2877	Wire Clamp Plate	2
62	5215 2713	Bottom Plate Pad	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0314 0060W	Philips Pan Head Screw - M4x6	
103	0622 0140E	Spring Pin - 2x14mm	
104	0965 4008W	Tapping Screw With Flat Washer - M4x8	
105	0720 0030E	Retaining Ring - M3	
106	0720 0060E	Retaining Ring - M6	
107	0952 3012W	Philips Screw - M3x12	
108	0952 4008W	Philips Screw - M4x8	
109	0314 0050W	Philips Pan Head Screw - M4x5	
110	0574 0040E	Hexagon Headless Set Screw - M4x4	
111	0951 4010W	Philips. Screw With Flat Washer - M4x10	
112	0314 0120W	Philips Pan Head Screw - M4x12	
113	1105 0196	Harness Clamp	
114	0434 0080W	Tapping Screw - M4x8	

Index No.	Part No.	Description	Q'ty Per Assembly

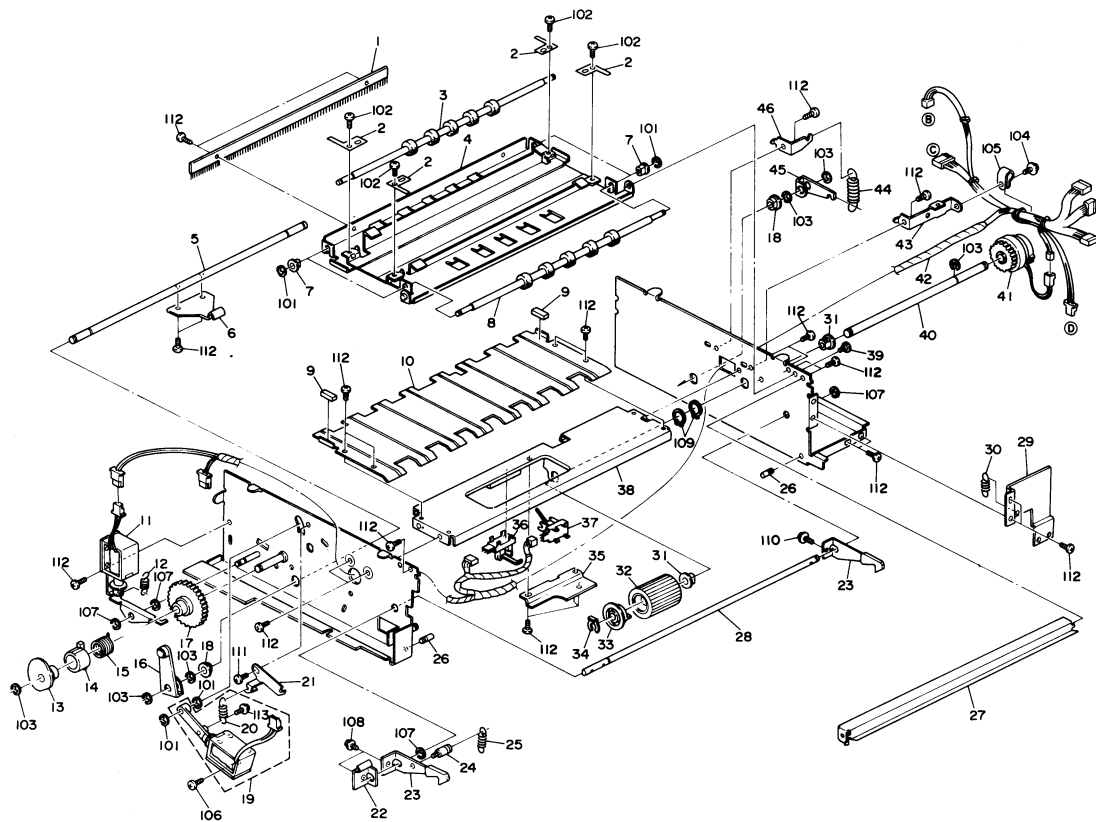


3. TRANSPORT SECTION (A424)

Feb. 28, '89

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA12 0005	Antistatic Brush	1
2	A424 2102	Spring Plate	4
3	AF02 0089	Exit Fork Gate Roller	1
4	A424 2103	Upper Guide Plate	1
5	AA14 0097	Pressure Shaft	1
6	A424 2230	Pressure Arm	1
7	5919 2218	Bushing - 4x7x10mm	4
8	AF02 0049	Fork Gate Roller	1
9	AA02 0003	Slide Lever Magnet	2
10	A424 2116	Lower Guide Plate	1
11	A424 1124	Pressure Solenoid	1
12	5919 2258	Spring - Feed-in Tray Clutch	1
13	5919 2262	Feed-in Tray Cam	1
14	5919 2264	Clutch Sleeve	1
15	AA06 6010	Spring Clutch	1
16	5919 2144	Feed-in Tray Lever	1
17	5919 2260	Gear - 58T	1
18	5304 1639	Bushing - 8mm	2
19	A424 1128	Roller Solenoid	1
20	AA06 0088	Spring	1
21	A424 2242	Spring Hook	1
22	A424 2252	Arm	1
23	A424 2255	Lever	2
24	AA14 3045	Stud	1
25	AA06 0089	Spring	1
26	5410 1291	Pin - Return Lever	2
27	A424 1032	Upper Entrance Stay	1
28	AA14 0098	Shaft	1
29	A424 2283	Rear Side Bracket	1
30	AA06 0086	Spring	1
31	AA08 2009	Bushing - 8x12x8mm	2
32	5215 2619	Feed Roller	1
33	5215 2618	Feed Roller Hub	1
34	5215 2621	Snap Ring - M6	1
35	A424 2121	Support Bracket	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	AW02 0010	Photointerruptor	1
37	AW02 0011	Photointerruptor	1
38	A424 2117	Lower Stay	1
39	5403 2075	Stepped Screw	1
40	AA14 0094	Shaft	1
41	AX21 0010	Magnetic Clutch	1
42	A424 5302	Duplex Harness	1
43	A424 2145	Clutch Bracket	1
44	AA06 0087	Spring	1
45	5919 2146	Pressure Lever	1
46	5919 2147	Spring Hook	1
101	0720 0030E	Retaining Ring - M3	
102	0314 0050W	Philips Pan Head Screw - M4x5	
103	0720 0060E	Retaining Ring - M6	
104	0964 4008W	Tapping Screw With Flat Washer - M4x8	
105	1105 0010	Nylon Clip - 6N	
106	0434 0060W	Tapping Screw - M4x6	
107	0720 0040E	Retaining Ring - M4	
108	0443 0060W	Hexagon Head Tapping Screw - M3x6	
109	0725 0120E	Retaining Ring C - M12	
110	0951 3006W	Philips Screw With Flat Washer - M3x6	
111	0952 4008W	Philips Screw - M4x8	
112	0434 0080W	Tapping Screw - M4x8	
113	0953 3006W	Tapping Screw With Flat Washer - M3x6	

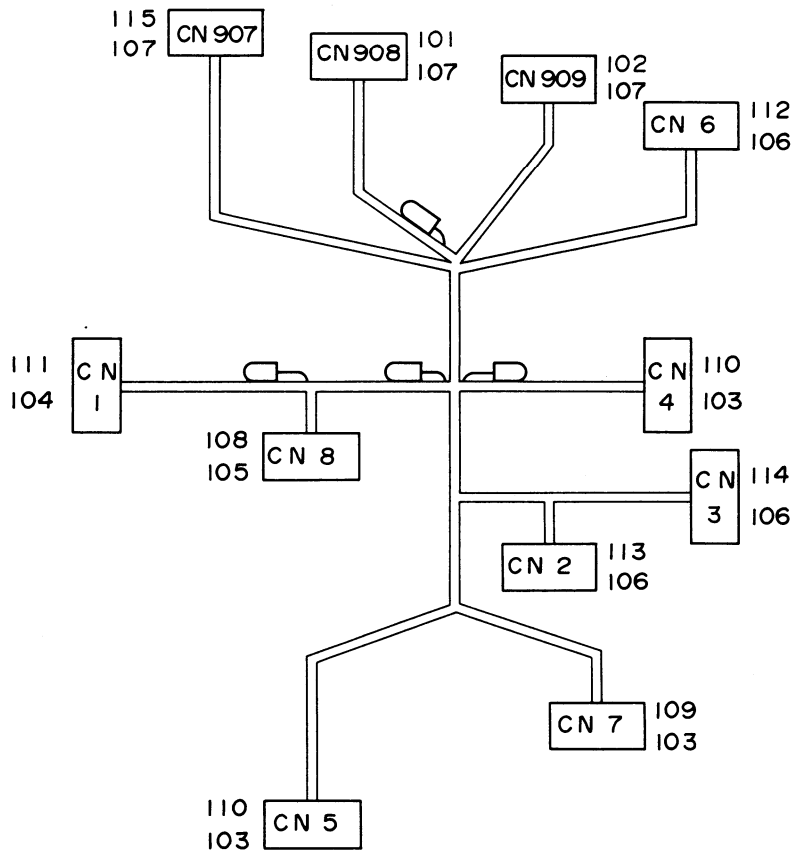


4. DUPLEX HARNESS (A424)

Feb. 28, '89

Index No.	Part No.	Description	Q'ty Per Assembly
*	A424 5302	Duplex Harness	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	1102 1973	Connector - 6P	
102	1102 1979	Connector - 6P	
103	1100 1159	Socket - Mate-N-Lock	
104	1100 1249	Receptacle Terminal	
105	1100 1259	Socket - Mate-N-Lock	
106	1100 1327	Contact	
107	1100 1328	Contact	
108	1102 1091	Connector - 6P	
109	1102 1397	Connector - 2P	
110	1102 1398	Connector - 2P	
111	1102 1620	Connector - 3P	
112	1102 1910	Connector - 2P	
113	1102 1911	Connector - 3P	
114	1102 1925	Connector - 3P	
115	1102 1967	Connector - 6P	

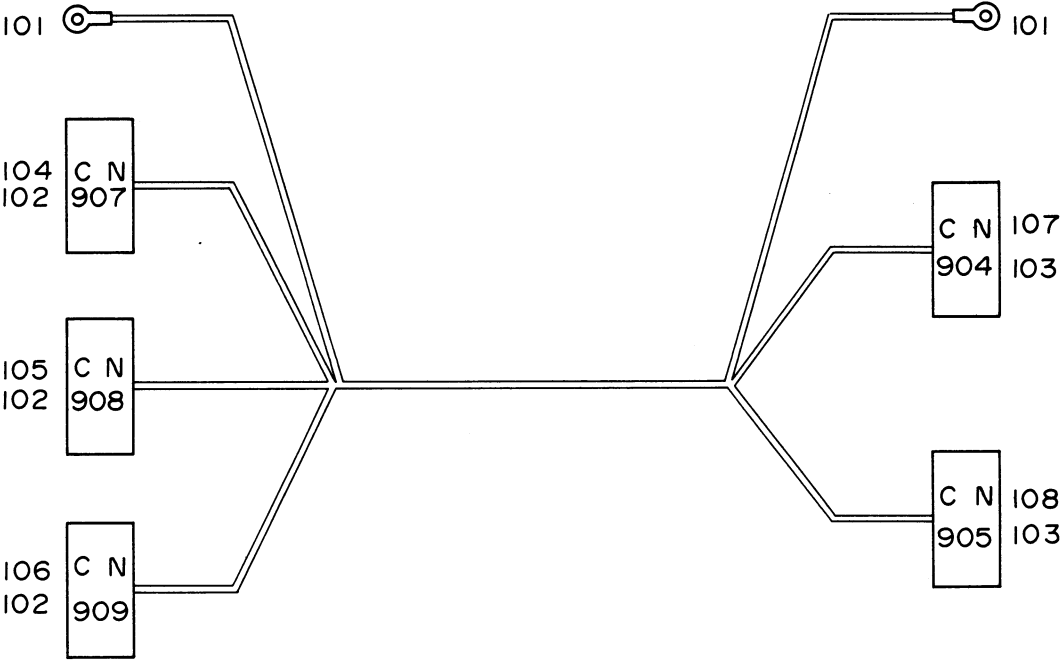


5. RELAY HARNESS (A424)

Feb. 28, '89

Index No.	Part No.	Description	Q'ty Per Assembly
*	A424 5301	Relay Harness	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	1100 1264	Wire Terminal	
102	1100 1327	Contact	
103	1100 1328	Contact	
104	1102 1914	Connector - 6P	
105	1102 1928	Connector - 6P	
106	1102 1942	Connector - 6P	
107	1102 1969	Connector - 10P	
108	1102 1979	Connector - 6P	

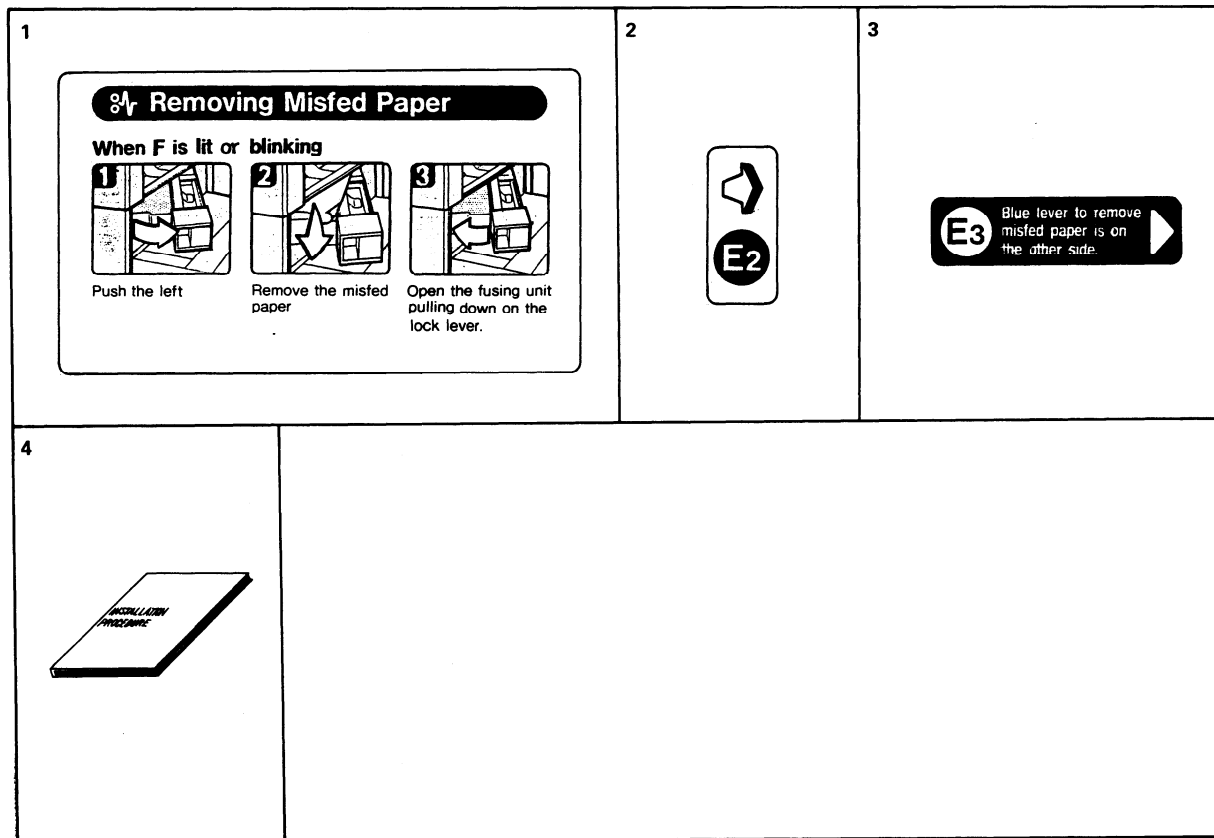

6. DECAL & DOCUMENT (A424)

Feb. 28, '89

Index No.	Part No.	Description	Q'ty Per Assembly
1	A424 2502	Decal - Misfeed - LT	1
1	A424 2503	Decal - Misfeed - A4	1
2	A424 2511	Decal - E2	1
3	A424 2522	Front Cover Decal - LT	1
4	A424 8610	Installation Procedure - English	1
4	A424 8615	Installation Procedure - 5 Language	1

Index No.	Part No.	Description	Q'ty Per Assembly

PARTS INDEX

Parts No.	Description	Page and Index No.
A424 1032	Upper Entrance Stay	7-27
A424 1062	Paper Feed Tray	5-28
A424 1104	Roller Shaft	5-5
A424 1120	Junction Gate Solenoid	5-43
A424 1124	Pressure Solenoid	7-11
A424 1128	Roller Solenoid	7-19
A424 2102	Spring Plate	7-2
A424 2103	Upper Guide Plate	7-4
A424 2116	Lower Guide Plate	7-10
A424 2117	Lower Stay	7-38
A424 2121	Support Bracket	7-35
A424 2124	Guide Plate	5-29
A424 2126	Front Guide Plate	5-24
A424 2127	Guide Plate	5-42
A424 2137	Paper Support Guide	5-25
A424 2141	Stay	5-17
A424 2145	Clutch Bracket	7-43
A424 2146	Friction Pad Ass'y	5-35
A424 2149	Sensor Bracket	5-57
A424 2160	Jogger Fence Table	5-12
A424 2171	Upper Jogger Guide	5-4
A424 2201	Gear Bracket	5-45
A424 2223	Roller Arm	5-10
A424 2230	Pressure Arm	7-6
A424 2242	Spring Hook	7-21
A424 2246	Bracket	5-49
A424 2252	Arm	7-22
A424 2255	Lever	7-23
A424 2260	Guide Plate	5-39
A424 2270	Support Plate	3-19
A424 2273	Release Link	3-13
A424 2275	Lever Bracket	3-14
A424 2277	Support Plate	3-8
A424 2280	Harness Bracket	3-6
A424 2281	Cushion Stud	3-24

Parts No.	Description	Page and Index No.
A424 2283	Rear Side Bracket	7-29
A424 2291	Lower Cover	5-15
A424 2301	Front Cover	3-18
A424 2311	Rear Cover	3-4
A424 2321	Duplex Tray	3-22
A424 2331	Upper Cover	3-3
A424 2361	Bushed Roller Chain - 94P	5-53
A424 2502	Decal - Misfeed - LT	13-1
A424 2502	Decal - Misfeed - LT	3-15
A424 2503	Decal - Misfeed - A4	13-1
A424 2503	Decal - Misfeed - A4	3-15
A424 2511	Decal - E2	13-2
A424 2511	Decal - E2	3-2
A424 2522	Front Cover Decal - LT	13-3
A424 2522	Front Cover Decal - English	3-17
A424 5301	Relay Harness	11-*
A424 5301	Relay Harness	3-5
A424 5302	Duplex Harness	7-42
A424 5302	Duplex Harness	9-*
A424 5801	Harness Bracket	3-23
A424 5802	Bracket - Harness - Duplex Unit	3-11
A424 8610	Installation Procedure - English	13-4
A424 8615	Installation Procedure - 5 Language	13-4

Parts No.	Description	Page and Index No.
AA02 0003	Slide Lever Magnet	7-9
AA06 0013	Spring	5-48
AA06 0086	Spring	7-30
AA06 0087	Spring	7-44
AA06 0088	Spring	7-20
AA06 0089	Spring	7-25
AA06 0090	Spring	5-27
AA06 6010	Spring Clutch	7-15
AA07 0002	Rail	3-7
AA08 2009	Bushing - 8x12x8mm	7-31
AA12 0005	Antistatic Brush	7-1
AA13 2014	Spacer	5-31
AA14 0094	Shaft	7-40
AA14 0095	Shaft	5-22
AA14 0097	Pressure Shaft	7-5
AA14 0098	Shaft	7-28
AA14 0117	Upper Guide Shaft	5-2
AA14 3043	Shoulder Screw - M6x8	3-10
AA14 3045	Stud	7-24
AA15 0096	Guide Sheet	5-59
AB01 3149	Gear - 20T	5-19
AB01 3160	Gear - 24T	5-46
AB01 3161	Gear - 28T	5-47
AB01 3162	Gear - 28T	5-18
AB01 7054	Gear - 17T	5-51
AB01 7055	Gear - 20T	5-52
AB02 3003	Pulley - 11T	5-60
AB02 3025	Sprocket - 18T	5-50
AF02 0049	Fork Gate Roller	7-8
AF02 0050	Transport Roller	5-26
AF02 0052	Lower Transport Roller	5-38
AF02 0089	Exit Fork Gate Roller	7-3
AF02 0111	Fork Gate Roller	5-23
AF03 3004	Friction Pad	5-36
AG05 1013	Release Lever	3-9

Parts No.	Description	Page and Index No.
AG05 1014	Slide Lever	3-16
AG05 1017	Guide Plate Lever	5-37
AW02 0010	Photointerruptor	7-36
AW02 0011	Photointerruptor	7-37
AX05 0021	Stepper Motor - DC4.8W	5-56
AX21 0010	Magnetic Clutch	7-41
A416 2289	Duplex Tray Cover	3-1
5053 0447	Bushing - M6	5-9
5205 2697	Bushing - Upper Registration Roller	5-41
5205 2698	Relay Roller Spring	3-20
5206 2671	Positioning Roller	5-6
5206 2686	Snap Ring	5-1
5206 2876	Spring - Wire	5-13
5206 2877	Wire Clamp Plate	5-61
5215 2618	Feed Roller Hub	7-33
5215 2619	Feed Roller	7-32
5215 2621	Snap Ring - M6	7-34
5215 2713	Bottom Plate Pad	5-62
5215 5230	Photointerrupter - L-Type	5-58
5304 1639	Bushing - 8mm	7-18
5403 2016	Tension Sprocket (11T) - Paper Feed	5-44
5403 2075	Stepped Screw	3-12
5403 2075	Stepped Screw	5-11
5403 2075	Stepped Screw	7-39
5410 1291	Pin - Return Lever	7-26
5419 5714	Stepped Screw - M4	5-20
5442 1735	Pulley	5-16
5442 2630	Arm - Friction Pad	5-33
5442 2642	Shoulder Screw - M3	5-34
5442 2645	Spring - Friction Pad	5-32
5447 2681	Snap Ring	5-3
5887 4162	Screw - Driven Guide Plate	5-21
5919 2105	Friction Pad Arm	5-30
5919 2127	Positioning Roller Pulley	5-8
5919 2132	Positioning Roller Belt	5-7

Parts No.	Description	Page and Index No.
5919 2144	Feed-in Tray Lever	7-16
5919 2146	Pressure Lever	7-45
5919 2147	Spring Hook	7-46
5919 2168	Jogger Motor Bracket	5-55
5919 2169	Wire Drive Pulley	5-54
5919 2172	Jogger Wire	5-14
5919 2218	Bushing - 4x7x10mm	7-7
5919 2258	Spring - Feed-in Tray Clutch	7-12
5919 2260	Gear - 58T	7-17
5919 2262	Feed-in Tray Cam	7-13
5919 2264	Clutch Sleeve	7-14
5919 2290	Duplex Tray Cover Holder	3-21
5938 2598	Spring - Lower Transport Roller	5-40

Parts No.	Description	Page and Index No.
0314 0050W	Philips Pan Head Screw - M4x5	3-102
0314 0050W	Philips Pan Head Screw - M4x5	5-109
0314 0050W	Philips Pan Head Screw - M4x5	7-102
0314 0060W	Philips Pan Head Screw - M4x6	5-102
0314 0080M	Philips Pan Head Screw - M4x8	3-103
0314 0120W	Philips Pan Head Screw - M4x12	5-112
0324 0080W	Philips Sunken Head Screw - M4x8	3-101
0344 0080W	Philips Truss Head Screw - M4x8	3-108
0434 0060W	Tapping Screw - M4x6	7-106
0434 0080W	Tapping Screw - M4x8	5-114
0434 0080W	Tapping Screw - M4x8	7-112
0434 0082W	Tapping Screw - M4x8	3-104
0443 0060W	Hexagon Head Tapping Screw - M3x6	7-108
0574 0040E	Hexagon Headless Set Screw - M4x4	5-110
0622 0140E	Spring Pin - 2x14mm	5-103
0720 0030E	Retaining Ring - M3	3-106
0720 0030E	Retaining Ring - M3	5-105
0720 0030E	Retaining Ring - M3	7-101
0720 0040E	Retaining Ring - M4	5-101
0720 0040E	Retaining Ring - M4	7-107
0720 0060E	Retaining Ring - M6	5-106
0720 0060E	Retaining Ring - M6	7-103
0725 0120E	Retaining Ring C - M12	7-109
0951 3006W	Philips Screw With Flat Washer - M3x6	7-110
0951 4010W	Philips Screw With Flat Washer - M4x10	3-105
0951 4010W	Philips Screw With Flat Washer - M4x10	5-111
0952 3012W	Philips Screw - M3x12	5-107
0952 4008W	Philips Screw - M4x8	5-108
0952 4008W	Philips Screw - M4x8	7-111
0953 3006W	Tapping Screw With Flat Washer - M3x6	7-113
0960 4006W	Philips Flange Screw - M4x6	3-107
0964 4008W	Tapping Screw With Flat Washer - M4x8	7-104
0965 4008W	Tapping Screw With Flat Washer - M4x8	5-104
1100 1159	Socket - Mate-N-Lock	9-103
1100 1249	Receptacle Terminal	9-104

Feb. 28, '89

Parts No.	Description	Page and Index No.
1100 1259	Socket - Mate-N-Lock	9-105
1100 1264	Wire Terminal	11-101
1100 1327	Con tact	11-102
1100 1327	Con tact	9-106
1100 1328	Contact	11-103
1100 1328	Contact	9-107
1102 1091	Connector - 6P	9-108
1102 1397	Connector - 2P	9-109
1102 1398	Connector - 2P	9-110
1102 1620	Connector - 3P	9-111
1102 1910	Connector - 2P	9-112
1102 1911	Connector - 3P	9-113
1102 1914	Connector - 6P	11-104
1102 1925	Connector - 3P	9-114
1102 1928	Connector - 6P	11-105
1102 1942	Connector - 6P	11-106
1102 1967	Connector - 6P	9-115
1102 1969	Connector - 10P	11-107
1102 1973	Connector - 6P	9-101
1102 1979	Connector - 6P	11-108
1102 1979	Connector - 6P	9-102
1105 0010	Nylon Clip - 6N	7-105
1105 0196	Harness Clamp	5-113

Parts No.	Description	Page and Index No.