
Technical Notes on using Analog Devices' DSP components and development tools

Phone: (800) ANALOG-D, FAX: (781) 461-3010, EMAIL: dsp.support@analog.com, FTP: [ftp.analog.com](ftp://ftp.analog.com), WEB: www.analog.com/dsp

An Overview of the ADSP-219x Pipeline

Last modified 10/13/00

This tech-note is intended to provide a brief description of the salient features of the ADSP-219x pipeline to users and programmers of the ADSP-219x, to help them to optimize their programs to maximize performance and throughput. Specific cases that illustrate the pipeline operation (such as loops, jumps, and interrupt calls) will be explained.

Knowledge of ADSP-2100 family assembly language (which is identical to ADSP-219x assembly) is assumed. For more detailed information on the ADSP-219x pipeline, please refer the ADSP-219x User's Manual.

Introduction

The ADSP-219x has a six-stage instruction pipeline comprising the Look-ahead, Pre-fetch, Fetch, Address generation, Decode, and Execute stages. Note that as this is not an execution pipeline, the DSP core executes every instruction in a single core cycle. A two-stage memory pipeline is incorporated within the instruction pipeline. What this means is that it takes two core cycles for data to be available on the data bus after the address has been placed on the address bus. Therefore, during any given cycle, up to 6 instructions maybe in different stages of completion.

The additional depth in the pipeline allows a much increased operating speed for the processor core. The functions of the different stages of the pipeline are briefly:

- Look-ahead. In the look-ahead stage, the pipeline places an instruction address on the PMA bus.

The look-ahead stage is also used by the sequencer in resolving bus conflicts. Since the two stages of the pipeline that could possibly use the PMA bus are the look-ahead and the address generation, if there is a conflict between these two stages on who acquires the bus, the sequencer looks in the instruction cache to determine if the instruction that causes the conflict has already been cached. If it is determined that the instruction was cached, the sequencer looks ahead for the instruction from the instruction cache, allowing the address generation stage to use the PMA bus instead. If however, the instruction was not cached, the address generation stage wins priority in the current cycle to use the PMA bus, while the program sequencer will get the PMA bus in the next cycle.

- Pre-fetch. The pre-fetch stage is essentially spent waiting for memory accesses that were initiated in the look-ahead stage.
- Fetch. In this stage, the instruction that was "looked-ahead" two cycles ago is fetched from program memory, over the PMD bus.

- Address generation. In this stage, certain parts of the instruction are decoded, such as DAG operations. If any memory data is required by the instruction, the address for this data is placed over the appropriate address bus (PMA for PM data and DMA for DM data)
- Decode. This stage is used by the processor to decode the rest of the instruction and for setting up computational units. It is also spent waiting for memory accesses to occur.
- Execute. In this stage, the instruction is executed, status conditions are set, and results and outputs written to the appropriate destination.

Syntax and Terminology

For the remainder of the document, the following syntax will be followed in pipeline diagrams and discussions. The stages of the pipeline will be indicated by their first letters in **Boldface** Upper-case, addresses will be indicated by the prefix 'a' (e.g., a1,a2,a3..), while instructions will be prefixed by 'i' (e.g., i1,i2,i3..). The pipeline blocks will contain the corresponding instructions as they traverse through the pipeline. Blocks that are crossed out () represent instances where the sequencer has invalidated the contents of that pipeline stage and effectively replaced that instruction with a NOP. Blocks grayed out () represent a cache-lookup.

Cache hit. A cache hit occurs when the program sequencer determines that the address for an instruction is present in the instruction cache. The result of a cache hit is the sequencer gets the instruction from the cache instead of fetching it from program memory, thereby freeing up the PMA bus for another access.

Cache miss. A cache miss occurs when the address looked up by the sequencer is not present in the instruction cache. In the event of a cache-miss, the sequencer has to fetch the instruction from memory. In relevant cases, the pipeline diagram will be accompanied with a block diagram describing the contents of the Program Memory Address (PMA), Program Memory Data (PMD), Data Memory Address (DMA), and Data Memory Data (DMD) buses in that cycle. For example, consider the following sequence of consecutive instructions and addresses. Figure 1(a) shows the pipeline diagram, while Figure 1(b) shows the contents of the four buses. (For the sake of simplicity, the contents of the DMA and DMD buses have been left out.)

Address	Instruction
a1	i1
a2	i2
a3	i3
a4	i4
a5	i5
a6	i6
a7	i7

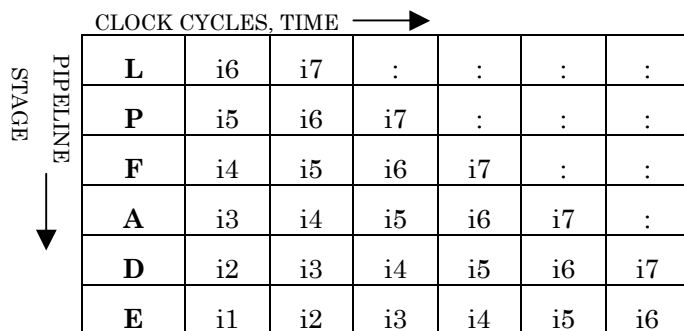


Figure 1(a)

PMA	a6	a7	a8	..	..	..
PMD	i4	i5	i6	..	..	..
DMA						
DMD						

Figure 1(b)

Case 1. Latencies on Jumps/Calls

In all, the ADSP-219x supports 5 varieties of delayed and non-delayed jumps and calls. There is a 13-bit conditional jump/call (type 10), a 16-bit unconditional jump/call (type 10a), both of which use relative addresses and not absolute addresses. The range of relative addresses (from the current PC) for the type 10 instruction is -4096 to +4095, while the corresponding range for the type 10a is -32768 to +32767.

In addition, the ADSP-219x also supports a delayed or non-delayed conditional Indirect Jump/Call (where the address to jump or call is passed in a DAG index register). Note that the destination address is the absolute address contained in the DAG register, with the 8 MSBs of the destination address taken from the corresponding page register.

e.g., IF NE CALL (I4); // make sure you set up IJPG and I4 before you execute this instruction
 IF AV JUMP (I5) (db); // same holds true for this instruction

Finally, the ADSP-219x also supports a 2-instruction, conditional, non-delayed absolute jump/call. The absolute 24-bit address is specified in the instruction. The linker is cognizant enough when this jump is invoked, to decide whether the absolute address needs to be specified. Whenever possible, the shorter, faster relative jumps/calls will be used. There is a way to force the linker to use the absolute jump by prefixing the jump with an "L".

e.g., LJUMP foo;
 LJUMP 0xFF0000;

The latency of the instruction pipeline is to introduce a latency of 4 "core processor" cycles for both conditional as well as unconditional jumps and calls IF the branch is taken, and NO latency if the branch is not taken. Figures 2(a) and 2(b) illustrate an example case of the branch taken, and branch not taken, respectively.

Address	Instruction
a1	i1: MR=MR+MX0*MY0 (SS);
a2	i2: IF COND JUMP aa1;
a3	i3
a4	i4
a5	i5
a6	i6
a7	i7
...	...
aa1	ii1

CLOCK CYCLES →

L	i6	ii1	ii2	:	:		
P	i5	i6	ii1	ii2	:	:	
F	i4	i5	i6	ii1	ii2	:	
A	i3	i4	i5	i6	ii1	ii2	:
D	i2	i3	i4	i5	i6	ii1	ii2
E	i1	i2	i3	i4	i5	i6	ii1

Figure 2(a) Branch taken

CLOCK CYCLES →

L	i6	i7	:	:	:	
P	i5	i6	i7	:	:	:
F	i4	i5	i6	i7	:	:
A	i3	i4	i5	i6	i7	:
D	i2	i3	i4	i5	i6	i7
E	i1	i2	i3	i4	i5	i6

Figure 2(b) Branch not taken

Delayed Jumps/Calls

To compensate for the increased overhead, the ADSP-219x programming model now gives a programmer the option (which didn't exist on the ADSP-218x) to use delayed branches and function calls. Two instructions can be executed in the pipeline pending the branch. Figure 3(a) and 3(b) shows the pipeline structure for a delayed jump that is taken and not taken, respectively. Note that the instructions in the delayed branch slots are executed regardless of whether the jump is taken or not. Also, there are some restrictions on the types of instructions that can be part of a delayed branch slot. For example, stack manipulation operations such as and pushes and pops of stacks are not allowed. Multi-word instructions are allowed only in the first delay slot.

Address	Instruction
a1	i1: MR=MR+MX0*MY0 (SS);
a2	i2: IF COND JUMP aa1 (db);
a3	i3
a4	i4
a5	i5
a6	i6
a7	i7
...	...
aa1	ii1

CLOCK CYCLES →

L	i6	ii1	ii2	:	:		
P	i5	i6	ii1	ii2	:	:	
F	i4	i5	i6	ii1	ii2	:	
A	i3	i4	i5	i6	ii1	ii2	:
D	i2	i3	i4	i5	i6	ii1	ii2
E	i1	i2	i3	i4	i5	i6	ii1

Figure 3(a) Branch taken

CLOCK CYCLES →

L	i6	i7	:	:	:	
P	i5	i6	i7	:	:	:
F	i4	i5	i6	i7	:	:
A	i3	i4	i5	i6	i7	:
D	i2	i3	i4	i5	i6	i7
E	i1	i2	i3	i4	i5	i6

Figure 3(b) Branch not taken

Case 2. Pipeline Latencies on Interrupts and RTI/RTS

There is a minimum pipeline latency of 4-cycles in servicing an interrupt (Fig 4). This is in addition to cycles taken for recognizing and synchronizing the interrupt. Additional delays maybe caused by DMA operations occurring in the background, or the execution of I/O instructions. On receiving and recognizing an interrupt request, the DSP completes execution of the present instruction, and in the very next cycle flushes the pipeline while simultaneously looking up the first instruction of the interrupt vector (i_int1). There is also a 4-cycle hit on a return from an interrupt or from a function call.

Address	Instruction
a1	i1
a2	i2
a3	i3
a4	i4
a5	i5
a6	i6
a7	i7
...	...
a_int1	i_int1
a_int2	i_int2
...	...
a_intz	i_intz: RTI;

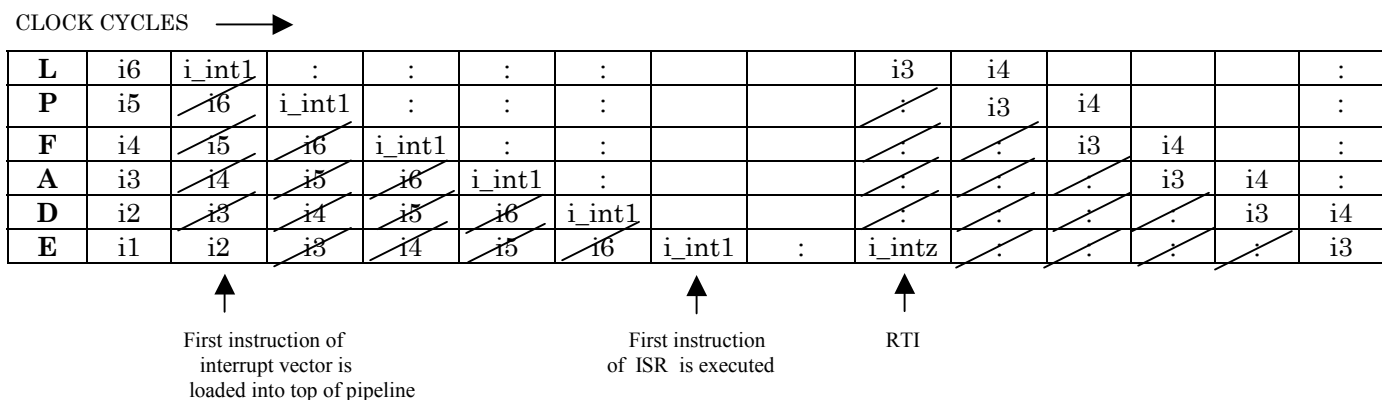


Figure 4

Delayed RTI/RTS

The delayed RTI or RTS can be used to reduce by half the number of wasted cycles in returning from a serviced interrupt. Fig 5 describes the pipeline structure for this case. The number of non-productive cycles is reduced from 4 to 2 with the use of a delayed return. There are some restrictions on the types of instructions that can be part of the delay slots.

Address	Instruction
a_int1	i_int1
a_int2	i_int2
...	...
a_intx	i_intx: RTI (db);
a_inty	i_inty
a_intz	i_intz

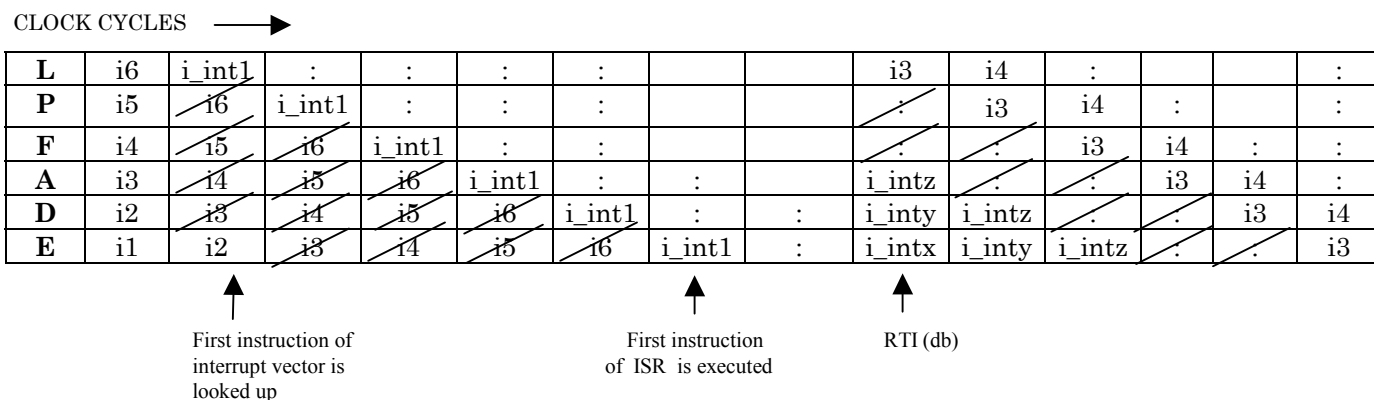


Figure 5

Case 3. Do-Until Loops

Short Do-until loops offer an interesting case for the pipeline in terms of the number of iterations of a loop, as well as the type of instructions that occur within the loop. In general, such loops incur a one-time overhead of 4 cycles during loop entry. For example, consider a single-instruction loop that is executed 4 times. (For now, it is assumed that the instruction i5 in the loop is not a Type 1 instruction, i.e., Multifunction ALU or MACC with DM and PM dual reads using DAGs 1 and 2 post-modify -- this case will be discussed later.)

Address	Instruction
a1	i1
a2	i2
a3	i3: CNTR = 4;
a4	i4: DO this_loop UNTIL CE;
this_loop: a5	i5: (not a Type 1 ins)
a6	i6
a7	i7
a8	i8
...	...

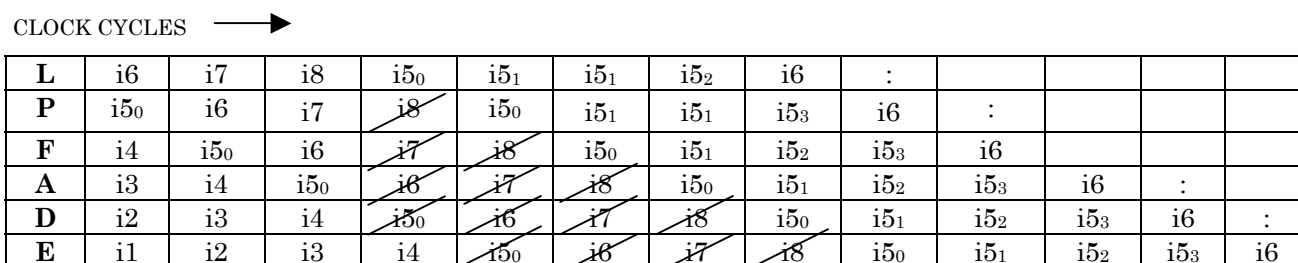


Figure 6

Case 3. Long DO-UNTIL Loops

Do-until loops that are longer than 5 instructions deep have no overhead as illustrated in Figure 7.


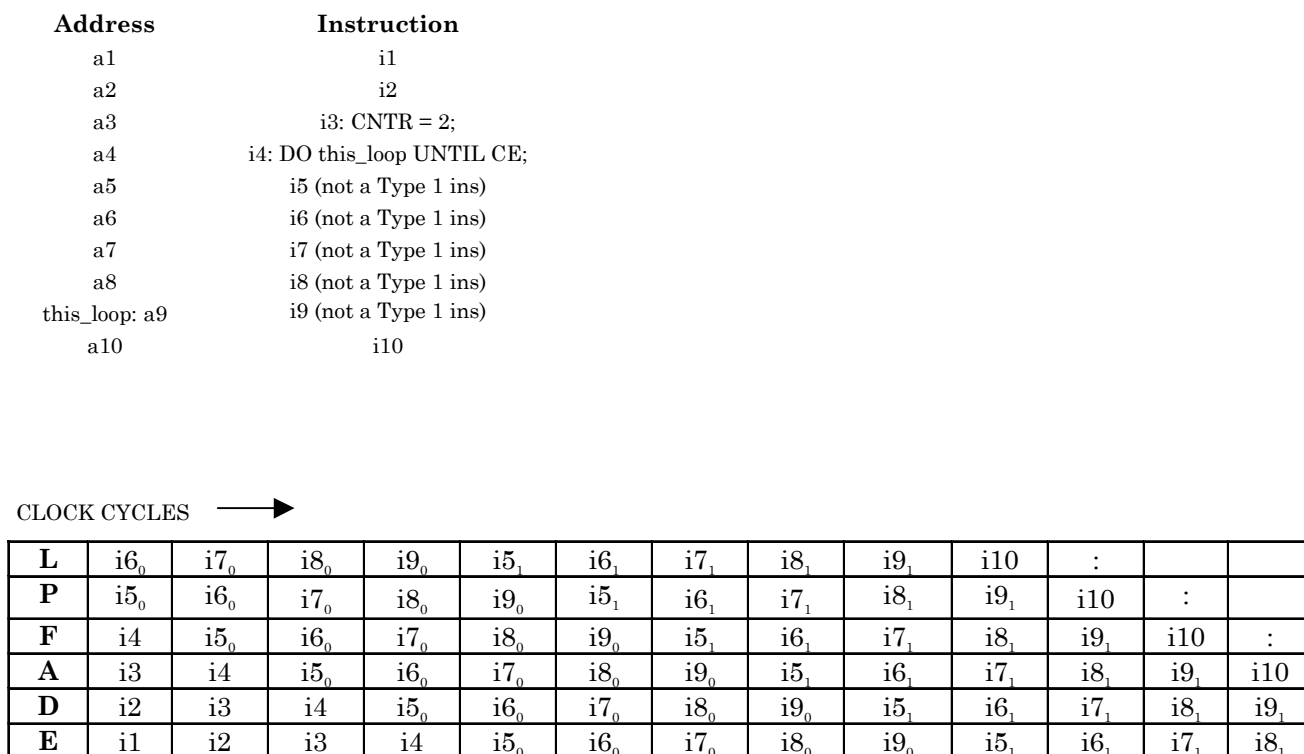


Figure 7

Case 4. Type-1 Instructions


Type-1 instructions are one of the most powerful and commonly used DSP instructions and are widely used in FIR and IIR tap implementations. Type-1 instructions encompass an ALU/MAC/Shifter operation executed in parallel with dual-memory fetches. For a more detailed description of Type-1 instructions, please refer the User's manual. Type-1 instructions provide an interesting case because they require the use of three buses, and on an architecture such as the 219x, this is accomplished using the instruction cache.

Figures 8(a) and 8(b) show the two cases to describe the two cases of what happens when a Type-1 instruction has already been cached (resulting in a cache-hit), and the case where it hasn't been cached (resulting in a cache-miss). Note that for a Type-1 instruction to execute in a single cycle, the instruction should have been cached, and the two data operands should be placed in separate memory blocks.

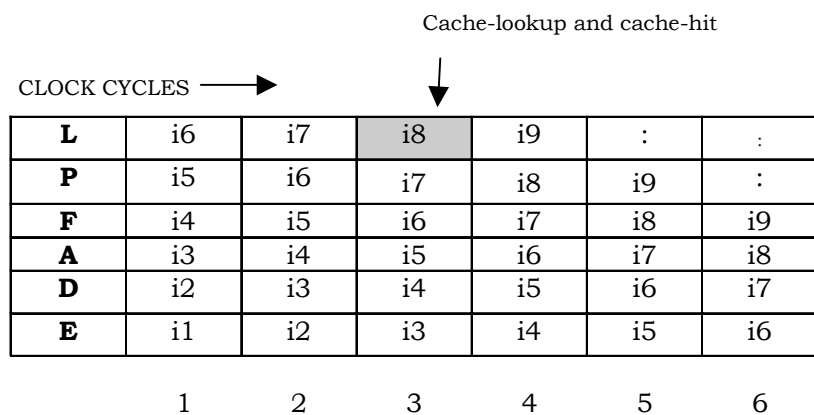

PMA	a6	a7	address for i5's PM data	a9	:	:
PMD	i4	i5	i6	i7	PM data for i5	i9
DMA			address for i5's DM data			
DMD					DM data for i5	

Figure 8(a)

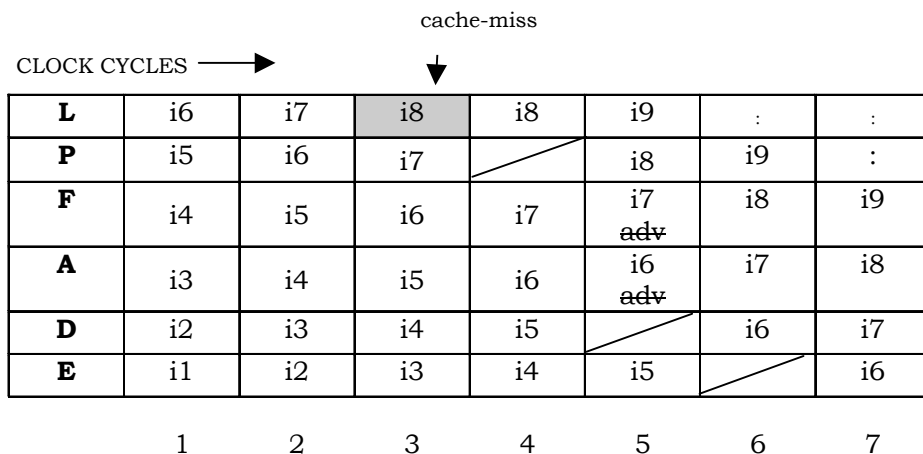

PMA	a6	a7	address for i5's PM data	a8	a9		:
PMD	i4	i5	i6	i7	PM data for i5	i8	i9
DMA			address for i5's DM data				
DMD					DM data for i5		

Figure 8(b)

Case 4. Do-Until Loops containing Type-1 Instructions

The operation and effects of the instruction pipeline become more interesting if the instruction within a DO-UNTIL loop is a Type1 instruction, as shown in the following example for an FIR filter tap.

```

:
DO sop UNTIL CE;
sop: MR = MR+MX0*MY0 (SS), MX0 = DM(I0,M1), MY0 = PM(I4,M5);
:

```

In this case, since the instruction also uses the PMA and PMD buses, the instruction cache comes into the picture, and there are pipeline conflicts that lead to added cycles. There are also varying latencies depending on the number of iterations of the loop.

Generally, the number of cycles taken to execute a Type-1 Do-Until loop N times is (N+8) cycles. This assumes the dual data operands have been placed in separate memory blocks.

Pipeline Stalls

Under certain conditions, stalls are automatically inserted in the pipeline by the sequencer. A stall causes the entire pipeline to not advance. Stalls are completely transparent to the user and will not affect the operation of user programs. There are two main reasons for stalls to be inserted in the pipeline.

The first is to enable background DMA transfers to occur. The other reason for stalls is if the code sequence has dependencies. For example, consider the case below where DAG register I0 is initialized with a certain value and is used for a memory access in the very next cycle. Since the DAG is not updated until the instruction is executed, and since the DAG needs the updated value of I0 to perform the memory access, the subsequent instruction cannot happen. Hence the sequencer stalls the pipeline for two cycles.

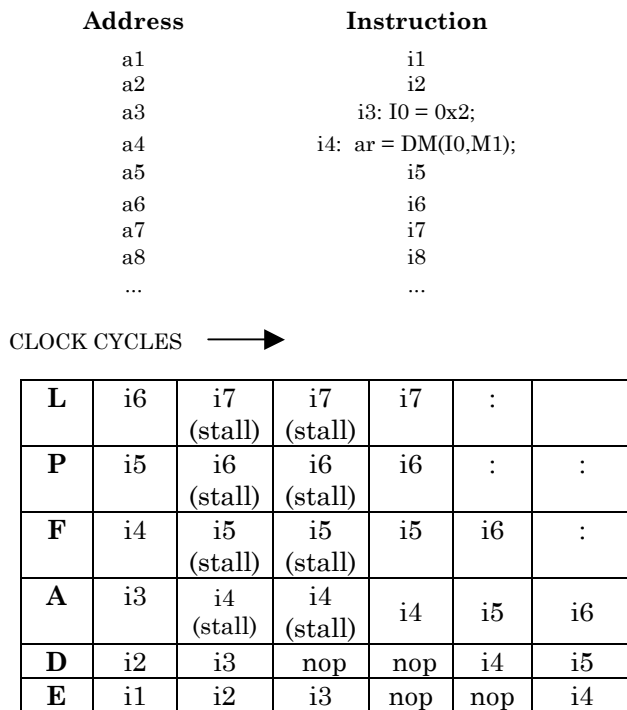


Figure 9

The workaround (Fig 10) is to make sure these instructions are at least two apart.

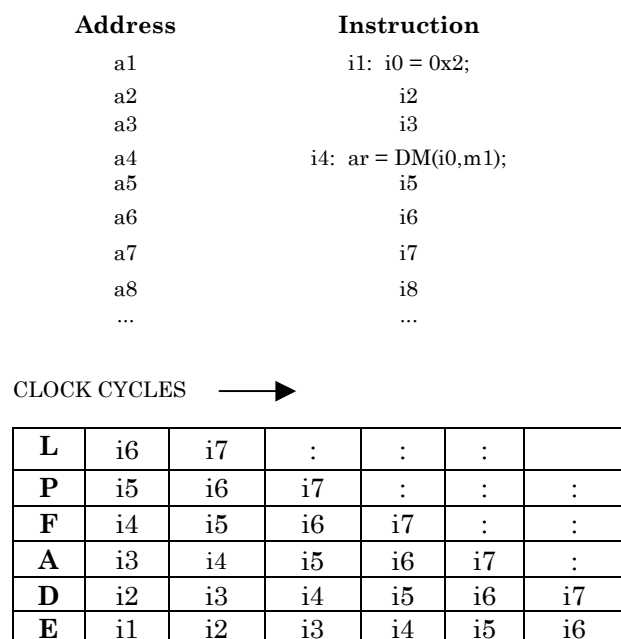


Figure 10

Conclusion

In conclusion, knowledge of the ADSP-219x instruction pipeline should allow users to write code to take advantage of the increased speed and performance of the ADSP-219x architecture.