
ScanRouter

OPERATING INSTRUCTIONS (Type 270)

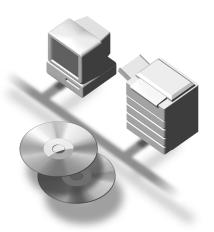

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.

Introduction

To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information in the "Operating Instructions" before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Trademarks

Adobe, Acrobat are registered trademarks of Adobe Systems Incorporated.

Microsoft, Windows, Windows NT are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

Note

The proper names of Windows operating system are as follows:

- Microsoft® Windows® 95 operating system
- Microsoft® Windows® 98 operating system
- Microsoft® Windows NT® Server network operating system Version 4.0
- Microsoft® Windows NT® Workstation operating system Version 4.0

TABLE OF CONTENTS

Introduction	1			
Overview				
Setup Orders				
Client Computer Operations	2			
.ScanRouter Station Setup				
System Requirements	3			
Installing the ScanRouter Station Software				
Uninstalling ScanRouter Station Software	5			
2. Station Management and Operation				
Starting and Stopping ScanRouter Station				
Starting as an application after Logging on to Windows				
Starting as a Service when Windows is Started				
Changing the Starting Option				
Environment Settings				
Creating a Shared Folder as a Destination Folder [Environment Settings] Dialog Box				
User/Group				
Registering a User				
Registering a Group				
Deleting a User/Group				
Changing the User/Group Order on the copier Panel Display				
Importing and Exporting User Information				
Daily Operation				
Checking the Error Log				
Non-forwarding Documents Checking the Free Disk Space				
ScanRouter Maintenance Tool				
Scalification Maintenance 1001	. 44			
3. User Tools				
Delivery Scanner Setup	. 25			
Enabling Delivery Option				
Adjusting Delivery Settings				
Scanner Setup				
Items for Scanner Setup				
Resolutions and Original Sizes Registering Items for Scanner Setup				
registering items for ocaliner octup	JI			

4. Delivering Originals

Delivery Settings	35				
Setting OriginalsScanning 1-sided OriginalsScanning 2-sided Originals					
				Setting Originals on the Platen Glass	
				Setting Originals in the Document Feeder (ADF)	
Setting the Direction of the Originals	44				
Changing the Scanner Settings Temporarily					
5. Client Operation					
Receiving Documents with Client Software	47				
System Requirements	47				
Setting up the Reception Environment for Client Software					
Receiving Documents					
Client Software Properties					
Displaying Documents in the Shared Folders	58				
6. Appendix					
Troubleshooting	59				
Copier					
ScanRouter Client Software					
ScanRouter Station Error Log Messages	60				
The Copier Error Messages6					
				INDEV	C.E.


Introduction

Overview

With ScanRouter, you can deliver scanned documents from the copier to folders located on the station, or directly to file servers on the network.

Summary of the copier Delivery Operations

The illustration below describes examples of document delivery with the copier. After being delivered to ScanRouter Station, the documents are processed in various ways depending on the settings of ScanRouter Station.

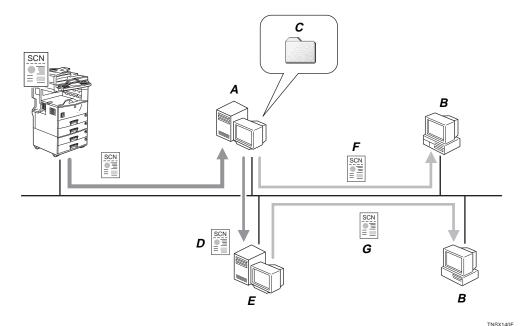

- A. ScanRouter Station
- B. Client
- C. User Folder
- D. Delivered
- E. File Server
- F. Received using Client Software
- *G.* Browsed/Copied through the network

Documents sent from the copier to ScanRouter Station can be delivered and saved to the folders as below.

- ① User folders located on ScanRouter Station
- ② Shared folders selected as destination folders



☐ A destination folder can be selected from shared folders located on Scan-Router Station, or located on other file servers on the network.

Setup Orders

To deliver documents received from the copier with ScanRouter, ScanRouter Station and the copier must be properly configured. First, configure the basic settings to be used, and then make a delivery from the copier after the environment settings have been made.

In this manual, the main references are as follows:

- ① "ScanRouter Station Setup" \Rightarrow P.3.
- ② "Station Management and Operation" \Rightarrow P.7.
- ③ "User Tools" \Rightarrow P.25.
- ④ "Delivering Originals" \Rightarrow P.35.

Client Computer Operations

With the client computer, you can check the contents of the document by using the appropriate application for that type of file. The following are examples of client computer operations.

When documents are saved in the user folder

If "Folder" has been selected in **[Delivery Type]** in the **[Environment Settings]** dialog box, the documents are saved in the user folder located on ScanRouter Station.

To open these documents from the client computer, use ScanRouter Client Software to receive the documents and use the appropriate application for that type of file.

"Receiving Documents with Client Software" \Rightarrow P.47.

When documents are delivered to the destination folder

If "Save to File" has been selected in [Delivery Type] in the [Environment Settings] dialog box, the documents are saved in the selected destination folder.

To open these documents from the client computer, access the destination folder through the network and use the appropriate application for that type of file.

"Displaying Documents in the Shared Folders" \Rightarrow P.58.

1. ScanRouter Station Setup

System Requirements

The computer used as ScanRouter Station must meet the following system requirements.

Limitation

☐ Do not install this application in a computer used as a mail server, Web server, database, and so on.

◆ CPU

Pentium 133MHz minimum (200MHz or faster recommended)

◆ RAM

32MB minimum (64MB or more recommended)

Hard Disk Space

At least 10MB of disk space is required for installation.

The computer used as ScanRouter Station needs 300MB or more of free disk space in the partition where the application is installed. This space is used for saving documents.

Operating Systems

- Microsoft Windows 95 (with Service Pack 1, or OSR2 or later)
- Microsoft Windows 98
- Microsoft Windows NT Server 4.0 (with Service Pack 3 or later)
- Microsoft Windows NT Workstation 4.0 (with Service Pack 3 or later)

Note

☐ If installing this application in a Windows NT Server, we recommend that you install the application in a member server. Do not install this application in a primary domain controller or a backup domain controller.

Protocols

TCP/IP protocol

∅ Note

☐ To deliver documents to file servers on the network, additional protocols may be required.

Installing the ScanRouter Station Software

There are two ways to start ScanRouter Station: as an application after logging on to Windows, or as a Service when Windows is started.

Decide which option you want to select before beginning the installation, because this setting is made during the installation.

Note

- ☐ After installation, you can still change the way in which this application is started.⇒ P.8 "Changing the Starting Option"
- ☐ To prevent others from using the station when installing this application in Windows NT 4.0, we recommend that you start this application as a Service.

Comparing the starting options:

	Starts as an application after logging on to Windows	Starts as a Service
Status	User starts this application manually when logging on to Windows. or Starts automatically after a shortcut to this application is placed in the [StartUp] folder	Starts automatically when Windows is started (no logon process is required)
Delivery to destination folders in the file server on the network	Available	Not available

Note

- ☐ Quit all open applications before beginning the installation.
- ☐ When installing in a computer running Windows NT 4.0, log on as a member of the Administrators group.
- 1 Start Windows on the computer that will be used to run ScanRouter Station, and then insert the ScanRouter CD-ROM into the computer.

The language selection dialog box appears.

- ☐ If the window doesn't appear, double-click on "Setup.exe" located on the root directory of the CD-ROM, to start the Installer.
- 2 Select the language of the application to be installed, and click [OK].
- Click [ScanRouter Station].

4 When the [Welcome] dialog box appears, click [Next].

The license contract for this application is displayed.

- Click [Yes].
- When the [Choose Destination Location] dialog box appears, change the destination if required, and then click [Next].
- **7** Select the starting option and click [Next].
- When selecting [Launch after Log on], select the option to place a shortcut to this application in the [StartUp] folder.
 - Note
 - ☐ If placing a shortcut to this application in the **[StartUp]** folder, ScanRouter Station starts automatically after logging on.

When installation is complete, the [Setup Complete] dialog box appears.

∰Important

☐ Do not use Windows Explorer or other applications to access the folder where ScanRouter is installed, or problems could occur.

Uninstalling ScanRouter Station Software

If you want to save the documents in the user folder, back up the documents with ScanRouter Maintenance Tool before the uninstallation.⇒ P.24 "ScanRouter Maintenance Tool"

- **1** If ScanRouter Station is running, stop the station.
 - **₽** Reference

"Stopping the Station" \Rightarrow P.8.

- Delete ScanRouter from the computer using [Add/Remove Programs] in Control Panel.
- **3** Delete the folder in which ScanRouter was installed.

If the location of the folder has not been changed, the path name for this folder is "Program Files\ScanRouter".

2. Station Management and Operation

Starting and Stopping ScanRouter Station

There are two ways to start ScanRouter Station: as an application after logging on to Windows, or as a Service when Windows is started.

The setting for starting ScanRouter Station should be made during the installation, however, you can change this setting after the installation. \Rightarrow P.8 "Changing the Starting Option"

Limitation

□ If the free disk space in the partition where this application is installed becomes less than 200MB, you will not be able to use the station until 200MB of free disk space becomes available. ⇒ P.22 "Checking the Free Disk Space"

Starting as an application after Logging on to Windows

If delivering documents to file servers on the network, use the station user name to log on.

If logging on with a different user name, a network drive mapping may change, or delivery documents may not be available due to the access privileges of the destination folder.

Starting the Station

- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 When a message asks if you want to start ScanRouter Station, click [Yes].

After the station starts, the icon of ScanRouter Client Manager is displayed on the taskbar.

If clicking [No], click [Start] from the main dialog box.

- ☐ ScanRouter Client Manager is the application to enable ScanRouter Client Software to receive documents. Starting or stopping ScanRouter Station affects operations made with ScanRouter Client Manager.
- ☐ When right-clicking on the icon of ScanRouter Client Manager, the **[Exit]** command appears. However, do not use this command to exit from ScanRouter Client Manager, or you will not be able to receive documents with ScanRouter Client Software.

Stopping the Station

- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 Click [Stop].
- When a message asks if you want to stop the station, click [Yes].

[Station Status] is switched to "Stopped" and you can exit from ScanRouter Client Manager.

Starting as a Service when Windows is Started

You don't have to do anything if this option is selected. ScanRouter Station starts automatically when Windows is started.

Starting or stopping ScanRouter Station affects operations made with ScanRouter Client Manager. No icon is displayed on the taskbar when ScanRouter Station is running as a Service.

Limitation

 \square If starting as a Service, delivery to file servers on the network is not possible.

Changing the Starting Option

To change the starting option, you must reinstall this application and select the option you want to use during the installation (this overwrites the old option). Follow the instructions to overwrite the application. \Rightarrow P.4 "Installing the Scan-Router Station Software"

∰Important

- ☐ Do not uninstall ScanRouter Station Software before reinstalling. If you do, all registered information will be deleted.
- ☐ Make sure that ScanRouter Station is not running before beginning the reinstallation procedure. ⇒ P.8 "Stopping the Station"

Environment Settings

Creating a Shared Folder as a Destination Folder

To deliver a scanned document from the copier to a selected folder, you must first create a folder in the destination computer and set it as a shared folder.

A destination folder can be selected from two kinds of folder.

- A shared folder in the computer where ScanRouter Station Software is installed.
- A shared folder in file server located on the network.

Note

- ☐ The user who starts ScanRouter Station must have the following access permission depending on the operating system in use where the share folder is located.
 - Windows 95/98: [Full] access permission
 - Windows NT 4.0: [Full] or [Change] access permission

Note

☐ To deliver documents to the file server, a network drive must be mapped to the selected folder which is located in the file server.


[Environment Settings] Dialog Box

You can change default settings such as the password for ScanRouter Station.

- ❖ Displaying the [Environment Settings] Dialog Box
 - ① Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
 - ② When a message asks if you want to start the station, click [OK].
 - ③ Click [Environment Settings].
 - ④ Enter the administrator password and then click [OK].



☐ When the installation is complete, just click **[OK]** because no password has been set.

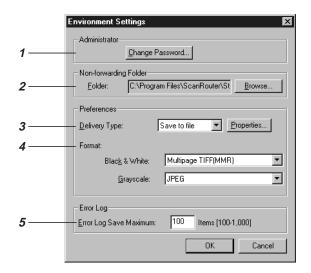

1. Administrator

Click **[Change Password]** to change the administrator password. To prevent an inadvertent settings change, we recommend that you use this password function.

Note

- ☐ The maximum length of the password is 8 characters.
- ☐ This password is the same as the password used in ScanRouter Maintenance Tool.

2. Non-forwarding Folder

Select a folder to hold documents that cannot be delivered to their destination folders.

Note

☐ The file format used for saved documents is singlepage TIFF or JPEG.

Limitation

□ You cannot select a folder in the network as a non-forwarding folder. A non-forwarding folder must be a folder in the computer where ScanRouter Station Software is installed.

3. Delivery Type

Select a document delivery type. This setting appears as the default delivery type when registering a user.

• Save to File

Documents are saved in the destination folder selected in [Delivery Destination] in the [User Settings] dialog box. You can set the default destination folder by clicking [Properties].

Folder

Documents are saved in the user folder located in the station. The saved documents can be received by the client computer with ScanRouter Client Software.

4. Format

Select the file format to save documents. This setting appears as the default file format when registering a user.

For more information about the file formats, see P.64 "File Formats".

5. Error Log

Set the maximum number of error log items to be saved. When the number of items exceed this number, the oldest item is deleted.

User/Group

Registering a User


The way of delivered and saved documents depends on the user settings. To deliver documents from the copier, you need to register users with ScanRouter Station.

- ☐ After registering a user with ScanRouter Station, a user folder is created on the station. If "Folder" is selected in **[Delivery Type]**, documents will be saved in the user folder.
- ☐ It may be convenient for you to create a group if you want to deliver the same document to multiple users.⇒ P.15 "Registering a Group"

Limitation

- ☐ The maximum number of users and groups that can be registered is 99.
- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 When a message asks if you want to start ScanRouter Station, click [Yes].
- Click [User/Group].
- 4 Enter the administrator password and then click [OK].

- ☐ When the installation is complete, just click **[OK]** because no password has been set.
- Click to select the Short ID number (001-099), and then click [Register]. You can also double-click the Short ID number.

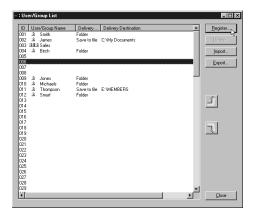

Note


- ☐ The Short ID number can be used to select the delivery destination from the copier. You can select the delivery destination with a simple process with this number.
- ☐ The icon displayed in front of the user/group name represents: ② User ②②②Group
- When the [Registration Type Selection] dialog box appears, click [User] and then click [OK].
- **1** Enter the User name and make the appropriate settings.

Reference

For more information about user settings, see P.13 "[User Settings] Dialog Box".

13 When the settings are complete, click [OK].

[User Settings] Dialog Box

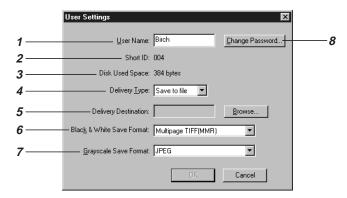

1. User Name


Enter the name of the user. The maximum length of the User Name is 14 characters.

Limitation

- ☐ The following characters cannot be used in the User Name: +%#"&<>\:/
- ☐ Starting with a space, and ending with a space or period (.) is not allowed in the User Name.
- ☐ A capital letter and a lower-case letter are considered to be the same.

2. Short ID

The Short ID number can be used to select the delivery destination from the copier and is displayed as a prefix to the User Name.



3. Disk Used Space

The disk space used by the user folder.

4. Delivery Type

From the drop-down menu, select a location where documents are delivered in case a user is selected as the delivery destination.

• Save to File

Select this option if you want to deliver the documents to the destination folder in the computer. The destination folder can be selected in [Delivery Destination].

Folder

Select this option if you want to save the documents in the user folder located on ScanRouter Station. The saved documents can be received by the client computer with ScanRouter Client Software.

5. Delivery Destination

Select a destination folder if "Save to File" is selected in [Delivery Type].

A destination folder can be selected from shared folders located on ScanRouter Station, or located on file servers on the network.

Note

☐ To deliver documents to the file server, a network drive must be mapped to the selected folder which is located on the file server.

6. Black & White Save Format

Select the file format of a Black & White image document from the drop-down list.

A Black & White image is a document whose document type is set as "Text", "Text/Photo", or "Photo" when scanned from the copier.

For more information about the file formats, see P.64 "File Formats".

𝚱 Note

☐ This option is available only when "Save to File" is selected in **[Deliviry Type]**.

7. Grayscale Save Format

Select the file format of a Grayscale image document from the drop-down list.

A Grayscale image is a document whose document type is set as "Gray Scale" when scanned from the copier.

For more information about file formats, see P.64 "File Formats".

Note

☐ This option is available only when "Save to File" is selected in **[Deliviry Type]**.

8. [Change Password]

The password for the user folder can be changed.

Registering a Group

You can register multiple users to a group. It may be convenient for you to create a group when delivering the same document to multiple users. If you select a group for the delivery destination, documents are delivered to each of the users in the group. The delivery type varies depending on the settings of each user.

Limitation

- ☐ The maximum number of users and groups that can be registered is 99.
- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 When a message asks if you want to start ScanRouter Station, click [Yes].
- Click [User/Group].
- 4 Enter the administrator password and then click [OK].
- Click to select a Short ID number (001-099), and then click [Register].

You can also double-click the Short ID number.

∅ Note

- ☐ The Short ID number can be used to select the delivery destination from the copier. You can select the delivery destination with a simple process with this number.
- When the [Register Type Selection] dialog box appears, click [Group] and then click [OK].
- **1** Enter a group name in the [Group Name] box.

The maximum length of the group name is 14 characters.

Limitation

- \square The following characters cannot be used in the Group Name: +%#"&<>\:/
- ☐ Starting with a space, and ending with a space or period(.) is not allowed in the Group Name.
- ☐ A capital letter and a lower-case letter are considered to be the same.
- Click to select the user you want to add to the group from the [Non-member] list, and then click $[\leftarrow]$.

You can select multiple members using the SHIFT key or the CTRL key.

- \square To delete a member from the group, click to select the member you want to delete from the **[Group Member]** list, and then click $[\rightarrow]$.
- When the group settings are complete, click [OK].

Deleting a User/Group


With this function, you can delete a user/group. If you delete a user, all saved documents in that user's folder will be deleted.

- ☐ When "Save to File" is selected in [Delivery Type] in the [User Settings] dialog box, the destination folder and the documents in that folder will not be deleted even if the user is deleted.
- ☐ After deleting a user, the user is also automatically deleted from any groups to which it belonged.
- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 When a message asks if you want to start ScanRouter Station, click [Yes].
- Click [User/Group].
- 4 Enter the administrator password and then click [OK].
- Click to select the user/group you want to delete, and then click [Delete].
 You can select multiple users/groups using the SHIFT key or the CTRL key.
- **1** After the confirmation message appears, click [OK].

Changing the User/Group Order on the copier Panel Display

You can change the order of users/groups in the **[User/Group List]** dialog box. This change will be reflected on the copier Panel Display. It may be convenient for you to put frequent-users on top of the list, or to segment users by department.

Example: The copier panel display



- Note
- ☐ Short ID numbers remain the same after changing the order of the list.
- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 When a message asks if you want to start ScanRouter Station, click [Yes].
- Click [User/Group].
- 4 Enter the administrator password and then click [OK].
- Click to select the user/group, whose position on the list you want to change.

You can select multiple users/groups using the SHIFT key or the CTRL key.

6 Click [↑] or [↓].

You can also drag the line of the user/group to a different position.

Importing and Exporting User Information

User settings can be saved as a CSV file format (Export), or can be edited by other applications and opened with ScanRouter Station (Import).

Limitation

☐ Only the user information is saved in the CSV file. You cannot import or export the group information.

Import

Imports the Short ID and User Name from the CSV file.

Note

- ☐ Only the Short ID and User Name settings are imported. Other items are not imported.
- ☐ **[Delivery Type]** of the imported users will be set to "Folder".
- ☐ For more information about importing the CSV file format, see P.20 "CSV File Format".
- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 When a message asks if you want to start ScanRouter Station, click [Yes].
- Click [User/Group].
- 4 Enter the administrator password and then click [OK].
- Click [Import].
- **6** Select the CSV file you want to import, and click [Open].

If the contents of the CSV file are not correct, an error message is displayed. Correct the error and import the CSV file again.

If you select the option of overwriting current Short ID numbers, a message asks if you want to continue this process every time. Click [OK] or [Cancel].

- ☐ If you click **[OK]**, the current Short ID and User Name settings are replaced with the contents of the CSV file. In this case, password for the user folders whose settings are overwritten become invalid.
- ☐ If you click **[Cancel]**, the current Short ID and User Name settings are kept.
- ☐ When overwriting the settings, saved documents are processed as follows:
 - All documents saved in the user folders will be deleted.
 - Neither the destination folders nor the documents in the destination folders will be deleted.

Export

Writes the current User Settings to the CSV file.

Note

☐ For more information about exporting to the CSV file format, see P.20 "CSV File Format".

#Important

- ☐ We recommend that you edit the exported data with a text editor. When you import the exported data into some applications such as a spreadsheet, some characters may be treated as numerals so that the following errors may occur:
 - First characters such as "0" and "+" may be ignored.
 - The display style may be changed.
- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 When a message asks if you want to start ScanRouter Station, click [Yes].
- Click [User/Group].
- 4 Enter the administrator password and then click [OK].
- Click [Export].
- **6** Select the file you want to export and click [Save].

CSV File Format

The information in the user folder can be imported/exported to the file format described below.

Enter "ScanRouterUsr" in the first line of the CSV file, and enter the user information in the following lines. Information about each user item (A-K) must be separated with a comma (,) in each line.

ScanRouterUsr

A, B, C, D, E, F, G, H, I, J, K A, B, C, D, E, F, G, H, I, J, K

	Exported Information from ScanRouter
A	User Name
В	Short ID (001-099)
С	-1
D	FOLDER
Е	Blank
F	Blank
G	Black & White Save Format
Н	Grayscale Save Format
I	MAKE_THUMB
J	MANUAL_DELETE
K	Blank

- ☐ When importing the data into ScanRouter Station, any characters (including a space) can be used in items other than User Name and Short ID, however, each item must be separated with a comma (,).
- ☐ When exporting the data, the description for each item is added to the text of "ScanRouterUsr" in the first line, however, these items are not necessary and will be ignored when the data is imported.

Daily Operation

Checking the Error Log

While using ScanRouter Station Software, errors are saved in the error log. Examine the error log whenever improper actions or missed deliveries occur.

- ☐ You can change the number of items to be stored in the error log with the **[Environment Settings]** dialog box.
- ☐ For more information about messages shown in the error log, see P.60 "Scan-Router Station Error Log Messages".
- Click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Station].
- 2 When a message asks if you want to start ScanRouter Station, click [Yes].
- Click [Error Log].

The [Error Log] dialog box appears.

To see additional detailed information about a log entry, double-click on the line you want to see.

The [Detailed Error Log] dialog box appears.

If the error log includes a document, click [Show] to see the first page of the image.

Deleting the Error Log

Deletes all of the items saved to the log.

- ☐ The log items are also deleted automatically, from the oldest item to the newest, when the number of items exceeds the value set in the **[Environment Settings]** dialog box.
- Click [Delete All Log] in the [Error Log] dialog box.
- 2 Enter the administrator password and click [OK].
- 13 When a message asks if you want to delete the error log, click [OK].

Non-forwarding Documents

Documents which cannot be delivered to their destination folders are saved in the non-forwarding folder set in the **[Environment Settings]** dialog box. Administrators must check the folder periodically and take appropriate actions with the saved documents.

☐ You can configure the non-forwarding folder settings in the **[Environment Settings]** dialog box. \Rightarrow P.9 "[Environment Settings] Dialog Box"

Checking the Free Disk Space

When ScanRouter Station Software starts, the main dialog box shows the free disk space in the following drives:

- The drive where ScanRouter Station Software is installed
- The drive selected for the delivery destination

Note

☐ The information in the main dialog box is not refreshed automatically. Click **[Refresh]** to get an accurate description of the available hard disk space.



A shortage of free disk space may cause problems such as stopping the station or preventing delivery of documents to the destination folder. Check the amount of available hard disk space periodically to make sure the required amount of free space is available.

- □ When the amount of available hard disk space reaches the limits described below, the drive information is displayed in red and documents will not be delivered to the destination folders (the documents will be saved in the nonforwarding folder).
 - 200MB for the drive where ScanRouter Station Software is installed
 - 50MB for the drive on the network computer
- ☐ Keep 200MB or more free disk space in the selected drive where the non-forwarding folder is located, because documents which cannot be delivered to their destination folders are saved in the non-forwarding folder.

- ☐ There is a possibility that a large-sized document may not be delivered even if there is enough free disk space.
- ☐ If the free disk space in the drive, where this application is installed, becomes less than 200MB, the station stops until the free disk space becomes available.
- \square The icon of the non-connected network drive is marked with an "X" and "Disable" is displayed in the **[Free Space]** column.

ScanRouter Maintenance Tool

With Maintenance Tool which comes with ScanRouter Station Software, you can initialize the system or make a backup.

To start ScanRouter Maintenance Tool, click [Start], point to [Programs], point to the [ScanRouter] folder and click [ScanRouter Maintenance Tool].

Note

☐ Make sure that ScanRouter Station is stopped when starting ScanRouter Maintenance Tool.

♦ [Initialization]

Returns ScanRouter Station settings to their default values, the way they were immediately after installation. All information about registered users, and all saved documents are deleted.

♦ [Initialize Folder]

Moves the saved documents from the user folder to the selected folder, and initializes the user folder.

Click this button to show the folder selection dialog box, and then select the destination folder.

◆ [Backup]

Backs up all information about the system.

Click this button to show the folder selection dialog box, and then select the folder to be backed up.

Note

☐ Select a folder which contains no sub-folders or files.

❖ [Restore]

Restores all information about the system that was backed up.

Click this button to show the folder selection dialog box, and then select the folder where the backup data was stored.

Note

☐ All new data which has been registered since the backup will be deleted.

♦ [Export Error Log]

Writes an error log in CSV file format.

❖ [Change Administrator Password]

Click this button to change the administrator password.

- \Box The maximum length of the password is 8 characters.
- ☐ This password is the same as the password used in ScanRouter Station.

3. User Tools

To use the copier as a network delivery scanner, it must be configured for use as both a network scanner and a delivery scanner.

First, see the "Operating Instructions" that comes with Scanner Option for instructions on setting up the network scanner, and then configure the delivery scanner settings.

Delivery Scanner Setup

The following settings are required to use the copier as a network delivery scanner.

Note

☐ When using the copier as a delivery scanner, initial network settings are required in addition to the settings described below. If the setup has not been completed yet, see the "Operating Instructions" that comes with Scanner Option for information on how to do this.

To use the copier as a network delivery scanner, the following items should be configured:

Note


☐ Settings of the items marked with "✓" are necessary for delivery and must be configured. Settings of other items can be changed if required.

Setting Item	Required
Delivery option	✓
Delivery Server Address	✓
Function Priority	
TWAIN connection time out.	
Scanner Auto Clear Time	
Date	
Auto Address Update	
Measurement Unit	

Enabling Delivery Option

First, select **[Installed]** for the Delivery Option. If you don't do this, you won't be able to change any delivery settings.

1 Press [User Tools/Counter].

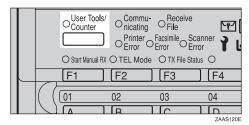

2 Press [5] on the Number keys.

⊠User Tools	Main Menu	Enter number 🏻
1 System	2 Copier	3 Fax
4 Printer	5 Scanner	
Counter La	anguage	Exit

The [Scanner Features] menu appears.


Press [Config.].

⊠Scanner Features	
No tono at 3	[0C3][0W3
Network	Config. PrevMenu

Press [\$\psi Next] several times to display [7.Delivery option], and then press [OK].

Setup		
Configuration:		
7. Delivery option		
↑Prev. \ ↓Next	OK	PrevMenu

5 Press [↓], and select [Installed].




The current setting is displayed with "*".

Press [OK].



Press [PrevMenu].



Press [PrevMenu] and press [Exit].




Turn off the copier's main switch and then turn it on.

Now it is ready to adjust the delivery settings.

Adjusting Delivery Settings

1 Press [User Tools/Counter].

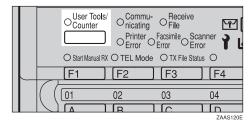


Press [5] on the Number keys.




The **[Scanner Features]** menu appears.


- First, set the IP address of Scan-Router Station.
 - 1 Press [Network].



2 Press [↓Next] several times to display [7. Delivery Server Address], and then press [OK].



3 Enter the IP address of Scan-Router Station.



To move between each field, press 9 or 9.

If you make a mistake, press [Clear/Stop] and try again.

4 Press [OK].




The IP address of ScanRouter Station has been set.

6 Press [PrevMenu].



Press [Config.].




Next, adjust the settings for the scanner-side operations.


Select a priority setting from Delivery/TWAIN functions.

Select the display mode when switching the copier to a scanner. If you want to use the machine only as a delivery scanner, select **[Delivery]**. If the machine is used as a TWAIN scanner and scans are made from the copier, select **[TWAIN]**.

• Make sure that [1.Function Priority] is displayed, and then press [OK].




Press [↑] or [↓] to display [Delivery] or [TWAIN], and then press [OK].



Set the time for the [TWAIN connection time out].

There are two options to comply with the scan request to the TWAIN scanner while the copier is being used as a delivery scanner.

- switching to a TWAIN scanner immediately.
- switching only after the specified timeout period has passed since the last operation was made with the scanner.
- Press [↓Next] several times to display [2.TWAIN connection time out], and then press [OK].



2 Press ^③ or ^⑤, and select "Off" or "On".

If you want to switch immediately, select "Off", or if you want to switch only after the specified timeout period has passed since the last operation was made with the scanner, select "On".



3 If "On" is selected, set the timeout period (3-30 seconds) to switch to the TWAIN scanner with the Number keys.

If the scan request to a TWAIN scanner is made, the scanner will be switched to the TWAIN scanner only after the timeout period has passed since the last operation was made with the scanner.




4 Press [OK].



Set the time for the [Scanner Auto Clear Time] option.

You can automatically cancel the settings and return to the main menu after a specified amount of time has passed since the last operation was made with the scanner. If you want to clear the settings, the length of time should be set.

Press [↓Next] several times to display [3. Scanner Auto Clear Time], and then press [OK].



2 Press ^③ or ^⑤, and select "Off" or "On".

If you want to keep the current settings, select "Off", or if you want to cancel the current settings and return to the main menu after the specified time has passed, select "On".




3 If "On" is selected, enter the length of time (10-999 seconds) until returning to the main menu.




4 Press [OK].



- 8 Set the current date and time.
 - Press [↓Next] several times to display [4.Date], and then press [OK].




2 Set the current date and time.



To move between each field, press ^③ or ^⑤.

If you make a mistake, press [Clear/Stop] and try again.

3 Press [OK].




Select the automatic update option for the address book.

With this option, you can update the address book information automatically when selecting a destination and a sender from the address book.


If [Auto Address Update] is disabled, the address book information is updated only when the copier's operation switch is turned on.

Note

- ☐ If updating the address book automatically, you can use the latest address book. If the address book is changed frequently, select [Auto Address Update].
- ☐ If the address book is not changed frequently, disable [Auto Address Update] so that you don't have to wait for the address book to be updated unnecessarily.
- ☐ If [Auto Address Update] is disabled, be sure to turn the copier's operation switch off then on to update the copier's address book after the station's address book has been changed. If the station's address book has been updated, none of the documents will be delivered and they will be saved in the nonforwarding folder until the copier's address book is updated.
- Press [↓Next] four times to display [8. Auto Address Update], and then press [OK].



2 Press [\uparrow] or [\downarrow] to display [On] or [Off], and then press [OK].




Select the measurement unit.

In this option, you can select "mm" or "inch" as the measurement unit for scanning custom-sized originals.


Press [↓Next] to display [9. Measurement Unit], and then press [OK].




2 Press [\uparrow] or [\downarrow] to display [mm] or [inch], and then press [OK].



Press [PrevMenu].



Press [PrevMenu], and then press [Exit].



The copier is now ready to be used as a network delivery scanner.

Scanner Setup

You can register scanner settings (density, original type, resolution, and original size), which are selected when scanning. If registering the settings in advance for the frequently scanned types of originals, you can select these settings easily when delivering a document.

- ☐ Up to three custom settings can be registered as "User1", "User2", and "User3".
- ☐ The setting registered as "Default" becomes the default scanning setting. If no setting has been selected when delivering a document, the original is scanned with the setting registered as "Default".

Items for Scanner Setup

There are four items in scanner settings as follows:

Density

The density for scanning originals. Select from seven levels, from "Lighter (1)" to "Darker (7)". The default setting is the middle density.

Original Type

Originals are scanned using the settings appropriate for that type. The default setting is "Text".

Text
 For originals containing a high-contrast black-and-white image such as text.

• Text/Photo

For originals containing both a high-contrast black-and-white image such as text, and a half-tone image such as a photograph or a drawing.

• Photo

For originals containing a halftone image such as a photograph or a drawing (Black & White).

Gray Scale
 For originals containing a half-tone image such as a photograph or a picture (Grayscale).

Note

☐ If "Photo" is selected, the image is scanned in a Black & White mode, and if "Gray Scale" is selected, the image is scanned in a Grayscale mode. In general, Black & White is suitable for printing and Grayscale is for displaying on the computer screen.

Resolution

Select from 100dpi, 200dpi, 300dpi, 400dpi, and 600dpi. The default setting is "100dpi".

Note

☐ If scanning at a high resolution, the scanned image quality is high but the size of the data is large. When processing a large amount of data, ScanRouter Station and the entire system may take a long time. Be sure to select the appropriate resolution for that image.

Original Size

Select a scanned area. The default setting is "Auto Paper Select".

- Auto Paper Select Scanning an original size using the copier's Auto Paper Select function.
 - For more information, see the "Copy Reference".
- A3①, A4②, A4②, A5②, A5③, 11x17②, 8¹/₂x14②, 8¹/₂x13②, 8¹/₂x11②, 5¹/₂x8¹/₂②, 5¹/₂x8¹/₂③, JIS B4②, JIS B5②, JIS B5③, Custom Size If the paper size is selected from above, the original is scanned at the selected size regardless of the original size.


Note

- ☐ If **[Custom Size]** is selected, you can use either "mm" or "inch" as the measurement unit to specify the scanned area.
- ☐ The measurement unit setting can be adjusted in [Configuration] in the [Scanner Features] menu.

Resolutions and Original Sizes

In some cases, a large-sized original cannot be scanned at high resolution.

If the following message appears after the scan fails, adjust the scanner settings and then scan the original again.



The relationship between resolutions and original sizes are as follows:

- When "Text", "Text/Photo", or "Photo" is selected as an Original Type: Scanning is possible with all combinations up to A3, or 600dpi.
- When "Gray Scale" is selected as an Original Type:


Scanning is possible in combinations marked with "\right" in the following table.

	100	200	300	400	600
	dpi	dpi	dpi	dpi	dpi
A3	✓	~			
JIS B4	~	~			
A4	>	~	>		
JIS B5	~	~	~		
A5	✓	~	~	✓ *1	
11x17	✓	~			
$8^{1}/_{2}$ x14	✓	~			
$8^{1}/_{2}$ x13	✓	~			
$8^{1}/_{2}$ x11	✓	~	✓		
$5^1/_2 x 8^1/_2$	✓	✓	✓	✓ *1	

When settings the originals in the docment feeder (ADF), scanning is not possible with this combination.

Registering Items for Scanner Setup

Press [User Tools/Counter].

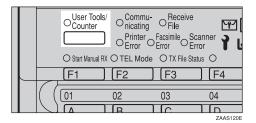


Press [5] on the Number keys.




The **[Scanner Features]** menu appears.

Press [Scan].




4 Use the Number keys to enter the number of the scanner settings to be configured.




The density option is displayed as the first item of the scanner settings.

To display the item you want to set up, press [↑Prev.] or [↓Next], and then press [OK].




Press ③⑤ or [↑][↓] to select the value, and then press [OK].

The following is an example of the density setting.




The following is an example of the resolution setting.




Repeat steps 5 and 6, and set up other items as well.

For more information about the operation when **[Custom Size]** is selected as the original size, see P.33 "Selecting [Custom Size] as the Original Size".


Press [PrevMenu] if all settings are complete.



- If registering other user numbers as well, repeat steps 4-8.
- Press [PrevMenu] if the registration is complete.



Press [PrevMenu], and then press [Exit].



Selecting [Custom Size] as the Original Size

If **[Custom Size]** is selected for an original size, you can use either "mm" or "inch" as the measurement unit to specify the scanned area.



- ☐ The measurement unit setting can be adjusted in [Configuration] in the [Scanner Features] menu.
- Display [Custom Size] on the original size selection display, and then press [OK].




2 Enter the length from the reference position to the starting point, and the length of the scanned area, with the Number keys and then press [#].

The following is an example with "mm" selected as the measurement unit.




After pressing **[#]**, the cursor is moved to the next field. Or, you can press ③ or ⑤ to move the cursor.

A reference position is defined as the place where the original is set, as illustrated below: ① On the platen glass

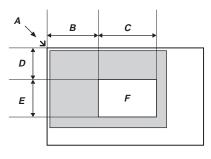

TNSY09

- A. Reference position
- **B.** Horizontal starting position
- C. Horizontal scanning positionl
- D. Vertical starting position
- E. Vertical scanning position
- F. Scanned area
- ② In the Document Feeder (ADF)

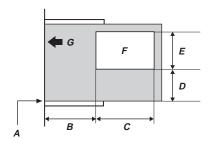

TNSY130E

- A. Reference position
- **B.** Horizontal starting position
- C. Horizontal scanning position
- D. Vertical starting position
- E. Vertical scanning position
- F. Scanned area
- G. Direction to Set Original

The maximum scanned area is 297mm (W) x 432mm (L). Make sure that the scanned area is smaller than this area.

Press [OK] after you enter all the values.




4. Delivering Originals

Delivery Settings

You can deliver the scanned image of the originals to users registered in ScanRouter Station.

Note

- ☐ Scanned originals are forwarded from the copier to ScanRouter Station, and then delivered to the selected users.
- ☐ The delivery type from ScanRouter Station to the users varies depending on the station settings.
- **1** Set originals.
 - Reference "Setting Originals" \Rightarrow P.39.
- Press [Scanner].
- If the TWAIN scanner mode display appears, Press [Cancel].



Note

☐ The TWAIN scanner mode display appears if the TWAIN mode is selected in [Function Priority] in the [Scanner Features] menu.

After switching to delivery mode, the following display appears.



A Select scanner settings (density, original type, resolution, and original size).


The currently selected settings are listed on the third line of the display. If these settings are correct, go to step **5** to select a delivery destination. Follow the steps below if you want to change the settings.

Note

- ☐ If you want to cancel the operation and start again, press [Clear Modes].
- 1 Press [Menu].



2 Press ^⑤ or ^⑤, and select a scanner setting from "User1", "User2", or "User3", and then Press [OK].



Note

□ Up to three custom settings can be registered as "User1", "User2", or "User3" in Scanner Setup mode. If registering the appropriate settings for the frequently scanned originals in advance, you can select these settings easily.⇒ P.30 "Scanner Setup"

☐ To change the scanner settings temporarily, select [Manual Setup] and then press [Settings]. When the scanner setup mode display appears, adjust the scanner settings.⇒ P.45 "Changing the Scanner Settings Temporarily"

5 Select a delivery destination.


1 Press [Dest.].



The Short ID and the name of each user/group registered in ScanRouter Station are displayed.

Note

- ☐ If [Auto Address Update] is enabled, the address book is replaced with the latest one.
- **2** Select the user/group for the delivery destination with ③ or ⑤.




If you know the Short ID of the user/group (001-099) you want to select, input the number with the Number keys. If you don't know the Short ID, display the user/group by pressing [↑Prev.] or [↓Next], and then select the user/group with ⑤ or ⑤.


∅ Note

☐ The order of users/groups on the display can be changed with ScanRouter Station.


3 Press [Select].



The selected user/group is specified as a delivery destination, with a ✓ mark in the check box. Press [Select] to cancel the selection.



- 4 When delivering multiple users/groups, repeat step 2-3.
- **6** When all the delivery destinations are set, press [Exit].



The selected destination appears on the second line of the display. If multiple delivery destinations have been selected, you can view them with ③ or ⑤.



6 Select a sender (where the original is delivered from).

Note

- ☐ After selecting a sender, the sender's name can be found when receiving or viewing documents from the delivery destination.
- ☐ The sender's column will be blank if no sender is specified.

☐ Select a single sender from the users/groups registered in ScanRouter Station.


1 Press [Sender].




The Short ID and the name of each user/group registered in ScanRouter Station are displayed.

2 Select a user/group for the sender with ^⑤ or ^⑤.

If you know the Short ID of the user/group (001-099) you want to select, input the number with the Number keys. If you don't know the Short ID, display the user/group by pressing [↑Prev.] or [↓Next], and then select the user/group with ⑤ or ⑤.



3 Press [Select].




The selected user/group is specified as a sender, with a mark in the check box. Press [Select] to cancel the selection.

Press [Exit].



When originals are set in E position or when scanning 2-sided originals, select the correct direction of the original from the copier as follows:




2 Select the direction of the original, and then press [OK].



For more information about the direction of the original, see P.44 "Setting the Direction of the Originals".


Press [Start].

The scan begins.



To cancel the scan, press **[Clear/Stop]**. After the scan is canceled, all the scanned data is deleted and no delivery is made.

When placing the originals on the platen glass, the following display appears every time after a single page is scanned.



If there is another page to scan, place the original and press [Start]. If there is no page to scan, press [Finish].

After the scan is complete, the display returns to the scanner settings menu and the scanned data is delivered to ScanRouter Station.

Note


☐ If you do not press [Start] or [Finish] within one minute after scanning, the scan is regarded as finished, and only the scanned pages are delivered to ScanRouter Station.

Setting Originals


The originals can be placed in either portrait or landscape position for scanning, however, if you want the original to appear with the appropriate direction on the computer display, be sure to place the original correctly on the scanner.

The direction of the original to be set depends on the width of the originals as follows:

• A4 size (297mm) or narrower width:



• A4 size (297mm) or wider width:



Note

□ Depending on the direction of the original to be set on the scanner, you need to select the correct direction from the copier for delivery⇒ P.44 "Setting the Direction of the Originals". After changing the direction setting, the scanned image can be rotated by the copier so that the original appears correctly on the computer display.

Limitation

- ☐ The document feeder (ADF) is required to scan 2-sided originals.
- ☐ If the document feeder (ADF) is not installed, "2 Side Bind" or "2 Top Bind" on the panel display appear dimmed and cannot be selected.



Scanning 1-sided Originals

Direction setting depends on the width of the originals as follows:

Width of the Origi- nals	A4 (297mm) or narrower	Wider than A4 (297mm)
Setting originals on the Platen Glass ⇒ P.42 "Setting Originals on the Platen Glass"	Place the original face down and align its upper side with the left side of the platen glass.	Place the original face down and align its upper side with the rear side of the platen glass.
Setting originals in the Document Feeder (ADF) ⇒ P.42 "Setting Originals in the Document Feeder (ADF)"	Set the originals face up with the top edge of the document in the document feeder (ADF).	Set the originals face up and align the top edge of the originals with the rear side of the document feeder (ADF).
Setting the Direction of the Originals ⇒ P.44 "Setting the Direction of the Originals"	Select [] in Duplex/Dir: Select with @ E: 4/ 4 Side Bind/ 4 Top Bind E: 4/ 4 Side Bind/ 4 Top Bind OK Cancel Note This setting is set as the default.	Select [] in R. Duplex/Dir: Select with ① B:

Scanning 2-sided Originals

Direction setting depends on the width of the originals as follows:

Width of the Origi- nals	A4 (297mm) or narrower	Wider than A4 (297mm)
Setting originals in the Document Feeder (ADF) ⇒ P.42 "Setting Originals in the Document Feeder (ADF)"	Set the originals face up with the top edge of the document in the document feeder (ADF).	Set the originals face up and align the top edge of the originals with the rear side of the document feeder (ADF).
Setting the Direction	Side-bound Originals RS RS Select [Side-bound Originals R Select [
of the Originals ⇒ P.44 "Setting the Direction of the Originals"	Top-bound Originals R R S Select [12Top Bind] in 12. Duplex/Dir: Select with 10 10 10 10 10 10 10 10 10 10 10 10 10	Top-bound Originals R S Select [

Setting Originals on the Platen Glass


Lift the platen cover/document feeder (ADF).




- ☐ Be sure to open the platen cover/document feeder (ADF) by more than 30 degrees, otherwise the original size will not be detected.
- Place the original face down and align its upper left corner with the reference mark in the upper left corner of the platen glass.

For more information about the direction of the original to be set, see P.39 "Setting Originals".

① Width of the original is A4 (297mm) or narrower

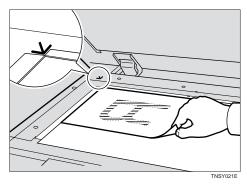

② Width of the original is wider than A4 (297mm)

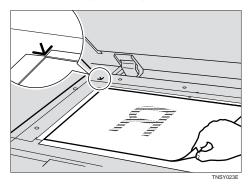

With this setting, you need to select the correct direction from the copier for delivery. ⇒ P.44 "Setting the Direction of the Originals"

Close the platen cover/document feeder (ADF).


Setting Originals in the Document Feeder (ADF)

- Adjust the guide to the original size.
- 2 Set the aligned originals face up (if 2-sided originals, first-page up) in the document feeder (ADF).


For more information about the direction of the original to be set, see P.39 "Setting Originals".

∅ Note

- ☐ You can set the originals with different horizontal sizes if their vertical sizes are the same.
- ☐ The stacked originals set in the document feeder (ADF) are scanned from the top page.
- ① Width of the original is A4 (297mm) or narrower

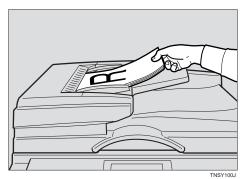

② Width of the original is wider than A4 (297mm)

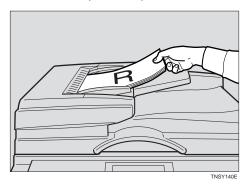

With this setting, you need to select the correct direction from the copier for delivery.⇒ P.44 "Setting the Direction of the Originals"

Note

☐ If scanning 2-sided originals, you need to select the correct direction from the copier for delivery, regardless of the direction to be set on the scanner.⇒ P.44 "Setting the Direction of the Originals"

Δ

Setting the Direction of the Originals

When originals are set in \mathbb{R} direction or when scanning 2-sided originals, select the correct direction of the original from the copier as follows:



2 Select the appropriate combination from the [Duplex/Dir] menu with @ or ©.



Setting the Direction of the originals

If the originals are set in the direction, select from the upper line options, and if set in the direction, select from the lower line options.

♦ 1-sided/2-sided originals

If scanning 1-sided originals, select $[\square_1]$.

If scanning 2-sided originals, select $[\triangle_2$ Side Bind] or $[\triangle_2$ Top Bind] depending on the binding position of the originals.



 Top-bound originals: [☐₂Top Bind]




Press [OK].



Changing the Scanner Settings Temporarily

Scanner settings can be selected from "User1", "User2", or "User3" which were registered in advance, however, you can change these settings temporarily when scanning.

Press [Menu] on the delivery scanner mode display.




To change the scanner settings temporarily, select [Manual Setup] and then press [Settings].



When the scanner setup mode display appears, adjust the scanner settings.

Select the item you want to change with @ or D, and then press [OK].



For more information about each of the items, see P.30 "Items for Scanner Setup".

Press © or © to select the option, and then press [OK].



The display returns to the scanner setup mode.

- If changing the another item's setting as well, repeat step **3-4**.
- Press [Exit] when all the settings are complete.
- To change the scanner settings temporarily, select [Manual Setup] and then press [OK].



Λ

5. Client Operation

Receiving Documents with Client Software

With ScanRouter Client Software installed in a client computer, you can receive documents saved in a user folder in ScanRouter Station.

#Important

☐ After receiving documents with the client computer, the saved documents in ScanRouter Station will be deleted.

System Requirements

The computer running Client Software must meet the following system requirements:

◆ CPU

Pentium 133MHz or faster

◆ RAM

24MB minimum (64MB recommended)

♦ Hard Disk Space

At least 2.6MB of disk space is required for installation. 50MB or more free disk space is required to run Client Software.

Operating Systems

- Microsoft Windows 95
- Microsoft Windows 98
- Microsoft Windows NT Workstation 4.0

Protocols

TCP/IP protocol

Setting up the Reception Environment for Client Software

Installing Client Software

Follow the steps below to install ScanRouter Client Software.

Note

- ☐ Quit all open applications before beginning the installation.
- ☐ When installing in a computer running Windows NT 4.0, log on as a member of the Administrators group.
- 1 Start Windows on the computer where you want to install this application, and then insert the ScanRouter CD-ROM into the computer.

The language selection dialog box appears.

Note

- ☐ If the window doesn't appear, double-click on "Setup.exe" located on the root directory of the CD-ROM, to start the Installer.
- 2 Select the language of the application to be installed, and click [OK].
- Click [ScanRouter Client Software].
- 4 When the [Welcome] dialog box appears, click [Next].
- $oldsymbol{f 5}$ Follow the instructions to be displayed.

Setting up the Reception Environment

After installation, you need to set up ScanRouter Station, select the user folder, and configure the reception environment.

Click [Start], point to [Programs], point to the program folder, which was selected during the installation process, and then click [ScanRouter Client Software].

The [ScanRouter Client Software Login] dialog box appears.



- **2** Configure each of the options.
 - **1** Enter the IP address or the host name of ScanRouter Station in the [Delivery Station] box.

Ask ScanRouter administrator for details.

- Note
- ☐ If a DNS server or WINS server is not used, Client Software may take a long time to start if an IP address is not entered.
- ☐ ScanRouter Station can be selected from the network tree which is displayed by clicking [Browse]. However, the list displays only computer names. If the computer name set in ScanRouter Station and the host name are different, directly enter the IP address or the host name.
- 2 Click [Browse] located on the right of the [User] box.

A list of user folders created in ScanRouter Station is displayed.

- 3 Click to select the user folder where documents are saved, and then click [OK].
- 4 Enter the password for the folder, which was entered in the [User] box, in the [Password] box.

For information about the password to be entered, ask the ScanRouter administrator.

6 Click to select the [Save Password] check box if required.


If this check box is selected, you don't have to enter the password every time Client Software starts.

6 Click [OK].

The settings for the folder is now complete. The icon for Client Software is displayed on the taskbar.

Next, configure the settings for document reception.


Right-click Client Software icon on the taskbar, and then click [Properties] from the pop-up menu.



The properties of Client Software are displayed.

4 Set the time interval to check and receive documents in the [Reception] tab.

1 Select the [Reception Mode] option.

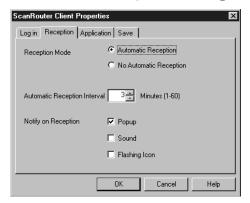

If you select [Automatic Reception], Client Software periodically checks the reception status of the selected folders in ScanRouter Station, and receives new documents automatically. When you select this option, [Automatic Reception Interval] must be configured as well.

If you want to receive documents manually, select [No Automatic Reception].

2 Configure other settings.

For more information about these items, see P.55 "[Reception] Tab", or see Help.

Configure settings in the [Application] tab and the [Save] tab.

For more information about each of the items, see P.56 "[Application] Tab", P.57 "[Save] Tab", or see Help.

- Note
- ☐ The saving location for received documents can be selected by [File Save Path] in the [Save] tab.
- **6** When all of the settings are complete, click [OK].

Now Client Software is ready to receive documents.

Exiting from Client Software

With the following procedure, you can exit from Client Software.

1 Right-click the Client Software icon on the taskbar, and then click [Exit] from the pop-up menu.

Receiving Documents

With ScanRouter Client Software, you can receive documents saved in the user folder located on ScanRouter Station. The documents can be received automatically or manually.

Note

- ☐ When receiving documents with Client Software, make sure that the Scan-Router Station setting is configured to save documents in the user folder.
- ☐ After the client computer receives the documents, the saved documents in ScanRouter Station will be deleted.

∰Important

☐ The received documents are saved in the hard disk of the client computer. There is a possibility the available free disk space will become full if documents aren't removed from the hard disk regularly.

Note

 \square The received documents are saved to the location set in the **[Save]** tab in the **[ScanRouter Client Properties]** window. \Rightarrow P.57 "[Save] Tab"

Receiving Documents Automatically

Select [Automatic Reception] in [Reception Mode] in the [Reception] tab in the [Scan-Router Client Properties] window in advance. Client Software acquires information from ScanRouter Client Software at the specified interval, set in [Automatic Reception Interval] in the [Reception] tab, and receives new documents automatically.

1 Make sure that Client Software icon is displayed on the taskbar.

If no icon is displayed, follow the steps below to start Client Software.

① Click [Start], point to [Programs], point to the [ScanRouter Client] folder, and click [ScanRouter Client Software].

The icon appears on the taskbar.



Client Software acquires information from ScanRouter Client Software at the specified interval, set in [Automatic Reception Interval] in the [Reception] tab, and receives new documents automatically. After receiving documents, a reception notification, whose style is defined in the [Reception] tab in the [ScanRouter Client Properties] window, will be delivered.

Receiving Documents Manually

Documents are received manually if [No Automatic Reception] is selected in [Reception Mode] in the [Reception] tab in the [ScanRouter Client Properties] window in advance, or if you want to check for and receive documents immediately.

1 Make sure that Client Software icon is displayed on the taskbar.

If not, follow the steps below to start Client Software.

① Click [Start], point to [Programs], point to the [ScanRouter Client] folder, and click [ScanRouter Client Software].

The icon appears on the taskbar.



2 Double-click the icon, or right-click the icon and click [Reception] from the pop-up menu.

After a moment a notification will be displayed.

When receiving new documents

You will receive a notification whose style is defined in the [Reception] tab in the [ScanRouter Client Properties] window.

When there are no documents

The pop-up dialog box notifies you that there are no received documents.



☐ If the document file size is large, station-side processing and document delivery may take a long time.

Opening a Received Document

When receiving a document from ScanRouter Station, you will receive a notification whose style is defined in the [Reception] tab in the [ScanRouter Client Properties] window. Open a new document to check the contents.

If selecting **[Popup]** in **[Notify on Reception]**, The notification message will appear. Follow the instructions below depending on the settings in the **[Application]** tab.

- If Launch application has been selected After clicking **[OK]**, the application starts to open the document. When receiving multiple documents at once, all of the documents are opened.
- If no application has been selected Only a notification is delivered. To open the document, use an application which is suitable for the file format of the document.

Document File Name

Received documents are saved in the folder selected in **[File Save Path]** in the **[Save]** tab. A document file name reflects the setting in **[Format]** in the **[Save]** tab as follows:

Sender_mmddhhmmss_n.xxx

- Sender
 - The name of the user or group selected as the sender when scanning a document from the copier. If no sender has been selected, this part is blank.
- mmddhhmmss

 Date and time when the document has been saved in ScanRouter Station.
- n
 If the received file uses a single page format, this number represents the page number. If the received file uses a multi-page format, this number represents the total number of pages in the document.
- xxx
 The file format (tif, dcx, pcx, bmp, pdf, jpg).

For example, if a 2-page document in single page TIFF format, sent from "ABC" was received on April 1, at 12:34:56, the document is saved in two files as below:


- ABC_0401123456_1.tif
- ABC_0401123456_2.tif

If the same document was received in PDF format, the document is saved in the following file.

• ABC_0401123456_2.pdf

Client Software Properties

[Log in] Tab

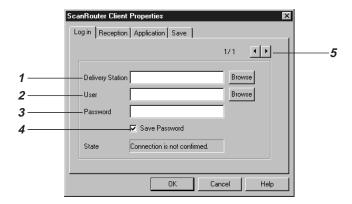

1. Delivery Station

Enter the IP address or the host name of ScanRouter Station. If a station and a client computer exist in the same network segment, you can select the station from the network tree in which is displayed by clicking [Browse].

Limitation

- ☐ Some network environments may not support the [Browse] function. In this case, enter the IP address or the host name of ScanRouter Stations.
- ☐ If a computer name and the host name are different, enter the IP address or the host name of Scan-Router Station.

2. User

Enter the name of the user folder where received documents are saved. By clicking **[Browse]**, you can select the folder from the list of user folders located in ScanRouter Station.

3. Password

Enter the password which is set for the user folder.

4. Save Password

Select this check box to save the password. If not selected, the password request dialog box appears every time Client Software starts.


5. 🕑

If receiving documents from two or more ScanRouter Station or from two or more user folders, click this button to add another station or user folder.

Note

☐ Up to ten stations and user folders can be selected.

[Reception] Tab

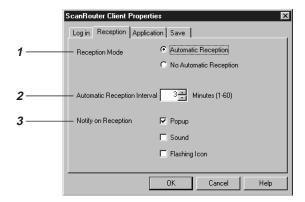

1. Reception Mode

Configures the way that documents are received by Client Software.

- Automatic Reception
 Client Software periodically acquires
 information about the reception status
 of the selected folder in ScanRouter
 Station, and receives new documents
 automatically. When you select this
 option, [Automatic Reception Interval]
 must be configured as well.
- No Automatic Reception
 If you want to receive documents manually, select this option.

2. Automatic Reception Interval

Configures the interval setting (1-60 minutes) for acquiring information from ScanRouter Station when [Automatic Reception] is selected.


3. Notify on Reception

Select the type of document reception notification. Multiple options can be selected.

- Popup
 Displays the pop-up dialog box. If the
 Launch application has been selected
 in the [Application] tab, you can start
 the application from this dialog box to
 open the document.
- Sound
 Causes the computer to beep when a document is received.

Flashing Icon
 Causes the icon on the taskbar to flash
 when a document is received. To stop
 flashing, click the icon.

[Application] Tab

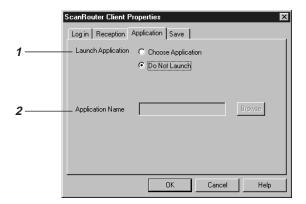

1. Launch Application

Sets the application to open received documents.

- Choose Application
 When selecting [Launch Application]
 from the pop-up menu of the icon on
 the taskbar, the application selected in
 [Application Name] starts. If [Popup] is
 selected in [Notify on Reception] in the
 [Reception] tab, you can start the application from the notification dialog box
 to open the received document.
- Do Not Launch
 No application is configured to open received documents. [Launch Application] in the pop-up menu appears dimmed.

2. Application Name


Enter the path of the application you want to start. Or after clicking [Browse], you can select the path from the list in the [Launch Application Selection] dialog box.

If the application is not displayed, click [Browse] in the [Launch Application Selection] dialog box to find the application.

Limitation

☐ Some applications, such as Paint, may not support this function.

[Save] Tab

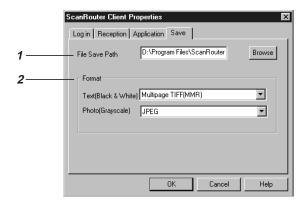

1. File Save Path

Enter the full path for saving received documents. Or after clicking [Browse], you can select the path from the list in the [Browse Folder] dialog box.

2. Format

Select the image data format for saving received documents.

Two image data formats are used: Black & White and Grayscale. If you select "Text", "Text/Photo", or "Photo" when scanning a document from the copier, the document will be saved in Black & White image data format. If you select "Gray Scale" when scanning a document from the copier, the document will be saved in Grayscale image data format.

Note

□ If "Do Not Change Received Data Format" is selected, the document will be received as a TIFF or JPEG file, depending on the copier's setting.

For more information about image data formats, see P.64 "File Formats".

Displaying Documents in the Shared Folders

Documents which are delivered from ScanRouter Station to the destination folders can be opened from the client computer through the network.

☐ The user who opens the documents in the destination folder must have "Read" permission for that folder.

Document File Name

Delivered documents in the shared folders are saved in the following format, depending on each user's [Black & White] and [Grayscale] image data format settings.

Sender_mmddhhmmss_nnn.xxx

Sender

The name of the user or group selected as the sender when scanning a document from the copier. If no sender has been selected, this part is blank.

- mmddhhmmss
 Date and time when the document has been saved in ScanRouter Station.
- nnn
 If the received file uses a single page format, this number represents the page number. If the received file uses a multi-page format, this number represents the total number of pages in the document.
- xxx
 The file format (tif, dcx, pdf, jpg).

For example, if a 2-page document in single page TIFF format, sent from "ABC" was received on April 1, at 12:34:56, the document is saved in two files as below:

- ABC_0401123456_001.tif
- ABC_0401123456_002.tif

If the same document was received in PDF format, the document is saved in the following file.

• ABC_0401123456_002.pdf

6. Appendix

Troubleshooting

Copier

Problem	Cause / Action
The delivery scanner mode doesn't appear on the panel display.	If the TWAIN scanner mode appears when switching the copier to a scanner, see P.35 "Delivery Settings" to switch to a delivery scanner.
	If the scanner mode cannot be switched from "TWAIN" to "Deliver", the delivery scanner setting is not correct. See P.25 "Delivery Scanner Setup" to adjust the setting.

ScanRouter Client Software

Problem	Cause / Action
A connection to ScanRouter Station cannot be made when starting ScanRouter Client Software.	Make sure that ScanRouter Station is running.
Client Software takes a long time to start.	If a DNS server or WINS server is not used, Client Software may take a long time. Enter the IP address of ScanRouter Station in [Delivery Station] in the [Log in] tab in the [ScanRouter Client Properties] window.

ScanRouter Station Error Log Messages

The following are messages that frequently appear in the error log:

Message	Cause / Action
Delivery is canceled because empty disk capacity is insufficient.	ScanRouter Station stops temporarily because the free disk space becomes less than 200MB. Increase the amount of free disk space. The station resumes automatically after the free disk space becomes available.
Drive for save is not prepared.	Windows is not started on the destination computer.
	No network drive has been mapped to the network folder which is selected as a destination folder. Map the network drive to the network folder again.
	 ✔ Note ☐ Use the setting for re-connection at logon if you want document delivery to the destination folders in the computers on the network.
Access Privilege for writing is not in the destination.	Write permission to the destination folder has not been given. Make sure the correct User Name is used when logging on. If the User Name is correct, change the access privileges of the destination folder.⇒ P.9 "Creating a Shared Folder as a Destination Folder"
Cannot deliver because the number of users in the destination group is 0.	A document cannot be delivered because no members exist in the destination group. The document is saved in the non-forwarding folder.⇒ P.9 "[Environment Settings] Dialog Box"
Address version does not match.	A document cannot be delivered to the selected destination because the address book version of ScanRouter Station and the version of the copier are different. This error occurs when [Auto Address Update] is [Off] in the copier setting. After updating the address book of ScanRouter Station, be sure to turn the copier off and on to update the address book.

The Copier Error Messages

If the error message appears on the panel display, follow the instructions described below:

Note

☐ These messages are related to the delivery scanner operations. If any message which is not listed here is displayed, see the "Operating Instructions" that comes with Scanner Option.

Message	Cause / Action / Reference
Updating the address book. Please wait.	If [Auto Address Update] is enabled in scanner settings and when you press [Dest.] or [Sender], the address book is updated by the user/group information from ScanRouter Station. Therefore, you can always use the latest information. Updating may take longer, depending on the number of users/groups and the network condition.
Address update failed. Try again? [Yes][No]	Unable to get the user/group information from ScanRouter Station. Press [Yes] and then try again. If this message appears repeatedly, one of the following may cause this trouble: • ScanRouter Station is not started. • ScanRouter Station is temporarily stopped due to a shortage of free disk space or other resources.

Message	Cause / Action / Reference
Cannot communicate with the server.	No response from ScanRouter Station. One of the following may cause this trouble:
Check the operating status and server connection. [OK]	• The power of the computer running Scan- Router Station Software is off. Or, Scan- Router Station is not started.
	[Delivery Server Address] is incorrect.
	The copier may not be connected to the network properly. Check the LED on the Network Interface Board.
	A. The red light is on when the copier network scanner is working normally. B. The orange light is on when the Network Interface Board is working normally. C. The green light is on when 100BASE-TX is being used and is off when 10BASE-T is being used. D. The green light is on when the network
	connection is normal.
Invalid data size.	In some cases, a large-sized original cannot be scanned at high resolution. For more informa-
Check the scanning resolution. [OK]	tion, see P.31 "Resolutions and Original Sizes".
Cannot detect original size.	No original is placed on the platen glass. Or,
Check whether original is placed,	cannot detect the original size
and select the proper size.	Place the original on the platen glass.
[ок]	Open the platen cover/document feeder (ADF) more than 30 degrees to detect the original size correctly.
	Some paper sizes will not be automatically detected (e.g. small-sized paper or foreign-sized paper). For more information, see the "Copy Reference".

Message	Cause / Action / Reference
Page limit exceeded, to scan remaining pages, press Exit then Start (to run as a new Job). [OK]	Achieved the maximum pages (100 pages) which can be scanned continuously. Press [OK]. The scanned originals will be sent. The selected destination and other scanner settings remain after pressing [OK], set the rest of the originals and press [Start].
Memory full. Cannot scan. Scanning has stopped, the scanned data has been deleted. Memory full. Cannot continue, send the existing scanned data or delete, reset and repeat the process.	Due to the memory shortage in the copier, scanning has been stopped in the middle.
	The first message appears when the first page of the originals cannot be scanned. In this case, press [OK].
	The next message appears when the second or later pages of the originals cannot be scanned. If you want to send the scanned pages (up to the previous page) only, press [Send]. This procedure must be completed within about 15 minutes after the error occurs.
	If pressing [Delete] , all the stored data is deleted and no data is sent.
	Scan the remaining pages after the memory capacity is back to normal.
Error in sending image. Scan with the same settings and resend.	Failed to send a scanned image to ScanRouter Station due to a network error. Scan the originals again because the scanned data has been deleted.
	If the same message appears again, the amount of network traffic could be the reason, therefore, contact the network administrator.
You have exceeded data capacity, please wait until the current data has been sent.	Five documents are waiting to be sent to Scan-Router Station. Wait until the current document data is sent.
Scanner is in use. Cannot scan due to another application currently in use.	The document feeder (ADF) is currently being used to copy or send a fax. Set the originals in the document feeder (ADF) again.

File Formats

The following file format types are available for ScanRouter Station Software and ScanRouter Client Software:

	ScanRouter Station Software	ScanRouter Client Software
Available File Format	TIFF, TIFF-F, DCX, PDF, JPEG	TIFF, TIFF-F, PCX, BMP, DCX, PDF, JPEG

Note

- ☐ In ScanRouter Station Software, if "Text", "Text/Photo", or "Photo" is selected when scanning a document from the copier, the document will be saved in Black & White image data format, and if "Gray Scale" is selected, the document will be saved in Grayscale image data format.
- ☐ In case of multiple-page documents, one file will be created for each page because Multipage option is not available for Grayscale image.

♦ TIFF, TIFF-F

File formats used to save bitmap images. These formats are used for Black & White, Grayscale, and Color images.

One file is created for single-page images in TIFF, and one file for multiple-page image in Multipage TIFF and TIFF-F.

You can select the TIFF Compression Format as MH, MR, or MMR. In general, the order is MH, MR, MMR from high to low compression ratios (depending on the image). The TIFF-compressed image can be restored to the original image.

TIFF-F stands for "Tiff Class F Specification" and is one of the fax image data formats. The TIFF-F format created by ScanRouter is 200dpi and the Compression Format is MH only.

❖ PCX, BMP

File formats used to save bitmap images. These formats are not available for the Multipage option.

❖ DCX

A file format to save bitmap images. This format is available for the Multipage option.

PDF

This file format can be opened with the Adobe Acrobat application. Multipage images can be saved in one file with this file format.

❖ JPEG

This method can compress image data from 1/10 to 1/100 of the original size. The compressed image cannot be restored. This method is suitable for land-scape images or photo data because the compression effect tends to be less obvious with these kinds of images.

INDEX

A	1
Auto Address Update, 28	Import, 18
В	Install Client Software, 48
BMP, 64	ScanRouter Station, 4
С	<u>J</u>
Change	JPEG, 64
Starting Option, 8 User/Group Order on the copier	M
Panel Display, 17 Checking the Free Disk Space, 22	Maintenance Tool, 24 Measurement Unit, 29
Checking the Error Log, 21 CSV File, 20	<u>N</u>
Custom Size, 33	Non-forwarding Documents, 22
<u>D</u>	0
Daily Operation, 21 Date, 28 DCX, 64	Original Size, 31 Original Type, 30
Delete <i>User/Group,</i> 16	<u>P</u>
Delivery Option, 25 Delivery Scanner, 25 Delivery server address, 26	PCX, 64 PDF, 64
Delivery Settings, 35	R
Density, 30 Displaying Documents Shared Folders, 58	Receiving Documents, 51 Register
<u>E</u>	Group, 15 User, 11 Resolution, 30
Error Log Messages, 60 Error Messages, 61 Exit	S
Client Software, 50 Export, 19	Scanner Auto Clear Time, 28 Scanner Settings
<u>F</u>	Registering Items, 30 Temporary Changes, 45 Setting Originals, 39
File Format, 10, 14, 57, 64 File Name Documents in the Shared Folders, 58 Documents received with Client Software, 53 Function Priority, 27	Setting Originals, 69 Setting the Direction of the originals, 44 Set up Reception Environment of Client Software, 48 Shared Folder Create, 9 Shared Folders Display, 58

Start
ScanRouter Station, 7
Stop
ScanRouter Station, 7
System Requirements
Client Software, 47
Station, 3

T

TIFF, 64 TIFF-F, 64 Troubleshooting, 59 TWAIN connection time out, 27

U

User Tools, 25