LASER PRINTER

SERVICE MANUAL

No part this publication may be reproduced in any form or by any means without permission in writing
from the publisher. Trademarks:
 BR-Script, and DX-1600 are registered trademarks of Brother Industries, Ltd. Centronics is a registered trademark of Genicom Corporation. PostScrip is a registered trademark of Adobe Systems Incorporated. IBM Proprinter XL is a registered trademark of International Business Machines Corporation. EPSON FX-850 is a registered trademark of Seiko Epson Corporation. HP-GL and HP Laser Jet 5 are registered trademarks of Hewlett Packard Company.

PREFACE

This service manual contains basic information required for after-sales service of the laser printer (hereinafter referred to as "this machine" or "the printer"). This information is vital to the service technician in maintaining the high printing quality and performance of the printer.

This manual consists of the following chapters:

ChapterI : General

Features, specifications, etc.

Chapter II : Theory of Operation

Basic operation of the mechanical system and the electrical system, and their timing.

ChapterIII : Electrical System

Theory of the electronics circuit

ChapterIV: Mechanical System

Requirements for a suitable location, disassembling and reassembling procedure of

mechanical system.

ChapterV: Maintenance and Servicing

Parts replacement schedule, list of tools, lubricants and cleaners.

ChapterVI: Troubleshooting

Reference values and adjustment, troubleshooting for image defects, troubleshooting

for malfunctions, etc.

Appendices: Engine Block Diagram, PCB Circuitry Diagrams, etc.

Information in this manual is subject to change due to improvement or re-design of the product. All relevant information in such cases will be supplied in service information bulletins (Technical Information).

A thorough understanding of this printer, based on information in this service manual and service information bulletins, is required for maintaining its quality performance and for fostering the practical ability to find the cause of troubles.

CONTENTS

CHAPTER I GENERAL

FEATURES			
SPEC	IFICATIONS	I-1	
SAFE	TY INFORMATION	I-6	
3.1	Laser Safety (110 - 120V Model only)	I-6	
PARTS	S OF THE PRINTER	I-8	
4.1	External Views	I-8	
STOR	AGE AND HANDLING OF EP-ED CARTRIDGES	I-10	
5.1	Storage of Sealed EP-ED Cartridges	I-10	
APIER	II THEORY OF OPERATION		
BASIC	OPERATIONS	II-1	
1.1	Mechanical Configuration	II-1	
1.2	Main Drive	II-2	
1.3	Basic Sequence of Operations	II-3	
LASE	R/SCANNER SYSTEM	II-4	
IMAGE	FORMATION SYSTEM	II-5	
3.1	Outline	II-5	
3.2			
	3 - 3		
	·		
	Paper Jam Detection		
	SPECI SAFE 3.1 3.2 3.3 PARTS 4.1 4.2 STOR 5.1 5.2 APTER BASIC 1.1 1.2 1.3 LASEI IMAGI 3.1 3.2 3.3 PAPEI 4.1 4.2 4.3	SPECIFICATIONS SAFETY INFORMATION 3.1 Laser Safety (110 - 120V Model only) 3.2 CDRH Regulations (110 - 120V Model only) 3.3 Additional Information PARTS OF THE PRINTER 4.1 External Views 4.2 Cross Sectional View STORAGE AND HANDLING OF EP-ED CARTRIDGES 5.1 Storage of Sealed EP-ED Cartridges 5.2 Storage of Unsealed EP-ED Cartridges 5.2 Storage of Unsealed EP-ED Cartridges APTER II THEORY OF OPERATION BASIC OPERATIONS 1.1 Mechanical Configuration 1.2 Main Drive 1.3 Basic Sequence of Operations LASER/SCANNER SYSTEM IMAGE FORMATION SYSTEM 3.1 Outline 3.2 Printing Process 3.2.1 Electrostatic latent image formation stage 3.2.2 Developing stage 3.2.3 Transfer stage 3.2.4 Fixing stage 3.2.5 Drum cleaning stage 3.3 Operation PAPER PICK-UP/FEED SYSTEM 4.1 Outline 4.2 Cassette Feed 4.3 MP Tray Feed	

CHAPTER III ELECTRICAL SYSTEM

1.	MAIN	I PCB	III-′
	1.1	Outline	III-1
	1.2	Video Controller Circuit	
	1.3	Engine Controller Circuit	
2.	PAPI	ER FEED DRIVE CIRCUIT	
3.	DISP	LAY CIRCUIT	III-11
-	3.1	Outline	
	3.2	Operation	
4.		-VOLTAGE POWER SUPPLYASSY	
4.			
	4.1	Outline	
_	4.2	Protection Functions	
5.	HIGH	I-VOLTAGE POWER SUPPLYASSY	
	5.1	Outline	
	5.2	Operation of the Components of the High-Voltage Power Supply Assy	III-14
~		D. T. MEGUANIGAL OVOTEM	
CHA	APIE	R IV MECHANICAL SYSTEM	
PRIN	ITER D	ISASSEMBLING PROCEDURE	
	PRIN	TER BODY	
	1.1	Configuration	IV-3
	1.2	Toner Cartridge Lid	
	1.3	Side Cover L	
	1.4	Font Cover Assy	IV-4
	1.5	Upper Cover Assy, Rear Cover Assy	
		1.5.1 Upper cover assy, rear cover assy	
		1.5.2 Changeover guide, jam remove cover	
	1.6	Side Cover R	
	1.7	DC Fan Motor	IV-6
	1.8	Main PCB	IV-6
	1.9	Control Panel Unit	IV-8
	1.10	Scanner Unit	IV-9
	1.11	Cartridge Stopper Assy	IV-9
	1.12	Paper Feed Chassis Unit	IV-10
	1.13	Separation Pad Assy	IV-11
	1.14		
	1.15	P Feed /Size-SW PCB Assy	IV-12
	1.16	Side-Switch Spring	
	1.17	Regist Sensor Actuator	
	1.18	MP Paper Detection Actuator	
	1.19	PE Sensor Actuator MP	
	1.20	Tray Sensor Holder	
	1.21	Roller Holder	
	1.22	Paper Pick-up Roller Assy, Bearing	
	1.23	Paper Pick-up Solenoid	
	1.24	Paper Feed Motor Assy	
	1.25	MP Tray Cover	
	1.26	MP Tray Assy	
	1.27	Paper Path Separation Plate, Paper Path Separation Film	
	1.28	Latch	
	1.29	Fixing Unit (for both 120V and 230V, the only difference is the halogen heater) .	
	1.30	Transfer Unit	1V-22

	1.31 DC Gear Holder Assy				
	1.32 PS Switch Wire, Remote Switch				
	High-Voltage Power Supply PCBAssy Low-Voltage Power Supply PCBAssy				
	1.35 Toner Cartridge (EP-ED Cartridge)				
	1.36 PaperTray				
СН	APTER V MAINTENANCE AND SERVICING				
1.	PERIODICAL REPLACEMENT PARTS	V-1			
2.	CONSUMABLE PARTS STANDARD ENDURANCE TABLE	V-1			
3.	LIST OF STANDARD TOOLS	V-2			
4.	LIST OF LUBRICANTS AND CLEANERS	V-3			
СН	APTER VI TROUBLESHOOTING				
1.	INTRODUCTION				
	1.1 Initial Check				
2.	1.2 Basic Procedure TEST PRINTING AND MECHANICAL CHECK				
	2.1 Test Printing				
3.	IMAGE DEFECTS				
	3.1 Image Defect Examples				
4.	3.2 Troubleshooting Image Defects TROUBLESHOOTING OF MALFUNCTIONS				
4. 5.	TROUBLESHOOTING OF MALFUNCTIONS TROUBLESHOOTING PAPER TRANSPORT PROBLEMS				
ა.	5.1 Paper Jams				
	5.2 Incomplete Paper Feed				
6.	OPERATION	VI-23			
	6.1 Line Inspection Mode Procedure				
7	6.2 DRAMTest				
7.	STATUS MESSAGE LIST	VI-20			
AP	PENDICES				
1.	Engine Block Diagram	A-1			
2.	Paper Feed/Size-SW PCB Circuitry Diagram (1/1)	A-2			
3.	Main PCB Circuitry Diagram (1/7)	A-3			
4.	Main PCB Circuitry Diagram (2/7)	A-4			
5.	Main PCB Circuitry Diagram (3/7)	A-5			
6.	Main PCB Circuitry Diagram (4/7)	A-6			
7.	Main PCB Circuitry Diagram (5/7)	A-7			
8.	Main PCB Circuitry Diagram (6/7)				
9.	Main PCB Circuitry Diagram (7/7)	A-9			
10.	Control Panel PCB Circuitry Diagram (1/1)	A-10			
11.	Scanner LD PCB Circuitry Diagram (1/1)	A-11			

CHAPTER I GENERAL

1. FEATURES

- A. This high-speed, non-impact (low-noise) printer is based on electrophotography, electronics and laser technology.
- B. The printer is compact and easy to carry. The internally-storable, front-loading paper cassette enables you to save an occupation space for the machine; the printer can now be installed in a smaller place.
- C. The charging roller, developing cylinder, photosensitive drum and cleaner of the printer are combined into a single assembly called an "EP-ED cartridge". The cartridge can be replaced by the user when necessary without a need of service call. High printing quality is maintained by a simple cleaning procedure.
- D. Laser beam safety is designed into the printer. The printer is approved by the US Center for Devices and Radiological Health (CDRH).
- E. Paper can be fed in two ways, by the multi-purpose paper feed tray and paper cassette.
- F. Maintenance is easy with print component units which are directly detachable, and they require no adjustment after reassembly.

2. SPECIFICATIONS

(1) Type Desktop page printer

(2) Printing method Electrophotography (single-component dry toner)

(3) Printing speed

Cassette feed 12 pages/minute (A4/Letter size by cassette feed)

10.2 pages/minute (Legal size)

(4) First print time Approx. 20 seconds

(A4 size by face-down print delivery from the paper cassette)

(5) Warm-up (WAIT) time Max. 1 minute at 20°C (68°F)

(6) Optical system

Laser Semiconductor laser

Output power: 5mW max. Wave length: 780 nm

Scanning system Rotating six-faced polygon mirror

(7) Resolution

Horizontal 600 dots/inch and high resolution control (HRC)

Vertical 600 raster lines/inch

(8) Printing system

Photosensitive drum OPC

Charging Charging Roller

Exposure Laser scanning system

Development Toner projection development system

Paper feed Cassette or manual feed

Image transfer Roller method

Separation Natural(utilizing a small drum radius), Static charge eliminator

Fixing Heated fixing roller

Toner supply Included in the replaceable EP-ED cartridge

Life expectancy 6000 pages/cartridge

(9) Paper

Cassette feed Plain paper for Letter, Legal, A4, ISO B5, A5, ISO B6, A6,

Executive (A4 or letter size paper with the print density set at level 8 with 4% coverage, recommended: 60 g/m² –105 g/m²)

and Envelope (com10, monarch, C5, DL, ISO B5)

Multi-purpose Tray Plain paper of 90 x 148 mm — 216 x 356 mm (recommended:

60g/m² — 135 g/m², overhead projector (OHP) film, postcards,

label stock and envelopes (specified sizes)

(10) Cassette (Tray 1)

Universal cassette A4, Letter, Legal, ISO B5, Executive, A5, ISO B6, and A6

Maximum load height 55 mm (500 sheets of 80 g/m² paper)

Feedable paper type $60 - 105 \text{ g/m}^2$ Envelopes 40 envelopes

(11) Print delivery Face-down or (face-up)

(12) Print delivery tray capacity

Face-down 250 sheets (80 g/m²) Face-up Discharge only

(13) Effective printing area

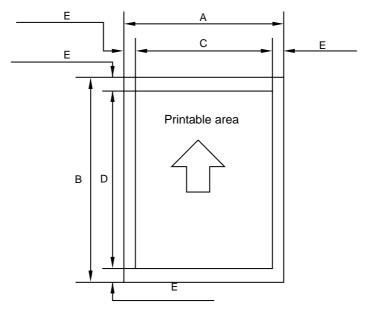


Figure 1.1 Printable Area

Effective printable area is referred to as a area within which is guaranteed the printing of all interface signal data on a hard copy without any omission.

The tables below shows the effective printable area for each paper size.

Table 1.1 Plain Paper

SIZE	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)
A 4	210.0	297.0	203.2	288.5	3.39 ± 1.0
Letter	215.9	279.4	207.4	270.9	4.23 ± 1.0
Legal	215.9	355.6	207.4	347.1	4.23 ± 1.0
B 5 (ISO)	176.0	250.0	167.5	241.5	4.23 ± 1.0
Executive	184.2	266.7	175.7	258.2	4.23 ± 1.0
A 5	148.0	210.0	139.5	201.5	4.23 ± 1.0
B 6 (ISO)	125.0	176.0	116.5	167.5	4.23 ± 1.0
A 6	105.0	148.0	96.5	139.5	4.23 ± 1.0

Table 1.2 Envelope

SIZE	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)
COM-10	104.8	241.3	96.3	232.8	4.23 ± 1.0
MONARCH	98.4	190.5	89.9	182.0	4.23 ± 1.0
DL	110.1	221.0	101.6	212.5	4.23 ± 1.0
C5	162.2	228.6	154.1	220.1	4.23 ± 1.0
B5 (ISO)	176.0	250.0	167.5	241.5	4.23 ± 1.0

(The sizes above are nominal sizes according to ISO.)

An A4 sheet accepts 80 PICA-pitch characters (203.2mm).

(14) Standard interfaces

Automatic interface selection

• Centronics, Bi-directional parallel

RS-232C serial

Baud rate : 150, 300, 1200, 2400, 4800, 9600

19200, 38400, 57600 bps

Stop bit : 1 bit

Start bit : 1 bit or 2 bits

Data length : 7 bits or 8 bits

Parity : Odd, Even, or None

Protocol : Xon/Xoff or DTR

(15) Emulation

Automatic emulation selection

• HP Laser Jet 5 (PCL Level 6)

EPSON FX-850IBM Proprinter XL

• BR-Script level 2 (PostScript language emulation interpreter)

• HP-GL

(16) CPU

MB86832

(17) Resident fonts

75 scalable fonts and 12 bitmapped fonts

■ HP Laser Jet 5, EPSON FX-850, IBM Proprinter XL Scalable Fonts:

Intellifont Compatible Fonts:

· Albertville, Extrabold

• Antique Oakland, Oblique, Bold

• Brougham, Oblique, Bold,

Bold Oblique

• Cleveland Condensed

Connecticut

• Guatemala Antique, Italic, Bold,

Bold Italic

• Letter Gothic, Oblique, Bold

Maryland

• Oklahoma, Oblique, Bold,

Bold Oblique

 PC Brussels Light, Light Italic, Demi, Demi Italic

• PC Tennessee Roman, Italic, Bold,

Bold Italic

• Utah, Oblique, Bold, Bold Oblique

• Utah Condensed, Oblique, Bold, Bold Oblique

Windows 3.1 Compatible Fonts:

• Tennessee Roman, Italic, Bold,

Bold Italic

• Helsinki, Oblique, Bold, Bold Oblique

• BR Symbol

W Dingbats

BR-Script Fonts:

• Atlanta Book, Book Oblique, Demi,

Demi Oblique

• Copenhagen Roman, Italic, Bold,

Bold Italic

• Portugal Roman, Italic, Bold, Bold Italic

· Calgary Medium Italic

Brother Original Fonts:

Bermuda Script

Germany

San Diego

• US Roman

Bitmapped Fonts (Portrait and Landscape):

- Letter Gothic 16.66 Medium, Italic, Bold, Bold Italic
- OCR-A
- OCR-B

BR-Script Level 2 Mode

Scalable Fonts:

· Atlanta Book, Book Oblique, Demi,

Demi Oblique

· Brussels Light, Light Italic, Demi,

Demi Italic

• Brougham, Oblique, Bold, Bold Oblique

• Helsinki, Oblique, Bold, Bold Oblique

Helsinki Narrow, Oblique, Bold,

Bold Oblique

Copenhagen Roman, Italic, Bold,

Bold Italic

Portugal Roman, Italic, Bold, Bold Italic

• Tennessee Roman, Italic, Bold, Bold Italic• Bermuda Script

Calgary Medium Italic

• BR Symbol

BR Dingbats

· Albertville, Extrabold

Antique Oakland, Oblique, Bold

· Cleveland Condensed

Conecticut

• Guatemala Antique, Italic, Bold, Bold Italic

• Letter Gothic, Oblique, Bold

Maryland

Oklahoma, Oblique, Bold, Bold Oblique

• Utah, Oblique, Bold, Bold Oblique

· Utah Condensed, Oblique, Bold,

Bold Oblique

Germany

· San Diego US Roman

(18) RAM 2M bytes (expandable to 26M bytes)

(19) Font cartridge/card slots Two slots

One font cartridge slot and one font card slot

: AC 110 to 120 V, 60 Hz (20) Power souse USA and Canada

> Europe and Australia : AC 220 to 240 V, 50 Hz

(21) Power consumption Printing(peak) 115V/230V : 640 WH/1.010 WH or less

> Printing(average): 500 WH or less Stand-by 80 WH or less Sleep 20 WH or less

Note:

- The peak figure of power consumption is worked out when the halogen heater lamp is turned ON.

- The peak figure of power consumption is worked out excluding inrush current value.

- Be sure that the peak figure of power consumption is reference value and should be used inside the Brother offices only.

49 dB A or less (22) Noise Printing

> 40 dB A or less Stand-by

(23) Dimensions (W x H x D) 371.6 x 326.5 x 393 mm (14.6 x12.9 x 15.5 inches)

(24) Weight Approx. 15 kg (32.6 lbs)

(25) Environmental conditions

Operating Temperature 10 ~ 32.5°C

environment Relative humidity 20 ~ 80%RH

(No condensation allowed)

Air pressure 613 ~ 1013 hPa

 $(0 \sim 2,500 \text{ m above sea level})$

Temperature 0 ~ 35°C Non-operating

environment Relative humidity 10 ~ 80%RH

(No condensation allowed)

Storage conditions

 Printer Temperature

```
Normal (total storage time x 9/10)
                            0~35°C
                          Severe (total storage time x 1/10)
                              High
                                             Low
                            35°C ~ 60°C -20°C ~ 0°C
                          Temperature change (within 3 minutes)
                              High
                                             Low
                            60°C →15°C -20°C → 25°C
                       Relative humidity
                          Normal (total storage time x 9/10)
                            35 ~ 85%RH
                          Severe (total storage time x 1/10)
                              High
                                             Low
                            85 ~ 95%RH 10 ~ 35%RH
                       Air pressure 613 ~ 1013 hPa
                       Total storage time 0.5 years
• EP-ED cartridge
                       Temperature
                       Normal (2.45 years max.)
                            0 ~ 35°C
                          Severe (0.05 years max.)
                              High
                                             Low
                            35°C ~ 40°C -20°C ~ 0°C
                          Temperature change (within 3 minutes)
                              High
                                            Low
                            40°C →15°C -20°C →25°C
                       Relative humidity
                          Normal (2.45 years max.)
                            35 ~ 85%RH
                          Severe (0.05 years max.)
                                             Low
                              High
                            85 ~ 95%RH 10 ~ 35%RH
                       Air pressure 613 ~ 1013 hPa
                       Maximum total storage time: 2.5 years including used time
```

3. SAFETY INFORMATION

3.1 Laser Safety (110 ~ 120V Model only)

This printer is certified as a Class 1 laser product under the US Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

Since radiation emitted inside the printer is completely confined within the protective housings and external covers, the laser beam cannot escape from the machine during any phase of

3.2 CDRH Regulations (110 ~ 120V Model only)

The center for Devices and Radiological Health (CDRH) of the US Food and Drug Administration implemented regulations for laser products on August 2, 1976. These regulations apply to laser products manufactured from August 1, 1976. Compliance is mandatory for products marketed in the United States. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

MANUFACTURED:

BROTHER INDUSTRIES, LTD.

15-1, Naeshiro-cho, Mizuho-ku Nagoya 467, Japan.

This product complies with FDA radiation

performance standards , 21 CFR chapter 1

subchapter J.

Figure 1.2

Caution: Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

3.3 Additional Information

When servicing or adjusting the optical system of the printer, be careful not to place screwdrivers or other reflective objects in the path of the laser beam. Be sure to take off any personal accessories such as watches and rings before working on the printer. A reflected beam, though invisible, can permanently damage the eyes.

Since the beam is invisible, the following label is attached to the inside of covers where danger of exposure to laser radiation exist.

Figure 1.3

4. PARTS OF THE PRINTER

4.1 External Views

- 1 Upper cover
- (2) Control panel
- (3) MP tray
- (4) Tray 1
- (5) Tray 2 (Option)
- 6 Font card slot
- 7 Font cartridge slot
- (8) Power switch

- 9 AC inlet
- (10) Face-up print delivery port
- (11) Fan outlet port
- (12) Rating label
- (13) Optional I/O slot
- (14) RS-232C interface connector
- (15) Centronics interface connector
- (16) Optional interface connector


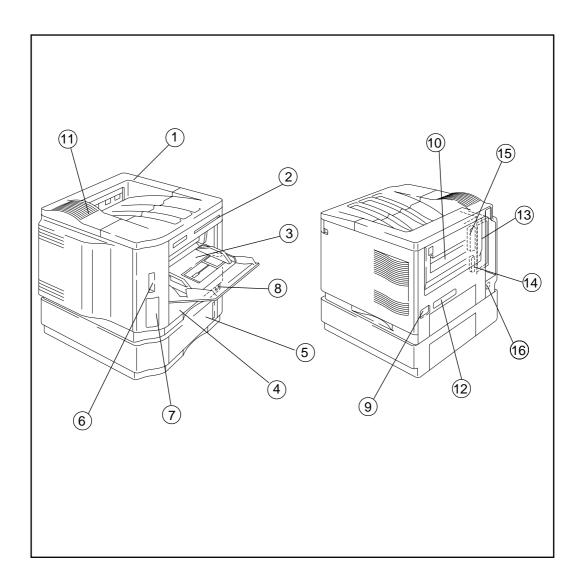


Figure 1.4

4.2 Cross Sectional View

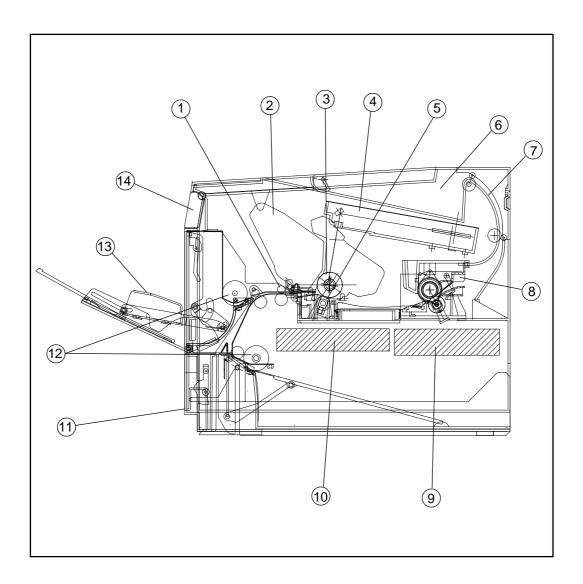

- 1 Registration rollers
- (2) EP-ED cartridge
- 3 Photosensitive drum
- (4) Laser scanner unit
- (5) Transfer unit
- (6) Face-down tray
- (7) Print-delivery path
- 8 Fixing unit

- 9 Low-voltage power supply assy
- 10 High-voltage power supply assy
- (11) Paper cassette (Tray 1)
- (12) Pick-up rollers
- (13) MP tray
- (14) Control panel

Figure 1.5

5. STORAGE AND HANDLING OF EP-ED CARTRIDGES

An EP-ED cartridge is influenced by the storage conditions even if it is sealed in its package, so its life depends on the way in which it is used or stored. EP-ED cartridges should be handled carefully.

5.1 Storage of Sealed EP-ED Cartridges

When storing sealed EP-ED cartridges in a warehouse or workshop, the storage conditions shown in (25) Environmental conditions on Page 1-5 must be met. Follow the instructions below:

- 1) Avoid direct sunlight.
- 2) Do not store cartridges on a surface that is subject to vibration.
- 3) Do not hit or drop the packages containing cartridges.
- 4) The cartridges should be stored horizontal when they are removed from the body (with their label side upside).
- 5) Avoid putting the cartridges near a CRT screen, a disk or a floppy disk (to keep their data from being destroyed).

5.2 Storage of Unsealed EP-ED Cartridges

Each EP-ED cartridge contains a photosensitive drum that has an organic photoconductor (OPC) which deteriorates when exposed to strong light. It also contains toner. The user, therefore, should be fully informed about the correct storage and handling of EP-ED cartridges.

(1) Storage requirements

- 1) Avoid places exposed to direct sunlight or near a window. Do not leave an EP-ED cartridge in a car in warm or hot weather even if it is in its storage box.
- Avoid places with a too-high or too-cool temperature and/or humidity. Also avoid places exposed to sudden temperature or humidity changes (such as near an air conditioner outlet).
- 3) Avoid dusty places or places exposed to ammonia fumes or other harmful fumes.
- 4) Do not store an EP-ED cartridge in a temperature above 40°C.

(2) EP-ED cartridge life

The effective life of an EP-ED cartridge is 2.5 years from the date of manufacture (printed on the cartridge.) The expiry year and month (date of manufacture plus 2.5 years) is shown on the EP-ED cartridge box. An EP-ED cartridge used after the expiry may produce low-quality printing, so a cartridge should be used within the stated period.

CHAPTER II THEORY OF OPERATION

This chapter describes the printer functions, the relationship between the electrical systems and mechanical systems, and the timing of operations. Striped conduits (indicate mechanical linkages; solid thin arrows () appearing with a signal name indicate the transmission of single control signals and outlined thick arrows () indicate the transmission of groups of signals.

1. BASIC OPERATIONS

1.1 Mechanical Configuration

The printer functions can be divided into four blocks: the laser/scanner system, the image formation system, the paper pick-up/feed system and the control system.

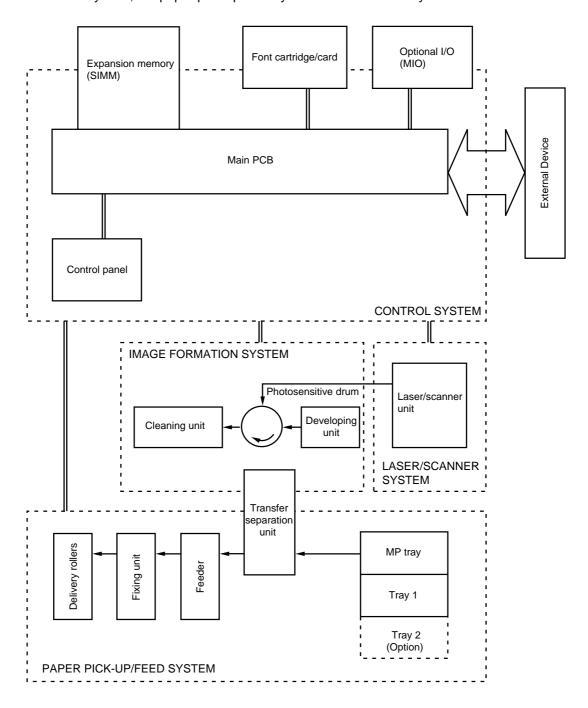


Figure 2.1

1.2 Main Drive

The power necessary for driving the printer is supplied by the main motor, the paper feed motor and the scanner motor.

The main motor is controlled by the main motor drive signal (MDRIVE) output from the main PCB, and the paper feed motor is controlled by the paper feed motor drive signal output from the main PCB, and the scanner motor is controlled by the scanner motor drive signal (SDRIVE) output from the main PCB.

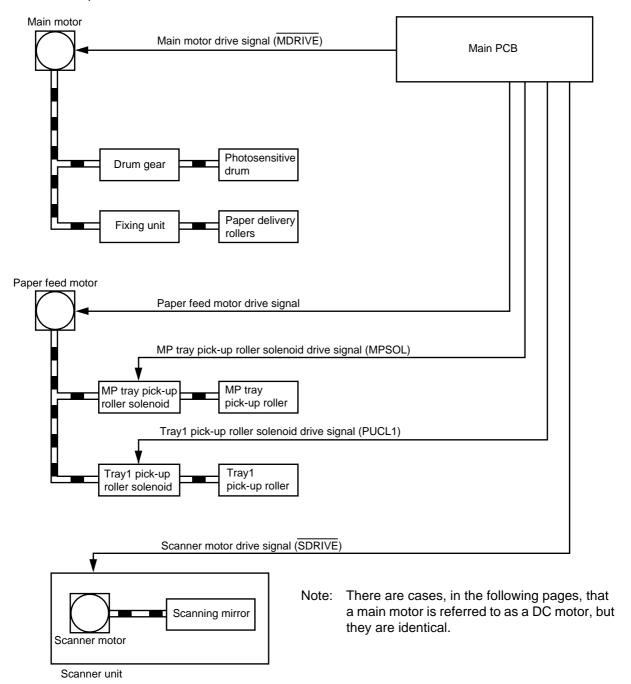


Figure 2.2

1.3 Basic Sequence of Operations

Timing for two consecutive prints on A4 paper.

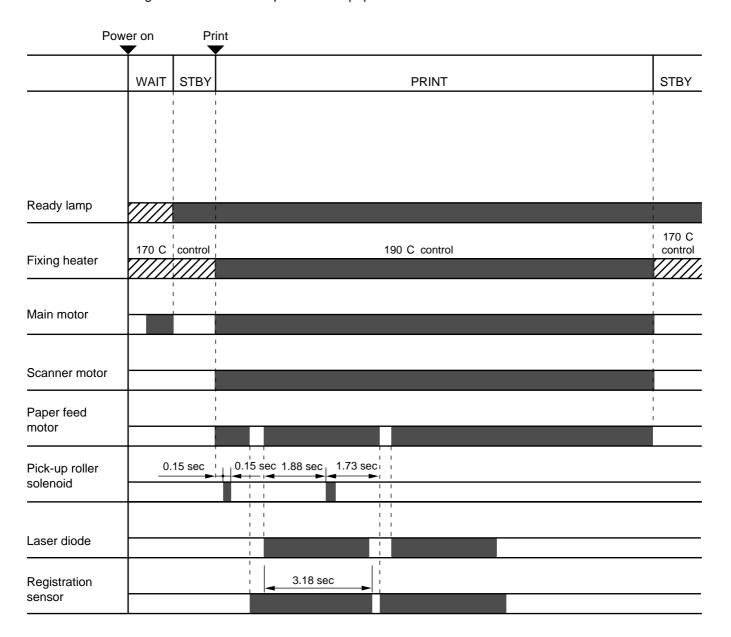


Figure 2.3

2. LASER/SCANNER SYSTEM

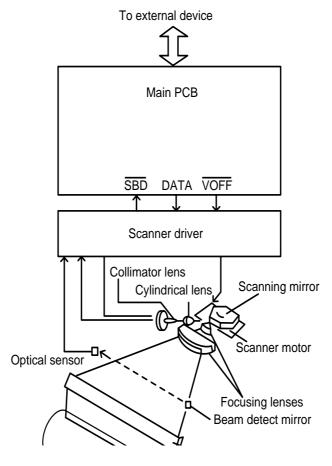


Figure 2.4

In response to the print signal transmitted from the external device, the main PCB generates the drive signals (DATA, VOFF) for the laser diode and sends the signals to the scanner unit.

The laser diode in the scanner unit generates a laser beam modulated by DATA.

The modulated laser beam is aligned into a parallel beam by a collimator lens and a cylindrical lens and then brought to the scanning mirror which is rotating at a constant speed.

The laser beam reflected by the scanning mirror focuses on the photosensitive drum via the focusing lenses arranged in front of the scanning mirror.

The path of the beam coming through the focusing lenses is reflected by the reflective mirror.

As the scanning mirror rotates at a constant speed, the laser beam scans the photosensitive drum at a constant speed.

As the photosensitive drum rotates at a constant speed and the laser beam scans the drum, an images is formed on the drum.

3. IMAGE FORMATION SYSTEM

3.1 Outline

The image formation system is the main part of the printer. The print information, after input from the video controller circuit into the engine controller circuit as a TVDO signal, forms a toner image on the photosensitive drum.

Then the toner image is transferred onto the paper by the transfer charging roller. The image formation system is composed of the photosensitive drum the charging unit, the developing unit and the cleaning unit.

3.2 Printing Process

The major part of the image formation system is contained in the cartridge, as shown in Figure 2.5.

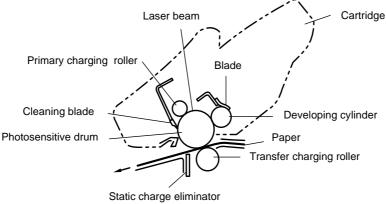


Figure 2.5

The cartridge used by the printer has a seamless photosensitive drum with the structure shown in Figure 2.6. The outer layer of the drum consists of an organic photoconductor (OPC); the base is aluminum.

The printing process can be divided into five major stages:




Figure 2.6

1. Electrostatic latent image formation stage

Step 1 Primary charge (-)

Step 2 Scanning exposure

2. Developing stage

Step 3 Development

- 3. Transfer stage
 - Step 4 Transfer (+)
 - Step 5 Separation
- 4. Fixing stage

Step 6 Fixing

5. Drum cleaning stage

Step 7 Drum cleaning

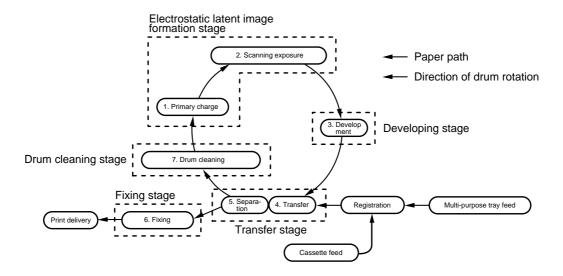


Figure 2.7

3.2.1 Electrostatic latent image formation stage

This stage has two steps, which together produce a pattern of electrical charges on the photosensitive drum.

At the end of the stage, negative charges remain in the unexposed "dark" area. Charges are absent from the "light" areas, where the laser beam struck (exposed) the drum surface.

Since this image of negative charges on the drum is invisible to the eye, it is called an "electrostatic latent image".

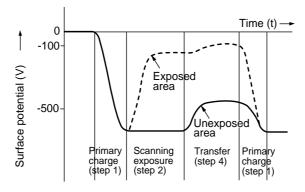


Figure 2.8

Step 1 Primary charge

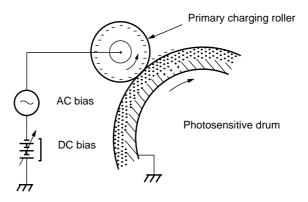


Figure 2.9

As preparation for latent image formation, a uniform negative potential is applied to the photosensitive drum surface. The printer uses the charging method that directly charges the drum for the primary charge.

The primary charging roller consists of conductive rubber. In addition to DC bias, AC bias is applied to the primary charging roller to keep the potential on the drum surface uniform. This DC bias is changed with the developing DC bias.

This charging method has advantages such as lower applied voltage, less ozone generation, etc., compared with the corona charge system.

Step 2 Scanning exposure

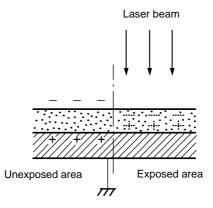


Figure 2.10

When the laser beam scans the drum surface, it causes the charge to be neutralized in the areas struck by the beam. Areas on the drum with no charge form the electrostatic latent image.

3.2.2 Developing stage

Development places particles of toner onto the areas of the drum that have been cleared of charge by the laser beam. This makes a visible image. This printer uses the toner projection development method with a single-component toner.

Step 3 Development


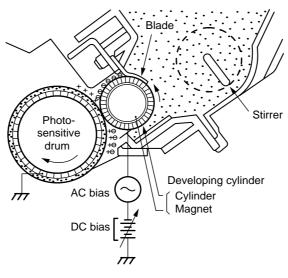


Figure 2.11

Note: The charges on the light areas on the photosensitive drum are shown as positive in this figure. Actually they are negative, but they are more positive than the developing cylinder and explanation is simplified by regarding them as positive.

As shown in Figure 2.11, the developing unit consists of a developing cylinder and rubber blade. The developing cylinder rotates around a fixed internal magnet. The single-component toner consists of magnetite and a resin binder, and is held to the cylinder by magnetic attraction. The toner is an insulator, and acquires a negative charge by friction due to the rotation of the cylinder.

The areas on the drum that were exposed to the laser beam have a higher potential (are less negative) than the negatively charged toner particles on the developing cylinder. When these areas approach the cylinder, the potential difference projects the toner particles onto them. This is called toner projection, and the latent image on the drum becomes visible.

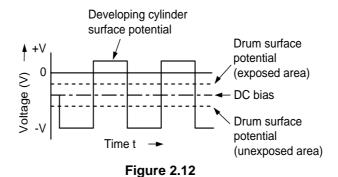

An AC bias is applied to the developing cylinder to help project the toner particles to the drum surface and improve the contrast of the printed image. The center voltage of the AC bias (1600 Vp-p) varies with the DC bias voltage.

The IMAGE DENSITY ADJUSTMENT signal (sent from the Engine CPU to the high-voltage power supply) changes the DC bias, and thus the potential difference between the cylinder and drum. This changes the density of the print.

This printer has a stirring mechanism to supply toner in the cartridge smoothly to the cylinder.

3.2.3 Transfer stage

In the transfer stage, the toner image is transferred from the drum surface to the paper.

Step 4 Transfer

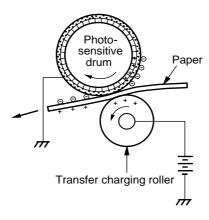


Figure 2.13

A positive charge applied to the back of the paper attracts the negatively charged toner particles to the paper. The printer accomplishes transfer by using the charging roller method. Advantages compared with the corona transfer method are as follows:

- Low transfer voltage that is less than half that for corona transfer.
- · Less ozone generation.
- The paper is supported by the transfer charging roller and photosensitive drum, so feed is more stable.

Reference:

If the image on the photosensitive drum is not completely transferred to the paper due to jamming, etc., the toner may adhere to the transfer charging roller. The printer removes the toner from the transfer charging roller by switching the transfer voltage between positive and negative in sequence. During wait, initial rotation, and last rotation, the printer sets the primary DC voltage to zero, and sets the charge on the drum to zero. In this case, the transfer voltage is made negative to remove the negatively-charged toner on the transfer charging roller to the drum. The transfer charging roller is thus cleaned.

Step 5 Separation

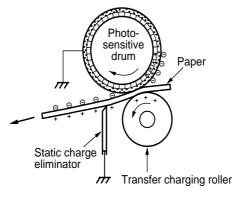


Figure 2.14

The stiffness of the paper causes it to separate from the drum. (Curvature separation)

To stabilize the paper feed and prevent small white circles from appearing in the printed image at low temperature and humidity, the charge on the back of the paper is reduced by the static charge eliminator after transfer.

3.2.4 Fixing stage

The toner image transferred to the paper in the transfer stage is held only by electrostatic attraction and slight physical adhesion, so even a light touch will smear the image.

In the fixing stage, the toner image is fixed by heating the paper and applying pressure. This fuses the toner particles to the paper to make a permanent image.

Step 6 Fixing

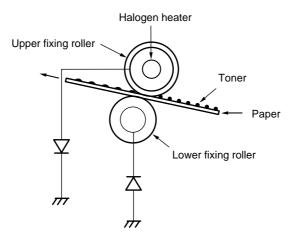


Figure 2.15

The upper roller surface is PFA-coated. The upper and lower roller surfaces are grounded via a diode to prevent the negative potential of the upper roller becoming higher than that of the lower roller, resulting in the toner being drawn to the lower roller, and adhering to the lower roller surface.

3.2.5 Drum cleaning stage

In the transfer stage, not all the toner is transferred to the paper. Some remains on the photosensitive drum. This residual toner is cleaned off in the drum cleaning stage so that the next print image will be clear.

Step 7 Drum cleaning

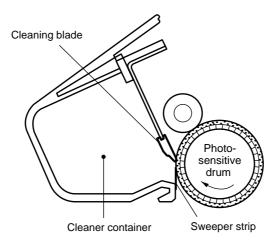


Figure 2.16

Prior to the next printing, the residual toner on the drum surface is scraped away by the cleaning blade to clean the drum surface. The removed toner is collected in the cleaner container.

3.3 Operation

When the engine controller circuit receives a print signal (PRINT) or a pre-feed signal (PRFD) from the video controller circuit, the engine controller circuit drives the main motor to rotate the photosensitive drum.

After the drum surface is charged negatively by the primary charge roller, the laser beam modulated by a DATA signal scans the drum surface to from a latent image on the drum.

The latent image formed on the drum surface is converted into a visible image by the toner on the developing cylinder and then image is transferred onto the paper by the transfer roller unit. Then the residual toner is removed from the drum surface with the cleaner blade.

The cartridge also has a toner sensor. When the output from this sensor falls below a certain level, it warns that the EP-ED cartridge will be out of toner with an alarm.

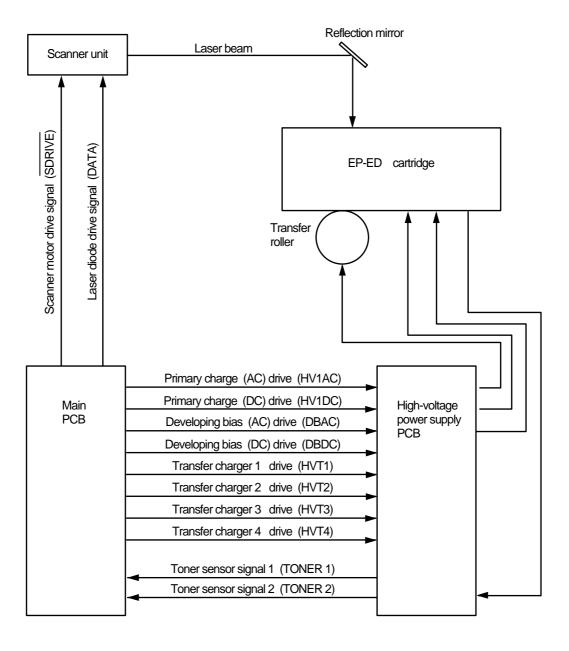


Figure 2.17

4. PAPER PICK-UP/FEED SYSTEM

4.1 Outline

If a tray1 paper pick-up roller solenoid drive signal (PUCL1) is input to the circuit while the paper feed motor is rotating, the paper pick-up solenoid comes on and the paper pick-up roller solenoid is engaged. As a result, the paper pick-up roller rotates to feed paper down to the photosensitive drum.

The paper position is controlled by the registration sensor so that the leading edge of the paper is aligned with the leading edge of the image on the photosensitive drum. After this operation, the paper is deliveried to the face down tray via the fixing unit. Paper ejection is detected by the paper ejection sensor; if printed paper has not reached or not cleared the paper ejection sensor in a specified time, the printer judges that a paper jam has occurred. In this case a paper jam is noticed to the external devise by a status signal.

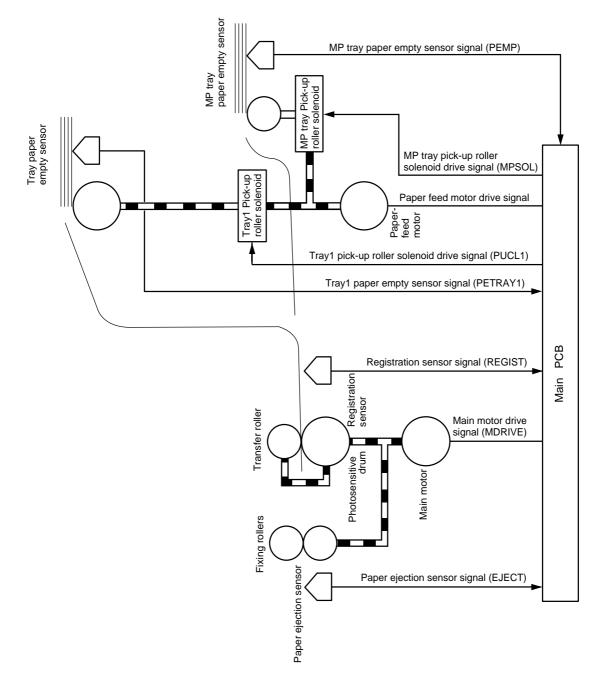


Figure 2.18

4.2 Cassette Feed

When the fixing rollers reach the specified temperature while a cassette with paper is in the printer, the READY lamp changes from flashing to lighting.

When the engine controller circuit receives PRNT or PRFD signal from the video controller circuit, the paper feed motor starts rotation. About 0.2 seconds later, the printer actuates the tray1 pick-up roller solenoid and the pick-up roller makes one rotation. This feeds paper to the photosensitive drum.

Timing chart for the pick-up one sheet

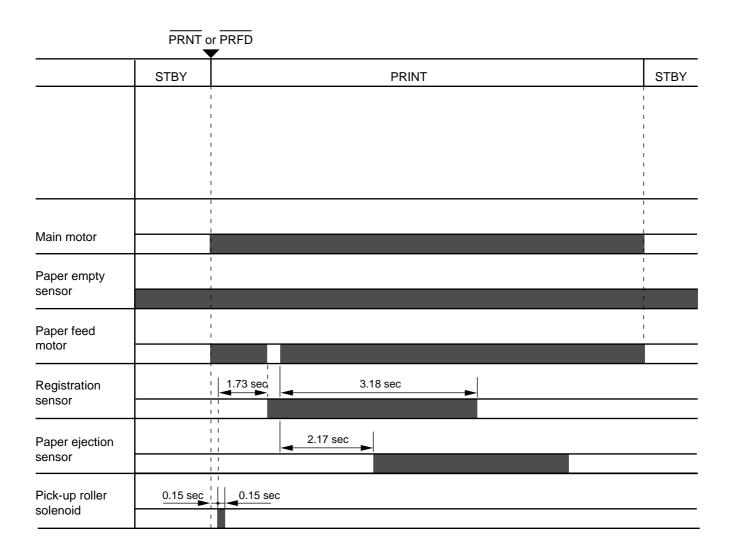


Figure 2.19

4.3 MP Tray Feed

The timing of the MP tray feed is identical to the timing of the cassette paper feed except for the following points:

(1) The paper empty sensors are different.

Cassette feed: Tray1 paper empty sensor

MP tray feed: MP tray paper empty sensor

(2) The pick-up roller solenoids are different.

Cassette feed: Tray1 pick-up roller solenoid
MP tray feed: MP tray pick-up roller solenoid

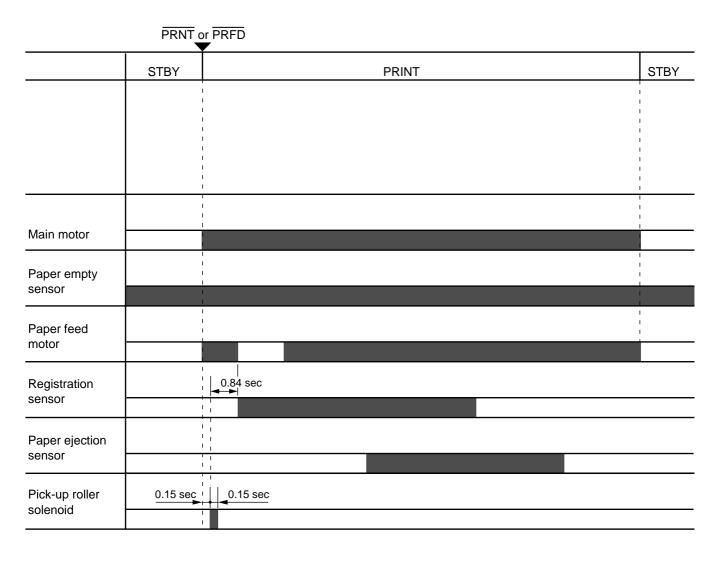


Figure 2.20

4.4 Paper Jam Detection

The printer has a registration sensor and a paper eject sensor at the paper outlet to detect whether the printed paper has been fed correctly. A paper jam is detected by whether the paper is present at the sensor at the check periods programmed in the engine CPU memory. If the engine CPU detects a paper jam, the main motor, paper feed motor and scanner motor is turned off immediately and the jam status is transmitted to the video controller circuit.

A paper jam is detected in any of following conditions:

- Paper exists at the paper ejection sensor or the registration sensor when power is switched on. (JAM REAR or JAM INSIDE)
- 2) Paper has not reached the registration sensor within a specified time (JAM TRAYS).
- 3) Printed paper has not passed through the registration sensor within a specified time (JAM INSIDE (1)).
- 4) Printed paper has not reached the paper ejection sensor within a specified time (JAM INSIDE (2)).
- Printed paper has not passed through the paper ejection sensor within a specified time (JAM REAR).

Jam tray

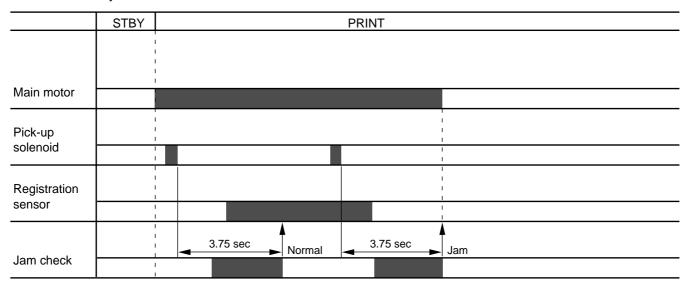


Figure 2.21

Jam inside (1)

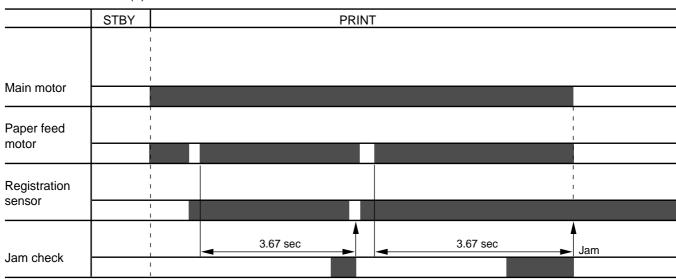


Figure 2.22

Normal

Jam inside (2)

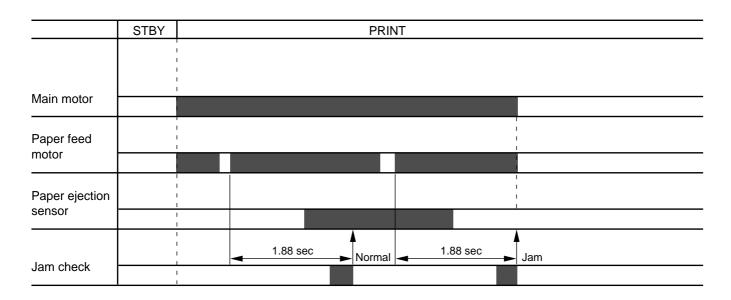


Figure 2.23

Jam rear

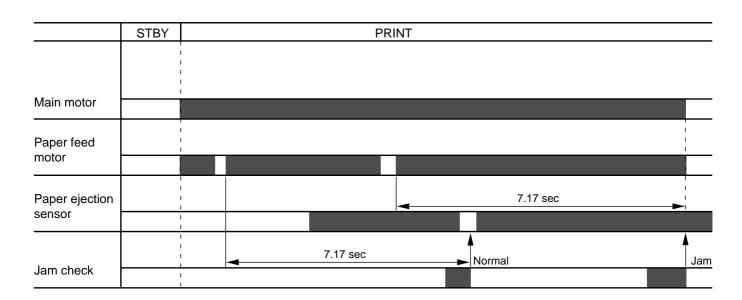


Figure 2.24

CHAPTER III ELECTRICAL SYSTEM

Electric signal levels are expressed by "High" (approximate the supply voltage) or "Low" (approximate 0V). Signals with hyphen or slash, such as -FSRD or FSRD/, are low-active and signals without hyphen or slash, such as FSRD, are high-active signals.

1. MAIN PCB

1.1 Outline

The Main PCB consists of the Video Controller Circuit and the Engine Controller Circuit.

The Video Controller Circuit performs the following functions.

- (1) Converts data received from an external device, such as a personal computer, through Centronics parallel interface or RS-232C serial interface into video data and transfers it to the Engine controller circuit.
- (2) Displays the current printer status in LED and LCD, and enables settings from the control panel.

The operation sequence of the printer controlled by a microprocessor in the Engine Controller Circuit. The Engine Controller Circuit outputs signals to drive the various loads on the laser diode, scanner motor, main motor, etc. according to the print commands and image data from the external device.

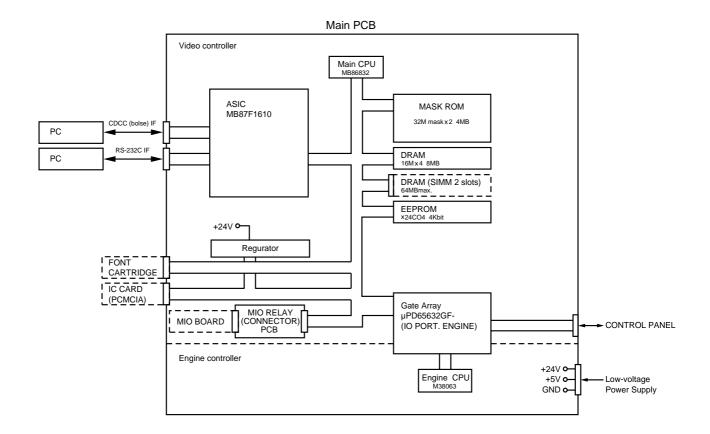


Figure 3.1 Main PCB Block Diagram

1.2 Video Controller Circuit

(1) CPU block

CPU(#33) MB86832-100 manufactured by Fujitsu

RISC chip

Clock speed: 19.6608 MHz Appearance: 178-pin QFP

Voltage: 3V

(2) ASIC/Gate Array Block

#19 MB87F1610(Fujitsu) - 240-pin QFP

Controls the address decoder, timers and interfaces (Centronics and RS-232C).

- Controls HRC(High Resolution Control), GSC(Gray Scale Control) and economy mode, drivened by 3V.
- #3 µPD65632GF 100-pin QFP
 Controls the I/O ports and others.
- (3) Font Cartridge/Card Block
 - Font cartridge (option)

The font cartridge has a 32MB memory area and is controlled by the 16-bit bus.

The address bus a buffer LS245 and the data bus, a buffer LCX245.

Font Card (option)

The font card has a 32MB memory area and is controlled by the 16-bit bus.

The card is supplied with 12V power because the flash card requires 12V power supply when writing or erasing data.

The address bus is buffered by LS245 and the data bus, is buffered by LCX245.

- (4) Centronics/RS-232C interface block
 - Centronics parallel interface

Data transmission and reception are controlled by the MB87F1610 (#19).

RS-232C

Data transmission and reception are controlled by the MB87F1610 (#19).

The ADM202JRN (#35) serves as driver/receiver.

- (5) SIMM block
 - SIMM (Single-Inline-Memory-Module) allows memory extension up to 72MB
 - 2 SIMM sockets are available.
 - SIMM should be of 72-pin type and its access time should be less than 70 ns.
 - 6 types of SIMM (1MB, 2MB, 4MB and 8MB) can be combined:

1MB MH25632BJ-7 (MITSUBISHI), HB56D25632B-7A (HITACHI)

2MB MH51232BJ-7 (MITSUBISHI), HB56D51232B-7A (HITACHI)

4MB MH1M32EJ-7 (MITSUBISHI), HB56A132BT-7A (HITACHI)

8MB MH2M32EJ-7 (MITSUBISHI), HB56A232BT-7A (HITACHI)

1) The SIMMs have its printed marking on the PCB by silk screen: SLOT1 and SLOT2, respectively. The SIMMs should be set in the order of SLOT1 - SLOT3.

3) The attached Printer SIMM map shows the memory map for 4 SIMMs combined.

(6) ROM block

ROMs store the CPU control program and font data. ROMs are two 32Mbit masked ROMs. Optional sockets are available for two 8Mbit EPROM (μ PD27C8000DZ-120 - NEC or equivalent) for expansion.

ROM access time should be less than 120nsec.

(7) DRAM block

DRAMs are used for receiving buffer or working area of the CPU. The DRAM block contains four 16Mbit DRAMs, thus having 8MB memory capacity in total.

The refreshing method is CBR (Cas Before Ras).

DRAM access time should be less than 80nsec.

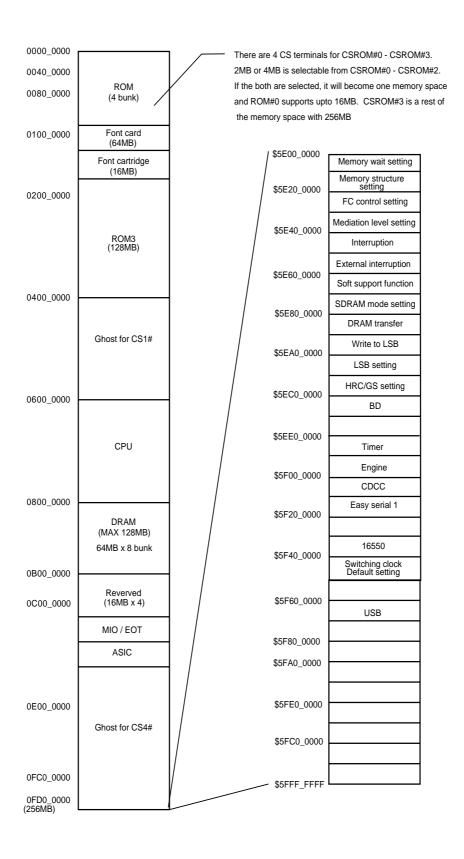


Figure 3.2 Memory map

ADDRESS			Ι	l	l			Ι	l	Г	l	l	Π	l		l		l			Г
0820 0000	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
	NONE	1MB																			
0830 0000			2MB	2MB	ŽMB																
0840_0000_		1MB					=														
0050 0000		1MB	1MB			4MB	4MB	4MB	4MB	4MB	4MB										
0850 0000			1MB	ŽMB	ŹMB																
0860 0000			TIVID										I SIMIR	ΩMĒ	ĀMĒ	- RIMIR	ΩMĒ	ΩΜΒ	ΩMĒ.	8MB	- SMB
0870 0000				1MB		1MB							OIVID	OIVID	OIVID	OIVID	OIVID	OIVID	OIVID	OIVID	OIVID
					2MB	1MB	2MB	2MB													
0880 0000						2			4MB	4MB	4MB										
0890 0000							1MB														
								2MB					[[
0880 0000																					
08B0 0000			 						1MB			1MB									
										2MB		1MB	2MB	2MB							
08C0 0000											4MB		4MD		4MB	4MB	4MB				
08D0 0000											 :	ļ	1MB	2MB							
08E0 0000														ZIVIB							
															1MB			8MB	8MB	8MB	8MB
08 <u>F</u> 0_0000_																2MB	:				
0900 0000																					
																	4MB				
0910 0000																					
0920 0000																					
																		1MB			
0930 0000																			2MB		
0940_0000_			 							 			 							4MB	
0950 0000																				טועוד	
10000 0000																					
0960 0000																					8MB
0970 0000																					
0980 0000																					
0990 0000	 		 		 			 		 			 		 	 		 			
0040 0000																					
09A0 0000																					

Figure 3.3 SIMM map

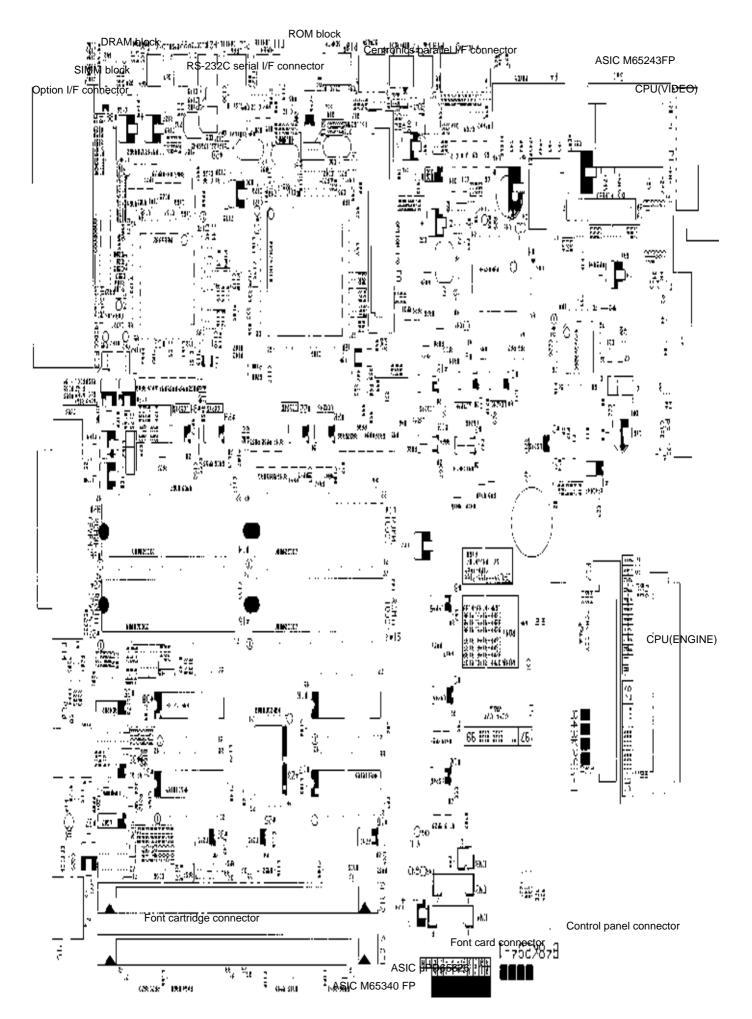


Figure 3.4 Main PCB

1.3 Engine Controller Circuit

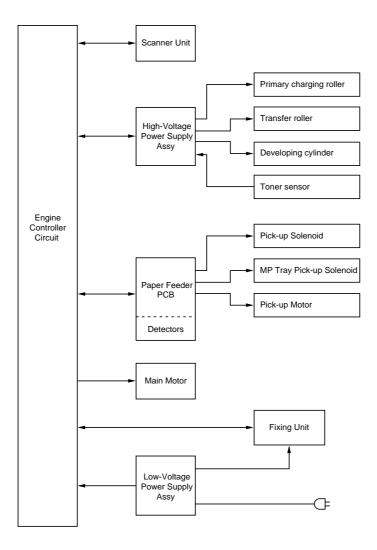


Figure 3.5 Engine Controller Block Diagram

Components in the Circuit (refer to the next page)

- A. Engine Control CPU
- B. Low-Voltage Power Supply Connector
- C. Fuser Unit Control
 - C-1. Heater Drive Circuit
 - C-2. Heater Temperature Input Signal
 - C-3. Paper Eject Input Signal
- D. Paper Feeder PCB Control Signals and Connector
- E. Option Interface Circuit and Connector
- F. High-Voltage Power Supply Control Circuit and Connector
- G. Scanner Unit Control
 - G-1. Scanner Motor Control Circuit
 - G-2. Laser Diode Drive PCB Control Circuit
- H. Fan Motor Drive Circuit
- I. Main Motor Control Circuit
- J. Cover Open Detect Circuit
- K. Safety Door Switch Circuit

2. PAPER FEED DRIVE CIRCUIT

- A. Connector to Main PCB
- B. Pick-up Motor Drive Circuit and Connector
- C. Pick-up Solenoid Drive Circuit and Connector
- D. Multi Purpose Tray Pick-up Solenoid Drive Circuit and Connector
- E. Sensors
 - E-1. Tray1 Paper Empty Sensor
 - E-2. Multi Purpose Tray Paper Empty Sensor
 - E-3. Regist Sensor
 - E-4. Pre-Regist Sensor
 - E-5. Paper Detect Sensor in Duplex Unit
- F. Tray1 Paper Size Detect Switches

Refer to the next page.

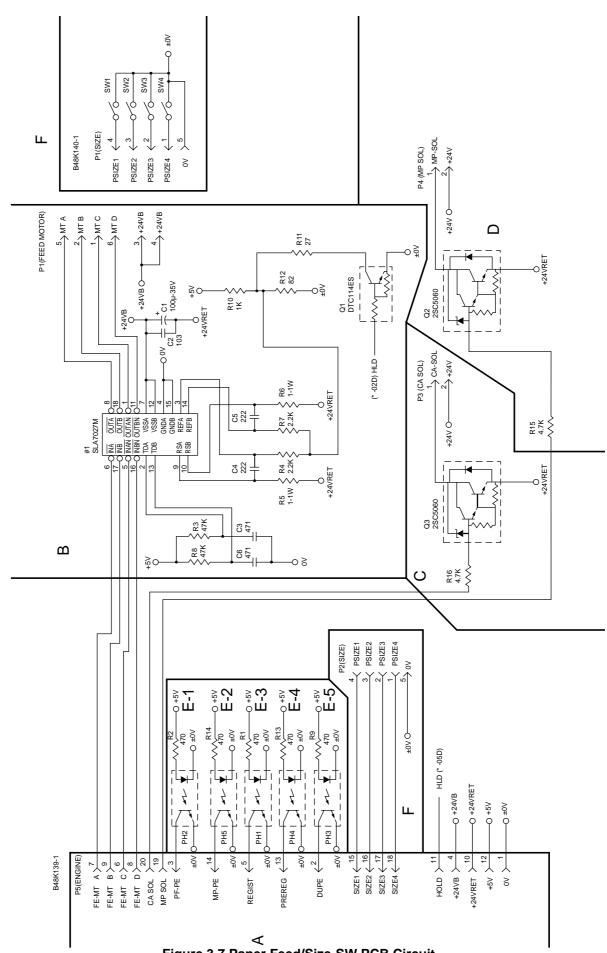


Figure 3.7 Paper Feed/Size-SW PCB Circuit

3. DISPLAY CIRCUIT

3.1 Outline

The control panel of this printer has four LED lamps, one LCD display, and eight switches.

The control panel is connected to the Main PCB and its functions are as follows:

- (1) The LCD shows the printer status and error message in alpha-numeric characters.
- (2) The LED lamps indicate the operating conditions of the printer.
- (3) The printing mode and LCD brightness can be changed by switches.

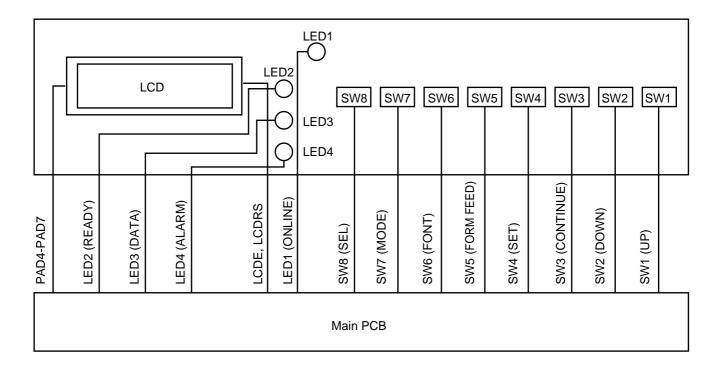


Figure 3.8 Display Circuit

3.2 Operation

Indicators on the control panel (LED lamps and LCD) are controlled by the video controller circuit.

All the switch signals are input to the video controller circuit.

Signals Descriptions:

LED1 - LED4 On-off control for the respective LED lamps.

Illuminating when Low and extinguished when High.

PAD4 - PAD7 LCD control signal.

LCDRS A signal to distinguish PAD4 - PAD7 into command and data.

LCDE A signal to start the operation.

SW1 - SW8 Input signals from the switches.

Going Low when each switch is pressed.

4. LOW-VOLTAGE POWER SUPPLY ASSY

4.1 Outline

The low-voltage power supply assy consists of the low-voltage generating block (hereinafter the DC block) and the heater drive circuit block to turn the heater on (hereinafter the AC block).

When the power switch (SW1) is turned on, AC power is supplied to the low-voltage power supply assy.

The DC block generates +5 VDC, and +24 VDC.

When the heater is turned on, AC power is supplied to the AC block under control of the heater on-off signal from the engine controller.

+24V output is reserved in the DC block, for the cooling fan for the low-voltage power supply assy.

4.2 Protection Functions

Each of the power supply circuits, +5V, and +24V, has a protection function to prevent the circuit from accident by automatically cutting off the power supply in the case of a over-voltage or over-current of the load.

When the cooling fan stops to rotating, an over-voltage protection or a short-circuit protection function is activated, and all the DC power supplies are cutoff.

In this case check and clear the cause on the load after turning the power switch (SW1) off, and then switch the power on again at least one minute after the power shut-down.

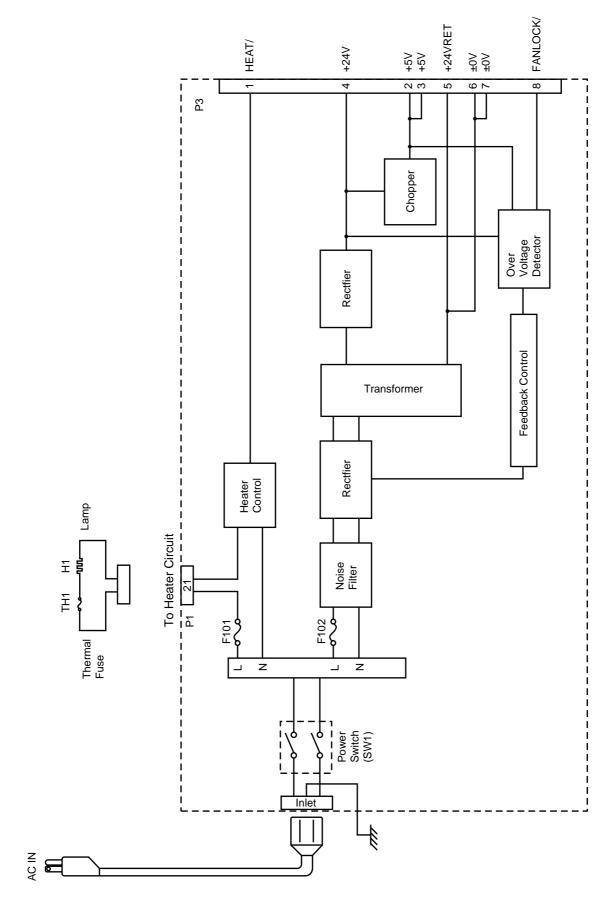


Figure 3.9 Low-Voltage Power Supply PCB Block Diagram

5. HIGH-VOLTAGE POWER SUPPLY ASSY

5.1 Outline

The High-Voltage Power Supply Assy supplies the high-voltage for the charging roller, the developer cylinder and the transfer roller according to the engine CPU's control signals.

The block diagrams are shown Fig 3.10 and 3.11.

5.2 Operation of the Components of the High-Voltage Power Supply Assy

(1) Primary charging

When input signal/HV1AC gets the Low level, the primary high-voltage AC is applied to the primary charging roller. And when input signal/HV1DC gets the Low level, the primary high-voltage DC is applied to the primary charging roller. The primary high-voltage DC changes with developer bias DC according to values of the input signal DNSTY which is for print density adjustment.

(2) Developer bias

When input signal/DBAC gets the Low level, the developer bias AC is applied to the developer cylinder. And when input signal/DBDC gets the Low level, the developer bias DC is applied to the developer cylinder. The developer bias DC changes according to values of the input signal DNSTY which is for print density adjustment, like the primary high-voltage DC.

(3) Transfer charging

Transfer bias is controlled by the input signals HVT1 - 4 and HVTFB. When the input signal/ HVT1 gets the Low level, negative high-voltage is applied to the transfer roller. When the input signal/HVT2 gets the Low level, positive high-voltage is applied to the transfer roller. When the input signal/HVT3 gets the Low level, positive high-voltage about 1100 times that of the input signal HVT4 is applied to the transfer roller. The input signal HVTFB has voltage about 1/1100 times the positive voltage generated on the transfer roller. Once the engine CPU is informed of this voltage, the bias applied to the transfer roller can be known.

Note: The HVT2 signal generates high-voltage irrespective of the HVT4 signal.

(4) Toner sensing

Voltage levels of the input signals TONER1 and TONER2 allow the engine CPU to check if the cartridge is set or not and if toner is empty. The TONER1 carries the voltage generated at the toner sensor and the TONER2 carries the developing bias output value.

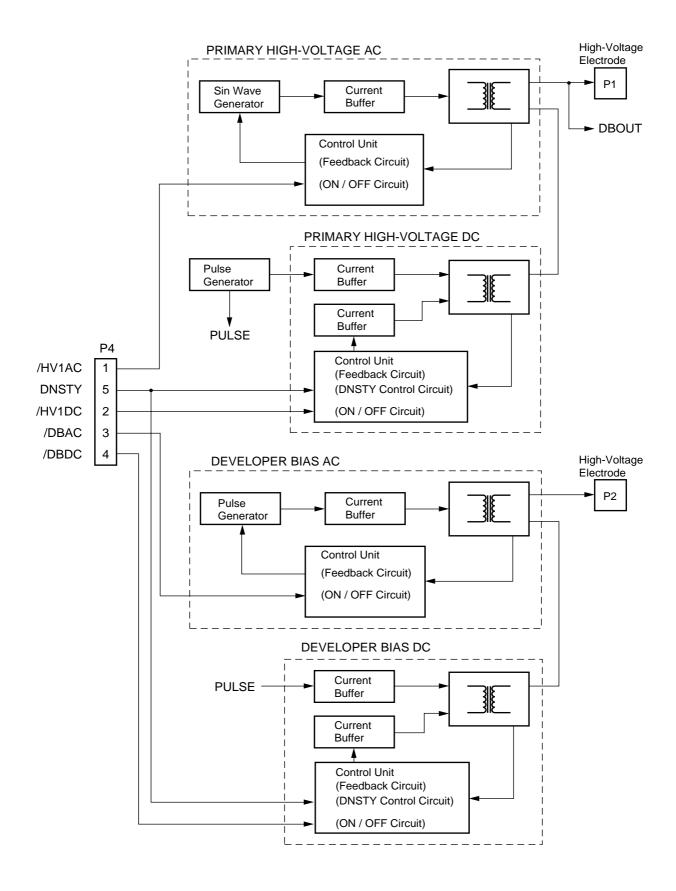


Figure 3.10 High-Voltage Power Supply Block Diagram 1

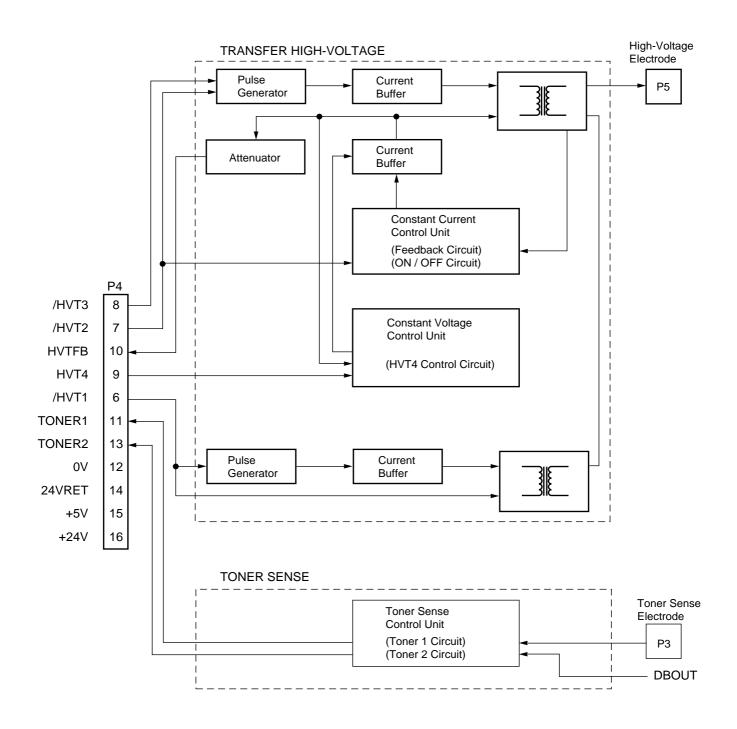


Figure 3.11 High-Voltage Power Supply Block Diagram 2

CHAPTER IV MECHANICAL SYSTEM

Safety Precautions

To prevent the creation of secondary problems by mishandling, observe the following precautions during maintenance work.

- (1) Always turn off the power before replacing parts or units. When having access to the power supply, be sure to unplug the power cord form the power outlet.
- (2) Be careful not to lose screws, washers, or other parts removed for parts replacement.
- (3) Be sure to apply grease to the teeth of gears.
- (4) When using soldering irons and other heat-generating tools, take care not to damage the resin parts such as wires, PCBs, and covers.
- (5) Before handling the PCBs, touch a metal portion of the equipment to discharge static electricity, or the electronic parts may be damaged due to the electricity charged in your body.
- (6) When transporting PCBs, be sure to wrap them in conductive sheets such as aluminum foil.
- (7) Be sure to reinsert self-tapping screws correctly, if removed.
- (8) Unless otherwise specified, tighten screws to the torque values listed below.
 - Tapping screws

S tight M3 : $7kgf \cdot cm$ B tight M3 x 6 : $5kgf \cdot cm$ M3 x 8 : $7kgf \cdot cm$

Stepped screws


M3 : 7kgf⋅cm M4 : 10kgf⋅cm

- (9) When connecting or disconnecting cable connectors, hold the connector bodies not the cables. If the connector has a lock, always slide the connector lock to unlock it.
- (10) After repairs, check not only the repaired portion but also that the connectors and other related portions function properly before operation checks.

Notes

- On the next page is a disassembly order flow which helps you access the object component.
- Unless otherwise specified, the disassembled parts or components should be reassembled in the reverse order of removal.

■ PRINNTER DISASSEMBLING PROCEDURE

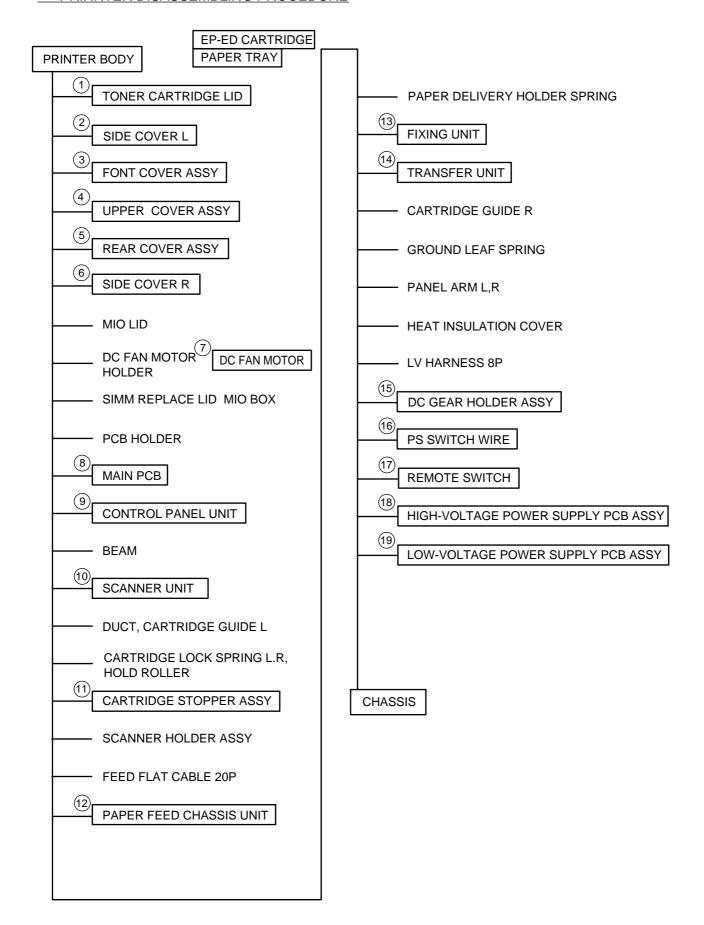

PRINTER BODY

1.1 Configuration

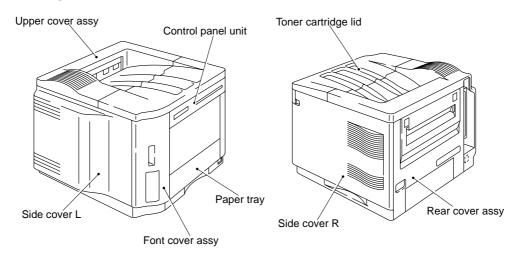


Figure 4.1

1.2 Toner Cartridge Lid

- (1) Remove the supporter from the toner cartridge lid.
- (2) Remove the toner cartridge lid from the upper cover.

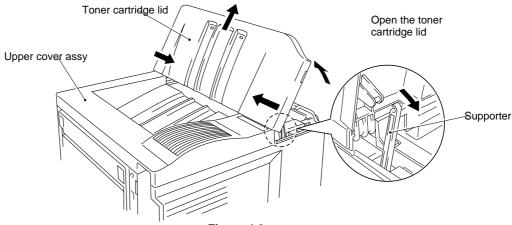


Figure 4.2

1.3 Side Cover L

(1) Release the lock by pinching the lever on the left top surface (A) and remove the cover by pulling it rearward (B).

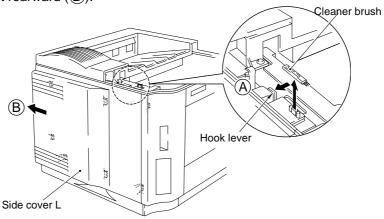


Figure 4.3

1.4 Font Cover Assy

(1) Remove the font cover assy by loosening the screw on the top and releasing the hooks on the bottom and the side.

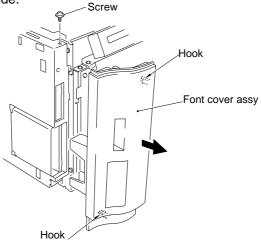


Figure 4.4

1.5 Upper Cover Assy, Rear Cover Assy

1.5.1 Upper cover assy, rear cover assy

(1) Loosen the 4 screws on the rear (the upper 2 screws secure also the upper cover).

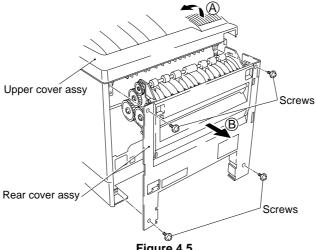


Figure 4.5

- (2) Loosen the top left screw.
- (3) Remove the upper cover assy (A) (Refer to Figure 4.5).
- (4) Remove the rear cover by pulling it rearward (B) (Refer to Figure 4.5).

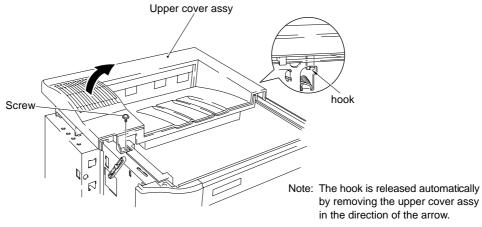


Figure 4.6

1.5.2 Changeover guide, jam remove cover

- (1) Open the jam remove cover by hooking your finger on 2 dents ((A)).
- (2) Remove the jam remove cover with its center part opened by bending the arm of the boss both on sides (B) toward the front (C).
- (3) Remove the changeover guide from the boss by bending the right hook (viewed from the rear) of the rear cover (\mathbb{D}) , then remove the changeover guide (\mathbb{E}) .

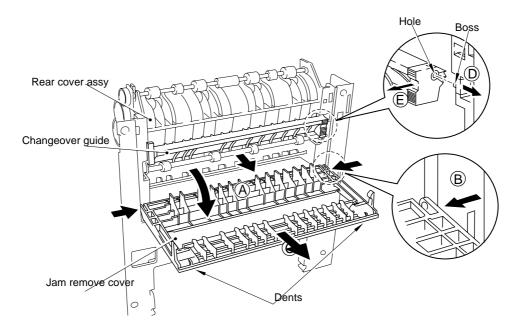


Figure 4.7

1.6 Side Cover R

(1) Remove the side cover R by releasing the 4 hooks.

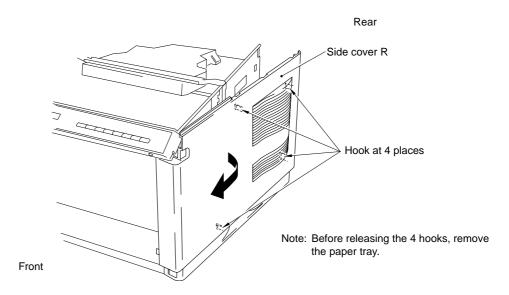


Figure 4.8

1.7 DC Fan Motor 97-P031

- (1) Remove the DC fan motor from the DC fan motor holder by loosening the two screws.
- (2) Loosen the screws securing the PCB holder and remove the entire DC fan motor holder.
- (3) Remove the fan harness connector from the main PCB assy.


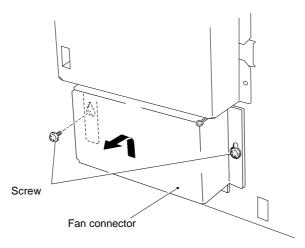


Figure 4.9

1.8 Main PCB

Note: If replacing the main PCB with a new one, follow the step in the attached insertion sheet with the new main PCB to install it.

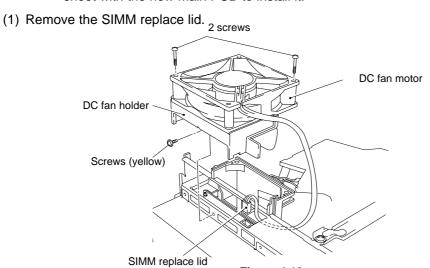

(2) Remove the MIO box.

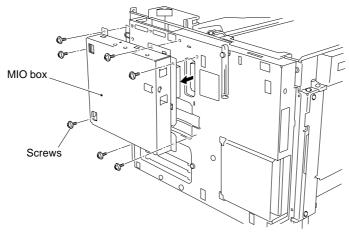


Figure 4.11

Figure 4.10

(3) Remove the PCB holder by loosening PCB holder fixing screws, 2 centronics connector screws and 2 RS-232C connector screws.


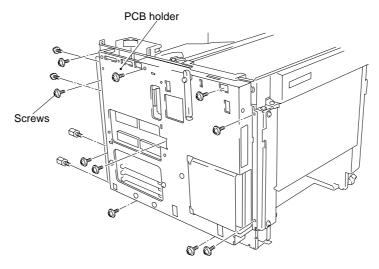


Figure 4.12

- (4) Remove the switch flat cable 21P and the feed flat cable 20P.
- (5) Remove the fan harness 3P, the fuser harness 4P, the SCN harness 4P, the SCN flat cable 6P, the DC motor harness 4P, the HV harness 16P and the LV harness 8P.

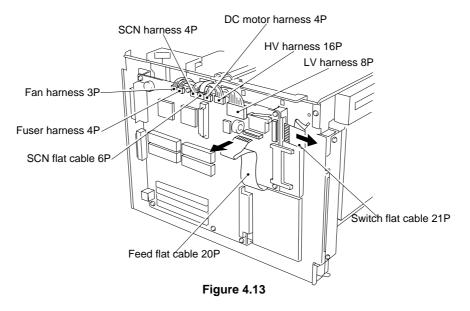

(6) Remove the main PCB assy.

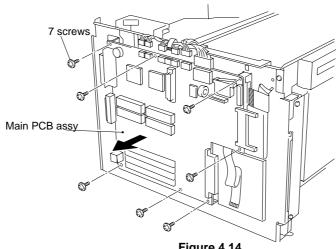


Figure 4.14

1.9 Control Panel Unit


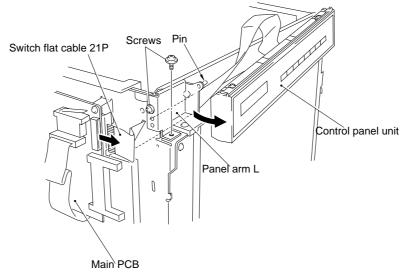


Figure 4.15

- (1) Remove the left side the control panel from the arm L by loosening the screws of the panel arm L.
- (2) Remove the switch flat cable 21P from the main PCB.
- (3) Remove the control panel from the right panel arm R pin by sliding the control panel to the right.

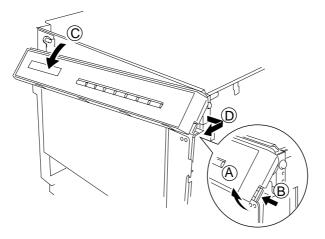

- A Tilt the control panel unit.
- (B) Pinch the lever.
- While pinching the lever, rotate, downward toward you, the control panel unit on the right pin taken as a fulcrum.
- Remove the control panel unit.

Figure 4.16

(4) Release the panel sheet 8 hooks to remove the panel sheet from the control panel.

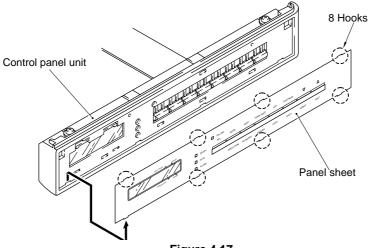


Figure 4.17

1.10 Scanner Unit

- (1) Unplug the LD PCB harness (scanner flat cable) connector (6P), and SCN harness connector (4P).
- (2) Remove the beam from the body by loosening the screws.
- (3) Remove the scanner unit from the body by loosening the screws.

Caution: Do not disassemble the scanner unit, it can be only adjusted at the factory.

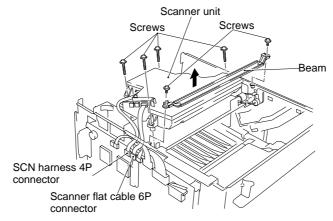


Figure 4.18

1.11 Cartridge Stopper Assy

- (1) Loosen 4 screws and remove the scanner mount plate in the direction of the arrow (the ground leaf spring is also released at the same time.)
- (2) Release the hook by bending the arm of the cartridge stopper assy (A), slide the cartridge stopper assy to the left (B) and the remove the cartridge stopper assy (C).



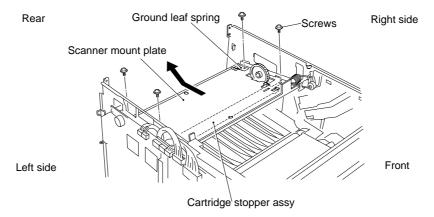


Figure 4.19

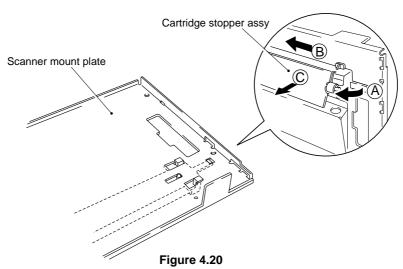


1.12 Paper Feed Chassis Unit

(1) Pull out the unit by loosening the 8 screws (4 screws for front and 4 screws for bottom).

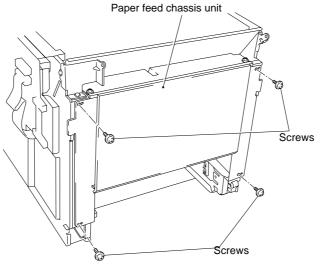

Note: When installing the paper feed chassis unit, screw the left chassis of this paper feed chassis unit, set the paper tray, displace the right chassis of this unit up to the paper tray and screw them.

(2) Remove the paper hold front and paper hold rear by pinching the pawl of the paper hold front with pliers.

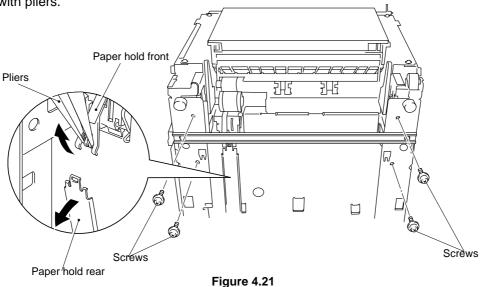

(3) Release the left cartridge hold roller and remove the cartridge guide L (by loosening the screw and releasing the hook) then pull out feed flat cable 20P.

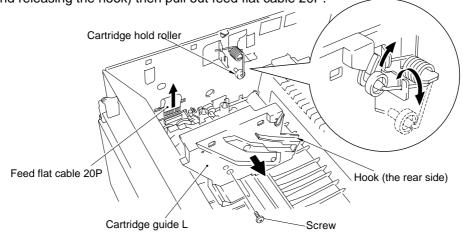


Figure 4.22

(4) Remove the paper feed chassis unit.

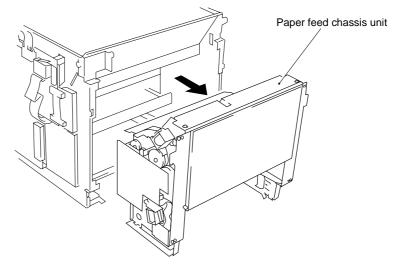


Figure 4.23

1.13 Separation Pad Assy

- (1) Remove the paper pick-up roller assy and roller collar. (Refer to subsection 1.22)
- (2) Remove the separation pad assy by pulling it out from the paper feed guide upper.

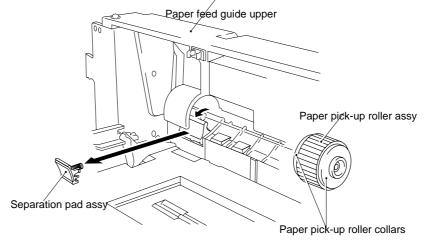


Figure 4.24

(3) Remove the spring from the separation pad assy.


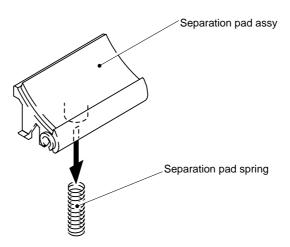


Figure 4.25


1.14 MP PE Sub Actuator

(1) Pull out the actuator upward from the MP tray assy (pay attention to the hook because it is fragile).

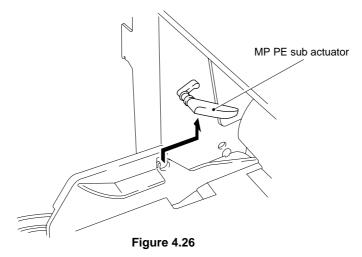

1.15 P Feed /Size-SW PCB Assy

(1) Put the 3 chassis L tabs to their original position.

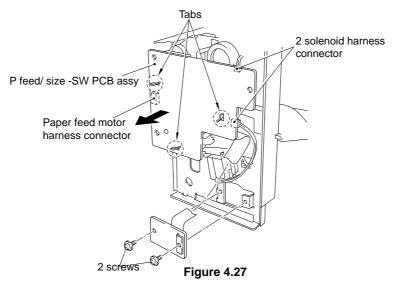

- (2) Unplug the 2 solenoid connector and the paper feed motor harness connector.
- (3) Loosen the 2 screws of the size-sw PCB.

1.16 Side-Switch Spring

(1) Pull out the size-switch spring.

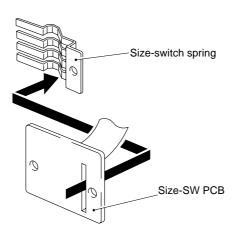


Figure 4.28

1.17 Regist sensor actuator

(1) Remove the actuator by shifting it to the left from the chassis hole.

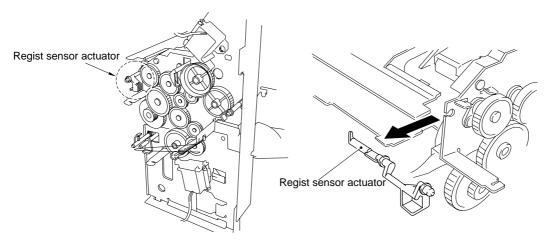


Figure 4.29

1.18 MP Paper Detection Actuator

(1) Remove the actuator by removing the 2 bearings from the roller holder. This operation should be carried out with the PCB removed.

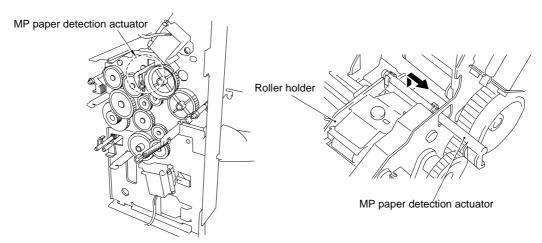


Figure 4.30

1.19 PE Sensor Actuator MP

(1) Pull out the actuator by shifting it to the right from the chassis hole.

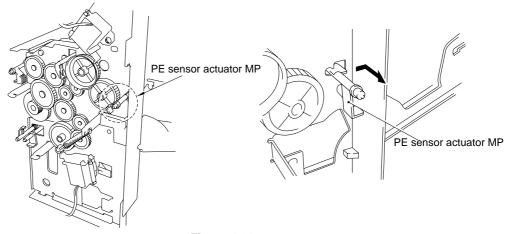


Figure 4.31

1.20 Tray Sensor Holder

- (1) Disengage the DU (Duplex) detection actuator from the hook and slide it to the outside.
- (2) Loosen the screw and remove the holder by lifting it from the chassis.

PE sensor actuator tray, PE actuator link, DU detection actuator

- 1) Remove the PE actuator link from the PE sensor actuator tray.
- 2) Remove the PE actuator link from the tray sensor holder.
- 3) Remove the PE sensor actuator tray from the tray sensor holder.
- 4) Remove the DU detection actuator from the tray sensor holder.

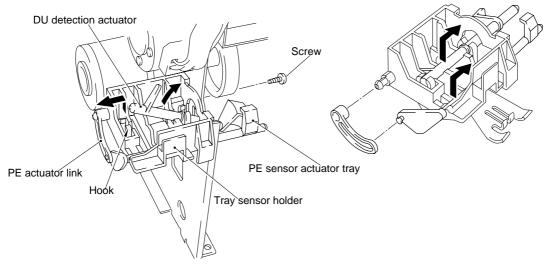


Figure 4.32

1.21 Roller Holder

- (1) Remove the gear 28.
- (2) Loosen and pull out the 2 screws.

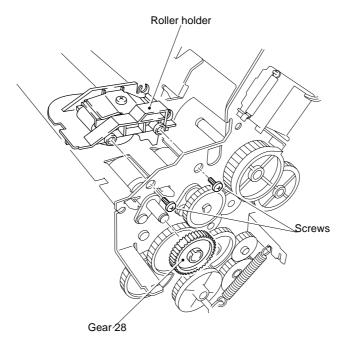


Figure 4.33

1.22 Paper Pick-up Roller Assy, Bearing

(1) Pull out the MP paper pick-up gear 35 and the tray paper pick-up gear 35, from the paper pick-up roller shafts.


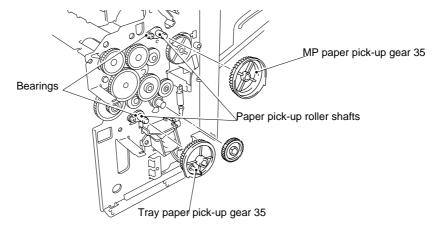


Figure 4.34

(2) Loosen the bearing screws and pull out the paper pick-up rollers.

*When only the paper feed rollers are to be replaced, they can be replaced without removing the paper feed unit (with the body assembled).

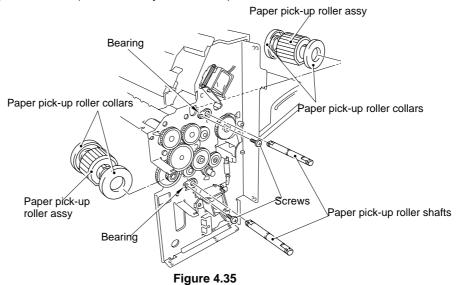

- (3) Pull out the paper pick-up roller shafts.
- (4) Remove the paper pick-up roller collars from the paper pick-up rollers assy.

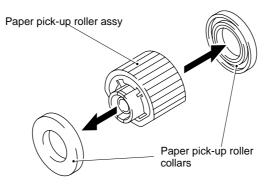


Figure 4.36

1.23 Paper Pick-up Solenoid

(1) Remove each solenoid by loosening their screw.

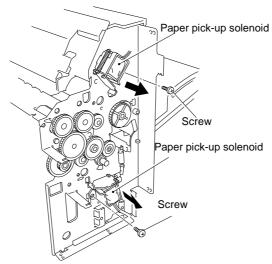


Figure 4.37

1.24 Paper Feed Motor Assy

(1) Pull out the paper feed motor assy by loosening its 2 screws.

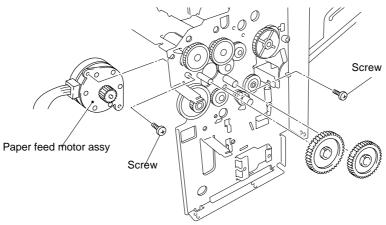


Figure 4.38

(2) For each assy, loosen a screw and pull out the bearing and the 6 washers. See the picture below.

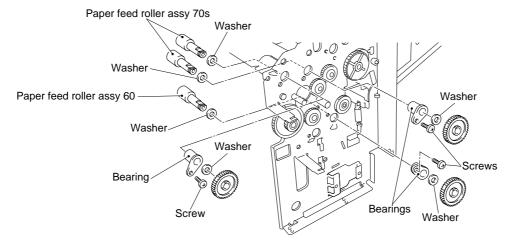


Figure 4.39

1.25 MP Tray Cover

(1) Remove the MP tray cover from the paper feed chassis unit by bending its hook on both sides.

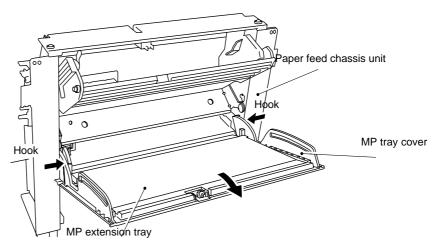


Figure 4.40

(2) Remove the MP extension tray from the MP tray cover by bending the former.

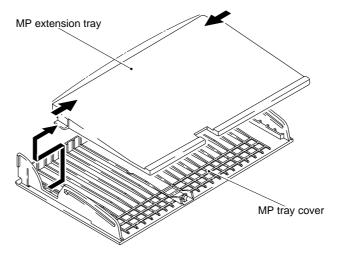


Figure 4.41

1.26 MP Tray Assy

(1) Remove the MP tray assy from the MP tray cover by bending its bosses.

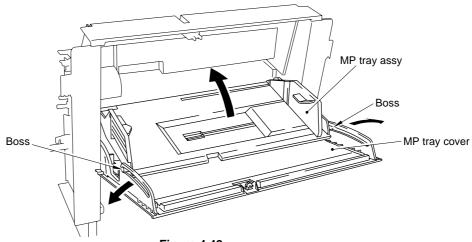


Figure 4.42

- (2) Remove the 2 fixing bushes.
- (3) Remove the MP tray assy.

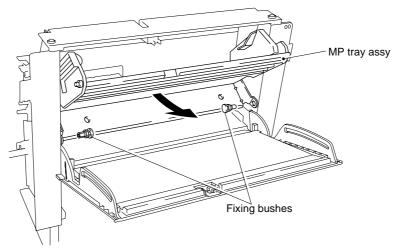


Figure 4.43

(4) Remove the MP tray assy from the MP release plate bending its bosses. The MP tray can be easily removed if it is slanted.

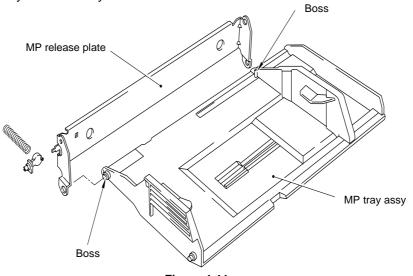


Figure 4.44

1.27 Paper Path Separation Plate, Paper Path Separation Film

(1) Remove them from the paper feed guide lower by bending them.

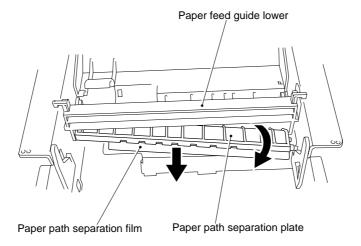


Figure 4.45

1.28 Latch

(1) Remove the latch from the paper feed guide upper by releasing the 2 hooks.

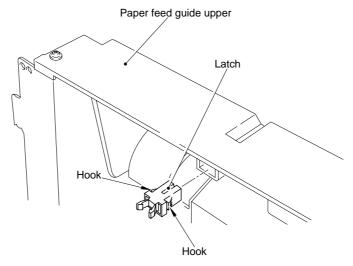


Figure 4.46

1.29 Fixing unit (for both 120V and 230V, the only difference is the halogen heater)

(The fixing unit can be disassembled even after removing the rear cover in section 1.6).

- (1) Release the hook of the heater lead wire connector (2P) by pinching the connector and pull it out upward (to remove it from the low-voltage power supply assy).
- (2) Pull out the fixing PCB connector (4P) to the rear (\widehat{A}) .
- (3) Loosen the 2 screws which are securing from the rear, and remove the fixing unit by pulling it to the rear.

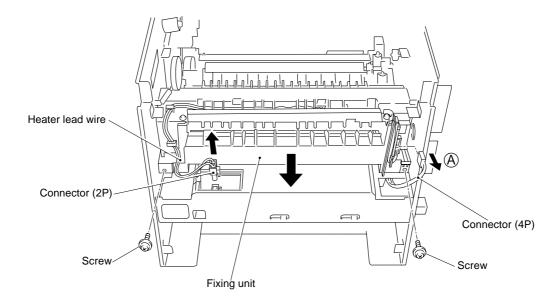


Figure 4.47

(4) Take off the halogen heater from the heater support spring, remove the halogen heater by pushing it and pulling the heater support spring at the same time $(\widehat{\mathbb{A}})$.

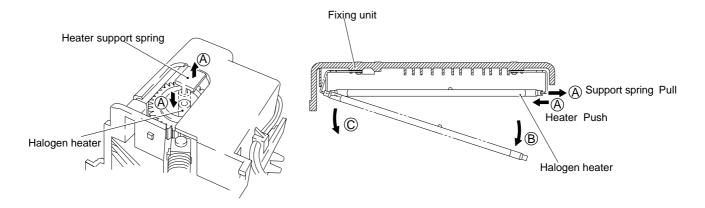


Figure 4.48 Figure 4.49

(5) Loosen 4 screws and remove the thermistor lead wire connector (2P) of the fixing PCB (see Figure 4.51), and remove the fixing unit cover by detaching the wire from the hooks of the fixing unit chassis.

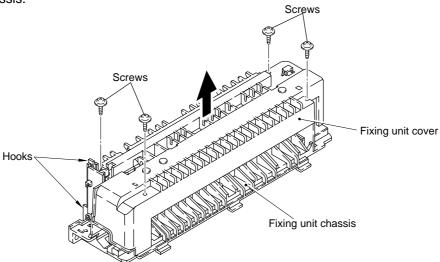


Figure 4.50

(6) Loosen a screw and remove the fixing PCB assy.

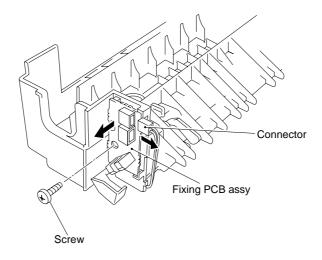


Figure 4.51

(7) Release the left hook and take off the paper delivery actuator.


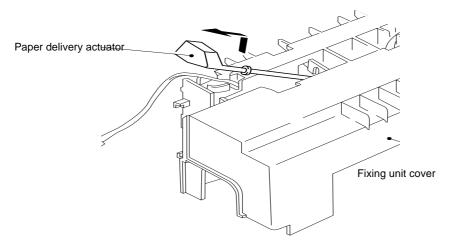


Figure 4.52

(8)

1) Remove the fixing heat insulation cover (by loosening the 2 screws), the pressure roller spring and pressure roller bearing on both sides, and the pressure roller.

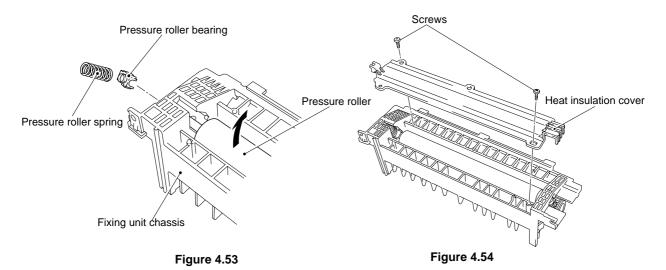

- 2) Remove the retaining rings (on both sides).
- 3) Remove the HR gear, loosen the screw and remove the spring washer, remove the left and right HR bearings and the heat roller by sliding it.

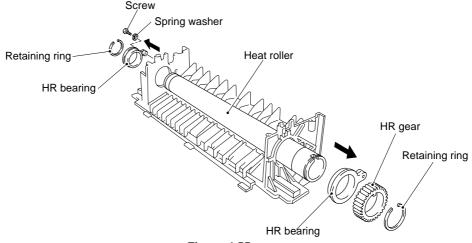


Figure 4.55

1.30 Transfer Unit

- (1) Loosen a screw.
- (2) Release the 3 right hooks, (see Figure 4.57) lift the right part of the unit ((A)) and slide it to the right ((B)) to take off the left part from the main chassis L. Remove the transfer unit from the body by lifting the former.

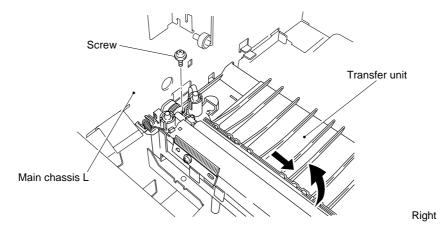


Figure 4.56

- (3) Open the transfer base hook and take off the left bearing (white) from the hook $(\widehat{\mathbb{A}})$. Lift the left side $(\widehat{\mathbb{B}})$, slide it to the left $(\widehat{\mathbb{C}})$ and take off the roller shaft from the right bearing (black) $(\widehat{\mathbb{D}})$.
- (4) Remove the transfer roller assy.

Caution: Do not touch the sponge rubber roller when replacing the transfer roller (the roller with hand grease or clasped too strongly may result in poor printing quality).


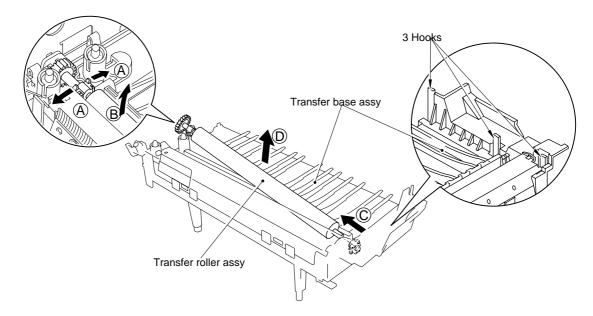


Figure 4.57

1.31 DC Gear Holder Assy

- (1) Remove the DC motor connector, then remove the paper delivery holder spring.
- (2) Loosen the 4 screws and remove the DC gear unit from the body.
- (3) Remove the paper delivery gear assy, the gears, the gear 48 spring, and the washer.
- (4) Loosen the 3 screws and remove the DC motor assy from the gear holder.

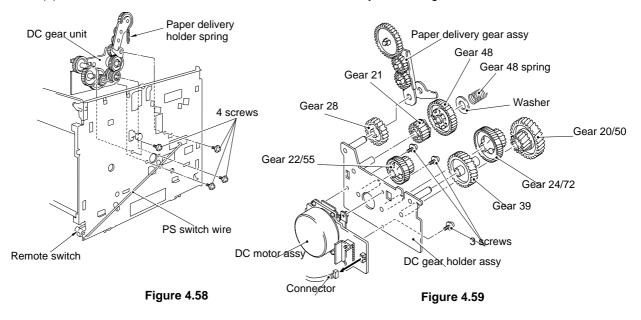

1.32 PS Switch Wire, Remote Switch

- (1) Pull out the PS switch wire from the remote switch and the switch attachment. Lift slightly the wires when pulling them out. This is in order to release the chassis caught at 2 places.
- (2) Remove the remote switch from the chassis.


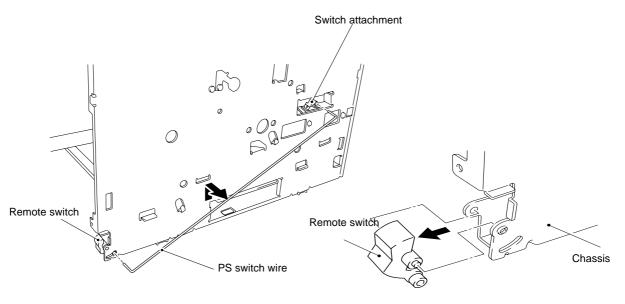


Figure 4.60 Figure 4.61


1.33 High-Voltage Power Supply PCB

- (1) Loosen the 2 screws.
- (2) Hold the head of 4 resin spacers and lift this side of PCB (A).
- (3) Slide the PCB to the opposite side (B).

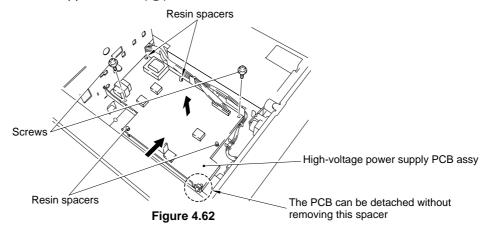

1.34 Low-Voltage Power Supply PCB Assy

(1) Be sure to remove the heat insulation cover before removing the low-voltage power supply block.

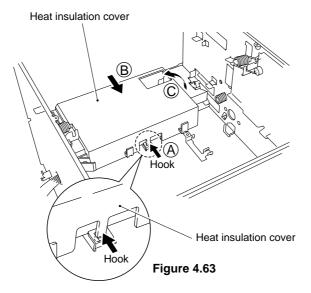

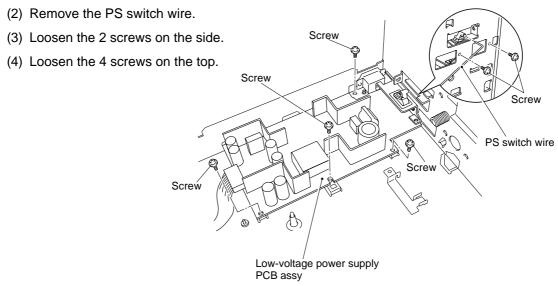


Figure 4.64

1.35 Toner Cartridge (EP-ED Cartridge)

(1) Remove the toner cartridge from the body.

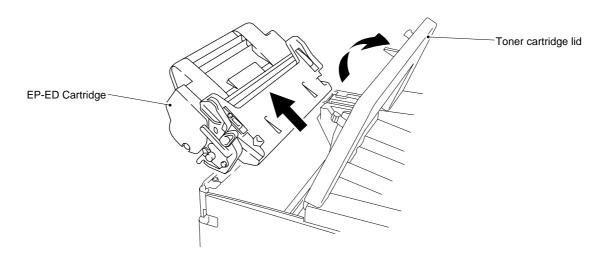


Figure 4.65

1.36 Paper Tray

- (1) Release the roller holder fixing pawl and remove the roller holder by pulling it out upward.
- (2) Remove the roller.
- (3) Remove the separation pad assy (pull it out by turning it) .

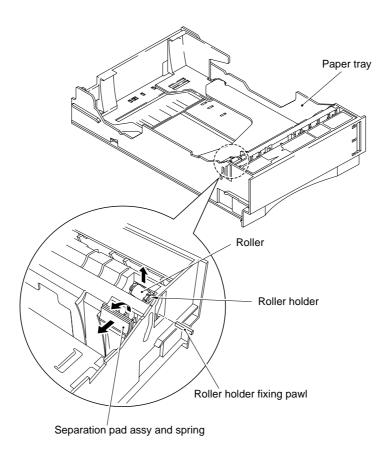


Figure 4.66

(4) Remove the tray gear holder from the other side by loosening the 3 screws and remove the gear 56T link.

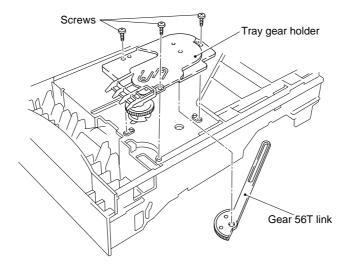


Figure 4.67

CHAPTER V MAINTENANCE AND SERVICING

1. PERIODICAL REPLACEMENT PARTS

Periodical replacement parts are the parts to be replaced periodically to maintain product quality at same level (in other words the parts which would affect the product greatly if they lost their function even if they are not damaged or there is no change in their appearance.)

It is recommended to replace such parts on the occasion of a periodical service which is carried out before or after the specified number of sheets are used, whichever more immediate to that time.

This machine contains no periodical replacement parts.

2. CONSUMABLE PARTS STANDARD ENDURANCE TABLE

The table below shows the suspected mean life (in terms of number of sheets) of the consumable parts, that is the parts which subject to deterioration or damage, should be replaced at least once during the period of warranty of the product only when the parts have such a failure.

Table 5.1

No.	Description	Part No.	Qty.	Service life (number of print)	Remarks
1	Fixing unit	UH2791001 (UH2601001)	1	(100,000)	120V
	Fixing unit	UH2792001 (UH2602001)	1	(100,000)	230V
2	Pick-up roller assy MP Pick-up roller assy cassette	UH2362001 UH2362001	2	(100,000)	
3	Separation pad MP Separation pad cassette	UH2393001 UH2393001	2	(100,000)	
4	Transfer roller assy	UH2788001 (UH2323001)	1	(100,000)	

Note: The above table shows only estimated value, so these value are subject to change without prior notice.

3. LIST OF STANDARD TOOLS

The standard tool set required for servicing the printer is as listed below. These tools are commercially available on the market.

Table 5.2

No.	Description	Remarks
1	Tool box	
2	Lead cable	
3	Feeler gauge	
4	Compression spring scale (0 – 1kg)	For checking cassette spring strength
5	Phillips screwdriver	M4, M5
6	Phillips screwdriver	M3, M5
7	Phillips screwdriver	M4, M5
8	Phillips screwdriver	M4, M5
9	Flat-blade screwdriver	
10	Precision flat-blade screwdriver	
11	Allen wrench set	
12	File, fine	
13	Allen (hex) screwdriver	
14	Diagonal-cutting pliers	M4
15	Needle-nose pliers	
16	Pliers	
17	Snap-ring pliers, ext. 19 – 30 mm	
18	Crimper	
19	Tweezers	
20	Ruler	
21	Mallet, plastic head	
22	Brush	
23	Penlight	
24	Bottle, plastic	
25	Solder	
26	Desoldering wick	
27	Oiler	
28	Jar, plastic	
29	Digital logic tester	
30	Digital multimeter	
31	Soldering iron	
32	Digital memory scope or syncroscope	
	(100 MHz or over)	
33	ROM remover	

4. LIST OF LUBRICANTS AND CLEANERS

Table 5.3

No.	Material name	Components	Use	Remarks
1	Alcohol ethyl (pure or denatured) or isopropyl (pure or denatured)	C ₂ H ₅ OH, (CH ₃) ₂ CHOH	Cleaning of plastic, rubber, and external parts	Purchase locally
2	MEK (methyl ethyl ketone)	CH ₃ CO-C ₂ H ₅	Cleaning for oil and toner stains	Purchase locally Highly flammable; keep away from flame
3	Lubricating oil (silicon grease KS64F)		For fuser	Tool No. ZX-43D Equivalent oil may be used
4	Lubricating oil (Moly kote EM-30L)		For drive mechanism	Tool No. ZX-43N Equivalent oil may be used

CHAPTER VI TROUBLESHOOTING

1. INTRODUCTION

1.1 Initial Check

(1) Operating environment

Check if:

- 1) The source voltage stays within ±10% from the rating voltage shown on the rating label.
- 2) The printer is installed on a solid, level surface.
- 3) The room temperature is maintained between 10°C and 32.5°C. The relative humidity is maintained between 20% and 80%.
- 4) The printer is not exposed to ammonia fumes or other harmful gases.
- 5) The printer is not located in a hot or humid area (such as near water or a humidifier), in a cold place (such as outlet of an air conditioner), near open flames or in a dusty place.
- 6) The printer is not exposed to direct sunlight.
- 7) The room is well-ventilated.

(2) Printer paper

Check if:

- A recommended type of print paper is being used (if the paper is too thick or too thin, or tends to curl, paper jams or paper feed problems may occur, or prints may be blurred).
- 2) The print paper is damped. [If so, use fresh paper, and check whether the print quality improve or not.]

(3) Consumables

Check if:

1) The message "16 TONER EMPTY" is not shown on the status display when a cartridge is installed in the printer. [If the message is displayed, replace the cartridge with a new one. If blank spots occur on prints, take out the EP-ED cartridge and slowly rock it to distribute the toner evenly.]

(4) Others

Check if:

The transfer guide and feed guide are clean. [If not, clean them with a damp cloth.]

Condensation:

When the printer is moved from a cold room into a warm room in cold weather, condensation may occur inside the printer, causing various problems as below:

- Condensation on the optical surfaces such as the scanning mirror, lenses, the reflection mirror and the protection glass may cause the print image to be light.
- 2) If the photosensitive drum is cold, the electrical resistance of the photosensitive layer gets high, making it impossible to obtain a correct contrast in printing.
- 3) Condensation on the pick-up guide and feed guide plates may cause paper feed troubles.

If condensation has occurred, wipe the effected units or parts with a dry cloth.

If an EP-ED cartridge is unsealed soon after moved from a cold room to a warm room, condensation may occur inside the cartridge, which may cause incorrect image. Instruct the user to allow the cartridge to come to room temperature before unsealing it. This will take one to two hours.

1.2 Basic Procedure

If a malfunction or incorrect print is appeared, make an initial check, then follow the basic procedure below:

- (1) Check the status display. If any message is shown, see Section 4 for troubleshooting.
- (2) If an incorrect image is found, see Section 3.1 to determine the defect type and Section 3.2 for image troubleshooting.

2. TEST PRINTING AND MECHANICAL CHECK

2.1 Test Printing

If an image problem occurs, follow the procedure below to produce a test print.

- 1) Enter the offline mode.
- 2) Press the SHIFT and TEST switches simultaneously, so the printer enters the test print mode.
- Press the ▲ or ▼ switch to appear the message "TEST PRINT" then press the SET switch.

The message "05 TEST PRINT" will appear on the status display of the control panel and the DATA lamp will come on. Then, the printer will produce the test print.

4) Determine the image trouble type and see Section 3 for troubleshooting.

TEST PRINT

3. IMAGE DEFECTS

3.1 Image Defect Examples

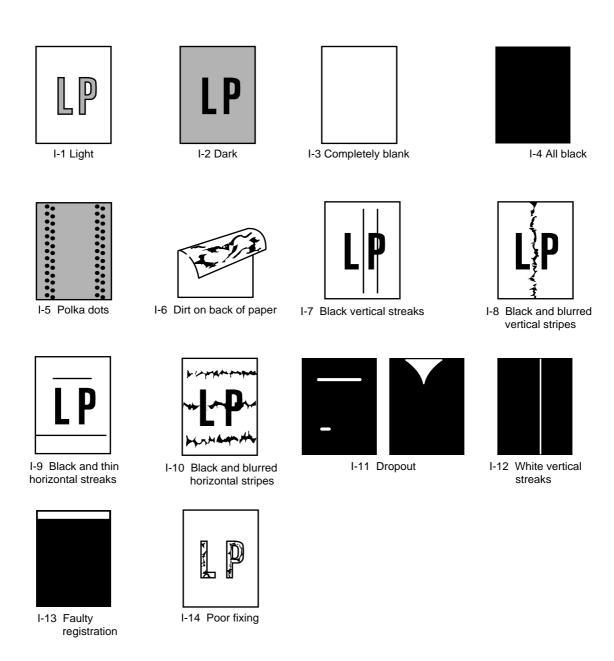


Figure 6.2

3.2 Troubleshooting Image Defects

I-1 Light

Possible cause	Step	Check	Result	Remedy
Toner shortage	1	Does printed image improve when the EP-ED cartridge is replaced?	Yes	Replace EP-ED cartridge.
ECONOMY mode	2	Is the ECONOMY mode active?	Yes	Cancel the ECONOMY mode.
Printing density setting	3	Does printed image improve when printed density setting is changed on the control panel?	Yes	Adjust the proper setting on the control panel.
_	4	During a printing, open the toner cartridge lid in the printer and pull out the EP-ED cartridge. Open the drum shutter of the EP-ED cartridge and check the toner image on the drum. Is the toner image before transfer is light?	Yes	Go to the Step 9.
Paper failure	5	Does the print quality improve when fresh paper is used?	Yes	Use recommended paper.
Transfer roller failure	6	Does the print quality improve when print is made with transfer roller changed?	Yes	Clean the transfer roller [Use dry lint-free paper (producing little paper dust) to clean the transfer roller. Never use solvents] and, if dirts subsist, replace the transfer roller assy.
Transfer input signal error	7	Do the pins 7 and 8 of the connector P6 on the main PCB have the following value respectively when a sheet of paper is fed from the MP tray? P6-7 pin (HVT2) Change in voltage from 15V approx. to 0V about 1 second after paper feeding. P6-8 pin (HVT3) Change in voltage from 9V approx. to 0V just when the voltage at the 7 pin changes from 0V to 15V.	No	Replace the main PCB assy or the harness.
Dirt on power supply terminal	8	Clean the transfer roller right end bearing, the check continuity between the transfer roller	No	Clean the contact to assure the continuity.
Failure in the transfer high-voltage circuit		power supply spring and the terminal of the high-voltage transfer unit. Is there continuity?	Yes	Replace the high-voltage power supply assy.
Insufficient LD light	9	Does print quality improve when the scanner unit is improved?	Yes	Replace the scanner unit or the harness.

Continued to the following page

Possible cause	Step	Check	Result	Remedy
Development input signal error	10	Do the pins 3, 4 and 5 of the connector P6 on the main PCB have the following value respectively when a sheet of paper is fed from the MP tray? P6-3 pin (DBAC) Change in voltage from 6V approx. to 0V just when a sheet of paper is fed from the registration unit. P6-4 pin (DBDC) Change in voltage from 9V approx. to 0V just when a sheet of paper is fed from the registration unit. P6-5 pin (DNSTY) Change in voltage to 2.5V just when a sheet of paper is fed.	No	Replace the scanner unit or the harness.
Dirt on power supply terminal	11	Is there any dirt on the cartridge side development terminal of the transfer unit and on the terminal of the high-voltage power	No	Clean the contacts to assure the continuity.
development high-voltage circuit		supply development unit? (is there continuity between them?)	Yes	Replace the high-voltage power supply PCB assy.

I-2 Dark

Possible cause	Step	Check	Result	Remedy
Density setting	1	Does printed image improve when density setting is changed on the control panel?	Yes	Adjust the proper setting on the control panel.
EP-ED cartridge	2	Does printed image improve when the EP-ED cartridge is replaced?	Yes	Replace the EP-ED cartridge.
Dirt on the grounding terminal	3	Does printed image improve when continuity is improved by cleaning the EP-ED cartridge grounding terminal and the printer unit grounding terminal?	Yes	Clean the contacts to assure the continuity.
Charging input signal error	4	Do the pins 1, 2 and 5 of the connector P6 on the main PCB have the following value respectively when a sheet of paper is fed from the MP tray? P6-1 pin (HV1AC) Change in voltage from 6V approx. to 0V just when a sheet of paper is fed. P6-2 pin (HV1DC) Change in voltage from 9V approx. to 0V just when a sheet of paper is fed. P6-5 pin (DNSTY) Change in voltage to 2.5V just when a sheet of paper is fed.	No	Replace the main PCB assy or the harness.
Dirt on power supply terminal	5	Is there any dirt on the cartridge side charging terminal of the transfer unit and on the terminal of the high-voltage power supply charging unit?	No	Clean the terminal to assure the continuity.
Failure in the charging high-voltage circuit		(is there continuity between them?)	Yes	Replace the high-voltage power supply PCB assy.

I-3 Completely blank

Possible cause	Step	Check	Result	Remedy
EP-ED cartridge	1	Does printed image improve when the EP-ED cartridge is replaced?	Yes	Replace the EP-ED cartridge.
Development input signal error	2	Do the pins 3, 4 and 5 of the connector? P6 on the main PCB have the following value respectively when a sheet of paper is fed from the MP tray? P6-3 pin (DBAC) Change in voltage from 6V approx. to 0V just when a sheet of paper is fed from the registration unit. P6-4 pin (DBDC) Change in voltage from 9V approx. to 0V just when a sheet of paper is fed from the registration unit. P6-5 pin (DNSTY) Change in voltage to 2.5V just when a sheet of paper is fed.	No	Replace the main PCB assy or the harness.
Failure in power supply terminal	3	Is there any dirt on the cartridge side development terminal of the transfer unit and on the terminal of the high-voltage power supply development unit? (is there continuity between them?)	No	Clean the terminal to assure the continuity.
LD failure Failure in	4	Does print quality improve when the scanner unit is improved?	Yes	Replace the scanner unit or the harness.
development high-voltage circuit			No	Replace the high-voltage power supply PCB assy.

I-4 All black

Possible cause	Step	Check	Result	Remedy
Beam detection error	1	Is the printer hung up with the PRINT message remaining on the display even after a printing when only a copy is printed?	Yes	Replace the scanner unit or the harness.
EP-ED cartridge	2	Does printed image improve when the EP-ED cartridge is replaced?	Yes	Replace the EP-ED cartridge.
Charging input signal error	3	Do the pins 1 and 2 of the connector P6 on the main PCB have the following value respectively when a sheet of paper is fed from the MP tray? P6-1 pin (HV1AC) Change in voltage from 6V approx. to 0V just when a sheet of paper is fed. P6-2 pin (HV1DC) Change in voltage from 9V approx. to 0V just when a sheet of paper is fed.	No	Replace the main PCB assy or the harness.
Dirt on power supply terminal	4	Is there any dirt on the cartridge side charging terminal of the transfer unit and on the terminal of the high-voltage power supply charging unit?	No	Clean the contact to assure the continuity
Failure in the charging high-voltage circuit LD failure		(is there continuity between them?)	Yes	Replace the high-voltage power supply PCB assy and, if the problem is not resolved, replace the scanner unit or the harness.

I-5 Polka dots

Possible cause	Step	Check	Result	Remedy
Failure in static- charge eliminator	1	Is there any dirt on the static-charge eliminator?	Yes	Clean the static-charge eliminator.
Static-charge eliminator grounding failure	2	Is there continuity between the static-charge eliminator and the chassis?	Yes	Ensure the grounding of the static-charge eliminator.
Dirt on the transfer roller	3	Does print quality improve when the transfer roller is replaced?	Yes	Clean the transfer roller [Use dry lint-free paper (producing little paper dust) to clean the transfer roller. Never use solvents] and, if the dirt remains, replace the transfer roller assy.

I-6 Dirt on back of paper

Possible cause	Step	Check	Result	Remedy
Dirt on the PF guide	1	Is there any dirt on the back of the paper feed guide and the jam remove cover near the static-charge eliminator?	Yes	Clean the PF guide or the jam remove cover.
_	2	Open the toner cartridge lid in the printer, pull out the EP-ED cartridge and remove the paper in the printer. Is there already dirt on the back of the sheet thus removed?	No	Go to Step 6.
Dirt on the transfer roller	3	Is there any dirt on the transfer roller?	Yes	Clean the transfer roller and, if the dirt remains, replace the transfer roller assy.
Transfer input signal error	4	Does the voltage at the 6 pin (HVT1) of the connector P6 on the main PCB change from 9V to 0V for about 0.8 seconds?	No	Replace the main PCB assy or the harness.
Dirt on power supply terminal	5	Clean the transfer roller right end bearing, the check continuity between the transfer roller	No	Clean the contact to assure the continuity.
Failure in the transfer high-voltage circuit		power supply spring and the terminal of the high-voltage transfer unit. Is there continuity?	Yes	Replace the high-voltage power supply PCB assy.
Dirt the fixing guide	6	Is there any dirt on the fixing unit inlet guide?	Yes	Clean the fixing unit inlet guide.
Fixing roller grounding failure		Are the upper and lower rollers of the fixing unit securely connected to the chassis via the	No	Ensure the grounding.
Fixing unit failure		diode?	Yes	Replace the fixing unit.

I-7 I-8 Black vertical streaks or Blurred vertical line

Possible cause	Step	Check	Result	Remedy
EP-ED cartridge	1	During a printing, open the toner cartridge lid in the printer and pull out the EP-ED cartridge.	Yes	Replace the EP-ED cartridge.
Fixing unit damaged		Open the drum shutter of the EP-ED cartridge and check the toner image on the drum. Are there vertical stripes on the drum?	No	Replace the fixing unit.

I-9 Black and thin horizontal streaks

Possible cause	Step	Check	Result	Remedy
Beam detection error	1		I	Replace the scanner unit or the harness and, if the problem is not resolved, replace the main PCB assy.

I-10 Black and blurred horizontal stripes

Possible cause	Step	Check	Result	Remedy
Drum or charging roller failure	1	Do stripes appears at 95 mm or 38 mm interval?	Yes	Replace the EP-ED cartridge.
Fixing unit failure	2	Do stripes appears at 80 mm interval?	Yes	Replace the fixing unit.

I-11 Dropout

Possible cause	Step	Check	Result	Remedy
Paper failure	1	Is recommended paper used?	No	Use recommended paper.
Paper soaked	2	Is paper soaked?	Yes	Store the paper in packing paper to keep it from soaking.
EP-ED cartridge	3	Does printed image improve when the EP-ED cartridge is replaced?	Yes	Replace the EP-ED cartridge.
Transfer roller failure	4	Is there any dirt on the transfer roller or is it deformed?	Yes	Clean or replace the transfer roller assy.
Transfer input signal error	5	Do the pins 7 and 8 of the connector P6 on the main PCB have the following value respectively when a sheet of paper is fed from the MP tray? P6-7 pin (HVT2) Change in voltage from 15V approx. to 0V about 1 second after a sheet of paper is fed. P6-8 pin (HVT3) Change in voltage from 9V approx. to 0V when the voltage at the pin 7 changes from 0V to 15V.	No	Replace the main PCB assy or the harness.
Dirt on power supply terminal Failure in the transfer high-voltage circuit	6	Clean the transfer roller right end bearing, the check continuity between the transfer roller power supply spring and the terminal of the high-voltage transfer unit. Is there continuity?	No Yes	Clean the contact to assure the continuity. Replace the high-voltage power supply PCB assy.

I-12 White vertical streaks

Possible cause	Step	Check	Result	Remedy
Toner bias	1	Do white vertical stripes appear like a band?	Yes	Rock the cartridge, set it again in the printer and check again the print quality.
Drum damage	2	Does print quality improve when the EP-ED cartridge is replaced?	Yes	Replace the EP-ED cartridge.
Transfer roller failure	3	Is the transfer roller damaged or deformed?	Yes	Replace the transfer roller assy.
Dirt on the reflecting mirror	4	Is the problem solved when the scanner unit is replaced?	Yes	Clean the reflecting mirror with a cleaning tip or replace the scanner unit.

I-13 Faulty registration

Possible cause	Step	Check	Result	Remedy
Top margin setting error	1	Does self test printing have no problem?	Yes	Check again the top margin setting in the printing data.
Paper load in the cassette	2	Is over-amount of paper than specified load on the cassette?	Yes	Reduce the paper load below the specified limit.
Paper failure	3	Does print quality improve when recommended paper is used?	Yes	Use recommended paper.
Paper failure	4	Is paper curled?	Yes	Use recommended fresh paper without curl.
Improper Y offset setting	5	Does print quality improve when Y offset setting is changed?	Yes	Ajust Y offset setting to an appropriate value.
Jam remove cover failure	6	Is the jam remove cover deformed?	Yes	Replace the jam remove cover.
Failure in regist sensor actuator motion	7	Does the regist sensor actuator operate smoothly?	No	Reassemble the actuator and, if the problem is not resolved, replace the actuator.
Regist sensor failure	8	Is the voltage at the pin 5 of the connector P3 of the main PCB 5V when no paper passes and 0V when paper passes?	No	Replace the paper feed/size- sw PCB assy or the harness and, if the problem remains, replace the main PCB assy.
Paper feed roller failure			Yes	Replace the paper feed roller assy.

I-14 Poor fixing

Possible cause	Step	Check	Result	Remedy
Fixing unit release spacer not removed	1	Is the fixing unit release spacer removed?	No	Remove the fixing unit release spacer.
MEDIA TYPE setting	2	Is the MEDIA TYPE set to TRANSPARENCY?	Yes	Set the MEDIA TYPE to REGULAR or THICK PAPER.
Paper failure	3	Is thick paper over than 36lb (135g/m²) used?	Yes	Instruct the user to use the paper whose thickness is less than the recommended value.
Thermistor failure	4	s the voltage at the pin 3 of the connector P11 of the main PCB is controlled within	No	Replace the fixing unit.
Fixing unit failure		1.80±0.10V during continuous printing?	Yes	Replace the fixing unit.

4. TROUBLESHOOTING OF MALFUNCTIONS

M-1 No DC power supplied

Possible cause	Step	Check	Result	Remedy
PCBs	1	Does any PCB have the short circuit between +24V and 0V,+5V and 0V or +24V and +5V?	Yes	Replace the PCB having the short circuit.
Low-voltage power supply PCB	2	Is the voltage of P4-8 in the low-voltage power supply PCB connector 0V?	Yes	Replace the low-voltage power supply PCB assy.
Main PCB LV harness DC fan motor			No	Replace the main PCB assy, the LV harness or the DC fan motor.

M-2 Malfunction of LCD display on the control panel.

Possible cause	Step	Check	Result	Remedy
LCD module	1	Dose the voltage of the following signals vary to 5V or 0V when the LCD displays are	Yes	Replace the control panel unit.
Control panel PCB		changed through switch operations? (Check following signals using the digital memory scope with the trigger function for	No	Replace the main PCB assy, the switch flat cable or the
Switch flat cable		this check)		control panel unit.
Main PCB		Signal Main PCB Panel PCB LCD PAD4 P1-9 — P1-13 — P2-4 — 7		
		PAD5 P1-5 — P1-17 — P2-3 — 8 PAD6 P1-11 — P1-11 — P2-2 — 9		
		PAD7 P1-4 — P1-18 — P2-1 — 10 LCDRS P1-3 — P1-19 — P2-7 — 4		
		LCDE P1-2 - P1-20 - P2-5 - 6		

M-3 Malfunction of control panel LED lamps.

Possible cause	Step	Check	Result	Remedy
LED lamps	1	Dose the voltage of the following signals stay 0V while the "04 SELF TEST " is displayed	Yes	Replace the control panel unit.
Control panel PCB		after switching the power on and stay 5V for about 0.5 seconds after the message goes off?	No	Replace the main PCB assy or the switch flat cable.
Switch flat cable		(Do the LED lamps turn on and off in response to the signal levels of 0V and 5V?)		
Main PCB		Signal Main PCB Panel PCB LED1(ON LINE) P1-13 — P1-9 LED2(READY) P1-7 — P1-15 LED3(DATA) P1-1 — P1-21 LED4(ALARM) P1-6 — P1-16		

M-4 Malfunction of control panel switches.

Possible cause	Step	Check			Result	Remedy
Mis-operation	1	Are the switchs operated according to the operation manual?			No	Operate the switches correctly following the operation manual.
Switch	2	When a switch is press the following signals ch		•	Yes	Replace the Main PCB assy.
Control panel PCB		Signal SW8(SEL)	Main PCB P1-8	Panel PCB — P1-14 — P1-12	No	Replace the control panel unit or the switch flat cable.
Switch flat cable		SW7(MODE/EMULATION) SW6(FONT/ECONOMY) SW5(FORM FEED/FEEDER)		— P1-12 — P1-10 — P1-8		
Main PCB		SW4(SET/COPY) SW3(CONTINUE/SHIFT)	P1-16 P1-18	— P1-6 — P1-4		
		SW2(DOWN/RESET) SW1(UP/TEST)	P1-20 P1-21	— P1-2 — P1-1		

M-5 Malfunction of buzzer

Possible cause	Step	Check		Remedy
Operational error	1	Is the "Buzzer on mode "selected according to the operation manual? (To alternate the buzzer on/off mode selection, press the MODE switch and select the "Advanced mode".)	No	Set the buzzer on mode.
Main PCB	2	Check the buzzer signal with a oscilloscope. Is the pulse of 4KHz output?	Yes	Replace the main PCB assy.
Buzzer		is the pulse of 4KHZ output?	No	Replace the main PCB assy.

M-6 "12 COVER OPEN" is displayed even if the upper cover is closed

Possible cause	Step	Check	Result	Remedy
Upper cover	1	Does the upper cover hook press the actuator of the interlock switch on the main PCB	No	Replace the upper cover assy.
Main PCB		correctly when upper cover is closed?	Yes	Replace the main PCB assy.

M-7 " CHECK XX TRAY " is displayed even if a paper-loaded cassette is mounted (or even if a paper is set on MP tray) XX is MP/T1/T2

Possible cause	Step	Check	Check Result	
Mis-operation	1	Is the paper feed mode set correctly?	No	Set paper feed mode correctly.
Actuator	2	Does the actuator for the paper empty sensor operate smoothly?	No	Reassemble or replace the actuator.
Paper empty sensor Feed flat cable	3	Does the voltage of P5-3 (or P5-14) in the Paper feeder PCB connector rise from 0V to 5V when the paper empty sensor is covered?	No	Replace the paper feed/size- sw PCB assy or feed flat cable .
Paper feed flat cable	4	Does the voltage of P3-3 (or P3-14) in the main PCB connector rise from 0V to 5V when the	No	Replace the feed flat cable.
Main PCB		paper empty sensor is covered?	Yes	Replace the main PCB assy.

M-8 "14 NO CARTRIDGE " is displayed

Possible cause	Step	Check		Remedy
EP-ED cartridge	1	Is an EP-ED cartridge installed correctly?	No	Install the EP-ED cartridge correctly.
Transfer unit electrode	2	Is the electrode of the transfer unit dirty?	Yes	Clean the electrode of the transfer unit.
High-voltage power supply PCB	3	Is the voltage of P4-13 in the high-voltage power supply PCB connector higher than that of P4-11 over 2.5V?	Yes	Replace the high-voltage power supply PCB assy.
HV harness	4	Is the voltage of P6-13 in the main PCB	Yes	Replace the HV harness.
Main PCB		connector higher than that of P6-11 over 2.5V?	No	Replace the main PCB assy.

M-9 "16 TONER EMPTY" is displayed

Possible cause	Step	Check	Result	Remedy
EP-ED cartridge	1	Take the EP-ED cartridge out of the printer and rock it to distribute the toner evenly. When the cartridge is returned to the printer, does the LCD show "00 READY"?	Yes	The problem was caused by toner onesided due to too little toner remaining. Prepare to replace the new cartridge.
High-voltage electrode	2	Are the developing bias or the toner sensor electrode of the high-voltage power supply PCB assy dirty?	Yes	Clean the electrode.
High-voltage power supply PCB	3	Is the voltage of P4-13 in high-voltage power supply PCB connector higher than that of P4-11, when the EP-ED cartridge which is full with toner is installed?	Yes	Replace the high-voltage power supply PCB assy.
HV harness Main PCB	4	Is the voltage of P6-13 in the main PCB connector higher than that of P6-11?	Yes	Replace the HV harness.
Wall I CD			No	Replace the main PCB assy.

M-10

"13 JAM XXXXXX" is not displayed even if a paper jam has occured (or is displayed even if a paper jam has not occurred) XXXXXX is TRAYS/INSIDE/REAR/DUPLEX.

Possible cause	Step	Check	Result	Remedy
Actuator	1	Does the actuator of the paper delivery sensor or the registration sensor operate smoothly?	No	Reassemble or replace the paper delivery actuator and regist sensor actuator.
Paper delivery sensor Regist sensor	2	Does the voltage of P2-1 in the fixing PCB connector rise from 0V to 5V when the eject sensor is covered, or the voltage of P5-5 in the paper feeder PCB connector rise from 0V to 5V when the registration sensor is covered?	No	Replace the fixing PCB assy or the paper feed/size-sw PCB assy.
Fuser harness Feed flat cable	3	Does the voltage of P11-1 in the main PCB connector rise from 0V to 5V when the eject	No	Replace the fuser harness or the feed flat cable.
		sensor is covered, or the voltage of P3-5 in the main PCB connector rise from 0V to 5V?	Yes	Replace the main PCB assy.

M-11 "54 MOTOR MALF" is displayed (The main motor rotation disabled)

Possible cause	Step	Check	Result	Remedy
Low-voltage power supply PCB LV harness Main PCB	1	Is the voltage of P7-1 in the main PCB connector +24V?	No	Replace the main PCB assy low-voltage power supply PCB assy, or the LV harness.
DC motor harness 2 DC motor assy.	2	_	No	Replace the main PCB assy.
	connector drop from 5V to 0V after dropping the voltage of P7-3 from 5V to 0V?	Yes	Replace the DC motor harness or the DC motor assy.	

M-12 No paper pick-up from cassette (or MP tray)

Possible cause	Step	Check	Result	Remedy
Mis-operation	1	Is the paper feed mode set correctly?	No	Set paper feed mode correctly.
Main PCB	2	Does the voltage of P3-20 (or 19) in the main PCB connector rise from 0V to 5V and is a pulses having about 11ms period generated at P3-6, 7, 8, 9 pin?	No	Replace the main PCB assy.
Feed flat cable	3	Does the voltage of P5-20 (or 19) in the paper feeder PCB. Connector rise from 0V to 5V and is the pulses having about 11ms period generated at P3-6, 7, 8, 9 pin?	No	Replace the feed flat cable.
Paper feeder PCB	4	Does the voltage of P3-1 (or P4-1) in the paper feeder PCB connector drop from 24V to 0V and is the chopping pulses generated at P1-1, 2, 5,6 pin?	No	Replace the Paper feed/size- SW PCB assy.
Pick-up(or MP Pick) solenoid	5	Does the pick-up (or MP Pick) solenoid operate?	No	Replace the pick-up (or MP Pick) solenoid.
Paper feed motor	6	Does the pick-up motor rotate?	No	Replace the paper feed motor assy.

M-13 "55 HIGH VOL MALF" is displayed (Faulty output from the H.V.P.S. ASSY)

Possible cause	Step	C	Check			Result		Remedy
Main PCB	1	When a test print i of the each pin in t P6 turned on and o	he main	n PCB connector		No	Replace the main PCB assy.	
			Pin No.	Signal name	(refe	tage rence lue)	Remarks	
			1	/HV1AC		0V 3.8V		
			2	/HV1DC		0V .6V		
			3	/DBAC		0V :.3V		
			4	/DBDC		0V .6V		
			5	DNSTY	1.0	~ 4.0V	Default: 2.5V	
			6	/HVT1		0V 5.7V		
			7	/HVT2		0V		
				,,,,,,,		5.1V		
			8	/HVT3		0V		
					9	.0V		
			9	HVT4	0.4	~ 5.0V		
			10	HVTFB	0.4	~ 4.0V		
			11)	TONER1	0.0	~ 3.5V		
			12	0V		0V		
			13	TONER2	2.0	~ 4.5V		
			14)	24VRET		0V		
			15	5V	-	5V		
			16	24V	2	24V		
HV harness	2	Is the voltage of the	each pi	n of the high-vo	oltage	No	Replace th	ne HV harness.
High-voltage power supply PCB		power supply PCB off?				Yes	Replace th	ne high-voltage oply PCB assy.

M-14 "50 FUSER MALF" is displayed

Possible cause	Step	Check	Result	Remedy
Thermal fuse	1	Is the thermal fuse located in the fixing unit conductive?	No	Replace the fixing unit.
Thermistor	2	Remove the fixing unit from the printer and measure the resistance between two pins of the 2 pin connector on the fixing PCB. Is the measured resistance within the range of $1.0~\mathrm{M}\Omega-1.6\mathrm{M}\Omega$ (normal temperature)?	No	Replace the fixing unit.
Fixing heat roller	3	Is the fixing heat roller located in the fixing unit conductive?	No	Replace the fixing heat roller.
Low-voltage power supply PCB	4	When the power is switched on, does the voltage at connector pin P4-1 on the main PCB go from 5V to 0V?	Yes	Replace the low-voltage power supply PCB assy.
Main PCB	5	Make sure if: The EP-ED cartridge is installed in the printer correctly. The upper cover of the printer is closed. A paper-loaded cassette is mounted.	No	Replace the main PCB assy.

Note: When the printer has detected a fixing unit malfunction, do not power on for about 15 minutes.

Even if the power is on, the printer will shut off the power supply to the fixing heat roller to prevent the fixing the unit from overheating.

M-15 "51 LASER BD MALF" is displayed

Possible cause	Step	Check	Result	Remedy
Main PCB Scanner harness	1	Is the problem remedied when the power off and on again?	No	Replace the main PCB assy , the SCN harness 4P,SCN flat cable 6P or the scanner unit.

M-16 "52 SCANNER MALF" is displayed

Possible cause	Step	Check	Result	Remedy
Main PCB Scanner harness Scanner unit	1	Is the problem remedied when the power off and on again?	No	Replace the main PCB assy, the SCN harness 4P, SCN flat cable 6P or the scanner unit.

M-17 "41 PRINT CHECK" is displayed

Possible cause	Step	Check	Result	Remedy
Main PCB	1	Does this problem frequently occur?	No	Since this is a temporary problem, remove the paper used when the error occurred and continue to print.
			Yes	Replace the main PCB assy.

5. TROUBLESHOOTING PAPER TRANSPORT PROBLEMS

5.1 Paper Jams

The paper path is divided into following three blocks:

- 1) The paper pick-up block, (The LCD display "JAM TRAYS")
- 2) The separation and feed block, (The LCD display "JAM INSIDE")
- 3) The fixing and paper delivery block, (The LCD display "JAM REAR")

Therefore, remedies for paper jam problems are described.

Respectively for these three blocks.

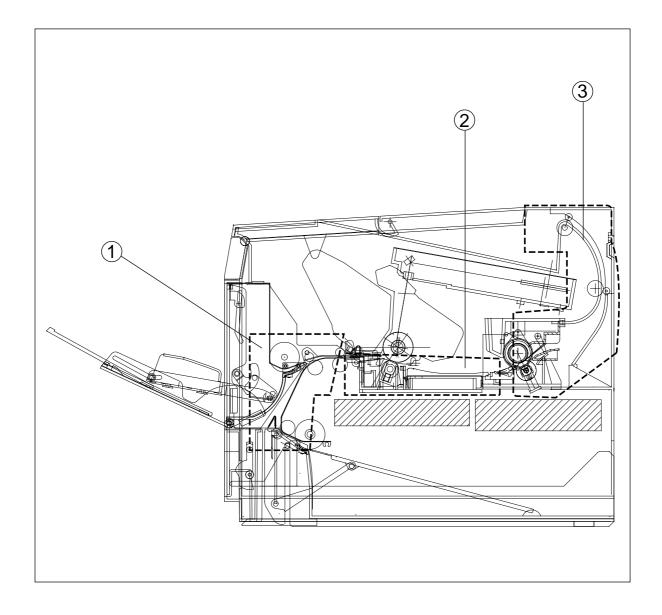


Figure 6.3

J-1a Paper pick-up block (Pick miss)

Possible cause	Step	Check	Result	Remedy
Adjustment lever (spring pressure switching lever)	1	Is the position of the adjustment lever of the cassette corresponding to the paper sheet size?		Instruct the user to follow the correct method.
Print paper	2	Is a recommended type of paper being used ?	No	Instruct the user to use recommended type of paper.
	3	Is the print paper deformed, curled or wavy?	Yes	Replace the print paper. Instruct the user how to storage.
Maximum paper load on the cassette	4	Does the amount of paper loaded on the cassette exceed the specified maximum paper load?	Yes	Instruct the user not to load more than the maximum amount of paper.
Pick-up rollers	5	Are the pick-up rollers defomed or worn?	Yes	Replace the pick-up rollers.
Separation pad	6	Is the separation pad deformed or worn, or is it detached?	Yes	Replace the pad assy.

For solenoid activation, no feeder motor operation and no regist sensor activation, refer to the item NO PAPER PICK-UP FROM THE CASSETTE in the column MALFUNCTIONS.

J-1b Paper pick-up block (Oblique feed jam)

Possible cause	Step	Check	Result	Remedy
Adjustment lever (spring pressure switching lever)	1	Is the position of the adjustment lever of the cassette corresponding to the paper sheet size?	No	Instruct the user to follow the correct method.
Paper front guide	2	Is the paper front guide set in the correct position?	No	Set the paper front guide.
MP-feeding paper sheet	3	Are paper sheets set along the left wall?	No	Instruct the user to set paper sheets correctly?
Cassette-feeding sheet guide. Cassette rear, side guide	4	Is the cassette rear side guide set correctly?	No	Instruct the user to set it correctly?
MP-feeding paper sheet MP sheet guide		Is the MP sheet guide set correctly?	No	Instruct the user to set it correctly?

J-2 Separation and feed block (Paper jam)

Possible cause	Step	Check	Result	Remedy
Print Paper	1	Is a recommended type of paper being used?	No	Instruct the user to use recommended type of paper.
Static-charge eliminator	2	Is the static-charge eliminator dirty?	Yes	Clean the static-charge eliminator.
			No	Replace the transfer base assy.

J-3 Fixing and paper delivery block (Paper jam)

Possible cause	Step	Check	Result	Remedy
Fixing unit entrance guide	1	Is the entrance guide dirty?		Clean the entrance guide.
Fixing unit Separation guide	Separation		Yes	Replace the fixing unit.
Paper delivery actuator	3	Is the paper sensor arm movement smooth?	Yes	Replace the fixing unit.
Changeover guide	4	Is the changeover guide movement smooth?	No	Replace the changeover guide.
Delivery rollers		Is the delivery roller movement smooth?	No	Replace the rear cover assy.
Paper jam remove cover Rear cover	5	Are there dirts or flaws on the ribs of the jam remove cover and rear cover?	No	Replace the jam remove cover and the rear cover assy.

5.2 Incomplete Paper Feed

F-1 Double feeding

Possible cause	Step	Check	Result	Remedy
Print paper	1 Is a recommended type of paper being used? No Instruct the user to use recommended type of pa		Instruct the user to use recommended type of paper.	
Adjustment lever (spring pressure switching lever)	2	Is the position of the adjustment lever of the cassette corresponding to the paper sheet size?	No	Instruct the user to switch adjustment lever position.
Paper front guide	3	Is the paper front guide broken?	Yes	Replace the paper front guide.
Separation pad			No	Replace the separation pad.

F-2 Wrinkles


Possible cause	Step	Check	Result	Remedy
Print paper	Print paper 1 Is a recommended type of paper being used?		No	Instruct the user to use recommended type of paper.
	2	Is the wrinkle problem solved if fresh paper is used?	Yes	Instruct the user in correct print paper storage procedure to be free from moisture.
Paper pick-up block	3	Is the paper already wrinkled or being fed askew?	Yes	Check the motion of the paper-pick up block.
Fixing unit entrance guide	4	Is the entrance guide dirty?	Yes	Clean the entrance guide.
Fixing unit			No	Replace the fixing unit.

6. OPERATION

6.1 Line Inspection Mode Procedure

(1)	Mount the font cartridge, the flush memory card and the optional MIO board. Note: Use a Hewlett Packard Company C2053A#C01 Word Perfect as font cartridge.				
(2)	While pressing the \(\sigma \) s The LCD will display:	witch, turn the power on. LINE TEST			
(3)	Press the SET	switch to check if the LCD comes on. All the LCD elements will come on			
		simultaneously.			
(4)	Press the CONTINUE	switch to check the pushbutton switch.			
		the LCD will display the characters shown below:			
	Press all the switches by tu				
	*****	Switch key numbers			
	12345678	1 2 3 4 5 6 7 8			
(5)	Press the CONTINUE	switch to check RAM size.			
	RAM SIZE = 8MB	8M (standard)			
	RAM SIZE = XXMB	XX : SIMM capacity + 2M			
	RAM SIZE ERROR	In case of error			
(6)	Press the CONTINUE	switch to check the fan.			
	FAN HIGH SPEED	Make sure that the fan rotates at the high speed.			
	Press the CONTINUI	E switch.			
	FAN LOW SPEED	Make sure that the fan rotates at the low speed.			
(7)	Press the CONTINUE	switch to check the 1st stage cassette.			
	TRAY 1 = A4	Appears when the cassette is set to A4 size.			
	TRAY 1 = LETTER	Appears when the cassette is set to letter size.			
	TRAY 1 = NO	Appears when no cassette is set.			
	CASSETTE ERROR!!	Appears in case of error.			
(8)	Press the CONTINUE	switch to check the 2nd stage cassette.			
	TRAY 2 = A4	Appears when the cassette is set to A4 size.			
	TRAY 2 = LETTER	Appears when the cassette is set to letter size.			
	TRAY 2 = NO	Appears when no cassette is set.			
	CASSETTE ERROR!!	Appears in case of error.			
(9)	Press the CONTINUE	switch to check multi purpose tray.			
	MP TRAY	Set paper on the MP tray.			

MP TRAY OK!!

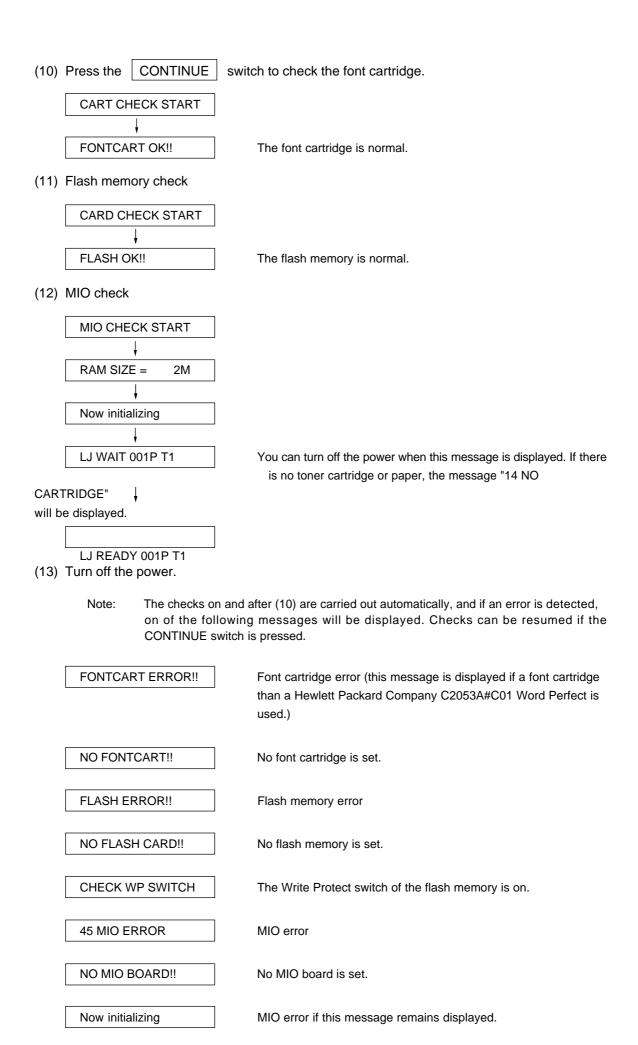

6.2 DRAM Test

- (1) To start up the test program:
 - While pressing the Switch (RESET switch), turn the power on. "DRAM CHECK" will be displayed. Then press CONTINUE switch to start DRAM checking.
- (2) The LCD will display "START DRAM TEST" and the DATA lamp or ALARM lamp will be flashing.
- (3) On satisfactory completion of all the RAM test, the LCD will display: "DRAM OK!!".
- (4) If any DRAM has an error, the LCD will display:



The following table is the reference.

Table 6.1 Video Controller DRAM Address Corresponding Table

Address	Part replacement	
Lower order address		
0, 4, 8, C	#32, 21	
2, 6, A, E	#16, 17	*1
	Replace with SIMM corresponding to memory map.	*2

^{*1:} Replace the DRAM on the Main PCB.

Note1: There may be the case that the above sequence doesn't work correctly according to the contents of RAM failure, or in faulty assembly such as soldering bride or ineffective soldering etc.

Note2: "PRINT CHECK" may be displayed when getting out from TEST mode. It will disappear in 20 or 30 seconds, displaying "READY" on LCD. It is not a trouble.

^{*2:} Replace the SIMM.

7. STATUS MESSAGE LIST

Table 6.2 Operator Call Messages

Table 6.2 Operator Call Messages						
Operator Call Message	Meaning	Action				
CHECK XX TRAY	The paper cassette (XX is MP/T1/T2) is out of paper.	Load a stack of paper into the cassette. See M-7.				
12 COVER OPEN	The upper cover of the printer is open.	Close the cover. See M-6.				
13 JAM XXXXXX	Paper is jammed in the printer. XXXXXX is TRAYS/INSIDE/REAR/DUPLEX.	Remove the jammed paper from the indicated area. See M-10.				
14 NO CARTRIDGE	The toner cartridge is not installed in the printer.	Install a toner cartridge. See M-8.				
XX NO CASSETTE	The paper cassette is not installed. XX is T1/T2.	Install the paper cassette.				
16 TONER EMPTY	The printer has almost run out of toner: you may print another 30 to 100 pages. (The ALARM lamp lights at the same time.)	Remove the toner cartridge, rock it several times at 45°, and install it again. Or replace the toner cartridge with a new one. See M-9.				
XX LOAD PAPER ***** SIZE	The wrong size of paper was loaded in the paper cassette XX. XX is MP/T1/T2. (The message appears alternately to show a particular size.)	Load the requested size of paper in the paper cassette, or load it on the manual feed tray and press the FORM FEED switch.				
18 MANUAL FEED ***** SIZE	The printer requests you to load paper manually. (The message appears alternately to show a particular size.)	Load the requested size of paper on the multi-purpose tray and press the SEL switch.				
19 CHECK FONT	An error occurred in the optional font cartridge/card.	Turn off the printer, and reinstall or replace the optional font cartridge/card.				
20 FONT REMOVAL	The font cartridge/card was removed while the printer is on-line.	Turn off the printer, install the font cartridge/card, and turn on the printer. The CONTINUE switch will allow you to temporarily ignore this message.				
27 NO DX UNIT	The duplex unit is not installed with the printer when the duplex printing mode is selected.	Install the duplex unit correctly.See the DX-1200 user's guide.				
27 NO DX TRAY	The duplex paper guide tray is not installed in T1 when the duplex printing mode is selected.	Install the duplex paper guide tray into T1. See the DX-1200 user's guide.				
27 DX OPEN	The cover of the duplex unit is open.	Close the cover. See the DX-1200 user's guide.				

Table 6.3 Error Messages

Error Message	Table 6.3 Error Messages Meaning	Action
31 PRINT OVERRUN	Print overrun	Press the CONTINUE switch to start printing the next page. Data which overran the print area on the page cannot be printed. Check your page protection setting with the MODE switch. Setting page protection to the correct size could solve this problem. If printing at 600 dpi, you may need to add optional SIMM memory.
32 BUFFER ERROR	Input buffer overflow	Press the CONTINUE switch to resume printing. Data lost in overflow cannot be printed.
34 MEMORY FULL	Work memory overflow	Press the CONTINUE switch to resume printing. If the same error should occur after you press the CONTINUE switch, turn off the printer. Wait a few seconds, then turn it on again . Reduce the input buffer size. Turn off "KEEP PCL." Add SIMM memory with power off. Download font and the font saved in the HDD card might cause the error, for it occupies the same work area as the RAM. Memory expansion is recommended in that case.
40 LINE ERROR	Error in the communications circuit	When the serial interface is used, check the communications parameters such as baud rate, code type, parity, and handshake protocols. When the parallel interface is used, check the interface cable connection.
41 PRINT CHECK	Error in communication with the engine controller	Turn off the printer. Wait a few seconds, then turn it on again. See M-17.


Error Message	Meaning	Action
42 CARD FULL	Card overflow	Delete unnecessary macros or fonts, or use a new card.
43 CARD W ERR	Card write error	Set the write protect switch of the card to OFF if it has been set to ON. Use a new card. If the same error occurs, consult your dealer or service personal.
44 SIMM ERROR	Incorrect installation of SIMMs	Install SIMMs correctly, referring to the printed error message.
45 MIO ERROR	Error in communication with the MIO card.	Install the MIO card correctly.
46 OPT IO ERROR	Connection error with optional feeders and duplex unit.	Check the interface cable connection between the printer and the fitted option.
47 CARD R ERROR	Card read error	Use a new card, If the same error occurs, consult your dealer or service personal.
48 XX SIZE ERROR	Paper of incorrect size is loaded into XX. XX is T2/DX.	Set the correct size of paper in T2 or for duplex printing.
IGNORE DATA (BR- Script 2 mode only)	Data is ignored because of an error in the Post Script program.	Press the RESET switch.


Table 6.4 Service Call Messages


Table 6.4 Service Call Messages						
Service Call Message	Meaning	Action				
9950 FUSER MALF	Malfunction of fuser	Turn off the printer. Wait 15 minutes, then turn it on again. See M-14.				
51 LASER BD MALF	Malfunction of laser beam detector	Turn off the printer. Wait a few seconds, then turn it on again. See M-15.				
52 SCANNER MALF	Malfunction of laser scanner motor	Turn off the printer. Wait a few seconds, then turn it on again. See M-16.				
53 DX FAN MALF	Malfunction of fan motor in the duplex unit.	Turn off the printer. Wait a few seconds, then turn it on again.				
54 MOTOR MALF	Malfunction of main motor	Turn off the printer. Wait a few seconds, then turn it on again. See M-11.				
55 HIGH VOL MALF	Malfunction of high- voltage power supply	Turn off the printer. Wait a few seconds, then turn it on again. See M-13.				
61 PROG ERROR	Program ROM checksum error	Turn off the printer. Wait a few seconds, then turn it on again.				
62 FONT ERROR	Font ROM checksum error	Turn off the printer. Wait a few seconds, then turn it on again.				
63 D-RAM ERROR	D-RAM error	Turn off the printer. Wait a few seconds, then turn it on again.				
66 NV-W ERROR	NV-RAM error	Turn off the printer. Wait a few seconds, then turn it on again.				
67 NV-R ERROR	NV-RAM error	Turn off the printer. Wait a few seconds, then turn it on again.				
68 NV-B ERROR	NV-RAM error	Turn off the printer. Wait a few seconds, then turn it on again.				
60 SYSTEM ERROR XXXXX	Error in XXXXX.	Turn off the printer. Wait a few seconds, then turn it on again.				
99 SERVICE 2 99 SERVICE 3	Instruction access error	Turn off the printer. Wait a few seconds, then turn it on again. If still remains, replace the main PCB.				
99 SERVICE 3	Memory address not aligned	Turn off the printer. Wait a few seconds, then turn it on again. If still				

Service Call Message	Meaning	Action
99 SERVICE 4	Instruction bus error	remains, replace the main PCB.
99 SERVICE 5	Data bus error	Turn off the printer. Wait a few seconds, then turn it on again. If still remains, replace the main PCB.
99 SERVICE 6	Privileged instruction	Turn off the printer. Wait a few seconds, then turn it on again. If still remains, replace the main PCB.
99 SERVICE 8	Illegal instruction	Turn off the printer. Wait a few seconds, then turn it on again. If still remains, replace the main PCB.
99 SERVICE 9	No fpu	Turn off the printer. Wait a few seconds, then turn it on again. If still remains, replace the main PCB.
		Turn off the printer. Wait a few seconds, then turn it on again. If still remains, replace the main PCB.

A-1

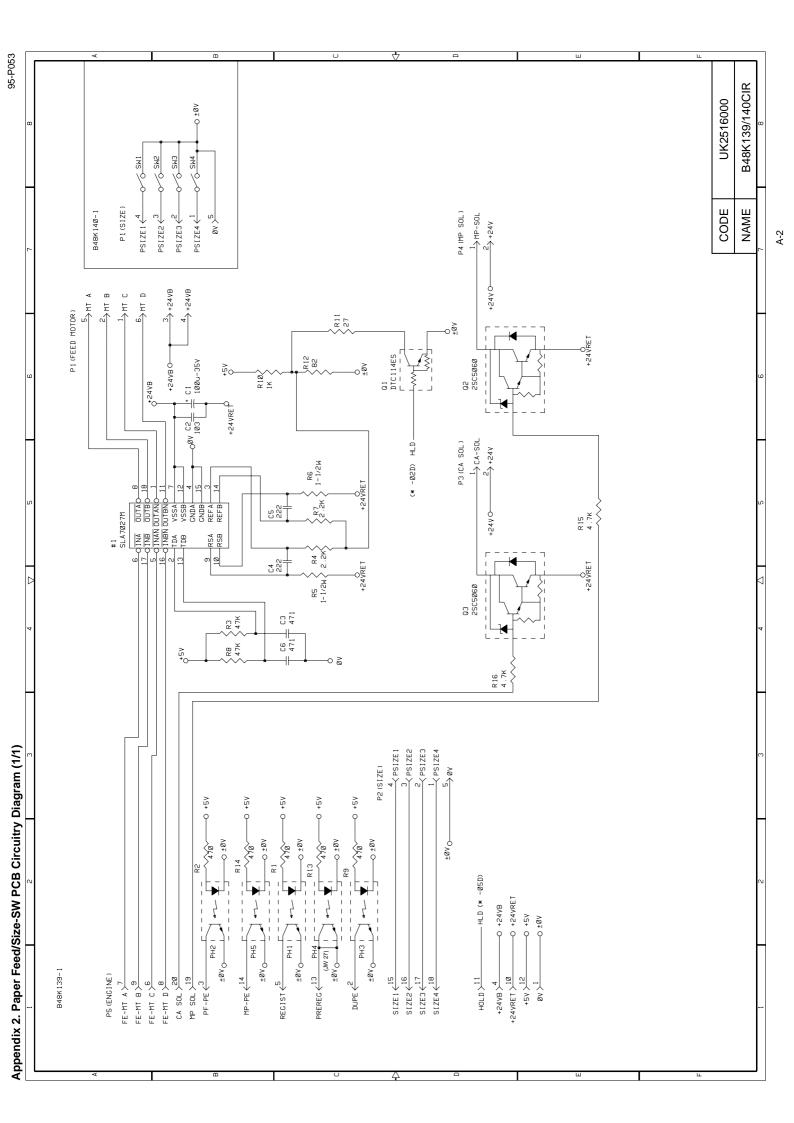

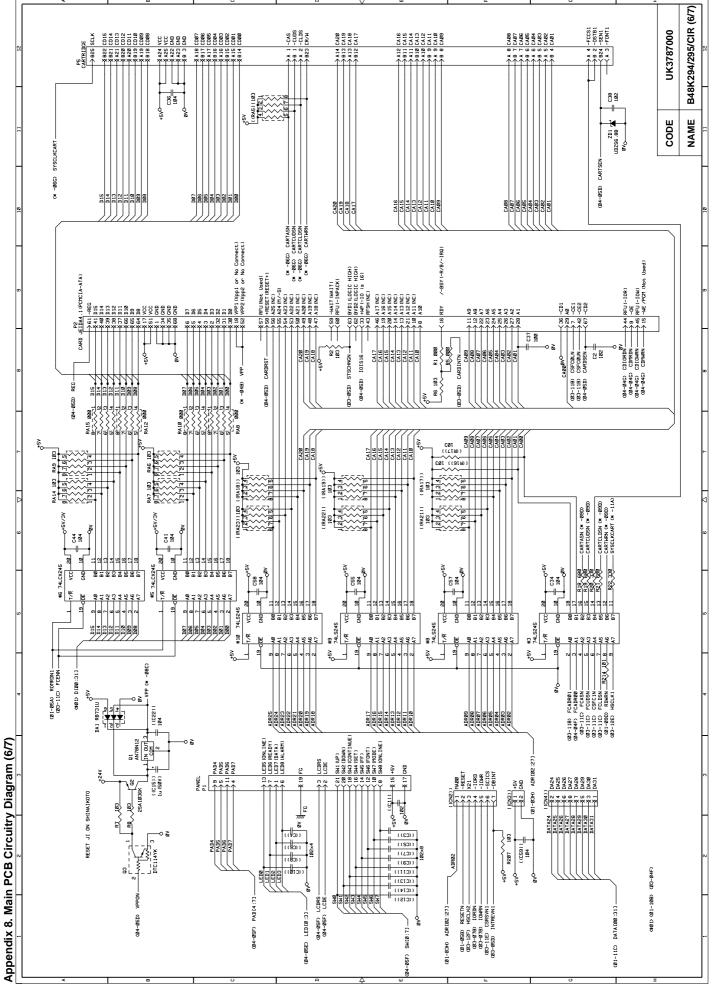

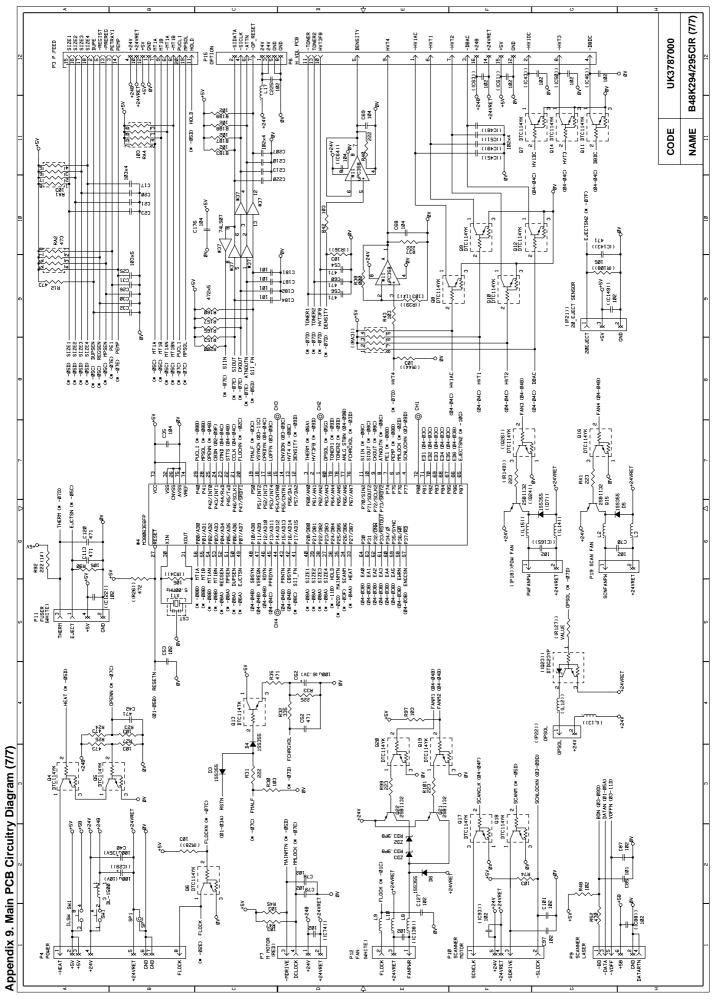

brother

Brother Laser Printer

HL-1260e/HL-1660 series

Trademarks

Brother is a registered trademark of Brother Industries, Ltd.

Apple and LaserWriter are registered trademarks, and TrueType is a trademark of Apple Computer, Inc.

Centronics is a trademark of Genicom Corporation.

EPSON is a registered trademark, and FX-850 and FX-80 are trademarks of Seiko Epson Corporation.

Hewlett-Packard, HP and PCL are registered trademarks, and HP LaserJet 5, HP LaserJet 4+, HP LaserJet Plus, HP LaserJet II, HP LaserJet IID, HP LaserJet IIID, HP-GL, HP-GL/2, and Bi-Tronics are trademarks of Hewlett-Packard Company. IBM, Proprinter XL, Proprinter, and IBM/PC are registered trademarks of International Business Machines Corporation.

Intellifont is a registered trademark of AGFA Corporation, a division of Miles, Inc.

Microsoft and MS-DOS are registered trademarks of Microsoft Corporation. Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

PostScript is a registered trademark of Adobe Systems Incorporated.

All other brand and product names mentioned in this user's guide are registered trademarks or trademarks of respective companies.

Compilation and Publication

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

©1997 Brother Industries Ltd.

Shipment of the Printer

If for any reason you must ship your Printer, carefully package the Printer to avoid any damage during transit. It is recommended that you save and use the original packaging. The Printer should also be adequately insured with the carrier.

WARNING

When shipping the Printer, the TONER CARTRIDGE must be removed from the Printer. Failure to remove the Toner Cartridge during shipping will cause severe damage to the Printer and will VOID THE WARRANTY.

brother

Laser Printer

HL-1260e/HL-1660 series

USER'S GUIDE

(For USA & CANADA Only)

For technical and operational assistance, please call:

In USA 1-800-276-7746 (outside California) 714-859-9700 Ext. 329 (within California)

714-859-9700 Ext. 329 (within C In CANADA 1-800-853-6660

514-685-6464 (within Montreal)

If you have comments or suggestions, please write us at:

In USA Printer Customer Support

Brother International Corporation

15 Musick Irvine, CA 92718

In CANADA Brother International Corporation (Canada), Ltd.

Marketing Dept.1, rue Hôtel de Ville

Dollard-des-Ormeaux, PQ, Canada H9B 3H6

BBS

For downloading drivers from our Bulletin Board Service, call:

In USA 1-714-859-2610 In CANADA 1-514-685-2040

Please log on to our BBS with your first name, last name and a four digit number for your password. Our BBS supports modem speeds up to 14,400, 8 bits no parity, 1 stop bit.

Fax-Back System (For USA only)

Brother Customer Service has installed an easy to use Fax-Back System so you can get instant answers to common technical questions and product information for all Brother products. This is available 24 hours a day, 7 days a week. You can use the system to send the information to any fax machine, not just the one you are calling from.

Please call 1-800-521-2846 and follow the voice prompts to receive faxed instructions on how to use the system and your index of Fax-Back subjects.

DEALERS/SERVICE CENTERS (USA only)

For the name of an authorized dealer or service center, call 1-800-284-4357.

SERVICE CENTERS (Canada only)

For service center addresses in Canada, call 1-800-853-6660

INTERNET ADDRESS

For technical questions and downloading drivers: http://www.brother.com

Definitions of Warnings, Cautions, and Notes

The following conventions are used in this User's Guide:



Warning

Indicates warnings that must be observed to prevent possible personal injury.



Q Caution

Indicates cautions that must be observed to use the printer properly or prevent damage to the printer.

✗ Note

Indicates notes and useful tips to remember when using the printer.

To Use the Printer Safely



Warning

The fixing roller is extremely hot during operation. Remove the paper carefully.

TABLE OF CONTENTS

IMPORTANT INFORMATION: REGULATIONSix	
CHAPTER 1 GENERAL1-1	I
ABOUT THIS MANUAL 1-1	
ABOUT CHAPTERS ON THE FLOPPY DISK1-3	3
ABOUT THIS PRINTER 1-4	1
Features	ŧ.
Options 1-1	.0
CHAPTER 2 GETTING STARTED2-1	l
BEFORE USING THE PRINTER2-1	
Checking the Components	
Printer Carton 2-1	
Toner Cartridge	
General View2-3	
Operating and Storage Environment2-4	
Power Supply2-4	
Environment	
SETTING UP THE PRINTER2-5	j
Opening and Closing the Printer	ĺ
Removing the Protective Parts	j
Installing the Toner Cartridge	•
Loading Paper in the Paper Cassette	1
Connecting the Printer to Your Computer2-1	7
Turning the Printer On and Off2-1	9
Plugging in the Power Cord	9
Pressing the POWER Switch2-2	20
Printing the Test Patterns or Lists	
Checking the Printed Test Pattern or Demo Page2-2	4

CHAPTER 3 BEFORE WORKING WITH THE PRINTER	3-1
SOFTWARE COMPATIBILITY	3-1
AUTOMATIC EMULATION SELECTION	3-3
AUTOMATIC INTERFACE SELECTION	3-5
ABOUT THE CONTROL PANEL	3-7
Adjusting the Control Panel Angle	3-7
Selecting the Local Language Display	3-8
Using the Panel Switches	3-9
Printer Settings	3-10
User Settings	3-10
Factory Settings	3-10
PAPER HANDLING	3-11
Print Media	3-11
Paper Size	3-11
Using Envelopes	3-13
Cassette Feed	3-15
Manual Feed	3-16
Face Down Print Delivery	3-17
Face Up Print Delivery	3-17
CHAPTER 4 CONTROL PANEL (DISK)	4-1
DISPLAY AND LAMPS	
Display	
Printer Status Messages	
Lamps	
READY	
DATA	4-4
ALARM	4-4
ON LINE	4-4

S	WITCHES IN NORMAL MODE	4-5
	SEL Switch	4-5
	SET Switch	4-6
	▲ (UP) or ▼ (DOWN) Switch	4-6
	MODE Switch	4-7
	MODE Switch Settings in HP LaserJet,	
	EPSON FX-850, and IBM Proprinter XL Modes	4-8
	MODE Switch Settings in BR-Script Mode	4-11
	MODE Switch Settings in HP-GL Mode	4-13
	Basic Operation Procedures	4-15
	Operation Example: Selecting the Parallel Interface	4-16
	INTERFACE MODE	4-17
	FORMAT MODE	4-20
	ORIENTATION	4-20
	AUTO MODE	4-21
	PAGE FORMAT MODE	4-22
	GRAPHICS MODE	4-25
	RESOLUTION MODE	4-28
	PAGE PROTECTION	4-31
	CARD OPERATION	4-32
	ADVANCED MODE	4-41
	NETWORK MODE	4-41
	ERROR PRINT	4-44
	CONTINUE MODE	4-44
	BUZZER SETTING	4-45
	SCALABLE FONT	4-45
	PRINT DENSITY	4-46
	INPUT BUFFER	4-46
	SAVE SETTINGS	4-47
	PAGE COUNTER	
	EXIT MODE	
	FONT Switch	4-49
	Setting the Font and Symbol Set in the HP LaserJet Mode	4-49
	Setting the Font and Character Set in the EPSON FX-850,	
	or IBM Proprinter XL Mode	
	List of Fonts	
	List of Symbol/Character Sets	
	FORM FEED Switch (REPRINT Switch)	
	Form Feed	
	Reprint Function	
	CONTINUE Caritale	1 62

SWITCHES IN SHIFT MODE	. 4-64
SHIFT Switch	. 4-64
EMULATION Switch	4-65
About Emulation Modes	. 4-67
ECONOMY Switch	4-69
TONER SAVE MODE	4-69
POWER SAVE MODE	4-69
FEEDER Switch	4-70
FEEDER	4-70
MP FIRST	4-72
MANUAL FEED	4-73
MP TRAY SETTING	4-73
MEDIA TYPE	4-74
DUPLEX MODE	4-75
COPY Switch	4-77
RESET Switch	4-78
List of Factory Settings	4-79
TEST Switch	. 4-85
HEX DUMP MODE	. 4-88
CHAPTER 5 OPTIONS (DISK)	. 5-1
LOWER TRAY UNIT (LT-1200/LT-1600)	. 5-1
Loading Paper from the Lower Paper Cassette	. 5-1
FONT CARTRIDGE/CARD, FLASH MEMORY/HDD CARD Installing a Font Cartridge/Card, Flash Memory Card and	. 5-2
HDD Card	. 5-2
Selecting the Optional Fonts	. 5-4
MODULAR I/O CARD	. 5-6
RAM EXPANSION	. 5-7
DUPLEX UNIT (DX-1200/DX-1600)	. 5-11

CHAPTER 6 MAINTENANCE (DISK)	6-1
MAINTENANCE	6-1
Toner Cartridge	6-1
Toner Empty Message	6-1
Replacing the Toner Cartridge	
Cleaning	
Cleaning the Printer Exterior	
Cleaning the Printer Interior	
CHAPTER 7 TROUBLESHOOTING	7-1
TROUBLESHOOTING	7-1
Operator Call Messages	7-1
Error Messages	7-3
Service Call Messages	7-5
Possible Troubles	7-6
Paper Jam	7-6
Unsatisfactory Printouts	7-12
APPENDICES (DISK)	Appendix-1
PRINTER SPECIFICATIONS	Appendix-1
Printing	Appendix-1
Functions	Appendix-2
Electrical and Mechanical	Appendix-3
PAPER SPECIFICATIONS	Appendix-4
INTERFACE SPECIFICATIONS	Appendix-8
Bi-directional Parallel Interface	**
Pin Assignment	Appendix-8
Signal Description	Appendix-9
Parallel Cable Connection for IBM-PC/AT or	
Compatible Computers and IBM-PS/2 Computers	Appendix-10

Standard Specifications Interface Connectors. Pin Assignment. Signal Description Serial Cable Connection for IBM-PC/AT or Compatible Computers and IBM-PS/2 Computers. SYMBOL/CHARACTER SETS.	Appendix-11 Appendix-11 Appendix-12
Pin Assignment	Appendix-11 Appendix-12
Signal Description	Appendix-12
Serial Cable Connection for IBM-PC/AT or Compatible Computers and IBM-PS/2 Computers	••
Compatible Computers and IBM-PS/2 Computers	Appendix-13
	Appendix-13
SYMBOL/CHARACTER SETS	
STAID OL/ CHARGETER SETS	Appendix-15
OCR Symbol Sets	Appendix-15
HP LaserJet Mode	Appendix-16
EPSON Mode	Appendix-24
IBM Mode	Appendix-27
HP-GL Mode	Appendix-29
Symbol Sets Supported by the Printer's Intellifont Compatible	
Typefaces	Appendix-34
Symbol Sets Supported by the Printer's TrueType and Type 1 Fo	nt
Compatible, and Original Typefaces	Appendix-36
QUICK REFERENCE OF COMMANDS	Appendix-38
HP LaserJet Mode	Appendix-38
PCL Command Sets	Appendix-38
CCITT G3/G4 and TIFF	Appendix-51
Horizontal 1200-dpi Image Format Mode	Appendix-54
HP-GL/2 Command Sets	Appendix-57
Printer Job Language Commands Syntax	Appendix-59
EPSON FX-850 Mode	Appendix-60
IBM Proprinter XL Mode	Appendix-63
HP-GL Mode	Appendix-66
Bar Code Control	Appendix-68
Printer Bar Codes or Expanded Characters	Appendix-68

IMPORTANT INFORMATION: REGULATIONS

Federal Communications Commission Compliance Notice (For U.S.A. only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that
to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help

Important - About the Interface Cable

This printer has been certified to comply with FCC standards, which are applied to the U.S.A. only. A shielded interface cable should be used according to FCC 15.27(C). In addition, a grounded plug should be plugged into a grounded AC outlet after checking the rating of the local power supply for the printer to operate properly and safely.

Caution

Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.

International Energy Star Compliance Statement (For HL-1660 series only)

The purpose of the International Energy Star Program is to promote the development and popularization of energy-efficient office equipments, which includes computers, monitors, printers, facsimile receivers and copy machines world-wide.

As an International Energy Star partner, Brother Industries, Ltd. has decided that this product meets the guideline of the program.



Canadian Department of Communications Compliance Statement (For Canada only)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference- causing equipment standard entitled "Digital Apparatus", ICES-003 of the Department of Communications.

Avis de conformité aux normes du ministère des Communications du Canada (Pour Canada Seul)

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur : "Appareils Numériques", NMB-003 édictée par le ministère des Communications.

Laser Safety (110-120 V model only)

This printer is certified as a Class I laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

Since radiation emitted inside the printer is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

CDRH Regulations (110-120 V model only)

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration (FDA) implemented regulations for laser products on August 2, 1976. These regulations apply to laser products manufactured from August 1, 1976. Compliance is mandatory for products marketed in the United States. The label shown on the back of the printer indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

MANUFACTURED:

BROTHER INDUSTRIES, LTD.

15-1 Naeshiro-cho Mizuho-ku Nagoya, 467 Japan This product complies with FDA radiation performance standards, 21 CFR chapter 1 subchapter J. Caution:

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

Radio Interference(220-240 V model only)

This printer complies with EN55022(CISPR Publication 22)/Class B.

Before this product is used, ensure that you use a double-shielded interface cable with twisted-pair conductors and that it is marked "IEEE1284 compliant". The cable must not exceed 1.8 metres in length.

IEC 825 (220-240 V model only)

This printer is a Class 1 laser product as defined in IEC 825 specifications. The label shown below is attached in countries where required.



This printer has a Class 3B Laser Diode which emits invisible laser radiation in the Scanner Unit. The Scanner Unit should not be opened under any circumstances.

Caution:

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

The following caution label is attached on the cover of the scanner unit.

INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. AVOID DIRECT EXPOSURE TO BEAM. CLASS 3B LASER PRODUCT.
USYNLIG LASER STRÅLING NÅR KABINETLÅGET STÅR ÅBENT. UNGDÅ DIREKTE UDSÆTTELSE FOR STRÅLING. KLASSE 3B LASER.
OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRRAR ÄR URKOPPLADE. STRÅLEN ÄR FARLIG. KLASS 3B LASER APPARAT.
AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN. LUOKAN 3B LASERLAITE.
USYNLIG LASERSTRÅLING UNNGÅ DIREKTE KONTAKT MED LASERENHETEN NÅR TOPPDEKSELET ER ÅPENT. KLASSE 3B LASERPRODUKT.
RADIATIONS LASER INVISIBLES QUANDOUVERT ET VERROUILLAGE ENLEVE. EVITER EXPOSITIONS DIRECTES AU FAISCEAU. PRODUIT LASER CLASSE 3B.
UNSICHTBARE LASERSTRAHLUNG WENN ABDECKUNG GEOFFENT UND SICHERHEITSVERRIEGELUNG UBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN. SICHERHEITSKLASSE 3B.
RADIACIÓN LASER INVISIBLE CUANDO SE ABRE LA TAPA Y EL INTERRIPITOR INTERNO ESTÁ ATISCADO EVITE LA EXPOSICIÓN DIRECTA DE LOS OJOS. PRODUCTO LASER CLASE 3B.

For Finland and Sweden LUOKAN 1 LASERLAITE KLASS 1 LASER APPARAT

▼ Varoitus! Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

Varning – Om apparaten används på annat sätt än i denna Bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

For Your Safety

To ensure safe operation the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively grounded through the normal household wiring.

Extension cords used with the equipment must be three-conductor and be correctly wired to provide connection to ground. Incorrectly wired extension cords are a major cause of fatalities.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, consult a qualified electrician.

Wiring Information (For U.K. only)

Important

If the mains plug supplied with this printer is not suitable for your socket outlet, remove the plug from the mains cord and fit an appropriate three pin plug. If the replacement plug is intended to take a fuse then fit the same rating fuse as the original.

If a moulded plug is severed from the mains cord then it should be destroyed because a plug with cut wires is dangerous if engaged in a live socket outlet. Do not leave it where a child might find it!

In the event of replacing the plug fuse, fit a fuse approved by ASTA to BS1362 with the same rating as the original fuse.

Always replace the fuse cover. Never use a plug with the cover omitted.

WARNING - THIS PRINTER MUST BE EARTHED

The wires in the mains cord are coloured in accordance with the following code:

GREEN AND YELLOW : EARTH
BLUE : NEUTRAL
BROWN : LIVE

The colours of the wires in the mains lead of this printer may not correspond with the coloured markings identifying the terminals in your plug.

If you need to fit a different plug, proceed as follows.

Remove a length of the cord outer sheath, taking care not to damage the coloured insulation of the wires inside.

Cut each of the three wires to the appropriate length. If the construction of the plug permits, leave the green and yellow wire longer than the others so that, in the event that the cord is pulled out of the plug, the green and yellow wire will be the last to disconnect.

Remove a short section of the coloured insulation to expose the wires.

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter "E" or by the safety earth symbol $\frac{1}{2}$, or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter "N" or coloured black or blue.

The wire which is coloured brown must be connected to the terminal which is marked with the letter "L" or coloured red or brown.

The outer sheath of the cord must be secured inside the plug. The coloured wires should not hang out of the plug.

DECLARATION OF CONFORMITY (EUROPE)

We, Brother International Europe Ltd., Brother House 1 tame Street, Guide Bridge, Audenshaw, Manchester M34 5JE, UK.

declare that this product is in conformity with the following normative documents:

Safety: EN 60950, EN 60825 EMC: EN 55022 Class B, EN 50082-1

following the provisions of the Low Voltage Directive 73/23/EEC and the Electromagnetic Compatibility Directive 89/336/EEC (as amended by 91/263/EEC and 92/31/EEC).

Manufacture at the following facilities is carried out under a Quality System which is registered by BSI Quality Assurance and JQA Quality Assurance.

Brother Industries, Ltd., Kariya Plant 1-5, Kitajizoyama, Noda-cho, Kariya-shi, Aichi-ken 448, Japan. BSI Certificate of Registration No. FM27391 JQA Certificate of Registration No. 0340

Issued by:

Brother International Europe Ltd. European Development and Technical Services Division

CHAPTER 1 GENERAL

ABOUT THIS MANUAL

This manual acts as your guide to the setup and operation of your printer and covers the following topics:

CHAPTER 1 GENERAL provides an overview of the printer. Read this chapter first to get familiar with the printer.

CHAPTER 2 GETTING STARTED gives you general information about this printer. Be sure to read this chapter before you use the printer.

CHAPTER 3 BEFORE WORKING WITH THE PRINTER gives you important information on the printer setup to work with your computer and software. Be sure to read this chapter before you work with the printer.

CHAPTER 4 CONTROL PANEL details the functions of the panel switches and lamps. (Disk)

CHAPTER 5 OPTIONS describes the optional accessories for this printer. (Disk)

CHAPTER 6 MAINTENANCE provides guidance on how to maintain your printer (Disk)

CHAPTER 7 TROUBLESHOOTING helps you troubleshoot the printer in case of problems.

APPENDICES contain detailed technical information on the printer as well as the character sets and a quick reference guide to the printer control commands. (Disk)

INDEX provides an alphabetical list of the contents of this manual and the floppy disk supplied with the printer.

Notes

When you read this user's guide, note the following:

- Chapters 4, 5, 6 and the Appendices of this User's Guide are on the floppy disk provided with this printer. Read ABOUT CHAPTERS ON THE FLOPPY DISK (See page 1-3) carefully before you print out the additional chapters included on the floppy disk.
- This user's guide contains instructions or steps to teach you various operations of the printer. Remember that the instructions start with the factory settings, particularly in Chapter 2 and Chapter 3. If you change the settings, particularly the emulation mode, the display messages change accordingly.
- The paper size has been factory set to letter or A4, depending upon the final destination of the printer. Some display messages appear differently in accordance with this setting.

ABOUT CHAPTERS ON THE FLOPPY DISK

- The floppy disk provided with this printer contains Chapters 4, 5, 6, and the Appendices of this User's Guide. Follow the steps below to install and print out the sections you need to see.
- 1. Set up your printer referring to CHAPTER 2 GETTING STARTED.
- 2. Start your computer and MS-DOS® or Windows 95 / Windows 3.1.
- 3. Insert the printer User's Guide floppy disk into the floppy disk drive A of your computer. It is assumed that A: is your floppy disk drive in this description.
- 4. Install the Disk Manual into your computer.

(for DOS user)

Type A:\INSTALL and press ENTER key.

Follow the messages on the screen.

(for Windows 95 user)

Click Start and choose Run.

Type A:\SETUP and press the ENTER key.

(for Windows 3.1 user)

Choose the RUN command from the FILE menu in the Program Manager.

Type A:\SETUP and press the ENTER key.

■ Once you installed the Disk Manual into your computer, follow the steps below to print out the sections you need to see.

Print chapters from the Disk Manual.

(for DOS user)

Type HL1260e or HL1660/HL1660e and press ENTER key. You do not need to choose disk drive nor directory. Follow the messages on the screen.

(for Windows 95 user)

Double-click the HL1260e or HL1660 Series folder on the screen, and then the Disk Manual icon. Follow the messages on the screen.

(for Windows 3.1 user)

Double-click the HL1260e or HL1660 group icon (sign on the screen) and then the Disk Manual icon. Follow the messages on the screen.

Notes

- You will need a minimum of 6 MB free area on your hard disk drive in order to print any sections of the User's Guide.
- Use A4 or letter size paper for printing.

ABOUT THIS PRINTER

Features

This printer has the following standard features. When you need more information on how to use a particular feature, turn to the page indicated at the end of the paragraph.

High Speed and Quiet Laser Printing

This printer uses electrophotography technology by laser beam scanning so that it can print at a speed of 12 pages per minute (HL-1260e) or16 pages per minute (HL-1660/1660e). The controller utilizes a high speed 32-bit RISC microprocessor and special hardware chips. The quiet printing will not bother you working in your office or at home: max. 49 dB A (printing)/40 dB A (stand-by) (HL-1260e) or 52 dB A (printing)/45 dB A (stand-by) (HL-1660/1660e).

600 DPI Resolution

This printer uses a print engine with a resolution of 600 dots per inch (dpi). Compared with a 300-dpi engine, the quality of the output is far superior. See page 4-28. By utilizing the 300-dpi mode, the printer can also print 300-dpi data, if necessary. (In HP emulation you can select a horizontal 1200-dpi mode by special control command. See page Appendix-54.)

High Resolution Control

The high resolution control (HRC) technology provides clear and crisp printouts and improves even the 600-dpi resolution. See 4-30.

Maintenance-Free Toner Cartridge

The toner cartridge can print up to 9,000 single-sided pages. The one piece, easy-to-replace toner cartridge does not require difficult maintenance. Just install it. See 2-7.

Advanced Photoscale Technology

This printer can print graphics in 256 shades of gray in HP[®] LaserJet 5^{TM} (HL-1660e only) / LaseJet $4+^{\text{TM}}$ emulation and BR-Script level 2, producing nearly photographic quality.

Universal Paper Cassette and Manual Loading

This printer loads paper automatically from the paper cassette. Since the paper cassette is a universal type, a number of different sizes of paper can be used. Even envelopes can be loaded from the multi-purpose tray and the upper paper cassette. In addition, the multi-purpose tray allows you to load paper sheet by sheet. See 3-15 for auto loading and 3-16 for manual loading.

Four Interfaces

This printer has a high speed bi-directional parallel interface, an RS-232C serial interface, a Universal Serial Bus (USB) (HL-1660e only), and a modular input/output (MIO) compatible interface.

If your application software supports the bi-directional parallel interface, you can monitor the printer status. It is fully compatible with the industry-standard bi-directional parallel interface. See page 2-17.

The RS-232C serial interface is an industry standard so that you can connect it to any computer using a standard serial cable. See page 2-17.

The Universal Serial Bus is an interface which allows the printer connect with multiple peripheral devices. (HL-1660e only)

The MIO interface allows you to install a commercial MIO-compatible card. If you install the card, you can use one more interface port for features such as networking or printer sharing. See page 5-6.

Automatic Interface Selection

This printer can automatically select the bi-directional parallel, RS-232C serial, Universal Serial Bus (HL-1660e only), or MIO interface depending on the interface port through which it receives data. With this feature, the printer can be connected to more than one computer. See page 3-5.

Five Emulation Modes

This printer can emulate the Hewlett-Packard® laser printer-LaserJet 5 (PCL® 6) (HL-1660e only) / LaserJet 4+ (PCL® 5e), PostScript® Level 2 language emulation (Brother BR-Script Level 2) printers, the industry-standard HP-GLTM plotter as well as EPSON® FX-850TM, and IBM® Proprinter XL® printers. You can print with all application programs that support one of these printers. See page 3-1.

Automatic Emulation Selection

This printer can automatically select the printer emulation mode depending on the print commands it receives from the computer software. With this feature, many users can share the printer on a network. See page 3-3

Data Compression Technology

This printer can internally compress the received graphics and font data in its memory so that it can print larger graphics and more fonts without additional memory.

Memory Expansion

This printer has 2-Mbyte (HL-1260e), 4-Mbyte (HL-1660), or 8-Mbyte (HL-1660e) of RAM as standard. It can be expanded up to 66 Mbytes (HL-1260e/1660) / 72 Mbytes (HL-1660e). The memory should be expanded to 6 Mbytes in total or more to enjoy 600-dpi or APT printouts in the BR-Script 2 mode. When you select duplex mode with an optional duplex unit installed, the memory should be expanded to 10Mbytes in total or more to enjoy 600-dpi duplex printing. See pages 4-28 and 5-7. (The standard memory fitted can vary depending on the printer model and country.)

75 Scalable and 12 Bitmapped Fonts

This printer has the following scalable fonts and bitmapped fonts. The fonts that can be used vary according to the current emulation mode.

■ HP LaserJet, EPSON FX-850, and IBM Proprinter XL Modes

Scalable Fonts:

Intellifont Compatible Fonts:

- · Alaska, Extrabold
- Antique Oakland, Oblique, Bold
- Brougham, Oblique, Bold, BoldOblique
- Cleveland Condensed
- Connecticut
- Guatemala Antique, Italic, Bold, BoldItalic
- Letter Gothic, Oblique, Bold
- Maryland
- Oklahoma, Oblique, Bold, BoldOblique
- PC Brussels Light, LightItalic, Demi, DemiItalic
- PC Tennessee Roman, Italic, Bold, BoldItalic
- Utah, Oblique, Bold, BoldOblique
- Utah Condensed, Oblique, Bold, BoldOblique

 $Microsoft^{\textcircled{8}}$ Windows $^{\textcircled{8}}$ 3.1 / Windows 95 TrueType TM Compatible Fonts:

- BR Symbol
- Helsinki, Oblique, Bold, BoldOblique
- Tennessee Roman, Italic, Bold, BoldItalic
- W Dingbats

Type 1 Font Compatible Fonts:

- Atlanta Book, BookOblique, Demi, DemiOblique
- Calgary MediumItalic
- Copenhagen Roman, Italic, Bold, BoldItalic
- Portugal Roman, Italic, Bold, BoldItalic

Brother Original Fonts:

- Bermuda Script
- Germany
- San Diego
- US Roman

Bitmapped Fonts (Portrait and Landscape):

- LetterGothic16.66 Medium, Italic, Bold, BoldItalic
- OCR-A
- OCR-B

■ BR-Script 2 Mode

Scalable Fonts:

- Atlanta Book, BookOblique, Demi, DemiOblique
- · Alaska, Extrabold
- Antique Oakland, Oblique, Bold
- Bermuda Script
- BR Dingbats
- BR Symbol
- Brougham, Oblique, Bold, BoldOblique
- Brussels Light, LightItalic, Demi, DemiItalic
- Calgary MediumItalic
- Cleveland Condensed
- Connecticut
- Copenhagen Roman, Italic, Bold, BoldItalic
- Germany
- Guatemala Antique, Italic, Bold, BoldItalic
- Helsinki, Oblique, Bold, BoldOblique
- Helsinki Narrow, Oblique, Bold, BoldOblique
- Letter Gothic, Oblique, Bold
- Maryland
- Oklahoma, Oblique, Bold, Bold Oblique
- Portugal Roman, Italic, Bold, BoldItalic
- San Diego
- Tennessee Roman, Italic, Bold, BoldItalic
- US Roman
- Utah, Oblique, Bold, BoldOblique
- Utah Condensed, Oblique, Bold, BoldOblique

High Speed Printing with Microsoft Windows 95 / Windows 3.1

Since TrueType compatible fonts are resident in this printer, the printer can print them with Microsoft Windows 95 / Windows version 3.1 at a high speed without downloading them. Because the printer has a TrueType Font rasterizer, it can rasterize fonts at a high speed.

Bar Code Print

This printer can print the following 11 types of bar codes:

- Code 39
- Interleaved 2 of 5
- EAN-8
- EAN-13
- UPC-A
- EAN-128
- UPC-E
- CodabarUS-PostNet
- ISBN
- Code 128
- CCITT G3/G4

Since this printer supports the CCITT G3/G4 format in addition to HP-compatible formats, it can quickly receive and print data compressed in this format.

Lock Panel

If the panel switch settings have been changed, the printer may not work as you expect. You can lock your settings to prevent changes from being made. See page 4-41.

Power Save Mode

This printer has a power saving mode. As laser printers consume power to keep the fixing assembly at a high temperature, this feature can save electricity when the printer is on but not being used. The factory setting of the Power Save mode is ON that complies with EPA Energy Star new specification. Compared with conventional laser printers, this printer consumes less power even when the power saving mode is turned off. See page 4-69.

Toner Save Mode

This printer has an economical toner save mode. You can cut your printer running cost substantially by using this mode in addition to the improved life expectancy of the toner cartridge. See page 4-69.

Reprint Function

You can reprint the last job printed with a touch of a panel switch which allows reprinting without sending the data again from the computer. See page 4-61.

Flash Memory Card and HDD Card

You can store fonts, macros, logos, and other print data in a commercial PCMCIA-compatible flash memory card or HDD card that is installed in the upper card slot of this printer. See pages 4-32 and 5-2.

Saving User Settings

You can operate the printer differently from other users with your own panel switch settings. Two sets of user settings can be stored. See page 4-47.

Options

The following options are available for this printer:

Lower Tray Unit

A lower tray unit expands the paper source capacity. You can load extra paper and switch between the upper and lower paper sources automatically. See page 5-1.

Duplex Unit

A duplex unit enables you to print on both sides of the paper. See page 5-11.

Technical Reference Manual

The technical reference manual contains detailed information about the printer control commands. For programming with the printer, see this manual which is available from your Brother dealer.

The following commercial products can be installed into this printer:

MIO Card

A commercial modular input/output (MIO) compatible sharing/network card gives you an additional interface port for attaching the printer to a network or sharing your printer with multiple computers. See page 5-6.

Font Cartridges

Commercial font cartridges containing additional scalable fonts or bitmapped fonts. See page 5-2.

Flash Memory Card and HDD Card

A commercial flash memory card or a HDD card can be installed. You can store fonts, macros, logos, and other print data in a commercial PCMCIA-compatible flash memory card or HDD card. See pages 4-32 and 5-2.

RAM Expansion

Installing commercial memory modules expands the memory capacity up to 72 Mbytes (HL-1660e only) / 66 Mbytes. See pages 5-7.

CHAPTER 2 GETTING STARTED

BEFORE USING THE PRINTER

Checking the Components

Printer Carton

When you unpack the printer, check to see that you have all of the following parts.

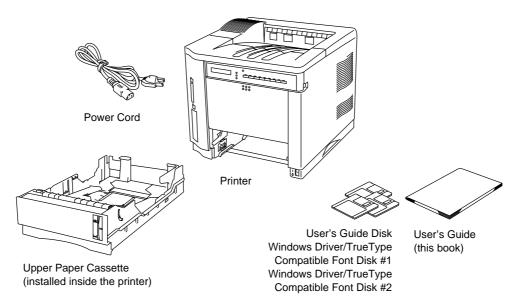


Fig. 2-1 Components in the Printer Carton

✓ Note

An interface cable is not a standard accessory. Please purchase an appropriate cable according to the interface you intend to use. The power cord may differ slightly from this figure depending on the country where you purchased the printer.

Toner Cartridge

The toner cartridge is inside the toner cartridge carton.



Q Caution

The toner cartridge is packed inside a bag. Do not open it now. Open it immediately before you install the toner cartridge. The toner cartridge must not be exposed to light for a long time.

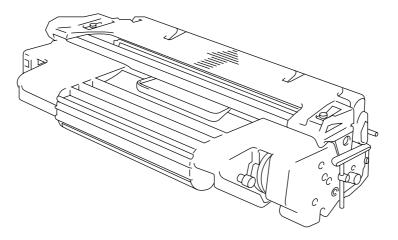


Fig. 2-2 Toner Cartridge

General View

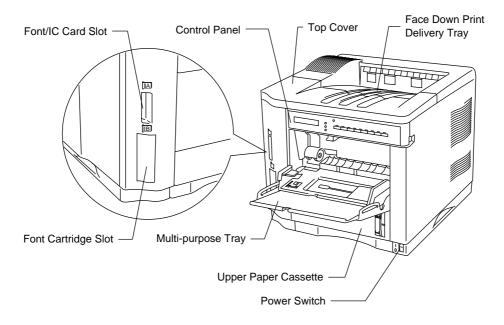


Fig. 2-3 Front View

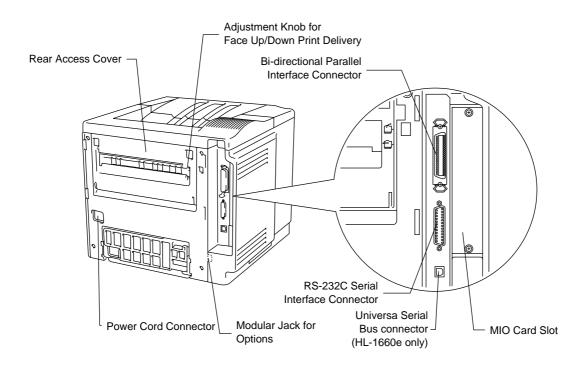


Fig. 2-4 Rear View

Operating and Storage Environment

Please take note of the following before using the printer.

Power Supply

Use the printer within the specified power range.

AC power: $\pm 10\%$ of the rated power voltage

Frequency: 50 Hz (220-240 V) or 60 Hz (110-120 V)

The power cord, including extensions, should not exceed 5 meters (16.5 feet).

Do not share the same power circuit with other high-power appliances, particularly an air conditioner, copier, shredder, etc. If it is unavoidable that you must use the printer with these appliances, we recommend you use a voltage transformer or a high-frequency noise filter.

Use a voltage regulator if the power source is not stable.

Environment

Use the printer only within the following ranges of temperature and humidity.

Ambient temperature: 10°C to 32.5°C (50°F to 90.5°F) Ambient humidity: 20% to 80% (without condensation)

Do not block the air exit on top of the printer. Do not place objects on top of the printer, especially on the air exit.

Ventilate the room where you use the printer.

Do not place the printer where it is exposed to direct sunlight. Use a blind or a heavy curtain to protect the printer from direct sunlight if the printer is unavoidably set up near a window.

Do not install the printer near devices that contain magnets or generate magnetic fields.

Do not subject the printer to strong physical shocks or vibrations. Do not expose the printer to open flames or salty or corrosive gasses.

Place the printer on a flat, horizontal surface.

Keep the printer clean. Do not install the printer in a dusty place. Do not install the printer near an air conditioner.

SETTING UP THE PRINTER

Opening and Closing the Printer

To install the toner cartridge or to access the paper path, you need to open the top cover of the printer. Remember the following steps to open and close the printer.

■ To open the printer, hold both sides of the top cover and raise it upwards until it latches.

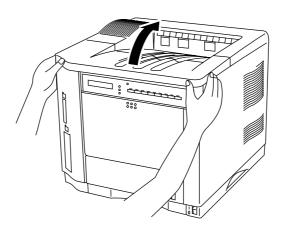


Fig. 2-5 Opening the Top Cover

■ To close the printer, lower the top cover and push both sides gently until it latches.

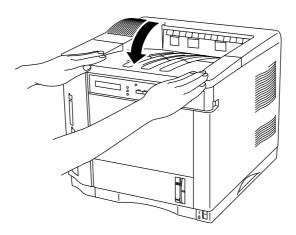


Fig. 2-6 Closing the Top Cover

Removing the Protective Parts

After checking that you have all of the correct parts, temporarily place the printer where you can easily reach all sides. Remove the protective parts that secure the printer against damage during transportation, as shown below:

∦ Note

Keep all packing materials for transporting or storing the printer later.

- 1. Open the top cover and the upper paper cassette.
- 2. Remove the protective parts from inside the printer and the cassette.
- 3. Remove both spacers from the fixing roller.

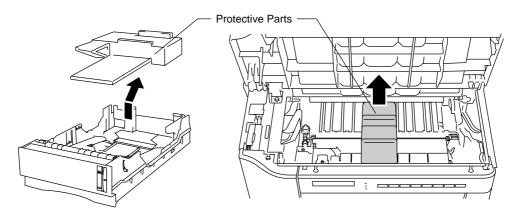


Fig. 2-7 Removing the Protective Parts

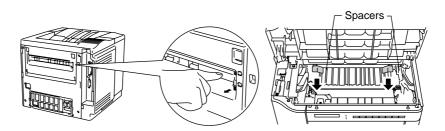


Fig. 2-7 Removing the Protective Parts

Fig. 2-8 Removing the Spacers

Installing the Toner Cartridge

This printer uses a toner cartridge to print. You have one toner cartridge as standard. A new cartridge contains enough toner to print approximately 9,000 A4 or letter-size single-sided pages at about 5% coverage (if the print density is set at level 8).

If you turn on the printer without the toner cartridge installed, the display shows the following operator call message to prompt you to install the toner cartridge.

14 NO CARTRIDGE

To install the toner cartridge, follow these steps:

- 1. Open the top cover of the printer.
- 2. Open the bag to unpack the toner cartridge.

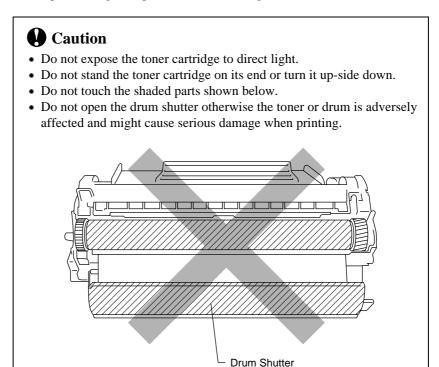


Fig. 2-9 Don'ts When Handling the Toner Cartridge

3. Hold the toner cartridge with both hands. Rock it gently several times at a 45° angle. This distributes the toner evenly inside the cartridge.

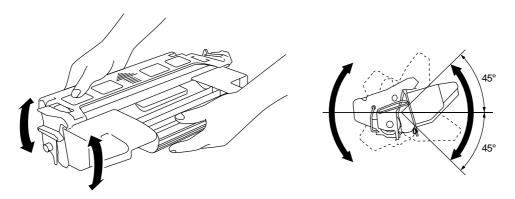


Fig. 2-10 Rocking the Toner Cartridge

4. Bend the tab up and down several times until it is detached from the toner cartridge.

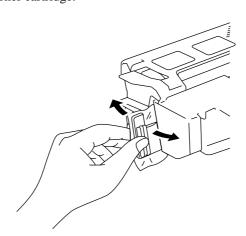


Fig. 2-11 Detaching the Tab

5. Hold the tab firmly and pull it out until the sealing tape comes out all the way.

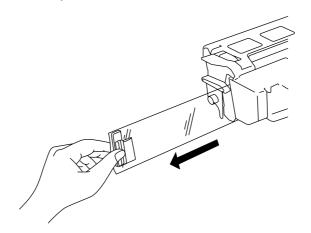


Fig. 2-12 Pulling Out the Sealing Tape



Q Caution

If the tab breaks from the sealing tape, hold and pull out the tape. If your hands or clothes get dirty with toner, wipe or wash it off immediately with cold water.

6. Insert the toner cartridge in the direction of the arrows engraved on the cartridge into the side guides until it stops securely in the cartridge holder inside the printer.

Push both sides of the toner cartridge gently until the cartridge is seated in its place.

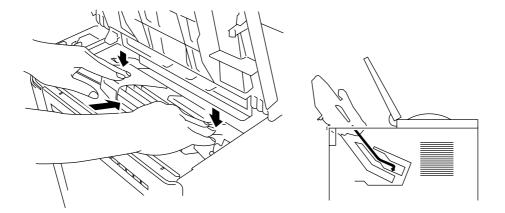


Fig. 2-13 Inserting the Toner Cartridge

7. Close the top cover of the printer.

When the cartridge has almost run out of toner, the display shows the following operator call message to prompt you to replace the toner cartridge.

16 TONER EMPTY

Although you can print several pages after the toner empty message appears, be sure to replace the toner cartridge with a new one before it becomes completely empty.

∥ Note

You can select the printer's operation when the "Toner Empty" message is displayed with the MODE switch. The printer continues or stops printing. For further information, see "Toner Low" in Chapter 4.

For toner cartridge replacement, see "Toner Cartridge" in Chapter 6.

Loading Paper in the Paper Cassette

The printer usually loads paper from the installed multi-purpose tray, upper cassette or optional lower paper cassette.

≠ Note

The lower tray unit is an option for this printer. This section refers to the upper paper cassette. For information about the lower paper cassette, see "LOWER TRAY UNIT" in Chapter 5.

Since the paper cassette is a universal type, you can set letter, A4, legal, ISO B5, executive, A5, ISO B6, or A6 size cut sheet paper or COM10, Monarch, C5, DL, or ISO B5 size envelopes in the paper cassette. The paper sources have the following limitation. For more information about paper, see "PRINT MEDIA" in Chapter 3.

paper source	available size	available type and
the multi- purpose tray (MP)	cut sheet: letter, legal, A4, ISO B5, Executive, A5, ISO B6 and A6 envelope: COM 10, Monarch, C5, DL and ISO B5	capacity plain paper: 150 envelope: 15 OHP film: 100 label stock: 100 other type: weight
	other size: wide 90-216mm (3.5"-8.5") long 148-356mm (5.8"-14")	= 60 to 135 g/m ² (16 to 36 lbs)
the upper paper cassette (T1)	cut sheet: letter, legal, A4, ISO B5, Executive, A5, ISO B6 and A6 envelope: COM 10, Monarch, C5, DL and ISO B5	plain paper : 500 weight = 60 to 105 g/m ² (16 to 28 lbs) envelope : 40
the optional lower paper cassette (T2)	cut sheet : letter, legal, A4, Executive	plain paper : 500 weight = 60 to 90 g/m ² (16 to 24 lbs)
all sources for duplex printing (DX)	cut sheet: letter, legal, A4, ISO B5(except T2) and Executive	* The capacity of T1 is reduced from the above specified capacities with the duplex unit installed.

Follow these steps to set paper and install the paper cassette:

✓ Note

Be sure to select the same paper size as the paper to be used from your application software, or correct printing cannot be obtained.

If your application software does not support paper size selection on its print menu, you can change the paper size with the MODE switch in the FORMAT MODE. For paper size change, see "MODE Switch" in Chapter 4.

The paper size has been factory set to letter or A4, depending upon the final destination of the printer.

•110/120V model: Letter size paper set. •220/240V model: A4 size paper set.

Load paper into the paper cassette as follows:

1. Pull the paper cassette out of the printer.

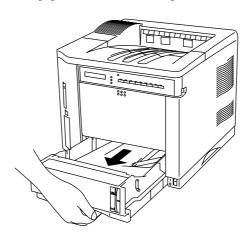


Fig. 2-14 Removing the Paper Cassette

2. Switch the adjustment lever on the back of the paper cassette according to the paper size shown below.

I. Backwards : letter, legal, A4, ISO B5, Executive and A5 II. Forwards : ISO B6, A6, COM10, Monarch, C5 and DL

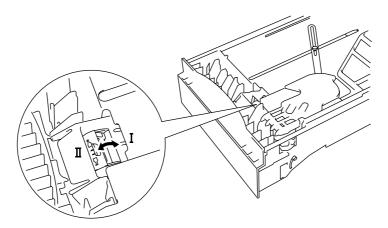


Fig. 2-15 Switching the Adjustment lever by Paper Size

3. Set a side paper stop at right front corner inside the paper cassette by the paper size to be used so that 2 projectors of the side paper stop are inserted into the guide holes on the base of the paper cassette.

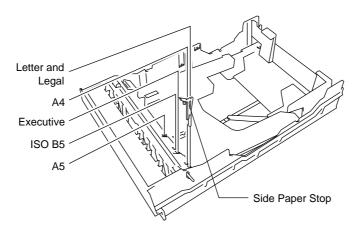


Fig. 2-16 Setting the Side Paper Stop

4. Slightly lift the edge of the sliding guides and move them separately so as to match the size of paper to be used. Match the paper length first and then the paper width when setting for larger size paper.

Match the paper width first and then the paper length when setting for smaller size paper.

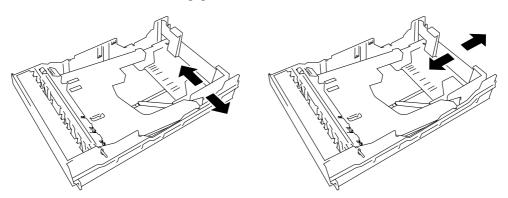


Fig. 2-17 Adjusting the Paper Cassette Sizes

5. Load paper into the paper cassette as shown below.

/ Note

Do not load more than 500 sheets of paper ($80 \text{ g/m}^2 \text{ or } 20 \text{ lbs.}$) in the cassette, or paper jams may occur. Paper ($80 \text{ g/m}^2 \text{ or } 20 \text{ lbs.}$) should be loaded up to the arrow head marked on the sliding guide.

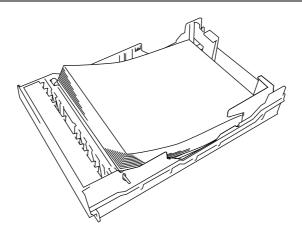


Fig. 2-18 Loading Paper into the Cassette

6. Install the paper cassette into the printer.

✓ Note

You can check the remaining paper with the paper indicator located on the front right of the paper cassette.

1. Open the multi-purpose tray by pressing the front door of the tray lightly and lowering it gently.

/ Note

Pull out the extension tray of the multi-purpose tray for long paper if it is necessary.

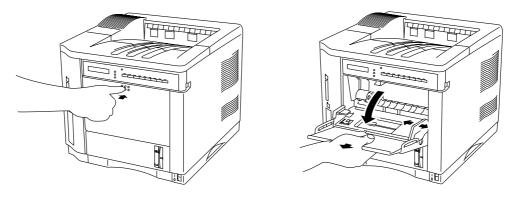


Fig. 2-19 Opening the Multi-purpose Tray and Pulling Out the Extension Tray

- 2. Lift up and slide the paper width guide to the far right side.
- 3. Place a stack of paper or envelopes on the tray until it is securely seated.

Notes

When you place paper on the multi-purpose tray, note the following:

- The print surface must be face up.
- The leading edge must be placed inside first and lightly against the printer.
- The left side must be aligned with the left guide.
- The top of the paper stack must be under the holders on both sides of the tray. The maximum thickness is 16.5 mm or 0.65 inches.

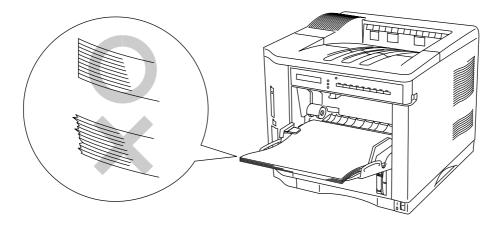


Fig. 2-20 Placing Paper on the Multi-purpose Tray

4. Lift up and slide the paper width guide to match the paper width, so that it lightly touches the right side of the paper stack.



- Make sure that the neatly stacked paper is correctly seated on the multi-purpose tray, otherwise paper may not be fed correctly, resulting in a skewed printout or a paper jam.
- When printing, the inside tray automatically rises to feed paper into the printer.

Connecting the Printer to Your Computer

This printer has a bi-directional parallel interface, an RS-232C serial interface, and a Universal Serial Bus (USB) interface (HL-1660e only). They allow the printer to communicate with IBM/PC® or compatible computers. Before connecting the printer and computer, you need to purchase or make a connecting cable specifically for the interface to be used. See "INTERFACE SPECIFICATIONS" in Appendix.

Since the automatic interface selection mode has been factory set, simply connect the interface cable to the printer. In some cases, you need to turn off the high-speed and bi-directional parallel communications with the MODE switch. For further information, see "MODE Switch" in Chapter 4.

When you use the serial interface, you need to have the same communications settings on both the printer and computer. Since the automatic interface selection mode has been factory set with certain factory settings (baud rate = 9600, code type = 8 bits, parity = none, stop bit = 1, Xon/Xoff = ON, DTR (ER) = ON, and Robust Xon = ON), you may simply connect the interface cable if these are the same as the settings on your computer. When necessary, set the communications parameters with the MODE switch on the printer. For further information, see "MODE Switch" in Chapter 4. For the settings on the computer, see the manual of the computer or software you use.

Connect the printer to your computer as follows:

1. Make sure that both the computer and the printer are turned off.



Caution

Always turn off the printer and computer when connecting and disconnecting the cable.

When connecting and disconnecting the cable with the Universal Serial Bus interface, however, it it not necessary to turn off the printer and computer.

2. Connect one end of the interface cable to the interface connector located on the back of the printer.

3. Secure the connection with wire clips or screws on the printer.

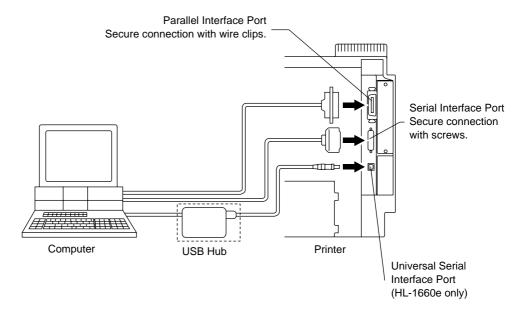


Fig. 2-21 Connecting the Printer and Computer

4. Connect the other end of the interface cable to the interface connector on your computer. Be sure to secure the connection on the computer, also.

Turning the Printer On and Off

Plugging in the Power Cord

Plug in the power cord as follows:

- 1. Make sure that the POWER switch is OFF "O": the switch is on the front right hand side of the printer.
- 2. Attach the power cord to the printer and plug it into an appropriate AC outlet.

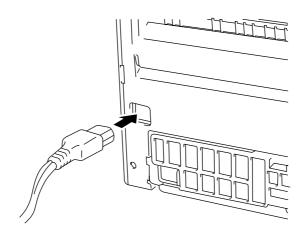


Fig. 2-22 Plugging in the Power Cord



- Check the AC voltage. This printer should be operated at the specified voltage and frequency.
 - USA and Canada: AC 110 to 120 V, 60 Hz
 Europe and Australia: AC 220 to 240 V, 50 Hz
- Since this printer must be electrically grounded, the power cord should be connected to a grounded AC outlet.
- The total length of the power cord, including extension cords, should not exceed 5 meters (16.4 feet). Use of a longer power cord may result in reduced voltage or malfunctions.
- Do not unplug the power cord to turn off the printer.
- The printer should be installed near a power outlet which is easily accessible.

Pressing the POWER Switch

The POWER switch is on the front right hand side of the printer. Pressing the ON side "|" supplies power to the printer, which then performs a self test and warm up. Pressing the OFF side "O" turns the power off.

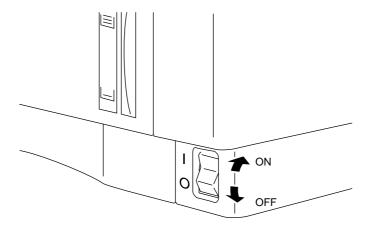


Fig. 2-23 Pressing the POWER Switch



Caution

Always wait at least 2 seconds after turning off the power before turning it back on.

Do not turn the power off while the printer is printing, as this may cause a paper jam and adversely affect the printer.

The printer performs a self-diagnosis at start-up to check its hardware and software. If the printer should find any problems, the display will show the corresponding message. See "TROUBLESHOOTING" in Chapter 7.

04 SELF TEST

The display shows several messages quickly at start-up. If the printer detects no errors, it automatically goes on-line and the message changes to show the current printer status and settings.

LJ READY 001P T1

LJ: The auto emulation selection is set and currently the HP

LaserJet emulation mode is selected.

READY: The printer is ready to print.

001: The number of copies to print is set to 1.

P: Portrait print is selected. T1: Paper is fed from Tray1.

Printing the Test Patterns or Lists

You can check print quality and print a list of available fonts before you actually start working with the printer. To do so, follow these steps:

- 1. Make sure that you have already set the toner cartridge and loaded paper into the cassette or the multi-purpose tray.
- 2 Turn on the printer. Wait until the display shows the message as follows.

or LJ READY 001P T1

LJ READY 001P MP

3. Press the SEL switch to set the printer off-line.

The ON LINE lamp goes off.

- 4. Hold down the SHIFT switch and press the TEST switch.
- Press the ▲ or ▼ switch to scroll through the display until the desired message appears. To print your selection, press the SET switch.
 Choose from one of the following selections:

To print out the demo page,

DEMO PAGE

To print out the test pattern,

TEST PRINT

To print out the list of printer settings,

PRINT CONFIG

To print out the list of internal or resident fonts,

PRINT FONTS I

To print out the list of optional cartridge/card fonts,

PRINT FONTS C

To print out the list of permanent download fonts,

PRINT FONTS P

To exit from the test mode,

exit


Notes

The messages "PRINT FONTS C" or "PRINT FONTS P" appear only when an optional font cartridge/card is installed in the font slot or the permanent download fonts are stored in printer memory respectively.

- If the optional font cartridge/card is installed, you can print out a list of optional fonts. Since the list shows the ID numbers specific to each optional font, it helps you to select them with the FONT switch. For further information, see "FONT Switch" in Chapter 4 and "FONT CARTRIDGE/CARD, FLASH MEMORY/HDD CARD" in Chapter 5.
- If user-defined characters are already downloaded into the printer memory as permanent download fonts, you can print out a list of them. For further information, see "FONT Switch" in Chapter 4.

6. Press the SET switch.

The printer starts printing the selected test pattern or list. When the printer finishes printing, it automatically exits to the off-line state.

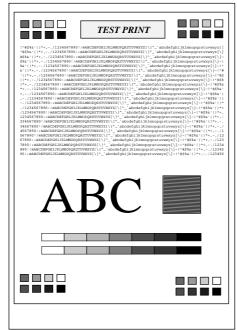

	(LJ):EP LazerJet 4 (FX):EPSON FX-850	(BS):BR-Scrip (PR):IBMProps	ot 2 (GL):HP-GL interXL	
			PAGE COUNTER RAM SIZE	= 682 = 10Mbyte
< EMULATION >		USER SETTINGS	SETTING1	SETTING2
< EMULATION >		AUTO I annu Tand	AUTO LazerJet4	ATTEC CONTRACTOR
AUTO TIME OUT	(9)	AUTO LABELJEE4	AUTO LABOTJEC4	AUTO LEBETJET4
EPSON/IRM		EPSON	EPSON	EPSON
KEEP PCL		OFF	OFF	OFF
< NODE >				
- INTERFACE NODE -				
I/F AUTO TIME OUT		PARALLEL	<-	<-
AUTO TIME OUT	(8)	5	<-	<-
MIGH SPEED		ON	<-	<-
BI-DIR		ON	-	4-
RS-232C SETTING				
RaundRate	(RAUD)	9600	<-	<-
CodeType	(bits)		<-	<-
Parity		NONE	<-	<-
Stop Bit	(bits)	1	<-	<-
Xon/Xoff		CRE	<-	<-
DTR(ER) Robust Xon		ON	<-	e-
AUDUST AUD		Car a	**	
- FORMAT MODE -				
ORIENTATION		PORTRAIT	<-	<-
AUTO MODE				
(LJ)				
AUTO LF		OFF	OFF	OFF
AUTO CR		OFF	OFF	OFF
AUTO WRAP AUTO SKIP		OFF	OFF	OFF
(FX)		CON	ON	UN
AUTO LF		OFF	OFF	OFF
AUTO MASK		OFF	OFF	OFF
(PR)				
AUTO LF		OFF	OFF	OFF
AUTO CR		OFF	OFF	OFF
AUTO MASK PAGE FORMAT MODE		OFF	OFF	OFF
PAGE FORMAT MODE X OFFSET	(dota)	0	<-	<-
Y OFFSET	(dota)	0	4-	<-
DADED	(dota)	34	24	A4
(LI)				
LEFT M	(C)	0	0	0
RIGHT M	(C)	78	78	78
TOP N	(*)	0.5	0.5	0.5
BOTTON M	(*)	0.5	0.5	0.5
LINES (FX)	(L)	04	04	04
LEFT N	(C)		0	0
RIGHT M	(C)	80	80	80
TOP N		.33	.33	.11
ROTTON M	(*)	.33	. 33	.33
LINES	(L)	66	66	66
(PR)				
LEFT M	(C)	0	0	0
RIGHT M	(C)	80	80	80
TOP N BOTTON N	(*)	.11	.33	.33
LINES	(*) (L)	.33	.33	.33
MARKS.	(10)	**		
- RESOLUTION MODE -				
RESOLUTION	(DPI)	600	<-	<-
IRC		MEDIUM	<-	<-

TEST PRINT

PRINT CONFIG

		PORT	FRAIT LIST	
				INTERNAL FONT
	R SYMBOL SET PITCH SIZE STYLE	WEIGHT	TYPEPACE	F O N T S A M P L E(600dp)
	SU:ROMAN S P: Scalable Upright(0) ESC(IDESC(slp#v0s0b4101T) PCTENNES Reg (4101) (8:point size 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()<>/0!
1001	BU:ROMAN B P: Scalable Upright(0) RSC(IDESC(slp@v0s3b4101T	Rold(3)		ABCDefgh123?!"#\$%&'()<>/
	ESC(IDESC(slp#vls0b4101T) PoTENNES It (4101) (8:point size 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()<>/0
	BU:ROMAN B P: Scalable Italic(1) ESC(IDESC(slp#vls3b4101T	Bold(3)	PoTENNES BdIt (4101) (#:point size 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()<>/0
		Medium(0) OKLANOMA Reg (4113) (8:point mize 0.25 - 999.75)	
	RSC(IDESC(slp#v0s3b4113T SU:ROMAN S	Bold(3)	OKLANOMA Bd (4113) (#:point size 0.25 - 999.75)	
	P: Scalable Italic(1) RSC(IDESC(slp@vls0b4113T SU:ROMAN 8) OKLANOMA It (4113) (#:point size 0.25 - 999.75)	ABCDefgh123?!"#\$%&"()<> ABCDefah123?!"#\$%&"()<>
	P: Scalable Ttalic(1) ESC(IDESC(sip#vls3b4113T EU:ROMAN 8 P: Scalable Ttalic(1)	Rold(3)	OKLAHOMA BdIt (4113) (#:point mize 0.25 - 999.75)) CONNECTICUT (4116)	
	ESC(IDESC(slp#vls0b4l16T SU:ROMAN 8 P: Scalable Upright(4)		(#:point size 0.25 - 999.75) CLEVELAND Od (4140)	
1010	RSC(IDESC(slp@v4s3b4140T SU:ROMAN S P: Scalable Upright(0)	Light(-3	(#:point size 0.25 - 999.75)) PcBRUSSEL Lt (4143)	ABCDefgh123?!"#\$%&'()<>
1011	ESC(IDESC(sip#v0s-3b4143T SU:ROMAN S P: Scalable Upright(0)	Bold(2)	(#:point size 0.25 - 999.75 PCBRUSSEL Bd (4143) (#:point size 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()-
1012	ESC(IDESC(slp#v0s2b4143T BU:ROMAN B P: Scalable Italic(1) ESC(IDESC(slp#v1s-3b4143T	Light(-3	(#:point mize 0.25 - 999.75)) PCBRUSSEL LtIt(4143) (#:point mize 0.25 - 999.75	ABCDefgh123?!"#\$%&'()<>
1013	BU:ROMAN B P: Scalable Italic(1) ESC(IDESC(slp#vls2b4143T	Bold(2)	PcRRUSSEL BdIt(4143) (#:point size 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()-
	SU:ROMAN S P: Scalable Upright(0) ESC(IDESC(slp@v0s0b4148T	Medium(0) UTAH Reg (4148) (#:point size 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()<>/0
	SU:ROMAN S P: Scalable Upright(0) ESC(IDESC(slp#v0s3b4148T	Rold(3)	UTAH Rd (4148) (8:point mixe 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()<>
	BU:ROMAN B P: Scalable Italic(1) ESC(IDESC(slp#vls0b4148T	Medium(0) UTAN It (4148) (#:point mize 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()<>/
		Bold(3)	UTAN BdIt (4148) (#:point size 0.25 - 999.75)	ABCDefgh123?!"#\$%&'()<>

PRINT FONTS I

Fig. 2-24 Test Pattern, Setting List, and Font List

Checking the Printed Test Pattern or Demo Page

After you print out the test pattern or demo page as described in the previous section, take a look at the printed sheet to check print quality.

The printer has been shipped with the print density properly adjusted with the control panel switches. If you are not satisfied with the printout (too light or dark for example), adjust the print density as follows:

- 1. Turn on the printer.
- 2. Press the SEL switch to set the printer off-line state.
- 3. Press the MODE switch.
- 4. Press the ▲ or ▼ switch to scroll through the display until the "ADVANCED MODE" appears.
- 5. Press the SET switch.
- 6. Press the ▲ or ▼ switch to scroll through the display until the "PRINT DENSITY" appears.
- 7. Press the SET switch.
- 8. Press the \triangle or ∇ switch until the desired print density value appears.

The value can change from 1 (light) to 15 (dark).

- 9. Press the SET switch.
- 10. Press the SEL switch to exit from the mode menus and set the printer on-line state.

For more information, see "MODE Switch" in Chapter 4.

CHAPTER 3 BEFORE WORKING WITH THE PRINTER

SOFTWARE COMPATIBILITY

Before working with your application software, you need to set up or install the printer driver in your software. Locate the printers that your application software supports and install the desired printer driver. Each software package differs in the way the printer driver is selected. Read the software manual and follow the setup or installation procedures.

Be sure to select the printer emulation mode that matches the installed printer driver. This printer emulates particular printer models of the following manufacturers. Since this printer has been factory set with the automatic emulation selection on, you may not need to select the emulation mode. When necessary, select the appropriate printer emulation mode with the panel switches according to the printer driver installed in your application software. See "CHAPTER 4 CONTROL PANEL."

Print	er Driver	Emulation Mode			
<hl< td=""><td colspan="5"><hl-1660e></hl-1660e></td></hl<>	<hl-1660e></hl-1660e>				
*	HL-1660e	HP LaserJet 5			
*	HL-1660	HP LaserJet 5			
	HL-1260e	HP LaserJet 5			
	HP LaserJet 5	HP LaserJet 5			
	HP LaserJet 4/4+	HP LaserJet 5			
<hl< td=""><td>-1260e/1660></td><td></td></hl<>	-1260e/1660>				
*	HL-1660	HP LaserJet 4+			
*	HL-1260e	HP LaserJet 4+			
	HL-1260	HP LaserJet 4+			
	HL-10h	HP LaserJet 4+			
	HP LaserJet 4+	HP LaserJet 4+			
*	HL-1660e (BR-Script 2)	BR-Script 2			
*	HL-1660 (BR-Script 2)	BR-Script 2			
*	HL-1260e (BR-Script 2)	BR-Script 2			
	HL-1260 (BR-Script 2)	BR-Script 2			
	PostScript® level 2 language printer	BR-Script 2			
	HL-10h (BR-Script)	BR-Script 2			
	HL-10PS/DPS	BR-Script 2			
	HL-8PS	BR-Script 2			
	Apple [®] LaserWriter [®] II NT/NTX	BR-Script 2			
	PostScript [®] language printer	BR-Script 2			
*	HP 7475A TM	HP-GL			
	HP - GL^{TM}	HP-GL			
*	EPSON FX-850	EPSON FX-850			
	EPSON FX-80 TM	EPSON FX-850			
*	IBM Proprinter XL	IBM Proprinter XL			
	IBM Proprinter ®	IBM Proprinter XL			

USER'S GUIDE

To get the most out of this printer, you need to install the printer driver for this printer or the HP LaserJet and select the HP LaserJet emulation mode: this is the best combination. When any other HP LaserJet series printer driver is installed, select the HP LaserJet emulation mode. When any other printer driver is installed, select the HP-GL, BR-Script 2, EPSON, or IBM emulation mode according to the installed printer driver. You may find difficulty in printing EPS file format pictures with the HP LaserJet mode. In this case, it is better to select the BR-Script 2 mode.

An asterisk (*) indicates the best or recommended combination of the printer driver and emulation mode. Be sure to use any of these best or recommended combinations if circumstances permit. When an emulation mode other than the HP mode or BR-Script 2 is selected, the printout may differ slightly from the printout that the target printer produces.

For Windows 95 or Windows 3.1 users, to get the best performance from your printer, install the driver supplied with your printer.

AUTOMATIC EMULATION SELECTION

This printer has an automatic emulation selection function. When the printer receives data from the computer, it automatically selects the emulation mode. This function has been factory set to ON.

The printer can select the emulation among the following combinations:

EPSON/IBM Priority	EPSON (default)	IBM
Auto Selection Mode	HP LaserJet	HP LaserJet
	BR-Script 2	BR-Script 2
	HP-GL	HP-GL
	EPSON FX-850	IBM Proprinter XL

To get the most out of this laser printer, we recommend you use the HP LaserJet emulation mode, which is a true laser printer mode. Since the HP LaserJet mode takes the highest priority in the automatic emulation selection, you can start using the printer as it is with the factory settings in most cases.

When the automatic emulation selection is active, you can check the current emulation on the display. When the printer is in ready, print, or wait states, the display reads as follows:

Emulation	Status Display in Ready State		
HP LaserJet	LJ READY 001P T1		
BR-Script 2	BS IDLE 001P T1		
HP-GL	GL READY 001P T1		
EPSON FX-850	FX READY 001P T1		
IBM Proprinter XL	PR READY 001P T1		

To select the emulation mode manually, use the EMULATION switch. For further information, see "EMULATION Switch" in Chapter 4.

Notes

When you use the automatic emulation selection, note the following:

- Once the emulation is automatically changed, it is not changed again for a short period of time. This time period is called "Time Out" and it can be set with the EMULATION switch. The factory setting is 5 seconds.
- The EPSON or IBM emulation mode priority must be selected, as the printer cannot distinguish between them. Since the factory setting is the EPSON emulation mode, you might need to select the IBM emulation mode with the EMULATION switch when you need to use this emulation..
- Try this function with your application software or network server. If the function does not work properly, select the required emulation mode manually using the printer panel switches or use emulation selection commands from your software.

AUTOMATIC INTERFACE SELECTION

This printer has an automatic interface selection function. When the printer receives data from the computer, it automatically selects the bidirectional parallel, Universal Serial Bus (USB) interface (HL-1660e only), RS-232C serial interface, or MIO interface as appropriate.

When you use the parallel interface, you can turn the high-speed and bidirectional parallel communications on or off with the MODE switch. For further information, see "MODE Switch" in Chapter 4. Since the automatic interface selection mode has been factory set to ON, simply connect the interface cable to the printer.

When you use the serial interface, you need to have the same communications settings on both the printer and computer. Since the automatic interface selection mode has been factory set with certain settings, you may be able to simply connect the interface cable to the printer if your computer has the settings listed below.

Communications Parameters	Factory Settings		
Baud rate (data transfer speed)	9600		
Code type (data length)	8 bits		
Parity (data error check)	None		
Stop bit (data separator)	1 stop bit		
Xon/Xoff (handshake protocol)	ON		
DTR (ER)	ON		
Robust Xon	OFF		

If a commercial interface card has been installed in the MIO card slot, it can be selected automatically.

When necessary, select the interface or the serial communications parameters manually with the MODE switch (INTERFACE MODE) on the printer. For further information, see "MODE Switch" in Chapter 4. For the settings on the computer, see the manual of the computer or software you are using.

Notes

When you use the automatic interface selection, note the following:

- Once the interface is automatically changed, it is not changed again for a short period of time. This time period is called "Time Out" and it can be set with the MODE switch. The factory setting is 5 seconds.
- The communications parameters [baud rate, code type, parity, stop bit, Xon/Xoff, DTR(ER), and Robust Xon] must be set for the serial interface. Although they have been factory set as shown in the above table, you may need to change them with the MODE switch.
- This function takes a few seconds to work. If you want to speed up printing, select the required interface manually with the MODE switch.

If you constantly use only one interface, we recommend that you select that interface in the interface mode. The printer allocates all of the input buffer to that interface if only one interface is selected.

ABOUT THE CONTROL PANEL

Adjusting the Control Panel Angle

You can adjust the control panel to the desired angle, so you can easily read the display messages.

To adjust the angle of control panel, gently pinch the tab on the right side of the panel and move the control panel up and down.

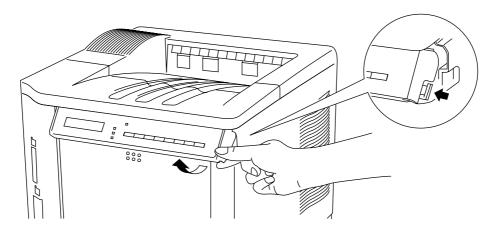


Fig. 3-1 Adjusting the Control Panel Angle

Selecting the Local Language Display

The display usually shows the current printer status. When you operate the control panel switches, it shows functions and settings. If any trouble occurs, it shows the corresponding error message. You can see these messages in several languages. The default language is English.

```
English
German
Spanish
Norwegian
Danish
French
Italian
Finnish
Portuguese
```

To change to another language:

- 1. Turn off the printer.
- 2. Hold down the FORM FEED switch and turn on the printer.

The message "SELF TEST" appears and then the message changes to "LANG.=ENGLISH * ".

- 3. Press the ▲ or ▼ switch until your desired language appears on the display.
- 4. Press the SET switch to make the selected language message effective.

An asterisk (*) appears at the end of the display for a short time, and then the printer automatically returns to on-line state with the selected language message on the display.

Using the Panel Switches

The printer has a versatile control panel. It has two operation modes:

When you press the switches, they work in the NORMAL mode as indicated above the switches. When you press the switches with the SHIFT switch held down, they work in the SHIFT mode as indicated below the switches. You can control the basic printer operations and make various printer settings in the NORMAL and SHIFT modes.

For further information, see "SWITCHES IN NORMAL MODE" and "SWITCHES IN SHIFT MODE" in Chapter 4.

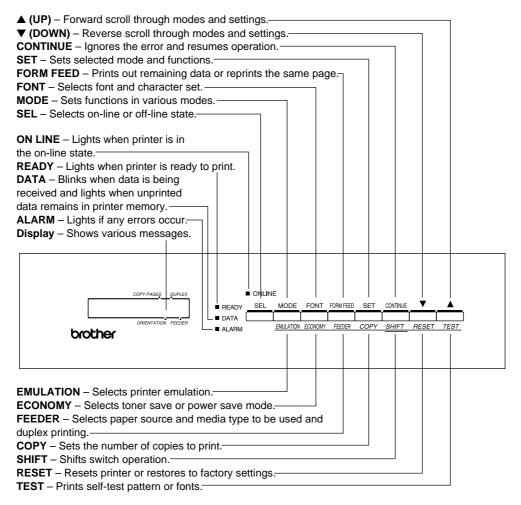


Fig. 3-2 Switch Operation in NORMAL and SHIFT Modes

∥ Note

When the printer is in use in the BR-Script 2 mode, some switches are not used.

Printer Settings

You may operate the printer with the panel switch settings unchanged. They have been factory set. When necessary, change and store them in the printer memory as user settings.

There are two types of printer settings available on this printer:

- 1. User Settings
- 2. Factory Settings

Remember that the user settings override the factory settings. The user settings are effective until other settings are made or they are restored to the factory settings.

User Settings

Although the printer settings have been factory set, you can change them with the control panel switches. Since this printer has a memory, you can store the panel switch settings in the memory as "User Settings." They are recalled every time you turn on the printer.

In addition to the current settings, you can save two more sets of user settings with the MODE switch and restore to them with the RESET switch. The current settings are cleared after restoring one of the saved user settings.

Factory Settings

The printer settings have been set at the factory before shipment. They are called "Factory Settings." Although you can operate the printer with these factory settings unchanged, you can tailor the printer by making user settings.

Note

Changing the user settings does not affect factory settings. You cannot modify the preset factory settings.

The changed user settings can be restored to the factory default settings with the RESET switch. For further information, see "RESET Switch" in Chapter 4.

PAPER HANDLING

Print Media

Paper Size

1. The upper paper cassette

Since the paper cassette is a universal type, you can use any of the sizes of paper in the list. The cassette can hold up to 500 sheets of paper (80 g/m² or 20 lbs.) or up to 40 envelopes (Paper should only be loaded up to the arrow head marked on the sliding guide).

2. The multi-purpose tray

The multi-purpose tray is the most useful feeder for you to handle many types of paper. The multi-purpose tray can hold up to 150 sheets of paper $(80 \text{ g/m}^2 \text{ or } 20 \text{ lbs.})$ or up to 15 envelopes.

The paper types and sizes that can be fed from the multi-purpose tray are as follows:

- Plain paper from 90 mm x 148 mm (3.5" x 5.8") to 216 mm x 356 mm (8.5" x 14") [Weight = 60 to 135 g/m² (16 to 36 lbs)]
- Overhead projector (OHP) films
- Colored paper
- Postcards
- · Label stock
- Envelopes of COM10, Monarch, C5, DL, or ISO B5 size

3. The optional lower paper cassette

The cassette can hold up to 500 sheets of paper (80 g/m² or 20 lbs.). It has a limitation on the paper sizes that can be used as shown in the list.

4. The duplex unit


The duplex unit can handle letter, legal, A4, Executive and ISO B5 (except Tray 2) size papers from the feeders.

available size	available type and
avanable size	capacity
cut sheet : letter legal A4 ISO	plain paper : 150
_	envelope: 15
	OHP film: 100
20 4114 110	label stock : 100
•	
	other type : weight
	$= 60 \text{ to } 135 \text{ g/m}^2$
` '	(16 to 36 lbs)
S	
· · ·	
_	plain paper : 500
	weight =
B6 and A6	60 to 105 g/m ²
envelope :COM 10, Monarch, C5,	(16 to 28 lbs)
DL and ISO B5	envelope: 40
cut sheet : letter, legal, A4,	plain paper : 500
Executive	weight =
	60 to 90 g/m ²
	(16 to 24 lbs)
cut sheet : letter, legal, A4, ISO	* The capacity of
=	T1 is reduced from
Executive	the above specified
	capacities with
	the duplex unit
	installed.
	DL and ISO B5 cut sheet: letter, legal, A4, Executive cut sheet: letter, legal, A4, ISO B5(except T2) and


Using Envelopes

Avoid using envelopes with the following characteristics:

- Smooth or shiny surfaces
- Protection cover at envelopes' adhesive parts
- Sealing flaps that have not been folded at purchase
- Sealing flaps as shown below

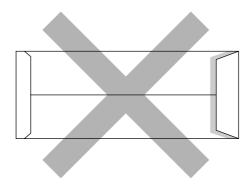

• Three or more layers of paper in the marked area

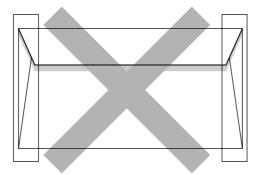

• Each side folded as shown below

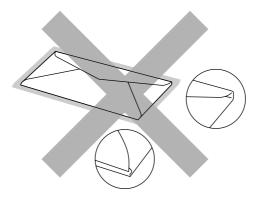


Fig. 3-3 Envelope Information

Before loading envelopes in the cassette, check the following:

- Envelopes should have a lengthwise sealing flap.
- The sealing flaps should be crisply and correctly folded (irregularly cut or folded envelopes may cause paper jams).
- Envelopes should consist of two layers of paper in the following marked area.

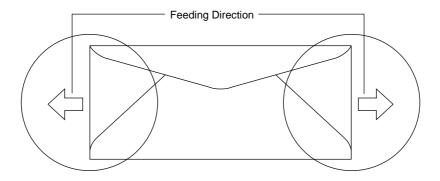


Fig. 3-4 Envelopes

✗ Note

If envelopes get smudged during printing, set the print density to a higher value in the ADVANCED MODE with MODE switch for darker printouts. To adjust the print density setting, see "Checking the Printed Test Pattern or Demo Page" in Chapter 2.

- Envelope joints that are sealed by the manufacturer should be secure.
- All sides should be properly folded without any wrinkles or creases.

Cassette Feed

The printer can feed paper from the multi-purpose tray, the upper or the optional lower paper cassette. You can select the multi-purpose tray as a paper cassette with the FEEDER switch. Since the auto paper feed mode has been factory set, the printer usually feeds paper from the upper paper cassette. When the optional lower paper cassette is installed and the upper paper cassette runs out of paper, the printer automatically switches to the lower paper cassette. When the lower paper cassette runs out of paper or it is not installed, the printer automatically switches to the multi-purpose tray (T1>T2>MP) and feeds from there as long as they contain paper of the same size. When necessary, select the feeder with the FEEDER switch. For further information, see "FEEDER Switch" in Chapter 4. For information about the lower paper cassette, see "LOWER TRAY UNIT" in Chapter 5.

Notes

When you load paper into the multi-purpose tray or the paper cassette, note the following:

- If you use the multi-purpose tray, the paper size has to be manually set in the MP TRAY SETTING mode with the FEEDER switch.
- If your application software supports paper size selection on the print
 menu, you can select it through the software. If your application
 software does not support it, you can set the paper size with the
 MODE switch.
- The paper size has been factory set to letter for 110/120V models or A4 for 220/240V models. If you want to use other sizes of paper or envelopes, change the paper size in the PAGE FORMAT MODE of the FORMAT MODE with the MODE switch. For paper size selection, see "MODE Switch" in Chapter 4.
- If you use pre-printed paper in the cassettes, please note that the paper should be loaded with the printed side face down and the top of the paper to the front of the cassette. If you use pre-printed paper in the multi-purpose tray, the paper should be loaded with the printed side face up and the top of the paper towards the printer.

You can set the paper size for the paper cassette with the MODE switch in the PAGE FORMAT mode. The printer automatically detects the paper size you set in the paper cassette. If you load a different size of paper in the paper cassette from the size selected with the MODE switch or through your application software, the printer prompts you to set the proper size of paper as follows:

(* * * * indicates the paper size you have selected with the MODE switch in the PAGE FORMAT mode or through your application software.)

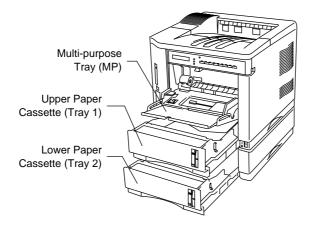


Fig. 3-5 Cassette Feed

Manual Feed

When you set paper in the multi-purpose tray with the setting MANUAL FEED = ON selected with the FEEDER switch, the printer loads paper only from the multi-purpose tray regardless of the previous feeder selection. When you select the setting PAPER IN = CONT in the MP TRAY SETTING mode, the printer loads paper automatically from the multi-purpose tray. When you select the setting PAPER IN = STOP, the printer waits for you to press the SEL key to start printing. You can set the paper feed mode and the paper size with the FEEDER switch. For further information, see "FEEDER Switch" in Chapter 4.

Notes

When you feed paper manually, note the following:

- If your application software supports a manual feed selection in the print menu, you can select it through the software. Since the software or command setting overrides the switch setting, you do not need to set the manual feed mode and the paper size with the FEEDER switch.
- If you use pre-printed paper in the multipurpose tray, please note that it is inserted with the pre-printed side face up. Insert the top of the page towards the printer in the multi-purpose tray.

Face Down Print Delivery

The printer normally ejects paper onto the top of the printer with the printed page face down.

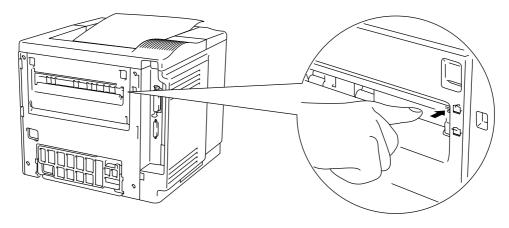


Fig. 3-6 Face Down Print Delivery

Face Up Print Delivery

You can change the print delivery path from the top to the rear of the printer. Push down the knob located inside the rear paper slit on the left of the paper path selector guide.

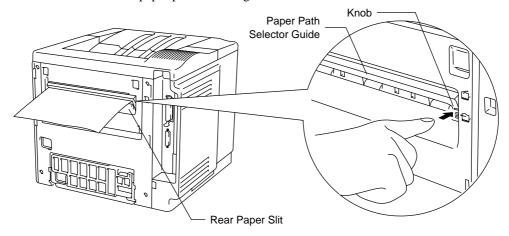


Fig. 3-7 Face Up Print Delivery

The printer ejects paper through the rear paper slit with the printed page face up.

✗ Note

After you have finished face up print delivery, be sure to reset the knob to switch back to the face down print delivery.

CHAPTER 4 CONTROL PANEL

DISPLAY AND LAMPS

This printer has one liquid crystal display (LCD) and four lamps on the control panel. The display can show various messages with up to 16 characters. The lamps light to indicate the current printer status.

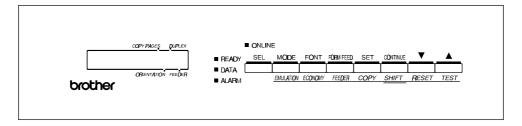


Fig. 4-1 Display and Lamps

Display

The display usually shows the current printer status. When you operate the control panel, you can change settings interactively on the display.

When you turn the printer off-line, the display changes to show the currently selected emulation and informs you that you can make settings in the current emulation.


If any problems occur, the display shows the corresponding operator call, error, or service call message to prompt you to take an action. For more information on these messages, see "TROUBLESHOOTING" in Chapter 7.

Printer Status Messages

The following table shows the printer status messages that are displayed during normal operation:

Printer Status Message	Meaning
00 READY 001P T1	The printer is ready to print.
00 IDLE 001P T1	The printer is idle. (BR-Script 2 mode only)
AUTO LaserJet 5(4+)	The printer is off-line and currently in HP LaserJet mode under AUTO emulation mode selected.
HP LaserJet 5(4+)	The printer is off-line and in HP LaserJet mode under HP LaserJet emulation mode selected.
00 BUSY 001P T1	The printer is busy. (BR-Script 2 mode only)
00 SLEEP 001P T1	The printer is in sleep status (power save mode).
01 PRINT 001P T1	The printer is printing.
01 PR300 001P T1	The printer is printing by decreasing the resolution from 600 dpi to 300 dpi because of insufficient memory.
01 SX 001P T1	The printer is printing in simplex mode due to insufficient memory for the selected duplex mode.
02 WAIT 001P T1	The printer is warming up.
04 SELF TEST	The printer is performing self-diagnosis.
05 TEST PRINT	The printer is printing the test pattern.
06 DEMO PAGE	The printer is printing the demonstration.
06 PRINT CONFIG	The printer is printing the list of the current printer settings.
06 PRINT FONTS I	The printer is printing the list of the internal or resident fonts.
06 PRINT FONTS C	The printer is printing the list of the optional fonts stored in an installed font cartridge/card.
06 PRINT FONTS P	The printer is printing the list of the permanent download fonts.
06 CARD PRINT	The printer is printing the contents of a flash memory card or HDD card.

Printer Status Message	Meaning (Continued)	
07 FF PAUSE	The printer has suspended feeding forms. Pressing the SEL switch resumes form feed.	
08 RESET TO	The printer is restoring itself to the	
USER SETTINGS	user settings you selected with the panel switches. (The message appears only momentarily.)	
09 RESET TO	The printer is restoring itself to the	
FACTORY SETTINGS	factory settings. (The message appears only momentarily.)	
Now initializing	The printer is initializing the MIO card or initializing the printer for BR-Script 2 emulation.	

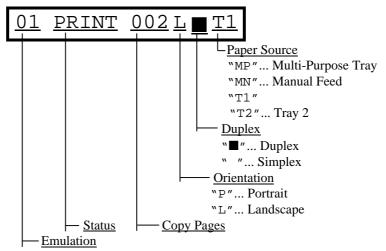

"##"... Fixed emulation expressed with double figures

Fig. 4-2 Display

[&]quot;LJ" ... AUTO HP LaserJet emulation

[&]quot;BS"... AUTO BR-Script 2

[&]quot;GL" ... AUTO HP-GL emulation

[&]quot;FX"... AUTO EPSON FX-850 emulation

[&]quot;PR"... AUTO IBM Proprinter XL emulation

Lamps

The lamps light or blink to indicate the current printer status.

READY

LED indication	Meaning
On	Ready to print
Blinking	Warming up

DATA

LED indication	Meaning
On	Data remains in the printer buffer. Pressing the
	FORM FEED switch prints the data and clears
	the buffer.
Blinking	Receiving or processing data

ALARM

LED indication	Meaning
On	Some problem has occurred in the printer.

ON LINE

LED indication	Meaning
On	The printer is on-line and ready to print
Off	The printer is off-line and stops printing.

SWITCHES IN NORMAL MODE

You can control the basic printer operations and change various printer settings in the NORMAL mode. Functions available in the NORMAL mode are shown above the panel switches.

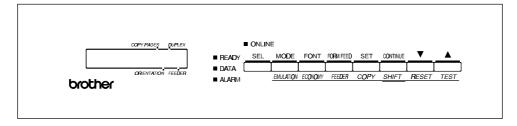


Fig. 4-3 Switches in NORMAL Mode

/ Note

The factory settings are printed in bold in this section.

SEL Switch

Pressing the SEL switch changes the state of the printer between on-line and off-line. When the printer is on-line, the ON LINE lamp lights and the printer is ready to receive data from the computer. When the printer is off-line, the ON LINE lamp is off.

To receive data from the computer, set the printer on-line. To operate the control panel switches, set the printer off-line.

When you press the SEL switch when the printer is the on-line state, it turns off-line and the LCD displays the current emulation mode.

AUTO LaserJet 5

You can enter other emulations in the auto emulation mode by pressing the \triangle (UP) or \bigvee (DOWN) switch.

Notes

When you press the SEL switch, remember the following:

- All other switches—except the SEL switch—are operational only when the printer is off-line.
- If the printer is not in auto emulation mode, the LCD displays the current emulation by pressing the SEL key to take it off-line, but you cannot enter other emulation modes. To make settings in other emulation modes, press the EMULATION switch and select the emulation.
- The SEL switch works as a "quick exit" switch. If you are lost in the display menus or you want to quickly exit the display menu, press the SEL switch. You can exit quickly from any depth of the display menu to the on-line ready state. If you have already made a setting effective by pressing the SET switch and then press the SEL switch to quickly exit, your setting (whether made by accident or on purpose) will remain effective. Pressing the SEL switch will not cancel any setting.

SET Switch

Pressing the SET switch allows you to select certain items on the display or make the displayed menu or setting effective. The switch also works as an execute switch to perform the displayed function.

When you press the SET switch, the printer stores the settings you have selected into the memory as "User Settings." Every time you turn on the printer, it is reset according to these user settings. They remain effective until you make new settings or restore them to the factory settings. For factory reset, see "RESET Switch" in this chapter.

Note

When you press the SET switch to select a setting, an asterisk appears at the end of display for a short time. Since the asterisk indicates the selection, you can easily find the current setting when you scroll through the display.

▲ (UP) or ▼ (DOWN) Switch

Pressing \triangle (UP) or ∇ (DOWN) switch scrolls the menus and settings forward or backward respectively on the display. Press or keep pressing the switch until you access the desired item.

MODE Switch

Pressing the MODE switch allows you to enter modes where you change settings. The mode menus and settings vary according to the current emulation mode and options. For details, refer to the pages indicated in parentheses.

HP LaserJet, EPSON FX-850, and IBM Proprinter XL Modes	BR-Script Mode	HP-GL Mode
INTERFACE MODE	INTERFACE MODE	INTERFACE MODE
Set interface, parameters. (4-17)	Set interface, parameters. (4-17)	Set interface, parameters. (4-17)
FORMAT MODE	FORMAT MODE	FORMAT MODE
Set orientation, paper size, margins, & others. (4-20)	Set horizontal & vertical offsets. (4-20)	Set orientation, paper size, margins, pen setting & others. (4-20)
RESOLUTION MODE	RESOLUTION MODE	RESOLUTION MODE
Set resolution & HRC. (4-28)	Set resolution & HRC. (4-28)	Set resolution & HRC. (4-28)
PAGE PROTECTION		PAGE PROTECTION
Protect data on a page. (4-31)	Not available.	Protect data on a page. (4-31)
CARD OPERATION	CARD OPERATION	CARD OPERATION
Set a flash memory card or a HDD card in HP mode. (4-32)	Set a flash memory card or a HDD card. (4-32)	Set a flash memory card or a HDD card. (4-32)
ADVANCED MODE	ADVANCED MODE	ADVANCED MODE
Set network mode, print density, & others. (4-41)	Set network mode, print density, & others. (4-41)	Set network mode, print density, & others. (4-41)
PAGE COUNTER	PAGE COUNTER	PAGE COUNTER
Show # of printed pages. (4-48)	Show # of printed pages. (4-48)	Show # of printed pages. (4-48)
exit MODE	exit MODE	exit MODE
Exit to off-line ready state. (4-48)	Exit to off-line ready state. (4-48)	Exit to off-line ready state. (4-48)

MODE Switch Settings in HP LaserJet, EPSON FX-850, and IBM Proprinter XL Modes $\,$

The following table shows all the selections you can make with the MODE switch in the HP LaserJet, EPSON FX-850, and IBM Proprinter XL modes.

✓ Note

The mode menus and settings that can appear vary according to the current emulation mode, printer status, and any options that may be

Output

Description:

Description: installed in the printer.

Mode Menu	Setting Menu	Sub-Setting Menu	Setting
INTERFACE MODE	I/F=PARALLEL	HIGH SPEED=ON	ON or OFF
(See 4-17.)		BI-DIR=ON	ON or OFF
,	I/F=RS-232C	BaudRate= 9600	150, 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200 baud
		CodeType=8 bits	7 or 8 bits
		Parity =NONE	NONE, EVEN, or ODD
		Stop Bit=1 bits	1 or 2 stop bits
		Xon/Xoff=ON	ON or OFF
		DTR (ER)=ON	ON or OFF
		Robust Xon=OFF	ON or OFF
		exit	Exit to INTERFACE MODE
	I/F=USB (HL-1660e only)		
	I/F=OPTION	I/F=OPTION Available only when a com installed.	
		MIO Setting	The settings available on the installed MIO card can appea under the sub-setting menu.
		exit	Exit to INTERFACE MODE
	I/F=AUTO	TIME OUT= 5s	1 to 99 seconds
		PRL Setting	Bi-directional settings for AUTO
		HIGH SPEED=ON	ON or OFF
		BI-DIR=ON	ON or OFF
		exit	Exit to PRL Setting
		RS-232C Setting	Parameters for AUTO mode
		BaudRate= 9600	150, 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200 baud
		CodeType=8 bits	7 or 8 bits
		Parity =NONE	NONE, EVEN, or ODD
		Stop Bit=1 bits	1 or 2 stop bits
		Xon/Xoff=ON	ON or OFF
		DTR (ER)=ON	ON or OFF
		Robust Xon=OFF	ON or OFF
		exit	Exit to RS-232C Setting

Mode Menu (Continued)	Setting Menu	Sub-Setting Menu	Setting
INTERFACE MODE	I/F AUTO	MIO Setting	Available only when a
(Continued)	(Continued)		commercial MIO card has been installed. The settings available on the installed MIO card can appear under the sub-setting menu.
FORMAT MODE	ORIENTATION	ORI=PORTRAIT	PORTRAIT or LANDSCAPE
(See 4-20.)	AUTO MODE	AUTO LF=OFF	ON LF + CR
			OFF CR only
		AUTO CR=OFF	ON LF, FF, or VT + CR
		AUTO WRAP=OFF	OFF LF, FF, or VT only
		AUTO WRAP=OFF	ON Auto wrap on OFF Auto wrap off
		AUTO SKIP=ON	ON Auto Wrap on
		AUTO SKIF=UN	margin
		(HP mode)	OFF No FF at bottom
		(iii iiiodo)	margin
		AUTO MASK=OFF	ON Auto mask on
		(EPSON & IBM modes)	OFF Auto mask off
		exit	Exit to AUTO MODE
	PAGE FORMAT MODE	PAPER =LETTER	LETTER, LEGAL, A4, A5,
		(For 110/120V model)	A6, B5, B6, EXECUTIVE,
		PAPER =A4	COM10, MONARCH, C5 and
		(For 220/240V model)	DL
		LEFT M = 0C	0 to 126 columns
		RIGHT M = 80C	10 to 136 columns
		(Letter, Portrait)	
		RIGHT M = 78C	10 to 136 columns
		(A4, Portrait)	
		TOP M =0.5" (HP mode)	0, 0.33, 0.5, 1.0, 1.5, or 2.0"
		BOTTOM M=0.5"	0, 0.33, 0.5, 1.0, 1.5, or 2.0"
		(HP mode)	
		LINES = 60L	5 to 128 lines/page
		(HP, Letter, Portrait)	
		LINES = 64L	5 to 128 lines/page
		(HP, A4, Portrait)	500 (loft) to : 500 (right) data
		X OFFSET= 0 Y OFFSET= 0	-500 (left) to +500 (right) dots
		T OFFSETE U	-500 (down) to +500 (up) dots
		exit	Exit to PAGE FORMAT MODE
	exit	CAIL	Exit to FORMAT MODE
RESOLUTION MODE	RESOLUTION	RESOLUTION	300 or 600 dpi
(See 4-28.)	HRC SETTING	HRC=MEDIUM	OFF, LIGHT, MEDIUM, or
(223 . 20.)			DARK
	exit		Exit to RESOLUTION MODE
PAGE PROTECTION (See 4-31.)	PROTECT=AUTO		AUTO, OFF, LETTER, A4, or LEGAL
CARD OPERATION	When the commercial flash	memory card or the HDD card ha	as not been formatted:
(HP mode only) (See 4-32.)	FORMAT CARD	F	Format the flash memory card or he HDD card.
,	exit	E	Exit to CARD OPERATION
	÷····	-	

Mode Menu (Continued)	Setting Menu	Sub-Setting Menu	Setting
CARD OPERATION	When the commercial	flash memory card or the HDD of	ard has been formatted:
(HP mode only)	EXECUTE DATA		Execute the data on the card.
(See 4-32.)		DATA ID=####	Execute the selected data.
		exit	Exit to EXECUTE DATA
	CARD LIST		Print the contents of the card.
	SAVE	SAVE DATA	Send data to be saved.
		SET KEY> END	End saving the data.
		DATA ID=####	Set data ID for saved data.
		SAVE MACRO	Save a macro.
		MACRO ID=####	Set macro ID for saved macro.
		PRIMARY FONT	Save primary font.
		FONT ID=####	Set primary font ID for saved font.
		SECONDARY FONT	Save secondary font.
		FONT ID=####	Set secondary font ID for saved font.
		DOWNLOAD FONT	Save download font.
		FONT ID=####	Set download font ID for saved font.
		exit	Exit to CARD OPERATION
	DELETE	MACRO ID=####	Delete the selected macro.
		DATA ID=####	Delete the selected data.
		FONT ID=####	Delete the selected font.
		FORMAT CARD	Format the flash card.
		SET -> DELETE ALL	Execute formatting the card.
		exit	Exit to FORMAT CARD
	exit		Exit to CARD OPERATION
ADVANCED MODE	NETWORK MODE	LOCK PANEL=OFF	ON or OFF
(See 4-41.)		PASS NO=###	Enter pass number.
		AUTO FF=OFF	ON or OFF
		WAIT TIME= 5s	1 to 99 seconds for AUTO ON
		FF SUPPRESS=OFF	ON or OFF
		TONER LOW=CONT	CONT or STOP
		exit	exit to NETWORK MODE
	CONTINUE MODE	CONTINUE=MANUAL	AUTO or MANUAL
	BUZZER SETTING	BUZZER=ON	ON or OFF
	SCALABLE FONT	FONT=ALL	ALL, LJ4
	PRINT DENSITY		Increase or decrease the print density. (15 levels)
	INPUT BUFFER		Increase or decrease the input
			buffer capacity. (15 levels)
	SAVE SETTINGS	SAVE SETTING 1	Save the current setting as #1
		SAVE SETTING 2	Save the current settings as #2
	exit		exit to ADVANCED MODE
PAGE COUNTER (See 4-48.)	COUNT= 0		Shows the number of printed pages.
exit MODE (See 4-48.)			Exit MODE.

MODE Switch Settings in BR-Script 2 Mode

The following table shows all the selections you can make with the MODE switch in the BR-Script $2\ \text{mode}$.

Note

The mode menus and settings that can appear vary according to the current emulation mode, printer status, and any options that may be installed in the printer.

Mode Menu	Setting Menu	Sub-Setting Menu	Setting
INTERFACE MODE	<u> </u>	<u> </u>	
Same as HP LaserJet M	lode		
(See 4-17.)			
FORMAT MODE	X OFFSET=0		-500 (left) to +500 (right) dots
(See 4-22.)	Y OFFSET=0		-500 (up) to +500 (down) dots
	exit		Exit to PAGE FORMAT MODE
RESOLUTION MODE	RESOLUTION	RESOLUTION=600	300 or 600 dpi
(See 4-28.)	APT SETTING	APT=OFF	ON or OFF
	HRC SETTING	HRC=MEDIUM	OFF, LIGHT, MEDIUM, or DARK
	exit		Exit to RESOLUTION MODE
CARD OPERATION	When the commerci	ial flash memory card or the HDD	card has not been formatted:
(See 4-32.)	FORMAT CARD		Format the flash memory card or the HDD card.
	exit		Exit to CARD OPERATION
CARD OPERATION	When the commerci	al flash memory card or the HDD	card has been formatted:
(See 4-32.)	EXECUTE DATA		Execute the data on the card.
		DATA ID=####	Execute the selected data.
		exit	Exit to EXECUTE DATA
	CARD LIST		Print the contents of the card.
	SAVE	SAVE DATA	Send data to be saved.
		SET KEY> END	End saving the data.
		DATA ID=####	Set data ID for saved data.
		exit	Exit to CARD OPERATION
	DELETE	MACRO ID=####	Delete the selected macro.
		DATA ID=####	Delete the selected data.
		FONT ID=####	Delete the selected font.
		FORMAT CARD	Format the card.
		SET -> DELETE ALL	Execute formatting the card.
		exit	Exit to FORMAT CARD OPERATION
	exit		Exit to CARD OPERATION

USER S GUIDE

Mode Menu (Continued)	Setting Menu	Sub-Setting Menu	Setting
ADVANCED MODE	NETWORK MODE	LOCK PANEL=OFF	ON or OFF
(See 4-41.)		PASS NO=###	Enter pass number.
		AUTO FF=OFF	ON or OFF
		WAIT TIME= 5s	1 to 99 seconds for AUTO ON
		FF SUPPRESS=OFF	ON or OFF
		TONER LOW=CONT	CONT or STOP
		exit	exit to NETWORK MODE
	ERROR PRINT	ERROR PRINT=OFF	ON or OFF
	CONTINUE MODE	CONTINUE=MANUAL	AUTO or MANUAL
	BUZZER SETTING	BUZZER=ON	ON or OFF
	PRINT DENSITY		Increase or decrease the print density. (15 levels)
	INPUT BUFFER	00000	Increase or decrease the input
			buffer capacity. (15 levels)
	SAVE SETTINGS	SAVE SETTING 1	Save the current setting as #1
		SAVE SETTING 2	Save the current settings as #2
	exit		exit to ADVANCED MODE
PAGE COUNTER (See 4-48.)	COUNT= 0		Shows the number of printed pages.
exit MODE			Exit MODE
(See 4-48.)			

MODE Switch Settings in HP-GL Mode

The following table shows all the selections you can make with the MODE switch in the HP-GL mode.

Note

The mode menus and settings that can appear vary according to the current emulation mode, printer status, and any options that may be installed in the printer.

Mode Menu	Setting Menu	Sub-Setting Menu	Setting
INTERFACE MODE Same as LaserJet Mode (See 4-17.)			
FORMAT MODE (See 4-20.)	PAGE FORMAT MODE	PAPER=LETTER (For 110/120V mode	LETTER, LEGAL, A4, A5, A6, B5, B6, EXECUTIVE, COM10, MONARCH, C5, and DL
		X OFFSET= 0	-500 (left) to +500 (right) dot
		Y OFFSET= 0	-500 (up) to +500 (down) dots
		exit	Exit to PAGE FORMAT MODE
	GRAPHICS MODE	PEN SETTING	
		SETTING=PEN	PEN1 to 6 (Set size and gray percentage for the selected pen.)
		SIZE #=3 dots	1 to 10 dots (pen size in dots) (# is the selected pen number.)
		GRAY #=100%	15, 30, 45, 75, 90, or 100% (# is the selected pen number.)
		exit	Exit to SETTING=PEN1-6
		exit	Exit to GRAPHICS MODE
		CHARACTER SET	
		STANDARD SET	Standard character set
		ANSI ASCII	See character sets on page 4-28.
		ALTERNATE SE	T Alternate character set
		ANSI ASCII	See character sets on page 4-28.
		exit	Exit to GRAPHICS MODE
	exit		Exit to FORMAT MODE
RESOLUTION MODE	RESOLUTION	RESOLUTION=600	300 or 600 dpi
(See 4-28.)	HRC SETTING	HRC=MEDIUM	OFF, LIGHT, MEDIUM, or DARK
	exit		Exit to RESOLUTION MODE

USER S GUIDE

Mode Menu (Continued)	Setting Menu	Sub-Setting Menu	Setting	
PAGE PROTECTION	PROTECT=AUTO exit		AUTO, OFF, LETTER, A4, or LEGAL Exit to CARD OPERATION	
(See 4-31.)				
CARD OPERATION				
Same as BR-Script mode				
(See 4-32.)				
ADVANCED MODE				
Same as HP LaserJet mod	de			
(See 4-41.)				
PAGE COUNTER	COUNT= 0		Shows the number of printed	
(See 4-48.)			pages.	
exit MODE			Exit MODE	
(See 4-48.)				

Basic Operation Procedures

When you operate the MODE switch, remember the following basic steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Press the MODE switch to enter the MODE menus.

The first mode menu appears on the display.

INTERFACE MODE

• Press the ▲ or ▼ switch to scroll through the menus forward or backward. (Pressing the MODE switch allows forward scroll.)

INTERFACE MODE
$$\leftarrow \nabla$$
 or $\triangle \rightarrow$ FORMAT MODE $\leftarrow \nabla$ or $\triangle \rightarrow$ RESOLUTION MODE $\leftarrow \nabla$ or $\triangle \rightarrow \dots$

 Press the SET switch to enter the next lower menu level of the selected menu.

Mode Menu —SET \rightarrow Setting Menu —SET \rightarrow Sub-Setting Menu

• Press the ▲ or ▼ switch to select the setting on the display.

I/F=PARALLEL
$$\leftarrow \nabla$$
 or $\triangle \rightarrow$ I/F=RS-232C $\leftarrow \nabla$ or $\triangle \rightarrow$ I/F=OPTION $\leftarrow \nabla$ or $\triangle \rightarrow ...$

• Press the SET switch to make the selected setting effective. Then you move to the next selection or exit to the upper menu level.

When you see "exit" and press the SET switch, you can exit from the current level of menu to the next higher level of the menu.

3. Advance to "exit MODE" and press the SET switch to exit from the mode menus to the off-line ready state.

Pressing the SEL switch any time in any level of the menus allows you to exit from the mode menus to the on-line state. The settings you have made with the SET switch before exit are effective.

Operation Example: Selecting the Parallel Interface

For this session, select the parallel interface manually as follows:

- 1. Press the SEL switch to set the printer off-line.
- 2. Press the MODE switch.

The display shows the first menu.

INTERFACE MODE

3. Press the SET switch.

When you enter the interface mode, the display first shows the current interface with the asterisk.



4. Press the ▲ or ▼ switch until the desired interface appears on the display.

I/F=PARALLEL

Display Message	Interface Mode	
I/F=PARALLEL	Parallel interface	
I/F=RS-232C	Serial interface	
I/F=USB	Universal Serial Bus interface (HL-1660e only)	
I/F=OPTION	Optional interface for MIO card	
I/F=AUTO	Auto interface selection	

/ Note

The optional interface is available only when a commercial MIO compatible sharing/network card has been installed.

5. Press the SET switch to make the displayed selection effective.

An asterisk appears at the end of the display for a short time. Then the printer automatically exits from the setting menu to the interface menu.

INTERFACE MODE

6. Press the \triangle or ∇ switch until the exit menu appears on the display.

7. Press the SET switch.

Then the printer automatically returns to the off-line ready state.

INTERFACE MODE

The automatic interface selection has been factory set. If you want to select a specific interface manually, use the interface mode to set it.

Display Message	Interface Mode
I/F=PARALLEL	Parallel interface
I/F=RS-232C	Serial interface
I/F=USB	Universal Serial Bus interface (HL-1660e only)
I/F=OPTION	Optional interface for MIO card
I/F=AUTO	Auto interface selection

Select the setting menu and enter the sub-setting menu to change the setting as follows:

■ Automatic Interface Selection

When you use the automatic interface selection function, select the function on the display as follows:

When you select this function with the SET switch, the display shows the next sub-setting menu as follows:

You need to set the time out for the auto interface selection from 1 to 99 seconds with the \triangle or ∇ switch: **factory setting = 5 seconds**. This time out is the duration during which the printer will not allow another automatic change to the interface.

Even if you choose the automatic interface selection, you need to set the communications parameters for the serial interface, high speed/bi-directional communications for the parallel interface, and the optional interface settings if the installed MIO card requires them. See the tables below.

For further information about automatic interface selection, see "AUTOMATIC INTERFACE SELECTION" in Chapter 3.

■ Parallel Interface

When you intend to use the bi-directional parallel interface, select the interface on the display as follows:

When you use the parallel interface, you need to set the communications mode in the following sub-setting menu.

Display Message	High Speed and Bi-directional Parallel Communications	
HIGH SPEED=ON	Turns on or off the high speed parallel communications.	
BI-DIR=ON	Turns on or off the bi-directional parallel communications.	

The above high-speed and bi-directional settings are used for the bi-directional parallel interface of this printer. The bi-directional parallel interface is compatible with the IEEE 1284 standard bi-directional parallel interface. Although it uses the same cable, hardware, and software as the bi-directional parallel interface, to use its enhanced capabilities—such as bi-directional communication between the computer and printer and faster transmission of data—you need a printer driver or software that supports these features. Check with your software vendor to see if your software supports bi-directional parallel features.

■ Serial Interface

When you intend to use the serial interface, be sure to select the same communications parameters on both the printer and computer. You must set them for the automatic interface selection, too.

Display Message	Parameters	Settings	
BaudRate= 9600	Baud rate (Data transfer speed)	150, 300, 600, 1200, 2400, 4800, 9600 , 19200, 38400, 57600, 115200 baud	
CodeType=8 bits	Code type (Data length)	7 bits or 8 bits	
Parity =NONE	Parity (Data error check)	None, even, or odd	
Stop Bit=1 bits	Stop bits (Data separator)	1 or 2	
Xon/Xoff=ON	Xon/Xoff (Handshake protocol)	ON: DTR & Xon/Xoff handshake OFF: DTR handshake only	
DTR (ER) = ON (Effective when Xon/Xoff=ON)	Data terminal ready (ER)	ON: Makes DTR (ER) low when the buffer is full. OFF: Does not make DTR (ER) low when the buffer is full. DTR(ER) goes low only when the printer is off-line.	
Robust Xon =OFF (Effective when Xon/Xoff=ON)	Robust Xon	ON: Sends Xon while waiting. OFF: Sends Xon once, when the printer status changes from off-line to on-line.	

■ Universal Serial Bus (USB) interface (HL-1660e only)

If your computer has a USB interface, you can connect the printer and computer with the USB interface. When using the USB interface, select the interface on the display as follows;

■ Optional Interface

If you have installed a commercial modular input/output (MIO) card in the printer, you can select the optional MIO interface in this mode. If the installed MIO card requires any optional interface settings, they appear under this menu. Set them, referring to the manual of the MIO card.

/ Note

This setting appears only when the MIO card has been installed. For installation of the MIO card, see "MODULAR I/O CARD" in Chapter 5.

FORMAT MODE

ORIENTATION

When you select "ORIENTATION", you can set portrait or landscape orientation.

✗ Note


The ORIENTATION selection is effective in the HP LaserJet, EPSON FX-850, and IBM Proprinter XL modes. It does not work in other emulation modes.

This printer can print pages in portrait or landscape orientation. You can check the current orientation on the display.



Fig. 4-4 Page Orientation

When you enter the setting mode, the display first shows the current orientation with an asterisk.



Press the \triangle or ∇ switch until the desired orientation appears on the display.

Display Message	Orientation	
ORI=PORTRAIT	Portrait	
ORI=LANDSCAPE	Landscape	

Press the SET switch to make the displayed selection effective.

An asterisk appears at the end of the display for a short time. Then the printer automatically exits from the setting mode to the FORMAT MODE.

When portrait has been selected, the display may look as follows:

When landscape has been selected, the display may look as follows:

00 READY 001L T1

AUTO MODE

/ Note

The settings in this mode menu are effective in the HP LaserJet, EPSON FX-850, and IBM Proprinter XL modes. They do not appear in other emulation modes.

The page/line termination is set in this mode.

Display Message	Setting	Auto Mode
AUTO LF =OFF	ON	$CR \rightarrow CR + LF$
	OFF	$CR \rightarrow CR$
AUTO CR =OFF	ON	$LF \rightarrow LF+CR, FF \rightarrow FF+CR, VT \rightarrow VT+CR$
	OFF	$LF \rightarrow LF, FF \rightarrow FF, VT \rightarrow VT$
AUTO WRAP =OFF	ON	Line feed and carriage return occur when the printer position reaches the right margin.
	OFF	No line feed and carriage return occur when the printer position reaches the right margin.
AUTO SKIP =ON	ON	Form feed occurs when the printer position reaches the bottom margin.
	OFF	No form feed occurs when the printer position reaches the bottom margin.
AUTO MASK =OFF	ON	The printer ignores the top and bottom margin settings you make with the control panel. The page length is automatically set to 11" for letter or A4-size paper and to 14" for legal-size paper.
	OFF	The printer operates according to the margin settings you make with the control panel.

✗ Note on AUTO MASK

When you use application software in non-HP modes, be sure to set "AUTO MASK" to ON. When you use letter- or A4-size paper, the top and bottom 2 lines are masked and they do not appear on the printout.

The auto modes are subject to the current emulation mode.

O: The auto modes can be set.

X : The auto modes cannot be changed and no setting appears.

— : The auto modes are not available.

	Printer E	Printer Emulation (Factory settings in bold print)			
AUTO Mode	HP	EPSON	IBM		
	LaserJet	FX-850	Proprinter XL		
AUTO LF	O OFF	O OFF	O OFF		
AUTO CR	O OFF	X ON	O OFF (Note)		
AUTO WRAP	O OFF	X ON	X ON		
AUTO SKIP	O ON	_	_		
AUTO MASK	_	O OFF	O OFF		

/ Note

In the IBM emulation mode, FF codes are always followed by a CR code.

PAGE FORMAT MODE

Notes

The settings in this mode menu vary as follows:

- All settings are effective in the HP LaserJet, EPSON FX-850, and IBM Proprinter XL modes.
- The X and Y (vertical and horizontal) offsets are effective in the BR-Script 2 mode. Other settings are not effective and they do not appear in this mode.
- The paper size and the X and Y (vertical and horizontal) offsets are effective in the HP-GL mode. Other settings are not effective and they do not appear in this mode.

The following settings can be made in this mode:

Display Message	Page Format Mode	
PAPER =LETTER	Set cut sheet paper size to letter , A4 , legal, B5, A5, B6, A6, or executive, or envelope size to COM10, Monarch, C5, or DL.	
LEFT M = OC P	Set the left margin at column 0 -126 at 10cpi.	
RIGHT M = 80C P	Set the right margin at column 10-136 at 10cpi. See "List of Factory Settings" in this chapter.	
TOP M =0.5" P	Set the top margin at a distance from the top edge of the paper: 0, 0.33, 0.5, 1.0, 1.5, or 2.0 inches. factory setting = 0.33 (Non-HP), 0.5 (HP)	
BOTTOM M=0.5" P	Set the bottom margin at a distance from the bottom edge of the paper: 0, 0.33, 0.5, 1.0, 1.5, or 2.0 inches. factory setting = 0.33 (Non-HP), 0.5 (HP)	
LINES = 60L P	Set the number of lines per page from 5 to 128 lines. See "List of Factory Settings" in this chapter.	

The letter "P" in the display messages indicates that the page orientation is portrait. The letter "L" is displayed when it is landscape.

Display Message			Page Format Mode (Continued)	
X	OFFSET=	0	Move the print start position (at the upper left corner on pages) horizontally up to -500 dots to the left or +500 dots to the right in 300dpi dot unit increments: factory setting = 0 .	
Y	OFFSET=	0	Move the print start position (at the upper left corner on pages) vertically up to -500 dots downward or +500 dots upward in 300dpi dot increments: factory setting = 0 .	

Notes

When you make settings in PAGE FORMAT MODE, note the following:

- The letter size has been factory set for 110/120V model. The A4 size has been factory set for 220/240V model.
- When you use a smaller size of paper than that specified in the PAGE FORMAT MODE, be sure that the print area is smaller than the paper size, or the inside of the printer will get stained with toner. It is recommended that you perform a test before actual use: for this test, you could use a letter or A4 size of paper to see the printed area is completely inside the paper size you are going to use. This simple test will help prevent toner from being incorrectly applied to the inside of your printer, which may cause later print jobs to be smudged with toner.
- The factory settings of the right/left margins and lines vary according to the paper size and orientation. See the tables below.
- The top and bottom margins have been factory set to 0.5" in the HP emulation mode and to 0.33" in the non-HP emulation modes.
- The setting margins are subject to the current page orientation. The display shows the current orientation with "P" for portrait and "L" for landscape.
- Images offset outside the print area are not printed.

■ About Right and Left Margins

The settings range of the right and left margins are subject to the page orientation as follows. The right margin should be placed 10 columns greater than the left margin: minimum text width = 10 columns.

If the orientation is changed, the margin settings are restored to the factory settings. If the paper size is changed and the right and left margins exceed the paper size, they are restored to the factory settings: if they do not exceed the paper size, they remain effective.

The following table shows the settings range in columns. The factory settings are printed in bold.

Paper Size	Portrait		Landscape	
	Left Margin	Right Margin	Left Margin	Right Margin
Letter	0 -70	10-80	0 -96	10 -106
A4	0 -70	10- 78 -80	0 -103	10-113
Legal	0 -70	10-80	0 -126	10-136

■ About Line Settings

Setting the number of lines/page automatically sets the line spacing or line feed pitch. If the paper size is changed, the number of lines/page changes accordingly. The new setting is calculated with the following expression and the remainder, if any, is ignored. However, the line feed pitch and the top and bottom margins remain effective.

$$\# \ of \ Lines/Page = \frac{Page \ Length - (Top \ Margin + Bottom \ Margin)}{Line \ Feed \ Pitch \ [Vertical \ Motion \ Index \ (VMI)]}$$

The setting of lines/page is subject to the current paper size and orientation. For example, when letter-sized paper is used, the printer can print 60 lines per page in portrait orientation. If the orientation is changed, the line settings are restored to the factory settings in that orientation.

The following tables show the factory settings in each emulation mode.

In HP Mode

	Orientation	Orientation	
Size	Portrait	Landscape	
Letter	60 lines	45 lines	
A4	64 lines	43 lines	
Legal	78 lines	45 lines	

In Non-HP Modes

	Orientation	
Size	Portrait	Landscape
Letter	62 lines	47 lines
A4	66 lines	45 lines
Legal	80 lines	47 lines

✗ Note

When you use application software in the non-HP modes, the recommended settings are as follows:

- Left margin = column 0
- Right margin = Max. value
- · Auto MASK ON

GRAPHICS MODE

Note

The settings in this mode menu are effective only in the HP-GL mode. They do not appear in any other emulation modes.

Since the HP-GL emulation mode is for a plotter, you can select the plotter pens, the pen size and percentage of gray in this mode menu.

Display Message	Graphics Mode
PEN SETTING	Set the size and percentage of gray separately for six plotter pens.
CHARACTER SET	Set the standard and alternate character sets.

≠ Note

In most cases, the application software controls the above graphics mode settings, so you do not need to set them in this menu with the MODE switch. The software or command setting overrides the switch setting.

Select the setting menu and enter the sub-setting menu to make the settings as follows:

■ Pen Setting

When you select "PEN SETTING," you can set the size and percentage of gray for each plotter pen. You can make settings separately for six pens.

Select the pen with the \blacktriangle or \blacktriangledown switch and enter the menu with the SET switch.

After you select the pen, advance to the sub-setting menu for size or gray-percentage selection with the \triangle or ∇ switch and enter the menu with the SET switch.

When the following message appears, the pen size can be set from 1 dot to 10 dots with the \triangle or ∇ switch:

When the following message appears, the shades of gray can be set to 15, 30, 45, 75, 90, or 100% with the \triangle or ∇ switch.

Notes

- When another pen is selected, the display shows the selected pen with the number after "SIZE' or "GRAY."
- Whichever resolution, 300 or 600 dpi, you have selected, the pen size takes effect in units of 300 dpi.

■ Character Set

When you select "CHARACTER SET," you can select the standard and alternate character sets used in the HP-GL emulation mode.

Enter the sub-setting menu and select the menu for the standard or alternate character set with the \blacktriangle or \blacktriangledown switch:

To set the standard character set, select the following message:

STANDARD SET

or

To set the alternate character set, select the following message:

ALTERNATE SET

Then press the SET switch to show the following message:

ANSI ASCII *

Change the character set with the \triangle or ∇ switch and make the selection effective by pressing the SET switch. For specific character sets, see "SYMBOL/CHARACTER SETS" in Appendix.

Character Sets in HP-GL Emulation Mode			
ANSI ASCII (Factory setting)			
9825 CHR. SET			
FRENCH/GERMAN			
SCANDINAVIAN			
SPANISH/LATIN			
JIS ASCII			
ROMAN8 EXT.			
ISO IRV			
ISO SWEDISH			
ISO SWEDISH:N			
ISO NORWAY 1			
ISO GERMAN			
ISO FRENCH			
ISO U.K.			
ISO ITALIAN			
ISO SPANISH			
ISO PORTUGUESE			

ISO NORWAY 2

RESOLUTION MODE

The resolution, advanced photoscale technology (APT) and high resolution control (HRC) can be set in this mode menu.

Display Message	Resolution Mode
RESOLUTION	Set the resolution of the printer.
APT SETTING	Set the APT function. This menu appears only in the BR-Script 2 mode.
HRC SETTING	Set the HRC function.

Select the setting menu and enter the sub-setting menu to make the settings as follows:

■ Resolution

When you select "RESOLUTION," you can choose a resolution of 300 or 600 dots per inch (dpi) on this printer. You can set the resolution in this mode according to your requirement.

The printer may not be able to print large files because of the resolution and the printer's memory. The higher the resolution and file size, the more memory is required.

Display Message	Resolution
RESOLUTION=600	Set the resolution to 600 dpi. (Factory setting)
RESOLUTION=300	Set the resolution to 300 dpi.

Select the print resolution in this mode according to the resolution required for your print jobs as shown below:

	Resolution Setting in Resolution Mode		
Print Jobs	300 dpi	600 dpi	
300 dpi	For optimum print quality	For mixing 300 dpi bitmaps with 600 dpi	
600 dpi	Not recommended	For optimum print quality	

/ Note

Even if you set the resolution to 600 dpi in this mode, the printer may not be able to print large files at 600 dpi because of insufficient memory. However, it automatically decreases the resolution to 300 dpi to print them. While the printer is printing, the display prompts "01 PR300"

If the printer cannot print files even at 300 dpi, the "MEMORY FULL" error occurs. See "TROUBLESHOOTING" in Chapter 7.

This automatic resolution decrease function works in the BR-Script 2 mode and other emulation modes with the page protection on. See also "PAGE PROTECTION" in this chapter.

When you want to print without decreasing the resolution, you must expand the memory capacity of the printer to 6-Mbytes or more.

Expand the memory capacity referring to the table below. It shows the minimum size of memory required in the BR-Script 2 mode.

Paper Size	300 dpi	600 dpi
Letter or A4	4 Mbytes	6 Mbytes
Legal	4 Mbytes	6 Mbytes
(Duplex printing)	4 Mbytes	10 Mbytes

For memory expansion, see "RAM EXPANSION" in Chapter 5 or consult the dealer where you purchased the printer.

■ APT Setting

When you select "APT SETTING," you can use the advanced photoscale technology (APT). This function offers photographic fine grayscale on graphics. APT setting is available only at 600 dpi resolution in BR-Script 2 mode and it requires 6 MB of RAM to enjoy APT printouts. When you set APT=ON, the setting of high resolution control (HRC) is unavailable.

Display Message	Advanced Photoscale Technology
APT =OFF	Cancel the advanced photoscale technology. (factory setting)
APT =ON	Effectuate the advanced photoscale technology.

■ HRC Setting

When you select "HRC SETTING," you can set the high resolution control (HRC). This function is a special function that offers improved print quality of characters and graphics that conventional laser printers cannot attain with resolutions of 300 or 600 dpi. You can set this function in this mode.

Display Message	High Resolution Control
HRC =OFF	Cancel the high resolution control.
HRC =LIGHT	Set the high resolution control to the light level.
HRC =MEDIUM	Set the high resolution control to the medium level. (Factory setting)
HRC =DARK	Set the high resolution control to the dark level.

The following figures show jagged print with the high resolution control set to "OFF" on the left and clear and crisp print with the control set to "MEDIUM" on the right.

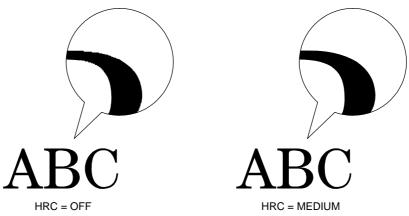


Fig. 4-5 High Resolution Control

The high resolution control has been factory set to "MEDIUM." The "LIGHT" or "DARK" setting might be better depending on the selected print density. Choose the best setting for clear and crisp printouts.

To check the printout with the high resolution control, perform the test print with the TEST switch. For operation, see "TEST Switch."

When you perform "TEST PRINT," the printer prints the test pattern including a block of lines. If the high resolution control is "OFF," the lines in the test pattern are unsmoothed or stepped as shown in the left figure below. The pattern will be smoother if the high resolution control is set to LIGHT, MEDIUM, or DARK. Choose an HRC setting and perform the test print so that stepped lines become unnoticeable.

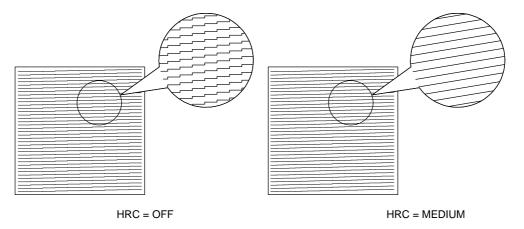


Fig. 4-6 High Resolution Control in Test Printout

PAGE PROTECTION

Note

The setting in this mode menu is effective in the HP LaserJet, EPSON FX-850, IBM Proprinter XL, and HP-GL modes. It does not appear in the BR-Script 2 mode.

If print images are too complex to print, the printer may print them out in parts or only on part of the page. If this occurs, the printer loses print data and shows the following message:

31 PRINT OVERRUN

The page protection function reserves additional memory so that the printer can create the entire page image in memory before physically printing it out. This function can be set for letter, A4, or legal size paper. Select the paper size for page protection.

Display Message	Page Protection
PROTECT=AUTO	Page protection on only when it is necessary. (Factory setting)
PROTECT=LETTER	Page protection on for letter size paper.
PROTECT=A4	Page protection on for A4 size paper.
PROTECT=LEGAL	Page protection on for legal size paper.
PROTECT=OFF	Page protection off

To protect pages, you need the memory capacity as shown in the following table:

Protection	300 dpi	600 dpi
Off	2 Mbytes	2 Mbytes
Letter or A4	2 Mbytes	6 Mbytes
Legal	3 Mbytes	6 Mbytes
(Duplex)	4 Mbytes	10 Mbytes

Notes

When you use the page protection function, note the following:

- When you want to print at 600 dpi with the page protection function on, be sure to expand the memory capacity to a minimum of 6 Mbytes; or the resolution is automatically reduced to 300 dpi for printouts.
- If the function setting is changed, all download fonts and macros—including permanent ones—are cleared. If the memory is too low to protect pages, page protection does not take effect.

CARD OPERATION

Notes

- BE SURE TO TURN OFF THE PRINTER POWER SWITCH BEFORE INSTALLING OR REMOVING THE FLASH MEMORY CARD OR HDD CARD, OR THE CARD WILL BE DAMAGED.
- The settings in this mode menu are effective only when you have installed a flash memory card or a HDD card in the card slot of the printer and you have selected the HP LaserJet, HP-GL, or BR-Script 2 mode. They do not appear when the printer has no card or is in any other emulation mode.

- If you turn the printer off or remove the flash memory card or the HDD card while data is being written onto or deleted from the card, all the data on the card may be lost.
- If the write protect switch of the flash memory card or the HDD card is on, this mode menu does not appear.

Be sure to install a commercial flash memory card or HDD card in the upper card slot of the printer. For installation, see "FONT CARTRIDGE/CARD, FLASH MEMORY/HDD CARD" in Chapter 5.

When you are in this mode menu, you can save macros and fonts in the installed flash memory card or the HDD card.

The sub-setting menus displayed in this mode menu vary according to the state of the installed card.

When the installed card is not formatted:

When you enter this mode menu with the flash memory card or the HDD card installed but not formatted by this printer, you must first format the card.

Display Message	Card Operation
FORMAT CARD	Format a new flash memory card or HDD card.
exit	Exit to CARD OPERATION

When the display shows "FORMAT CARD," press the SET switch to format the installed card.

After the printer finishes formatting the card, you exit to the "CARD OPERATION" menu.

/ Notes

- If the card is formatted, data that has been previously written is erased.
- It takes ten or more seconds to format a 2-Mbyte flash memory card or HDD card. The more the capacity of the card, the longer time it takes to format the card.

When the installed flash memory card or HDD card is formatted:

When you enter this mode menu with the formatted flash memory card or HDD card installed, the display shows the following menus:

Display Message	Flash Operation
EXECUTE DATA	Select the data ID and execute the selected data. This menu appears only when any data has been saved on the card.
CARD LIST	Print out the contents of the flash memory card or the HDD card. This menu appears only when anything has been saved in the card.
SAVE	Save received data, macros, and fonts.
DELETE	Delete items from the card.

A common use of the flash memory is with FORMS software packages. With these commercially available software packages you have an option to send a form to the printer without any data. After you send the form to the printer, you may save the form in the flash memory as a Macro. Then the next time you want to print this form, you would setup your FORMS software package to SEND DATA ONLY - USE FORM IN PRINTER. This process would save you anything from 1 to 4 minutes per print job.

Select the setting menu and enter the sub-setting menu to change the settings as follows:

■ Execute Data

/ Note

This menu appears only when data has been saved on the card.

When you select "EXECUTE DATA," you can execute any of the data saved in the SAVE DATA mode.

When you enter this sub-setting menu with the SET switch, the printer prompts you to select the ID of the data.

Select the ID with the \triangle or ∇ switch and press the SET switch again, so that the printer executes the selected data.

■ Card List

When you select "CARD LIST" and you press the SET switch, the printer automatically loads paper and starts printing the contents of the installed flash memory card or HDD card. You can check the contents and the unused capacity of the card.

■ Save

When you select "SAVE" and you press the SET switch, you can enter the following sub-setting menus to save the macros and fonts in the installed card:

Display Message	Save Menu
SAVE DATA	Save data that the printer will receive and set its ID.
SAVE MACRO	Save a macro. This menu appears only in the HP LaserJet emulation mode.
PRIMARY FONT	Save the primary font selected with the FONT switch. This menu appears only in the HP LaserJet emulation mode.
SECONDARY FONT	Save the secondary font selected with the FONT switch. This menu appears only in the HP LaserJet emulation mode.
DOWNLOAD FONT	Save a download font. This menu appears only in the HP LaserJet emulation mode and BR-Script 2 mode.

/ Note

If the capacity of the card becomes low while macros and fonts are being saved, the display shows the "CARD FULL" error message and they cannot be saved. Use a new card or delete unnecessary macros and fonts from the card. The CARD LIST displays the contents and the used capacity.

• Save Data

You can send data and save it on the card. In this mode, any kind of data such as PCL data, BR-Script 2 data, and command strings can be saved. When you select "SAVE DATA" and you press the SET switch, the display shows the following guide menus.

This message prompts you to press the SET switch again so that the printer exits from the data reception status when you finish sending data.

Send data from your computer.

✗ Notes

When you send data to be saved on the card, it is temporarily stored in the RAM of the printer. Note the following:

- If the received data exceeds the RAM capacity, a memory full error occurs. You can clear this error with the CONTINUE switch. When this error occurs, only part of the image has been stored in RAM, therefore, you cannot save the data to the card.
- The printer is reset to ensure as much capacity as possible in RAM. If any data remains, it is printed out first.

After you have finished sending data, press the SET switch again, so that the printer exits from the data reception status.

When you exit from the data reception status, you see the following message on the display:

Select the data ID with the \triangle or ∇ switch and press the SET switch. The printer will then save the received data with the ID on the card.

Notes

- When you see an asterisk on the display, the ID number has been used for other data or a macro. If you select the used ID number, the old data or macro is erased and replaced with the new data.
- Once the data is saved, you can execute it with "EXECUTE DATA" or with a data execution command.
- The data saved in the SAVE DATA mode can not be run with the macro execution command in HP LaserJet emulation.

• Save Macro

✗ Note

The "SAVE MACRO" menu appears only in the HP LaserJet emulation mode.

If you have downloaded a macro in the printer's memory, you can save the macro on the installed flash memory card or HDD card.

If a macro has been downloaded in the printer's memory and you press the SET switch at "SAVE MACRO," the printer prompts you to select the ID of the macro.

MACRO ID=####

Select the ID with the \triangle or ∇ switch and press the SET switch again, so that the printer saves the macro with the selected ID.

✓ Note

When you see an asterisk on the display, the ID number has been used for another macro or data. If you select the used ID number, the old macro or data is erased and replaced with the new macro.

You can execute a macro with the macro execution command.

• Primary Font or Secondary Font

∥ Note

The "PRIMARY FONT" and "SECONDARY FONT" menus appear only in the HP LaserJet emulation mode.

If you have selected the primary or secondary font with the FONT switch, you can save the font on the installed flash memory card or HDD card.

When you press the SET switch at "PRIMARY FONT" or "SECONDARY FONT," the printer prompts you to select the ID of the font.

FONT ID=####

Select the ID with the \triangle or ∇ switch and press the SET switch again, so that the printer saves the font with the selected ID.

Note

When you see an asterisk on the display, the ID number has been used for another font. If you select the used ID number, the old font is erased and replaced with the new one.

Whatever font you have selected with the FONT switch, the printer saves the font as a bitmapped font as long as the print size is no more than 24 points, so that the printer can print it faster than when they are not saved. It is recommended that you save the scalable font you frequently use for faster printing.

Since the flash memory card or the HDD card is in the upper card slot A of the printer and fonts stored in the card behave in the same way as they would if they were in a dedicated Font Card, you can select the saved fonts as "SLOTFONT A" with the FONT switch or the font selection command from your software. For font selection, see "FONT Switch" in Chapter 4.

You can check the saved fonts by printing the list of fonts with the TEST switch. See "TEST Switch" in Chapter 4.

Notes

When you save the primary or secondary font, note the following:

- The font is temporarily stored in the RAM of the printer before it is saved on the card. If the font data exceeds the RAM capacity, a memory full error occurs. You can clear this error with the CONTINUE switch. As not all the font data has been stored in RAM, you cannot save the font to the card. When the font data is saved, the printer is reset to ensure as much capacity as possible in RAM. If any data remains, it is printed out.
- If you have saved the font at 600-dpi resolution and change the printer resolution to 300 dpi, the printer cannot print the saved font.

• Download Font

Notes

- The "DOWNLOAD FONT" menu appears only in the HP LaserJet emulation mode.
- Be sure to print out the list of download fonts with the TEST switch and check the download font ID on the list before you enter this menu. You need to select the font in this menu with the same number you see on the list.

If you have downloaded a font into the printer memory, you can save it on the flash memory card or the HDD card.

The printer prompts you to select the download font ID that you can find from the font list. Press the SET switch to move the cursor to the ID and select it with the \triangle or ∇ switch.

FONT ID=####

Note

The download font IDs do not appear when fonts have not been downloaded.

After you select the download font ID, press the SET switch, so that the printer saves the selected download font. Vector or bitmapped fonts are saved in the format of the original font.

Once you save the download font in the card, you do not need to download the font every time you need it.

Since the flash memory card or the HDD card is in the upper card slot A of the printer, you can select the saved fonts as "SLOTFONT A" with the FONT switch or the font selection command from your software. For font selection, see "FONT Switch" in Chapter 4.

You can check the fonts saved on the card by printing the list of fonts with the TEST switch. See "TEST Switch" in Chapter 4.

/ Note

When the fonts on the HDD card are selected in a print job, they are copied into the printer RAM. It may tend to cause the printer memory full error because those fonts occupy some RAM space. It is recommended to install optional SIMM to use the downloaded fonts on the HDD card.

Delete

When you select "DELETE" and press the SET switch, you can enter the following sub-setting menus to delete macros and fonts or format the installed flash memory card or HDD card:

Display Message	Save Menu
MACRO ID=####	Delete the selected ID macro.
DATA ID=####	Delete the selected ID data.
FONT ID=####	Delete the selected ID font.
FORMAT CARD	Format the flash memory card or the HDD card.

• Macro

When you press the SET switch at "MACRO ID=#####," the cursor moves to the ID number. The printer prompts you to select the ID number of the macro to be deleted.

Select the ID number with the \triangle or ∇ switch and press the SET switch, so that the printer deletes the selected macro.

• Data

When you press the SET switch at "DATA ID=#####," the cursor moves to the ID number. The printer prompts you to select the ID number of the data to be deleted.

Select the ID number with the \triangle or ∇ switch and press the SET switch, so that the printer deletes the selected data.

• Font

When you press the SET switch at "FONT ID=#####," the cursor moves to the ID number. The printer prompts you to select the ID number of the font to be deleted.

FONT ID=####

Select the ID number with the \triangle or ∇ switch and press the SET switch, so that the printer deletes the selected font.

• Format Card

You can format the flash memory card or the HDD card to delete its contents. Instructions are in the following menu:

FORMAT CARD

When you press the SET switch in this menu, the printer asks if you want to delete all contents of the card:

SET-->DELETE ALL

Press the SET switch to start formatting the card.

When you want to cancel formatting, move to the following menu with the \triangle or ∇ switch and press the SET switch.

exit

ADVANCED MODE

NETWORK MODE

Display Message	Network Mode
LOCK PANEL=OFF	Turns on or off lock panel function.
AUTO FF=ON	Turns on or off auto form feed.
FF SUPPRESS=OFF	Turns on or off the form feed suppress function.
TONER LOW=CONT	Select the printer's action when "TONER EMPTY" is detected

■ Lock panel

If someone other than you has changed the panel switch settings and you do not know about it, the printer may not print as you expected or it may not print at all.

To cope with this problem, you can lock or unlock the panel switches with your pass number as follows:

Display Message	Lock Panel
LOCK=OFF	Unlock the panel switches of the printer.
	(Factory setting)
LOCK=ON	Lock the panel switches of the printer.

Even if you lock the panel switches, you can use the SEL, FORM FEED, COPY, CONTINUE, RESET and TEST switches. You can only check the settings of the other switches, but you cannot change them. To change them, unlock the panel switches.

When you lock or unlock the panel switches as above, you need to enter a 3-digit pass number.

Change the number with the \triangle or ∇ switch and move to the next digit with the SET switch. After you finish entering your 3-digit pass number, the panel switches are locked or unlocked.

/ Note

Do not forget your pass number that you have used to lock the panel switches. If you enter a wrong number, you cannot unlock them. The display shows the following message:

INCORRECT!!

■ Auto Form Feed

If unprinted data remains in the printer's memory, the DATA lamp stays on. You need to print out the remaining data with the FORM FEED switch. See "FORM FEED Switch" in Chapter 4.

The auto form feed you can set in this mode menu allows you to print out the remaining data without pressing the FORM FEED switch.

You can turn on or off the auto form feed in this mode menu as follows:

Display Message	Auto Form Feed
AUTO FF=OFF	Turn off the auto form feed. You need to press the FORM FEED switch every time data remains in the printer's memory. (Factory setting)
AUTO FF=ON	Turn on the auto form feed. Every time data remains in the printer's memory, the auto form feed takes place after the wait time set as below.

When you turn on the auto form feed as above, you need to set the wait time in the following sub-setting menu:

Display Message	Wait Time
WAIT TIME= 1s	Set the wait time for the auto form feed.
•	The printer automatically prints out the
•	remaining data after the set wait time.
WAIT TIME=99s	The wait time can be set from 1 to 99
	seconds.

■ Form Feed Suppress

You can turn on or off the form feed suppress function in this mode menu as follows:

Disp	olay Message	Form Feed Suppress
FF	SUPPRESS=OFF	Turn off the form feed suppress function.
		(Factory setting)
FF	SUPPRESS=ON	Turn on the form feed suppress function.

If pages contain no print data, the printer would normally print blank pages. When you turn this function on, you can suppress printing blank pages.

When the printer is used in the network environment, it may print a blank page at the end of each print job. When you turn on this function, the printer does not print blank pages.

■ Toner Low

You can select the printer's action when "TONER EMPTY" is detected.

Display Message	Network Mode
TONER LOW=CONT	Continue printing if the "TONER EMPTY" error occurs. (Factory setting)
TONER LOW=STOP	Stop printing if the "TONER EMPTY" error occurs.

ERROR PRINT

/ Note

The setting in this mode menu is effective only in the BR-Script 2 mode. It does not appear in any other emulation modes.

You can turn on or off the error print mode in this mode.

Display Message	Error Mode
ERROR PRINT=ON	Turn on the error mode so that the printer prints an error if it occurs.
ERROR PRINT=OFF	Turn off the error mode so that the printer does not print an error if it occurs. (Factory setting)

CONTINUE MODE

If any recoverable error occurs including "Toner Empty," it can be cleared with the CONTINUE switch. The CONTINUE switch function is selected with this mode setting.

Display Message	Continue Mode
CONTINUE=MANUAL	Select the manual or auto error recovery mode. Press the CONTINUE switch to clear errors. (Factory setting)
CONTINUE=AUTO	Select the auto error recovery mode. The printer automatically clears recoverable errors. You need not press the CONTINUE switch.

BUZZER SETTING

You can turn the buzzer of this printer on or off. If any errors occur and the buzzer is turned on, the printer beeps to alert you. If it is turned off, it does not sound to alert you.

Display Message	Buzzer
BUZZER=ON	Turn on the buzzer. (Factory setting)
BUZZER=OFF	Turn off the buzzer.

SCALABLE FONT

Note

The setting in this mode menu is effective only in the HP LaserJet mode. It does not appear in any other emulation modes.

Since this printer has many scalable fonts, some application programs may not be able to handle them correctly. When the HP LaserJet emulation mode has been selected, the printer may print a different font rather than the font you have selected with your program (or the font selection command).

To cope with this font problem, you can restrict the font selection by this command as follows:

Display Message	Scalable Font
FONT=ALL	All scalable fonts of this printer can be selected with the font selection command. For fonts, see "RESIDENT FONTS" in Appendix. (Factory setting)
FONT=LJ	Scalable fonts of this printer other than the following can be selected with the font selection command: Atlanta, Bermuda Script, PC Brussels, Copenhagen, Germany, Portugal, Calgary, San Diego, and US Roman.

Even if you restrict the font selection as above, you can select among all the scalable fonts with the FONT switch. The setting in this mode menu merely restricts the font selection command.

PRINT DENSITY

You can increase or decrease the print density with the \triangle or ∇ switch in this mode menu as follows:

Display Message	Print Density
	The more black squares, the darker the print density. The black squares indicate
:	the density level.
	The density can be set to 15 levels.
•	(Factory setting = ■■■■■■■)

INPUT BUFFER

You can increase or decrease the capacity of the input buffer with the \triangle or ∇ switch in this mode menu. A larger capacity allows the printer to receive data from the computer faster.

Display Message	Input Buffer
	The more squares, the larger the capacity
	of the input buffer. The squares indicate
:	the level of the capacity but not the size in
:	Mbytes.
	The capacity can be set 15 levels.
	(Factory setting =□□□□□)

After you change the input buffer capacity (make sure you press SET switch), be sure to turn off the printer and then turn it on again. The setting takes effect the next time you turn on the printer.

/ Notes

- The set capacity is not changed even if the emulation mode is changed.
- The actual capacity of the input buffer varies according to the installed RAM. If the RAM capacity is small, the input buffer capacity may not be increased.
- When you select duplex printing, it requires more memory to run duplex printing. If you set a large input buffer and the remaining memory is not enough to run duplex printing, the print speed may decrease in duplex printing, the 600dpi resolution may decrease to 300dpi, or the printer may automatically change duplex printing to simplex printing. In such a case, you need to install optional SIMM memory or set a smaller input buffer size in this mode.

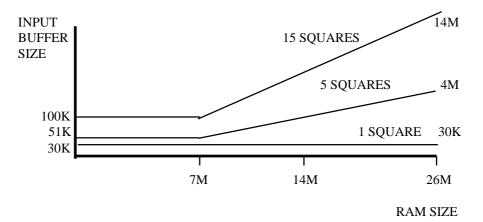


Fig. 4-7 Input buffer size

SAVE SETTINGS

Suppose you share this printer with others who want different panel switch settings or you use the printer with different settings.

Since you can save the current settings in the printer's memory, you can easily reset the printer to your necessary settings after they are changed. For resetting the printer, see "RESET Switch" in Chapter 4.

Use the panel switches to set the configuration of the printer to your needs and then enter this mode menu to save your settings. Two sets of user settings can be saved in the printer as follows:

Display Message	User Setting
SAVE SETTING 1	Save the current settings as No. 1 in the printer's memory.
SAVE SETTING 2	Save the current settings as No. 2 in the printer's memory.

If you want to check the user settings, you can print out a list of the settings with the TEST switch. See "TEST Switch" in Chapter 4.



No user settings have been factory set.

PAGE COUNTER

You can check the total number of printed pages with this mode. When you enter this mode, the display shows the number for a short time and automatically moves to "exit MODE" menu.

COUNT= 861

EXIT MODE

When you finish setting your desired item in the mode menus, advance to the following message:

exit MODE

Press the SET switch to exit from the mode menus to the off-line ready state.

/ Note

Remember that you can exit from the mode menu any time with the SEL switch. After you make a setting effective with the SET switch, press the SEL switch. You will exit from the mode menu to the on-line ready state. The settings you have changed with the SET switch are effective after a quick exit.

FONT Switch

Pressing the FONT switch allows you to select fonts and symbol/character sets.

Notes

When you use the FONT switch, note the following:


- The FONT switch is effective in the HP LaserJet, EPSON FX-850, and IBM Proprinter XL modes. However the settings are subject to the current emulation mode. Note that the FONT switch does not work in the BR-Script 2 mode.
- If the application software supports font and symbol/character set selection, you do not need to set them with the FONT switch. The software or command setting overrides the switch setting.
- If you want to use optional fonts other than the printer's resident fonts, be sure to install a font cartridge/card that has your desired fonts. The printer automatically selects the font that has exactly the same or similar characteristics as those you set through the software or with a command. If the installed font cartridge/card happens to have a font of similar characteristics, the printer will print with an unexpected font.
- You can store the fonts you require on a flash memory card or HDD card only in the HP LaserJet mode or BR-Script 2 mode when one is installed. See "CARD OPERATION."

Setting the Font and Symbol Set in the HP LaserJet Mode

When the HP LaserJet emulation mode has been selected, the font and symbol set can be set separately as the primary or secondary font.

The display shows the following setting menus:

PRIMARY FONT	SELECT FONT	р	Set the primary font.
	SYMBOL SET	р	Set the symbol set.
	TABLE PRINT	р	Print the code table.
	exit		Exit

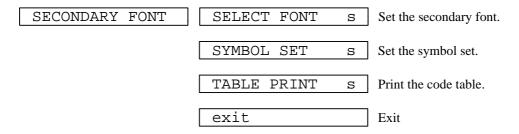

To select the font and symbol set in the HP LaserJet mode, follow these steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Press the FONT switch.

The display shows the following menu.

 Press the ▲ or ▼ switch to select the primary or secondary font setting menu.

For this session, select the primary font setting menu.

4. Press the SET switch.

The display shows the font setting menu. You can skip the font setting menu and advance to the symbol set setting menu with the \triangle or \bigvee switch. For this session, go to the next step.

🖍 Note

The last lowercase letter "p" or "s" indicates the primary or secondary font setting mode. If you select the secondary font setting mode, the display shows "s" in the following messages.

5. Press the SET switch.

When you enter the "SELECT FONT" menu, you can select the internal font, optional slot font, or permanent download font. The display shows the following message.

Press the \triangle or ∇ switch until the desired font source appears on the display.

Display Message	Font Source
INTERNAL FONT	Internal font of the printer
SLOTFONT A	Optional card font in the upper slot A
SLOTFONT B	Optional cartridge font in the lower slot B
PERMANENT FONT	Permanent download font defined in the HP emulation mode

Since these steps instruct you to select the standard font, select the "INTERNAL FONT" message.

Notes

When you select the optional fonts or permanent download fonts, note the following:

- If the optional font cartridge/card is not installed, the optional font cannot be selected. No selection appears on the display.
- If permanent fonts are not downloaded in the HP emulation mode or another emulation mode is selected, they cannot be selected. No selection appears on the display.
- The list you can print out with the TEST switch helps you to select the optional fonts or permanent download fonts. See "TEST switch" in this chapter or "Selecting the Optional Fonts" in Chapter 5.

6. Press the SET switch.

When you enter the font setting mode, the display first shows the current font with an asterisk.

7. Press the \triangle or ∇ switch until the desired font appears on the display.

See "List of Fonts" on page 4-59.

8. Press the SET switch to make the displayed selection effective.

The steps you follow vary according to the font type, scalable or bitmapped.

■ If you select a resident bitmapped font (Letter Gothic 16.66) or optional bitmapped fonts, the display shows the symbol set setting menu.

Go to step 9.

■ If you select resident scalable fonts or optional scalable fonts, the display shows the font style setting menu.

BROUGHAM	р
----------	---

↓ The display changes to the font style menu.

Press the \triangle or ∇ switch until the desired style appears on the display.

Display Message	Font Style
Lt	Light
Reg	Regular, Roman, Book, or Antique
Bd	Bold or Demi
Xb	Extrabold
It	Italic or Oblique

✗ Note

The style indication appears after the font name and the style name differs according to the font name. The italic or oblique indication can appear after other style indication: "BdIt" indicates a bold italic font, "LtIt" indicates a light italic font, etc.

Press the SET switch to make the displayed selection effective, then the display shows the font size setting menu.

✓ Note

When you have selected fixed-pitch fonts, you set the font size by the character pitch (width). When you have selected proportional spacing fonts, you set the font size in points (height). The display shows "PITCH" or "POINT" accordingly. The following displays show "PITCH" to simplify instructions.

Press the \triangle or ∇ switch until the desired font size appears on the display.

Press the SET switch to make the displayed selection effective. The blinking cursor then moves to the decimal part of the number.

Press the \triangle or ∇ switch until the desired decimal number appears on the display.

Press the SET switch to make the displayed selection effective. The display then shows the symbol set setting menu.

9. Press the SET switch.

When you enter the symbol set setting mode, the display first shows the current symbol set with an asterisk.

10. Press the ▲ or ▼ switch until the desired symbol set appears on the display.

See "List of Symbol/Character Sets" on page 4-60.

11. Press the SET switch to make the displayed selection effective.

The display then shows the next menu.

TABLE PRINT p

12. Press the SET switch to start printing the code table of the selected font, or press the ▲ or ▼ switch to skip this menu.

The display shows the exit menu.

exit

13. Press the SET switch to exit from the setting mode.

The printer returns to the off-line state.

Setting the Font and Character Set in the, EPSON FX-850, or IBM Proprinter XL Mode

When the EPSON FX-850 or IBM Proprinter XL mode has been selected, the font and character set can be selected.

The display shows the following setting menus.

SELECT FONT Select the font.

CHARACTER SET Select the character set.

TABLE PRINT Print the code table.

Exit

To select the font and character set in the EPSON FX-850 or IBM Proprinter XL mode, follow these steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Press the FONT switch.

The display shows the font setting menu. You can skip the font setting menu and advance to the character set setting menu with the \blacktriangle or \blacktriangledown switch. For this session, go to the next step.

SELECT FONT

3. Press the SET switch.

When you enter the "SELECT FONT" menu, you can select the internal font, optional slot font, or permanent download font. The display shows the following message.

Press the \triangle or ∇ switch until the desired font source appears on the display.

Display Message	Font Source
INTERNAL FONT	Internal font of the printer
SLOTFONT A	Optional card font in the upper slot A
SLOTFONT B	Optional cartridge font in the lower slot B
PERMANENT FONT	Permanent download font defined in the HP emulation mode

Since these steps instruct you to select the standard font, select the "INTERNAL FONT" message.

Notes

When you select the optional fonts or permanent download fonts, note the following:

- If the optional font cartridge/card is not installed, the optional font cannot be selected. No selection appears on the display.
- If permanent fonts are not downloaded in the HP emulation mode or another emulation mode is selected, the permanent fonts cannot be selected. No selection appears on the display.
- When you select the optional font or download font, press the SET switch to enter the sub-menu. After you select your desired one with the ▲ or ▼ switch, press the SET switch again. The list you can print out with the TEST switch helps you to select the optional fonts or permanent download fonts. See "TEST switch" in this chapter or "Selecting the Optional Fonts" in Chapter 5.

4. Press the SET switch.

When you enter the font setting mode, the display first shows the current font with an asterisk.

BROUGHAM	*
----------	---

5. Press the \triangle or ∇ switch until the desired font appears on the display.

See "List of Fonts" on page 4-59.


6. Press the SET switch to make the displayed selection effective.

The steps you follow vary according to the font type, scalable or bitmapped.

■ If you select a resident bitmapped font (Letter Gothic 16.66) or optional bitmapped fonts, the display shows the character set setting menu.

Go to step 7.

■ If you select the resident scalable fonts or optional scalable fonts, the display shows the font style setting menu.



↓ The display changes to the font style menu.

Press the \triangle or ∇ switch until the desired style appears on the display.

Display Message	Font Style
Lt	Light
Reg	Regular, Roman, Book, or Antique
Bd	Bold or Demi
Xb	Extrabold
It	Italic or Oblique

✗ Note

The style indication appears after the font name and the style name differs according to the font name. The italic or oblique indication can appear after any style indication: "BdIt" indicates a bold italic font, "LtIt" indicates a light italic font, etc.

Press the SET switch to make the displayed selection effective, then the display shows the font size setting menu.

≠ Note

When you have selected fixed-pitch fonts, you set the font size by the character pitch (width). When you have selected proportional spacing fonts, you set the font size in points (height). The display shows "PITCH" or "POINT" accordingly. The following displays show "PITCH" to simplify instructions.

Press the \triangle or ∇ switch until the desired font size appears on the display.

Press the SET switch to make the displayed selection effective. Then the blinking cursor moves to the decimal part of the number.

Press the \triangle or ∇ switch until the desired decimal number appears on the display.

Press the SET switch to make the displayed selection effective. The display then shows the character set setting menu.

7. Press the SET switch.

When you enter the character set setting mode, the display first shows the current character set with an asterisk. US ASCII *

✓ Note

The character set varies according to the current emulation mode. The above display shows the factory setting in the EPSON FX-850 emulation mode.

8. Press the ▲ or ▼ switch until the desired character set appears on the display.

See "List of Symbol/Character Sets" on page 4-60.

9. Press the SET switch to make the displayed selection effective.

Then the display shows the next menu.

TABLE PRINT

10. Press the SET switch to start printing the code table of the selected font, or press the ▲ or ▼ switch to skip this menu.

Then the display shows the exit menu.

exit

11. Press the SET switch to exit from the setting mode.

The printer returns to the off-line state.

List of Fonts

For specific characters in resident bitmapped and scalable fonts, see "SYMBOL/CHARACTER SETS" in Appendix.

.

Display Message	Font
BROUGHAM	Scalable Brougham
LETTERGOTHIC	Scalable LetterGothic
OCR-A	Bitmapped OCR-A 12 cpi
OCR-B	Bitmapped OCR-B 12 cpi
LETTERGOTH16.6	Bitmapped Letter Gothic 16.66 cpi
LTRGOTH16 LTN2	Bitmapped Letter Gothic 16.66 cpi
	ISO 8859-1 Latin2
LTRGOTH16 LTN5	Bitmapped Letter Gothic 16.66 cpi
	ISO 8859-1 Latin5
LTRGOTH16 LTN6	Bitmapped Letter Gothic 16.66 cpi
	ISO 8859-1 Latin6
PCTENNESSEE	Scalable PC Tennessee
OKLAHOMA	Scalable Oklahoma
CONNECTICUT	Scalable Connecticut
CLEVELAND Cd	Scalable Cleveland Condensed
PcBRUSSELS	Scalable PC Brussels
UTAH	Scalable Utah
UTAH CONDENSED	Scalable Utah Condensed
AntiqueOAKLAND	Scalable Antique Oakland
GUATEMALA	Scalable Guatemala Antique
MARYLAND	Scalable Maryland
ALASKA	Scalable Alaska
HELSINKI	Scalable Helsinki
BR SYMBOL	Scalable BR Symbol
TENNESSEE	Scalable Tennessee
W DINGBATS	Scalable W Dingbats
GERMANY	Scalable Germany
SAN DIEGO	Scalable San Diego
BERMUDA SCRIPT	Scalable Bermuda Script
US ROMAN	Scalable US Roman
ATLANTA	Scalable Atlanta
COPENHAGEN	Scalable Copenhagen
PORTUGAL	Scalable Portugal
CALGARY	Scalable Calgary

List of Symbol/Character Sets

The symbol sets and character sets are subject to the current emulation mode. For specific symbol/character sets, see "SYMBOL/CHARACTER SETS" in Appendix.

HP LaserJet	EPSON	IBM	
ROMAN 8 ISO LATIN1 ISO LATIN2 ISO LATIN5 ISO LATIN6 PC-775 PC-8 * PC-8 D/N PC-850 PC-852 PC-8 TURKISH PC-1004 WINDOWS LATIN1 WINDOWS LATIN1	US ASCII * GERMAN UK ASCII I FRENCH I DANISH I ITALY SPANISH SWEDISH JAPANESE NORWEGIAN DANISH II	PC-8 * PC-8 D/N PC-850 PC-852 PC-860 PC-863 PC-865 PC-8 TURKISH	(HL-1660e only) (HL-1660e only) (HL-1660e only)
WINDOWS LATIN5 WINDOWS BALTIC LEGAL ISO 2 IRV ISO 4 UK ISO 6 ASCII ISO10 SWE/FIN ISO11 SWEDISH ISO14 JISASCII ISO15 ITALIAN ISO16 POR ISO17 SPANISH ISO21 GERMAN ISO25 FRENCH ISO57 CHINESE ISO60 NOR v1 ISO61 NOR v2 ISO69 FRENCH ISO84 POR ISO85 SPANISH HP GERMAN HP SPANISH VENTURA MATH VENTURA INTL VENTURA US PS MATH PS TEXT MATH-8 PI FONT MS PUBLISHING WINDOWS 3.0 MC TEXT DESKTOP	UK ASCII II FRENCH II DUTCH SOUTH AFRICAN PC-8 PC-8 D/N PC-850 PC-852 PC-860 PC-863 PC-865 PC-8 TURKISH		(HL-1660e only)

/ Note

The factory settings are indicated by an asterisk "*" in the table above.

FORM FEED Switch (REPRINT Switch)

The FORM FEED switch works in two ways according to the DATA lamp status.

Form Feed

When the printer is off-line and there is data remaining in the printer memory, the DATA lamp comes on. Pressing the FORM FEED switch executes a form feed and prints out the remaining data. The display may look as follows:

01 PRINT 001P T1

If you set the number of copies with the COPY switch and press the FORM FEED switch during copy printing, the printer suspends the form feed operation and the display shows the following message:

07 FF PAUSE

Pressing the SEL switch again resumes the form feed operation.

When no data remains in the printer memory and you press the FORM FEED switch, the printer ignores this switch operation and the display shows the following message:

No Data !!!

✗ Note

If you want the printer to print out the remaining data automatically, you can set the auto form feed function with the MODE switch. See "AUTO FORMFEED" in Chapter 4.

Reprint Function

You can reprint the last job of data without sending it from the computer again. When you press the FORM FEED switch with the DATA lamp off, the printer reprints the same job with the one you printed last time. You can use this function in order to recover printing when a paper jam has occurred.

After printing is finished, set the printer off-line and press the FORM FEED switch once, so that the printer prints the last job of data.

The display shows the following message during reprinting;

REPRINT 1 JOB

If the printer does not have enough memory to reprint the entire job, it reprints the last page only, and the display shows the following message during reprinting;

REPRINT 1 PAGE

When you press the FORM FEED switch one or more times during reprinting, you can set the number of pages to reprint. The printer reprints the same job the number of times you press the switch.

✗ Notes

- The reprint data remains in the printer's memory until the printer is
 reset or the emulation, or some settings are changed. After you have
 reprinted confidential data, be sure to reset the printer to clear it from
 the printer's memory.
- If the printer cannot distinguish the job unit, it prints the last page only. You can reprint the job unit with using the attached printer driver.
- You cannot use the reprint function in the BR-Script 2 emulation mode.

CONTINUE Switch

If there is a problem with the printer, it automatically suspends printing and goes off-line. Pressing the CONTINUE switch may ignore the error and resume printer operation.

The function of this switch varies according to the CONTINUE mode set with the MODE switch.

Since the CONTINUE mode has been factory set to MANUAL, you need to press the CONTINUE switch to recover from a printer error message. If you set the mode to AUTO, the printer attempts to resume the operation without pressing the CONTINUE switch.

For further information, see "CONTINUE MODE" in Chapter 4.

Note

The CONTINUE switch is not a cure-all. The printer cannot recover from some errors. Take corrective action, referring to the error message. See "TROUBLESHOOTING" in Chapter 7.

SWITCHES IN SHIFT MODE

You can control the basic printer operations and make various printer settings also in the SHIFT mode. Functions available in the SHIFT mode are labeled with the indications just below the panel switches.

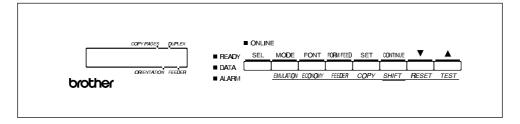


Fig. 4-8 Switches in SHIFT Mode



SHIFT Switch

When you hold the SHIFT switch down with the printer off-line, you can change settings with the panel switches in the SHIFT mode. Since the shift state is not locked, you need to hold it down and press the switch to get access to the corresponding shifted function labeled under the switch.

EMULATION Switch


This printer has been factory set with the automatic emulation selection function on. The printer can select the emulation mode automatically when it receives data from the computer.

When you want to set the emulation mode manually, hold down the SHIFT switch and press the EMULATION switch. Then you enter the setting mode where you change the emulation.

To set the emulation mode, follow these steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Hold down the SHIFT switch and press the EMULATION switch.

When you enter the setting mode, the display first shows the current emulation mode with an asterisk.



3. Press the ▲ or ▼ switch until the desired emulation mode appears on the display.

Display Message	Emulation Mode
HP LaserJet 5(4+)	HP LaserJet
BR-Script 2	BR-Script level 2 mode
HP-GL	HP-GL Plotter Mode
EPSON FX-850	EPSON FX-850
IBMProprinterXL	IBM Proprinter XL
AUTO	Auto Emulation Selection

4. Press the SET switch to make the displayed selection effective.

When you select any specific emulation mode other than "AUTO," an asterisk appears at the end of the display for a short time. Then the printer automatically exits from the setting mode to the off-line state.

When you select "AUTO," the sub-item "Time Out" for the automatic emulation selection appears on the display. Go to the next step.

5. Set "Time Out" with the ▲ or ▼ switch.

This time out is the duration during which the printer will not allow an automatic emulation change. You can set it from 1 second to 99 seconds: **the factory setting is 5 seconds.**

6. Press the SET switch.

The next sub-item "EPSON/IBM" appears on the display.

7. Select EPSON or IBM with the \triangle or ∇ switch.

Since the printer cannot distinguish between the EPSON and IBM emulation modes, you need to select the EPSON or IBM emulation even in the AUTO mode.

When the printer receives data from the computer, it automatically selects the emulation mode in any of the following combinations:

EPSON/IBM Priority	EPSON	IBM
Auto Selection Mode	HP LaserJet	HP LaserJet
	BR-Script 2	BR-Script 2
	HP-GL	HP-GL
	EPSON FX-850	IBM Proprinter XL

8. Press the SET switch.

The next sub-item "KEEP PCL" appears on the display.

This function is for permanent macros and fonts downloaded in the HP LaserJet mode.

9. Turn on or off the "KEEP PCL" function with the ▲ or ▼ switch.

When you do not need to use the permanent macros and fonts in the HP LaserJet mode, turn this function off. When you use them, you can turn it on.

If the function is turned on, the downloaded macros and fonts are kept in the printer's memory until the printer is turned off, so that they are not cleared by switching the emulation to the BR-Script 2 mode.

✗ Note

The "KEEP PCL" function reserves free space in the printer's memory and may cause a memory full error. If a memory full error occurs, expand the memory capacity or turn off this function.

10. Press the SET switch.

The "exit" message appears on the display.

11. Press the SET switch again.

The printer exits from the setting mode to the off-line state.

Note

When you use the automatic emulation selection, try it with your application software or network server. If the function does not work properly, select a particular emulation mode manually. You can use the following commands to select the emulation on the network.

Commands	Hex	Emulation
ESC CR H	1B 0D 48	HP LaserJet
ESC CR AB	1B 0D 41 42	BR-Script 2
ESC CR GL	1B 0D 47 4C	HP-GL
ESC CR E	1B 0D 45	EPSON FX-850
ESC CR I	1B 0D 49	IBM Proprinter XL

About Emulation Modes

This printer has the following emulation modes:

■ HP LaserJet Mode

The HP LaserJet mode (or HP mode) is the emulation mode where this printer emulates the Hewlett-Packard LaserJet laser printer. Since a large number of application software packages support this type of laser printer, your printer will operate at its optimum performance in this mode.

■ BR-Script 2 Mode

BR-Script is a Brother original page description language and it is a PostScript[®] language emulation interpreter. This printer supports level 2. The BR-Script interpreter of this printer can control text and graphics on pages completely and satisfactorily.

Average users do not need to know much about PostScript[®] language. If you want to obtain technical information about PostScript[®] commands, see the following commercial manuals:

- Adobe Systems Incorporated. PostScript[®] Language Reference Manual, 2nd Edition. Menlo Park: Addison-Wesley Publishing Company, Inc., 1990.
- Adobe Systems Incorporated. *PostScript® Language Program Design*. Menlo Park: Addison-Wesley Publishing Company, Inc., 1988.
- Adobe Systems Incorporated. PostScript[®] Language Reference Manual. Menlo Park: Addison-Wesley Publishing Company, Inc., 1985.
- Adobe Systems Incorporated. PostScript[®] Language Tutorial and Cookbook. Menlo Park: Addison-Wesley Publishing Company, Inc., 1985.

■ HP-GL Mode

The HP-GL mode is the emulation mode where this printer emulates the Hewlett-Packard plotter model HP-7475A. Since many graphics and CAD applications support this type of plotter, you can get more out of this printer working with your application software.

■ EPSON FX-850 and IBM Proprinter XL Mode

The EPSON FX-850 and IBM Proprinter XL modes are the emulation modes where this printer emulates the industry-standard dot matrix printers of respective manufacturers. Since most applications support these printers, you do not have to be concerned about compatibility.

ECONOMY Switch

TONER SAVE MODE

You can turn on or off the toner save mode as follows:

Display Message		Toner Save Mode	
TONER	SAVE=OFF	Turn off the toner save mode.	
		(Factory setting)	
TONER	SAVE=ON	Turn on the toner save mode. The amount	
		of toner on the paper decreases and the	
		printed image may look light gray.	

POWER SAVE MODE

You can turn on or off the power save mode as follows:

Display Message		Power Save Mode
POWER	SAVE=ON	Turn on the power save mode. The fixing assembly of the print engine is turned off after the specified time to save power. (Factory setting)
POWER	SAVE=OFF	Turn off the power save mode. The fixing assembly of the print engine is always powered on to keep its temperature at the specified level.

When you turn on the power save mode with the SET switch, the display shows the next sub-setting menu as follows:

You need to set the time out for the power save mode from 1 to 99 minutes with the \triangle or ∇ switch: **factory setting =30 minutes**. The time out is the duration after which the fixing assembly of the print engine is turned off ("SLEEP") to save power.

When the power save mode is turned on, the printer turns on the fixing assembly again after it receives data from the computer. Since the fixing assembly must reach the specified high temperature, it takes a little longer time to start printing the first page.

FEEDER Switch

You can select the feeder, manual feed mode, or MP tray settings with the FEEDER switch, and also select the duplex printing mode if the optional duplex printing unit is installed.

Display Message	Feeder	
FEEDER=AUTO	Select a feeder or auto paper feed.	
MP FIRST=OFF	Turns MP first on or off.	
MANUAL FEED=OFF	Turns manual feed on or off.	
MP TRAY SETTING	MP tray settings	
MEDIA TYPE	Select print media	
DUPLEX MODE	Selects duplex printing mode (only with the duplex option installed.)	

You can check the current feeder and the duplex mode on the display.

When tray 1 has been selected, the display may look as follows:

When the multi-purpose tray and the duplex printing mode have been selected, the display may look as follows:

The black square ■ indicates that duplex printing mode is selected.

When you want to change settings with the FEEDER switch, hold down the SHIFT switch and press the FEEDER switch. You will then enter the setting mode where you change the feeder, manual feed mode, etc.

FEEDER

To select the feeder, follow these steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Hold down the SHIFT switch and press the FEEDER switch.

When you enter the setting mode, the display first shows the current feeder setting with the asterisk.

FEEDER=AUTO *

3. Press the ▲ or ▼ switch until the desired feeder appears on the display.

Display Message	Paper Feed Method/Paper Source	
FEEDER=AUTO	Auto paper feed	
FEEDER=MP TRAY	Cassette feed from multi-purpose tray (MP tray)	
FEEDER=TRAY1	Upper paper cassette (Tray 1)	
FEEDER=TRAY2	Lower paper cassette (Tray 2)	

Notes

When you select a feeder, note the following:

- The "FEEDER=TRAY2" message appears only when the optional lower tray unit has been installed.
- The FEEDER=AUTO setting allows you to optimize your printing environment. This setting allows a print job to continue uninterrupted when a paper out condition occurs. The default setting is AUTO. This setting allows a common printing situation: Loading the same size and type of paper in all paper trays. This allows your print job to continue without error if one of the paper trays becomes empty. The printer will automatically select another tray if one tray becomes empty.
- When you select the FEEDER=AUTO, the printer automatically searches for the paper size you set with the MODE switch in the PAGE FORMAT mode and loads the paper from the paper source that contains the selected size of paper. If all of the upper and lower paper cassettes and the multi-purpose tray contain different sizes of paper and one paper cassette runs out of paper, the printer stops printing without automatically changing to the other paper source to feed paper. It prevents a different size of paper from being printed by mistake.
- If you have the same size of paper loaded but of different type (i.e.: FORM "A" in Tray 1, Form "B" in Multi-purpose Tray) it is recommended to change the feeder setting from AUTO to Tray 1. This setting will allow the printer to pause when a paper empty condition occurs, allowing you to load the correct type of paper, then press SEL to finish to print job.
- 4. Press the SET switch to make the displayed selection effective.

When you select "MP TRAY", "TRAY1," or "TRAY2," an asterisk appears at the end of the display for a short time. Then the "exit" message appears on the display. Press the SET switch again, so that the printer exits from the setting mode to the off-line state.

When you select "AUTO", the tray selection menu for the auto paper feed appears on the display. Go to the next step.

5. Change the tray combination and priority with the ▲ or ▼ switch. For example:

When "AUTO=T1>MP" is set, both tray 1 and the multi-purpose tray are selected but tray 1 will be selected first if the paper size in tray 1 and the page size for the printing job match each other.

6. Press the SET switch.

MP FIRST

The display shows the current setting for the MP FIRST mode for the multi-purpose tray with an asterisk.

1. Press the ▲ or ▼ switch to select on or off for the MP FIRST mode in the multi-purpose tray.

Notes

- When you want to print the first page on paper such as letterhead in the multi-purpose tray, and the following pages on paper such as plain paper in another tray, place a sheet for the first page on the multipurpose tray and select "MP FIRST=ON" in this menu. Then the printer first selects the multi-purpose tray regardless of the "FEEDER=###" setting and then automatically switches to the feeder selected in the "FEEDER=####" menu after the multi-purpose tray becomes empty.
- You can use the MP tray as a convenient temporary feeder by setting MP FIRST=ON. When MP FIRST=ON is set, if you place paper on MP tray, this paper will be printed, and if you do not place paper on MP tray, another tray will be selected according to the command or the "FEEDER=####" setting.

- You can set "MP FIRST=ON" so that you can use the MP tray paper first until it becomes empty and then switch to other paper sources which hold the same size of paper. You can set "MP FIRST=ON" for this purpose only when all the trays hold the same type and size of paper. When the MP tray paper size is different from paper in other trays, you must not select "ON" if you do not want to use MP tray paper.
- 2. Press the SET switch.

MANUAL FEED

The display shows manual feed mode with an asterisk as follows:

MANUAL FEED=OFF*

- 1. Press the ▲ or ▼ switch to turn the manual feed mode on or off.
- 2. Press the SET switch to make the setting effective.

✗ Note

When you select the "MANUAL FEED=ON", note that the feeder set in the "FEEDER=###" menu is ignored and the manual feed mode from the multi-purpose tray is selected. You must set "MANUAL FEED=OFF" so that the feeder selection in the "FEEDER=###" menu can be effective.

MP TRAY SETTING

1. The display then shows the MP tray setting menu. Press the SET switch to enter this menu.

Then the display shows the current paper size setting for the multipurpose tray with an asterisk.

MP SIZE=LETTER *

2. Press the ▲ or ▼ switch to select the paper size in the multi-purpose tray.

Note

When you select the multi-purpose tray as a paper source, you must set the "MP SIZE" manually since the tray cannot sense the size automatically.

3. Press the SET switch to make the displayed setting effective.

Then the display shows the current "PAPER IN" setting with the asterisk as follows:

PAPER IN=CONT *

4. Press the ▲ or ▼ switch to select the printer action to continue or stop during manual feed.

✓ Note

You can select the printer action either to continue or to stop printing when you select the manual feed with this switch or by a command. When you set "PAPER IN=CONTINUE", the printer feeds paper from the multipurpose tray. When you set "PAPER IN=STOP", the printer stops feeding paper until the SEL key is pressed. If you want to place the paper on the multi-purpose tray after you make a print request from the PC, select the "PAPER IN=STOP" so that the printer waits for the paper.

5. Press the SET switch to make the setting effective.

MEDIA TYPE

When you use any paper other than ordinary plain paper, such as thick bond paper, envelope, or transparency, the appropriate media type must be selected in the media type mode in order to get the best print quality.

To select a media type, follow these steps:

1. The display shows the following message:

MEDIA TYPE

2. Press the SET switch to enter the media type mode. The display then shows the current setting with an asterisk:



- 3. Press the ▲ or ▼ switch to select regular, thick paper, or transparency.
- 4. Press the SET switch to make the setting effective.

Notes

- Please do not forget to change the setting back after you print your special media with the setting changed.
- Envelopes cannot be fed from Tray 2 although you can set them in it.
- You must not load transparencies into Tray 1 or Tray 2. Please use the multi-purpose tray.

DUPLEX MODE

If the optional duplex printing unit has been installed, the duplex mode appears on the display as follows:

1. Press the SET switch to enter the duplex mode menu.

Then the display shows the current selection for the duplex printing or simplex printing (duplex off) with an asterisk as follows:

2. Press the ▲ or ▼ switch to select the duplex or simplex (duplex off), and press the SET switch.

When you set "DUPLEX=ON", the display shows the current bind setting with an asterisk as follows:



3. Press the ▲ or ▼ switch to select long edge binding or short edge binding.

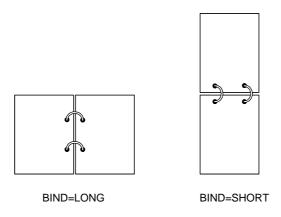


Fig. 4-9 Binding

4. Press the SET switch to exit the DUPLEX MODE.

The printer exits from the setting mode to the off-line state.

5. Press the SET switch again to exit the FEEDER switch setting mode to the printer off-line state.

/ Note

The duplex printing unit can handle letter, A4, legal, executive, and B5 sizes of paper. It can not handle shorter sizes of paper than B5 (250mm-9.8 inches long).

COPY Switch

You can set the number of copies to print of the same page with the COPY switch. The computer will release from a printing job in a shorter time if you use this feature than when you set the copy print quantity with your application software. Check the current setting on the display.

When the number of copies has been set at 1, the display may look as follows:

When the number of copies has been set at 3, the display may look as follows:

✗ Note

If you send too many pages to be stored in the printer memory, part or all of the set pages or copies may not be printed.

To set the number of copies, follow these steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Hold down the SHIFT switch and press the COPY switch.

When you enter the setting mode, the display first shows the current setting with the asterisk.

3. Press the ▲ or ▼ switch until the desired number appears on the display.

Display Message	# of Copies to Print Same Pages
COPY PAGES= 1	1 page
COPY PAGES= 2	2 pages
• • •	
COPY PAGES=999	999 pages (max.)

4. Press the SET switch to make the displayed selection effective.

An asterisk appears at the end of the display for a short time. Then the printer automatically exits from the setting mode to the off-line state.

RESET Switch

You can reset the printer with the RESET switch. The print data that the printer has already received from the computer is cleared and the printer settings are restored to the user settings or factory settings.

The temporary download fonts and macro settings you set with commands in the HP LaserJet mode are also cleared.

When you want to reset the printer, hold down the SHIFT switch and press the RESET switch. You then enter the reset mode where you reset the printer.

To reset the printer, follow these steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Hold down the SHIFT switch and press the RESET switch.

When you enter the reset mode, the display shows the first reset mode item.

RESET PRINTER

3. Press the ▲ or ▼ switch until the desired reset mode appears on the display.

Display Message	Reset Mode	
RESET PRINTER	Resets the printer and restores all printer settings—including command settings—to settings you have previously made with the panel switches.	
RESET SETTING 1	Resets the printer and restores all	
RESET SETTING 2	printer settings—including command settings—to the selected number (1-2) of user settings you have previously made with the MODE switch.	
FACTORY SETTINGS	Resets the printer and restores all printer settings—including command settings—to the factory settings. See "List of Factory Settings."	
exit	Exits from the reset mode. The printer is not reset.	

4. Press the SET switch to make the displayed selection effective.

The printer is reset according to the selected reset mode.

When the "RESET PRINTER" mode has been selected, the printer is reset showing the message alternately as follows:



When the "RESET SETTING 1-2" mode has been selected, the printer is reset showing the message alternately as follows (# indicates the selected number of saved settings):



When the "FACTORY SETTINGS" mode has been selected, the printer is reset showing the message alternately as follows:



Then the printer automatically exits from the reset mode to the on-line state.

List of Factory Settings

The following table shows the factory settings initially set before shipment.

Notes

- The settings are subject to the emulation mode. Effective modes are indicated in parentheses in the following table.
- The following settings cannot be restored to the factory settings with the RESET switch in the "FACTORY SETTINGS" mode: INTERFACE MODE, HRC SETTING, PAGE PROTECTION, SCALABLE FONT, LOCK PANEL, and PAGE COUNTER, and local language for display messages.
- The COPY setting is always restored to the factory setting when the printer is turned off and on again.
- The user settings are overwritten after resetting to setting 1 or 2.

Switch	Item	Sub-Item	Factory Setting
MODE			
	INTERFACE MODE		I/F=AUTO
		For AUTO mode	
		TIME OUT	TIME OUT= 5s
		For bi-directional PARALLEI	L interface
		HIGH SPEED	HIGH SPEED=ON
		BI-DIR	BI-DIR=ON
		For RS-232C serial interface	
		Baud Rate	BaudRate= 9600
		Code Type	CodeType=8 bits
		Parity	Parity =NONE
		Stop Bit	Stop Bit= 1 bits
		Xon/Xoff	Xon/Xoff=ON
		DTR (ER)	DTR (ER)=ON
		Robust Xon	Robust Xon=OFF
	FORMAT MODE	ORIENTATION (Except for BR-Script 2)	ORI=PORTRAIT
		AUTO MODE (HP LaserJet)	
		AUTO LF	OFF
		AUTO CR	OFF
		AUTO WRAP	OFF
		AUTO SKIP	ON
		AUTO MODE (EPSON)	
		AUTO LF	OFF
		AUTO CR	ON (No indication)
		AUTO WRAP	ON (No indication)
		AUTO MASK	OFF
		AUTO MODE (IBM)	
		AUTO LF	OFF
		AUTO CR	OFF
		AUTO WRAP	ON (No indication)
		AUTO MASK	OFF

Switch	Item	Sub-Item	Factory Setting
MODE (c	continued)		
	FORMAT MODE (continued)		
		PAGE FORMAT M EPSON, & IBM)	IODE (HP LaserJet,
		PAPER	LETTER
			(For 110/120V model)
			A4 (For 220/240V model)
		LEFT M	0 (LETTER, PORTRAIT)
			0 (LEGAL, PORTRAIT)
			0 (A4, PORTRAIT)
			0 (LETTER, LANDSCAPE)
			0 (LEGAL, LANDSCAPE)
			0 (A4, LANDSCAPE)
			0 (A5, LANDSCAPE)
			0 (A6, LANDSCAPE)
		RIGHT M	80 (LETTER, PORTRAIT)
			80 (LEGAL, PORTRAIT)
			78 (A4, PORTRAIT)
			106 (LETTER, LANDSCAPE)
			136 (LEGAL, LANDSCAPE)
			113 (A4, LANDSCAPE)
			113 (A5, LANDSCAPE)
			113 (A6, LANDSCAPE)
		TOP M	0.5" (HP)
			0.33" (Non-HP)
		BOTTOM M	0.5" (HP)
			0.33" (Non-HP)

Switch	Item	Sub-Item	Factory Setting
MODE	PAGE FORMAT	LINES (HP)	60 (LETTER,
(continued)	(continued)		PORTRAIT)
			78 (LEGAL,
			PORTRAIT)
			64 (A4, PORTRAIT)
			64 (A5, PORTRAIT)
			64 (A6, PORTRAIT)
			45 (LETTER,
			LANDSCAPE)
			45 (LEGAL, LANDSCAPE)
			43 (A4, LANDSCAP
			43 (A5, LANDSCAP
			43 (A6, LANDSCAP
		LINES (Non-HP)	62 (LETTER,
			PORTRAIT)
			80 (LEGAL,
			PORTRAIT)
			66 (A4, PORTRAIT)
			66 (A5, PORTRAIT)
			66 (A6, PORTRAIT)
			47 (LETTER, LANDSCAPE)
			47 (LEGAL, LANDSCAPE)
			45 (A4, LANDSCAP
			45 (A5, LANDSCAP
			45 (A6, LANDSCAP
		X OFFSET	X OFFSET=0
		Y OFFSET	Y OFFSET=0
	FORMAT MODE (BR-Script 2)		
		X OFFSET	X OFFSET=0
		Y OFFSET	Y OFFSET=0
	FORMAT MODE (HP-GL)	PAGE FORMAT MO	DE
		PAPER	LETTER
			(For 110/120V model
			A4 (For 220/240V
		W OFFICE	model)
		X OFFSET	X OFFSET=0
		Y OFFSET	Y OFFSET=0
		GRAPHICS MODE (1	
		PEN SETTING	SIZE: 3 dots
			GRAY: 100%

Switch	Item	Sub-Item	Factory Setting	
MODE (continued)				
	RESOLUTION MODE	RESOLUTION	RESOLUTION=600	
		APT SETTING	APT=OFF	
		HRC SETTING	HRC=MEDIUM	
	PAGE PROTECTION	=	PROTECT=AUTO	
	(Non-BR-Script2)			
	ADVANCED MODE			
		NETWORK MODE		
		LOCK PANEL	LOCK PANEL=OFF	
		AUTO FF	AUTO FF=OFF	
		For AUTO FF=ON	WAIT TIME= 5s	
		WAIT TIME		
		FF SUPPRESS	FF SUPPRESS=OFF	
		TONER LOW	TONER LOW=CONT	
		ERROR PRINT (BR-Script2)	ERROR PRINT=OFF	
		CONTINUE MODE	CONTINUE=MANUAL	
		BUZZER SETTING	BUZZER=ON	
		SCALABLE FONT		
		(HP, EPSON, & IBM)	FONT=ALL	
		PRINT DENSITY		
		For any interfaces	00000	
		INPUT BUFFER		
	PAGE COUNTER	-	0	
FONT (H	(P)			
	PRIMARY FONT	SELECT FONT	BROUGHAM	
		SYMBOL SET	PC-8(HL-1660e) /	
			ROMAN(HL-1260/1660)	
	SECONDARY FONT	SELECT FONT	BROUGHAM	
		SYMBOL SET	PC-8(HL-1660e) /	
			ROMAN(HL-	
EONT (E)	DCOM)		1260/1660)ROMAN8	
FONT (E	PSON) FONT		DDOUGHAM	
			BROUGHAM	
FONT (II	CHARACTER SET		US ASCII	
FONT (IE			DDOUGHAM	
	FONT		BROUGHAM	
EMITA	CHARACTER SET	_	PC-8	
EMULAT	HON		ALITO	
	E AUTO 1	TIME OUT	AUTO	
	For AUTO mode	TIME OUT	TIME OUT= 5s	
		EPSON/IBM	EPSON/IBM=EPSON	
		KEEP PCL	KEEP PCL=OFF	

USER S GUIDE

Switch	Item	Sub-Item	Factory Setting
ECONOMY -			
	TONER SAVE MODE	-	TONER SAVE=OFF
	POWER SAVE MODE	-	POWER SAVE=ON
		For POWER SAVE=ON	
		TIME OUT	TIME OUT=30m
FEEDER			
	FEEDER	-	FEEDER=AUTO
			For FEEDER=AUTO
			AUTO=T1>T2>MP
	MP FIRST		MP FIRST=OFF
	MANUAL FEED	-	MANUAL FEED=OFF
	MP TRAY SETTING	MP SIZE	MP SIZE=LETTER
			(For 110/120V model)
			MP SIZE=A4
			(For 220V/240V model)
		PAPER IN	PAPER IN=CONT
	MEDIA TYPE	-	REGULAR
	DUPLEX MODE	DUPLEX	DUPLEX=OFF
		BIND	BIND=LONG
COPY	_	-	COPY PAGES=1
LANGUAGE (FORM FEED + POWER ON)		-	LANG=ENGLISH

TEST Switch

You can test the printer or print out the list of fonts with the TEST switch. To do so, hold down the SHIFT switch and press the TEST switch. You will then enter the test mode where you may test the printer or print out the list of fonts.

To test the printer, follow these steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Hold down the SHIFT switch and press the TEST switch.

When you enter the test mode, the display shows the first test mode item.



3. Press the ▲ or ▼ switch until the desired test mode appears on the display.

Display Message	Test Mode
DEMO PAGE	Prints out the demonstration.
TEST PRINT	Performs the printer test and prints out the test pattern.
PRINT CONFIG	Prints out the list of panel switch settings you have configured for the printer as user settings.
PRINT FONTS I	Prints out the list of internal or resident fonts.
PRINT FONTS C	Prints out the list of optional fonts stored in the font cartridge/card.
PRINT FONTS P	Prints out the list of permanent download fonts.
exit	Exits from the test mode. The printer does not perform the test.

Notes

The message "PRINT FONTS C" or "PRINT FONTS P" appears only when the optional font cartridge/card is installed in the font slot or permanent download fonts are stored in printer memory.

- If the optional font cartridge/card is installed, you can print out the list of optional fonts. Since the list shows the ID numbers specific to each optional font, it helps you to select them with the FONT switch. For further information, see "FONT Switch" in Chapter 4 and "FONT CARTRIDGE/CARD, FLASH MEMORY/HDD CARD" in Chapter 5.
- If user-defined characters are already downloaded into the printer memory as permanent download fonts, you can print out the list of them. For further information, see "FONT Switch" in Chapter 4 and Technical Reference Manual that is optionally available.
- 4. Press the SET switch to make the displayed selection effective.

The printer prints out the test patterns or lists according to the selected test mode.

■ When the "DEMO PAGE" mode has been selected, the display shows the following message and the printer starts printing out the demonstration pattern.

06 DEMO PAGE

■ When the "TEST PRINT" mode has been selected, the display shows the following message and the printer starts printing out the test pattern.

05 TEST PRINT

■ When the "PRINT CONFIG" mode has been selected, the display shows the following message and the printer starts printing out the list of printer settings.

06 PRINT CONFIG

🖍 Note

The printed list shows the panel switch settings you have made as user settings with the MODE switch. See "SAVE SETTINGS" in Chapter 4.

■ When the "PRINT FONTS" mode has been selected, the display shows the selected mode and the printer starts printing out the font list. The display may look like this:

06 PRINT FONTS I

When the printer finishes printing, it automatically exits from the test mode to the off-line state.

HEX DUMP MODE

This printer has a useful hex dump mode for checking the print data sent from your computer. The printer lists the print data in hexadecimal form.

To enter the hex dump mode, follow these steps:

- 1. Check the power state.
- 2. Operate the switches according to the power state.
- If the printer has been turned off, turn on the printer.

The printer starts the self-test and the display shows the following message.

- If the printer has been turned on, reset the printer with the RESET switch.
 - 1) Press the SEL switch to set the printer off-line.
 - 2) Hold down the SHIFT switch and press the RESET switch. The display will show "RESET PRINTER".
 - 3) Press the SET switch with the "RESET PRINTER" selected.

The printer begins its reset and the display shows the following message alternately.



3. Press the CONTINUE/SHIFT switch.

The printer checks the CONTINUE/SHIFT switch at the end of self-test or printer reset. If the switch is held down, the printer enters the hex dump mode and goes on-line. The display will show the message "HEX DUMP MODE" and the printer will return to the on-line state.

✗ Note

If the printer returns to the on-line state without displaying the message "HEX DUMP MODE", you did not press the CONTINUE/SHIFT switch *immediately* after pressing the SET switch. Try the above steps once again.

4. Send data from your computer.

When the printer receives data, it starts printing hexadecimal values of the received data.

To exit from the hex dump mode, follow these *basic* steps:

- 1. Press the SEL switch to set the printer off-line.
- 2. Reset the printer with the RESET switch.

Or turn off the printer, wait for a few seconds, and turn it on again.

CHAPTER 5 OPTIONS

LOWER TRAY UNIT (LT-1200/LT-1600)

Loading Paper from the Lower Paper Cassette

The lower tray unit is a device that functions as a third paper source which can contain a maximum of 500 sheets of paper ($80~g/m^2$ or 20~lbs). For the optional lower tray unit, consult the dealer where you purchased the printer.

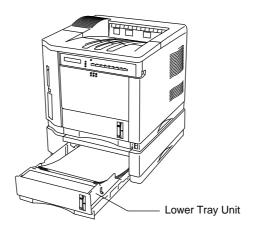


Fig. 5-1 Loading Paper in the Lower Tray Unit

With the lower tray unit installed, load paper into the lower paper cassette in the same way as you do the upper paper cassette.

See "Installing the Paper Cassette" in Chapter 2.

The paper sizes available for the lower paper cassette are not the same for the upper paper cassette as shown below.

paper source	available size
the optional lower paper cassette (T2)	cut sheet : letter, legal, A4 and Executive
the multi-purpose tray (MP) and the upper paper cassette (T1)	cut sheet: letter, legal, A4, ISO B5, Executive, A5, ISO B6 and A6 envelope: COM 10, Monarch, C5, DL and ISO B5
all sources for duplex printing (DX)	cut sheet : letter, legal, A4, ISO B5(except T2) and Executive

FONT CARTRIDGE/CARD, FLASH MEMORY/HDD CARD

Installing a Font Cartridge/Card, Flash Memory Card and HDD Card

This printer has one slot for an optional font cartridge and one slot for an optional font card, flash memory card or HDD card.

If you install the optional font cartridge/card, you can use the fonts stored in them as well as resident fonts. For optional font cartridges/cards, consult the dealer where you purchased the printer.

If you install the optional flash memory card or HDD card, you can save macros and fonts on it. For flash memory card and HDD card operation and information, see "CARD OPERATION" in Chapter 4.

Notes

- Do not install or remove cards with the printer power on, or you may lose all data from the card, or may seriously damage the card if you do this
- For more information about the cards, consult the dealer where you purchased the printer.

Follow these steps to install or remove a cartridge/card:

1. Make sure that the printer is turned off.

If the printer is turned on, be sure to press the SEL switch to set the printer off-line. If data remains in the printer memory, the DATA lamp stays on. Press the FORM FEED switch to print out the remaining data, then the DATA lamp goes off. Turn off the printer.

2. Insert the font card, flash memory card or HDD card into the upper slot A and the font cartridge into the lower slot B with the cartridge/card label facing to the left. Make sure they fit securely.

To remove the cartridge/card, pull them out of the slot with the printer turned off.

The following type of flash memory card can be installed:

<Fujitsu>

4 Mbyte: MB98A81273
8 Mbyte: MB98A81373
16 Mbyte: MB98A81473
32 Mbyte: MB98A81573

<AMD>

1 Mbyte: AMC001CFLKA
2 Mbyte: AMC002CFLKA
4 Mbyte: AMC004CFLKA
10 Mbyte: AMC010CFLKA

4 Mbyte: AMC004DFLKA8 Mbyte: AMC008DFLKA20 Mbyte: AMC020DFLKA

<SanDisk (or SanDisk OEM Products)

• 2 to 85 Mbyte: PCMCIA PC Card ATA

The following type of HDD card can be installed:

Intégral Peripherals Inc.

• 170 Mbyte: VIPER 170E

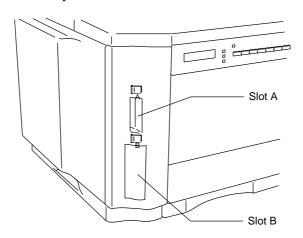


Fig. 5-2 Installing or Removing the Cartridge or Card

Selecting the Optional Fonts

After you have installed the optional font cartridge/card, you can select optional fonts by any of the following methods:

- 1. Through your application software
- 2. With a font selection command
- 3. With the FONT switch

When you select fonts through your application software, follow the instructions specific to your software. Refer to your software manual if you need assistance. When you select fonts with a font selection command, embed the font selection command in your program. See the Technical Reference Manual, which is optionally available for this printer.

Notes

When you select the fonts through your software or with a command, note the following:

- You do not need to be concerned about the FONT switch setting. The software or command setting overrides the switch setting.
- Be sure to install the font cartridge/card that has your desired fonts. The printer automatically selects the font that has exactly the same or similar characteristics as those you set through the software or with a command. If the installed font cartridge/card happens to have a font of similar characteristics, the printer will print in an unexpected font.

To select fonts with the FONT switch, follow these basic steps:

1. Print out the list of optional fonts in the PRINT FONTS C mode with the SHIFT and TEST switches.

See "Printing the Test Pattern or Font List" in Chapter 2.

2. Find the font slot and font ID number on the list.

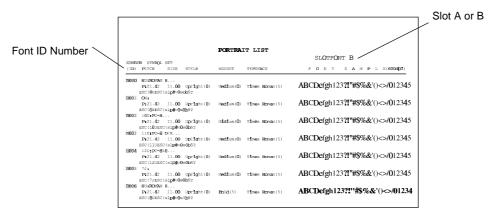


Fig. 5-3 Font ID Numbers on the Font List

3. Select the font with the FONT switch.

See "FONT Switch" in Chapter 4.

MODULAR I/O CARD

This printer has a modular input/output (MIO) interface slot on the rear panel. This slot allows you to install a commercial MIO-compatible sharing/network card.

For more information about MIO cards, consult the dealer where you purchased this printer.

When you install the MIO card, follow these steps:

1. Turn off the printer and unplug the power cord from the wall socket.

✓ Note

Be sure to turn off the power to the printer before installing or removing the MIO card.

- 2. Remove the two screws and cover plate from the MIO interface slot.
- 3. Unpack the MIO card and hold it on its edge.

/ Note

Do not touch the card surface. If static electricity collects, it damages the card.

- 4. Insert the card until it is securely seated.
- 5 Secure the MIO card with the two captive screws on the card
- 6. Retain the cover plate and two screws removed in 2 in case you want to remove the MIO card later.

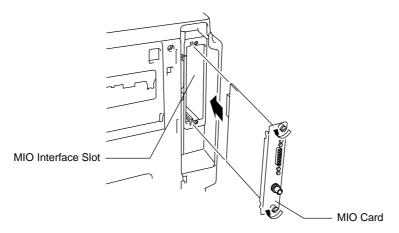


Fig. 5-4 Installing the MIO Card

RAM EXPANSION

This printer has 2 Mbytes (HL-1260e) / 4 Mbytes (HL-1660) / 8 Mbytes (HL-1660e) of memory standard and 2 slots for optional expansion memory. The memory can be expanded up to 66 Mbytes (HL-1260e/1660) / 72 Mbytes (HL-1660e only) by installing commercially available single in-line memory modules (SIMMs). (The standard memory fitted can vary depending on the printer model and country.)

Minimum Memory Recommendation (Including 2/4/8 Mbytes of internal memory)

■ HP LaserJet, HP-GL, EPSON FX-850, and IBM Proprinter XL emulation modes

Page Protect = Off		
	300 dpi	600 dpi
Letter/A4	2 Mbytes	2 Mbytes
Legal	2 Mbytes	2 Mbytes
Page Protect	= On	
	300 dpi	600 dpi
Letter/A4	2 Mbytes	6 Mbytes
Legal	3 Mbytes	6 Mbytes

■ BR-Script 2 mode

	300 dpi	600 dpi
Letter/A4	4 Mbytes	6 Mbytes
Legal	4 Mbytes	6 Mbytes

■ Duplex printing

	300 dpi	600 dpi
HP LaserJet	4 Mbytes	10 Mbytes
BR-Script 2	4 Mbytes	10 Mbytes

The following capacity of SIMM can be installed:

- 1 Mbyte HITACHI HB56D25632B-6A, -7A, -8A MITSUBISHI MH25632BJ-7, -8
- 2 Mbyte HITACHI HB56D51232B-6A, -7A, -8A MITSUBISHI MH51232BJ-7, -8
- 4 Mbyte HITACHI HB56A132BV-7A, -7AL, -7B, -7BL, -8AL, -8B, -8BL

MITSUBISHI MH1M32ADJ-7, -8

- 8 Mbyte HITACHI HB56A232BT-7A, -7AL, -7B, -7BL MITSUBISHI MH2M32EJ-7, -8, MH2M32DJ-7, -8
- 16 Mbyte TOSHIBA THM324000BSG-60, -70, -80
- 32 Mbyte TOSHIBA THM328020BSG-60, -70, -80

In general, the SIMM must have the following specifications:

Type: 72 pin and 32 bit or 36 bit output

Access Time: 80 nsec. or less

Capacity: 1, 2, 4, 8, 16 or 32 Mbyte Height: 46mm (1.8 inches) or less

There are 40 bit output SIMMs for workstations. Such SIMMs do not fit this printer.

For SIMMs and installation, consult the dealer where you purchased the printer.

When you install SIMMs, follow these steps:

1. Turn off the printer and unplug the power cord from the wall socket.

/ Note

Be sure to turn off the power to the printer before installing or removing the SIMMs.

- 2. Open the top cover of the printer.
- 3. Push the tab located on the left inside the printer to unlock the left side cover.

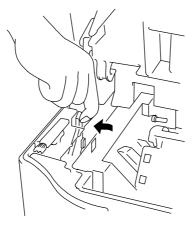


Fig. 5-5 Unlocking the Left Side Cover

4. Remove the left side cover by sliding it to the rear of the printer.

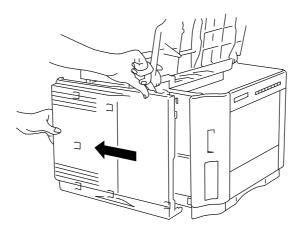


Fig. 5-6 Removing the Left Side Cover

5. Loosen the screws and then slide and remove the metal cover.

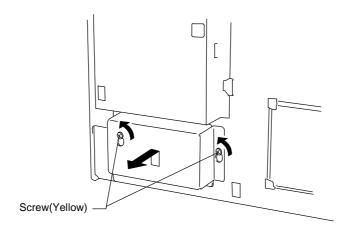


Fig. 5-7 Removing the Metal Cover

6. Unpack a SIMM and hold it on its edge.



SIMM boards may be damaged by even a small amount of static electricity. Do not touch the memory chips or the board surface. When handling the board and before installing or removing it, wear an antistatic wrist strap, or frequently touch the surface of the antistatic package or bare metal on the printer.

- 7. Install as many SIMMs as you need.
 - Set a SIMM into the slot at an angle.
 - Push the tip gently towards the vertical until it clicks into place.

Notes

- When you install less than two SIMMs, be sure to install them in the order of slots 1 and 2.
- When you install different capacities of SIMMs, be sure to install the larger capacity SIMMs in the lower socket and smaller capacity SIMMs in order in the upper sockets.
- Be careful not to connect the network interface cable into the modular jack for options located inside the left side cover, or it may damage the printer.

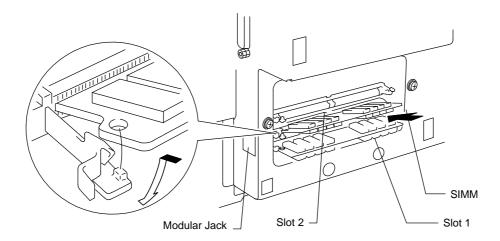


Fig. 5-8 Installing the SIMMs

- 8. Refit the metal plate and secure it with the screws.
- 9. Refit the left side cover to the printer.
- 10. Plug in the power cord and turn on the printer.

If you have installed the SIMMs incorrectly, the printer prints a report to alert you.

DUPLEX UNIT (DX-1200/DX-1600)

The duplex unit is an optional device that allows printing on both sides of pages. When it is installed, you can select either duplex printing or simplex printing from the control panel or by software command. For more information about the control panel, see "FEEDER switch" in Chapter 4.

Be sure to install the following capacity of RAM to enjoy duplex printing, or the printer cannot manage all the data for duplex printing at 600 dpi resolution and automatically switches to simplex printing or decrease the resolution from 600 dpi to 300 dpi.

■ Duplex printing

	300 dpi	600 dpi
HP LaserJet	4 Mbytes	10 Mbytes
BR-Script 2	4 Mbytes	10 Mbytes

/ Notes

- The Duplex unit can handle cut sheet paper of the sizes shown below [Weight = 60 to 90 g/m² (16 to 24 lbs)].
- When the duplex unit is installed, the capacity of the upper paper cassette decreases as shown below.
- When the duplex unit is installed, legal size paper can not be loaded into the upper paper cassette with the standard paper guide. Be sure to replace it with the duplex paper guide for the both simplex and duplex printing.
- When the printer automatically changes the setting to the 300 dpi resolution, the display temporarily shows "02 PR300" during printing.

When the printer automatically changes the setting to the simplex printing, the display temporarily shows "02 SX" during printing.

USER S GUIDE

When the duplex unit is installed, paper handling and capacity of the upper paper cassette changes as follows:

For Duplex

paper source	available size
all sources for duplex	cut sheet: letter, legal, A4, ISO
printing (DX)	B5(except T2) and Executive

The upper paper cassette with duplex installed

paper source	available size	capacity
the upper	cut sheet : letter, legal, A4,	:250 sheets/27.5mm
paper cassette	ISO B5, Executive	:250 sheets/27.5mm
(T1)	A5	:200 sheets/24.5mm
	ISO B6	:140 sheets/17.5mm
	A6	: 80 sheets/10.0mm
	envelope : COM 10	: 15 sheets/20.5mm
	Monarch	: 15 sheets/20.5mm
	C5	: 15 sheets/20.5mm
	DL	: 15 sheets/20.5mm
	ISO B5	: 15 sheets/20.5mm

CHAPTER 6 MAINTENANCE

MAINTENANCE

Toner Cartridge

A new toner cartridge contains enough toner to print approximately 9,000 A4/Letter-size single-sided pages at about 5% coverage (if the print density is set at level 8).

You can check the current page count or the number of printed pages with the MODE switch (PAGE COUNTER). For further information, see "MODE Switch" in Chapter 4.

Notes

Toner consumption varies according to the image coverage on the page and the print density setting.

- The greater the image coverage, the greater the toner consumption.
- If you change the print density setting for lighter or darker printing, toner consumption varies accordingly. To adjust print density setting, see "Checking the Printed Test Pattern or Demo Page" in Chapter 2.

Toner Empty Message

Check printed pages, page counter, and display messages periodically. If the display shows the following message, the printer has almost run out of toner or the toner is not evenly distributed inside the cartridge.

16 TONER EMPTY

Although you can print between 30 and 100 additional pages after the toner empty message first appears, be sure to replace the toner cartridge with a new one before it becomes completely empty.

You can select the printer's action when the "TONER EMPTY" message appears, whether to stop or continue printing. See "ADVANCED MODE" in Chapter 4.

Follow these steps to check the toner cartridge:

1. Remove the toner cartridge from the printer.

If you turn on the printer without a toner cartridge installed, the display shows the following operator call message to prompt you to install the toner cartridge.

14 NO CARTRIDGE

- 2. Rock the toner cartridge gently several times at a 45° angle to distribute the toner evenly inside the cartridge.
- 3. Install the toner cartridge again.
- 4. Try printing and check the printed page.

If you are not satisfied with it or the display still shows the toner empty message, replace the old toner cartridge with a new one.

Replacing the Toner Cartridge

Every time you replace the toner cartridge, you need to clean the inside of the printer. For further information on cleaning, see "Cleaning" in this chapter.

✓ Note

To ensure optimum print quality, be sure to use quality toner cartridges. To obtain toner cartridges, consult the dealer where you purchased the printer.

Before you begin the following steps, refer to "Installing the Toner Cartridge" in Chapter 2. Be sure to review the instructive diagrams.

To replace the toner cartridge, follow these steps:

- 1. Turn off the printer.
- 2 Open the top cover of the printer.
- 3. Lift the top of the toner cartridge slightly and pull it out of the printer.

4. Clean the anti-static teeth with a clean brush.

/ Note

Never touch or clean the transfer roller, or print quality may deteriorate.

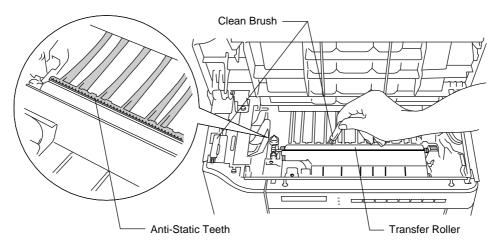


Fig. 6-1 Cleaning the Anti-Static Teeth

- 5. Clean the transfer guide, referring to "Cleaning the Printer Interior" in this chapter.
- 6. Open the bag to unpack a new toner cartridge.

Handle the toner cartridge with care.

7. Hold the toner cartridge with both hands. Rock it gently several times at a 45° angle. This distributes the toner evenly inside the cartridge.

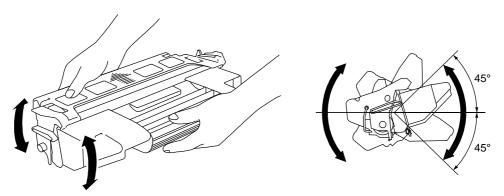


Fig. 6-2 Rocking the Toner Cartridge

USER S GUIDE

- 8. Bend the tab up and down several times until it is detached from the toner cartridge.
- 9. Hold the tab firmly and pull it until the sealing tape comes out all the way.
- 10. Insert the toner cartridge in the direction of the arrows engraved on the cartridge into the side guides until it stops securely in the cartridge holder inside the printer.

✗ Note

Push both sides of the toner cartridge gently until the cartridge is seated correctly in place.

11. Close the top cover of the printer.

Cleaning

Clean the printer exterior and interior periodically with a dry soft cloth. When you replace the toner cartridge, be sure to clean the printer interior with a dry soft cloth. If the printed page gets stained with toner, clean the printer interior with a dry soft cloth.

Cleaning the Printer Exterior

Clean the printer exterior as follows:

- 1. Turn off the printer and unplug the power cord.
- 2. Remove the paper cassette and optional font cartridge/card.
- 3. Open the multi-purpose tray.
- 4. Wipe the printer body with a soft cloth to remove dust from it.

Dip the cloth in water and wring it out thoroughly for cleaning.

/ Note

Use water or neutral detergents for cleaning. Cleaning with volatile liquids such as thinner or benzine damages the surface of the printer. Do not use cleaning materials that contain ammonia. It might damage the printer, particularly the toner cartridge.

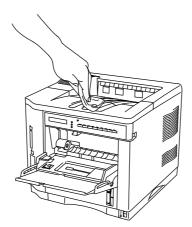


Fig. 6-3 Cleaning the Printer Exterior

5. If paper or foreign objects are stuck in the paper cassettes, remove them.

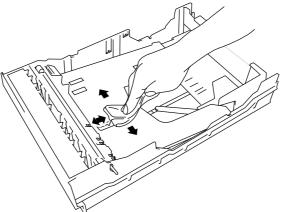


Fig. 6-4 Cleaning the Paper Cassette

6. Replace the paper cassette and the optional font cartridge/card.

Cleaning the Printer Interior

Dip a soft cloth in water and wring it out thoroughly for cleaning the printer interior.

Notes

When you clean the printer interior, pay attention to the following:

- If your clothes are smeared with toner, wipe off toner with a dry cloth and wash clothes in cold water. If you wash them in hot water, toner gets dissolved inside the material and it will not come out.
- Never touch the hot fuser.
- Never touch or clean the transfer roller, or print quality may be adversely affected.
- Be careful not to inhale the toner.

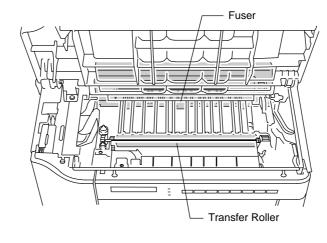


Fig. 6-5 Fuser and Transfer Roller

Clean the printer interior as follows:

- 1. Turn off the printer and unplug the power cord.
- 2. Open the top cover of the printer and remove the toner cartridge.
- 3. Clean both sides of the paper access cover and transfer guide by wiping off toner and paper particles with a dry, soft cloth. The paper access cover can be lifted up to allow easier access for cleaning.

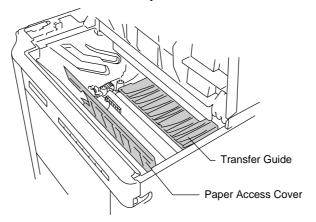


Fig. 6-6 Cleaning the Paper Access Cover and Transfer Guide

4. Wipe off toner and paper particles from the top surface of the black plastic paper guide with a dry, soft cloth.

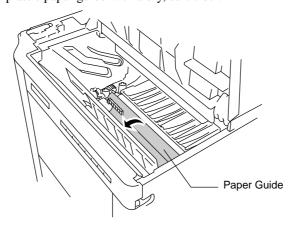


Fig. 6-7 Cleaning the Paper Guide

- 5. Detach the cleaning brush from the top cover and clean the anti-static teeth by sliding the brush several times. After cleaning, replace the brush in its slot.
- 6. Refit the toner cartridge as described in REPLACING THE TONER CARTRIDGE.
- 7. Close the top cover of the printer and plug in the power cord.

CHAPTER 7 TROUBLE SHOOTING

TROUBLESHOOTING

If any problems occur, the printer automatically stops printing, diagnoses the problem, and displays the corresponding message to alert you. Take the appropriate action, referring to the following tables. If you cannot clear the problem, consult the dealer where you purchased the printer. Inform the dealer of the message number for quick troubleshooting.

Operator Call Messages

Operator Call Message	Meaning	Action
CHECK XXXXXXX	Check the paper tray. XXXXXXX is MP TRAY/ TRAY 1/ TRAY 2.	Check the adjustment lever at the bottom of the upper paper cassette and adjust to the correct setting in case of CHECK TRAY 1.
		See page 7-6. Load a stack of paper into the cassette.
12 COVER OPEN	The upper cover of the printer is open.	Close the cover.
13 JAM XXXXXX	Paper is jammed in the printer. XXXXXX is TRAYS/INSIDE/ REAR/ DUPLEX.	Remove the jammed paper from the indicated area. See page 7-6.
14 NO CARTRIDGE	The toner cartridge is not installed in the printer.	Install a toner cartridge.
XX NO CASSETTE	The paper cassette is not installed. XX is T1/ T2.	Install the paper cassette.
16 TONER EMPTY	The printer has almost run out of toner: you may print another 30 to 100 pages. (The ALARM lamp lights at the same time.)	Remove the toner cartridge, rock it several times at 45°, and install it again. Or replace the toner cartridge with a new one.
XX LOAD PAPER ***** SIZE	The wrong size of paper was loaded in the paper cassette XX. XX is MP/T1/T2.(The message appears alternately to show a particular size.)	Load the requested size of paper in the paper cassette, or load it on the manual feed tray and press the FORM FEED switch.

Operator Call Message	Meaning	Action
18 MANUAL FEED ***** SIZE	The printer requests you to load paper manually. (The message appears alternately to show a particular size.)	Load the requested size of paper on the multi-purpose tray and press the SEL switch.
19 CHECK FONT	An error occurred in the optional font cartridge/card.	Turn off the printer, and reinstall or replace the optional font cartridge/card.
20 FONT REMOVAL	The font cartridge/card was removed while the printer is on-line.	Turn off the printer, install the font cartridge/card, and turn on the printer. The CONTINUE switch will allow you to temporarily ignore this message.
27 NO DX UNIT	The duplex unit is not installed with the printer when the duplex printing mode is selected.	Install the duplex unit correctly. See the DX-1200/DX-1600 user's guide.
27 NO DX TRAY	The duplex paper guide tray is not installed in T1 when duplex printing mode is selected.	Install the duplex paper guide tray into T1. See the DX-1200/DX-1600 user's guide.
27 DX OPEN	The cover of the duplex unit is open.	Close the cover. See the DX-1200/DX-1600 user's guide.

Error Messages

Error Message	Meaning	Action		
31 PRINT OVERRUN	I Print overrun	Press the CONTINUE switch to start printing the next page. Data which overran the print area on the page cannot be printed. Check your page protection setting with the MODE switch. Setting page protection to the correct size could solve this problem. If printing at 600 dpi, you may need to add optional SIMM memory. See page 5-7.		
32 BUFFER ERROR	Input buffer overflow	Press the CONTINUE switch to resume printing. Data lost in overflow cannot be printed. See page 4-46.		
34 MEMORY FULL	Work memory overflow	Press the CONTINUE switch to resume printing. If the same error should occur after you press the CONTINUE switch, turn off the printer. Wait a few seconds, then turn it on again. Reduce the input buffer size. See page 4-46. Turn off "KEEP PCL." Add SIMM memory with power off. Download font and the fonts saved in the HDD card might cause the error, for it occupies the same work area as the RAM. Memory expansion is recommended in that case. See page 5-7.		
40 LINE ERROR	Error in the communications circuit	When the serial interface is used, check the communications parameters such as baud rate, code type, parity, and handshake protocols. When the parallel interface is used, check the interface cable connection.		
41 PRINT CHECK	Error in communication with the engine controller	Turn off the printer. Wait a few seconds, then turn it on again.		

Error Message	Meaning	Action
42 CARD FULL	Card overflow	Delete unnecessary macros or fonts, or use a new card. See page 4-32.
43 CARD W ERROR	Card write error	Set the write protect switch of the card to OFF if it has been set to ON. Use a new card. If the same error occurs, consult your dealer or service personnel.
44 SIMM ERROR	Incorrect installation of SIMMs	Install SIMMs correctly, referring to the printed error message. See page 5-7.
45 MIO ERROR	Error in communication with the MIO card	Install the MIO card correctly. See page 5-6.
46 OPT IO ERROR	Connection error with optional feeders and duplex unit.	Check the interface cable connection between the printer and the fitted option.
47 CARD R ERROR	Card read error	Use a new card. If the same error occurs, consult your dealer or service personnel.
XX SIZE ERROR	Paper of incorrect size is loaded into XX. XX is T2/DX.	Set the correct size of paper in T2 or for duplex printing. See "Paper Handling" in Chapter 3.
IGNORE DATA (BR-Script 2 mode only)	Data is ignored because of an error in the PostScript® language program.	Press the RESET switch. If the same error occurs, you may need to add optional SIMM memory. See page 5-7.

Service Call Messages

Service Call Message	Meaning	Action
50 FUSER MALF	Malfunction of fuser	Turn off the printer. Wait 15 minutes, then turn it on again.
51 LASER BD MAL	F Malfunction of laser beam detector	Turn off the printer. Wait a few seconds, then turn it on again.
52 SCANNER MALF	Malfunction of laser scanner motor	Turn off the printer. Wait a few seconds, then turn it on again.
53 DX FAN MALF	Malfunction of fan motor in the duplex unit	Turn off the printer. Wait a few seconds, then turn it on again.
54 MOTOR MALF	Malfunction of main motor	Turn off the printer. Wait a few seconds, then turn it on again.
55 HIGH VOL MAL	F Malfunction of high voltage power supply	Turn off the printer. Wait a few seconds, then turn it on again.
61 PROG ERROR	Program ROM checksum error	Turn off the printer. Wait a few seconds, then turn it on again.
62 FONT ERROR	Font ROM checksum error	Turn off the printer. Wait a few seconds, then turn it on again.
63 D-RAM ERROR	D-RAM error	Turn off the printer. Wait a few seconds, then turn it on again.
66 NV-W ERROR	NV-RAM error	Turn off the printer. Wait a few seconds, then turn it on again.
67 NV-R ERROR	NV-RAM error	Turn off the printer. Wait a few seconds, then turn it on again.
68 NV-B ERROR	NV-RAM error	Turn off the printer. Wait a few seconds, then turn it on again.
99 SERVICE	System error	Turn off the printer. Wait a few seconds, then turn it on again.
48 INCORRECT LT	Your lower tray is an LT-1200, and it is not the correct tray for your 16/17 ppm printer.	Change LT-1200 to LT-1600
49 INCORRECT DX	Your duplex unit is a DX-1200, and it is not correct for your 16/17 ppm printer.	Change DX-1200 to DX-1600

Possible Problems

This printer has been designed to be trouble free. However, if any problem should occur, note the display message and take the appropriate action. This section describes the actions to be taken against paper jams and unsatisfactory printouts.

Paper Jam

If paper jams in the printer, it stops printing and displays the following message.

13 JAM XXXXXX

∥ Notes

If paper jams frequently occur, check the adjustment lever located in the bottom of the paper cassette or clean the printer interior and check the paper quality.

About the Adjustment Lever

If paper is misfeeding or doublefeeding frequently, set the adjustment lever according to the table below.

Recommended Paper Size

I. Backwards : letter, legal, A4, ISO B5, Executive and A5 II. Forwards : ISO B6, A6, COM10, Monarch, C5 and DL

If CHECK TRAY is shown when the paper cassette is filled with paper, check the adjustment lever and adjust to the correct setting.

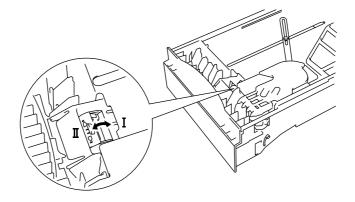


Fig. 7-1 Adjustment Lever

Do not use the following paper:

- Bent paper
- Moist paper
- Paper that does not meet specifications

Paper may jam in the paper cassette, inside the printer, at the rear access cover or at the paper exit. Check the jam location and follow the instructions below to remove the jammed paper.

After you have followed the instructions, the printer automatically resumes printing. However, the DATA lamp may come on and the following message may appear on the display.

07 FF PAUSE

After a paper jam has occurred, data usually remains in the printer memory. The message prompts you to execute a form feed and print out the remaining data. Press the SEL switch to continue.

■ Paper Jam at Paper Exit

13 JAM REAR

If paper has passed behind the rear access cover and a paper jam has occurred at the paper exit, remove the jammed paper by pulling it slowly from the exit as shown below:

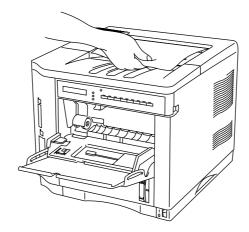


Fig. 7-2 Paper Jam at Paper Exit

■ Paper Jam at Rear Access Cover

13 JAM REAR

If a paper jam occurs behind the rear access cover before the paper exit, remove the jammed paper as follows:

- 1. Open the rear access cover.
- 2. Pull out the jammed paper slowly in direction A or B.

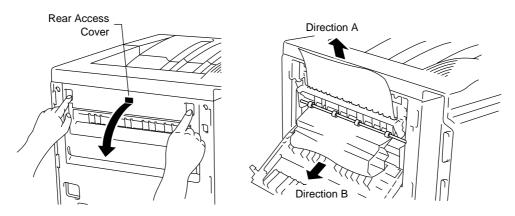


Fig. 7-3 Paper Jam at Rear Access Cover

3. Close the rear access cover.

■ Paper Jam at Fixing Roller inside the printer

13 JAM INSIDE

If a paper jam occurs at the fixing roller, follow these steps to remove the jammed paper:

- 1. Open the top cover and remove the toner cartridge.
- 2. Remove the jammed paper by holding it with both hands and pulling it slowly towards you.



Warning

The fixing roller is extremely hot during operation. Remove the paper carefully.



Q Caution

- After having removed the jammed paper, if the printed paper has a stain, print several pages before restarting your printing.
- Remove the jammed paper carefully so as not to spread toner.
- Take care not to stain your hands and clothes with toner. Wash toner stains immediately with cold water.
- Never touch the transfer roller.

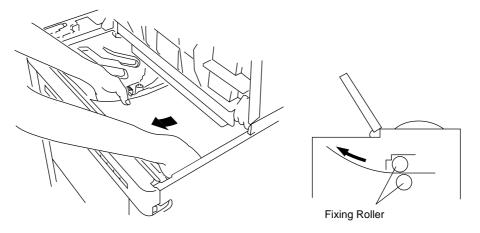


Fig. 7-4 Paper Jam at Fixing Roller

3. Install the toner cartridge and close the top cover.

■ Paper Jam at the Paper Access Cover Inside the Printer

13 JAM INSIDE

If a paper jam occurs at the paper access cover, follow these steps to remove the jammed paper:

- 1. Pull the upper paper cassette out of the printer to release the edge of the paper from the paper feed roller, or the paper might be torn and difficult to remove.
- 2. Open the top cover and remove the toner cartridge.
- 3. Raise the paper access cover.
- 4. Remove the jammed paper using the following methods:

If paper has passed through the paper access cover and toner is on the paper, pull it with making paper edge round in direction A (toward the upper side of the printer).



Q Caution

Take care not to stain your hands and clothes with toner. Wash out toner stains immediately with cold water.

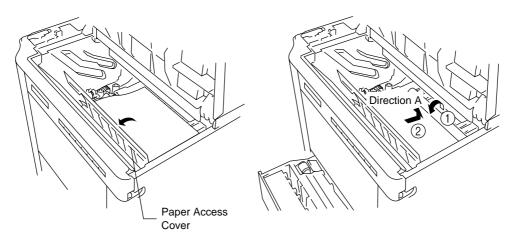


Fig. 7-5 Paper Jam at Paper Access Cover

- 5. Close the paper access cover.
- 6. Install the toner cartridge and close the top cover.

■ Paper Jam in the Paper Cassette

13 JAM TRAYS

If a paper jam occurs inside the paper cassette, follow these steps:

- 1. Pull out the paper cassette.
- 2. Remove the jammed paper.

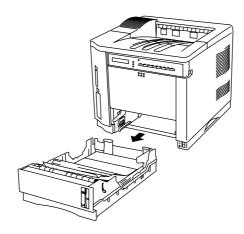


Fig. 7-6 Paper Jam at Paper Cassette

3. Install the paper cassette.



Caution

Do not pull out the upper paper cassette while paper is being fed from the lower paper cassette, or it causes a paper jam.

■ Paper Jam in the Multi-purpose Tray

13 JAM TRAYS

If a paper jam occurs in the multi-purpose tray, follow these steps:

- 1. Remove the jammed paper in the multi-purpose tray.
- 2. Reset all the paper on the multi-purpose tray correctly.
- 3. Open and close the top cover.

Unsatisfactory Printouts

If you are not satisfied with the printout quality, check the problem and take the necessary action to clear it.

∥ Note

It is possible that paper could meet all of the guidelines listed in the specifications and still not print satisfactorily. This may be due to temperature, humidity or other variables over which the printer has no control. If you cannot clear print problems, consult the dealer where you purchased the printer.

■ Unclear Printouts

The printed page may have white stripes or faint images.



Fig. 7-7 White Stripes or Faint Images

If you see these print problems, check for the toner empty message. The toner may not be distributed evenly in the cartridge or the toner cartridge may be empty.

16 TONER EMPTY

Follow these steps to clear the problem:

1. Open the top cover of the printer.

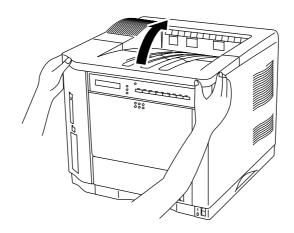


Fig. 7-8 Opening the Top Cover

2. Remove the toner cartridge from the printer.

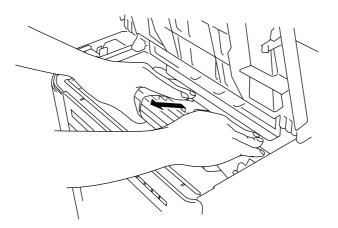


Fig. 7-9 Removing the Toner Cartridge

3. Rock the cartridge gently several times at a 45° angle.

This distributes the toner evenly inside the cartridge.

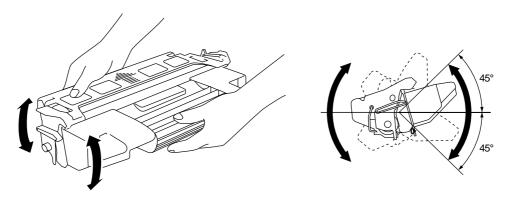


Fig. 7-10 Distributing the Toner Evenly

- 4. Install the toner cartridge and close the top cover of the printer.
- 5. Print out several pages.

If you are still not satisfied with the printout, replace the toner cartridge with a new one.

■ Stains and Stripes

If the printed page is stained with toner or has vertical stripes, clean the printer interior. See "Cleaning" in Chapter 6.

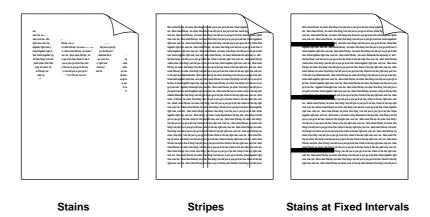


Fig. 7-11 Dark Stripes or Toner Stains

If the same print problem occurs after cleaning, take any of the following actions:

- Make sure that you use paper or OHP films that meet specifications and have the correct printing surface.
- Check that the toner cartridge is not damaged. If it is damaged, replace it with a new one.

If the stripes or stains are vertically repetitive on a page, take the following action in accordance with the intervals of the stripes or stains.

Interval	Action
95 mm or 3.7"	Replace the toner cartridge.
53 mm or 2.1"	Print several pages. *
51 mm or 2.0"	Replace the toner cartridge.
38 mm or 1.5"	Replace the toner cartridge.

^{*} If the problem occurs repeatedly, the transfer roller needs to be replaced with a new one. Consult your dealer or sales personnel.

■ White Spots

The printed page may have white spots in black text and graphics areas. Make sure that you use paper or OHP films that meet specifications and have the correct printing surface.



Fig. 7-12 White Spots

■ Toner Scatter

If toner scatters around printed characters and stains the printed page, clean the printer interior. See "Cleaning" in Chapter 6.

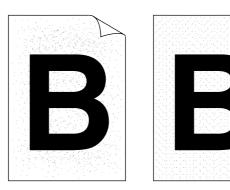


Fig. 7-13 Toner Scatter

If the same print problem occurs after cleaning, take any of the following actions:

- Make sure that you use paper, OHP films, or envelopes that meet specifications.
- Check for glue on the paper. Glue causes toner to scatter.
- If toner scatters over the entire printing surface, adjust the print density. See "Checking the Printed Test Pattern or Font List" in Chapter 2.

■ Black Page

If an entire page is printed in black, make sure that the toner cartridge is properly installed. Never use heat-sensitive paper, or it may cause this problem.

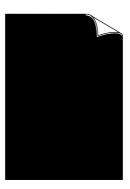


Fig. 7-14 Black Page

■ White Page

If nothing is printed on pages, make sure that the toner cartridge is not empty, the sealing tape is removed from the toner cartridge, or you use paper, OHP films, or envelopes that meet specifications.

If a stack of paper is not fanned, more than one sheet may be loaded at a time, which may cause blank pages to be ejected.

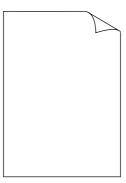


Fig. 7-15 White Page

■ Dropout

If nothing or part of a page is printed, make sure that the toner cartridge is not empty or the toner is evenly distributed in the cartridge. Take the proper action, referring to "Unclear Printouts" in this section.

Also, make sure that you use paper, OHP films or envelopes that meet specifications. Moist paper causes this problem.

If the print density is set too low, this problem may occur. Adjust the print density to the proper setting. See "Checking the Printed Test Pattern or Font List" in Chapter 2.



Fig. 7-16 Dropout

■ Poor Halftone or Grayscale Transitions

If images do not have smooth transitions as gray shades gradually change, turn off the high resolution control (HRC SETTING) in "RESOLUTION MODE" with the MODE switch.





HRC = OFF

HRC = MEDIUM

Fig. 7-17 Adjustment of High Resolution Control



Operation of the printer outside the specifications shall be deemed abuse and all repairs thereafter shall be the sole liability of the end user/purchaser.

(For USA & CANADA Only)

For technical and operational assistance, please call:

In USA 1-800-276-7746 (outside California)

714-859-9700 Ext. 329 (within California)

In CANADA 1-800-853-6660

514-685-6464 (within Montreal)

If you have comments or suggestions, please write us at:

In USA Printer Customer Support

Brother International Corporation

15 Musick Irvine, CA 92718

In CANADA Brother International Corporation (Canada), Ltd.

Marketing Dept.1, rue Hôtel de Ville

Dollard-des-Ormeaux, PQ, Canada H9B 3H6

BBS

For downloading drivers from our Bulletin Board Service, call:

In USA 1-714-859-2610 In CANADA 1-514-685-2040

Please log on to our BBS with your first name, last name and a four digit number for your password. Our BBS supports modem speeds up to 14,400, 8 bits no parity, 1 stop bit.

Fax-Back System (For USA only)

Brother Customer Service has installed an easy to use Fax-Back System so you can get instant answers to common technical questions and product information for all Brother products. This is available 24 hours a day, 7 days a week. You can use the system to send the information to any fax machine, not just the one you are calling from.

Please call 1-800-521-2846 and follow the voice prompts to receive faxed instructions on how to use the system and your index of Fax-Back subjects.

DEALERS/SERVICE CENTERS (USA only)

For the name of an authorized dealer or service center, call 1-800-284-4357.

SERVICE CENTERS (Canada only)

For service center addresses in Canada, call 1-800-853-6660

INTERNET ADDRESS

For technical questions and downloading drivers: http://www.brother.com

APPENDICES

PRINTER SPECIFICATIONS

Printing

Print Method Electrophotography by semiconductor laser beam

scanning

Laser Wavelength: 780 nm

Pulse duration: 80 ns Output: 5 mW max.

Resolution 600 dots per inch (The resolution can be enhanced by

using high resolution control feature.)

Print Speed HL-1260e: 12 pages per minute (A4/Letter size)

HL-1660/1660e: 16 pages per minute (A4 size)

17 pages per minute (Letter size)

Warm Up Max. 1 minute at 20°C (68°F)

First Print HL-1260e: 20 seconds or less

HL-1660/1660e: 16 seconds or less

(A4 size by face down print delivery from cassette

feed)

Prestart by software command for 10 second first print

Print Media Toner in a single-component cartridge

Life Expectancy: 9,000 single-sided pages/cartridge (A4 or letter size paper with about 5% coverage).

Resident Printer Fonts • HP LaserJet, EPSON FX-850, and IBM Proprinter XL

modes

66 scalable fonts and 12 bitmapped fonts

• BR-Script Level 2 mode

66 scalable fonts

For further information about resident fonts, see

"RESIDENT FONTS" in Appendix.

Functions

CPU MB86832 100 MHz (SPARC architecture)

Emulation Automatic emulation selection

 $\bullet \quad HP\ LaserJet\ 5\ (PCL\ 6)\ (HL\text{-}1660e\ only)\ /\ LaserJet$

4+ (PCL 5e)
• BR-Script Level 2

• HP-GL

EPSON FX-850IBM Proprinter XL

Interface Automatic interface selection among bi-directional

parallel, RS-232C serial, Universal Serial Bus (HL-

1660e only), and MIO interface.

For further information, see the section "INTERFACE

SPECIFICATIONS" in Appendix.

RAM HL-1260e: 2 Mbyte / HL-1660: 4 Mbyte

(expandable to 66 Mbytes with SIMMs)

HL-1660e: 8 Mbyte

(expandable to 72 Mbytes with SIMMs)

The standard memory fitted can vary depending on the

printer model and country.

Font Cartridge/Card Slots 2 slots

1 font cartridge slot: HP LaserJet Compatible 1 card slot: PCMCIA Type III Compatible

Control Panel 8 switches, 4 lamps, and 16-column liquid crystal

display

Diagnostics Self-diagnostic program

Electrical and Mechanical

Power Source U.S.A. and Canada: AC 110 to 120 V, 60 Hz

AC 220 to 240 V, 50 Hz Europe and Australia:

Power Consumption <HL-1260e> Printing: 290 W or less

75 W or less Stand-by:

Stand-by in sleep mode: 16 W or less

<HL-1660/1660e>

Printing: 340 W or less Stand-by: 75 W or less Stand-by in sleep mode: 16 W or less

49 dB A or less Noise <HL-1260e> Printing:

40 dB A or less Stand-by:

<HL-1660/1660e>

52 dB A or less Printing: 45 dB A or less Stand-by:

Temperature Operating: 10 to 32.5°C (50°F to 90.5°F)

> Storage: 0 to 35°C (38°F to 95°F)

Humidity 20 to 80% (without condensation) Operating:

> 10 to 80% (without condensation) Storage:

Dimensions (W x H x D) 371.6 x 326.5 x 393 mm (14.8 x 12.9 x 15.5 inches)

371.6 x 446.5 x 393 mm (14.8 x 17.6 x 15.5 inches)

with an optional lower tray unit fitted

Weight Approx. 15 kg (33 lbs.)

Approx. 21.0 kg (46.3 lbs.) with optional lower tray

unit and toner cartridge fitted.

PAPER SPECIFICATIONS

Paper Input

Cassettes:

- Standard upper cassette (Tray 1)
- Optional lower cassette (Tray 2)
- Paper size:

Letter, legal, A4, ISO B5, Executive, TRAY 1:

A5, ISO B6, A6, COM10, Monarch,

C5 and DL

TRAY 2: Letter, legal, A4 and Executive

(OPTION)

- Max. stacking height in the cassette = 55 mm(2.1")
- Max. paper cassette capacity = Approx. 500 sheets of $80 \text{ g/m}^2 (20 \text{ lbs})$

when duplex unit installed = Approx. 250 sheets of 80 g/m² (20 lbs) A4/letter (Tray 1)

Multi-purpose tray:

Multi-purpose tray capacity = Approx. 150 sheets of $80 \text{ g/m}^2 (20 \text{ lbs})$

Printed Output

Face down print delivery: Approx. 250 sheets

Face up output delivery

Paper Type

Cassette Feed:

Standard upper cassette (Tray 1):

- Plain paper of letter, legal, A4, ISO B5, A5, ISO B6, A6 and Executive sizes $[60 \text{ to } 105 \text{ g/m}^2 \text{ (16 to } 28 \text{ lbs)}]$
- Envelopes of COM10, Monarch, C5, DL and ISO B5 sizes

Multi-purpose tray (MP tray):

- Plain paper from 90 x 148 mm to 216 x 356 mm (from 3.5" x 5.8" to 8.5" x 14") $[60 \text{ to } 135 \text{ g/m}^2 (16 \text{ to } 36 \text{ lbs})]$
- · Overhead projector (OHP) films
- Colored paper
- Postcards
- · Label stock
- Envelopes of COM10, Monarch, C5, DL and ISO B5 sizes

Optional lower cassette (Tray 2):

Plain paper of letter, legal, A4 and Executive sizes $[60 \text{ to } 90 \text{ g/m}^2 (16 \text{ to } 24 \text{ lbs})]$

Test printing on paper, especially envelopes, is recommended before making a large purchase. The following types of envelopes are not recommended for use.

- Envelopes with thick and/or crooked edges
- Damaged, curled, wrinkled, or irregularly shaped envelopes
- Extremely shiny or highly textured envelopes
- · Envelopes with clasps
- Envelopes of baggy construction
- Envelopes not sharply creased
- Embossed envelopes
- Envelopes already printed with a laser printer
- Envelopes pre-printed on the inside
- Envelopes that cannot be arranged uniformly when placed in a pile

✓ Notes

- An area 15 mm (0.6") from the edges of the envelope will not be printed.
- Avoid feeding labels with the carrier sheet exposed. Otherwise, your printer will be damaged.
- When feeding OHP film, the use of a recommended type for laser printers will ensure optimum printing. For detailed information on the specification or purchase, please contact your nearest authorized sales representative or the place of purchase.

■ PAPER

The printer is designed to work well with most types of xerographic and bond paper. However, some paper variables may have an effect on print quality or handling reliability. Always test samples of paper before buying to ensure that it provides desirable performance. Some important guidelines when selecting paper are:

- 1. Supplier should be informed that the paper or envelopes will be used in a laser printer.
- 2. Preprinted papers must use inks that can withstand the temperature of the printers fusing process. (200 degrees centigrade)
- 3. If selecting a cotton bond paper, paper having a rough surface such as cockle or laid finished paper, or paper that is wrinkled or puckered may exhibit degraded performance.

✓ Note

The manufacturer neither warrants or recommends the use of any particular paper. The operator is responsible for the quality of paper used with the printer.

Paper Types to Avoid

Some types of paper might not perform well or may cause damage to your printer.

Types of paper to avoid are:

- 1. Highly textured paper.
- 2. Smooth or shiny paper.
- 3. Paper that is coated or has a chemical finish.
- 4. Damaged, wrinkled or prefolded paper.
- Paper exceeding the recommend weight specification specified in the manual.
- 6. Paper with tabs and staples.
- 7. Letterheads using low temperature dyes or thermography.
- 8. Multipart or carbonless paper.

DAMAGE OR OTHER DEFECTS CAUSED BY THE USE OF PAPERS LISTED UNDER PAPER TYPES TO AVOID WILL NOT BE COVERED UNDER ANY WARRANTY OR SERVICE AGREEMENTS.

■ ENVELOPES

Most envelopes will perform acceptably on your printer. However; some envelopes will have feeding and print quality problems because of their construction. A suitable envelope should have edges with a straight, well creased folds and should not have more than two thickness of paper along the lead edge. The envelope should lie flat and not have baggy or flimsy construction. Purchase quality envelopes only from a supplier who understands that the envelopes will be used in a laser printer. All envelopes should be tested prior to use to ensure desirable print results.

Envelope Types to Avoid

- 1. Envelopes constructed with a paper with a weight that exceeds the paper weight specifications for the printer.
- 2. Poorly manufactured envelopes with edges that are not straight or consistently square.
- 3. Envelopes with "baggy" construction or folds that are not sharply creased.
- 4. Envelopes with transparent windows, holes, cutouts or perforations.

- 5. Envelopes with clasps, snaps or tie strings.
- 6. Envelopes made with smooth or shiny paper.
- 7. Envelopes that are rough, highly textured, or deeply embossed.
- 8. Envelopes which do not lie flat or that are curled, wrinkled, or irregularly shaped.
- 9. Envelopes having an open flap with an adhesive that seals the envelope.

USE OF ANY OF THE ENVELOPES LISTED ABOVE MAY CAUSE DAMAGE TO YOUR PRINTER. SUCH DAMAGE IS NOT COVERED UNDER ANY WARRANTY OR SERVICE AGREEMENT.

✗ Note

The manufacturer neither warrants nor recommends the use of a particular envelope because envelope properties are subject to change by the envelope manufacturer. The entire responsibility for the quality and performance of the envelope lies with the customer.

■ LABELS AND OVERHEAD TRANSPARENCIES

The printer will print on most type of labels and transparencies designed for use with a laser printer. Labels should have an adhesive that is acrylic-based since such material is more stable at the high temperatures in the fusing unit. Adhesives should not come in contact with any part of the printer, because the label stock may stick to the drum or rollers and cause jams and print quality problems. No adhesive should be exposed between the labels. Labels should be arranged so that they cover the entire page with the only exposed spaces being lengthwise down the sheet. Using labels with spaces may result in labels peeling off and causing serious jam or print problems.

All labels and transparencies used in this printer must be able to withstand a temperature of 200 degrees centigrade (392 degrees Fahrenheit) for a period of 0.1 seconds.

Label and transparency sheets should not exceed the paper weight specifications described in the User's Guide. Labels and transparencies exceeding this specification may not feed or print properly and cause damage to your printer.

The entire responsibility for the quality and performance of labels and transparencies lies with the customer.

DAMAGE CAUSED BY THE USE OF UNSATISFACTORY LABELS OR TRANSPARENCIES IS NOT COVERED UNDER ANY WARRANTY OR SERVICE AGREEMENTS.

INTERFACE SPECIFICATIONS

Bi-directional Parallel Interface

Interface Connector

A shielded cable that is IEEE 1284 compliant with the following pin assignment should be used. Most existing parallel cables support bidirectional communication, but some might have incompatible pin assignments or may not be IEEE 1284 compliant.




Fig. A-1 Parallel Interface Connector

Pin Assignment

Pin No.	Signal	Pin No.	Signal
1	DATA STROBE	19	Twisted pair ground
2	DATA 0	20	Twisted pair ground
3	DATA 1	21	Twisted pair ground
4	DATA 2	22	Twisted pair ground
5	DATA 3	23	Twisted pair ground
6	DATA 4	24	Twisted pair ground
7	DATA 5	25	Twisted pair ground
8	DATA 6	26	Twisted pair ground
9	DATA 7	27	Twisted pair ground
10	ACKNLG	28	Twisted pair ground
11	BUSY	29	Twisted pair ground
12	PE	30	INPUT PRIME RET
13	SLCT	31	INPUT PRIME
14	AUTO FEED	32	FAULT
15	N.C.	33	N.C.
16	0V	34	N.C.
17	0 V	35	N.C.
18	+5V	36	SELECT IN

Signal Description

Pin No.	Signal Name	IN/OUT	Explanation
1	DATA STROBE	IN	Data is latched at the leading edge of this signal.
2 - 9	DATA 0 - 7	IN	Parallel 8 bit data
10	ACKNLG	OUT	Data reception is completed and the printer is
			ready for the next data reception when this signal becomes low.
11	BUSY	OUT	The printer cannot receive data when this signal is high. The signal becomes high under data receiving, off-line, or error states.
12	PE	OUT	This signal becomes high when a paper empty state is detected.
13	SLCT	OUT	This signal becomes high when the printer is selected and low when it is deselected.
14	AUTO FEED	IN	This signal is used only for the bi-directional interface.
31	INPUT PRIME	IN	This signal is used only for the bi-directional interface.
32	FAULT	OUT	This signal becomes low when the printer is in the paper empty, off-line, or error states.
36	SLCT IN	IN	This signal is used only for the bi-directional interface.

Parallel Cable Connection for IBM-PC/AT or Compatible Computers and IBM-PS/2 Computers

Signal	Printer Pin No.	Computer Pin No.
DATA STROBE DATA 0	1 ————	- 1 - 2
DATA 1	3 —	- 2 - 3
DATA 2	4 ———	- 4
DATA 3	5 —	- 5
DATA 4	6 —	- 6
DATA 5	7	- 7
DATA 6	8	- 8
DATA 7	9	- 9
ACKNLG	10-	- 10
BUSY	11	- 11
PE	12	- 12
SLCT	13———	- 13
AUTO FEED	14	- 14
GND	19 - 30 ———	- 18 - 25
FAULT	32———	- 15
SLCT IN	36—	- 17

RS-232C Serial Interface

Standard Specifications

1) Baud rate: 150, 300, 600, 1200, 2400, 4800, 9600,

19200, 38400, 57600 or 115200 baud

2) Synchronization: Start-stop3) Communications control: No protocol

4) Data length: Serial 7 bits or 8 bits
5) Parity: Odd, even, or none
6) Stop bit: 1 or 2 stop bits
7) Protocol: Xon/Xoff or DTR

Interface Connectors

A shielded cable should be used.




Fig. A-2 Serial Interface Connector

Pin Assignment

Pin	Signal	IN/OUT	Pin	Signal	IN/OUT
No.		Printer Controller	No.		Printer Controller
1	FG		14	NC	_
2	SD		15	NC	
3	RD	•	16	NC	
4	RS		17	NC	
5	NC		18	NC	
6	DR	•	19	NC	
7	SG	←	20	ER	
8	NC		21	NC	
9	NC		22	NC	
10	NC		23	NC	
11	NC		24	NC	
12	NC		25	NC	
13	NC				

Signal Description

_		
Signal Name	IN/OUT	Explanation
FG	_	Frame Ground
SD	OUT	Send Data.
RD	IN	Receive Data. Receives data transmitted from the computer.
RS	OUT	Request To Send. "SPACE" level when the printer is ready to send data to the computer.
DR	IN	Data Set Ready. When DSR is at "SPACE" level, data can be accepted.
SG	_	Signal Ground
ER	OUT	Data Terminal Ready. "MARK" level when the printer is Busy.

Serial Cable Connection for IBM-PC/AT or Compatible Computers and IBM-PS/2 Computers

The following diagrams show the pin connections for the most common serial communications.

■ DB-9 Serial Connection

When you use a computer with a 9-pin serial port, use a cable with the following pin configurations.

Printer (Male)			Computer (Female)	
SD	2		2	RD
RD	3		3	SD
DR (DSR)	6		4	ER (DTR)
SG	7		5	SG
ER (DTR)	20		6	DR (DSR)
			8	CS (CTS)

■ DB-25 Serial Connection

When you use a computer with a 25-pin serial port, use a cable with the following pin configurations.


Printer (Male)			Computer (Female)	
FG	1		1	FG
SD	2		3	RD
RD	3		2	SD
DR (DSR)	6		20	ER (DTR)
SG	7		7	SG
ER (DTR)	20		5	CS (CTS)
			6	DR (DSR)



Any pins not shown in the figures above are not connected.

■ Universal Serial Bus (USB) Interface (HL-1660e only)

Interface Connector

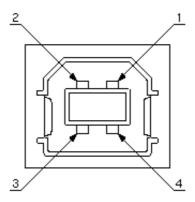

Pin Assignment

Pin No.	Signal	
1	Vcc (+5V)	
2	- Data	Serial Data -
3	+ Data	Serial Data +
4	Ground	

SYMBOL/CHARACTER SETS

You can select the symbol and character sets with the FONT switch in the HP LaserJet, EPSON FX-850, and IBM Proprinter XL emulation modes. See "FONT Switch" in Chapter 4.

When you have selected the HP-GL emulation mode, you can select the standard or alternate character set with the MODE switch. See "GRAPHICS MODE" in Chapter 4.

OCR Symbol Sets

When the OCR-A or OCR-B font is selected, the corresponding symbol set is always used.

OCR-A OCR-B

HP LaserJet Mode

Roman 8 (8U) ISO Latin1 (0N) ISO Latin2 (2N) ISO Latin5 (5N) PC-8 (10U) PC-8 D/N (11U) PC-850 (12U) PC-852 (17U)

PC-8 Turkish (9T) Windows Latin1 (19U) Windows Latin2 (9E) Windows Latin5 (5T) Legal (1U) Ventura Math (6M) Ventura Intl (13J) Ventura US (14J)

PS Math (5M) PS Text (10J)

Math-8 (8M)

Pi Font (15U)

MS Publishing (6J) Windows 3.0 (9U) Desktop (7J) MC Text (12J)

Symbol (19M) Windings (579L)

The following table shows characters available only in the corresponding character set. The numbers at the top of the table are hexadecimal code values with which characters are to be replaced in the Roman 8 character set. For other characters, see the Roman 8 character set.

SYMBOL SET 23 24 40 5B 5C 5D 5E 60 7B 7C 7D 7E ISO 2 IRV ISO 4 UK ISO 6 ASCII ISO10 SWE/FIN ISO11 Swedish ISO14 JISASCII ISO15 Italian ISO16 POR ISO17 Spanish ISO21 German ISO25 French ISO57 Chinese ISO60 NOR v1 ISO61 NOR v2 ISO69 French ISO84 POR ISO85 Spanish HP German HP Spanish

EPSON Mode

US ASCII

The following table shows characters available only in the corresponding character set. The numbers at the top of the table are hexadecimal code values with which characters are to be replaced in the US ASCII character set. For other characters, see the US ASCII character set.

CHARACTER SET 23 24 40 5B 5C 5D 5E 60 7B 7C 7D 7E

German UK ASCII I French I Danish I Italy Spanish Swedish Japanese Norwegian

Danish II UK ASCII II

UK ASCII II French II Dutch South African PC-8 PC-8 D/N PC-850 PC-852

PC-860

PC-863

PC-865

PC-8 Turkish

IBM Mode

PC-8 PC-8 D/N PC-850 PC-852

PC-860

PC-863

PC-865

PC-8 Turkish

HP-GL Mode

ANSI ASCII 9825 CHR. SET

FRENCH/GERMAN SCANDINAVIAN SPANISH/LATIN JIS ASCII ROMAN8 EXT. ISO IRV ISO SWEDISH ISO SWEDISH:N

ISO NORWAY 1 ISO GERMAN ISO FRENCH ISO U.K.

APPENDICES

ISO ITALIAN ISO SPANISH ISO PORTUGUESE ISO NORWAY 2

Symbol Sets Supported by the Printer's Intellifont Compatible Typefaces

PCL Sy	mbol Set	Typeface Alaska		Brougham	Cleveland	Connect-	Guatemala	Letter
Set ID	Symbol Set	7 Husku	Oakland	Drougnam	Cond.	icut	Antique	Gothic
8U	Roman-8	•	•	•	•	•	•	•
0N	ISO 8859-1 Latin1	•	•	•	•	•	•	•
2N	ISO 8859-2 Latin2	•	•	•	•	•	•	•
5 N	ISO 8859-9 Latin5	•	•	•	•	•	•	•
6N	ISO 8859-10 Latin6	•	•	•	•	•	•	•
10U	PC-8	•	•	•	•	•	•	•
11U	PC-8 D/N	•	•	•	•	•	•	•
12U	PC-850	•	•	•	•	•	•	•
17U	PC-852	•	•	•	•	•	•	•
26U	PC-775	•	•	•	•	•	•	•
9T	PC-Turk	•	•	•	•	•	•	•
19U	Windows 3.1 Latin1	•	•	•	•	•	•	•
9E	Windows 3.1 Latin2	•	•	•	•	•	•	•
5 T	Windows 3.1 Latin5	•	•	•	•	•	•	•
7 J	DeskTop	•	•	•	•	•	•	•
9 J	PC-1004 (OS/2)	•	•	•	•	•	•	•
10J	PS Text	•	•	•	•	•	•	•
13J	Ventura International	•	•	•	•	•	•	•
14J	Ventura US	•	•	•	•	•	•	•
6J	Microsoft Publishing	•	•	•	•	•	•	•
8M	Math-8	•	•	•	•	•	•	•
5 M	PS Math	•	•	•	•	•	•	•
6M	Ventura Math	•	•	•	•	•	•	•
15U	PI Font	•	•	•	•	•	•	•
1U	Legal	•	•	•	•	•	•	•
1E	ISO 4: United Kingdom*	•	•	•	•	•	•	•
0U	ISO 6: ASCII*	•	•	•	•	•	•	•
2U	ISO 2: IRV*	•	•	•	•	•	•	•
0S	ISO 11: Swedish: names*	•	•	•	•	•	•	•
0I	ISO 15: Italian*	•	•	•	•	•	•	•
1S	HP Spanish*	•	•	•	•	•	•	•
2S	ISO 17: Spanish*	•	•	•	•	•	•	•
3S	ISO 10: Swedish*	•	•	•	•	•	•	•
4S	ISO 16: Portuguese*	•	•	•	•	•	•	•
5S	ISO 84: Portuguese*	•	•	•	•	•	•	•
6S	ISO 85: Spanish*	•	•	•	•	•	•	÷
0G	HP German*	•	•	•	•	•		<u>.</u>
							•	
1G	ISO 21: German* ISO 60: Norwegian 1*	•	•	•	•	•	•	•
0D		<u> </u>		•	•	•	•	•
1D	ISO 61: Norwegian 2*	•	•	•	•	•	•	•
0F	ISO 25: French*	•	•	•	•	•	•	•
1F	ISO 69: French*	•	•	•	•	•	•	•
0K	ISO 14: JIS ASCII*	•	•	•	•	•	•	•
2K	ISO 57: Chinese*	•	•	•	•	•	•	•
9U	Windows 3.0 Latin1	•	•	•	•	•	•	•
12J	MC Text	•	•	•	•	•	•	•
19M	Symbol							
19L	Windows Baltic	•	•	•	•	•	•	•
579L	Wingdings							

^{*}These symbol sets are variations of the Roman-8 symbol set.

PCL Sy	mbol Set	Typeface(Co LetterGothic		Oklahoma	PC	PC	Utah	Utah
Set ID	Symbol Set	16.66**	land	Oktunoma	Brussels		Ctun	Cond.
8U	Roman-8	•	•	•	•	•	•	•
0N	ISO 8859-1 Latin1	•	•	•	•	•	•	•
2 N	ISO 8859-2 Latin2	•	•	•	•	•	•	•
5 N	ISO 8859-9 Latin5	•	•	•	•	•	•	•
6N	ISO 8859-10 Latin6	•	•	•		•	•	•
10U	PC-8	•	•	•	•	•	•	•
11U	PC-8 D/N	•	•	•	•	•	•	•
12U	PC-850	•	•	•	•	•	•	•
17U	PC-852		•	•	•	•	•	•
26U	PC-775		•	•		•	•	•
9T	PC-Turk		•	•	•	•	•	•
19U	Windows 3.1 Latin1		•	•	•	•	•	•
9E	Windows 3.1 Latin2		•	•	•	•	•	•
5 T	Windows 3.1 Latin5		•	•	•	•	•	•
7 J	DeskTop		•	•	•	•	•	•
9 J	PC-1004(OS/2)		•	•		•	•	•
10J	PS Text		•	•	•	•	•	•
13J	Ventura International		•	•	•	•	•	•
14J	Ventura US		•	•	•	•	•	•
6J	Microsoft Publishing		•	•	•	•	•	•
8 M	Math-8					•	•	
5 M	PS Math					•	•	
6M	Ventura Math					•	•	
15U	PI Font					•	•	
1 U	Legal	•	•	•	•	•	•	•
1 E	ISO 4: United Kingdom*	•	•	•	•	•	•	•
0U	ISO 6: ASCII*	•	•	•	•	•	•	•
2U	ISO 2: IRV*	•	•	•	•	•	•	•
0S	ISO 11: Swedish: names*	•	•	•	•	•	•	•
0I	ISO 15: Italian*	•	•	•	•	•	•	•
1 S	HP Spanish*	•	•	•	•	•	•	•
2S	ISO 17: Spanish*	•	•	•	•	•	•	•
3S	ISO 10: Swedish*	•	•	•	•	•	•	•
4S	ISO 16: Portuguese*	•	•	•	•	•	•	•
5 S	ISO 84: Portuguese*	•	•	•	•	•	•	•
6S	ISO 85: Spanish*	•	•	•	•	•	•	•
0G	HP German*	•	•	•	•	•	•	•
1G	ISO 21: German*	•	•	•	•	•	•	•
0D	ISO 60: Norwegian 1*	•	•	•	•	•	•	•
1D	ISO 61: Norwegian 2*	•	•	•	•	•	•	•
0F	ISO 25: French*	•	•	•	•	•	•	•
1F	ISO 69: French*	•	•	•	•	•	•	•
0K	ISO 14: JIS ASCII*	•	•	•	•	•	•	•
2 K	ISO 57: Chinese*	•	•	•	•	•	•	•
9U	Windows 3.0 Latin1		•	•	•	•	•	•
12J	MC Text		•	•	•	•	•	•
19M	Symbol							
19L	Windows Baltic		•	•		•	•	•
579L	Wingdings							
5,71								

^{*}These symbol sets are variations of the Roman-8 symbol set. **LetterGothic 16.66 is a bitmapped font.

Symbol Sets Supported by the Printer's TrueType and Type 1 Font Compatible, and Original Typefaces

-	mbol Set	Typeface Atlanta	BR	Copen-	Calgary	Helsinki	Portugal		
Set ID 8 U	Symbol Set Roman-8	•	Symbol	hagen	•	•	•	see	Dingbat
0N	ISO 8859-1 Latin1	•		•	•	•	•	•	
2N	ISO 8859-2 Latin2					•		<u> </u>	
5 N	ISO 8859-9 Latin5					•		•	
6N	ISO 8859-10 Latin6					•			
10U	PC-8	•		•	•	•	•	•	
11U	PC-8 D/N	•		•	•	•	•		
12U	PC-850	•		•	•	•	•	•	
17U	PC-852					•			
26U						•			
9T	PC-775 PC-Turk					<u> </u>		•	
19U	Windows 3.1 Latin1	•		•	•	•	•	•	
9E	Windows 3.1 Latin2					•		•	
5T	Windows 3.1 Latin5					•		•	
7 J	DeskTop	•		•	•	•	•	•	
9J	PC-1004 (OS/2)					•		•	
10J	PS Text	•		•	•	•	•	•	
13J	Ventura International	•		•	•	•	•	•	
14J	Ventura US	•		•	•	•	•	•	
6J	Microsoft Publishing	•		•	•	•	•	•	
8M	Math-8					•		•	
5 M	PS Math					•		•	
6M	Ventura Math					•		•	
15U	PI Font					•		•	
1U	Legal	•		•	•	•	•	•	
1E	ISO 4: United Kingdom*	•		•	•	•	•	•	
0U	ISO 6: ASCII*	•		•	•	•	•	•	
2U	ISO 2: IRV*	•		•	•	•	•	•	
0S	ISO 11: Swedish: names*	•		•	•	•	•	•	
01	ISO 15: Italian*	•		•	•	•	•	•	
1 S	HP Spanish*	•		•	•	•	•	•	
2 S	ISO 17: Spanish*	•		•	•	•	•	•	
3 S	ISO 10: Swedish*	•		•	•	•	•	•	
4S	ISO 16: Portuguese*	•		•	•	•	•	•	
5 S	ISO 84: Portuguese*	•		•	•	•	•	•	
6S	ISO 85: Spanish*	•		•	•	•	•	•	
0G	HP German*	•		•	•	•	•	•	
1G	ISO 21: German*	•		•	•	•	•	•	
0D	ISO 60: Norwegian 1*	•		•	•	•	•	•	
1 D	ISO 61: Norwegian 2*	•		•	•	•	•	•	
0F	ISO 25: French*	•		•	•	•	•	•	
1 F	ISO 69: French*	•		•	•	•	•	•	
0 K	ISO 14: JIS ASCII*	•		•	•	•	•	•	
2 K	ISO 57: Chinese*	•		•	•	•	•	•	
9U	Windows 3.0 Latin1	•		•	•	•	•	•	
12J	MC Text	•		•	•	•	•	•	
19M	Symbol		•						
19L	Windows Baltic					•		•	
579L	Wingdings								•
J 1 / L	,, mgamgo								

^{*}These symbol sets are variations of the Roman-8 symbol set.

PCL Sy	mbol Set	Typeface Bermuda Script	Germany	San Diego	US Roman
Set ID	Symbol Set	Dermuda Script	Germany	San Diego	OS Kolliali
8U	Roman-8	•	•	•	•
0 N	ISO 8859-1 Latin1	•	•	•	•
2 N	ISO 8859-2 Latin2				
5 N	ISO 8859-9 Latin5				
6N	ISO 8859-10 Latin6				
10U	PC-8	•	•	•	•
11U	PC-8 D/N	•	•	•	•
12U	PC-850	•	•	•	•
17U	PC-852				
26U	PC-775				
9 T	PC-Turk				
19U	Windows 3.1 Latin1	•	•	•	•
9E	Windows 3.1 Latin2				
5 T	Windows 3.1 Latin5				
7 J	DeskTop	•	•	•	•
9 J	PC-1004 (OS/2)				
10J	PS Text	•	•	•	•
13J	Ventura International	•	•	•	•
14J	Ventura US	•	•	•	•
6J	Microsoft Publishing	•	•	•	•
8 M	Math-8				
5 M	PS Math				
6 M	Ventura Math				
15U	PI Font				
1 U	Legal	•	•	•	•
1 E	ISO 4: United Kingdom	* •	•	•	•
0U	ISO 6: ASCII*	•	•	•	•
2U	ISO 2: IRV*	•	•	•	•
0S	ISO 11: Swedish: names	3* •	•	•	•
01	ISO 15: Italian*	•	•	•	•
1 S	HP Spanish*	•	•	•	•
2S	ISO 17: Spanish*	•	•	•	•
3S	ISO 10: Swedish*	•	•	•	•
4S	ISO 16: Portuguese*	•	•	•	•
5 S	ISO 84: Portuguese*	•	•	•	•
6S	ISO 85: Spanish*	•	•	•	•
0G	HP German*	•	•	•	•
1G	ISO 21: German*	•	•	•	•
0D	ISO 60: Norwegian 1*	•	•	•	•
1 D	ISO 61: Norwegian 2*	•	•	•	•
0F	ISO 25: French*	•	•	•	•
1F	ISO 69: French*	•	•	•	•
0 K	ISO 14: JIS ASCII*	•	•	•	•
2 K	ISO 57: Chinese*	•	•	•	•
9U	Windows 3.0 Latin1	•	•	•	•
12J	MC Text	•	•	•	•
19M	Symbol				
19L	Windows Baltic				
579L	Wingdings				

^{*}These symbol sets are variations of the Roman-8 symbol set.

QUICK REFERENCE OF COMMANDS

The following tables show commands sorted by function. For further information about commands, refer to the "Technical Reference Manual," which is optionally available.

/ Note

l represents the lowercase l letter. Script notation is used because lowercase l and the number 1 can be easily confused with each other.

HP LaserJet Mode

PCL Command Sets

Function	Command	Decimal	Hexadecimal
CONTROL CODE			
Backspace	BS	08	08
Horizontal Tab	HT	09	09
Line Feed	LF	10	0A
Form Feed	FF	12	0C
Carriage Return	CR	13	0D
Secondary Font Select	SO	14	0E
Primary font Select	SI	15	0F
Escape	ESC	27	1B
PAGE FORMAT			
Page Length	ESC & <i>l</i> # P	27 38 108 ## 80	1B 26 6C ## 50
	(# lines)		
Top Margin	ESC & <i>l</i> # E	27 38 108 ## 69	1B 26 6C ## 45
- •	(# lines)		
Text Length	ESC & <i>l</i> # F	27 38 108 ## 70	1B 26 6C ## 46
-	(# lines)		
Left Margin	ESC & a # L	27 38 97 ## 76	1B 26 61 ## 4C
	(# column)		
Right Margin	ESC & a # M	27 38 97 ## 77	1B 26 61 ## 4D
	(# column)		
Clear Side Margin	ESC 9	27 57	1B 39
Line Pitch	ESC & <i>l</i> # C	27 38 108 ## 67	1B 26 6C ## 43
	(# /48 inch)		
Line Spacing	ESC & <i>l</i> # D	27 38 108 ## 68	1B 26 6C ## 44
1 line/inch	ESC & l 1 D	27 38 108 49 68	1B 26 6C 31 44
2 lines/inch	ESC & 12 D	27 38 108 50 68	1B 26 6C 32 44
3 lines/inch	ESC & 13 D	27 38 108 51 68	1B 26 6C 33 44
4 lines/inch	ESC & l 4 D	27 38 108 52 68	1B 26 6C 34 44
6 lines/inch	ESC & <i>l</i> 6 D	27 38 108 54 68	1B 26 6C 36 44
8 lines/inch	ESC & 18 D	27 38 108 56 68	1B 26 6C 38 44
12 lines/inch	ESC & l 12 D	27 38 108 49 50 68	1B 26 6C 31 32 44
16 lines/inch	ESC & l 16 D	27 38 108 49 54 68	1B 26 6C 31 36 44
24 lines/inch	ESC & l 24 D	27 38 108 50 52 68	1B 26 6C 32 34 44
48 lines/inch	ESC & l 48 D	27 38 108 52 56 68	1B 26 6C 34 38 44
Character Pitch	ESC & k # H	27 38 107 ## 72	1B 26 6B ## 48
	(# /120 inch)		
ex. 10 pitch	ESC & k 12 H	27 38 107 49 50 72	1B 26 6B 31 32 48

Function	Command	Decimal	Hexadecimal
Paper Size	ESC & <i>l</i> # A	27 38 108 ## 65	1B 26 6C ## 41
Executive	ESC & l 1 A	27 38 108 49 65	1B 26 6C 31 41
Letter	ESC & 12 A	27 38 108 50 65	1B 26 6C 32 41
Legal	ESC & 13 A	27 38 108 51 65	1B 26 6C 33 41
A4	ESC & l 26 A	27 38 108 50 54 65	1B 26 6C 32 36 41
B5	ESC & l 100 A	27 38 108 49 48 48 65	1B 26 6C 31 30 30 41
B6	ESC & l 1024 A	27 38 108 49 48 50 52 65	1B 26 6C 31 30 32 34 41
A5	ESC & l 1025 A	27 38 108 49 48 50 53 65	1B 26 6C 31 30 32 35 41
A6	ESC & l 1026 A	27 38 108 49 48 50 54 65	1B 26 6C 31 30 32 36 41
Envelopes			
Monarch	ESC & 180 A	27 38 108 56 48 65	1B 26 6C 38 30 41
COM 10	ESC & l 81 A	27 38 108 56 49 65	1B 26 6C 38 31 41
DL	ESC & 190 A	27 38 108 57 48 65	1B 26 6C 39 30 41
C5	ESC & 191 A	27 38 108 57 49 65	1B 26 6C 39 31 41
CURSOR POSITIONING			
Horizontal Position	ESC & a # C	27 38 97 ## 67	1B 26 61 ## 43
	(# column)		
Horizontal Position	ESC & a # H	27 38 97 ## 72	1B 26 61 ## 48
	(# decipoint)		
Horizontal Position	ESC * p # X	27 42 112 ## 88	1B 2A 70 ## 58
	(# dot)		
Vertical Position	ESC & a # R	27 38 97 ## 82	1B 26 61 ## 52
	(# line)		
Vertical Position	ESC & a # V	27 38 97 ## 86	1B 26 61 ## 56
	(# decipoint)		
Vertical Position	ESC * p # Y	27 42 112 ## 89	1B 2A 70 ## 59
	(# dot)		
VECTOR GRAPHICS			
Enter HP-GL/2 Mode			
Use Previous HP-GL/2	ESC % 0 B	27 37 48 66	1B 25 30 42
Pen Position	250 70 0 2	2, 3, 10 00	15 20 00 12
Use Current PCL CAP	ESC % 1 B	27 37 49 66	1B 25 31 42
HP-GL/2 Plot Horizontal Size	ESC * c # K	27 42 99 # # 75	1B 2A 63 # # 4B
THE CENT FOR THORSE SHARE	(# inch)	2, 12,5,	15 211 00 11 11 11 15
HP-GL/2 Plot Vertical Size	ESC * c # L	27 42 99 # # 76	1B 2A 63 # # 4C
THE CENTER OF THE CONTROL OF THE CON	(# inch)	2, .23, , 0	15 211 00 11 11 11 10
Set Picture Frame Anchor Point	ESC * c 0 T	27 42 99 48 84	1B 2A 63 50 54
Picture Frame Horizontal Size	ESC * c # X	27 42 99 # # 88	1B 2A 63 # # 58
	(# decipoint)	//	
Picture Frame Vertical Size	ESC * c # Y	27 42 99 # # 89	1B 2A 63 # # 59
· · · · · · · · · · · · · · · · · · ·			
Picture Frame Vertical Size	ESC * c # Y (# decipoint)	27 42 99 # # 89	1B 2A 63 # # 59

Function	Command	Decimal	Hexadecimal
RASTER GRAPHICS			
Resolution Setting			
75 dpi	ESC * t 75 R	27 42 116 55 53 82	1B 2A 74 37 35 52
100 dpi	ESC * t 100 R	27 42 116 49 48 48 82	1B 2A 74 31 30 30 52
200 dpi	ESC * t 200 R	27 42 116 50 48 48 82	1B 2A 74 32 30 30 52
150 dpi	ESC * t 150 R	27 42 116 49 53 48 82	1B 2A 74 31 35 30 52
300 dpi	ESC * t 300 R	27 42 116 51 48 48 82	1B 2A 74 33 30 30 52
600 dpi	ESC * t 600 R	27 42 116 54 48 48 82	1B 2A 74 36 30 30 52
Raster Graphics Presentation			
Orientation Oriented	ESC * r 0 F	27 42 114 48 70	1B 2A 72 30 46
Raster Oriented	ESC * r 3 F	27 42 114 51 70	1B 2A 72 33 46
Begin Raster Graphics			
Left-most Position	ESC * r 0 A	27 42 114 48 65	1B 2A 72 30 41
Current Position	ESC * r 1 A	27 42 114 49 65	1B 2A 72 31 41
Transfer Data	ESC * b # W [data]	27 42 98 ## 87	1B 2A 62 ## 57
Transfer Bata	(# byte)	27 12 70 11 11 07	10 211 02 1111 37
Set Compression Mode	(" byte)		
Uncoded	ESC * b 0 M	27 42 98 48 77	1B 2A 62 30 4D
Run-Length Encoded	ESC * b 1 M	27 42 98 49 77	1B 2A 62 31 4D
Tagged Image File Format	ESC * b 2 M	27 42 98 50 77	1B 2A 62 32 4D
Delta Row	ESC * b 3 M	27 42 98 51 77	1B 2A 62 33 4D
Mode 5	ESC * b 5 M	27 42 98 53 77	1B 2A 62 35 4D
Mode 9	ESC * b 9 M	27 42 98 57 77	1B 2A 62 39 4D
CCITT G3/G4 (original)	ESC * b 1152 M	27 42 98 49 49 53 50 77	1B 2A 62 31 31 35 32 4D
TIFF (for 600 dpi only, original)	ESC * b 1024 M	27 42 98 49 48 50 52 77	1B 2A 62 31 30 32 34 4D
1200 dpi Image Format	ESC * b 1027 M	27 42 98 49 48 50 55 77	1B 2A 62 31 30 32 37 4D
(for 1200 dpi only, original)			
Compress Transfer	ESC * b # C [data]	27 42 98 ## 67	1B 2A 62 ## 43
•	(# byte)		
Raster Y Offset	ESC * b # Y	27 42 98 # # 89	1B 2A 62 # # 59
	(# Line)		
Raster Height	ESC * r # T	27 42 114 # # 84	1B 2A 72 # # 54
<u> </u>	(# Row)		
Raster Width	ESC * r # S	27 42 114 # # 83	1B 2A 72 # # 53
	(# Pixel)		
End Raster Graphics	ESC * r B	27 42 114 66	1B 2A 72 42
PRINT MODEL			
Select Pattern			
Solid Black (default)	ESC * v 0 T	27 42 118 48 84	1B 2A 76 30 54
Solid White	ESC * v 1 T	27 42 118 49 84	1B 2A 76 31 54
HP-defined Shading Pattern	ESC * v 2 T	27 42 118 50 84	1B 2A 76 32 54
HP-defined Cross-Hatched	ESC * v 3 T	27 42 118 51 84	1B 2A 76 33 54
Pattern			
User defined	ESC * v 4 T	27 42 118 52 84	1B 2A 76 34 54
Brother-defined Shading Pattern	ESC * v 130 T	27 42 118 49 51 48 84	1B 2A 76 31 33 30 54
(64 steps, original)			
Select Source Transparency Mode			
Transparent	ESC * v 0 N	27 42 118 48 78	1B 2A 76 30 42
Opaque	ESC * v 1 N	27 42 118 49 78	1B 2A 76 31 42
Select Pattern Transparency Mode			
Transparent	ESC * v 0 O	27 42 118 48 79	1B 2A 76 30 43
Opaque	ESC * v 1 O	27 42 118 49 79	1B 2A 76 31 43

Function	Command	Decimal	Hexadecimal
PATTERN			
Horizontal Size	ESC * c # A	27 42 99 ## 65	1B 2A 63 ## 41
	(# dot)		
Horizontal Size	ESC * c # H	27 42 99 ## 72	1B 2A 63 ## 48
	(# decipoint)		
Vertical Size	ESC * c # B	27 42 99 ## 66	1B 2A 63 ## 42
	(# dot)		
Vertical Size	ESC * c # V	27 42 99 ## 86	1B 2A 63 ## 56
	(# decipoint)		
Pattern ID Setting	ESC * c # G	27 42 99 ## 71	1B 2A 63 ## 71
(See note below.)	(#: ID)		
2% Gray	ESC * c 2 G	27 42 99 50 71	1B 2A 63 32 47
10% Gray	ESC * c 10 G	27 42 99 49 48 71	1B 2A 63 31 30 47
15 % Gray	ESC * c 15 G	27 42 99 49 53 71	1B 2A 63 31 35 47
30% Gray	ESC * c 30 G	27 42 99 51 48 71	1B 2A 63 33 30 47
45% Gray	ESC * c 45 G	27 42 99 52 53 71	1B 2A 63 34 35 47
70% Gray	ESC * c 70 G	27 42 99 55 48 71	1B 2A 63 37 30 47
90% Gray	ESC * c 90 G	27 42 99 57 48 71	1B 2A 63 39 30 47
100% Gray	ESC * c 100 G	27 42 99 49 48 48 71	1B 2A 63 31 30 30 47

Note
These gray settings can be expressed in 64 shades with ESC * v 130T and ESC * c 130 P.

Function	Command	Decimal	Hexadecimal
1 Horiz. Line	ESC * c 1 G	27 42 99 49 71	1B 2A 63 31 47
2 Vert. Lines	ESC * c 2 G	27 42 99 50 71	1B 2A 63 32 47
3 Diagonal Lines	ESC * c 3 G	27 42 99 51 71	1B 2A 63 33 47
4 Diagonal Lines	ESC * c 4 G	27 42 99 52 71	1B 2A 63 34 47
5 Square Grid	ESC * c 5 G	27 42 99 53 71	1B 2A 63 35 47
6 Diagonal Grid	ESC * c 6 G	27 42 99 54 71	1B 2A 63 36 47
Print pattern			
Solid Black	ESC * c 0 P	27 42 99 48 80	1B 2A 63 30 50
Erase (Solid White Area Fill)	ESC * c 1 P	27 42 99 49 80	1B 2A 63 31 50
Shaded Fill	ESC * c 2 P	27 42 99 50 80	1B 2A 63 32 50
Cross-hatched Fill	ESC * c 3 P	27 42 99 51 80	1B 2A 63 33 50
User defined	ESC * c 4 P	27 42 99 52 80	1B 2A 63 34 50
Current Pattern	ESC * c 5 P	27 42 99 53 80	1B 2A 63 35 50
Brother-defined Shading Fill	ESC * c 130 P	27 42 99 49 51 48 80	1B 2A 63 31 33 30 50
(64 steps, original)			
Define Pattern	ESC * c # W	1B 2A 63 ## 51	27 42 99 ## 87
	(#: byte)		
User-defined Pattern Control			
Delete All	ESC * c 0 Q	1B 2A 63 30 51	27 42 99 48 81
Delete Temporary	ESC * c 1 Q	1B 2A 63 31 51	27 42 99 49 81
Delete Current Pattern	ESC * c 2 Q	1B 2A 63 32 51	27 42 99 50 81
Make Temporary	ESC * c 4 Q	1B 2A 63 34 51	27 42 99 52 81
Make Permanent	ESC * c 5 Q	1B 2A 63 35 51	27 42 99 53 81
Set Pattern Reference Point			
Print Direction Oriented	ESC * p 0 R	1B 2A 70 30 52	27 42 112 48 82
Logical Page Oriented	ESC * p 1 R	1B 2A 70 31 52	27 42 112 49 82

Function	Command	Decimal	Hexadecimal
DOWNLOAD FONT			
Font ID Set	ESC * c # D	27 42 99 ## 68	1B 2A 63 ## 44
	(#: ID)		
Character Code Set	ESC * c # E	27 42 99 ## 69	1B 2A 63 ## 45
	(##: chara. cod	e)	
Download Control			
Delete All	ESC * c 0 F	27 42 99 48 70	1B 2A 63 30 46
Delete Temporary	ESC * c 1 F	27 42 99 49 70	1B 2A 63 31 46
Delete Current ID	ESC * c 2 F	27 42 99 50 70	1B 2A 63 32 46
Delete Current Character Code	ESC * c 3 F	27 42 99 51 70	1B 2A 63 33 46
Make Temporary	ESC * c 4 F	27 42 99 52 70	1B 2A 63 34 46
Make Permanent	ESC * c 5 F	27 42 99 53 70	1B 2A 63 35 46
Copy Assign	ESC * c 6 F	27 42 99 54 70	1B 2A 63 36 46
Download Font/Flash Memory Care	d (original)		
Delete One from Card	ESC * c 1026 F	27 42 99 49 48 50 54 70	1B 2A 63 31 30 32 36 46
Delete All from Card	ESC * c 1028 F	27 42 99 49 48 50 56 70	1B 2A 63 31 30 32 38 46
Save Current Font into Card	ESC * c 1029 F	27 42 99 49 48 50 57 70	1B 2A 63 31 30 32 39 46
Set to Primary Font	ESC (#X	27 40 ## 88	1B 28 ## 58
	(#: font ID)		
Set to Secondary Font	ESC)#X	27 41 ## 88	1B 29 ## 58
	(#: font ID)		
Font Default Setting			
Primary	ESC (#@	27 40 ## 64	1B 28 ## 40
	(#: control)		
Secondary	ESC)#@	27 41 ## 64	1B 29 ## 40
	(#: control)		
Download Font Header	ESC) s # W	27 41 115 ## 87	1B 29 73 ## 57
	(#: byte)		
Download Character	ESC (s#W	27 40 115 ## 87	1B 28 73 ## 57
	(#: byte)		

Function	Command	Decimal	Hexadecimal
USER-DEFINED SYMBOL SET			
Symbol Set ID Set	ESC * c # R	27 42 99 ## 82	1B 2A 63 ## 52
•	(#: ID)		
Define Symbol Set	ESC (f#W	27 40 102 ## 87	1B 28 66 ## 46
	(#: byte)		
Symbol Set Control	(1 2 3 11)		
Delete All	ESC * c 0 S	27 42 99 48 83	1B 2A 63 30 53
Delete Temporary	ESC * c 1 S	27 42 99 49 83	1B 2A 63 31 53
Delete Current ID	ESC * c 2 S	27 42 99 50 83	1B 2A 63 32 53
Make Temporary	ESC * c 4 S	27 42 99 52 83	1B 2A 63 34 53
Make Permanent	ESC * c 5 S	27 42 99 53 83	1B 2A 63 35 53
MACRO			
Macro ID Set	ESC & f # Y	27 38 102 ## 89	1B 26 66 ## 59
Wacio ib Set	(#: ID)	27 36 102 ## 67	1Β 20 00 ππ 37
Macro Control	(π. ID)		
Start Macro Definition	ESC & f 0 X	27 38 102 48 88	1B 26 66 30 58
End Macro Definition	ESC & 10 X	27 38 102 49 88	1B 26 66 31 58
Execute Macro	ESC & f 2 X	27 38 102 49 88	1B 26 66 32 58
Call Macro	ESC & f 3 X	27 38 102 50 88	1B 26 66 33 58
Macro Overlay ON	ESC & f 4 X	27 38 102 51 88	1B 26 66 34 58
Macro Overlay OFF	ESC & f 5 X	27 38 102 52 88	1B 26 66 35 58
Delete All Macros	ESC & f 6 X		1B 26 66 36 58
		27 38 102 54 88	
Delete Temporary Macro	ESC & f 7 X	27 38 102 55 88	1B 26 66 37 58
Delete Current Macro	ESC & f 8 X	27 38 102 56 88	1B 26 66 38 58
Make Temporary Macro Make Permanent Macro	ESC & f 9 X	27 38 102 57 88	1B 26 66 39 58
	ESC & f 10 X	27 38 102 49 48 88	1B 26 66 31 30 58
Macro/Card (original)	ECC 9- £ 1020 V	27 20 102 40 40 51 40 00	1D 26 66 21 20 22 20 50
Delete All Macros from Card	ESC & f 1030 X	27 38 102 49 48 51 48 88	1B 26 66 31 30 33 30 58
Delete Current Macro	ESC & f 1036 X	27 38 102 49 48 51 54 88	1B 26 66 31 30 33 36 58
from Card	ECC 9- £ 1020 V	27 29 102 40 49 51 56 99	1D 26 66 21 20 22 20 50
Save Current Macro into Card	ESC & f 1038 X	27 38 102 49 48 51 56 88	1B 26 66 31 30 33 38 58
STATUS READBACK			
Set Status Readback Location Type			
Invalid Location	ESC * s 0 T	27 42 115 48 84	1B 2A 73 30 54
Currently Selected	ESC * s 1 T	27 42 115 49 84	1B 2A 73 31 54
All Locations	ESC * s 2 T	27 42 115 50 84	1B 2A 73 32 54
Internal	ESC * s 3 T	27 42 115 51 84	1B 2A 73 33 54
Downloaded	ESC * s 4 T	27 42 115 52 84	1B 2A 73 34 54
Cartridge	ESC * s 5 T	27 42 115 53 84	1B 2A 73 35 54
Option ROM Socket	ESC * s 7 T	27 42 115 55 84	1B 2A 73 37 54
Set Status Readback Location Unit			
All Entities of Location Type	ESC * s 0 U	27 42 115 48 85	1B 2A 73 30 55
Entity 1 or Temporary	ESC * s 1 U	27 42 115 49 85	1B 2A 73 31 55
Entity 2 or Permanent	ESC * s 2 U	27 42 115 50 85	1B 2A 73 32 55
Entity 3	ESC * s 3 U	27 42 115 51 85	1B 2A 73 33 55
Entity 4	ESC * s 4 U	27 42 115 52 85	1B 2A 73 34 55
Inquire Status Readback Entity			
Font	ESC * s 0 I	27 42 115 48 73	1B 2A 73 30 49
Macro	ESC * s 1 I	27 42 115 49 73	1B 2A 73 31 49
User-defined Pattern	ESC * s 2 I	27 42 115 50 73	1B 2A 73 32 49
Symbol Set	ESC * s 3 I	27 42 115 51 73	1B 2A 73 33 49
Font Extended	ESC * s 4 I	27 42 115 52 73	1B 2A 73 34 49

Function	Command	Decimal	Hexadecimal
Flush All Pages			
Flush All Complete Pages	ESC & r 0 F	27 38 114 48 70	1B 26 72 30 46
Flush All Page Data	ESC & r 1 F	27 38 114 49 70	1B 26 72 31 46
Free Memory Space	ESC * s 1 M	27 42 115 49 77	1B 2A 73 31 4D
Echo	ESC * s # X	27 42 115 # # 88	1B 2A 73 # # 58
	# = Echo value		
	(-32767 to 32767)		
OTHER COMMANDS			
Push Cursor Position	ESC & f 0 S	27 38 102 48 83	1B 26 66 30 53
Pop Cursor Position	ESC & f 1 S	27 38 102 49 83	1B 26 66 31 53
Display Function			
ON	ESC Y	27 89	1B 59
OFF	ESC Z	27 90	1B 5A
Transparent Print	ESC & p # X	27 38 112 ## 88	1B 26 70 ## 58
	(# byte)		
Perforation Skip			
ON	ESC & <i>l</i> 1 L	27 38 108 49 76	1B 26 6C 31 4C
OFF	ESC & <i>l</i> 0 L	27 38 108 48 76	1B 26 6C 30 4C
End of Line Wrap			
ON	ESC & s 0 C	27 38 115 48 67	1B 26 73 30 43
OFF	ESC & s 1 C	27 38 115 49 67	1B 26 73 31 43
Auto Underline			
ON 	ESC & d # D	27 38 100 ## 68	1B 26 64 ## 44
Fix	ESC & d 0 D	27 38 100 48 68	1B 26 64 30 44
Float	ESC & d 3 D	27 38 100 51 68	1B 26 64 33 44
OFF	ESC & d @	27 38 100 64	1B 26 64 40
Half Line Feed	ESC =	27 61	1B 3D
Line Termination	ECC 9-1-0-C	27 20 107 40 71	1D 2C CD 20 47
CR=CR, LF=LF, FF=FF	ESC & k 0 G ESC & k 1 G	27 38 107 48 71 27 38 107 49 71	1B 26 6B 30 47 1B 26 6B 31 47
CR=CR+LF, LF=LF, FF=FF CR=CR, LF=LF+CR,	ESC & k 2 G	27 38 107 49 71	1B 26 6B 32 47
FF=FF+CR	ESC & K 2 G	27 36 107 30 71	1B 20 0B 32 47
CR=CR+LF, LF=LF+CR,	ESC & k 3 G	27 38 107 51 71	1B 26 6B 33 47
FF=FF+CR	ESC & K S G	27 36 107 31 71	1D 20 0D 33 47
Print Orientation			
Portrait	ESC & 10 O	27 38 108 48 79	1B 26 6C 30 4F
Landscape	ESC & l 1 O	27 38 108 49 79	1B 26 6C 31 4F
Reverse Portrait	ESC & 12 O	27 38 108 50 79	1B 26 6C 32 4F
Reverse Landscape	ESC & 13 O	27 38 108 51 79	1B 26 6C 33 4F
Print Direction	ESC & a # P	27 38 97 # # 80	1B 26 61 # # 50
	(# degree)		
Copy Volume	ESC & <i>l</i> # X	27 38 108 ## 88	1B 26 6C ## 58
Paper Input Control			
Paper Eject	ESC & 10 H	27 38 108 48 72	1B 26 6C 30 48
Feed From Upper Cassette	ESC & l 1 H	27 38 108 49 72	1B 26 6C 31 48
(TRAY 1)			
Manual Feed	ESC & l 2 H	27 38 108 50 72	1B 26 6C 32 48
Envelope	ESC & 13 H	27 38 108 51 72	1B 26 6C 33 48
Feed From MP Tray	ESC & l 4 H	27 38 108 52 72	1B 26 6C 34 48
Feed From Lower Cassette	ESC & 15 H	27 38 108 53 72	1B 26 6C 35 48
(TRAY 2 or Option)			

Function	Command	Decimal	Hexadecimal
Simplex/Duplex Print (Available w	hen Duplex Unit is in	stalled)	
Simplex	ESC & 10 S	27 38 108 48 83	1B 26 6C 30 53
Duplex & Long-Edge Binding	ESC & l 1 S	27 38 108 49 83	1B 26 6C 31 53
Duplex & Short-Edge Binding	ESC & 12 S	27 38 108 50 83	1B 26 6C 32 53
Paper Side Selection (Available wh	en Duplex Unit is ins	talled)	
Next Side	ESC & a 0 G	27 38 97 48 71	1B 26 61 30 47
Front Side	ESC & a 1 G	27 38 97 49 71	1B 26 61 31 47
Back Side	ESC & a 2 G	27 38 97 50 71	1B 26 61 30 47
Long-edge Offset	ESC & l # U	27 38 108 ## 85	1B 26 6C ## 55
	(#/720 inch)		
Short-edge Offset	ESC & l # Z	27 38 108 ## 90	1B 26 6C ## 5A
	(#/720 inch)		
Printer Reset	ESC E	27 69	1B 45
Self-test	ESC z	27 122	1B 7A
Job Separation	ESC & <i>l</i> # T	27 38 108 ## 84	1B 26 6C ## 54
Unit of Measure	ESC & u # D	27 38 117 # # 68	1B 26 75 # # 44
	(# = Units/inch		
Go to Other Emulations (original)		•	
BR-Script 2 Batch Mode	ESC CR A B	27 13 65 66	1B 0D 41 42
BR-Script 2 Interactive Mode	ESC CR A I	27 13 65 73	1B 0D 41 49
HP-GL	ESC CR G L	27 13 71 76	1B 0D 47 4C
IBM Proprinter XL	ESC CR I	27 13 73	1B 0D 49
EPSON FX-850	ESC CR E	27 13 69	1B 0D 45
High Resolution Control (HRC) (or			
Set HRC Off	ESC CR R O	27 13 82 79	1B 0D 52 4F
Set HRC to Light Level	ESC CR R L	27 13 82 76	1B 0D 52 4C
Set HRC to Medium Level	ESC CR R M	27 13 82 77	1B 0D 52 4D
Set HRC to Dark Level	ESC CR R D	27 13 82 68	1B 0D 52 44
User Reset (original)	Loc on no	2, 15 02 00	12 02 02
Restore to User Settings	ESC CR!#R	27 13 33 # 82	1B 0D 21 # 52
restore to eger settings	# = 0 to 2	2, 10 00 02	15 05 21 02
Factory Reset (original)	0 10 2		
Restore to Factory Settings	ESC CR F D	27 13 70 68	1B 0D 46 44
Execute Card Data (original)	Loc cit'i D	2, 15, 000	12 02 10 11
Execute saved card data	ESC CR!#E	27 13 33 # 69	1B 0D 21 # 45
FONT SELECTION	Loc ett i i L	2, 10 00 0	15 05 21
Symbol Set			
ISO 60: Norwegian 1	ESC (0D	27 40 48 68	1B 28 30 44
ISO 61: Norwegian 2	ESC (1D	27 40 49 68	1B 28 31 44
ISO 4: United Kingdom	ESC (1 E	27 40 49 69	1B 28 31 45
Windows 3.1 Latin1	ESC (9 E	27 40 49 69	1B 28 39 45
ISO 25: French	ESC (9E	27 40 48 70	1B 28 30 46
ISO 69: French HP German	ESC (1 F	27 40 49 70	1B 28 31 46
ISO 21: German	ESC (0 G	27 40 48 71	1B 28 30 47
ISO 15: Italian	ESC (1 G	27 40 49 71	1B 28 31 47
	ESC (0 I	27 40 48 73	1B 28 30 49
Microsoft Publishing	ESC (6 J	27 40 54 74	1B 28 36 4A
Desk Top	ESC (10 I	27 40 55 74	1B 28 37 4A
PS Text	ESC (10 J	27 40 49 48 74	1B 28 31 30 4A
MC Text	ESC (12 J	27 40 49 50 74	1B 28 31 32 4A
Ventura International	ESC (14 J	27 40 49 51 74	1B 28 31 33 4A
Ventura US	ESC (14 J	27 40 49 52 74	1B 28 31 34 4A
ISO 14: JIS ASCII	ESC (0 K	27 40 48 75	1B 28 30 4B
ISO 57: Chinese	ESC (2 K	27 40 50 75	1B 28 32 4B
ISO 8859-1 (ECMA-94) Latin1	ESC (0 N	27 40 48 78	1B 28 30 4E

Function	Command	Decimal	Hexadecimal
Wingdings	ESC (579 L	27 40 53 55 57 76	1B 28 35 37 39 4C
PS Math	ESC (5 M	27 40 53 77	1B 28 35 4D
Ventura Math	ESC (6 M	27 40 54 77	1B 28 36 4D
Math-8	ESC (8 M	27 40 56 77	1B 28 38 4D
Symbol	ESC (19 M	27 40 49 57 77	1B 28 31 39 4D
ISO 8859-2 Latin2	ESC (2 N	27 40 50 78	1B 28 32 4E
ISO 8859-5 Latin5	ESC (5 N	27 40 53 78	1B 28 35 4E
ISO 11: Swedish	ESC (0S	27 40 48 83	1B 28 30 53
HP Spanish	ESC (1S	27 40 49 83	1B 28 31 53
ISO 17: Spanish	ESC (2S	27 40 50 83	1B 28 32 53
ISO 10: Swedish	ESC (3S	27 40 51 83	1B 28 33 53
ISO 16: Portuguese	ESC (4S	27 40 52 83	1B 28 34 53
ISO 84: Portuguese	ESC (5 S	27 40 53 83	1B 28 35 53
ISO 85: Spanish	ESC (6S	27 40 54 83	1B 28 36 53
Windows 3.1 Latin5	ESC (5 T	27 40 53 84	1B 28 35 54
PC Turkish	ESC (9 T	27 40 57 84	1B 28 39 54
ISO 6: ASCII	ESC (0U	27 40 48 85	1B 28 30 55
Legal	ESC (1 U	27 40 49 85	1B 28 31 55
ISO 2: IRV	ESC (2 U	27 40 50 85	1B 28 32 55
Roman 8	ESC (8 U	27 40 56 85	1B 28 38 55
Windows 3.0 Latin1	ESC (9 U	27 40 57 85	1B 28 39 55
PC-8	ESC (10 U	27 40 49 48 85	1B 28 31 30 55
PC-8 D/N	ESC (11 U	27 40 49 49 85	1B 28 31 31 55
PC 850	ESC (12 U	27 40 49 50 85	1B 28 31 32 55
Pi Font	ESC (15 U	27 40 49 53 85	1B 28 31 35 55
PC-852	ESC (17 U	27 40 49 55 85	1B 28 31 37 55
Windows 3.1 Latin1	ESC (19 U	27 40 49 57 85	1B 28 31 39 55
Character Set (original)		_, ,, ,, ,, ,,	
ROMAN 8	ESC (s 1 C	27 40 115 49 67	1B 28 73 31 43
US ASCII	ESC (s 2 C	27 40 115 50 67	1B 28 73 32 43
GERMAN	ESC (s 3 C	27 40 115 51 67	1B 28 73 33 43
UK ENGLISH	ESC (s 4 C	27 40 115 52 67	1B 28 73 34 43
FRENCH	ESC (s 5 C	27 40 115 53 67	1B 28 73 35 43
DUTCH	ESC (s 6 C	27 40 115 54 67	1B 28 73 36 43
ITALIAN	ESC (s 7 C	27 40 115 55 67	1B 28 73 37 43
S. SPANISH	ESC (s 8 C	27 40 115 56 67	1B 28 73 38 43
A. ENGLISH W.P.	ESC (s 9 C	27 40 115 57 67	1B 28 73 39 43
U.K. ASCII/2	ESC (s 10 C	27 40 115 49 48 67	1B 28 73 31 30 43
SYMBOL*	ESC (s 11 C	27 40 115 49 49 67	1B 28 73 31 31 43
INTERNATIONAL	ESC (s 12 C	27 40 115 49 50 67	1B 28 73 31 32 43
AMERICAN ENGLISH	ESC (s 12 C	27 40 115 49 51 67	1B 28 73 31 32 43
U.K. ASCII	ESC (s 14 C	27 40 115 49 52 67	1B 28 73 31 34 43
PORTUGUESE	ESC (s 15 C	27 40 115 49 53 67	1B 28 73 31 35 43
SWISS GERMAN	ESC (s 16 C	27 40 115 49 54 67	1B 28 73 31 36 43
AMERICAN SPANISH	ESC (s 17 C	27 40 115 49 55 67	1B 28 73 31 30 43
NORWEGIAN	ESC (s 17 C	27 40 115 49 56 67	1B 28 73 31 37 43 1B 28 73 31 38 43
CANADIAN	ESC (s 19 C	27 40 115 49 57 67	1B 28 73 31 39 43
FINNISH/SWEDISH	ESC (s 20 C	27 40 115 49 57 67	1B 28 73 32 30 43
	,	27 40 115 50 49 67	
SOUTH AFRICA JAPANESE ENGLISH	ESC (s 21 C ESC (s 37 C		1B 28 73 32 31 43
JAPANESE ENGLISH	ESC (83/C	27 40 115 51 55 67	1B 28 73 33 37 43

^{*}The symbol character set is not available for Tennessee and Helsinki fonts.

Function	Command	Decimal	Hexadecimal
PC-8	ESC (s 25 C	27 40 115 50 53 67	1B 28 73 32 35 43
PC-8 D/N	ESC (s 23 C	27 40 115 50 51 67	1B 28 73 32 33 43
PC-850	ESC (s 26 C	27 40 115 50 54 67	1B 28 73 32 36 43
PC-860	ESC (s 27 C	27 40 115 50 55 67	1B 28 73 32 37 43
PC-863	ESC (s 28 C	27 40 115 50 56 67	1B 28 73 32 38 43
PC-865	ESC (s 29 C	27 40 115 50 57 67	1B 28 73 32 39 43
Fixed Pitch or P.S.			
Fixed	ESC (s 0 P	27 40 115 48 80	1B 28 73 30 50
P.S.	ESC (s 1 P	27 40 115 49 80	1B 28 73 31 50
Character Pitch Selection 1	ESC (s#H	27 40 115 ## 72	1B 28 73 ## 48
	(#: char./inch)		
Character Pitch Selection 2			
10 Pitch	ESC & k 0 S	27 38 107 48 83	1B 26 6B 30 53
16.6 Pitch	ESC & k 2 S	27 38 107 50 83	1B 26 6B 32 53
12 Pitch	ESC & k 4 S	27 38 107 52 83	1B 26 6B 34 53
Point Size	ESC (s # V	27 40 115 ## 86	1B 28 73 ## 56
	(#: point size)		
Italics or upright			
Italics	ESC (s 1 S	27 40 115 49 83	1B 28 73 31 53
Upright	ESC (s 0 S	27 40 115 48 83	1B 28 73 30 53
Condensed	ESC (s 4 S	27 40 115 52 83	1B 28 73 34 53
Condensed Italic	ESC (s 5 S	27 40 115 53 83	1B 28 73 35 53
Compressed (Extra Condensed)	ESC (s 8 S	27 40 115 56 83	1B 28 73 38 53
Expanded	ESC (s 24 S	27 40 115 50 52 83	1B 28 73 32 34 53
Outline	ESC (s 32 S	27 40 115 51 50 83	1B 28 73 33 32 53
Inline	ESC (s 64 S	27 40 115 54 52 83	1B 28 73 36 34 53
Shadowed	ESC (s 128 S	27 40 115 49 50 56 83	1B 28 73 31 32 38 53
Outline Shadowed	ESC (s 160 S	27 40 115 49 54 48 83	1B 28 73 31 36 30 53
Stroke Weight	ESC (s # B	27 40 115 ## 66	1B 28 73 ## 42
Ultra Thin	ESC (s-7B	27 40 115 2D 55 66	1B 28 73 45 37 42
Extra Thin	ESC (s-6B	27 40 115 2D 54 66	1B 28 73 45 36 42
Thin	ESC (s-5B	27 40 115 2D 53 66	1B 28 73 45 35 42
Extra Light	ESC (s-4B	27 40 115 2D 52 66	1B 28 73 45 34 42
Light	ESC (s-3B	27 40 115 2D 51 66	1B 28 73 45 33 42
Demi Light	ESC (s-2B	27 40 115 2D 50 66	1B 28 73 45 32 42
Semi Light	ESC (s-1B	27 40 115 2D 49 66	1B 28 73 45 31 42
Medium (Normal)	ESC (s 1B	27 40 115 48 66	1B 28 73 30 42
Semi Bold	ESC (s 1 B	27 40 115 49 66	1B 28 73 31 42
Demi Bold	ESC (s 2 B	27 40 115 50 66	1B 28 73 32 42
Bold	ESC (s 2 B	27 40 115 51 66	1B 28 73 33 42
Extra Bold	ESC (s 4 B	27 40 115 51 66	1B 28 73 34 42
Black	ESC (s 5 B	27 40 115 53 66	1B 28 73 35 42
Extra Black	ESC (s 6 B	27 40 115 54 66	1B 28 73 36 42
Ultra Black	ESC (s 7 B	27 40 115 55 66	1B 28 73 37 42
-	LUC (o / D	27 70 113 33 00	111 40 13 31 44
Scalable Font Ratio (original)	ECC CD 1#11	27 12 22 # 72	1D 0D 21 # 40
Set horizontal ratio	ESC CR!#H	27 13 33 # 72	1B 0D 21 # 48
(#=0.25 to 3 step 0.01)	ECC CD 1#W	27 12 22 # 96	1D 0D 21 # 50
Set vertical ratio	ESC CR!#V	27 13 33 # 86	1B 0D 21 # 56
(#=0.25 to 3 step 0.01)			

Function	Command
Scalable Fonts	
Intellifont-compatible Fonts (##: p	oint size)
Alaska	ESC (s 1 p ## v 0 s 1 b 4 3 6 2 T
Alaska Extrabold	ESC (s 1 p ## v 0 s 4 b 4 3 6 2 T
Antique Oakland	ESC (s 1 p ## v 0 s 0 b 4 1 6 8 T
Antique Oakland Bold	ESC (s 1 p ## v 0 s 3 b 4 1 6 8 T
Antique Oakland Oblique	ESC (s 1 p ## v 1 s 0 b 4 1 6 8 T
Brougham	ESC (s 0 p ## h 0 s 0 b 4 0 9 9 T
Brougham Bold	ESC (s 0 p ## h 0 s 3 b 4 0 9 9 T
Brougham Oblique	ESC (s 0 p ## h 1 s 0 b 4 0 9 9 T
Brougham BoldOblique	ESC (s 0 p ## h 1 s 3 b 4 0 9 9 T
Cleveland Condensed	ESC (s 1 p ## v 4 s 3 b 4 1 4 0 T
Connecticut	ESC (s 1 p ## v 1 s 0 b 4 1 1 6 T
Guatemala Antique	ESC (s 1 p ## v 0 s 0 b 4 1 9 7 T
Guatemala Italic	ESC (s 1 p ## v 0 s 3 b 4 1 9 7 T
Guatemala Bold	ESC (s 1 p ## v 1 s 0 b 4 1 9 7 T
Guatemala Boldltalic	ESC (s1p## v1s3b4197T
LetterGothic	ESC (s 0 p ## h 0 s 0 b 4 1 0 2 T
LetterGothic Bold	ESC (s 0 p ## h 0 s 3 b 4 1 0 2 T
LetterGothic Oblique	ESC (s 0 p ## h 1 s 0 b 4 1 0 2 T
Maryland	ESC (s 1 p ## v 0 s 0 b 4 2 9 7 T
Oklahoma	ESC (s 1 p ## v 0 s 0 b 4 1 1 3 T
Oklahoma Bold	ESC (s 1 p ## v 0 s 3 b 4 1 1 3 T
Oklahoma Oblique	ESC (s1p## v1s0b4113T
Oklahoma BoldOblique	ESC (s1p## v1s3b4113T
PC Brussels Light	ESC (s1p## v0s-3b4143T
PC Brussels Demi	ESC (s1p## v0s 2b4143T
PC Brussels LightItalic	ESC (s 1 p ## v 1 s - 3 b 4 1 4 3 T
PC Brussels DemiItalic	ESC (s1p##v1s 2b4143T
PC Tennessee Roman	ESC (s 1 p ## v 0 s 0 b 4 1 0 1 T
PC Tennessee Bold	ESC (s1p## v0s3b4101T
PC Tennessee Italic	ESC (s1p## v1s0b4101T
PC Tennessee BoldItalic	ESC (s1p## v1s3b4101T
Utah	ESC (s 1 p ## v 0 s 0 b 4 1 4 8 T
Utah Bold	ESC (s 1 p ## v 0 s 3 b 4 1 4 8 T
Utah Oblique	ESC (s 1 p ## v 1 s 0 b 4 1 4 8 T
Utah BoldOblique	ESC (s 1 p ## v 1 s 3 b 4 1 4 8 T
Utah Condensed	ESC (s 1 p ## v 4 s 0 b 4 1 4 8 T
Utah Condensed Bold	ESC (s 1 p ## v 4 s 3 b 4 1 4 8 T
Utah Condensed Oblique	ESC (s 1 p ## v 5 s 0 b 4 1 4 8 T
Utah Condensed BoldOblique	ESC (s 1 p ## v 5 s 3 b 4 1 4 8 T
TrueType-compatible Fonts (##: pe	
BR Symbol	ESC (19 M ESC (s 1 p ## v 0 s 0 b 1 6 6 8 6 T
Helsinki	ESC (s 1 p ## v 0 s 0 b 1 6 6 0 2 T
Helsinki Bold	ESC (s 1 p ## v 0 s 3 b 1 6 6 0 2 T
Helsinki Oblique	ESC (s1p## v1s0b16602T
Helsinki BoldOblique	ESC (s1p## v1s3b16602T
Tennessee Roman	ESC (s1p## v0s0b16901T
Tennessee Bold	ESC (s1p## v0s3b16901T
Tennessee Italic	ESC (s1p## v1s0b16901T
Tennessee BoldItalic	ESC (s1p ## v1s3b16901T
W Dingbats	ESC (579 L ESC (s 1 p ## v 0 s 0 b 3 1 4 0 2 T

Function	Command
Type 1 Font Compatible Fonts	(##: point size)
Atlanta Book	ESC (s 1 p ## v 0 s 0 b 1 5 5 T
Atlanta Demi	ESC (s 1 p ## v 0 s 3 b 1 5 5 T
Atlanta BookOblique	ESC (s 1 p ## v 1 s 0 b 1 5 5 T
Atlanta DemiOblique	ESC (s 1 p ## v 1 s 3 b 1 5 5 T
Calgary MediumItalic	ESC (s 1 p ## v 1 s 0 b 1 5 9 T
Copenhagen Roman	ESC (s 1 p ## v 0 s 0 b 1 5 7 T
Copenhagen Bold	ESC (s 1 p ## v 0 s 3 b 1 5 7 T
Copenhagen Italic	ESC (s 1 p ## v 1 s 0 b 1 5 7 T
Copenhagen BoldItalic	ESC (s 1 p ## v 1 s 3 b 1 5 7 T
Portugal Roman	ESC (s 1 p ## v 0 s 0 b 1 5 8 T
Portugal Bold	ESC (s 1 p ## v 0 s 3 b 1 5 8 T
Portugal Italic	ESC (s 1 p ## v 1 s 0 b 1 5 8 T
Portugal BoldItalic	ESC (s 1 p ## v 1 s 3 b 1 5 8 T
Bitmapped Fonts	
LetterGothic16.66	ESC (s 0 p 16.67 h 8.5 v 0 s 0 b 1 3 0 T
OCR-A	ESC (0 O ESC (s 0 p 10 h 12 v 0 s 0 b 1 0 4 T
OCR-B	ESC (1 O ESC (s 0 p 10 h 12 v 0 s 0 b 1 1 0 T
Brother Original Fonts	
Bermuda Script	ESC (s 1 p ## v 0 s 3 b 1 3 4 T
Germany	ESC (s 1 p ## v 0 s 3 b 1 3 2 T
San Diego	ESC (s 1 p ## v 0 s 5 b 1 3 3 T
US Roman	ESC (s 1 p ## v 0 s 0 b 1 3 5 T

CCITT G3/G4 and TIFF (original command)

One of the unique features of the PCL mode of this printer is it supports CCITT G3/G4 type data compression and TIFF format.

■ CCITT G3/G4 (Raster Graphic Mode 1152)


The printer's PCL mode supports CCITT G3/G4 type graphic data compression.

This format is popular in optical document storage area as this compression is effective to store black and white type pictures. Compression mode for CCITT G3/G4 is 1152 and the command becomes ESC * b 1152 M.

As G3/G4 format does not have picture size/resolution information, the printer requires a header at the beginning of the picture data. The header size is 94 byte. Both the header and the picture data are transferred by one transfer graphics data command (ESC * b ### W). Normal PCL transfer graphics data command has a limitation of the data size and ### should not exceed 32767. Unlike other mode, mode 1152 is special and this mode does not have 32767 byte size limitation.

Print model is not applied to this type of raster graphics.

The mode 1152 graphic data consists of the following data structure. The picture data follows the header.

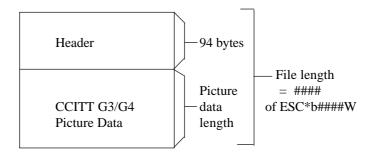

Header format is described on the next page.

You have to specify mode 1152 by sending ESC *b1152M command for each graphic data transfer.

About CCITT G3/G4 data format, please refer to CCITT (THE INTERNATIONAL TELEGRAPH AND TELEPHONE CONSULTATIVE COMMITTEE) BLUE BOOK Volume VII.

USER S GUIDE

Mode 1152 graphic data header data structure

	_	
Position	Data	Description
0-1	6E 6E	'nn' This is header ID.
2-3	0A 00	reserved (Header Version)
4-7	5E 00 00 00	Picture data start offset from header top
8-11	File Length	File length including 94 byte header. If file length is 65,536
		byte, these 4 bytes become "00 00 01 00".
12-13	01 00	reserved
14-15	01 00	reserved
16-19	4A 00 00 00	reserved
20-21	compression	02 00: Fax MH format
		03 00: Fax MR format
		04 00: Fax G4 format
22-55	0000	All zero
56-59	Picture Data I	Length
		If picture data length is 65,442 (65,536 - 94) byte, these
		4 bytes become "A2 FF 00 00".
60-61	01 00	bit/pixel
62-63	01 00	bit/pixel
64-65	Pixels/line	If picture dot width = 2400, these 2 bytes become "60 09".
66-67	Pixels/line	Same as 64-65
68-69	Lines/picture	If picture line count = 3100, these 2 bytes become "1C 0C".
70-71		Same as 70-71
72-73	00 00	reserved
74-75	Photo metrics	0000: data 0 = white 01 00: data 0 = black
76-77	02 00	reserved (Endian format)
78-79		01 00: filled from MSB
, , , ,		02 00: filled from LSB
80-81	01 00	reserved
82-83	00 00	reserved (min. pixel value)
84-85	01 00	reserved (max pixel value)
86-87		solution (200,300,400,600)
		C8 00 00 00 : 200 dpi
		2C 01 00 00 : 300 dpi
		90 01 00 00 : 400 dpi
		58 02 00 00 : 600 dpi
		400 and 600 dpi are available when printer
		operates in 600 dpi.
88-89	vertical resolu	ution (200,300,400,600)
00 07	vertical resolu	C8 00 00 00 : 200 dpi
		2C 01 00 00 : 300 dpi
		90 01 00 00 : 400 dpi
		58 02 00 00 : 600 dpi
		The printer accepts different values for vertical and
		horizontal resolutions.
		400/600 dpi are available when printer operates in 600 dpi.
90-91	02 00	reserved (resolution unit = inch)
92-93	00 00	reserved (error code)
12 13	30 00	reserved (error code)

■ TIFF Format (Raster Graphic Mode 1024) & Advanced Photoscale Technology

The printer's PCL mode supports TIFF Version 5.0 file format as a format to transfer raster graphics data.

Mode set command for TIFF file format is ESC *b1024M.

One transfer graphics data command (ESC*b###W) should contain whole TIFF file.

In mode 1024, transfer graphics data command byte count does not have a limitation of 32,767 byte.

The printer supports both 'MM' (big endian) format and 'II' (little endian) format.

Print model is not applied to this type of data transfer.

The printer has some limitations on the TIFF file format.

- 1. Tags position has to be prior to the picture (strip) data.
- 2. Compression tag --- Tag ID:259

The printer supports 1, 2, 3, 4 and 32773.

1: no compression (Bits/Sample=1,4,8)

2: CCITT G3 MH (Bits/Sample=1)

3: CCITT G3 MR (Bits/Sample=1)

4: CCITT G4 (Bits/Sample=1)

32773: Pack Bit (Bits/Sample=1)

3. Sample/pixel --- Tag ID:277

This value should be 1. This means the printer accepts only monochrome TIFF file.

4. Bits/Sample --- Tag ID:258

The printer supports 1, 4 and 8.

If you specify 4 or 8 and the printer resolution is 600 dpi, the printer prints that page utilizing APT.

5. Horizontal resolution (Tag ID=282) and Vertical resolution (Tag ID=283)

Compression type	Bits/Sample	Available Resolution	APT
No Compression	4, 8	From 1 dpi to 300 dpi	ON
No Compression	1	Printer's Resolution	OFF
Pack Bit		(300 or 600 dpi)	
CCITT G3 & G4	1	200,300,400,600 dpi	OFF
		400 & 600 dpi are only	
		when printer operates	
		in 600 dpi.	

We recommend 150 dpi or less resolution for APT to reduce data size.

Horizontal 1200-dpi Image Format Mode(Raster Graphic Mode 1027)

The printer supports 1200 dpi printing for special image formats in 1200 dpi mode.

We recommend that the installed printer memory is 10 Mbytes or more for 1200 dpi printing.

To set 1200 dpi mode,

1. Set 1200 dpi printing mode by using the following PJL command:

@PJL SET RAS1200MODE = ON

2. Choose PCL mode with the following PJL command:

@PJL ENTER LANGUAGE = PCL

(If you select a mode other than PCL mode, 1200 dpi printing mode cannot be selected.)

The PCL Mode set command for 1200 dpi Image Format is ESC *b1027M.


The transfer raster data command (ESC*b###W) then transfers horizontal 1200 dpi data.

<1200 dpi Graphic Data Compression Format>

This compression format consists of blocks of data 64 dots down the page starting from the leading edge of the paper.

Ex.) If the graphic data extends over three bands as shown in the following diagram, it transfers the data as three blocks of data:

ESC*b##W <Block 1> <Block 2> <Block 3>

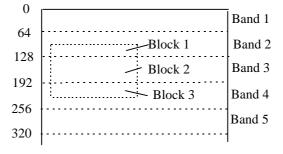



In mode 1027, the transfer graphic data command byte count does not have a limitation of 32,767 bytes.

The block data is composed as follows:

Position	Data	Description
0 - 1	Block length	n - 2
2 - 3	Horizontal position	dots from the left of the page
4 - 5	Vertical position	dots from the leading edge of the
6	Height dots	page number of image vertical dots
7 - 8	Width words	number of image horizontal 16 bit
9 - (n - 1)	Compression data	words compression image data

Ex.) Data is at horizontal position = 256, vertical position = 64, height = 32 dots, width = 100×16 bit words (1600 dots), and compression data is 800 bytes;



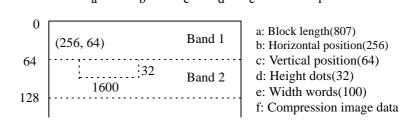

<Compressed Image Data>

Data compression compresses the original image data word by word (16 bits).

The compressed data consists of both horizontal compression which uses 16 bit, 8 bit and 4 bit repeating patterns within 1 word or 2 words of data, and vertical compression which indicates to repeat the same data as in the previous line with 1 word of data.

• Non-compressed data

When the most significant bit in the first 2 bytes is 0, the printer goes into non-compression mode. The following 11 bits then indicate the number of words of data, and the least significant 4 bits are not used. After that, the image data follows word by word.

15 14	4_	3 0
0 data word count (11 bits)		not used
data 1 (16 bits)		
:		
data n (16 bits)]

• 16 bit repeating compressed data

When the most significant 3 bits in the first 2 bytes are in the order 1, 0, 0, the remaining 13 bits indicate the number of times to repeat 16 bit data. The following 2 bytes should be the 16 bit data to repeat.

15 14	1 13	12	0
$\begin{bmatrix} 1 & 0 \end{bmatrix}$	$\overline{}$	number of repeats(13 bits)	
L		data to repeat(16 bits)	

• 8 bit repeating compressed data

When the most significant 3 bits in the first 2 bytes are in the order 1, 1, 0, the following 5 bits indicate the number of times to repeat 16 bits (two by 8 bits) data. The remaining 8 bits should be the 8 bit data to repeat.

• 4 bit repeating compression data

When the most significant 3 bits in the first 2 bytes are in the order 1, 0, 1, the following 4 bits indicate 4 bit data to repeat. The remaining 9 bits indicate the number of times to repeat the 16 bit (4 by 4 bits) data.

• Vertical repeating compressed data

When the most significant 3 bits in the first 2 bytes are in the order 1, 1, 1, the remaining 13 bits indicate the same data words as in the previous line.

The printer can not support the APT and HRC function in the 1200 dpi printing mode.

HP-GL/2 Command Sets

Command	Mnemonic	Parameters
Dual Context Extensions	<u> </u>	
ENTER PCL MODE	ESC % # A	0-Retain previous PCL cursor position and palette 1-Use current HP-GL/2 pen position and palette
RESET	ESC E	None
PRIMARY FONT	FI	Font_ID
SECONDARY FONT	FN	Font_ID
SCALABLE OR BITMAPPED FONTS	SB	0-Scalable fonts only
SCALABLE OR BITMALTED FORTS	SB	1-Bitmapped fonts allowed
Palette Extensions		
TRANSPARENCY MODE	TR	0-Off (opaque)
		1-On (transparent)
SCREENED VECTORS	SV	[screen_type [, shading [, index]]]
Vector Group		2 - 71 0 00 333
ARC ABSOLUTE	AA	<pre>x_center, y_center, sweep_angle [, chord_angle];</pre>
ARC RELATIVE	AR	x_increment, y_increment, sweep_angle [, chord_angle];
ABSOLUTE ARC THREE POINT	AT	x_inter, y_inter, x_end, y_end [,chord_angle];
BEZIER ABSOLUTE	BZ	x1_control_pt, y1_control_pt x2_control_pt, y2_control_pt x3_control_pt, y3_control_pt
BEZIER RELATIVE	BR	[, params [, parms]]. x1_control_pt_increments, y1_control_pt_increments, x2_control_pt_increments, y2_control_pt_increments, x3_control_pt_increments, y3_control_pt_increments
. Dagge symm		[, params [, parms]]; PLOT
ABSOLUTE	PA	[x, y [, x, y]];
PLOT RELATIVE	PR	[x, y [, x, y]];
PEN DOWN	PD	[x, y [, x, y]];
PEN UP	PU	[x, y [, x, y]];
RELATIVE ARC THREE POINT	RT	x_incr_inter, y_incr_inter, x_incr_end,
DOLLIE BY CODED	DE.	y_incr-end [, chord_angle];
POLYLINE ENCODED	PE	[flag [val] coord_pair
		[flag[val] coord_pair]];
Polygon Group	CT.	
CIRCLE	CI	radius [, chord_angle];
FILL RECTANGLE ABSOLUTE	RA	x_coordinate, y_coordinate;
FILL RECTANGLE RELATIVE	RR	x_increment, y_increment;
EDGE RECTANGLE ABSOLUTE	EA	x_coordinate, y_coordinate;
EDGE RECTANGLE RELATIVE	ER	x_increment, y_increment;
FILL WEDGE	WG	radius, start_angle, sweep_angle [, chord_angle];

Command	Mnemonic	Parameters
EDGE WEDGE	EW	radius, start_angle, sweep_angle
		[, chord_angle];
POLYGON MODE	PM	polygon_definition;
FILL POLYGON	FP	0 Odd/Even fill
EDGE POLYGON	EP	1 non-zero winding fill
Character Group		
SELECT STANDARD FONT	SS	
SELECT ALTERNATE FONT	SA	
ABSOLUTE DIRECTION	DI	[run, rise];
RELATIVE DIRECTION	DR	[run, rise];
ABSOLUTE CHARACTER SIZE	SI	[width, height];
RELATIVE CHARACTER SIZE	SR	[width, height];
CHARACTER SLANT	SL	[tangent_of_angle];
EXTRA SPACE	ES	[width [, height]]
STANDARD FONT DEFINITION	SD	[kind, value [, kind, value]];
ALTERNATE FONT DEFINITION	AD	[kind, value [, kind, value]];
CHARACTER FILL MODE	CF	[fill_mode [, edge_pen]];
LABEL ORIGIN	LO	[position];
LABEL	LB	[char [char]] l bterm
DEFINE LABEL TERMINATOR	DT	[l bterm [, mode]];
CHARACTER PLOT	CP	[spaces, lines];
TRANSPARENT DATA	TD	[mode];
DEFINE VARIABLE TEXT PATH	DV	[path [, line]];
Line and Fill Attributes Group		(Fame f. amel)),
LINE TYPE	LT	[line_type [, pattern_length [, mode]]];
LINE ATTRIBUTES	LA	[kind, value [, kind, value]];
PEN WIDTH	PW	[width [, pen]];
PEN WIDTH UNIT SELECTION	WU	[type];
SELECT PEN	SP	[pen];
SYMBOL MODE	SM	[char];
FILL TYPE	FT	[fill_type [, option 1 [, option 2]]];
ANCHOR CORNER	AC	[x_coordinate, y_coordinate];
RASTER FILL DEFINITION	RF	[index, width, height, pen_nbr [,
RASTER FILE DEFINITION	M	pen_nbr]];
USER DEFINED LINE TYPE	UL	[index [, gap 1 gap 20]];
Configuration and Status Group	<u> </u>	[
COMMENT	CO	
SCALE	SC	[x 1, x 2, y 1, y 2 [, type [, left, bottom]]];
SCALE	30	or
		[x 1, x factor, y 1, y factor, 2];
INPUT WINDOW	IW	[x L L, y L L, x U R, y U R];
INPUT WINDOW INPUT P1 AND P2	IW IP	- · · · · · · · · · · · · · · · · · · ·
		[p 1 x, p 1 y [, p 2 x, p 2 y]];
INPUT RELATIVE P1 AND P2	IR	[p 1 x, p 1 y [, p 2 x, p 2 y]];
DEFAULT VALUES	DF	
INITIALIZE	IN BO	f1-1.
ROTATE COORDINATE SYSTEM	RO	[angle];

Printer Job Language Commands Syntax

Command	Function and Syntax			
Syntax Rules				
[]	Brackets indicate optional parameters.			
<>	Indicates special characters and items			
Special Characters and Items		DEC.	HEX.	
<ht></ht>	Horizontal Tab (element of white space)	09	09	
<lf></lf>	Line Feed (PJL command terminator) 10	0A		
<cr></cr>	Carriage Return (optional parameter) 13	0D		
<sp></sp>	Space (element of white space)	32	20	
<esc></esc>	Escape (used only for UEL/SPJL)	27	1B	
<ff></ff>	Form Feed	12	0C	
	(terminator for multiple line reply)			
<ws></ws>	White Space <sp> or <ht> or combination of</ht></sp>	f <sp> an</sp>	d <ht></ht>	
<pc></pc>	Printable Characters (character code 33 throu			
	161 through 254)	,		
<words></words>	Beginning with <pc>, and combination of <</pc>	PC> and <	:WS>	
Printer Job Language Commands Syntax	,			
COMMENT	@PJL COMMENT <words> [<cr>] <lf></lf></cr></words>			
DEFAULT	@PJL DEFAULT [LPARM: emulation] varia	hle = vali	ie.	
22.11021	[<cr>] <lf></lf></cr>			
DINQUIRE	@PJL DINQUIRE [LPARM: emulation] vari	able [<cr< td=""><td>>1 <1.F></td></cr<>	>1 <1.F>	
Reply	@PJL DINQUIRE [LPARM: emulation] vari	_	_	
періу	value <cr> <lf> <ff></ff></lf></cr>	uoie (cit	L	
ЕСНО	@PJL ECHO [<words>] [<cr>] <lf></lf></cr></words>			
Reply	@PJL ECHO [<words>] <cr> <lf> <ff></ff></lf></cr></words>			
ENTER	@PJL ENTER LANGUAGE = emulation [<cr>] <lf></lf></cr>			
EOJ		@PJL EOJ [NAME = job name] [<cr>] <lf></lf></cr>		
INFO	@PJL INFO read only variable [<cr>] <lf></lf></cr>			
Reply	@PJL INFO read only variable <cr> <lf></lf></cr>			
1 7	[1 or more lines of printable characters or <w< td=""><td>S> follow</td><td>ed</td></w<>	S> follow	ed	
	by <cr> <lf>] <ff></ff></lf></cr>			
INITIALIZE	@PJL INITIALIZE [<cr>] <lf></lf></cr>			
INQUIRE	@PJL INQUIRE [LPARM: emulation] varial	ole [<cr></cr>] <lf></lf>	
Reply	@PJL INQUIRE [LPARM: emulation] variate			
1 7	value <cr> <lf> <ff></ff></lf></cr>			
JOB	@PJL JOB [NAME = "job name"] [START :	= first pag	el	
	[END = last page] [< CR>] < LF>			
OPMSG	@PJL OPMSG DISPLAY = "message" [<cr< td=""><td>(>] <lf></lf></td><td></td></cr<>	(>] <lf></lf>		
RDYMSG	@PJL RDYMSG DISPLAY = "message" [<0	CR>] <lf< td=""><td>></td></lf<>	>	
RESET	@PJL RESET [<cr>] <lf></lf></cr>			
SET	@PJL SET [LPARM: emulation] variable = v	alue [<ci< td=""><td>R>] <lf></lf></td></ci<>	R>] <lf></lf>	
STMSG	@PJL STMSG DISPLAY = "message" [<cr< td=""><td>>] <lf></lf></td><td>_</td></cr<>	>] <lf></lf>	_	
Reply	@PJL STMSG DISPLAY = "message" <cr< td=""><td></td><td></td></cr<>			
• •	key <cr> <lf> <ff></ff></lf></cr>			
Exit Current Emulation/Start PJL	<esc> % - 12345X</esc>			
(UEL/SPJL)				
USTATUS	@PJL USTATUS variable = value [<cr>] <lf></lf></cr>			
Reply	@PJL USTATUS variable <cr> <lf></lf></cr>			
	[1 or more lines of printable characters or <w< td=""><td>S> follow</td><td>ed</td></w<>	S> follow	ed	
	by <cr> <lf>] <ff></ff></lf></cr>			
USTATUSOFF	@PJL USTATUSOFF [<cr>] <lf></lf></cr>			
	@PJL [<cr>] <lf></lf></cr>			

EPSON FX-850 Mode

Command name	Function	Sequence	Decimal	Hexadecimal
Null	Ignored	NUL	0	00
Bell	Ignored	BEL	7	07
Space	Moves the cursor one position to the right	SP	32	20
Backspace	Moves the cursor one position to the left	BS	8	08
Line Feed	Moves down one line	LF	10	0A
Form Feed	Ejects a page (if data has been printed on it)	FF	12	0C
Carriage Return	Moves cursor to left margin	CR	13	0D
Home Positioning	Moves the cursor to the home position	ESC <	27 60	1B 3C
Select Printer	Ignored	DC1	17	11
Deselect Printer	Ignored	DC3	19	13
Set MSB=0	Sets most significant bit to zero	ESC=	27 61	1B 3D
Set MSB=1	Sets most significant bit to one	ESC >	27 62	1B 3E
Cancel MSB Settings	Cancels MSB settings	ESC#	27 35	1B 23
Expand Printable	Allows characters 128 (d) through 159 (d)	ESC 6	27 54	1B 36
Code Area	and 255 (d) to be printed			
Cancel Expanded	Cancels printing of characters 128 (d)	ESC 7	27 55	1B 37
Printable Code Area	through 159 (d) and 255 (d)			
Expand Printable	Allows characters 0 (d) through 31 (d) and	ESC I 1	27 73 49	1B 49 31
Code Area	128 (d) through 159 (d) to be printed			
Cancel Expand	Cancels printing of characters 0 (d)	ESC I 0	27 73 48	1B 49 30
Printable Code Area	through 31 (d) and 129 (d) through 159 (d)			
Change Emulation	Changes the emulation of the printer. All	ESC CR m	27 13 m	1B 0D m
(original)	data received so far will be printed and			
	the page ejected. m is an ASCII code.			
	m=AB - BR-Script 2 Batch Mode			
	m=AI - BR-Script 2 Interactive Mode			
	m=E - Reset Epson Mode			
	m=GL - HP-GL Mode			
	m=H - HP LaserJet Mode			
	m=I - IBM Proprinter Mode			
User Reset	Restore to User Settings	ESC CR!	27 13 33	1B 0D 21
	(n=0 to 2)	n R	n 82	n 52
Paper Input Control	Controls the paper input	ESC EM n	27 25 n	1B 19 n
	n=0 - Initialize Feeder Mode			
	n=1 - Feed From MP Tray			
	n=2 - Feed From Upper Cassette (Tray 1)			
	n=3 - Feed From Lower Cassette (Tray 2)			
	n=R - Eject Paper			
Duplex/Simplex Print	Sets simplex or duplex print mode	ESC CR!	27 13 33	1B 0D 21
(available when duplex	n=0 - Simplex	n D	n 68	n 44
unit is installed)	n=1 - Duplex & long edge binding			
(original)	n=2 - Duplex & short edge binding			
Page Side Selection	Sets page side selection	ESC CR!	27 13 33	1B 0D 21
(available when duplex		n S	n 83	n 53
unit is installed)	n=1 - Front side			
(original)	n=2 - Back side			
Initialize Printer	Initializes printer and clears print buffer	ESC @	27 64	1B 40
	(prints data)			
Set Form Length	Sets page length in current line spacing	ESC C n	27 67 n	1B 43 n
	(1≤n≤127)			
Set Left Margin	Sets left margin n characters from home	ESC l n	27 108 n	1B 6C n
	position (range depends on type size and			
	paper size)			

Command name	Function	Sequence	Decimal	Hexadecimal
Set Right Margin	Sets right margin n columns from the left margin (range depends on type size and paper size)	ESC Q n	27 81 n	1B 51 n
Set Skip-over	Sets bottom margin at the n-th line,	ESC N n	27 78 n	1B 4E n
Perforation	counting from the bottom			
Cancel Skip-over	Cancels the setting of the bottom margin	ESC O	27 79	1B 4F
Perforation				
	Line spacing is set to 1/6 inch	ESC 2	27 50	1B 32
	Line spacing is set to 1/8 inch	ESC 0	27 48	1B 30
	Line spacing is set to 7/72 inch	ESC 1	27 49	1B 31
	Line spacing is set to $n/72$ inch $(0 \le n \le 85)$	ESC A n	27 65 n	1B 41 n
Set n/216" Line	Line spacing is set to n/216 inch (0≤n≤255)	ESC 3 n	27 51 n	1B 33 n
Spacing				
Perform n/216"	Advances paper (moves cursor) by n/216	ESC J n	27 74 n	1B 4A n
Paper Feed	inch			
Perform n/216"	Reverse feeds paper (moves cursor) by	ESC j n	27 106 n	1B 6A n
Reverse Paper Feed	n/216 inch			
Set Horizontal Tab	Sets up to 32 horizontal tab stops	ESC D n1		1B 44 n1
Stops	(terminated by a NUL)	nk NUL	nk 0	nk 00
Horizontal Tab	Moves to next horizontal tab	HT	9	09
Set Vertical Tab	Sets up to 16 vertical tab stops	ESC b n1		1B 62 n1
Stops	(terminated by a NUL)	nk NUL	nk 0	nk 00
Vertical Tab	Moves to next vertical tab stop	VT	11	0B
Select VFU	Selects Vertical Format Unit	ESC / n	27 47 n	1B 2F n
Set Vertical Tab	Sets up to 16 vertical tab stops in selected	ESC B n1		1B 42 n1
Stops (VFU	Vertical Format Unit (selected by	nk NUL	nk 0	nk 00
Channel)	previous command). Terminated by NUL			
Set Absolute Print	Moves $(n1 + n2 \times 256)/60$ " from left	ESC \$ n1 n2	27 36 n1 n2	1B 24 n1 n2
Position	margin			
Set Relative Print	Moves $(n1 + n2 \times 256)/120$ " from current	ESC \ n1 n2	27 92 n1 n2	1B 5C n1 n2
Position	position			
Set Pica Pitch	Selects 10 cpi printing	ESC P	27 80	1B 50
Set Elite Pitch	Selects 12 cpi printing	ESC M	27 77	1B 4D
Set Proportional	Selects proportional spacing mode and	ESC p 1	27 112 49	1B 70 31
Spacing Mode	fonts (BS disabled)	EGG 0	27 112 49	1D 70 20
Disable Proportion-	Disables proportional spacing mode	ESC p 0	27 112 48	1B 70 30
al Spacing Mode	C-4 1 1 1	CI ECC CI	15 27 15	0E 1D 0E
Set Condensed Mode Cancel Condensed	Sets condensed printing	SI or ESC SI		0F or 1B 0F
	Cancels condensed printing mode	DC2	18	12
Mode Set Emphasized	Calanta haldfana minting	ESC E or	27.60 an 27	1B 45 or 1B
Set Emphasized Mode	Selects boldface printing	ESC E 01	71	47
	ESC E concels ESC E holdfood and ESC II			
Cancel Emphasized Mode	ESC F cancels ESC E boldface and ESC H cancels ESC G boldface	ESC F or ESC H	27 70 or 27 72	1B 46 or 1B 48
Set Enlarged	Selects enlarged characters for one	SO or	14 or	0E or
Character Mode	2		14 or 27 14 or	
Character Wiode	line only	ESC SO or ESC W 1	27 14 or 27 87 49	1B 0E or 1B 57 31
Cancel Enlarged	Cancels above settings (CAN cancels	DC4 or	27 87 49 20 or 24 or	16 5 / 31 14 or 18 or
Character Mode	SO only, and DC4 cancels SO and	CAN or	27 87 48	1B 57 30
Character Mode	ESC SO only)	ESC W 0	210140	10 37 30
	ESC SO OHLY)	ESC W U		

Command name	Function	Sequence	Decimal	Hexadecimal
Set/Cancel Double-	Sets $(n = 1)$ or cancels $(n = 0)$ double-high	ESC w n	27 119 n	1B 77 n
High Mode	mode	LSC W II	27 117 11	10 // 11
Set Italic Print Mode	Selects italic printing	ESC 4	27 52	1B 34
Cancel Italic Print	Cancels italic printing	ESC 5	27 53	1B 35
Mode	Cancels franc printing	LSC 3	21 33	10 33
Set Super/Subscript	Sets either superscript (n=0) or subscript	ESC S n	27 83 n	1B 53 n
Print Mode	(n=1) printing	LSC 5 II	27 03 H	1 D 33 II
Cancel Super/	Cancels effect superscript or subscript	ESC T	27 84	1B 54
Subscript Print Mode	printing	LSC 1	27 04	15 54
Set/Cancel Underline	Sets (n=1) or cancels (n=0) underlined	ESC - n	27 45 n	1B 2D n
Print Mode	printing (including spaces)	LSC II	27 43 H	1B 2D II
Select Justification	n=0: Left justify, n=1: Centering	ESC a n	27 97 n	1B 61 n
beleet sustification	n=2: Right justify, n=3: Fully justify	Loc u n	27 77 11	12 01 11
Set Intercharacter	Adds n/120" space to each character	ESC SP n	27 32 n	1B 20 n
Space	ridds ii 120 space to each character	Loc or ii	27 32 11	16 20 11
Select Print Mode	Allows combinations of attributes to be	ESC!n	27 33 n	1B 21 n
Select Time Hode	added to following text	250	2, 55 11	12 21
Select Epson/IBM	Selects either Epson (n=0) or IBM (n=1)	ESC t n	27 116 n	1B 74 n
character set	character set	250 111	27 110 11	12 /
Select International	Selects character set	ESC R n	27 82 n	1B 52 n
Character Set				
Define Download	Defines downloaded characters	ESC & NUL	27 38 0 n m	1B 26 00 n
Characters		n m a {data}	a {data}	m a {data}
Select Download	Selects either downloaded (n=1) or	ESC % n	27 37 n	1B 25 n
Character Mode	internal (n=0) character set			
Copy ROM	Copies internal character data to	ESC: 000	27 58 48 48	1B 3A 30
Characters to	download RAM area		48	30 30
Download RAM				
Select Bit Image	Selects and prints bit image data	ESC * m n1	27 42 m n1	1B 2A m n1
Mode		n2 {data}	n2 {data}	n2 {data}
Set 9-dot Bit Image	Selects and prints "9-dot" bit image	ESC ^ a n1	27 94 a n1	1B 5E a n1
Mode	data	n2 {data}	n2 {data}	n2 {data}
Set Single-Density	Selects and prints single-density bit image	ESC K n1 n2	27 75 n1 n2	1B 4B n1 n2
Bit Image Mode	data	{data}	{data}	{data}
Set Double-Density	Selects and prints double-density bit	ESC L n1 n2	27 76 n1 n2	1B 4C n1 n2
Bit Image Mode	image data	{data}	{data}	{data}
Set Double-Speed	Selects and prints "double-speed" double-	ESC Y n1 n2	27 89 n1 n2	1B 59 n1 n2
Double-Density Bit	density bit image data	{data}	{data}	{data}
Image Mode				
Set Quadruple-	Selects and prints quadruple-density bit	ESC Z n1 n2	27 90 n1 n2	1B 5A n1 n2
Density Bit Image	image data	{data}	{data}	{data}
Mode				
Reassign Graphics	Changes bit image density	ESC?nm	27 63 n m	1B 3F n m
Mode				
Set Scalable Font	Selects horizontal ratio	ESC CR!	27 13 33	1B 0D 21
Ratio (original)	(n=0.25 to 3 step 0.01)	n H	n 72	n 48
	Selects vertical ratio	ESC CR!	27 13 33	1B 0D 21
	(n=0.25 to 3 step 0.01)	n V	n 86	n 56
Execute Card Data	Execute saved card data	ESC CR!	27 13 33	1B 0D 21
(original)		n E	n 69	n 45

IBM Proprinter XL Mode

Command name	Function	Sequence	Decimal	Hexadecimal
Null	Ignored	NUL	0	00
Bell	Ignored	BEL	7	07
Space	Moves the cursor one character to the right	SP	32	20
Backspace	Moves the cursor one character to the left	BS	8	08
Line Feed	Moves the cursor to the next line	LF	10	0A
Form Feed	Prints the data in the buffer and ejects the	FF	12	0C
	page (if the buffer is empty, this command is ignored)			
Carriage Return	Moves the cursor to the left margin on the current line. If Auto LF has been set from the front panel or by software (ESC 5 1), the cursor will move down one line	CR	13	0D
Set/Cancel Auto	Sets (n=1) or cancels (n=0) auto line feed	ESC 5 n	27 53 n	1B 35 n
Line Feed Mode	Overrides the front panel setting			
Select Printer	Selects printer following deselection (ESC Q)	DC1	17	11
Deselect Printer	Ignored	DC3	19	13
Deselect Printer	Deselects printer, which will not accept	ESC Q 2 2	27 81 50 50	1B 51 32 32
	data until a DC1 is received	ESC Q 3	27 51 51	1B 51 33
Set Epson	Selects Epson FX-850 emulation mode.	ESC @	27 64	1B 40
Emulation Mode	All data in the buffer is printed and the			
	page ejected			
Change Emulation (original)	Changes the emulation of the printer. All data received so far will be printed and the page ejected. m is an ASCII code. m=AB - BR-Script 2 Batch Mode m=AI - BR-Script 2 Interactive Mode m=E - Epson Mode m=GL - HP-GL Mode m=H - HP LaserJet Mode m=I - Reset IBM Proprinter Mode	ESC CR m	27 13 m	1B 0D m
User Reset	Restore to User Settings	ESC CR!	27 13 33	1B 0D 21
Coer reser	(n=0 to 2)	n R	n 82	n 52
Paper Input Control	Controls the paper input n=0 - Feed From Manual Feed Slot n=1 - Feed From MP Tray n=2 - Feed From Upper Cassette (Tray 1) n=3 - Feed From Lower Cassette (Tray 2) n=R - Eject Paper	ESC EM n	27 25 n	1B 19 n
Duplex/Simplex Print	Sets simplex or duplex print mode	ESC CR!	27 13 33	1B 0D 21
(available when duplex unit is installed) (original)	n=0 - Simplex n=1 - Duplex & long edge binding n=2 - Duplex & short edge binding	n D	n 68	n 44
Page Side Selection	Sets page side selection	ESC CR!	27 13 33	1B 0D 21
(available when duplex	n=0 - Next side	n S	n 83	n 53
unit is installed)	n=1 - Front side			
(original)	n=2 - Back side			
Set Form Length	Sets form length to n lines at current spacing $(1 \le n \le 255)$	ESC C n	27 67 n	1B 43 n
	Sets from length to n inches at current spacing (0≤n≤15)	ESC C 0 n	27 67 48 n	1B 43 30 n
Set Right and Left Margins	n1 is used to set the left margin, and n2 the right margin (1≤n1≤n2≤255)	ESC X n1 n2	27 88 n1 n2	1B 58 n1 n2
Set Skip-over Perforation	Sets bottom margin at n-th line, counting from the bottom (1≤n≤255)	ESC N n	27 78 n	1B 4E n

Command name	Function	Sequence	Decimal	Hexadecimal
Cancel Skip-over	Cancels the bottom margin setting	ESC O	27 79	1B 4F
Perforation				
Set 1/8" Line	Sets line spacing to 1/8 inch	ESC 0	27 48	1B 30
Spacing Mode				
Set 7/72" Line	Sets line spacing to 7/72 inch	ESC 1	27 49	1B 31
Spacing Mode				
Save n/72" Line	Sets line spacing mode to n/72 inch	ESC A n	27 65 n	1B 41 n
Spacing Mode	(1≤n≤85). Activated by ESC 2 command			
Activate n/72"	Activates line spacing mode set by ESC A	ESC 2	27 50	1B 32
Line Spacing				
Mode set by ESC A				
Set n/216" Line	Sets line spacing to n/216 inch (1≤n≤255)	ESC 3 n	27 51 n	1B 33 n
Spacing				
Execute n/216"	Advances the cursor by n/216 inch	ESC J n	27 74 n	1B 4A n
Line Spacing				
Set Horizontal Tab	Sets up to 28 horizontal tab stops	ESC D n1	27 68 n1	1B 44 n1
Stops	(terminated by NUL)	nk NUL	nk NUL	nk NUL
Horizontal Tab	Advances to next horizontal tab (if none	HT	9	09
	have been defined, default tab stops are			
	set every 8 columns)			
Set Vertical Tab	Sets up to 64 vertical tab stops	ESC B n1	27 66 n1	1B 42 n1
Stops	(terminated by NUL)	nk NUL	nk NUL	nk NUL
Vertical Tab	Advances to next vertical tab stops	VT	11	0B
	(or LF if none have been defined)			
Restore to Default	Clears any vertical tab stops, and sets	ESC R	27 82	1B 52
Tab Settings	default horizontal tab stops every 8			
	columns			
Set Pica Pitch	Selects 10 cpi printing	DC2	18	12
Set Elite Pitch	Selects 12 cpi printing	ESC:	27 58	1B 3A
Set/Cancel	Sets (n=1) or cancels (n=0) proportionally-	ESC P n	27 80 n	1B 50 n
Proportional	spaced printing			
Spacing Mode				
Set Condensed	Selects condensed characters (canceled	SI	15	0F
Character Mode	by DC2)			
Set Emphasized	Selects emphasized printing (canceled	ESC E	27 69	1B 45
Character Mode	by ESC F)			
Cancel Emphasized	Cancels emphasized printing	ESC F	27 70	1B 46
Character Mode				
Set Enlarged	Selects enlarged characters for one	SO	14	0E
Character Mode	line only			
Cancel Enlarged	Cancels one-line enlarged character	DC4 or	20 or 24	14 or 18
Character Mode	printing	CAN		
Set/Cancel	Sets (n=1) or cancels (n=0) enlarged	ESC W n	27 87 n	1B 57 n
Enlarged	character printing. When n=0, SO			
Character Mode	enlarged printing will also be canceled			
Set Super/Subscript	Sets superscript (n=0) or subscript (n=1)	ESC S n	27 83 n	1B 53 n
Print Mode	printing			
Cancel	Cancels superscript or subscript printing	ESC T	27 84	1B 54
Super/Subscript				
Print Mode				

Command name	Function	Sequence	Decimal	Hexadecimal
Set/Cancel	When n=1, subsequent characters	ESC - n	27 45 n	1B 2D n
Underline Print	(including spaces, but excluding			
Mode	horizontal tabs) are underlined.			
	When n=0, this effect is canceled			
Set/Cancel	When n=1, subsequent characters	ESC _ n	27 95 n	1B 5F n
Overline Print	(including spaces, but excluding			
Mode	horizontal tabs) are overlined.			
	When n=0, this effect is canceled			
Select Double-	Depending on the values of m3 and m4,	ESC [@ 4	27 91 64 4	1B 5B 40 04
High/Double-	double-height and/or double-width	0 0 0	0 0 0	00 00 00
Width Mode	printing is enabled or disabled	m3 m4	m3 m4	m3 m4
Select Character	Allows printing of the symbols in	ESC 6	27 54	1B 36
Set II	Character Set II			
Select Character	Allows printing of the symbols in	ESC 7	27 55	1B 37
Set I	Character Set I			
Select Characters	Allows $(n1 + (n2 \times 256))$ characters to be	ESC \ n1 n2	27 92 n1 n2	1B 5C n1 n2
from All Character	printed from the All Characters Table.	{data}	{data}	{data}
Table	Control codes in the data are ignored			
Select a Character	Prints one character (c) from the All	ESC ^ c	27 94 c	1B 5E c
from All Character	Character Table			
Table				
Define 8-dot	Allows definition of user-defined	ESC = n1 n2	27 61 n1 n2	1B 3D n1 n2
Download	characters	sp m a1 a2		20 m a1 a2
Characters		{data}	{data}	{data}
Select Download	Selects font and print quality (n=0 or 2 -	ESC I n	27 73 n	1B 49 n
Font	internal fonts, n=4 or 6 - downloaded fonts)			
Set Single-Density	Selects and prints single-density bit-image	ESC K n1	27 75 n1 n2	1B 4B n1 n2
Bit Image Mode	data	n2 {data}	{data}	{data}
Set Double-Density	Selects and prints double-density bit	ESC L n1	,	1B 4C n1 n2
Bit Image Mode	image data	n2 {data}	{data}	{data}
Set Double-Speed	Selects and prints "double speed" double-	ESC Y n1	,	1B 59 n1 n2
Double-Density Bit	density bit image data	n2 {data}	{data}	{data}
Image Mode		()	()	()
Set Quadruple-	Selects and prints quadruple-density bit	ESC Z n1	27 90 n1 n2	1B 5A n1 n2
Density Bit Image	image data	n2 {data}	{data}	{data}
Mode		,	,	,
Set Scalable Font	Selects horizontal ratio	ESC CR!	27 13 33	1B 0D 21
Ratio (original)	(n=0.25 to 3 step 0.01)	n H	n 72	n 48
, ,	Selects vertical ratio	ESC CR!	27 13 33	1B 0D 21
	(n-0.25 to 3 step 0.01)	n V	n 86	n 56
Execute Card Data	Execute saved card data	ESC CR!	27 13 33	1B 0D 21
(original)		n E	n 69	n 45

HP-GL Mode

Command Mnemonic		Parameters
Vector Group		
ARC ABSOLUTE	AA	<pre>x_center, y_center, sweep_angle [, chord_angle];</pre>
ARC RELATIVE	AR	x_increment, y_increment, sweep_angle [, chord_angle];
PLOT ABSOLUTE	PA	[x, y [, x, y]];
PLOT RELATIVE	PR	[x, y [, x, y]];
PEN DOWN	PD	[x, y [, x, y]];
PEN UP	PU	[x, y [, x, y]];
Polygon Group		
CIRCLE	CI	radius [, chord_angle];
SHADE RECTANGLE ABSOLUTE	RA	x_coordinate, y_coordinate;
SHADE RECTANGLE RELATIVE	RR	x_increment, y_increment;
EDGE RECTANGLE ABSOLUTE	EA	x_coordinate, y_coordinate;
EDGE RECTANGLE RELATIVE	ER	x_increment, y_increment;
SHADE WEDGE	WG	radius, start_angle, sweep_angle [, chord_angle];
EDGE WEDGE	EW	radius, start_angle, sweep_angle [, chord_angle];
Character Group		<u> </u>
SELECT STANDARD SET	SS	
SELECT ALTERNATE SET	SA	
ABSOLUTE DIRECTION	DI	[run, rise];
RELATIVE DIRECTION	DR	[run, rise];
ABSOLUTE CHARACTER SIZE	SI	[width, height];
RELATIVE CHARACTER SIZE	SR	[width, height];
CHARACTER SLANT	SL	[tangent_of_angle];
STANDARD SET DEFINITION	CS	[Designate_standard_character_set];
ALTERNATE SET DEFINITION	CA	[Designate_alternate_character_set];
LABEL	LB	[char [char]] l bterm
DEFINE LABEL TERMINATOR	DT	[1 bterm];
CHARACTER PLOT	CP	[spaces, lines];
USER DEFINED CHARACTER	UC	[[pen_control], x_increment, y_increment [,]
		[, pen_control][,]];
Line and Fill Attributes Group		
LINE TYPE	LT	[line_type [, pattern_length]];
PEN WIDTH	PW	[width [, pen]];
SELECT PEN	SP	[pen];
SYMBOL MODE	SM	[char];
FILL TYPE	FT	[fill_type [, option 1 [, option 2]]];
TICK LENGTH	TL	[tick_p [, tick_n]];
X TICK	XT	
Y TICK	YT	
PEN THICKNESS	PT	[fill_line_interval];
Configuration and Status Group		L = %
SCALE	SC	[x 1, x 2, y 1, y 2];
INPUT WINDOW	IW	[x L L, y L L, x U R, y U R];
INPUT P1 AND P2	IP	[p 1 x, p 1 y [, p 2 x, p 2 y]];
DEFAULT VALUES	DF	
INITIALIZE	IN	,
ROTATE COORDINATE SYSTEM	RO	, [angle];
PAGE OUTPUT	PG	[copy_number];

Function Command		Decimal	Hexadecimal
Go to Other Emulations			
BR-Script 2 Batch Mode	ESC CR AB	27 13 65 66	1B 0D 41 42
BR-Script 2 Interactive Mode	ESC CR AI	27 13 65 73	1B 0D 41 49
HP LaserJet	ESC CR H	27 13 72	1B 0D 48
IBM Proprinter XL	ESC CR I	27 13 73	1B 0D 49
EPSON FX-850	ESC CR E	27 13 69	1B 0D 45
High Resolution Control (HRC)			
Set HRC Off	ESC CR R O	27 13 82 79	1B 0D 52 4F
Set HRC to Light Level	ESC CR R L	27 13 82 76	1B 0D 52 4C
Set HRC to Medium Level	ESC CR R M	27 13 82 77	1B 0D 52 4D
Set HRC to Dark Level	ESC CR R D	27 13 82 68	1B 0D 52 44
User Reset			
Restore to User Settings	ESC CR! n R	27 13 33 n 82	1B 0D 21 n 52
	n = 0 to 2		
Factory Reset			
Restore to Factory Settings	ESC CR F D	27 13 70 68	1B 0D 46 44
Duplex/Simplex Print (available wh	en duplex unit is ins	stalled) (original)	
Set Simplex	ESC CR ! 0 D	27 13 33 48 68	1B 0D 21 30 44
Set Duplex & long edge binding	ESC CR!1D	27 13 33 49 68	1B 0D 21 31 44
Set Duplex & short edge binding	ESC CR!2D	27 13 33 50 68	1B 0D 21 32 44
Page Side Selection (available when	n duplex unit is insta	lled) (original)	
Set next side	ESC CR ! 0 S	27 13 33 48 83	1B 0D 21 30 53
Set front side	ESC CR!1S	27 13 33 49 83	1B 0D 21 31 53
Set back side	ESC CR ! 2 S	27 13 33 50 83	1B 0D 21 32 53
Scalable Font Ratio (original)			
Set horizontal ratio	ESC CR ! n H	27 13 33 n 72	1B 0D 21 n 48
(n=0.25 to 3 step 0.01)			
Set vertical ratio	ESC CR! n V	27 13 33 n 86	1B 0D 21 n 56
(n=0.25 to 3 step 0.01)			
Execute Card Data (original)			<u> </u>
Execute saved card data	ESC CR!nE	27 13 33 n 69	1B 0D 21 n 45

Bar Code Control

The printer can print bar codes in the HP LaserJet, EPSON FX-850, and IBM Proprinter XL emulation modes.

Print Bar Codes or Expanded Characters

Code ESC i Dec 27 105 Hex 1B 69

Format: ESC i n ... n \

Creates bar codes or expanded characters according to the segment of parameters "n ... n". For further information about parameters, see the following "Definition of Parameters." This command must end with the "\" code (5CH).

[Definition of Parameters]

This bar code command can have the following parameters in the parameter segment $(n \dots n)$. Since parameters are effective within the single command syntax ESC i $n \dots n \setminus$, they don't take effect in the subsequent bar code commands. If certain parameters are not specified, they take the default settings. The last parameter must be the bar code data start ("b" or "B") or the expanded character data start ("l" or "L"). Other parameters can be specified in any sequence. The prefix of each parameter can be a lower-case or upper-case character: for example, "t0" or "T0", "s3" or "S3", etc.

■ Bar Code Mode

```
n = "t0" or "T0"
                             CODE 39 (default)
n = "t1" or "T1"
                             Interleaved 2 of 5
n = "t3" \text{ or "T3"}
                             FIM (US-Post Net)
n = "t4" or "T4"
                             Post Net (US-Post Net)
n = "t5" \text{ or "T5"}
                             EAN 8, EAN 13, or UPC A
n = "t6" \text{ or "T6"}
                             UPC E
n = "t9" \text{ or "T9"}
                             Codabar
n = "t12" \text{ or "T12"}
                             Code 128 set A
n = "t13" \text{ or "T13"}
                             Code 128 set B
n = "t14" or "T14"
                             Code 128 set C
n = "t130" or "T130"
                             ISBN (EAN)
n = "t131" or "T131"
                             ISBN (UPC-E)
n = "t132" or "T132"
                             EAN 128 set A
n = "t133" or "T133"
                             EAN 128 set B
n = "t134" or "T134"
                             EAN 128 set C
```

This parameter selects the bar code mode as above. When n is "t5" or "T5", the bar code mode (EAN 8, EAN 13, or UPC A) varies according to the number of characters in the data.

■ Bar Code, Expanded Character, Line Block Drawing & Box Drawing

```
n = "s0" or "S0" 3 : 1 (default)

n = "s1" or "S1" 2 : 1

n = "s3" or "S3" 2.5 : 1
```

This parameter selects the bar code style as above. When the EAN 8, EAN 13, UPC-A, Code 128 or EAN 128 bar code mode is selected, this bar code style parameter is ignored.

Expanded Character

"S" 0 =White

1 = Black

2 = Vertical stripes

3 = Horizontal stripes

4 = Cross hatch

eg. "S" n1 n2

n1 = Background fill pattern

n2 = Foreground fill pattern

If "S" is followed by only one parameter, the parameter is a foreground fill pattern.

Line Block Drawing & Box Drawing

"S" 1 = Black

2 = Vertical stripes

3 = Horizontal stripes

4 = Cross hatch

■ Bar Code

```
n = "mnn" \text{ or "Mnnn" (nnn} = 0 \sim 32767)
```

This parameter specifies the bar code width. The unit of "nnn" is %.

■ Bar Code Human Readable Line On or Off

```
n = \text{``r0" or ``R0"} Human readable line OFF n = \text{``r1" or ``R1"} Human readable line ON
```

Default: Human readable line ON

- (1) "T5" or "t5" (2) "T6" or "t6" (3) "T130" or "t130" (4) "T131" or "t131"
- Default: Human readable line OFF
 All others

This parameter specifies whether or not the printer prints the human readable line below the bar code. Human readable characters are always printed with OCR-B font of 10 pitch and all the current character style enhancements are masked. Note that the default setting is subject to the bar code mode selected by "t" or "T".

■ Quiet Zone

```
n = "onnn" or "Onnn" (nnn = 0 ~ 32767)
```

Quiet Zone is the space on both side of the bar codes. Its width can be specified using the units which are set by the "u" of "U" parameter. (For the description of "u" or "U" parameter, see the next section.) The default setting of Quiet Zone width is 1 inch.

■ Bar Code, Expanded Character Unit, Line Block Drawing & Box Drawing

```
n = "u0" or "U0"
                     Millimeters (default)
n = "u1" \text{ or "U1"}
                      1/10"
n = "u2" \text{ or "U2"}
                      1/100"
n = "u3" or "U3"
                     1/12"
n = "u4" or "U4"
                     1/120"
n = "u5" or "U5"
                      1/10 Millimeters
n = "u6" or "U6"
                      1/300"
n = "u7" or "U7"
                      1/720"
```

This parameter specifies the measurement units of X-axis offset, Y-axis offset, and bar code height.

■ Bar Code, Expanded Character, Line Block Drawing & Box Drawing Offset in X-axis

```
n = "xnnn" or "Xnnn"
```

This parameter specifies the offset from the left margin in the "u"- or "U"-specified unit.

■ Bar Code & Expanded Character Offset in Y-axis

```
n = "ynnn" or "Ynnn"
```

This parameter specifies the downward offset from the current print position in the "u"- or "U"-specified unit.

■ Bar Code, Expanded Character, Line Block Drawing & Box Drawing Height

```
n = "hnnn", "Hnnn", "dnnn", or "Dnnn"
```

(1) EAN13, EAN8, UPC-A, ISBN (EAN13, EAN8, UPC-A),

ISBN (UPC-E): 22 mm (2) UPC-E: 18 mm (3) Others: 12 mm

> Expanded characters \rightarrow 2.2 mm (default) Line Block Drawing & Box Drawing \rightarrow 1 dot

This parameter specifies the height of bar codes or expanded characters as above. It can take the prefix "h", "H", "d", or "D". The height of bar codes is specified in the "u"- or "U"-specified unit. Note that the default setting of the bar code height (12 mm, 18 mm or 22 mm) is subject to the bar code mode selected by "t" or "T".

■ Expanded Character Width, Line Block Drawing & Box Drawing

```
n = "wnnn" or "Wnnn"
```

Expanded character \rightarrow 1.2 mm Line Block Drawing & Box Drawing \rightarrow 1 dot

This parameter specifies the width of expanded characters as above.

■ Expanded Character Rotation

n = "a0" or "A1"	Upright (default)
n = "a1" or "A1"	Rotated 90 degrees
n = "a2" or "A2"	Upside down, rotated 180 degrees
n = "a3" or "A3"	Rotated 270 degrees

■ Bar Code Data Start

```
n = "b" or "B"
```

Data that follows "b" or "B" is read in as bar code data. Bar code data must end with the "\" code (5CH), which also terminates this command. The acceptable bar code data is subject to the bar code mode selected by "t" or "T".

• When CODE 39 is selected with the parameter "t0" or "T0":

Forty three characters "0" to "9", "A" to "Z", "-", " . ", " (space)", "\$", "/", "+", and "%" can be accepted as bar code data. Other characters cause data error. The number of characters for bar codes is not limited. The bar code data automatically starts and ends with an asterisk " * " (start character and stop character). If the received data has an asterisk " * " at its beginning or end, the asterisk is regarded as a start character or stop character.

• When Interleaved 2 of 5 is selected with the parameter "t1" or "T1":

Ten numerical characters "0" to "9" can be accepted as bar code data. Other characters cause data error. The number of characters for bar codes is not limited. Since this mode of bar codes require even characters, if the bar code data has odd characters, the zero character "0" is automatically added to the end of the bar code data.

• When FIM (US-Post Net) is selected with the parameter "t3" or "T3":

Characters "A" to "D" are valid and 1 digit of data can be printed. Uppercase and lowercase alphabet characters can be accepted.

 When Post Net (US-Post Net) is selected with the parameter "t4" or "T4":

Characters "0" to "9" can be data and it must be terminated by a check digit. "?" can be used in place of the check digit.

 When EAN 8, EAN 13, or UPC A is selected with the parameter "t5" or "T5":

Ten numerical characters "0" to "9" can be accepted as bar code data. The number of characters for bar codes is limited as follows.

EAN 8: Total 8 digits (7 digits + 1 check digit) EAN 13: Total 13 digits (12 digits + 1 check digit) UPC A: Total 12 digits (11 digits + 1 check digit)

A number of characters other than above causes data error and the bar code data is printed as normal print data. If the check digit is incorrect, the printer calculates the correct check digit automatically so that the correct bar code data will be printed. When EAN13 is selected, adding "+" and a 2-or 5-digit number after the data can create an add-on code.

• When UPC-E is selected with the parameter "t6" or "T6":

The numerical characters "0" to "9" can be accepted as bar code data.

(1) 8 digits Standard format. The first character

must be "0" and the data must be terminated by

a check digit.

Total 8 digits = "0" + 6 digits + 1 check digit.

(2) 6 digits The first character and the last

check digit are removed from the 8 digit data.

- *1: For 8 digits, "?" can be used in place of a check digit.
- *2: Adding "+" and 2- or 5-digit number after the data creates an add-on code for all 6 and 8 digit formats.
- When Codabar is selected with the parameter "t9" or "T9":

Characters "0" to "9", "-", ".", "\$", "/", "+", ":" can be printed. Characters "A" to "D" can be printed as a start-stop code, which can be uppercase or lowercase. If there is no start-stop code, errors occur. A check digit cannot be added and using "?" causes errors.

• When Code 128 Set A, Set B, or Set C is selected with the parameter "t12" or "T12," "t13" or "T13," or "t14" or "T14" respectively:

Code 128 sets A, B and C are individually selectable. Set A encodes characters Hex 00 ... 5F. Set B encodes characters Hex 20 ... 7F. Set C encodes numeric pairs 00 ... 99. Switching is allowed between the code sets by sending %A, %B, or %C. FNC 1, 2, 3, and 4 are produced with %1, %2, %3, and %4. The SHIFT code, %S, allows temporary switching (for 1 character only) from set A to set B and vice versa. The "%" character can be encoded by sending it twice.

• When ISBN (EAN) is selected with the parameter "t130" or "T130":

Same rules apply as for "t5" or "T5"

• When ISBN (UPC-E) is selected with the parameter "t131" or "T131":

Same rules apply as for "t6" or "T6"

• When EAN 128 set A, set B or set C is selected with the parameter "t132" or "T132", "t133" or "T133" or "t134" or "T134" respectively:

Same rules apply as for "t12" or "T12", "t13" or "T13", or "t14" or "T14".

■ Box Drawing

```
ESC i ... E (or e)
```

"E" or "e" is a terminator.

■ Line Block Drawing

```
ESC i ... V (or v)
```

"V" or "v" is a terminator.

■ Expanded Character Data Start

```
n = "l" or "L"
```

Data that follows "I" or "L" is read in as expanded character data (or labeling data). Expanded character data must end with the "\" code (5CH), which also terminates this command.

[Example Program Listings]

```
WIDTH "LPT1:",255

'CODE 39
LPRINT CHR$(27);"it0rls0o0x00y00bCODE39?\";

'Interleaved 2 of 5
LPRINT CHR$(27);"it1rls0o0x00y20b123456?\";

'FIM
LPRINT CHR$(27);"it3rlo0x00y40bA\";

'Post Net
LPRINT CHR$(27);"it4rlo0x00y60b1234567890?\";
```

```
'EAN-8
LPRINT CHR$(27);"it5r1o0x00y70b1234567?\";
'UPC-A
LPRINT CHR$(27); "it5rlo0x50y70b12345678901?\";
'EAN-13
LPRINT CHR$(27); "it5rlo0x100y70b123456789012?\";
LPRINT CHR$(27);"it6r1o0x150y70b0123456?\";
'Codabar
LPRINT CHR$(27); "it9r1s0o0x00y100bA123456A\";
'Code 128 set A
LPRINT CHR$(27); "it12r1o0x00y120bCODE128A12345?\";
'Code 128 set B
LPRINT CHR$(27); "it13r1o0x00y140bCODE128B12345?\";
'Code 128 set C
LPRINT CHR$(27);"it14r1o0x00y160b";CHR$(1);CHR$(2);"?\";
'ISBN(EAN)
LPRINTCHR$(27);"it130r1o0x00y180b123456789012?+12345\";
'EAN 128 set A
LPRINT CHR$(27);"it132r1o0x00y210b1234567890?\";
LPRINT CHR$(12)
END
```

INDEX

▼ (DOWN) switch: 4-6	mode: 4-28
▲ (UP) switch: 4-6	code table: 4-54, 4-58
	code type: 4-19
	commands: Appendix-38
\mathbf{A}	communications parameters: 4-18
adjustment knob for face up/down print delivery: 2-3	computer: 2-18 continue mode: 4-44
adjustment lever: 2-13	CONTINUE switch: 4-63
advanced photoscale technology	control panel: 2-3, 3-7
(APT): 1-4, 4-30	COPY switch: 4-77
ALARM lamp: 4-4	cut sheet paper size: 4-23
angle of control panel: 3-7	cut sheet paper size. 125
anti-static teeth: 6-3	
application software: 3-1	D
AUTO CR: 4-21	data compression: Appendix-51
auto form feed: 4-42	DATA lamp: 4-4
AUTO LF: 4-21	data terminal ready: 4-19
AUTO MASK: 4-21	demonstration pattern: 4-86
auto mode: 4-21	display: 4-1
AUTO SKIP: 4-21	download font: 4-39
AUTO WRAP: 4-21	drum shutter: 2-7
automatic emulation selection: 3-3	DTR: 4-19
automatic interface selection: 3-5, 4-17	duplex mode: 4-75
	duplex printing: 4-75
_	duplex unit: 1-10, 3-11, 5-11
В	
bar codes: 1-8, Appendix-68	
baud rate: 4-19	${f E}$
bi-directional parallel	ECONOMY switch: 4-69
communications: 4-18	emulation: 1-5
bi-directional parallel interface	emulation mode: 3-1, 4-65
connector: 2-3	EMULATION switch: 4-65
bottom margin: 4-23	envelope: 3-13
BR-Script 2 mode: 4-68	EPSON FX-850 mode: 4-68
buzzer: 4-45	ER: 4-19
	error message: 7-3
C	error mode: 4-44
	error recovery: 4-44
card operation: 4-32	expansion memory: 5-7
CCITT: 1-8, Appendix-51	
character set: 4-27, 4-56, 4-57, 4-60, Appendix-15	
character sets in HP-GL emulation	

F	K
face down print delivery: 3-17	KEEP PCL function: 4-66
face down print delivery tray: 2-3	
face up print delivery: 3-17	
factory settings: 3-10, 4-79	L
FEEDER switch: 4-70	lamps: 4-4
fixing roller: 7-9	landscape: 4-20
flash memory card: 1-10, 5-2	language: 3-8
flash operation: 4-34	LaserJet mode: 4-67
floppy disk: 1-3	left margin: 4-23
fonts: 1-6, 4-59	left side cover: 5-8
font card: 5-2	line feed pitch: 4-25
font cartridge: 1-10, 5-2	line spacing: 4-25
font cartridge slot: 2-3	lines/page: 4-25
font/IC card slot: 2-3	lines per page: 4-23
font ID number: 5-5	list of optional fonts: 4-85
font list: 4-87	list of panel switch settings: 4-85
font size: 4-53, 4-57	list of permanent download fonts: 4-85
font source: 4-51, 4-55	list of resident fonts: 4-85
font style: 4-52, 4-56	lock panel: 4-42
FONT switch: 4-49	lock your settings: 1-8
form feed: 4-61	lower paper cassette: 3-11
form feed suppress: 4-43	lower tray unit: 1-10, 5-1
FORM FEED switch: 4-61	
fuser: 6-6	7.5
	M
	macro: 4-37
G	manual feed: 3-16
G3/G4: 1-8	manual feed mode: 4-73
G3/G4 format: Appendix-51	margin: 4-24
graphics mode: 4-26	media type: 4-74
	memory: 1-6, 5-7
TT	memory modules: 1-10
H	MIO card: 1-10, 4-19, 5-6
HDD card: 1-10, 5-2	MIO card slot: 2-3
hex dump mode: 4-88	MIO interface: 1-5, 4-19
high resolution control (HRC): 1-4, 4-30	MIO interface slot: 5-6 MODE switch: 4-7
high speed parallel communications: 4-18	
HP-GL mode: 4-68	modular input/output (MIO) interface: 5-6
HP LaserJet mode: 4-67	modular jack for options: 2-3
HP mode: 4-67	MP FIRST mode: 4-72
	MP tray setting: 4-73
I	multi-purpose tray: 2-3, 2-15, 3-11
IBM Proprinter XL mode: 4-68 input buffer: 4-46	N
interface: 1-5	network mode: 4-41
interface mode: 4-17	NORMAL mode: 3-9, 4-5
menace mode. 4-1/	number of copies: 4-77
	number of copies//

number of printed pages: 4-48	printer emulation: 3-1	
	printer settings: 3-10, 4-86	
	printer status message: 4-2	
0	printer test: 4-86	
off-line: 4-5	protective parts: 2-6	
on-line: 4-5		
ON LINE lamp: 4-4		
operator call message: 7-1	Q	
optional fonts: 5-4	quick exit switch: 4-6	
optional interface: 4-19		
options: 1-10		
orientation: 4-20	R	
	READY lamp: 4-4	
	rear access cover: 2-3, 7-8	
P	rear paper slit: 3-17	
page format mode: 4-23	reprint: 1-9, 4-61	
page protection: 4-32	reset mode: 4-78	
paper access cover: 6-7, 7-10	RESET switch: 4-78	
paper capacity: 3-12	resolution: 1-4, 4-29	
paper cassette: 1-5, 2-11, 3-15	resolution mode: 4-28	
paper exit: 7-7	right margin: 4-23	
paper feed method: 4-71	robust Xon: 4-19	
paper guide: 6-7	RS-232C interface: 1-5	
PAPER IN setting: 4-74	RS-232C serial interface connector: 2-3	
paper jam: 7-6		
paper jani. 7-0		
paper path selector guide: 3-17	S	
paper path selector guide: 3-17 paper size: 3-12	S scalable font: 4-45	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71	scalable font: 4-45	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12	·=	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26 portrait: 4-20	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64 side paper stop: 2-13 SIMM: 5-8	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26 portrait: 4-20 PostScript® language emulation: 4-68 power cord: 2-19	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64 side paper stop: 2-13	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26 portrait: 4-20 PostScript® language emulation: 4-68	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64 side paper stop: 2-13 SIMM: 5-8 simplex printing: 4-75	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26 portrait: 4-20 PostScript® language emulation: 4-68 power cord: 2-19 power cord connector: 2-3	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64 side paper stop: 2-13 SIMM: 5-8 simplex printing: 4-75 single in-line memory modules	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26 portrait: 4-20 PostScript® language emulation: 4-68 power cord: 2-19 power cord connector: 2-3 power save mode: 4-69	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64 side paper stop: 2-13 SIMM: 5-8 simplex printing: 4-75 single in-line memory modules (SIMMs): 5-7	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26 portrait: 4-20 PostScript® language emulation: 4-68 power cord: 2-19 power cord connector: 2-3 power save mode: 4-69 power saving mode: 1-8	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64 side paper stop: 2-13 SIMM: 5-8 simplex printing: 4-75 single in-line memory modules (SIMMs): 5-7 sizes of paper: 3-11	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26 portrait: 4-20 PostScript® language emulation: 4-68 power cord: 2-19 power save mode: 4-69 power saving mode: 1-8 power switch: 2-3, 2-20	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64 side paper stop: 2-13 SIMM: 5-8 simplex printing: 4-75 single in-line memory modules (SIMMs): 5-7 sizes of paper: 3-11 sleep: 4-69	
paper path selector guide: 3-17 paper size: 3-12 paper source: 3-12, 4-71 paper type: 3-12 paper width guide: 2-15 parallel interface: 1-5, 4-18 parallel interface port: 2-18 parity: 4-19 pass number: 4-42 PCMCIA-compatible flash memory card: 1-9 pen setting: 4-26 pen size: 4-26 portrait: 4-20 PostScript® language emulation: 4-68 power cord: 2-19 power cord connector: 2-3 power save mode: 4-69 power switch: 2-3, 2-20 primary font: 4-50	scalable font: 4-45 secondary font: 4-50 SEL switch: 4-5 self-diagnosis: 2-20 serial interface: 1-5, 4-18 serial interface port: 2-18 service call message: 7-5 SET switch: 4-6 shades of gray: 1-4, 4-26 SHIFT mode: 3-9 SHIFT switch: 4-64 side paper stop: 2-13 SIMM: 5-8 simplex printing: 4-75 single in-line memory modules (SIMMs): 5-7 sizes of paper: 3-11 sleep: 4-69 sliding guide: 2-14	

USER'S GUIDE

```
stop bit: 4-19
switch: 3-9
symbol set: 4-60, Appendix-15
T
table print: 4-54, 4-58
technical reference manual: 1-10
test mode: 4-85
test pattern: 4-86
TEST switch: 4-85
TIFF Format: Appendix-53
time out for the auto interface
 selection: 4-17
time out for the automatic emulation
 change: 4-65
time out for the power save mode: 4-69
toner cartridge: 1-4, 2-2, 2-7, 6-1
toner empty: 6-1
toner low: 4-44
toner save mode: 1-8, 4-69
top cover: 2-3, 2-5
top margin: 4-23
transfer guide: 6-7
transfer roller: 6-3
tray 1: 3-16
tray 2: 3-16
U
upper paper cassette: 2-3, 3-11
user settings: 3-10, 4-47
W
wait time: 4-43
Windows: 1-8
X
X offset: 4-23
Xon/Xoff: 4-19
Y offset: 4-23
```



Brother FAX Share

OPERATION MANUAL

Please read this manual thoroughly before using the fax function in the printer.

Keep this manual in a convenient place for quick and easy reference at all times.

TABLE OF CONTENTS


ABOUT THE FAX FUNCTION	1
Features	1
Specifications	2
System Requirements	3
CONNECTING TO THE PRINTER	4
Installing the External Fax Modem	4
Settings on the Control Panel	6
USING THE FAX DRIVER	7
Installing the Fax Driver	7
Receiving Fax Messages	7
Sending a Fax Message	8
OTHER FUNCTIONS	10
Report Print	10
Sharing the Fax Function on a Network	11
TROUBLESHOOTING	13
Messages on the Control Panel	
O & A	14

ABOUT THE FAX FUNCTION


Features

When you have installed an External Fax Modem onto the printer, you can


1) Print a received fax message on plain paper directly to the printer.



2) Send a fax message from your computer.

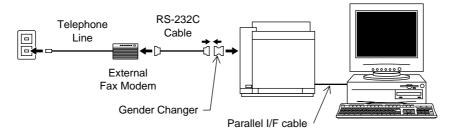

3) Let multiple users send fax messages from each computer on a single telephone line if the printer is shared on the network and connected to the printer via a centronics parallel cable or via a network share.

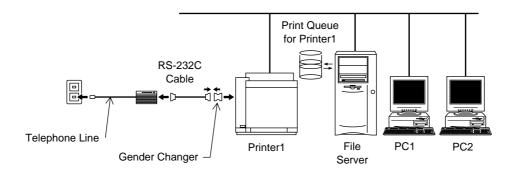

4) Automatically print a fax sent / received report.

Specifications

Printer

Compatibility: ITU-T Group 3

Coding system: MH

Resolution: Horizontal: 200 dots/inch

Vertical: Standard mode; 100 lines/inch

Fine mode; 200 lines/inch

(Only Fine mode is available in Windows NT 4.0)

External Fax Modem: Fax compatibility: Class 2.0

Data transmission: 14,400 - 2,400 bps (Fax Speed)

Auto reduction: Auto / Off / 90%

Fax driver

Operating system: Microsoft® Windows 3.1 / Windows 95 / Windows 98 / Windows

NT 4.0

Resolution: Standard and Fine (Only Fine mode, 200 dpi in Windows NT

4.0.)

Dial type: Tone / Pulse

Cover page: A custom cover page can be created

Phone book: Up to 1,000 numbers can be registered

Telephone numbers can be registered as groups (up to 64 per

group)

✓ Note:

The floppy disk including the FAX Share driver for Windows NT 4.0 is supplied separately from the floppy disk including the FAX Share drivers for Windows 3.1, Windows 95 and Windows 98.

System Requirements

External Fax Modem

The printer can accept the following type of External Fax Modem;

Interface standards: RS-232C Fax compatibility: Class 2.0

Data transmission: 14,400 - 2,400 bps (Fax Speed)

The following External Fax Modem can be used;

• 3Com U.S. Robotics 56K Faxmodem (Model No. 5686)

✓ Note:

You cannot use a Class 1, Class 1.0 or Class 2 External Fax Modem.

PC and OS

The fax driver works on the following types of PC and operating systems (OS);

PC: IBM-PC/AT or compatible

Operating system: Microsoft Windows 3.1 / Windows 95 / Windows 98 / Windows

NT 4.0

Q Caution

- The fax driver works in Windows NT 4.0 with Service Pack 3.0 or higher installed.
- You cannot use the fax function with later versions of Microsoft Windows.

CONNECTING TO THE PRINTER

Installing the External Fax Modem

A Caution

You have to purchase a gender changer to connect the RS-232C cable connected between the External Fax Modem and the serial interface on the printer as both connectors are female.

Follow the steps below to connect the External Fax Modem with your printer.

- 1. Turn on the printer.
- 2. Press the SEL switch on the control panel to set the printer off-line.
- 3. Press the SEL switch again while holding down the SHIFT switch. 'HIDDEN PANEL' is displayed on the LED.
- 4. Press the ▲ or ▼ switch until 'EXT. FAX MODEM' is displayed, then press the SET switch.
- 5. Select 'FAX MODEM=ON' by pressing the ▲ or ▼ switch. (Default setting is OFF.)



Q Caution

When setting "FAX MODEM=ON", the RS-232C (serial) interface is used only for the fax function. The printer cannot receive normal print data via the serial interface. If you want to use the RS-232C interface for sending print data, set "FAX MODEM=OFF".

- 6. Turn off the printer.
- 7. Connect the External Fax Modem to the printer referring to the figure below.

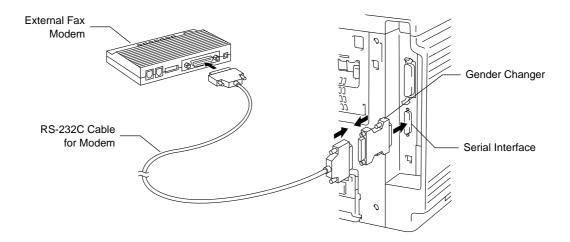


Fig. 1 External Fax Modem Connector

✓ Note:

For detailed setup procedure of the External Fax Modem, refer to the user's guide supplied with the External Fax Modem.

- 8. Turn on the External Fax Modem.
- 9. Turn on the printer.

Q Caution

Once installation is completed, be sure to turn on the External Fax Modem before turning on the printer so that the printer recognizes the modem.

Settings on the Control Panel

You can make some settings for the fax functions on the printer control panel as in the following steps;

- 1. Press the SEL switch to make the printer off-line.
- 2. Press the MODE switch to enter the Mode Menu. Then, 'INTERFACE MODE' is displayed first.
- 3. Press the \triangle or ∇ switch until 'ADVANCED MODE' is displayed.
- 4. Press the SET switch.
- 5. Press the ▲ or ▼ switch until 'FAX MODE' is displayed.
- 6. Press the SET switch.

✗ Note:

'FAX MODE' is not displayed when 'FAX MODEM=OFF' is selected in the 'HIDDEN PANEL' menu. Refer to the previous section, 'Installing the External Fax Modem'.

You can now make the following settings;

Menu	Descriptions		
RING DELAY	Number of rings before the printer answers when receiving fax data.		
	Select from 0 to 4. The factory default setting is 2.		
REDUCTION	Set if the received fax data is reduced for printing or not. AUTO: reduced automatically (factory default setting) OFF: not reduced automatically 90%: reduced to 90%		
FAX RAM SIZE	Set the RAM size used for the fax function. After turning the printer off and on the setting is active. The factory setting is 1MB. The maximum size that can be set is 15 MB, this depends on the memory size installed into the printer.		
RECEIVE	Select if the printer is to receive fax data or not. When the printer only sends Fax data, select this to OFF. ON: Receive fax data (factory default setting) OFF: Does not receive fax data		
INTERVAL	Set the interval to print a fax sent / received report. The factory setting is OFF. Select one of the following 7 types. OFF: No printing 6H: every 6 hours 12H: every 12 hours 24H: every 24 hours 2D: every 2 days 4D: every 4 days 7D: every 7 days		

USING THE FAX DRIVER

Installing the Fax Driver

Windows 3.1

- 1. Choose the RUN command from the FILE menu in the Program Manager.
- 2. Type A:\SETUP and press the ENTER key.

Windows 95 / Windows 98 / Windows NT 4.0

- 1. Click Start, and select Printers from the Settings menu.
- 2. Click the Add printer icon in the Printers folder.
- 3. Follow the instructions that appear on the screen. If you have already created a network share on your file server, specify the share name on your file server.



When installing the fax driver in Windows NT 4.0, be sure to install it as a "Local Printer" in Add Printer Wizard. You should select the network port after installing the fax driver if you want to use it as a network printer. If you install the fax driver as a "Network Printer", it will not work.

Receiving Fax Messages

When the printer power is on, the printer automatically receives fax data through the External Fax Modem and prints the data. The 'FAX RECEIVING' message appears while the printer is receiving data.

You can also make a setting on the control panel to not receive fax data. For details, refer to 'Settings on the Control Panel' in this manual.



When the 'FAX RECEIVING' message appears on the control panel, do not turn off the printer as this will result in the fax data not being completely received.

Sending a Fax Message

Windows 3.1

<Select the fax driver>

To select the fax driver from the Control Panel:


- 1. Choose and double-click the Printers icon in the Control Panel.
- 2. Select 'Brother FAX Share' from the list of the printer drivers installed onto your computer.

To select the fax driver from the application software:

- 1. Select Printer Setup or Page Setup in the File menu of the application software. (The setting dialog box appears after selecting Print in some application software.)
- 2. Change the printer driver to 'Brother FAX Share' in the setting dialog box.

<Send the fax message>

- 1. Select Print in the File menu of the application software.
- 2. The Print dialog box appears, press the OK button to show the FAX Sending dialog box.

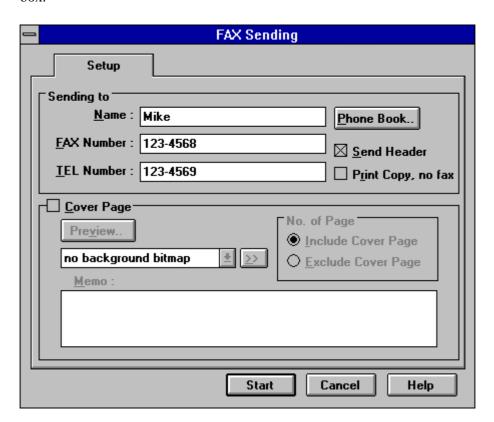

3. Enter the telephone number and other items as required and then press the Start button to send the fax data to the printer.

4. The printer sends the fax data through the External Fax Modem.

The 'FAX SENDING' message appears on the control panel while the printer is sending the fax data.

A Caution

When the 'FAX SENDING' message appears on the control panel, do not turn off the printer as this will result in the fax data not being completely sent.

Windows 95 / Windows 98 / Window NT 4.0

<Select the fax driver>

To select the driver from the Printer Folder:

- 1. Click Start, and select Printers from the Settings menu.
- 2. Select 'Brother FAX Share' from the list of the printer drivers installed onto your computer. Then, click the right mouse button and select Set As Default.

To select the driver from the application software,

- 1. Select Printer Setup or Page Setup in the File menu. (The setting dialog box appears after selecting Print in some application software.)
- 2. Change the printer driver to 'Brother FAX Share' in the setting dialog box.

<Send the fax message>

- 1. Select Print in the File menu of the application software.
- 2. The Print dialog box appears. Press the OK button to show the FAX Sending dialog box.
- 3. Enter the telephone number and other items as required and then press the Start button to send the fax data to the printer.
- 4. The printer sends the fax data through the External Fax Modem.
 - The 'FAX SENDING' message appears on the control panel while the printer is sending the fax data.



Q Caution

When the 'FAX SENDING' message appears on the control panel, do not turn off the printer as this will result in the fax data not being completely sent.

OTHER FUNCTIONS

Report Print

The printer automatically prints the sent / received report when the selected interval has passed. The printing intervals can be specified with the INTERVAL menu on the control panel. Refer to 'Settings on the Control Panel' on Page 6 to make the interval setting.

When you want to print a report on the current sending / receiving status, carry out the following operations on the control panel;

- 1. Press the SEL switch to make the printer off-line.
- 2. Press the TEST switch while holding down the SHIFT switch, 'DEMO PAGE' is displayed.
- 3. Press the ▲ or ▼ switch until 'PRINT FAX LOG' is displayed.
- 4. Press the SET switch. The printer prints the sent / received report.

✗ Note:

- The date and time on the sent / received report are changed when the first fax data is sent after turning on the printer.
- If there is no sending / receiving log, 'PRINT FAX LOG' is not displayed on the control panel. The sending / receiving log disappears when the printer is turned off. (The printer memorizes the last 30 logs.)

Sharing the Fax Function on a Network

When the printer is shared on a network, the fax function can be also shared. Select the same printer as the one which is used as the network printer.

<Windows 95 / Windows 98 / Windows NT 4.0 Peer to Peer>


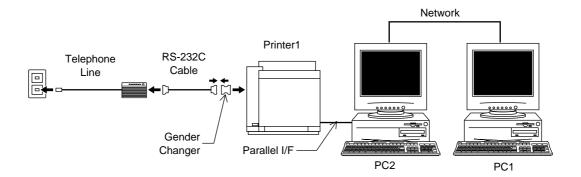


Fig. 2 Windows 95 / Windows 98 / Windows NT 4.0 Peer to Peer Sample

The printer with the External Fax Modem installed is connected to PC2 as shown in the above figure.

In order to send the fax data from PC1 to Printer1, set 'Print to the following port' in the Properties of Brother FAX Share '\\PC2\\Printer1' in the Printer folder on PC1. (Refer to the illustration below for Windows 95.)

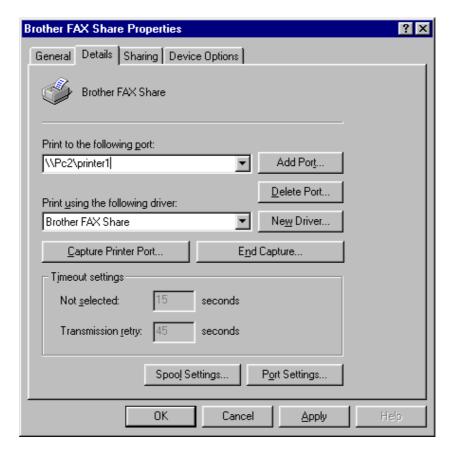

<Sharing on a file server>


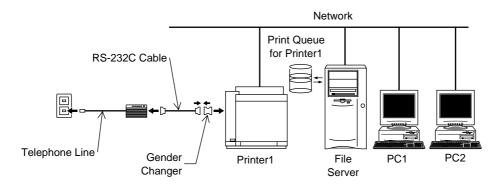


Fig. 3 Sharing on a File Server

If your printer is connected to a network through a parallel share, or via a print server connected directly to the network cable, it is possible to send faxes from each client PC directly to the printer.

For example: Printer1 has the External Fax Modem installed and is connected to the file server through the network as shown above. The print queue for Printer1 is set on the file server.

In order to send fax data from PC1 or PC2 to the External Fax Modem in Printer1, set 'Print to the following port' in the Properties of Brother FAX Share to the queue name of the shared printer on the network, e.g. '\\NWserver\\Printer1' in the Printers folder of PC1 or PC2. (Refer to the illustration below for Windows 95/98.)

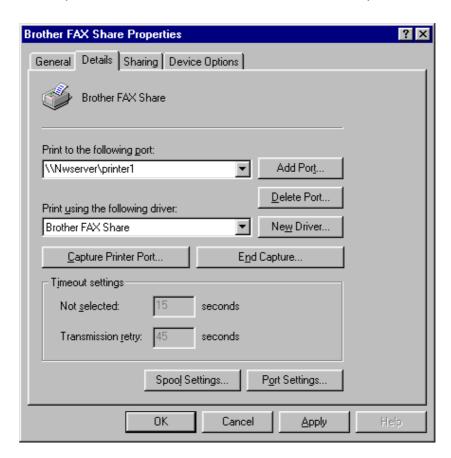

TROUBLESHOOTING

Messages on the Control Panel

Status Display

Error Message	Meaning
FAX SENDING	The printer is sending the fax data.
FAX RECEIVING	The printer is receiving the fax data.
	'MC' shows that the printer is in the fax mode. (MC = Modem Control)

Error Messages

If a problem occurs during use of the fax function, the following message appears;

Error Message	Meaning	Action
LANGUAGE	the External Fax Modem	Turn off and on the printer. Set 'FAX MODEM=ON' on the printer control panel.

Error Print

If one of the following errors occurs during use of the fax function, the printer prints out an error message on paper. In order to recover from the error, follow the instructions printed on the paper.

- Sending memory full
- Receiving memory full
- Other memory full
- Transmission error

Q & A

This section contains questions and answers for using the fax function with your printer.

Question	Recommendation		
The date or time of the sent / received report is not	The clock of the printer is adjusted when sending the fax data.		
correct.	If the printer is turned off and on, the clock of the printer is reset to the default value (01/01/1997 00:00).		
'FAX MODE' is not displayed on the control panel.	Enter the 'HIDDEN PANEL' menu by pressing the SHIFT and SEL switches. Then, select 'FAX MODEM=ON' in the 'EXT. FAX MODEM' menu.		
I cannot send any fax data although the data is sent	Check that the correct dial type is set. If not, set the correct dial type in Fax Line Setup of the fax driver.		
from the computer to the printer.	• Check if the outside line access code is set correctly. If not, set it correctly in Outside Line Access Code in FAX Line Setup of the fax driver.		
	Check if the telephone line is connected correctly.		
	Check if the External Fax Modem is turned on.		
	Check if the printer and the External Fax Modem are connected correctly.		
	Check that you turned on the External Fax Modem before turning on the printer.		
Fax data is not sent from the computer to the printer,	 Check if the printer port (LPT1 / LPT2 or the network printer) is correct. 		
and I cannot send any fax data.	Check if the printer cable is connected correctly.		
uata.	• Check if the network cable is connected correctly to the network card of the printer.		
I cannot receive fax data.	Check if the telephone line is connected correctly.		
	• Check if 'RECEIVE MODE=ON' is selected on the control panel. Refer to the 'Settings on the Control Panel' section.		
	Check if the External Fax Modem is turned on.		
	Check if the printer and the External Fax Modem are connected correctly.		
	Check that you turned on the External Fax Modem before turning on the printer.		

LASER PRINTER

PARTS REFERENCE LIST

NOTE FOR USING THIS PARTS REFERENCE LIST

- 1. In the case of ordering parts, it needs mentioning the following items:
 - (1) Code
 - (2) Q'ty
 - (3) Description
 - (4) Symbol (PCB No., Revision, and Parts location mounted on the PCB.)

Note: No orders without Parts Code or Tool No. can be accepted.

< Example >

	(1)	(2)	(3)	(4)	
REF.NO.	CODE	Q'TY	DESCRIPTION	SYMBOL	REMARK

Revision No.: marked on the printed circuit board.



2. Design-changed parts:

If the parts are changed, any one of the following symbols is indicated in the REMARKS column.

#A: compatible between old and new

#B: replaceable from old to new

#D: incompatible


: newly established

- 3. The original of this list was made based on the information available in November, 1997.
- 4. Parts are subject to change in design without prior notice.

CONTENTS


1.	POWER CORDS & HARNESSES	1
2.	PAPER FEEDER PCB	1
3.	CONTROL PANEL	3
4.	PCB ATTACHMENTS	3
5.	MAIN PCB.	5
6.	HIGH-VOLTAGE POWER SUPPLY	7
7.	LOW-VOLTAGE POWER SUPPLY	7
8.	COVERS	9
9.	CHASSIS	9
10.	TRANSFER	.11
11.	PAPER TRAY	.11
12.	PAPER FEEDER	.13
13.	SCANNER	. 15
14.	FIXING UNIT, 120V/230V	. 15
15.	DOCUMENTS	. 17
16.	PACKING MATERIALS	. 19
17.	OPTIONAL PARTS SET	. 19
18	AD JUSTING TOOL KIT	21

1 . POWER CORDS & HARNESSES

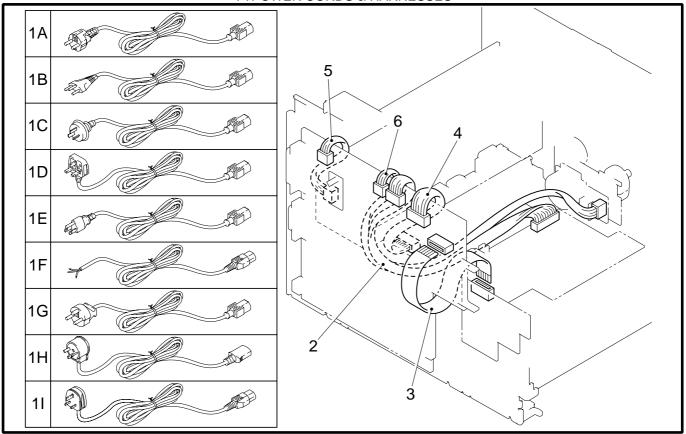

MODEL HL-1660e 54T-U03-050/070

2 . PAPER FEEDER PCB

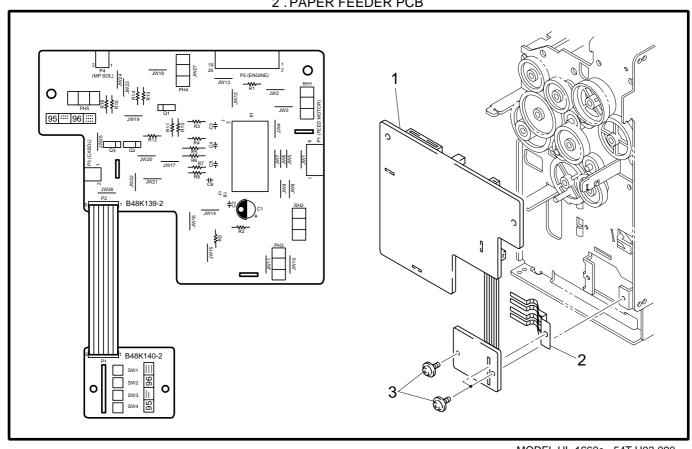

MODEL HL-1660e 54T-U03-090

1. POWER CORDS & HARNESSES

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1A	UH1052001	1	AC CORD, VDE	
1B	UH1053001	1	AC CORD, SEV	
1C	UH1055001	1	AC CORD, SAA	
1D	UH1054001	1	AC CORD, BS	
1E	UH1051001	1	AC CORD, UL/CSA	
1F	U34320001	1	AC CORD #4, BS WO/PLUG	
1G	UK4094001	1	AC CORD #5, DEMKO	
1H	U34322001		AC CORD #6, ISRAEL	
11	U34342001	1	AC CORD #8, BS/SINGAPORE	
2	UK2502001	1	HV HARNESS 16P	
3	UK2505000		FEED FLAT CABLE 20P	
4	UK2506001	1	LV HARNESS 8P	
5	UK2507001	1	FUSER HARNESS 4P	
6	UK2508001	1	DC MOTOR HARNESS 4P	

MODEL HL-1660e 54T-U03-050/070


T/I NO. PR98046

2. PAPER FEEDER PCB


	K FEEDER PUI				
REF.NO.		Q'TY		SYMBOL	REMARK
1	UK2701001	1	P FEED/SIZE-SW PCB ASSY (SP)	B48K139/140- 200B/200B	
2	UH2410000		SIZE SWITCH SPRING		
3	087320616	2	TAPTITE, CUP S M3X6		

MODEL HL-1660e 54T-U03-090

3 . CONTROL PANEL

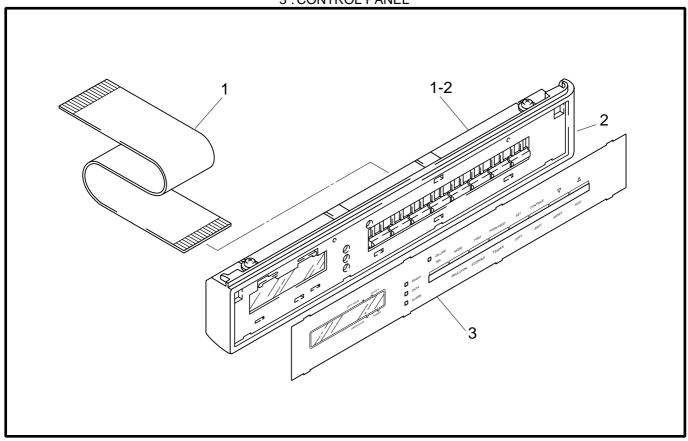

MODEL HL-1660e 54T-U03-150

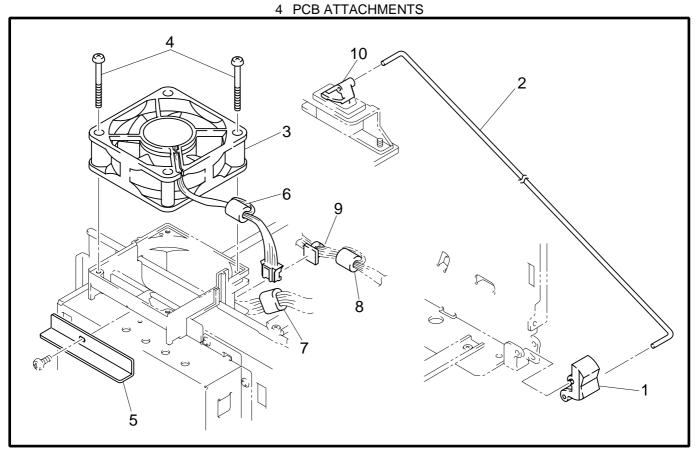

MODEL HL-1660e 54T-U03-450

3. CONTROL PANEL

REF.NO.	CODE	Q'TY	DESCRIPTION	SYMBOL	REMARK
1-2	UK3024001	1	()	(B48K143-200B)	
1	UK2500000	1	SWITCH FLAT CABLE 21P		
2	UH2011001		PANEL STOPPER, GRAY1227		
3	UH1451001	1	PANEL SHEET, HL-1660e		


MODEL HL-1660e 54T-U03-150

4. PCB ATTACHMENTS

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UH2121001	1	REMOTE SWITCH	
2	UH2122000	1	PS SWITCH WIRE	
3	UH2124001	1	DC FAN MOTOR	
4	083313515	2	TAPTITE, PAN B M3X35	
5	UH2144001	1		
6	UK2826001	1	CORE:RI-12-15-8.5	
7	UK3213000	1	CORE:FPC-16-12	
8	UK3214000	1	CORE:ZCAT1518	
9	UK3215000	1	CABLE CLAMP	
10	UH2123001	1	SWITCH ATTACHMENT	

MODEL HL-1660e 54T-U03-450

5 . MAIN PCB

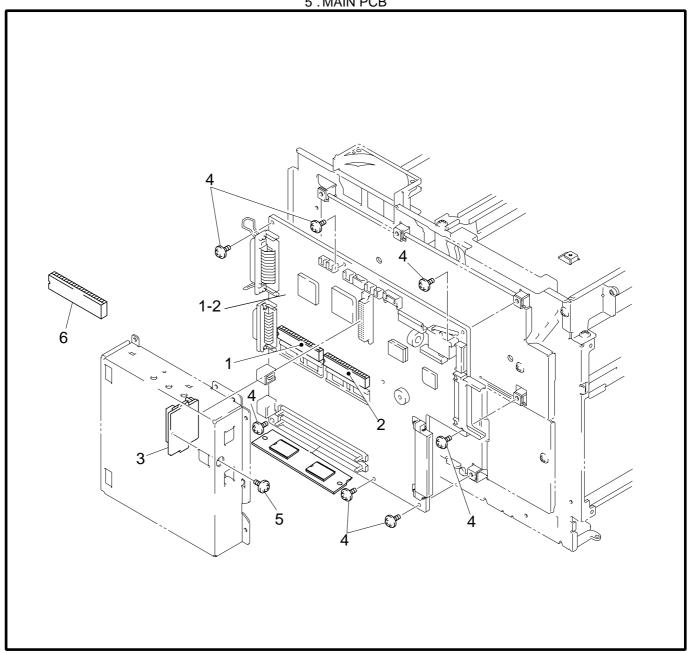

MODEL HL-1660e 54T-U03-103


5. MAIN PCB

REF.NO.	CODE	Q'TY	DESCRIPTION	SYMBOL	REMARK
1-2	UK3799001		MAIN PCB ASSY (SP), HL1660e	B48K294-100E	_
1	UK4280000	1	MROM23C32000-01	#26	
2	UK4281000	1	MROM23C32000-02	#14	
3	UK3785001	1	MIO CONNECTOR PCB ASSY	B48K295-100	
4	087320616	7	TAPTITE, CUP S M3X6		
5	087320616	1	TAPTITE, CUP S M3X6		
6	UK2466000	1	EPROM:27C8000DZ(BLANK EPROM)(SP)	(#1)	

MODEL HL-1660e 54T-U03-103


T/I NO. PR98017 / PR98055 / PR98278

6 . HIGH-VOLTAGE POWER SUPPLY

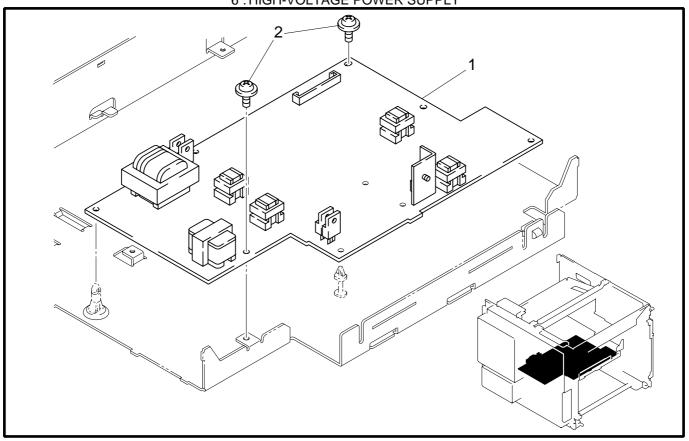

MODEL HL-1660e 54T-U03-200

7 . LOW-VOLTAGE POWER SUPPLY

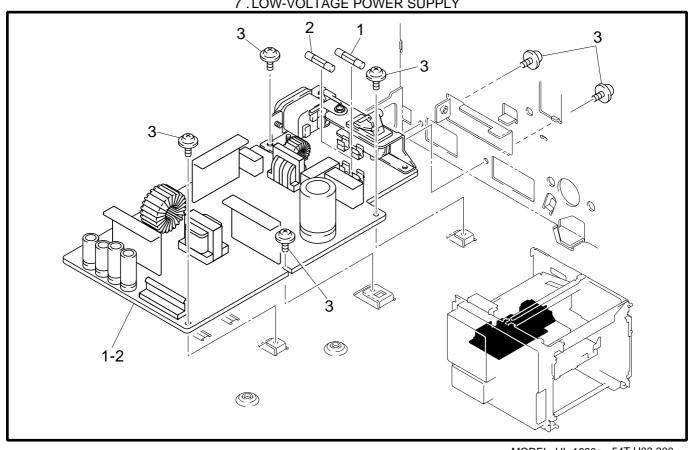

MODEL HL-1660e 54T-U03-300

6. HIGH-VOLTAGE POWER SUPPLY

REF.NO.	CODE	Q'TY	DESCRIPTION	SYMBOL	REMARK
1	UK2702001		HIGH-VOLTAGE PS PCB ASSY (SP)	B48K186-300E	
2	087320616	2	TAPTITE, CUP S M3X6		


MODEL HL-1660e 54T-U03-200

7. LOW-VOLTAGE POWER SUPPLY

REF.NO.	CODE	Q'TY	DESCRIPTION	SYMBOL	REMARK
1-2	UK2753001	1	LOW-VOLT PS PCB ASSY, 115VM(SP)		
1-2	UK2754001	1	LOW-VOLT PS PCB ASSY, 230VM(SP)		
1	UK2756001	1	GLASS FUSE, 10A-125VM (PS PCB 115VM) (SP)	F1	
1	UK2759001	1	GLASS FUSE, 6A-250VM (PS PCB 230VM) (SP)	F1	
2	UK2757001	1	GLASS FUSE, 5A-125VM (PS PCB 115VM) (SP)	F2	
2	UK2760001	1	GLASS FUSE, 3A-250VM (PS PCB 230VM) (SP)	F2	
3	UH2036001	6	TAPTITE, PAN S M3X8		


MODEL HL-1660e 54T-U03-300

8.COVERS

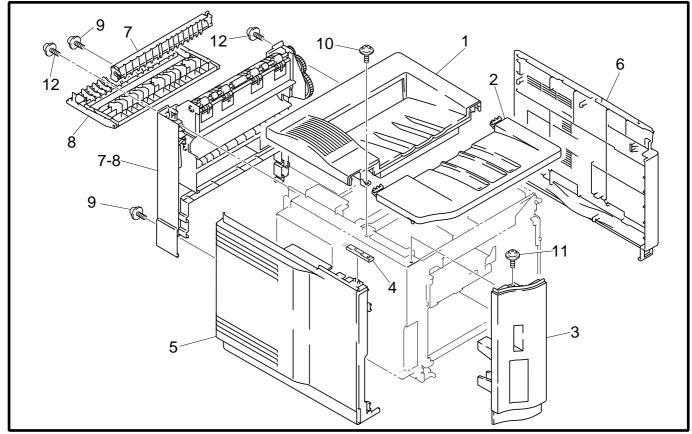

MODEL HL-1660e 54T-U03-400

9.CHASSIS

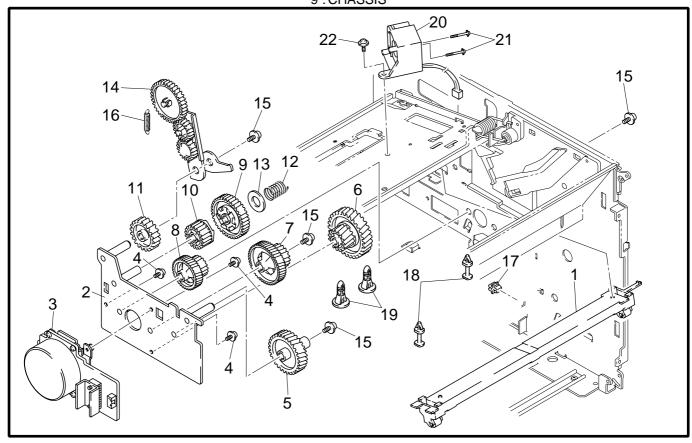

MODEL HL-1660e 54T-U03-500

8. COVERS

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UH2065001	1	UPPER COVER ASSY, GRAY1227	
2	UH2071001	1	TONER CARTRIDGE LID, GRAY1227	
3	UH2072001	1	FONT COVER ASSY, GRAY1227	
4	UH2076001	1	CLEANER BRUSH	
5	UH2077001	1	SIDE COVER L, GRAY1227	
6	UH2027001	1	SIDE COVER R2 ASSY, GRAY1227	
7-8	UH2082001	1	REAR COVER ASSY, GRAY1227	
7-8	UH2104001	1	REAR COVER ASSY, GRAY 1227(TMT-17))
7	UH2085001	1	CHANGEOVER GUIDE, GRAY1227	
8	UH2103001		JAM REMOVE COVER, GRAY1227	
9	087320616		TAPTITE, CUP S M3X6	
10	087320616		TAPTITE, CUP S M3X6	
11	087320616		TAPTITE, CUP S M3X6	
12	087321016	2	TAPTITE, CUP S M3X10	

MODEL HL-1660e 54T-U03-400


T/I NO. PR98175

9. CHASSIS

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UH2229001	1	CARTRIDGE STOPPER ASSY	
2	UH2233001	1	DC GEAR HOLDER ASSY	
3	UH2814001	1	DC MOTOR ASSY 2 (SP)	
4	087320616	3	TAPTITE, CUP S M3X6	
5	UH2238000	1	GEAR 39	
6	UH2239000	1	GEAR 20/50	
7	UH2240000	1	GEAR 24/72	
8	UH2241000	1	GEAR 22/55	
9	UH2242000	1	GEAR 48	
10	UH2243000	1	GEAR 21	
11	UH2244000	1	GEAR 28	
12	UH2245001	1	GEAR 48 SPRING	
13	026100136	1	WASHER, PLAIN S 10	
14	UH2255001	1	PAPER DELIVERY GEAR ASSY	
15	U74234001	4	TAPTITE, CUP M4X5	
16	UH2250001	1	PAPER DELIVERY HOLDER SPRING	
17	UH2252000	1	SPACER 2	
18	UH2254000	2	SPACER 1	
19	T31242001	2	PCB SPACER F	
20	UH2263001	1	SCANNER FAN MOTOR	
21	083313015	2	TAPTITE, PAN B M3X30	
22	087320616	1	TAPTITE, CUP S M3X6	
<u> </u>		1		MODEL HL-1660e 54T-U03-500


MODEL HL-1660e 54T-U03-500

10 .TRANSFER

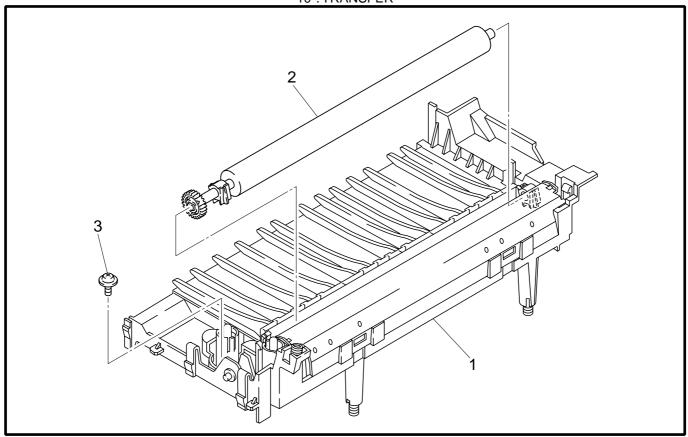

MODEL HL-1660e 54T-U03-600

11 . PAPER TRAY

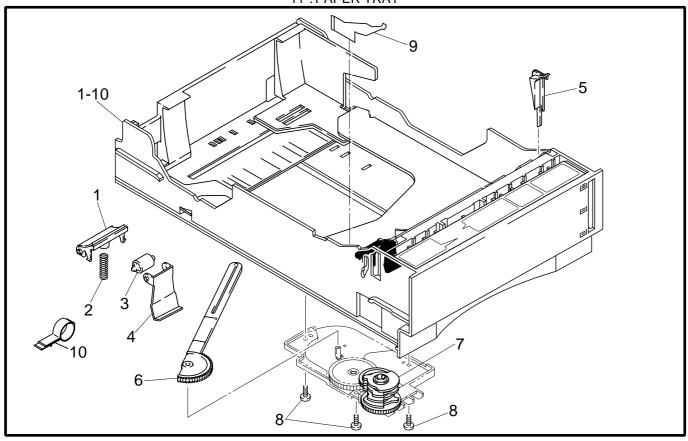

MODEL HL-1660e 54T-U03-650/651

10. TRANSFER

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UH2787001	1	TRANSFER BASE ASSY (SP)	
2	UH1834001	1	TRANFER ROLLER A ASSY (SP)	
3	087321016	1	TAPTITE, CUP S M3X10	


MODEL HL-1660e 54T-U03-600

T/I NO. PR98174

11. PAPER TRAY

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1-10	UH2806001	4 1	PAPER TRAY UNIT SO, USA (SP) GRAY1227	INLIVIAINI
1-10	UH2799001		PAPER TRAY UNIT S, EUR (SP) GRAY1227	
1-10	UH2802001		PAPER TRAY UNIT S, CAN (SP) GRAY1227	
1	UH2487001	;	SEPARATION PAD ASSY T	
2	UH2841001		SEPARATION PAD SPRING 200	
2	UH2360000		ROLLER	
4	UH2459000		ROLLER HOLDER	
5	UH2469000		PAPER FRONT GUIDE, BLUE6155	
6	UH2463001		,	
7	UH2465001	Ιi	SIZE DRUM	
8	085310815	3	TAPTITE, BIND B M3X8	
9	UH2472001		TRAY GUIDE PLATE 1	
10	UH2804001	1	ADJUST KNOB STOPPER	

MODEL HL-1660e 54T-U03-650/651

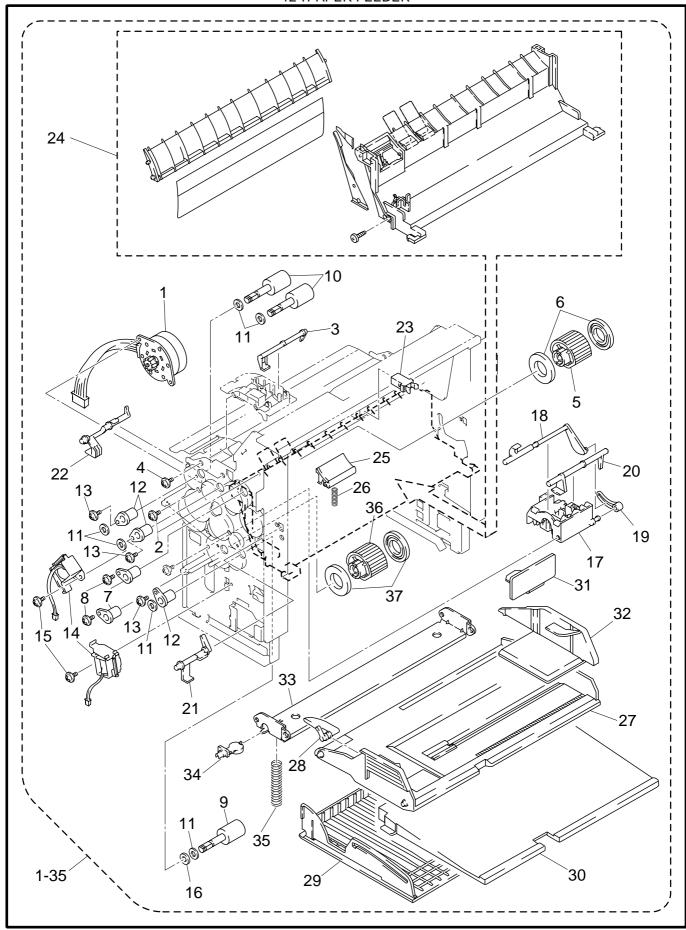


T/I No. PR98202 MODEL HL-1660e 54T-U03-630

12. PAPER FEEDER


	ER FEEDER			
REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1-35	UH2824001	1	PAPER FEED CHASSIS UNIT 2 (SP)	
			(WITH PCB/SW SPRING/SCREW)	
1	UH2357001	1	PAPER FEED MOTOR ASSY	
2	087320616	2	TAPTITE, CUP S M3X6	
3	UH2359000	1	MP PAPER DETECTION ACTUATOR	
4	085310815	2	TAPTITE, BIND B M3X8	
5	UH2362001		PAPER PICK-UP ROLLER ASSY	
6	UH2364001		PAPER PICK-UP ROLLER COLLAR	
7	UH2366000		BEARING	
8	085320616		TAPTITE, BIND S M3X6	
9	UH2416001		PAPER FEED ROLLER ASSY 60	
10	UH2367001		PAPER FEED ROLLER ASSY 70	
11	UL0633000		WASHER, PLAIN	
12	UH2366000		BEARING	
13	085320616		TAPTITE, BIND S M3X6	
14	UH2369001		PAPER PICK-UP SOLENOID	
15	085320416		TAPTITE, BIND S M3X4	
16	UH2428000			
17	UH2379000		BEARING CALLOR TRAY SENSOR HOLDER	
18				
	UH2380000		PE SENSOR ACTUATOR TRAY	
19	UH2381000		PE ACTUATOR LINK	
20	UH2382000		DU DETECTION ACTUATOR	
21	UH2383000		PE SENSOR ACTUATOR MP	
22	UH2384000		REGIST SENSOR ACTUATOR	
23	UH2136001		LATCH	
24	UH2797000		MP PAPER FEED GUIDE ASSY (SP)	
25	UH2393001		SEPARATION PAD ASSY	
26	UH2433001		SEPARATION PAD SPRING MP	
27	UH2397001		MP TRAY ASSY	
28	UH2400000		MP PE SUB ACTUATOR	
29	UH2406000		MP TRAY COVER	
30	UH2407000		MP EXTENSION TRAY	
31	UH2823001		SPACER	
32	UH2401000		MP PAPER GUIDE	
33	UH2402000		MP RELEASE PLATE	
34	UH2403000	1	MP RELEASE SUPPORTER	
35	UH2404000	1	MP SPRING	
36	UH2821001	1	PAPER PICK-UP ROLLER ASSY 3	
37	UH2822001	2	PAPER PICK-UP ROLLER COLLAR 30	
Ĩ				
]		

13 . SCANNER

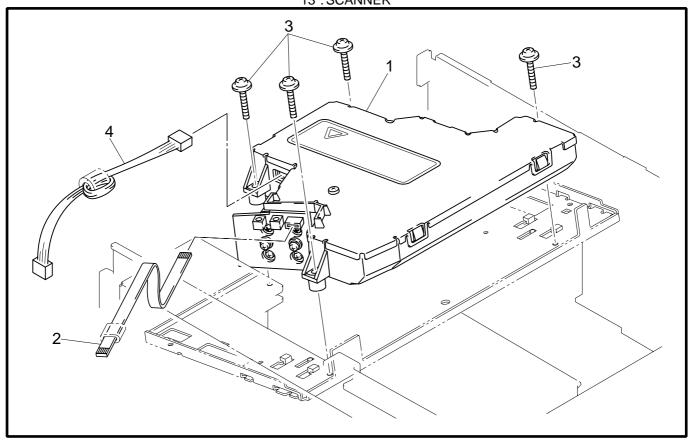

MODEL HL-1660e 54T-U03-700

14 . FIXING UNIT, 120V/230V

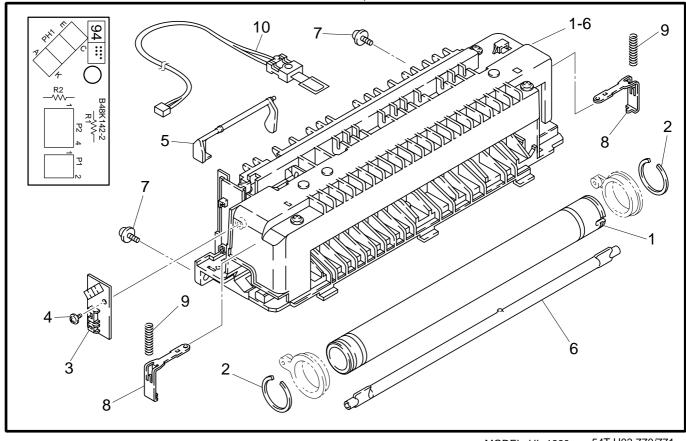

T/I NO. PR98054, PR98061

13. SCANNER


REF.NO.		Q'TY	DESCRIPTION	REMARK
1	UH2815001		SCANNER UNIT ASSY C (SP)	
2	UK2503000		SCN FLAT CABLE 6P	
3	087321616		TAPTITE, CUP S M3X16	
4	UK3254001	1	POLYGON HARNESS 5P	
	ı			
	ı			
	İ			
	ı			
	ı			
	İ			
	ı			
	ı			
	ı			
	İ			
	ı			
	ı			
	ı			
	ı			
	İ			
	ı			
	ı			
	ı			
	ı			
	ı			

MODEL HL-1660e 54T-U03-700

14. FIXING UNIT, 120V/230V

REF.NO.	CODE	Q'TY	DESCRIPTION	SYMBOL	REMARK
1-6	UH2816001	1	FIXING UNIT, 120V C (SP)		
1-6	UH2817001	1	FIXING UNIT, 230V C (SP)		
1	UH2793001		HEAT ROLLER (SP)		
2	UH2608001	2	RETAINING RING, 25		
3	UK2451001		FIXING PCB ASSY	B48K142-200	
4	085310815		TAPTITE, BIND B M3X8		
5	UH2623001		PAPER DELIVERY ACTUATOR		
6	UH2794001		HALOGEN HEATER, 120V (SP)		
6	UH2795001		HALOGEN HEATER, 230V (SP)		
7	087421015		TAPTITE, CUP S M4X10		
8	UH2645001		HEATER SUPPORT SPRING S		
9	UH2646001	_	HEATER PRESS SPRING		
10	UH2628001	1	THERMISTOR ASSY PT7		
				TI UL 1660a 54T	

MODEL HL-1660e 54T-U03-770/771

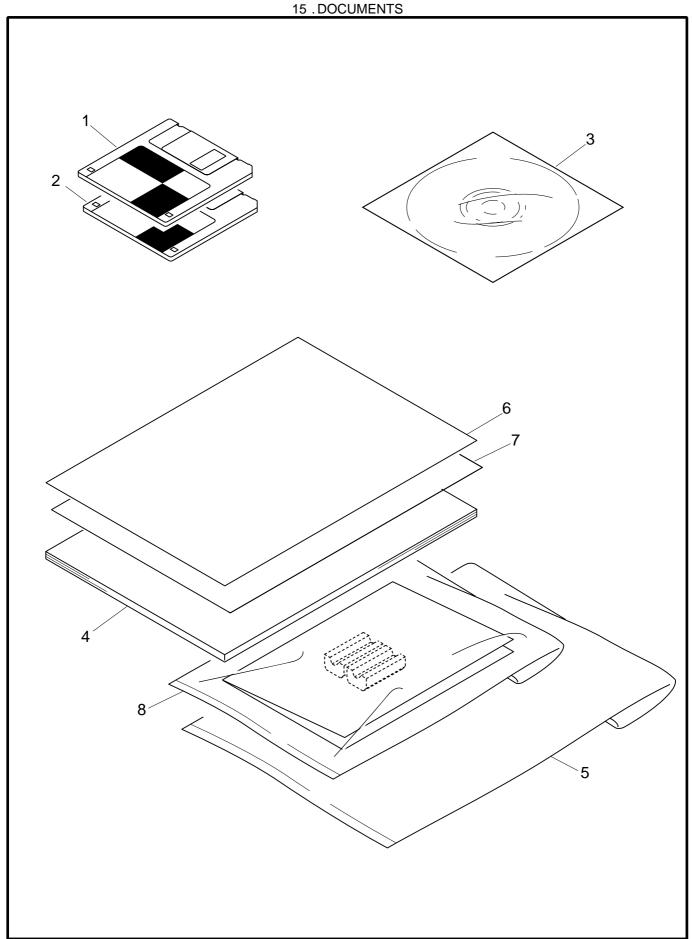


15. DOCUMENTS

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UK3811001	1	PR DRIVER DISK #1, HL-1660e(FIRST PART 1/2)	
1	UK4335001	1	PR DRIVER DISK #3, HL-1660e SPA (1/2)	
2	UK3813001	1	PR DRIVER DISK #2, HL-1660e (LATTER PART 2/2)	
2	UK4337001	1	PR DRIVER DISK #4, HL-1660e SPA (2/2)	
3	UK4329001	1	CD-ROM ASSY (HL-1070/1660E/2060)	VER. C
4	UH1413001		USER'S MANUAL, ENG (HL-1660e)	
4	UH1414001	1	USER'S MANUAL, GER (HL-1660e)	
4	UH1415001	1	USER'S MANUAL, FRA (HL-1660e)	
4	UH1416001	1	USER'S MANUAL, DUTCH (HL-1660e)	
4	UH1417001		USER'S MANUAL, NOR (HL-1660e)	
4	UH1418001		USER'S MANUAL, ITA (HL-1660e)	
4	UH2754001		USER'S MANUAL, SPA (HL-1660é)	
5	UE0331001		BAG, 215X350H (ÚSER'S MANUAĹ)	
6	UH1437001		USB INSERTION SHEET	
7	UH1425001		SIMM INSERTION SHEET, ENG (HL1660e)	
7	UH1426001		SIMM INSERTION SHEET, GER (HL1660e)	
7	UH1427001		SIMM INSERTION SHEET, FRA (HL1660e)	
7	UH1428001		SIMM INSERTION SHEET, DUTCH (HL1660e)	
7	UH1429001		SIMM INSERTION SHEET, NOR (HL1660e)	
7	UH1430001		SIMM INSERTION SHEET, ITA (HL1660e)	
8	UK3741001	1	CORE ESD-SR-25 ASSY (For USB)	
			(1 1 1)	

MODEL HL-1660e 54T-U03-920


T/I NO. PR98072 / PR98203 / PR98204 / PR98209 / PR98263 / PR98269 / PR98274 / PR98279 / PR98280 / PR98293 / PR98310 / PR98316

16 . PACKING MATERIALS

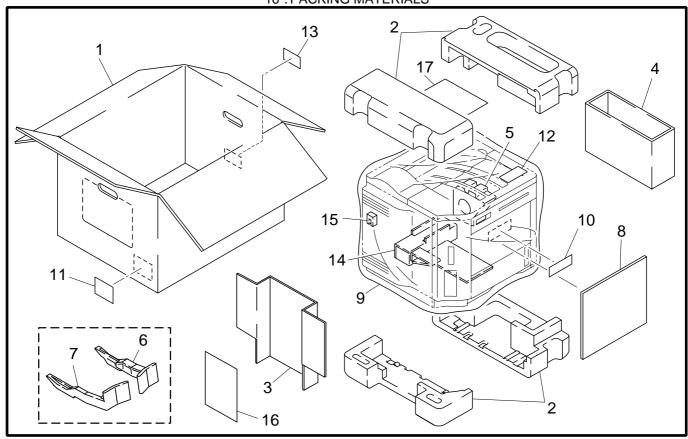

MODEL HL-1660e 54T-U03-930

17 . OPTIONAL PARTS SET

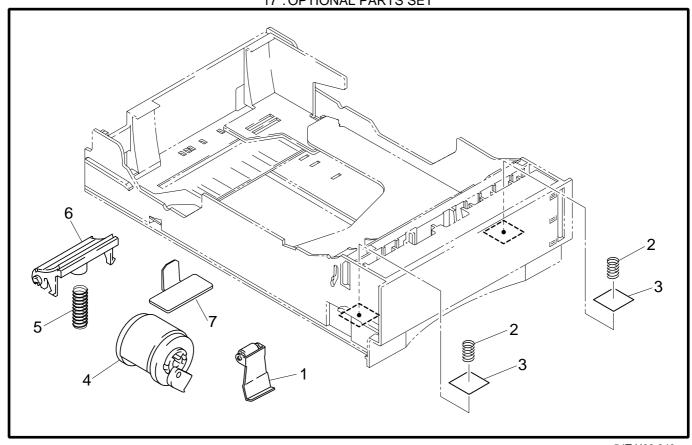

MODEL HL-1660e 54T-U03-940

16. PACKING MATERIALS


REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UE0367000	1	CARTON, C-NO BRAND	
1	UE0637001	1	CARTON, C-USA H	
1	UE0638001	1	CARTON, C-EUR H	
2	UE0370000	1	STYROFOAM PAD ASSY	
3	UE0373000	_	PAD	
4	UE0374000	1	CARTON, TNR CARTRIDGE (W/EP-ED)	
4	UE0476000	1	5, ii (1 5) (1 1 1 1 5)	
5	UE0376000	1	STYROFOAM PAD (PLATE HOLDER)	
6	UH2735001	1	RELEASE SPACER R	
7	UH2736001		RELEASE SPACER L	
8	UE0396000		PAD (CONTROL PANEL)	
9	UE0477000		BAG, 900X800 (BODY)	
9	U63969000		BAG, 900X800 BS W/HOLE (BODY)	
10	U62092001		CAUTION LABEL 24, US	
10	163528001		CAUTION LABEL, BS	
11	U04510001		IMPORTER LABEL, CAN	
12	X60267002		RECYCLE LABEL, DEU/FRA	
13	UH1440001		BAR CODE LABEL, 525110 UPC USA	
13	UH1441001		BAR CODE LABEL, 526371 EAN EUR	
13	UH1442001		BAR CODE LABEL, 525127 UPC USA (GENERIC)	
14	UE0405000		PAD (LETTER SIZE TRAY)	
14	UE0406000		PAD (A4 SIZE TRAY)	
15	UE0425001		POSITION FIXING SPONGE	
16	UH2741001		INSERTION SHEET	
17	UH3373001		NO RTN FORM, USA	
17	UH3295001	1	RNT FORM, CAN	
				UL 1660° EAT 1103 030

MODEL HL-1660e 54T-U03-930

17. OPTIONAL PARTS SET

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UH2499001	1	ROLLER HOLDER SO ASSY (SP)	
2	UH2498001		TRAY PUSH SPRING ELT (SP)	
3	UH2477000		TRAY PUSH SPRING FILM ELT (SP)	
4	UH2820001		PAPER PICK-UP ROLLER UNIT 2 (SP)	
5	UH1778000	1	SEPARATION PAD SPRING DX (SP)	
6	UH1772001	1	SEPARATION PAD DX ASSY (SP)	
7	UH2823001	1	SPACER	

MODEL HL-1660e 54T-U03-940

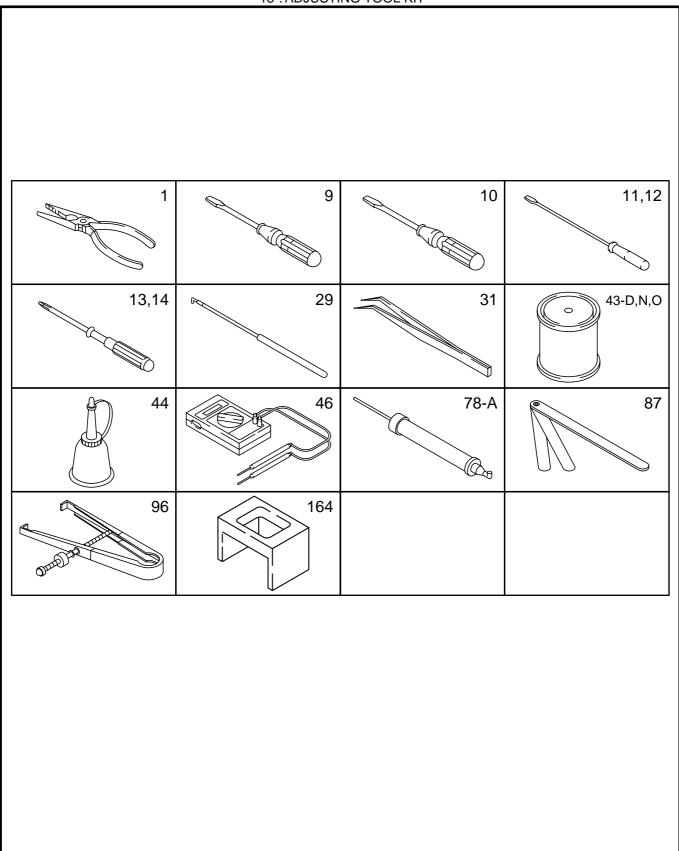

MODEL HL-1660e 54T-U03-99A

18. ADJUSTING TOOL KIT

18. ADJUSTING TOOL K	TOOL NAME	REMARK
ZX-1	PLIERS (150MM)	
ZX-9	SCREWDRIVER (75MM)	
ZX-10	SCREWDRIVER (70MM)	
ZX-11	SCREWDRIVER (4.7X270MM)	
ZX-12	SCREWDRIVER, (6.2X200MM)	
ZX-13	SCREWDRIVER, PHILLIPS (NO-1)	
ZX-14	SCREWDRIVER, PHILLIPS (NO-2)	
ZX-29	HOOK FOR SPRING	
ZX-31	TWEEZERS (150MM)	
ZX-43D	LUBRICATING GREASE(SILICON G,KS64F 0.1KG)	
ZX-43N	LUBRICATING GREASE(MOLYKOTE EM-30L TKC-0) 1KG	
ZX-430	LUBRICATING GREASE(MOLYKOTE D110) 1KG	
ZX-44	OILER	
ZX-46	TESTER (MD-200C)	
ZX-78A	BAR TENSION GAUGE (0.1-5KG)	
ZX-87	THICKNESS GAUGE (0.28-0.38MM)	
ZX-96	IC PULL OUT (P42)	
ZX-164	PF UNIT SETTING JIG	

13. SCANNER PR99073


REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UH2815001		SCANNER UNIT ASSY C (SP)	
2	UK2503000		SCN FLAT CABLE 6P	
3	087321616		TAPTITE, CUP S M3X16	
4	UK3254001	1	POLYGON HARNESS 5P	
				MODEL III 4000 547 1100 700

MODEL HL-1660e 54T-U03-700

14. FIXING UNIT, 120V/230V


REF.NO.	ĆODE	Q'TY	DESCRIPTION	SYMBOL	REMARK
1-6	LJ0008001	1	FIXING UNIT, 120V T (SP)		CHNG
1-6	LJ0009001	1	FIXING UNIT, 230V T (SP)		CHNG
1	LJ0010001	1	HEAT ROLLER T (SP)		CHNG
2	UH2608001		RETAINING RING, 25		
3	UK2451001		FIXING PCB ASSY	B48K142-200	
4	085310815		TAPTITE, BIND B M3X8		
5	UH2623001		PAPER DELIVERY ACTUATOR		
6	UH2794001		HALOGEN HEATER, 120V (SP)		
6	UH2795001		HALOGEN HEATER, 230V (SP)		
7	087421015		TAPTITE, CUP S M4X10		
8	UH2645001		HEATER SUPPORT SPRING S		
9	UH2646001	_	HEATER PRESS SPRING		
10	UH2628001	1	THERMISTOR ASSY PT7		
				ODEL HL-1660e 5	

T/I NO. PR98054, PR98061, PR99073

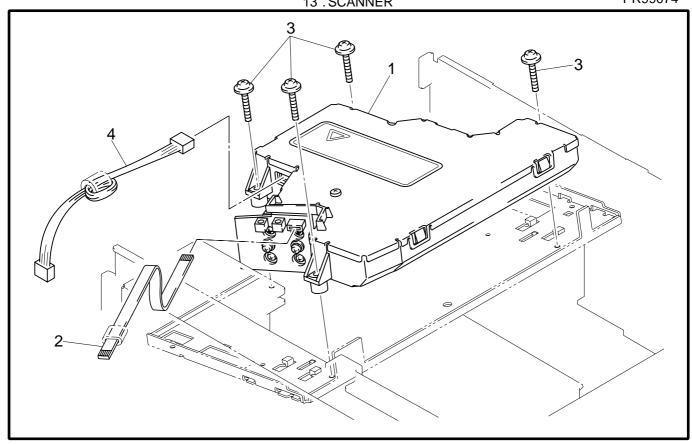

54T-U03-700 MODEL HL-1660e

14 . FIXING UNIT, 120V/230V

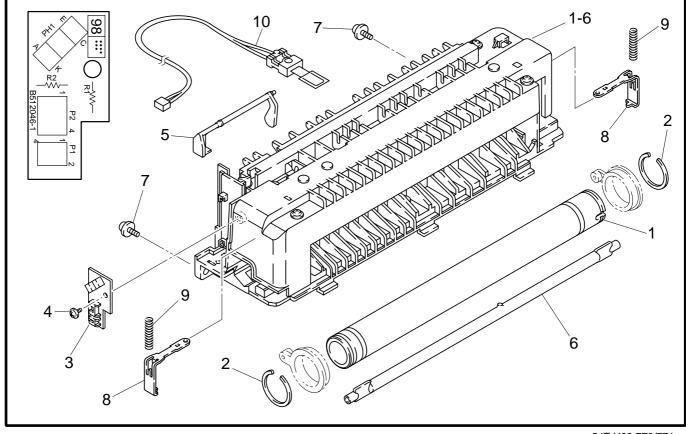

T/I NO. PR98054, PR98061, PR99074

13. SCANNER PR99074


REF.NO.		Q'TY		REMARK
1	UH2815001		SCANNER UNIT ASSY C (SP)	
2	UK2503000		SCN FLAT CABLE 6P	
3	087321616		TAPTITE, CUP S M3X16	
4	UK3254001	1	POLYGON HARNESS 5P	
		1		MODEL III. 40000 E4T 1102 700

MODEL HL-1660e 54T-U03-700

14. FIXING UNIT, 120V/230V

REF.NO.	CODE	Q'TY	DESCRIPTION	SYMBOL	REMARK	
1-6	LJ0008001		FIXING UNIT, 120V T (SP)	5 : .		
1-6	LJ0009001		FIXING UNIT, 230V T (SP)			
1	LJ0010001		HEAT ROLLER T (SP)			
2	UH2608001		RETAINING RING, 25			
3	LJ8007001		FIXING PCB ASSY	B512046-1	CHNG	
4	085310815	1	TAPTITE, BIND B M3X8			
5	UH2623001	1	PAPER DELIVERY ACTUATOR			
6	UH2794001	1	HALOGEN HEATER, 120V (SP)			
6	UH2795001		HALOGEN HEATER, 230V (SP)			
7	087421015	2	TAPTITE, CUP S M4X10			
8	UH2645001	2	HEATER SUPPORT SPRING S			
9	UH2646001	2	HEATER PRESS SPRING			
10	UH2628001	1	THERMISTOR ASSY PT7			
	ODEL HL-1660e 54T-U03-770/771					


T/I NO. PR98054, PR98061, PR99073, PR99074

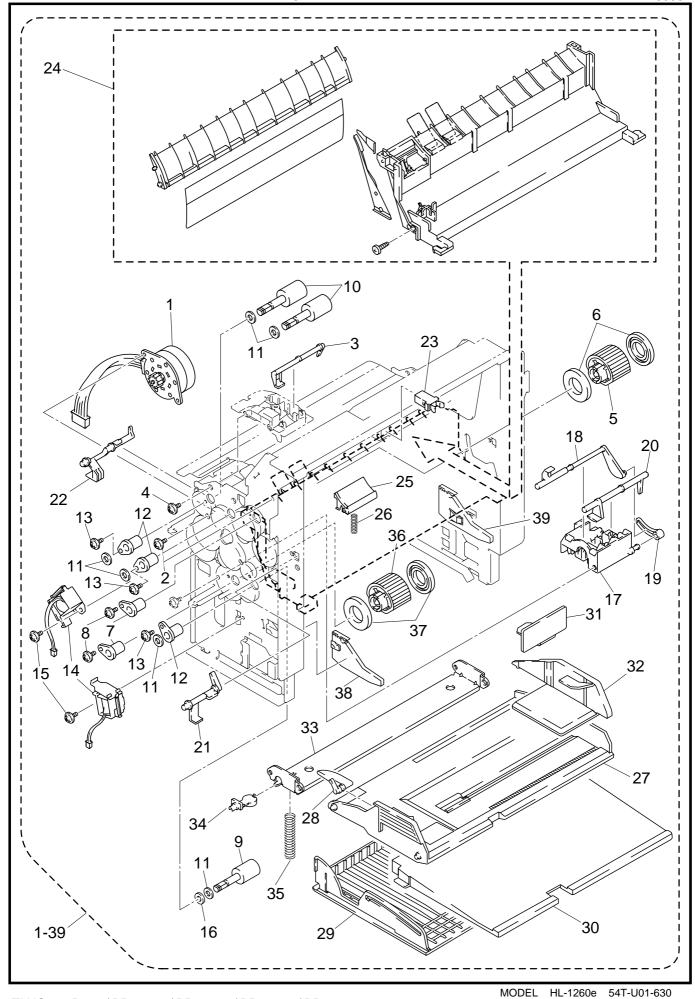

13. PAPER FEEDER PR99087


REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1-39	UH2824001		PAPER FEEDER CHASSIS UNIT 2 (SP)	KLWAKK
1-39	0112024001	l '	(WITH PCB/SW SPRING/SCREW)	
1	UH2357001	1	PAPER FEED MOTOR ASSY	
	087320616		TAPTITE, CUP S M3X6	
2 3 4 5	UH2359000		MP PAPER DETECTION ACTUATOR	
3	085310815		TAPTITE. BIND B M3X8	
4 5	UH2362001		PAPER PICK-UP ROLLER ASSY	
5 6			PAPER PICK-UP ROLLER ASST	
6 7	UH2364001		BEARING	
0	UH2366000		TAPTITE, BIND S M3X6	
8 9	085320616			
9 10	UH2416001	1	PAPER FEED ROLLER ASSY 60 PAPER FEED ROLLER ASSY 70	
10	UH2367001		WASHER, PLAIN	
	UL0633000	_	= ,	
12	UH2366000		BEARING TARTITE BIND C MOVE	
13	085320616		TAPTITE, BIND S M3X6	
14	UH2369001		PAPER PICK-UP SOLENOID	
15	085320416		TAPTITE, BIND S M3X4	
16	UH2428000		BEARING CALLOR	
17	UH2379000		TRAY SENSOR HOLDER	
18	UH2380000	1	PE SENSOR ACTUATOR TRAY	
19	UH2381000	1	PE ACTUATOR LINK	
20	UH2382000		DU DETECTION ACTUATOR	
21	UH2383000		PE SENSOR ACTUATOR MP	
22	UH2384000		REGIST SENSOR ACTUATOR	
23	UH2136001		LATCH	
24 25	UH2797001		MP PAPER FEED GUIDE ASSY (SP)	
25	UH2393001	1	SEPARATION PAD ASSY	
26	UH2433001		SEPARATION PAD SPRING MP	
27	UH2397001		MP TRAY ASSY	
28	UH2400000		MP PE SUB ACTUATOR	
29	UH2406000		MP TRAY COVER	
30	UH2407000		MP EXTENSION TRAY	
31	UH2823001		SPACER	
32	UH2401000		MP PAPER GUIDE	
33	UH2402000		MP RELEASE PLATE	
34	UH2403000		MP RELEASE SUPPORTER	
35	UH2404000		MP SPRING	
36	UH2821001		PAPER PICK-UP ROLLER ASSY 3	
37	UH2822001		PAPER PICK-UP ROLLER COLLAR 30	
38	UH2356000	1	RELEASE PLATE L	ADD
39	UH2409000	1	RELEASE PLATE R	ADD

MODEL HL-1260e 54T-U01-630

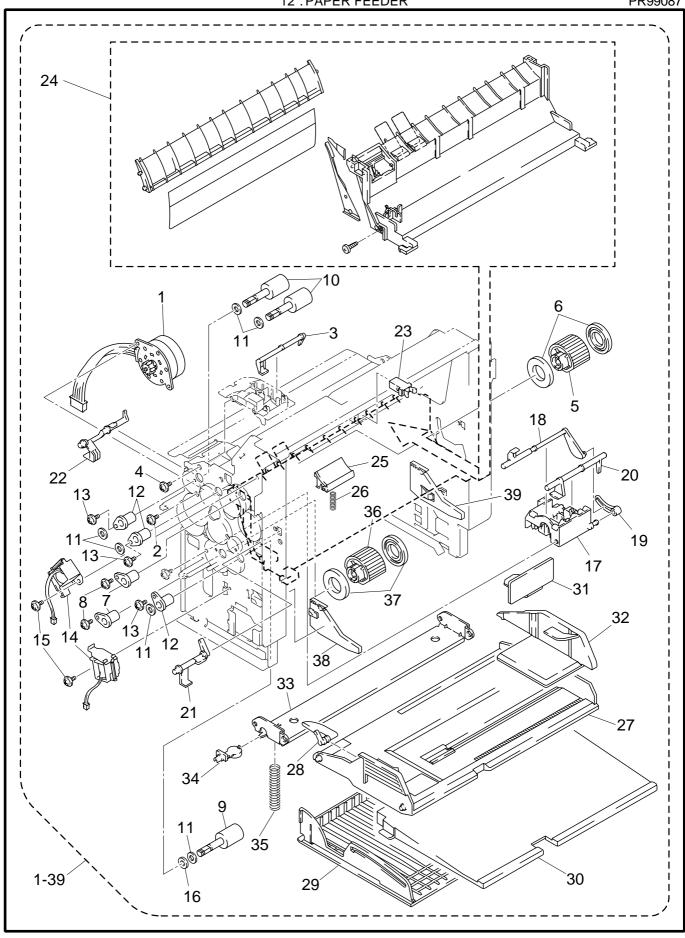

12. PAPER FEEDER PR99087

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1-39	UH2824001		PAPER FEEDER CHASSIS UNIT 2 (SP)	KEWAKK
1-39	0112024001	'	(WITH PCB/SW SPRING/SCREW)	
1	UH2357001	1	PAPER FEED MOTOR ASSY	
	087320616		TAPTITE, CUP S M3X6	
2 3 4 5	UH2359000		MP PAPER DETECTION ACTUATOR	
4	085310815		TAPTITE, BIND B M3X8	
5	UH2362001		PAPER PICK-UP ROLLER ASSY	
6	UH2364001		PAPER PICK-UP ROLLER COLLAR	
6 7	UH2366000		BEARING	
8	085320616		TAPTITE, BIND S M3X6	
9	UH2416001		PAPER FEED ROLLER ASSY 60	
10	UH2367001		PAPER FEED ROLLER ASSY 70	
11	UL0633000		WASHER, PLAIN	
12	UH2366000		BEARING	
13	085320616		TAPTITE, BIND S M3X6	
14	UH2369001		PAPER PICK-UP SOLENOID	
15	085320416	2	TAPTITE, BIND S M3X4	
16	UH2428000		BEARING CALLOR	
17	UH2379000	1	TRAY SENSOR HOLDER	
18	UH2380000	1	PE SENSOR ACTUATOR TRAY	
19	UH2381000	1	PE ACTUATOR LINK	
20	UH2382000	1	DU DETECTION ACTUATOR	
21	UH2383000		PE SENSOR ACTUATOR MP	
22	UH2384000	1	REGIST SENSOR ACTUATOR	
23	UH2136001	1	LATCH	
24 25	UH2797001	1	MP PAPER FEED GUIDE ASSY (SP)	
25	UH2393001	1	SEPARATION PAD ASSY	
26	UH2433001	1	SEPARATION PAD SPRING MP	
27	UH2397001		MP TRAY ASSY	
28	UH2400000		MP PE SUB ACTUATOR	
29	UH2406000		MP TRAY COVER	
30	UH2407000		MP EXTENSION TRAY	
31	UH2823001		SPACER	
32	UH2401000		MP PAPER GUIDE	
33	UH2402000		MP RELEASE PLATE	
34	UH2403000		MP RELEASE SUPPORTER	
35	UH2404000		MP SPRING	
36	UH2821001		PAPER PICK-UP ROLLER ASSY 3	
37	UH2822001		PAPER PICK-UP ROLLER COLLAR 30	455
38	UH2356000		RELEASE PLATE L	ADD
39	UH2409000	1	RELEASE PLATE R	ADD

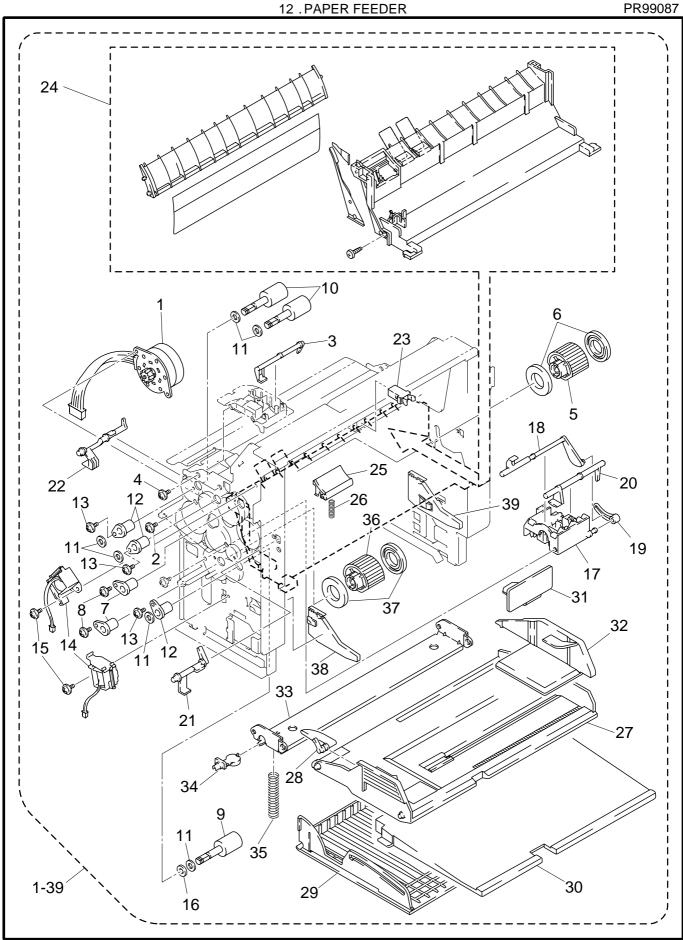


T/I No. PR98202 / PR99087

12. PAPER FEEDER PR99087

12. PAPER		LOITV	DECODIDATION	PR99087
REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1-39	UH2824001	1	PAPER FEED CHASSIS UNIT 2 (SP)	
			(WITH PCB/SW SPRING/SCREW)	
1	UH2357001		PAPER FEED MOTOR ASSY	
2	087320616		TAPTITE, CUP S M3X6	
3	UH2359000		MP PAPER DETECTION ACTUATOR	
4	085310815		TAPTITE, BIND B M3X8	
2 3 4 5 6	UH2362001		PAPER PICK-UP ROLLER ASSY	
6	UH2364001		PAPER PICK-UP ROLLER COLLAR	
7	UH2366000		BEARING	
8	085320616		TAPTITE, BIND S M3X6	
9	UH2416001		PAPER FEED ROLLER ASSY 60	
10	UH2367001	2	PAPER FEED ROLLER ASSY 70	
11	UL0633000	6	WASHER, PLAIN	
12	UH2366000	3	BEARING	
13	085320616	3	TAPTITE, BIND S M3X6	
14	UH2369001		PAPER PICK-UP SOLENOID	
15	085320416	2	TAPTITE, BIND S M3X4	
16	UH2428000		BEARING CALLOR	
17	UH2379000	1	TRAY SENSOR HOLDER	
18	UH2380000	1	PE SENSOR ACTUATOR TRAY	
19	UH2381000	1	PE ACTUATOR LINK	
20	UH2382000	1	DU DETECTION ACTUATOR	
21	UH2383000		PE SENSOR ACTUATOR MP	
22	UH2384000		REGIST SENSOR ACTUATOR	
23	UH2136001		LATCH	
24	UH2797000		MP PAPER FEED GUIDE ASSY (SP)	
25	UH2393001		SEPARATION PAD ASSY	
26	UH2433001		SEPARATION PAD SPRING MP	
27	UH2397001		MP TRAY ASSY	
28	UH2400000		MP PE SUB ACTUATOR	
29	UH2406000		MP TRAY COVER	
30	UH2407000	-	MP EXTENSION TRAY	
31	UH2823001		SPACER	
32	UH2401000		MP PAPER GUIDE	
33	UH2402000		MP RELEASE PLATE	
34	UH2403000		MP RELEASE SUPPORTER	
35	UH2404000		MP SPRING	
36	UH2821001		PAPER PICK-UP ROLLER ASSY 3	
37	UH2822001		PAPER PICK-UP ROLLER COLLAR 30	
38	UH2356000		RELEASE PLATE L	ADD
39	UH2409000		RELEASE PLATE R	ADD
39	UHZ409000	· ·	RELEASE PLATE R	ADD
				ļ

MODEL HL-1660e 54T-U03-630

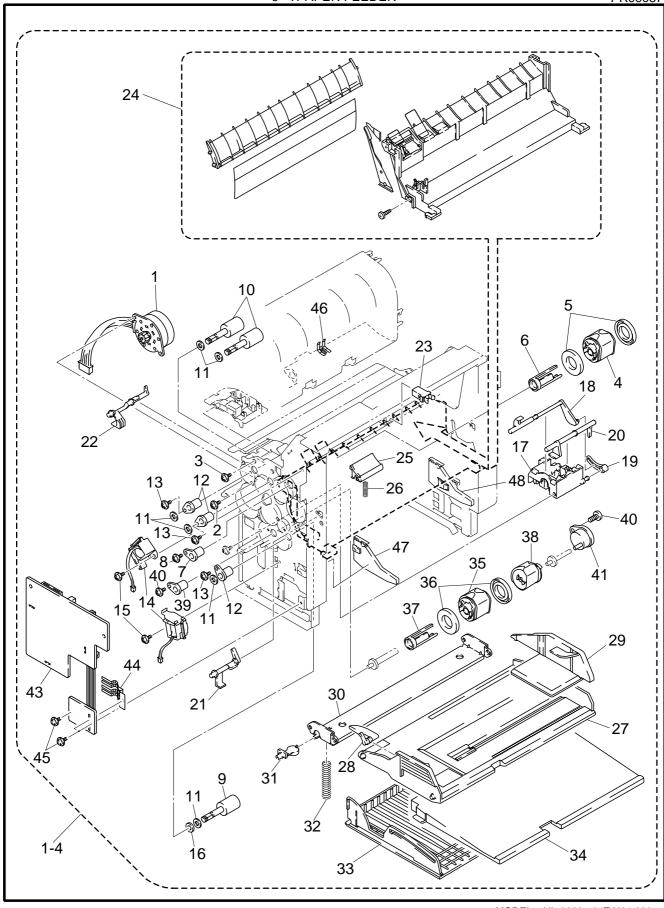


TI NO. PR99087

			9. PAPER FEEDER		PR99087
REF.NO.	CODE	Q'TY	DESCRIPTION	SYMBOL	REMARK
1-48	UH1835001	1	PAPER FEED UNIT (SP)		
1	UH1565001	1	PAPER FEED MOTOR ÁSSY		
2	087320616	2	TAPTITE, CUP S M3X6		
	085310815	2	TAPTITE, BIND B M3X8		
3 4	UH2821001	1	PAPER PICK-UP ROLLER ASSY 3		
4 5					
5	UH1487001	2	PAPER PICK-UP COLLAR LOW		
6	UH1477001	1	COLLAR STOPPER		
7	UH2366000	1	BEARING		
8	085320616	1	TAPTITE, BIND S M3X6		
9	UH1488001	1	PAPER FEED ROLLER ASSY 72		
10	UH1488001	2	PAPER FEED ROLLER ASSY 72		
11	UL0633000	6	WASHER, PLAIN		
12	UH2366000	3	BEARING		
13	085320616	3	TAPTITE, BIND S M3X6		
		2			
14	UH2369001	2	PAPER PICK-UP SOLENOID		
15	085320416	2	TAPTITE, BIND S M3X4		
16	UH2428000	1	BEARING CALLOR		
17	UH2379000	1	TRAY SENSOR HOLDER		
18	UH2380000	1	PE SENSOR ACTUATOR TRAY		
19	UH2381000	1	PE ACTUATOR LINK		
20	UH2382000	1	DU DETECTION ACTUATOR		
21	UH2383000	1	PE SENSOR ACTUATOR MP		
22	UH2384000	1	REGIST SENSOR ACTUATOR		
23	UH2136001	1	LATCH		
24	UH1891001	1	MP PAPER FEED UNIT (SP)		
25	UH2393001	1	SEPARATION PAD ASSY		
26	UH2433001	1	SEPARATION PAD SPRING MP		
27	UH2397001	1	MP TRAY ASSY		
28	UH2400000	1	MP PE SUB ACTUATOR		
29	UH2401000	1	MP PAPER GUIDE		
30	UH2402000		MP RELEASE PLATE		
31	UH2403000	1	MP RELEASE SUPPORTER		
32	UH2404000	1	MP PUSH UP SPRING		
33	UH2406000	1	MP TRAY COVER		
34	UH2407000	1	MP EXTENSION TRAY		
35	UH2821001	1	PAPER PICK-UP ROLLER ASSY 3		
36	UH1487001	2	PAPER PICK-UP COLLAR LOW		
37	UH1477001	1	COLLAR STOPPER		
38	UH1494001	1	PAPER PICK-UP ROLLER ASSY 5		
39	UH2366000		BEARING		
40					
	085320616	1	TAPTITE, BIND S M3X6		
41	UH1497001	1	BEARING R		
42	085320616	1	TAPTITE, BIND S M3X6		
43	UH1837001	1	PAPER FEED PCB ASSY (SP)	B512011-2	
44	UH2410000	1	SIZE SWITCH SPRING ` ´		
45	087320616	2	TAPTITE, CUP S M3X6		
46	UH1898001	1	PAPER FEED EARTH SPRING 1		
47	UH2356000	4	RELEASE PLATE L		ADD
		1			
48	UH2409000	1	RELEASE PLATE R		ADD
1					

TI NO. PR99087

MODEL HL-2060 54T-U04-630

PR99087 1 . FEEDER UNIT

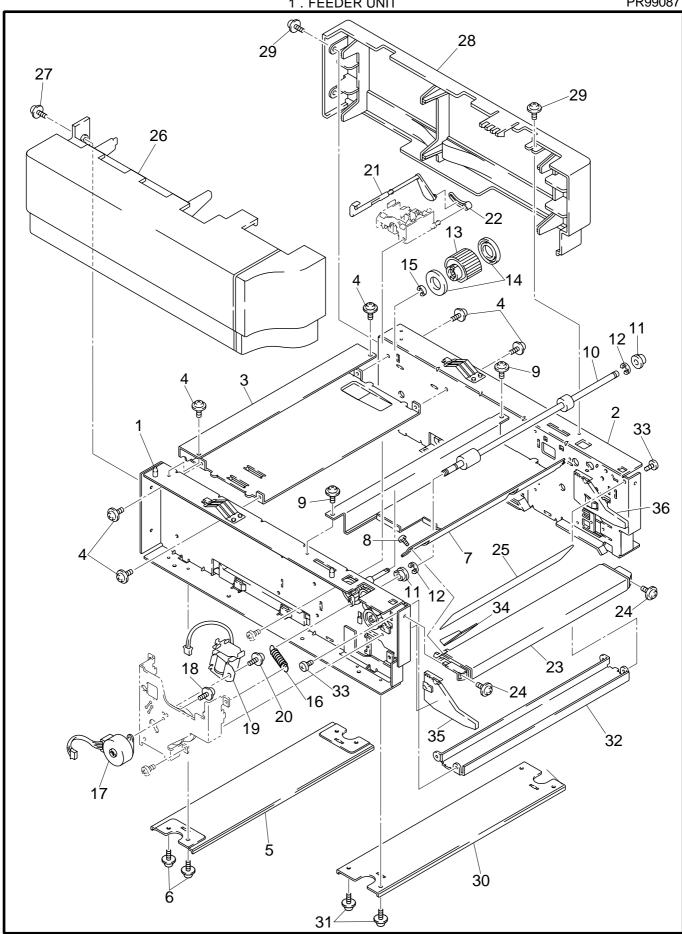

1. FEEDER UNIT


PR99087

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARKS
1	UH2901001	1	FEEDER CHASSIS L ASSY	
2	UH2952001	1	FEEDER CHASSIS R ASSY	
3	UH2905000	1	STIFFENER PLATE UPPER	
4	087320616	6	TAPTITE, CUP S M3X6	
5	UH2906000	1	STIFFENER PLATE LOWER	
6 7	087320616	4	<i>*</i>	
8	UH2907000 085310615	1 1	FEEDER GUIDE TAPTITE, BIND B M3X6	
9	087320616	2	TAPTITE, CUP S M3X6	
10	UH2954001	1	FEEDER ROLLER ASSY	
11	UH2960000	2		
12	048040346	2	RETAINING RING, E4	
13	UH2362001	1	PAPER PICK-UP ROLLER ASSY	
14	UH2364000	2		
15	048040346	1 1	RETAINING RING, E4	
16 17	UH2967000 UH2357001	1	SPRING, EXTENSION PAPER FEED MOTOR ASSY	
18	087320616	2	TAPTITE, CUP S M3X6	
19	UH2369001	1	PAPER PICK-UP SOLENOID	
20	087320616	1	TAPTITE, CUP S M3X6	
21	UH2911000	1	PAPER EMPTY SENSOR ACTUATOR	
22	UH2381000	1	PE ACTUATOR LINK	
23	UH2913000	1	FRONT COVER, GRAY1227	
24 25	087320616 UH2918001	2	TAPTITE, CUP S M3X6 PAPER PATH FILM	
26	UH2914000		SIDE COVER L, GRAY1227	
27	087320616	4	*	
28	UH2915000	1	SIDE COVER R, GRAY1227	
29	087320616	5	TAPTITE, CUP S M3X6	
30	UH2957000	1	FRONT STIFFENER CHASSIS	
31	087320616	4	TAPTITE, CUP S M3X6	
32 33	UH2958000 087320616	1 4	FRONT CHASSIS TAPTITE, CUP S M3X6	
34	UH2959000	1	GUIDE PLATE	
35	UH2356000	1	RELEASE PLATE L	ADD
36	UH2409000	1	RELEASE PLATE R	ADD

MODEL LT-1200/1600 54X-U01/U02-630





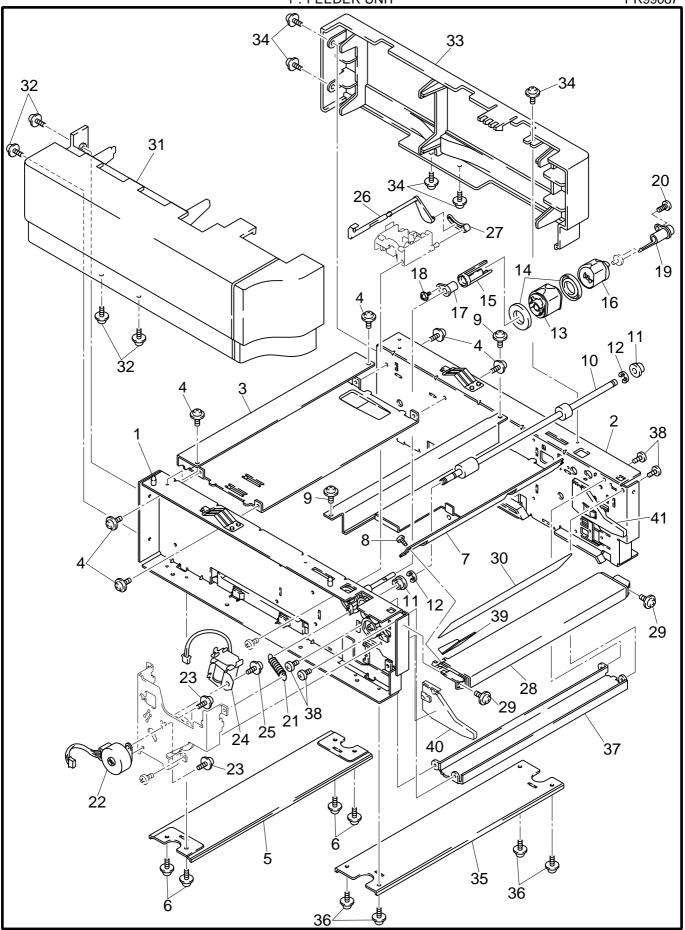

MODEL

LT-2000

54T-X01-630

1. FEEDER UNIT PR99087

				1. FEEDER UNIT	PK99001
ſ	REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
ŀ	1	UH2901001	1	FEEDER CHASSIS L ASSY	
-					
١	2	UH2952001	1	FEEDER CHASSIS R ASSY	
١	3	UH2905000	1	STIFFENER PLATE UPPER	
١	4	087320616	6	TAPTITE, CUP S M3X6	
١	5	UH2906000	1	STIFFENER PLATE LOWER	
١	5				
	6	087320616	4	TAPTITE, CUP S M3X6	
	7	UH1467000	1	FEEDER GUIDE OP	
	8	085310615	1	TAPTITE, BIND B M3X6	
	9	087320616	2	TAPTITE, CUP S M3X6	
			_		
	10	UH1466001	1	FEEDER ROLLER ASSY OP	
	11	UH2960000	2	BEARING S	
	12	048040346	2	RETAINING RING, E4	
	13	UH2821001	1	PAPER PICK-UP ROLLER ASSY 3	
	14	UH1487001	2	PAPER ROLLER COLLAR LOW	
	15	UH1477001	1	COLLAR STOPPER	
	16	UH1494001	1	PAPER PICK-UP ROLLER ASSY 5	
	17	UH2366000	1	BEARING	
1					
١	18	085320616	1	TAPTITE, BIND S M3X6	
١	19	UH1497001	1	BEARING R	
1	20	087320616	1	TAPTITE, CUP S M3X6	
ļ	21	UH2967000	1	SPRING, EXTENSION	
	22	UH1565001	1	PAPER FEED MOTOR ASSY	
	23	087320616	2	TAPTITE, CUP S M3X6	
	24	UH2369001	1	PAPER PICK-UP SOLENOID	
	25	087320616	1	TAPTITE, CUP S M3X6	
	26	UH2911000	1	PAPER EMPTY SENSOR ACTUATOR	
	27	UH2381000	1	PE ACTUATOR LINK	
	28	UH2913000	1	FRONT COVER, GRAY1227	
	29	087320616	2	TAPTITE, CUP S M3X6	
	30	UH2918001	1	PAPER PATH FILM	
	31	UH2914000	1	SIDE COVER L, GRAY1227	
	32	087320616	4	TAPTITE, CUP S M3X6	
	33	UH2915000	1	SIDE COVER R, GRAY1227	
	34	087320616	5	TAPTITE, CUP S M3X6	
	35	UH2957000	1	FRONT STIFFENER CHASSIS	
	36	087320616	4	TAPTITE, CUP S M3X6	
	37		1	FRONT CHASSIS	
		UH2958000			
ļ	38	087320616	4	TAPTITE, CUP S M3X6	
	39	UH2959000	1	GUIDE PLATE	
	40	UH2356000		RELEASE PLATE L	ADD
1	41				ADD
	41	UH2409000	1	RELEASE PLATE R	ADD
١					
١					
١					
١					
١					
1					
1					
1					
Į					
- 1			Ī		

TI NO. PR99087

MODEL LT-2000 54T-X01-630

8. COVERS PR99088

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1 2 3 4 5 6 7-8 7 8 9 10 11	UH2065001 UH2071001 UH2072001 UH2076001 UH2077001 UH2027001 UH2082001 UH2104001 UH2085001 UH2103001 087320616 087320616 087321016	1 1 1 1 1 1 1 1 2 1	UPPER COVER ASSY, GRAY1227 TONER CARTRIDGE LID, GRAY1227 FONT COVER ASSY, GRAY1227 CLEANER BRUSH SIDE COVER L, GRAY1227 SIDE COVER R2 ASSY, GRAY1227 REAR COVER ASSY, GRAY1227(HL-1660) REAR COVER ASSY, GRAY1227(TMT-17) CHANGEOVER GUIDE, GRAY1227 JAM REMOVE COVER, GRAY1227 TAPTITE, CUP S M3X6 TAPTITE, CUP S M3X6 TAPTITE, CUP S M3X6 TAPTITE, CUP S M3X6 TAPTITE, CUP S M3X10	CHNG

MODEL HL-1660/TMT-17 54T-U01-400

T/I NO. PR98175 / PR99088

10. CHASSIS

IU. CHAS				
REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UH2229001	1	CARTRIDGE STOPPER ASSY	
2	UH2233001	1	DC GEAR HOLDER ASSY	
3	UH2814001	1	DC MOTOR ASSY 2 (SP)	
4	087320616	3	TAPTITE, CUP S M3X6	
5	UH2238000	1	GEAR 39	
6	UH2239000	1	GEAR 20/50	
7	UH2240000	1	GEAR 24/72	
8	UH2241000	1	GEAR 22/55	
9	UH2242000	1	GEAR 48	
10	UH2243000	1	GEAR 21	
11	UH2244000	1	GEAR 28	
12	UH2245001	1	GEAR 48 SPRING	
13	026100136	1	WASHER, PLAIN S 10	
14	UH2255001	1	PAPER DELIVERY GEAR ASSY	
15	U74234001	4	TAPTITE, CUP M4X5	
16	UH2250001	1	PAPER DELIVERY HOLDER SPRING	
17	UH2252000	1	SPACER 2	
18	UH2254000	2	SPACER 1	
19	T31242001	2	PCB SPACER F	
20	UH2263001	1	SCANNER FAN MOTOR	
21	083313015	2	TAPTITE, PAN B M3X30	
22	087320616	1	TAPTITE, CUP S M3X6	
				AODEL III. 4000/TMT 47 F4T LI00 F00

MODEL HL-1660/TMT-17 54T-U02-500

8. COVERS PR99088

REF.NO.	CODE	Q'TY	DESCRIPTION	REMARK
1	UH2065001		UPPER COVER ASSY, GRAY1227	
2	UH2071001	1	TONER CARTRIDGE LID, GRAY1227	CHNG
3	UH2072001	1	FONT COVER ASSY, GRAY1227	
4	UH2076001	1	CLEANER BRUSH	
5	UH2077001	1	SIDE COVER L, GRAY1227	
6	UH2027001	1	SIDE COVER R2 ASSY, GRAY1227	
7-8	UH2082001	1	REAR COVER ASSY, GRAY1227	
7-8	UH2104001	1	REAR COVER ASSY, GRAY 1227(TMT-17)	
7	UH2085001	1	CHANGEOVER GUIDE, GRAY1227	
8	UH2103001	1	JAM REMOVE COVER, GRAY1227	
9	087320616	2	TAPTITE, CUP S M3X6	
10	087320616	1	TAPTITE, CUP S M3X6	
11	087320616	1	TAPTITE, CUP S M3X6	
12	087321016	2	TAPTITE, CUP S M3X10	
1				

MODEL HL-1660e 54T-U03-400

T/I NO. PR98175 / PR99088

9. CHASSIS

REF.NO.	CODE	O'TV	DESCRIPTION	REMARK
KEF.NO.		Q'TY		KEWAKK
1	UH2229001		CARTRIDGE STOPPER ASSY	
2	UH2233001		DC GEAR HOLDER ASSY	
3	UH2814001		DC MOTOR ASSY 2 (SP)	
4	087320616	3	TAPTITE, CUP S M3X6	
5	UH2238000	1	GEAR 39	
6	UH2239000	1	GEAR 20/50	
7	UH2240000	1	GEAR 24/72	
8	UH2241000	1	GEAR 22/55	
9	UH2242000	1	GEAR 48	
10	UH2243000	1	GEAR 21	
11	UH2244000	1	GEAR 28	
12	UH2245001	1	GEAR 48 SPRING	
13	026100136	1	WASHER, PLAIN S 10	
14	UH2255001	1	PAPER DELIVERY GEAR ASSY	
15	U74234001	4	TAPTITE, CUP M4X5	
16	UH2250001	1	PAPER DELIVERY HOLDER SPRING	
17	UH2252000	1	SPACER 2	
18	UH2254000	2	SPACER 1	
19	T31242001	2	PCB SPACER F	
20	UH2263001	1	SCANNER FAN MOTOR	
21	083313015	2	TAPTITE, PAN B M3X30	
22	087320616	1	TAPTITE, CUP S M3X6	

MODEL HL-1660e 54T-U03-500