

This camera manual library is for reference and historical purposes, all rights reserved.

This page is copyright by mike@butkus.org M. Butkus, N.J.

**This page may not be sold or distributed without the expressed
permission of the producer**

I have no connection with any camera company

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your E-mail address too so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy. These donations allow me to continue to buy new manuals and maintain these pages. It'll make you feel better, won't it?

If you use Pay Pal, use the link below. Use the above address for a check, M.O. or cash. Use the E-mail of butkusmi@ptd.net for PayPal.



[back to my "Orphancameras" manuals /flash and light meter site](#)

**Only one "donation" needed per manual, not per multiple section of a manual !
The large manuals are split only for easy download size.**

Canon

キヤノンワイヤレスコントローラー

LC-2 使用説明書

日本語版

Canon Wireless Controller LC-2 Instructions English Edition

Canon Télécommande sans fil LC-2 Notice d'emploi Edition française

Canon Infrarot-Fernsteuerung LC-2 Bedienungsanleitung Deutsche Ausgabe

Disparador Inalámbrico Canon LC-2 Instrucciones Edición Española



Canon Wireless Controller LC-2

Especially designed for Canon's T-series cameras, the Canon Wireless Controller LC-2 is a remote control device using infrared rays to control the camera from a distance.

The Wireless Controller LC-2 consists of the transmitter and the receiver and can be used in three modes: first the standard mode, which operates as soon as the transmission switch is pressed; second the delay mode, which makes the camera release the shutter 2 seconds after the switch is pressed; and third the auto sensing mode, which activates when an object blocks the light path between the transmitter and the receiver. Since the Wireless Controller has two channels, you can also control two cameras alternately by alternating channels.

You will find the LC-2 very useful for wildlife photography, news coverage and numerous other fields.

Contents

1. Loading Batteries p.19
2. Checking Batteries p.21
3. Setting Channel p.21
4. Mounting Receiver on Camera p.22
5. Remote Control Photography p.24
6. Auto Sensing Photography p.26
7. Storage p.28
8. Specifications p.28




Nomenclature

■ Receiver



■ Transmitter



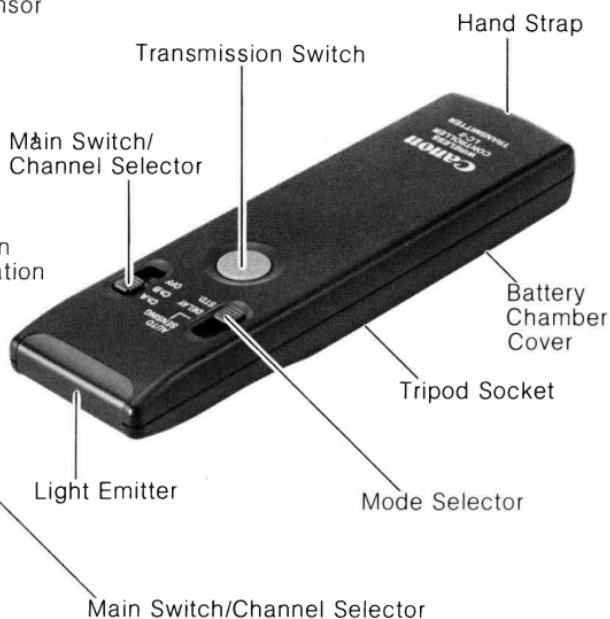


1. Loading Batteries

Load the batteries into both the transmitter and the receiver.

Transmitter—Use two new size-AA alkaline-manganese batteries.


- 1) Slide the battery chamber cover in the direction of the arrow to open it.
- 2) Load the batteries so that their terminals face in the directions indicated by the diagram inside the battery chamber.
- 3) Once the batteries are loaded, slide the battery chamber cover back.

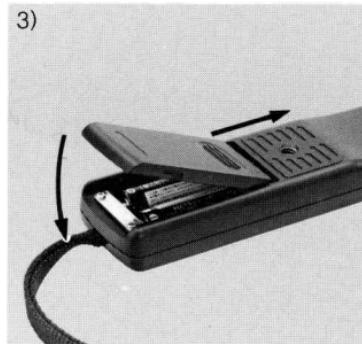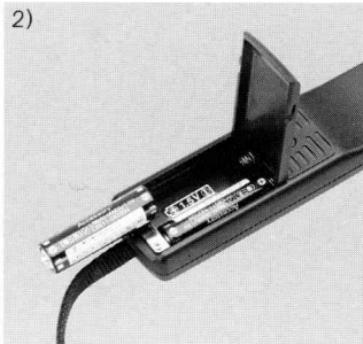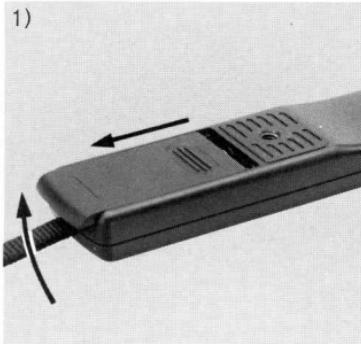

Receiver—Use one of the batteries listed below or an equivalent of another brand.


Lithium 6V	Duracell PX 28L
Alkaline-manganese 6V	Eveready (UCAR) No.A544, IEC 4LR44
Silver Oxide	Eveready (UCAR) No.544, Duracell PX 28, IEC 4SR44

- 1) Slide the battery chamber cover in the direction of the arrow to open it.
- 2) Load the battery so that its terminals face in the directions indicated by the diagram inside the battery chamber.
- 3) Slide the battery chamber cover back.

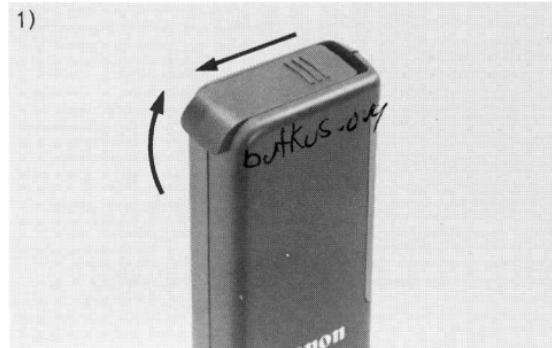

Notes

- Incorrect loading may cause batteries to explode.
- Remove the batteries if you do not expect to use either the transmitter or the receiver for three weeks or longer.
- Be sure to turn the main switches of the transmitter and the receiver OFF when they are not in use.
- When the batteries of the transmitter wear out, replace both at the same time with new ones of the same brand.

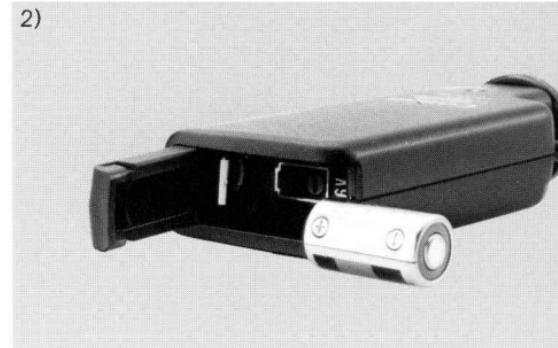

2. Checking Batteries

Receiver

- 1) Set the main switch to either Ch.A or Ch.B.
- 2) Press the red battery check button on the side of the receiver. If the operation confirmation lamp lights up every time you press the button, the battery power is sufficient.

Note

- A battery check button for the transmitter is not provided. If the operation confirmation lamp of the receiver lights up when the transmission switch is pressed, the battery power is sufficient.



3. Setting Channel

- 1) Set both the transmitter and the receiver to the same channel — if the transmitter is set to Ch.A, the receiver must be set to Ch.A too. Otherwise correct operation of the Wireless Controller LC-2 is not possible.
- 2) If you want to control two cameras onto which two separate receivers are mounted in series rather than simultaneously, with one transmitter, set each receiver to a different channel — one must be set to Ch.A and the other to Ch.B — and change the channel on the transmitter in succession.




- 3) If you use two separate sets of the Wireless Controller LC-2 in the same field, make sure that each is set to a different channel.
- 4) When you try to control one camera with plural transmitters, there is a possibility that the Wireless Controller LC-2 may not function if you press the transmission switches of more than one transmitter at the same time.

4. Mounting Receiver on Camera

- 1) Loosen the lock nut and slide the receiver into the camera's accessory shoe.
- 2) Tighten the lock nut.



3) Screw the plug at the end of the connecting cord directly into the camera's remote control terminal.

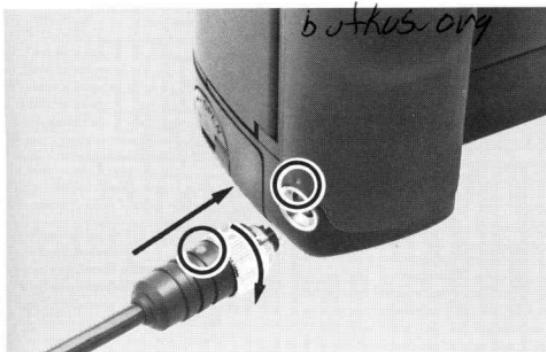

4) Rotate the receiver until the sensor faces in the direction of the transmitter. The receiver's square attachment foot fits into the camera's accessory shoe in any of four directions and the sensor rotates 360° with click-stops every 30°, to face front, behind or to either side.



5. Remote Control Photography

You can choose two remote control modes depending on your shooting objectives.




(1) **Standard Mode** — Operates immediately when the transmission switch is pressed.
(2) **Delay Mode** — Operates 2 secs. after pressing the transmission switch.

1) Choose either the standard mode or the delay mode and set the transmitter to one of them.

2) Press the transmission switch of the transmitter to take a picture.

When you remove your finger from the transmission switch immediately after the shutter release, the camera automatically winds the film to the next frame and then stops.

When you keep pressing the transmission switch, the operation of the camera is as follows:

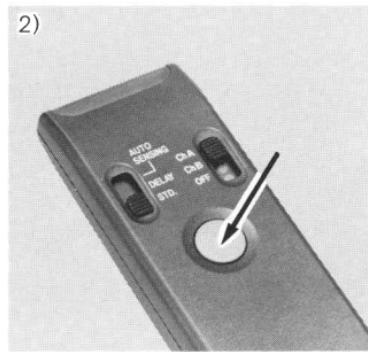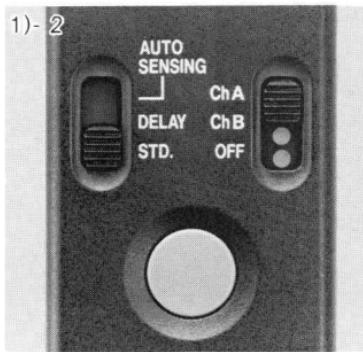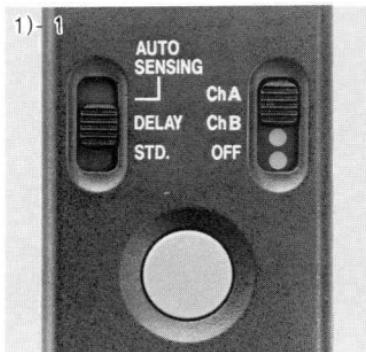

- When using the standard mode

CAMERA	SINGLE EXPOSURE	CONTINUOUS EXPOSURE
T50 T70 T80	(none)	Continuous exposures at about 1.2 frames per second.
T90	After exposure the camera automatically advances the film and then stops.	High mode: Continuous exposures at about 2.5 frames per second. Low mode: Continuous exposures at about 2 frames per second.

- When using the delay mode

CAMERA	SINGLE EXPOSURE	CONTINUOUS EXPOSURE
T50 T70 T80	(none)	Continuous exposures at intervals of about 2 secs.
T90	Continuous exposures at intervals of about 2 secs. (in both the single exposure mode and the continuous exposure mode.)	

The first shutter release begins 2 secs. after pressing the transmission switch.

Notes

- With the Wireless Controller LC-2, the camera can be controlled from a distance of approx. 5m (16.4 ft) on a straight-line course provided that there are no obstacles. However, since environmental conditions such as temperature and sunlight may shorten the distance, be sure to check whether or not remote control photography from the desired distance is possible before shooting.


- When a flash unit is mounted on the camera's accessory shoe, it is possible to attach the Wireless Controller LC-2 to the camera with the accessory bracket.
- Cover the eyepiece to prevent stray light from entering at the rear. If an eyepiece cover or shutter is not available, use a black cloth or something similar.

6. Auto Sensing Photography

The Wireless Controller LC-2 is equipped with an auto sensing mode which makes the camera release the shutter automatically when a subject blocks the light path between the transmitter and the receiver.

- 1) Make sure that the main switch of the camera is set to OFF.



- 2) With the extension cord 1000T3 (optional), connect the receiver's connecting cord with the camera's remote control terminal.
- 3) Put both the transmitter and the receiver on a tripod, table or other flat surface.
- 4) Place them at an appropriate distance so that they squarely face each other as illustrated.

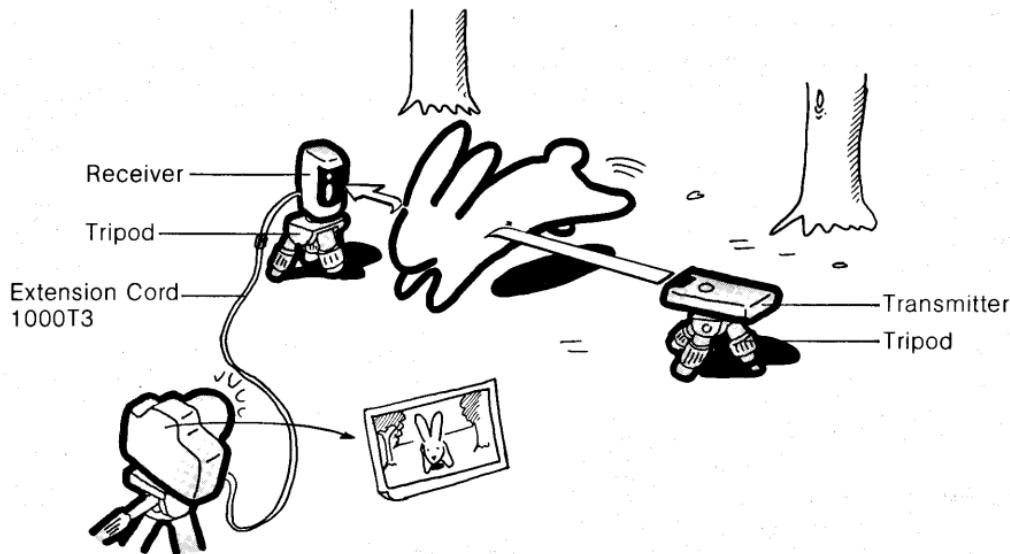

- 5) Compose the picture and focus on where you expect the subject to come.
- 6) Set the same channel on both the transmitter and the receiver.
- 7) Set the transmitter to the auto sensing mode. At this setting, the power is supplied and the Wireless Controller is ready to shoot.
- 8) Check that the operation confirmation lamp lights up: if the lamp lights when you block the light path between the transmitter and the receiver with your hand, the operation is O.K.
- 9) Turn the main switch of the camera ON.
- 10) Each time a certain subject blocks the light path between the transmitter and the receiver as illustrated, the shutter is automatically released.

Notes

- Cover the eyepiece to prevent stray light from entering at the rear.
- When using the T80 in combination with the AC lens in this mode, be sure to focus the subject by focusing the lens manually beforehand.

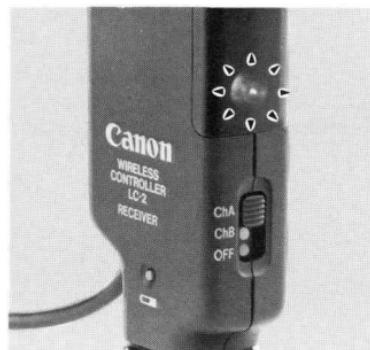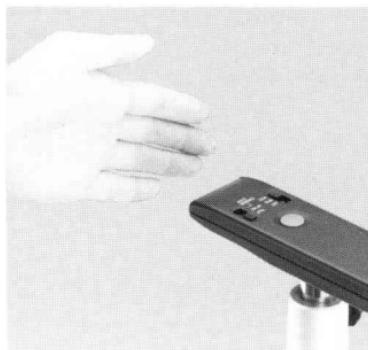

7. Storage

- Remove the batteries if you do not expect to use the Wireless Controller LC-2 for three weeks or longer.
- Store the Wireless Controller LC-2 in a cool, dry, dust-free place.
- Please avoid storing the Wireless Controller LC-2 in the following places:
 - "Hot spots" such as the trunk, rear window shelf or glove compartment of a car.
 - In direct sunlight.
 - Laboratories or other such areas where chemicals may cause corrosion.

8. Specifications

Type: A wireless controller using infrared light emitted by an infrared LED.

Usable Cameras: Canon T-series cameras.

Operation Range: Approx. 5m (16.4 ft) in a straight-line course without obstacles in the light path. If the angle between the transmitter and the receiver is 10°, the range is approx. 4m (13.1 ft); if 20°, approx. 3m (9.8 ft).

Conditions: Clear weather (with sun no more than 30° from zenith), no obstacles between the transmitter and the receiver, and no highly reflective objects in their immediate vicinity.

Mode: Standard mode — operates immediately when the transmission switch is pressed.
Delay mode — operates 2 secs. after pressing the transmission switch.

Auto sensing mode — operates immediately when an object blocks the light path between the transmitter and the receiver.

Number of channels: 2 (Ch.A and Ch.B)

Battery life:

Channel	Mode	No. of Operations	Continuous Operating Time
Ch.A/B	Standard	5000	—
	Delay	5000	—
	Auto Sensing	—	4 hrs at 5m (16.4 ft.) 12 hrs at 4m (13.1 ft.) 18 hrs at 3m (9.8 ft.)

Projection Angle: 40°

Reception Angle: 100°

Operation Confirmation Lamp: Provided on the receiver. Confirmed when the operation confirmation lamp (red LED) lights up.

Battery Check: Provided on the receiver. Checked by pressing the battery check button.

Power Source:

Transmitter—two size-AA alkaline-manganese batteries.

Receiver—one 4LR44 (6V) alkaline-manganese battery or an equivalent.

Dimensions:

Transmitter—40(W) × 146(H) × 18.5(D) mm
(1-9/16" × 5-3/4" × 3/4")

Receiver—21(W) × 114(H) × 40(D) mm
(13/16" × 4-1/2" × 1-9/16")

Weight:

Transmitter—60g (2-1/8 ozs) body only

Receiver—70g (2-1/2 ozs) body only

Subject to change without notice.