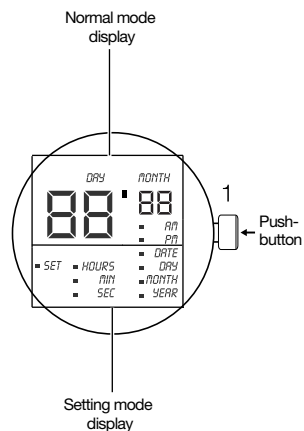



DISPLAY**Display****A****INFORMATION****Description of the symbols used**

All settings are accessed via a single push-button.


Short press: ◀ < 0,5sec. Increment
 Longer pressing: ◀ > 1 sec. Select
 Long pressing: ◀ > 2 sec. Setting mode
 Sustained pressing: ◀ > 5 sec. Exit

Repeated short pressing will allow you to select the display mode:


Hours/Minutes:	HH ' MM	◀	Normal mode
Days/Months:	DD ' MM	◀	[Timeout 10sec.]
Minutes/Seconds:	MM ' SS	◀	[Timeout 120sec.]

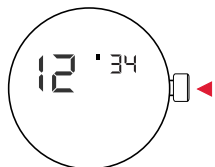**B****SETTING THE TIME**

Select the normal mode display (hours/minutes).
 A long pressing of the push-button ◀ (> 2 sec.) will take you to the setting mode.

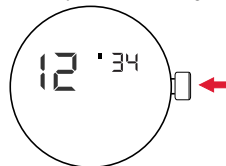

Phase 1:
 Select the time format (12h - 24h).
 Repeated short pressings ◀ will allow you to change between the two formats.

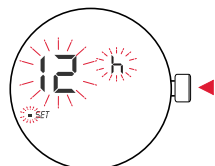


The display blinks. Timeout 120sec.


Note:
 The seconds are automatically set to zero.

C

Phase 2:
 Setting of hours.
 A longer pressing ◀ (> 1 sec.) will take you to the hour setting mode.

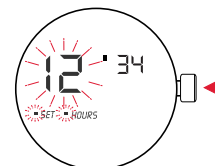

Repeated short pressings ◀ will allow you to move the hours forward.
Phase 3: A longer pressing ◀ (> 1 sec.) will take you to the minute setting mode.

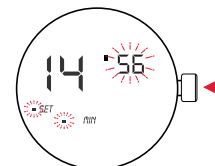

Repeated short pressings ◀ will allow you to move the minutes forward.
 A longer pressing ◀ (> 1 sec.) will end the setting mode.

GB USA


ETA K04.001

Eta Swiss Quartz


410 778 - 16.11.2004 / ETA / 10

SETTING THE DATE

Select the Days/Months display.
 A long pressing of the push-button ◀ (> 2 sec.) will take you to the setting mode.

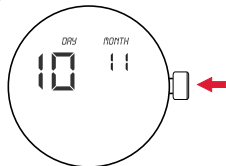


Phase 1:
 Setting of the tens of the year.
 Repeated short pressings ◀ will allow you to move the tens of the year forward.

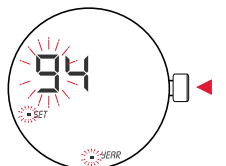


The digit indicating the tens of the year is blinking. Timeout 120 sec.

Phase 2:
 Setting of the units of the year.
 A longer pressing ◀ (> 1 sec.) will take you to the units of the year setting mode.

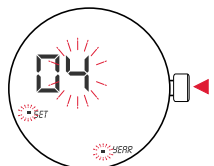


Repeated short pressings ◀ will allow you to move the units of the year forward.
Phase 3: A longer pressing ◀ (> 1 sec.) will take you to the month setting mode.

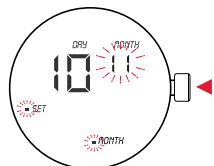

Repeated short pressings ◀ will allow you to move the months forward.

D

Phase 4:
 A longer pressing ◀ (> 1 sec.) will take you to the day setting mode.

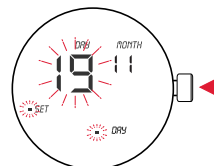


Repeated short pressings ◀ will allow you to move the days forward.
 A longer pressing ◀ (> 1 sec.) will end the setting mode.

General notes:
 A sustained pressing ◀ (> 5 sec.) will allow you to exit the setting mode.
 The watch will return to the normal mode.
 This will happen automatically if the push-button is not pressed for 120 sec. (timeout).

DISPLAY TEST

Select the Minutes/Seconds mode.
 A long pressing of the push-button ◀ (> 2 sec.) will take you to the test mode.

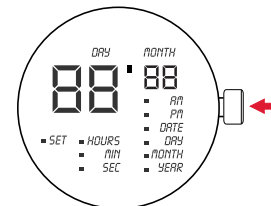

All segments of the display will be visible simultaneously for 2 seconds so that the proper functioning of the display can be verified.
 After that, the watch will automatically return to the normal mode (hours/minutes).

E