

OPERATING AND SERVICE MANUAL

MEASUREMENT SYSTEM 3470



HEWLETT  PACKARD



OPERATING AND SERVICE MANUAL

Binder Part No. 34740-90011

(Includes cover insert)

Manual Part No. 34740-90012 or 34750-90012

(Binder, System Introduction and Display Manual)

MODEL 3470 MEASUREMENT SYSTEM

IMPORTANT NOTICE

This instruction manual requires no change sheet. Any change information has already been integrated into the manual by page revisions. Revised pages have a revision letter which can be found on the lower corner of the page. Reference may also be made to Section VIII of each manual where backdating information for earlier instruments can be found.

Copyright Hewlett-Packard Company 1972
P.O. Box 301, Loveland, Colorado 80537 U.S.A.

Printed: JUNE 1973

CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.


INTRODUCTION

The 3470 Measurement System is a series of modules that may be plugged together to form several different measuring instruments, including both line powered and battery powered versions.

A mainframe display module is connected to a bottom plug-on function module to form a complete instrument.

The BCD and/or Battery plug-on module may be added between the display and function modules as desired.

Refer to the Operating and Service Manual of the plug-on module to be used with the display module for the operating instructions, incoming inspection, and adjustment procedures of the instrument as a whole.

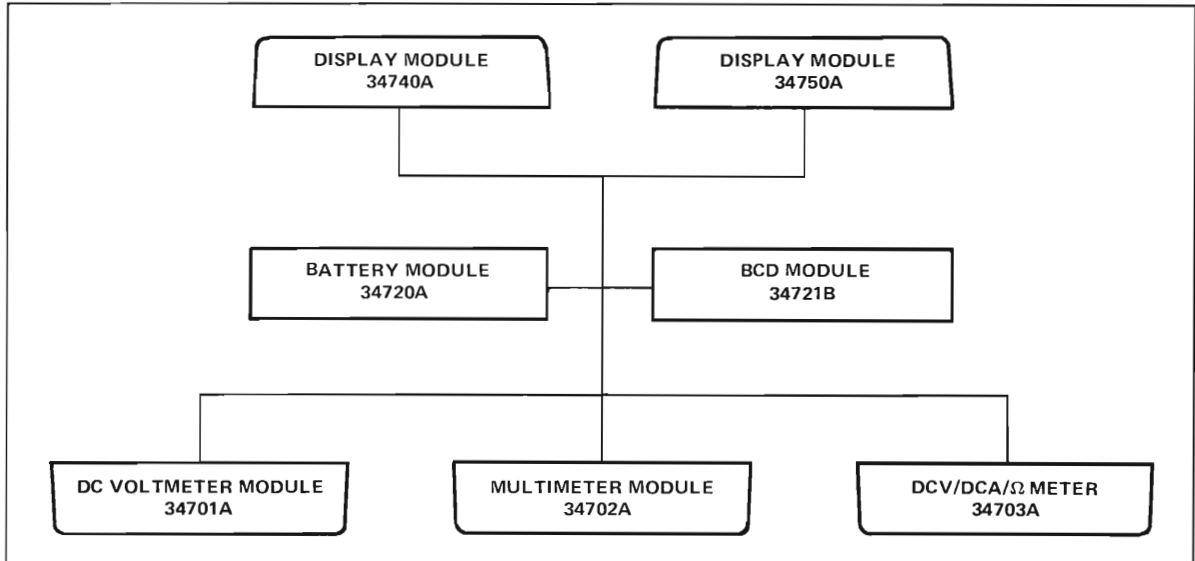

Possible Instrument Configurations

NAME _____

COMPANY _____

JOB TITLE _____

ADDRESS _____

ADDITIONAL COMMENT

FIRST FOLD

SECOND FOLD

BUSINESS REPLY MAIL

NO POSTAGE STAMP NECESSARY IF MAILED IN UNITED STATES

POSTAGE WILL BE PAID BY

HEWLETT-PACKARD COMPANY

LOVELAND DIVISION, Dept. 4169

P.O. BOX 301

LOVELAND, COLORADO 80537

U.S.A.

FIRST CLASS
PERMIT NO. 37
LOVELAND, COLORADO



Model 3470

To further improve the Hewlett-Packard instrument documentation, we would appreciate your comments on this manual. Please check yes or no to the following questions. Add any comments you wish. If more room is desired, additional comments may be added on the back of this questionnaire. When completed, tear on perforated line, fold, staple and mail.

1. Would you like to see more applications information in the manual? YES _____
COMMENT _____ NO _____
2. Is a detailed theory of operation necessary? YES _____
COMMENT _____ NO _____
3. Are the performance checks and adjustment procedures clear as to the procedure and to the specification they are to verify? YES _____
COMMENT _____ NO _____
4. Would you like to see a condensed adjustment procedure included? YES _____
COMMENT _____ NO _____
5. Would you like to see the performance checks and adjustment procedures combined? YES _____
COMMENT _____ NO _____
6. Would a more complete list of hardware be beneficial? YES _____
COMMENT _____ NO _____
7. Are exploded views useful? YES _____
COMMENT _____ NO _____
8. Is the troubleshooting section of this manual adequate? YES _____
COMMENT _____ NO _____
9. Do you like and use the troubleshooting trees? YES _____
COMMENT _____ NO _____
10. Are the schematic diagrams clearly illustrated and easy to follow? YES _____
COMMENT _____ NO _____
11. Would you prefer the assembly outlines on the schematics in color? YES _____
COMMENT _____ NO _____
12. Would you prefer drawings of waveforms and component locators as opposed to photographs; YES _____
COMMENT _____ NO _____
13. Would you prefer to have a separate operating manual and service manual? YES _____
COMMENT _____ NO _____
14. Do you use the red stripe and blue stripe board exchange program? YES _____
COMMENT _____ NO _____
15. Would you use the red stripe and blue stripe board exchange program? YES _____
COMMENT _____ NO _____
16. Does the operating and service manual remain with the instrument? YES _____
If not, where does it go? _____ NO _____
17. In what way do you feel we can most improve this manual? _____
18. Do you prefer the loose leaf binder for manuals as opposed to the bound manuals? YES _____
_____ NO _____
19. Do you use change sheets? YES _____
_____ NO _____

34740A DISPLAY



OPERATING AND SERVICE MANUAL

Manual Part No. 34740-90001
Microfiche Part No. 34740-90051

MODEL 34740A DISPLAY

Serials Prefixed: 1213

IMPORTANT NOTICE

This instruction manual requires no change sheet. Any change information has already been integrated into the manual by page revisions. Revised pages have a revision letter which can be found on the lower corner of the page. Reference is also made to Appendix C where backdating information for earlier instruments can be found.

Copyright Hewlett-Packard Company 1972
P.O. Box 301, Loveland, Colorado, 80537 U.S.A.

Printed: NOVEMBER 1972

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL INFORMATION	1-1	4-26. Scanning System	4-2
1-1. Description	1-1	4-27. Basic	4-2
1-6. Options	1-1	4-30. Scanner	4-2
1-8. Specifications	1-1	4-32. Data Accumulator	4-2
1-10. Accessories Available	1-1	4-34. Character Generator	4-2
1-11. Instrument and Manual Identification	1-1	4-36. Overrange Digit Scan Monitor	4-2
		4-38. Overload	4-2
		4-40. Overrange	4-3
		4-42. Display Blank	4-3
Section	Page	Section	Page
II INSTALLATION	2-1	V MAINTENANCE	5-1
2-1. Introduction	2-1	5-1. Introduction	5-1
2-3. Initial Inspection	2-1	5-3. Performance Check	5-1
2-5. Power Requirements	2-1	5-5. Adjustments	5-1
2-7. Grounding Requirements	2-1		
2-9. Instrument Mounting	2-1	Section	Page
2-10. Bench Use	2-1	VI REPLACEABLE PARTS	6-1
2-12. Rack Use	2-1	6-1. Introduction	6-1
2-14. Repackaging for Shipment	2-1	6-4. Ordering Information	6-1
2-18. Power Cords and Receptacles	2-1	6-6. Non-Listed Parts	6-1
		6-8. Proprietary Parts	6-1
Section	Page	Section	Page
III OPERATING INSTRUCTIONS	3-1	VII CIRCUIT DIAGRAMS, TROUBLESHOOTING	7-1
3-1. Introduction	3-1	7-1. Introduction	7-1
		7-3. Notes	7-1
Section	Page	7-5. Troubleshooting	7-1
IV THEORY OF OPERATION	4-1	7-9. Troubleshooting Steps	7-1
4-1. Basic Measurement Technique	4-1		
4-3. Timing System	4-1	APPENDICES	
4-4. Basic	4-1	A. CODE LIST OF MANUFACTURERS	
4-7. Timing Generator	4-1	B. SALES AND SERVICE OFFICES	
4-9. Data System	4-1		
4-10. Basic	4-1		
4-12. Voltage-to-Time Converter	4-1		
4-19. Data Logic	4-2		

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
2-1. Power Receptacles	2-1	7-6. A3	7-7/7-8
3-1. Power Connections	3-1	7-7. A1	7-7/7-8
5-1. 11456A Read Out Test Card	5-1	7-8. A2	7-7/7-8
7-1. Block Diagram	7-3/7-4	7-9. Amplifiers	7-9/7-10
7-2. Troubleshooting	7-5/7-6	7-10. Timing Logic	7-11/7-12
7-3. Timing Diagram	7-7/7-8	7-11. Scanning Logic	7-13/7-14
7-4. Scanning Diagram	7-7/7-8	7-12. Power Supply	7-15/7-16
7-5. 11456A Read Out Test Card	7-7/7-8		

LIST OF TABLES

Table	Page
6-1. Replaceable Parts	6-2
7-1. Faulty Components	7-7/7-8

SECTION I

GENERAL INFORMATION

1-1. DESCRIPTION.

1-2. The Hewlett-Packard Model 34740A Display Module is a four-digit 1 V range dc voltmeter with 100 % overrange capability that functions with a plug-on module such as the 34702A Multimeter or 34701 DC Voltmeter. This modular construction feature makes the 3470 measurement system versatile. New plug-on models are under development to expand the range of applications of the instrument. A 34720A Battery Module or 34721A BCD Module may be connected between the 34740A and the plug-on module for more versatility.

1-3. A dual slope integrating measurement technique is employed to give 60 dB noise rejection at the power line frequency. Five readings per second are attained on Option 060 (60 Hz line), and eight readings per second on Option 050 (50 Hz line).

1-4. The display of four full digits plus an overrange digit is composed of light emitting diodes that give a clear bright readout indication. The fifth overrange digit is provided to complete the readout on measurements above full scale up to the 100 % overrange point. A display blanking feature indicates the overload point at 100 % overrange.

1-5. The 34740A may be fully adjusted from the rear panel, and is easily removed from its case for repair. An internal jumper wire may be positioned to give a self test of the logic and display circuitry. The 11456A Readout Test Card aids troubleshooting.

1-6. OPTIONS.

1-7. The 34740A may be ordered as either Option 050 or 060 for optimum operation at 50 Hz or 60 Hz line voltages respectively.

1-8. SPECIFICATIONS.

1-9. The specifications for the 34740A are not stated separately, but rather included in the specifications for the function module. See the Operating and Service Manual for the function module to be used with the 34740A.

1-10. ACCESSORIES AVAILABLE.

11456A - Read-Out Test Card for testing and troubleshooting the 34740A Display module.

18019A - Carrying case accommodates the 34740A Display, a center module and a bottom module plus power cord and input cables.

11457A - Rack Mount Kit for 34740A Display, 34721A BCD module and a bottom module.

10576A - Rack Mount Kit for 34740A Display and a bottom module.

562A-16C - Printer Cable for operation with the 5055A Digital Recorder.

1-11. INSTRUMENT AND MANUAL IDENTIFICATION.

1-12. Hewlett-Packard uses a two-section serial number. The first section concerns instrument modifications; the second section numbers the individual instruments. Some serial numbers may have a letter separating the two sections of the number. This letter indicates the country in which the instrument was manufactured.

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains installation and shipping information for the Model 34740A.

2-3. INITIAL INSPECTION.

2-4. Each 34740A has been carefully inspected prior to shipment and should be in perfect electrical order and free of marks or scratches. To confirm this, the instrument should be inspected upon receipt for damage that might have occurred in transit, or for deficiencies otherwise. If there is damage due to shipping, file a claim with the carrier; if there are electrical or mechanical deficiencies not attributable to shipping, then refer to the statement of Warranty on the back of the title page. Use the procedures of Section V to check the instrument performance.

2-5. POWER REQUIREMENTS.

2-6. The Model 34740A may be operated from the four line voltages 100 V, 120 V, 220 V and 240 V rms $\pm 5\%$ - 10 %, of 48 Hz to 440 Hz frequency. The two switches on the rear panel are positioned to select one of the four voltages. Power dissipation is 8.7 VA maximum.



TO AVOID INSTRUMENT DAMAGE, THE REAR PANEL LINE VOLTAGE SWITCH MUST BE IN THE CORRECT POSITION BEFORE THE POWER CORD IS PLUGGED IN.

2-7. GROUNDING REQUIREMENTS.

2-8. For the safety of operating personnel, a provision for grounding the instrument case has been provided as recommended by the National Electrical Manufacturer's Association (NEMA). The offset pin of the power cable grounds the instrument when plugged into the appropriate receptacle. If only a two-contact receptacle is available, then use a three-prong-to-two-prong adapter and connect the green pigtail of the adapter to earth ground.

2-9. INSTRUMENT MOUNTING.

2-10. Bench Use.

2-11. The front of the 34740A may be elevated for operating convenience by lowering the tilt stand on the bottom module.

2-12. Rack Use.

2-13. The 11457A Rack Mount Kit allows the 34740A and the 34721A BCD Module plus a bottom module to be rack mounted.

2-14. REPACKAGING FOR SHIPMENT.

2-15. If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument describing the work to be accomplished and identifying the owner and instrument. Identify the instrument by serial number, model number, and name in any correspondence. If you have any questions, contact your local Hewlett-Packard Sales and Service Office. See Appendix B for office locations.

2-16. If the original shipping container is to be used, place the instrument in the container with appropriate packing material and seal the container well with strong tape or metal bands. A new container may be purchased from your nearest -hp- Sales and Service Office.

2-17. If an -hp- container is not to be used, then use a heavy carton or wooden box with an inner container. Wrap the instrument with heavy paper or plastic and place cardboard strips across the face for protection before placing the instrument in the inner container. Use packing material around all sides of the inner container, and seal the outer container well with strong tape or metal bands. Mark the container with "DELICATE INSTRUMENT." or "FRAGILE".

2-18. POWER CORDS AND RECEPTACLES.

2-19. Figure 2-1 illustrates the standard power receptacle (wall outlet) configurations that are used throughout the United States and in other countries. The -hp- part number shown directly above each receptacle drawing is the part number for a 34740A power cord equipped with the appropriate mating plug for that receptacle. If the appropriate power cord is not included with the instrument, notify the nearest -hp- Sales and Service Office and a replacement cord will be provided.

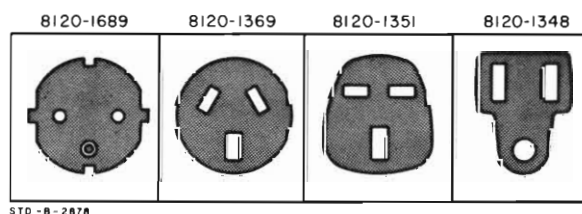


Figure 2-1. Power Receptacles.

SECTION III OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. Refer to Figure 3-1 regarding power connection to the 34740A.

CAUTION

DO NOT PLUG IN THE POWER CORD WITHOUT FIRST

SELECTING THE PROPER LINE VOLTAGE AT THE LINE SELECTOR SWITCHES.

3-3. Refer to the Operating and Service Manual of the plug-on module to be used with the 34740A for operating instructions of the instrument as a whole.

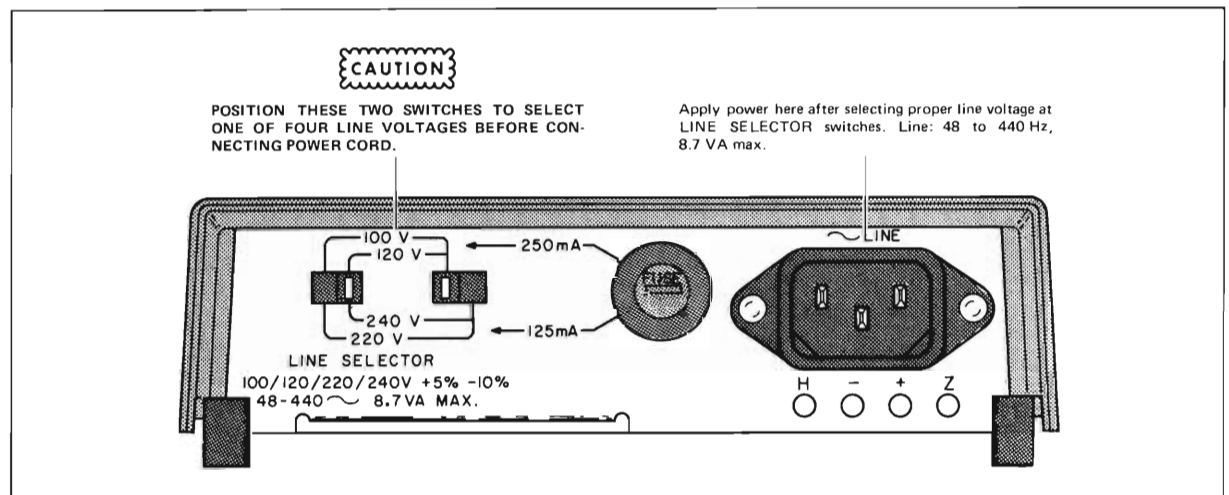


Figure 3-1. Power Connections.

SECTION IV

THEORY OF OPERATION

4.1. BASIC MEASUREMENT TECHNIQUE.

4-2. A dual-slope integrating measurement technique is employed by the 34740A. An Integrator is charged by the dc Input Voltage for a fixed precise 1/30 sec timing interval, and then discharged to zero by a fixed Reference Voltage. Since the charge slope is proportional to the Input Voltage, and the discharge slope fixed, the time taken for discharge is proportional to the Input Voltage. Thus a voltage-to-time conversion is achieved. A readout of the voltage is then obtained by counting pulses from a Crystal Oscillator during the discharge time. (10,000 counts equals full scale, 20,000 counts overload.)

4.3. TIMING SYSTEM.

4-4. Basic.

4-5. The measurement period is divided into six timing intervals 0T1, 1T2, 2T3, 3T4, 4T5 and 5T0 of 1/30 sec duration each. This gives a measurement period of 1/5 sec, or 5 measurements per second. Period 0T1 allows the Input Voltage to settle before it charges the Integrator during 1T2. 2T3 allows the Reference Voltage to settle before it discharges the Integrator. 3T4 plus 4T5 is the Integrator discharging interval, with full scale occurring at t4 and overload at t5. 5T0 is the auto-zeroing period.

4-6. The Data and Timing Clock generates 3 MHz crystal controlled pulses that are divided down to 30 Hz by the Data and Timing Counter within the Data Accumulator to drive the Timing Generator, Counter Reset and Input Polarity circuits. The 30 Hz Timing One-shot provides the proper duration pulses to the latter two circuits.

4-7. Timing Generator.

4-8. The Timing Generator develops a code of three signals A, B and C that jointly define the six timing intervals that comprise the measurement period. It is a three bit counter driven by 30 Hz pulses from the Data Accumulator. Signal A is the 0T3 interval and divides the measurement period in half, B signal is the 1T4 interval and coincides with the integration waveform for a full scale Input Voltage, and C represents the Reference Voltage enable period 2T5.

4.9. DATA SYSTEM.

4-10. Basic.

4-11. The Voltage-to-Time Converter effectively creates a time interval proportional to the Input Voltage by gener-

ating a Zero Detect pulse at an interval after timing point t3. The Data Counter is reset to zero at t3, and then counts 3 MHz pulses until Zero Detect. This count is displayed on the front panel as the Input Voltage.

4-12. Voltage-to-Time Converter.

4-13. **Integrator.** The heart of the Voltage-to-Time Converter is the Integrator, which charges or discharges at a linear rate proportional to its input voltage. The Integrator is charged by the dc Input Voltage from the Input Attenuator through the Input Voltage FET Switch, Buffer Amplifier and Integrator FET Switch during the fixed time interval 1T2. Since the charge time is fixed, the voltage reached on the Integrator Capacitor is proportional to the Input Voltage.

4-14. The Integrator is discharged by the fixed Reference Voltage through the Reference Voltage FET Switch, Buffer Amplifier and Integrator FET Switch beginning at timing point t3. Since the charge level is proportional to the Input Voltage and the discharge rate fixed, the time taken for discharge is proportional to the Input Voltage.

4-15. **Zero Detect.** The point in time when the Integrator reaches zero voltage is detected by the Zero Detect differential amplifier. This high-gain amplifier is operated open loop so that it remains saturated at one output polarity until its input from the Integrator goes thru zero. Its other input is held near zero, so the amplifier suddenly switches output polarity to give a Zero Detect pulse at the Integrator discharge point.

4-16. The level at which Zero Detect actually occurs is adjusted to a slight voltage of the opposite polarity to the Integrator charge to inhibit oscillation of the Zero Detect Amplifier during Auto-Zero time. The voltage used as the Zero Detect level is divided down from the Buffer Amplifier which has the Reference Voltage output while discharging the Integrator. The Zero Detect output is held high by C (L) signal while it is not being used during 0T2 and 5T0.

4-17. **Slope Amp.** The Slope Amplifier has a gain of 20 (at low levels), and increases the discharge slope (and also the charge slope) to enable the Zero Detect Amplifier to more precisely detect the exact point at which the Integrator charge reaches the Zero Detect level.

4-18. **Auto Zero.** An automatic zeroing of the Buffer, Integrator and Slope amplifiers takes place during 5T0 of each measurement period. The three Auto-Zero FET switches Q4, Q10 and Q11 close to apply a zero voltage to

the Buffer Amplifier, reduce the Integrator input resistance and time constant, and feed back the output of the Slope Amplifier to the Auto-Zero Capacitor respectively. This small feedback voltage is stored on the Auto Zero Capacitor at the Integrator differential input to counteract the offsets of the amplifiers during the next measurement period.

4-19. Data Logic.

4-20. Zero-Detect Steering. The Zero-Detect signal from the Voltage-to-Time Converter is a negative-to-positive or positive-to-negative level change depending on whether the Input Voltage polarity is positive or negative respectively. The Zero-Detect Steering circuit converts these level changes into a positive-to-ground level change on either input polarity. Gates U14 pins 3 and 6 are used on a negative input polarity, and gates U14 pins 11, 8 and 6 are used on a positive polarity.

4-21. Zero-Detect Catcher. An oscillation occurs on the Zero-Detect line from the Voltage-to-Time Converter after Zero-Detect. The Zero-Detect Catcher flip-flop allows only the first level change from the Zero-Detect Steering circuit to fire the Transfer one-shot. The flip-flop is reset at t_0 by the A (L) signal.

4-22. Transfer. The purpose of the Transfer one-shot is to transfer the count accumulated on the Data Counter within the Data Accumulator into the Storage registers at Zero-Detect. Transfer also turns off the Data Clock for 30 μ sec to provide the correct input to the Data Accumulator for Transfer.

4-23. Reset. A Reset pulse is developed by the 30 Hz Timing One-Shot and the gates U11 pin 8 and U7 pin 6 when Reset Enable signal goes high at t_3 . The Reset pulse returns the Data Counter to zero so that the Data count of the 3 MHz pulses may begin. The 30 μ sec duration of the Reset pulse delays the beginning of the Data count past t_3 to compensate for the Zero Detect level being set slightly different than zero in the Voltage-to-Time Converter.

4-24. Input Polarity. The polarity of the Input Voltage is determined at t_2 when the Polarity Enable signal goes high at U10 pin 1. The polarity of the Zero-Detect line from the Voltage-to-Time Converter at t_2 is opposite to that of the Input Voltage. This polarity is applied to the D input of the Input Polarity flip-flop and causes the Q output to go high or low according to the Input Voltage polarity when the C input goes low with a pulse from the 30 Hz Timing One-Shot. The Input Polarity flip-flop then controls the Zero-Detect Steering and Polarity Display circuits.

4-25. Reference Polarity. Gates U17 pins 1 and 5 monitor the Input Voltage polarity on the Zero-Detect line from the Voltage-to-Time Converter during 2T5 when Reference Enable is high. This determines which polarity of the Reference Voltage is needed to discharge the Integrator.

4-26. SCANNING SYSTEM.

4-27. Basic.

4-28. To transfer the data stored in the Data Accumulator out to the front panel for display, a system scans the five storage decades at a 6 kHz rate so that the digit of each storage decade is supplied to all five Display decades simultaneously. It then scans the Display decades in synchronization with the storage decade scanning to illuminate each Display decade individually while the digit for that decade is being supplied to the Display.

4-29. A "half-character" sub-system within the basic scanning system modifies the basic 6 kHz scanning scheme. The data characters are actually divided into right and left halves and supplied a half-character at a time to the Display at 12 kHz, twice the basic scanning frequency. At the same time, the Display decades are also scanned a half-character at a time at 12 kHz to illuminate them at the appropriate time.

4-30. Scanner.

4-31. The heart of the scanning system is the Scanner which scans the data in the Data Accumulator at 6 kHz with the x, y and z lines; scans the Display, a half-character at a time at 12 kHz with the nine half-character scan lines; and switches the Character Generator between the right and left half characters at 12 kHz.

4-32. Data Accumulator.

4-33. The five decades of BCD data stored in the Data Accumulator are fed out at 6 kHz with each decade in its four-line binary code. This time-multiplexing is accomplished by the x, y and z lines from the Scanner.

4-34. Character Generator.

4-35. The Character Generator develops a decimal character from each data decade arriving in binary form from the Data Accumulator. These characters are divided in half vertically and supplied a half-character at a time at 12 kHz to the five Display decades. A line from the Scanner develops the 12 kHz alternation between the right and left half characters. The BCD data decades arrive at the Character Generator at 6 kHz, the "whole" character scan frequency.

4-36. Overrange Digit Scan Monitor.

4-37. The x, y and z scan lines are monitored to determine when the overrange digit (the 10,000's or most significant digit) is being scanned. This information is needed by the Overload, Overrange and Display Blank circuits.

4-38. Overload.

4-39. Flip-flop U8-A is set to the true state when the BCD-2 bit of the overrange digit is high at the D input. This

corresponds to a data count of 20,000, the overload point. The flip-flop is set false the next time the overrange digit is scanned if the overrange digit is not 2.

4-40. Overrange.

4-41. Flip-flop U8-B is set true when the BCD-1 or BCD-2 bit of the overrange digit is high at the D input. This corresponds to a data count of 10,000 or greater, the overrange region. The flip-flop is set false the next time the overrange digit is scanned if the overrange digit is zero.

4-42. Display Blank.

4-43. The Display Blank circuit interrupts the BCD data to

the Character Generator and develops a display blank code (111) on the BCD8 thru BCD2 lines to blank out the overrange digit while it is being scanned on an Input Voltage below full scale (10,000 counts). It also blanks out the 1,000's thru 1's digits while they are being scanned on an overload Input Voltage (20,000 counts).

4-44. Gate U5 pin 3 blanks the Overrange Digit by giving a high logic level to OR gates U3 pins 12, 10 and 2 on the Display Assembly when its input pins are high on Not Overrange while the Overrange Digit is being scanned. Gate U5 pin 11 blanks the 1000's thru 1's digits when its inputs are high on Overload while the four digits are being scanned. Gate U5 pin 8 negates the BCD2 data bit on Overload so that only "1" is displayed in the 10,000's digit at Overload.

SECTION V

MAINTENANCE

5-1. INTRODUCTION.

5-2. This section contains information for maintenance of the 34740A. Included are performance checks for incoming inspection and adjustment procedures. A Model 740B Voltage Standard is required. Troubleshooting is given in Section VII.

5-3. PERFORMANCE CHECK.

5-4. The performance of the 34740A is normally checked with it connected to a function plug-on module as described in the Operating and Service Manual for that module. However, the performance of the 34740A alone may be checked with the aid of the 11456A Test Card.

a. Connect the INPUT pin on the 11456A to the + REF and - REF pins alternately. The display should be + 10000 (± 2 counts) and - 10000 (± 2 counts) respectively.

b. Connect DP1, DP2, DP3 and DP4 pins alternately to GND 3 pin to test the decimal point display.

5-5. ADJUSTMENTS.

5-6. The 34740A is normally adjusted as a unit with a function plug-on module as explained in the Operating and Service Manual for that plug-on. However, the 34740A may be adjusted alone with the aid of the 11456A Readout Test Card as follows.

a. Apply 1 mV dc from the 740B Voltage Standard to the INPUT and GND 1 pins of the 11456A. Turn the Z adjustment on the rear panel to give the same readout on both polarities of the 1 mV. The readout does not have to be exactly 1 mV (10 counts) now.

b. Now turn the rear panel H adjustment to give a 10 count readout on both polarities of the 1 mV input. It may be necessary to reaccomplish step a. because the Z and H adjustments interact somewhat.

c. Change the 740B to 1 V dc output, and turn the + R and - R adjustments on the rear panel to give a display of 10000 on both polarities.

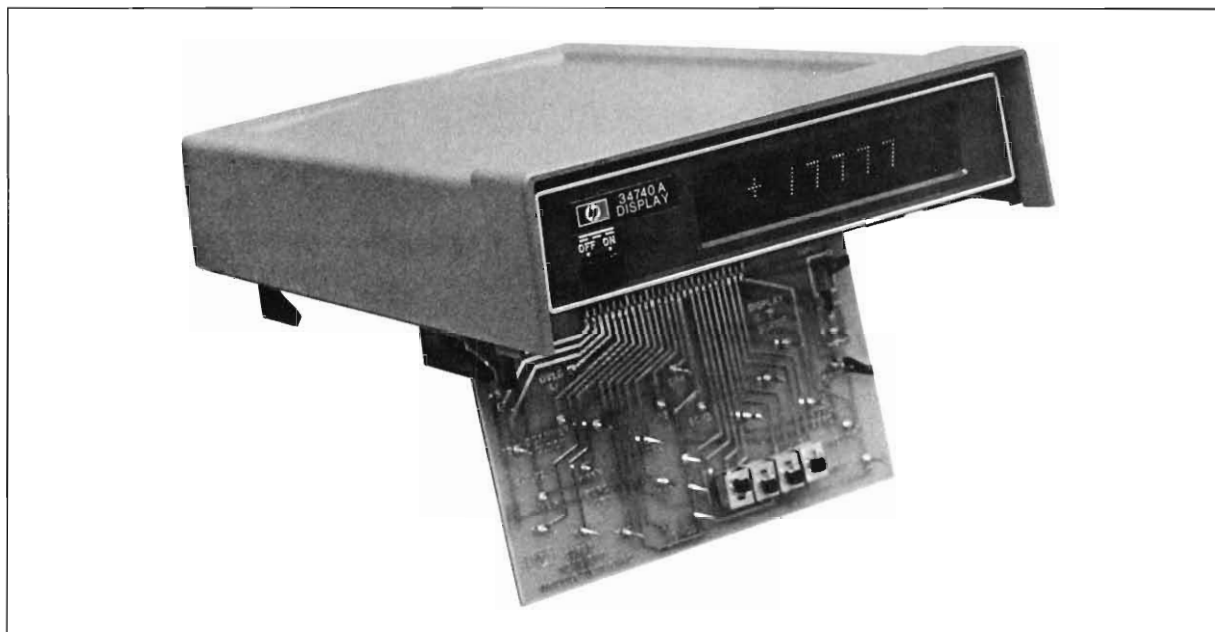


Figure 5-1. 11456A Read Out Test Card.

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphabetic order of their reference designators and indicates the description, -hp part number of each part, together with any applicable notes and provides the following:

- Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.
- Description of the part. (See list of abbreviations below.)
- Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)
- Manufacturers part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- Instrument model number.
- Instrument serial number.
- Description of the part.
- Function and location of the part.

6-8. PROPRIETARY PARTS.

6-9. Items marked by a dagger (†) in the reference designator column are available only for repair and service of Hewlett-Packard instruments.

ABBREVIATIONS			
Ag	silver	Hz	hertz (cycle(s) per second)
Al	aluminum	ns	negative positive zero (zero temperature coefficient)
A	ampere(s)	ID	inside diameter
Au	gold	imp	impregnated
		incd	incandescent
C	capacitor	ins	insulation(ed)
cer	ceramic	Ω	ohm(s)
coef	coefficient	obd	order by description
com	common	OD	outside diameter
comp	composition	p	peak
conn	connection	pA	picoampere(s)
		pc	printed circuit
dep	deposited	pF	picofarad(s) 10 ⁻¹² farads
DPDT	double-pole double-throw	p/o	peak inverse voltage
DPST	double-pole single-throw	pos	position(s)
		poly	polystyrene
elect	electrolytic	pot	potentiometer
encap	encapsulated	p-p	peak-to-peak
		ppm	parts per million
F	farad(s)	prec	precision (temperature coefficient, long term stability and/or tolerance)
FET	field effect transistor	R	resistor
fxd	fixed	Rh	rhodium
		rms	root-mean-square
GaAs	gallium arsenide	rot	rotary
GHz	gigahertz = 10 ⁹ hertz	Se	selenium
gd	guarded	sect	section(s)
Ge	germanium	Si	silicon
gnd	ground(ed)		
H	henry(ies)		
Hg	mercury		

DECIMAL MULTIPLIERS

Prefix	Symbols	Multiplier	Prefix	Symbols	Multiplier
tera	T	10 ¹²	centi	c	10 ⁻²
giga	G	10 ⁹	milli	m	10 ⁻³
mega	M or Meg	10 ⁶	micro	μ	10 ⁻⁶
kilo	K or k	10 ³	nano	n	10 ⁻⁹
hecto	h	10 ²	pico	p	10 ⁻¹²
deka	da	10	femto	f	10 ⁻¹⁵
deci	d	10 ⁻¹	atto	a	10 ⁻¹⁸

DESIGNATORS

A	assembly	FL	filter	Q	transistor	TS	terminal strip
B	motor	HR	heater	OCR	transistor-diode	U	microcircuit
BT	battery	IC	integrated circuit	R	resistor	V	vacuum tube, neon bulb, photocell, etc.
C	capacitor	J	jack	RT	thermistor	W	wire
CR	diode	K	relay	S	switch	X	socket
DL	delay line	L	inductor	T	transformer	XDS	lampholder
DS	lamp	M	meter	TB	terminal board	XF	fuseholder
E	misc electronic part	MP	mechanical part	TC	thermocouple	Y	crystal
F	fuse	P	plug	TP	test point	Z	network

STD-B-2734

STD-B-2734

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
AI	34740-66511	1	BOARD ASSY:MAIN	14493	34740-66511
AI C6	0160-2204	2	C:FXD MICA 100PF 5%	72136	ADM15F101J3C
AI C7	0160-2204		C:FXD MICA 100PF 5%	72136	ADM15F101J3C
AI C8	0160-0362	1	C:FXD MICA 510PF 5%	28480	0160-0362
AI C9	0160-2205	2	C:FXD MICA 120 PF 5%	28480	0160-2205
AI C10	0180-1701	2	C:FXD ELECT 5.8 UF 20% 6VDCW	28480	0180-1701
AI C11	0150-0093	6	C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-KR00011
AI C12	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-KR00011
AI C13	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-KR00011
AI C14	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-KR00011
AI C15	0160-0207	2	C:FXD MYLAR 0.01UF 5% 200VDCW	28480	0160-0207
AI C16	0160-0207		C:FXD MYLAR 0.01UF 5% 200VDCW	28480	0160-0207
AI C17	0150-0084	1	C:FXD CER 0.1 UF +80-20% 100VDCW	72982	R131-100-651-104Z
AI C20	0180-2501	2	C:FXD AL ELECT 680 UF +50-10% 25VDCW	73445	ET681X025A02
AI C21	0180-2501		C:FXD AL ELECT 680 UF +50-10% 25VDCW	73445	ET681X025A02
AI C22	0180-2500	2	C:FXD AL ELECT 1800 UF +50-10% 16VDCW	73445	ET152X016A03
AI C23	0180-2500		C:FXD AL ELECT 1800 UF +50-10% 16VDCW	73445	ET152X016A03
AI C24	0180-0228	2	C:FXD ELECT 22 UF 10% 15VDCW	56289	1503226X901582-DYS
AI C25	0180-0228		C:FXD ELECT 22 UF 10% 15VDCW	56289	1503226X901532-JYS
AI C26	0160-0182		C:FXD 40PF 5% 30VV	00853	08D
AI C27	1901-0040	16	DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C28	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C29	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C30	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C31	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C32	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C33	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C34	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C35	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C36	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C37	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C38	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C39	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C40	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C41	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C42	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C43	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C44	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C45	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C46	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C47	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C48	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C49	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C50	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C51	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C52	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C53	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C54	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C55	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C56	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C57	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C58	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C59	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C60	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C61	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C62	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C63	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C64	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C65	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C66	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C67	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C68	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C69	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C70	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C71	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C72	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C73	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C74	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C75	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C76	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C77	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C78	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C79	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C80	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C81	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C82	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C83	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C84	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C85	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C86	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C87	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C88	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C89	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C90	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C91	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C92	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C93	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C94	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C95	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C96	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C97	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C98	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C99	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C100	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C101	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C102	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C103	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C104	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C105	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C106	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C107	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C108	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C109	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C110	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C111	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C112	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C113	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C114	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C115	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C116	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C117	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C118	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C119	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C120	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C121	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C122	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C123	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C124	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C125	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C126	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C127	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C128	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C129	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C130	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C131	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C132	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C133	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C134	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C135	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C136	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C137	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C138	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C139	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C140	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C141	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C142	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C143	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C144	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C145	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C146	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C147	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C148	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C149	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C150	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C151	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C152	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C153	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C154	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C155	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C156	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C157	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C158	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C159	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C160	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C161	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C162	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C163	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C164	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C165	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C166	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C167	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C168	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C169	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C170	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C171	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C172	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C173	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C174	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C175	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
AI C176	1901-0040		DIODE: SILICON 30MA 30WV	072	

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
ΔA1R25	0683-6815	1	R:FXD COMP 680 OHM 5% 1/4W	01121	CB 6815
A1R26	0698-4539	1	R:FXD MET FLM 402 K OHM 1% 1/8W	28480	0698-4539
A1R27	0684-1011	1	R:FXD COMP 100 OHM 10% 1/4W	01121	CB 1011
A1R28	0684-5621	1	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A1R29	J684-2231	1	R:FXD COMP 22 K OHM 10% 1/4W	01121	CB 2231
A1R30	0698-4479	1	R:FXD FLM 14 K OHM 1% 1/8W (OPT. 060)	28480	0698-4479
A1R30	0698-0064	1	R:FXD MET FLM 9.31 K OHM 1% 1/8W (OPT 050)	28480	0698-0064
A1R31	0684-1031	1	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A1R32	1810-0143	1	RESISTOR PACK 5 FXD 3.3 K OHM 10%	56289	200 C
A1R33	0598-4479	1	R:FXD FLM 14K OHM 1% 1/8W	28480	0598-4479
A1R34	0684-1031	1	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A1R35	0684-3321	1	R:FXD COMP 3300 OHM 10% 1/4W	01121	CB 3321
A1R36	1810-0139	1	RESISTOR PACK 4 FXD 22 K OHM 5%	56289	200 C
A1R37	1810-0139	1	RESISTOR PACK 4 FXD 22 K OHM 5%	56289	200 C
A1R38	1810-0140	1	RESISTOR PACK 3 FXD 22 K OHM 5%	56289	200 C
A1R39	0584-3311	4	R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A1R40	0684-3311	1	R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A1R41	0584-3311	1	R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A1R42	0584-3311	1	R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A1R43	1810-0139	1	RESISTOR PACK 4 FXD 22 K OHM 5%	56289	200 C
A1R47	0584-1021	1	R:FXD COMP 1000 OHM 10% 1/4W	01121	CB 1021
A1R43	0684-4721	2	R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A1R49	0598-4443	2	R:FXD FLM 4.53K OHM 1% 1/8W	28480	0698-4443
A1R50	0698-4391	2	R:FXD FLM 69.8 OHM 1% 1/8W	28480	0698-4391
A1R51	0584-4721	1	R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A1R52	0598-4443	1	R:FXD FLM 4.53K OHM 1% 1/8W	28480	0698-4443
A1R53	0698-4391	1	R:FXD FLM 69.8 OHM 1% 1/8W	28480	0698-4391
ΔA1R54	0757-0280	1	R:FXD MET FLM 1.00K OHM 1% 1/8W	28480	0757-0280
A1R55	0598-3178	2	R:FXD MET FLM 487 OHM 1% 1/8W	28480	0698-3178
ΔA1R56	0757-0280	1	R:FXD MET FLM 1.00K OHM 1% 1/8W	28480	0757-0280
A1R57	0698-3178	1	R:FXD MET FLM 487 OHM 1% 1/8W	28480	0698-3178
A1R58	2100-3154	2	R:VAR CERMET 1000 OHM 10% TYPE P 3/4W	28480	2100-3154
A1R59	2100-3154	1	R:VAR CERMET 1000 OHM 10% TYPE P 3/4W	28480	2100-3154
A1R60	1810-0130	1	CIRCUIT-PASSIVE:8 RES. 14 PIN	28480	1810-0130
A1R61	0684-3321	1	R:FXD COMP 3300 OHM 10% 1/4W	01121	CB 3321
A1S1	3101-1723	1	SWITCH-PUSHBUTTON 4PDT SINGLE STA.	71590	A-3101-1723-1
A1J4	1820-0586	1	IC:TTL LP HEX INVERTER	12040	D474L04N
A1J5	1820-0511	1	IC:TTL QUAD 2-INPT AND GATE	01295	S47408N
A1J6	1820-0661	2	IC:TTL QUAD 2-INPT OR GATE	01295	S47432N
A1J7	1820-0583	5	IC:TTL LP QUAD 2-INPT NAND GATE	12040	D474L00N
A1J8	1820-0596	3	IC:TTL LP DUAL EDGE TRIG. D F/F	12040	D474L74N
ΔA1J9	1820-0798	1	IC:TTL SIX DECADE	28480	1820-0798
A1U10	1820-0583	1	IC:TTL LP QUAD 2-INPT NAND GATE	12040	D474L00N
A1J11	1820-0585	2	IC:TTL LP QUAD 2-INPT NAND GATE	12040	D474L03N
A1J12	1820-0668	1	IC:TTL HEX DRIVER W/OPEN COLL(30V)	01295	S47407N
A1U13	1820-0567	1	IC: TTL DUAL VOLTAGE-CONTROLLED FLIP-FLOP	04713	M40424P
A1U14	1820-0583	1	IC: TTL LP QUAD 2-INPUT NAND GATE	12040	DM74L00N
A1U15	1820-0585	1	IC:TTL LP QUAD 2-INPT NAND GATE	12040	D474L03N
A1J16	1820-0596	1	IC:TTL LP DUAL EDGE TRIG. D F/F	12040	D474L74N
A1U17	1820-0583	1	IC:TTL LP QUAD 2-INPT NAND GATE	12040	D474L00N
A1J18	1820-0583	1	IC:TTL LP QUAD 2-INPT NAND GATE	12040	D474L00N
A1U19	1820-0584	1	IC:TTL LP QUAD 2-INPT NOR GATE	12040	D474L02N
A1J20	1820-0596	1	IC:TTL LP DUAL EDGE TRIG. D F/F	12040	D474L74N
A1U23	1820-0203	3	IC:OPERATIONAL AMPLIFIER	07263	SL8940
A1J24	1820-0321	1	INTEGRATED CIRCUIT:HI-SPEED COMPARATOR	01295	S472 710L
A1J25	1820-0430	1	IC:LINEAR, VOLTAGE REGULATOR 5V	28480	1820-0430
A1Y1	0410-0467	1	CRYSTAL: QUARTZ OPTION 060	28480	0410-0467
A2	0410-0468	1	CRYSTAL: QUARTZ OPTION 050	28480	0410-0468
A2C18	34740-66512	1	DISPLAY ASSY	14493	34740-66512
A2C19	0180-1701	1	C:FXD ELECT 5.3 UF 20% 6VDCW	28480	0180-1701
A2J20	0160-0156	1	C:FXD MY 0.0039 UF 10% 200VDCW	56289	192P39292-PTS
A2J21	1854-0071	1	TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A2J22	1854-0215	9	TSTR:SI NPN	80131	2N3904
A2J23	1854-0215	1	TSTR:SI NPN	80131	2N3904
A2J24	1854-0215	1	TSTR:SI NPN	80131	2N3904
A2J25	1854-0215	1	TSTR:SI NPN	80131	2N3904
A2J26	1854-0215	1	TSTR:SI NPN	80131	2N3904
A2J27	1854-0215	1	TSTR:SI NPN	80131	2N3904
A2J28	1854-0215	1	TSTR:SI NPN	80131	2N3904
A2J29	1854-0215	1	TSTR:SI NPN	80131	2N3904
A2K44	0684-4721	1	R:FXD 4700 OHM 10% 1/4W	01121	CB 4721
A2K45	0684-8201	2	R:FXD COMP 82 OHM 10% 1/4W	01121	CB 8201
A2R46	0684-8201	1	R:FXD COMP 82 OHM 10% 1/4W	01121	CB 8201
ΔA2J1	1820-0635	1	IC:DIGITAL	28480	1820-0635
ΔA2J2	1820-0571	1	IC:TTL DIGITAL	28480	1820-0571
A2J3	1820-0661	1	IC:TTL QUAD 2-INPT OR GATE	01295	S47432N

ΔUSE FOR ALL REPLACEMENT

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2125	1990-0405	1	DISPLAY PLUS MINUS		
A2J27	1990-0408	1	DISPLAY MODIFIED		
A3	34740-66503	1	AMPLIFIER ASSY	14493	34740-66503
A3C1	0180-0291	1	C:FXD ELECT 1.0 UF 10% 35VDCW	56289	1500105X9035A2-DYS
A3C2	0160-3183	1	C:FXD MY 0.47 UF 20% 50VDCW	84411	HEW 101
A3C3	0160-2641	1	C:FXD POLY 0.1 UF 10% 50VDCW	56289	1049R5-PDP 275 SPEC
A3C4	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C5	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3CR1	1902-0041	1	DIODE: BREAKDOWN 5.11V 5%	04713	SZ10939-98
A3Q1	1855-0412	6	TSTR:FET SI N-CHANNEL	17856	FN 2960
A3Q2	1855-0412		TSTR:FET SI N-CHANNEL	17856	FN 2960
A3Q3	1855-0412		TSTR:FET SI N-CHANNEL	17856	FN 2960
A3Q4	1855-0412		TSTR:FET SI N-CHANNEL	17856	FN 2960
A3Q5	1855-0308	2	TSTR:SI DUAL N-CHANNEL	28480	1855-0308
A3Q6	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A3Q7	1855-0093	1	TSTR:FET N-CHANNEL	28480	1855-0093
A3Q8	1855-0308		TSTR:SI DUAL N-CHANNEL	28480	1855-0308
A3Q13	1855-0412		TSTR:FET SI N-CHANNEL	17856	FN 2960
A3Q11	1855-0412		TSTR:FET SI N-CHANNEL	17856	FN 2960
A3R1	0698-4485	2	R:FXD FLM 23.2K OHM 1% 1/8W	28480	0698-4485
A3R2	0684-4711	1	R:FXD COMP 470 OHM 10% 1/4W	01121	CB 4711
A3R3	0698-4485		R:FXD FLM 23.2K OHM 1% 1/8W	28480	0698-4485
A3R4	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R5	0684-2731	1	R:FXD COMP 27K OHM 10% 1/4W	01121	CB 2731
A3R6	0698-4501	1	R:FXD FLM 59K OHM 1% 1/8W	28480	0698-4501
A3R6	0698-4485		R:FXD FLM 37.4K OHM 1% 1/8W	75042	CEA T-0
A3R7	0698-3157	1	R:FXD MET FLM 19.6K OHM 1% 1/8W (OPT 060)	28480	0698-3157
A3R7	0698-3519		R:FXD MET FLM 12.4K OHM 1% 1/8W (OPT 050)	28480	0698-3519
A3R8, R9	0698-4494	2	R:FXD FLM 35.7K OHM 1% 1/8W	28480	0698-4494
A3R10	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R11	0684-5631		R:FXD COMP 56K OHM 10% 1/4W	01121	CB 5631
A3J21	1820-0203		IC: OPERATIONAL AMPLIFIER	07263	SL8940
A3J22	1820-0203		IC: OPERATIONAL AMPLIFIER	07263	SL8940

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
			MISCELLANEOUS		
	5040-7001		CATCH RIGHT SLIDE		
	5040-6000		CATCH LEFT SLIDE		
	0340-0782	1	INSULATOR:TRANSISTOR	28480	0340-0782
	0340-0783	2	INSULATOR:SPRING	00000	080
	0370-2159	3	KNR:PUSHBUTTON	28480	0370-2159
	05300-20010	1	CASE	28480	05300-20010
	05300-40003	4	SUPPORT:BOARD	28480	05300-40003
	05300-40004	4	GUIDE:SLIDE	28480	05300-40004
	1400-3083	1	FUSEHOLDER:EXTRACTOR POST TYPE	75915	341001
	2110-0204	1	FUSE:CARTRIDGE 1/4 AMP 250V	75915	34G/CAT. 312.250
	2110-0027	1	FUSE:0.125A 250V	75915	312.125
	34740-60201	1	PANEL ASSY:REAR	14493	34740-60201
	4040-0920	1	PANEL:FRONT	28480	4040-0920
	7120-2931	1	NAMEPLATE	28480	7120-2931
	8120-1348	1	CABLE ASSY:POWER, DETACHABLE	70903	KHS-7041
	0380-0333	1	STANDOFF:CAPTIVE 4-40 X 0.312" LG	00000	080
	0380-0775	1	STANDOFF:SWAGE TYPE 1.000" LG 0.250" OD	00000	080
	1251-0291	1	CONNECTOR:14 PIN	02660	57-10140
	1251-2357	1	SOCKET:3-PIN MALE POWER RECEPTACLE	82389	EAC-301
	3101-1609	1	SWITCH:SLIDE 2-DPDT	82389	11E-1036
	9170-0894	2	BEAD - SHIELDING	28480	9170-0894
	Δ 9100-3413	1	TRANSFORMER (T1)	28480	9100-3413

Δ USE FOR ALL REPLACEMENT

SECTION VII

CIRCUIT DIAGRAMS

TROUBLESHOOTING

7-1. INTRODUCTION.

7-2. This section contains the diagrams and troubleshooting information necessary to maintain the Model 34740A. Both schematic diagrams and pictorial views of the circuit boards are included.

7-3. NOTES.

7-4. The following notes apply in general to all schematic diagrams:

a. Partial reference designators are shown. Prefix with assembly or subassembly designation(s) or both for complete designation.

b. Component values are shown as follows unless otherwise noted:

Capacitance in microfarads
Resistance in ohms

c. *Average value shown. Optimum value selected at factory.

d.  Denotes earth ground.

e.  Denotes chassis or frame ground.

f.  Denotes floatable circuit ground.


g.  Denotes printed circuit assembly ground.

h.  Denotes assembly outline.

i.  Denotes subassembly outline.

j.  Denotes main signal path.

k.  Denotes feedback path.

l.  Denotes front panel markings.

m.  Denotes screwdriver adjust.

n. 924 Denotes wire color. Color code is the same as the resistor color code. First number identifies the base color; second identifies the wider strip; and third number identifies the narrower strip (e.g., 924 = white, red, yellow).

o. An (L) suffix indicates low-true logic signals; otherwise signals are high true.

7-5. TROUBLESHOOTING.

7-6. The philosophy in troubleshooting the 34740A is that when a signal is found to be incorrect, but all of the signals that develop this signal are determined to be correct, then the components directly associated with the incorrect signal are the only ones that may possibly be faulty. The components include those that directly develop the signal, as well as some that are driven by the signal and may load down the signal.

7-7. It is implicit in this technique that there be no feedback loops. There are feedback loops in the 34740A, but a simple method exists to break each of these so that the technique is valid.

7-8. Table 7-1 and Signal Development Diagram Figure 7-2 show which of the 27 major signals directly develop each of the 27 signals. Each signal is described in Figure 7-3 or 7-4 so that it may be determined to be correct or incorrect. Table 7-1 lists the components that may be faulty when a signal is found to be incorrect but its developing signals correct.

7-9. Troubleshooting Steps.


1. Check power supply voltages (± 12 V, +5 V, ± 6 V). These are found on the 11456A Test Card and vertical amplifier assembly A3.



2. Determine if the malfunction is in the 34740A or function plug-on module. Separate the 34740A from the plug-on module and connect the 11456A Readout Test Card to the 34740A. Check the readout by applying dc voltages up to ± 2 V to the INPUT pin and GND 1. The display should blank out at ± 2 V. Check the decimal point display by connecting DP1, DP2, DP3 and DP4 to GND 3.

3. Check the display with the four test switches on the 11456A.








4. Refer to the Signal Development diagram Figure 7-2 and Table 7-1, and begin checking signals according to Figures 7-3 and 7-4. Good starting points are signal (11) and timing signals A, B and C at (4).

REFERENCE DESIGNATIONS

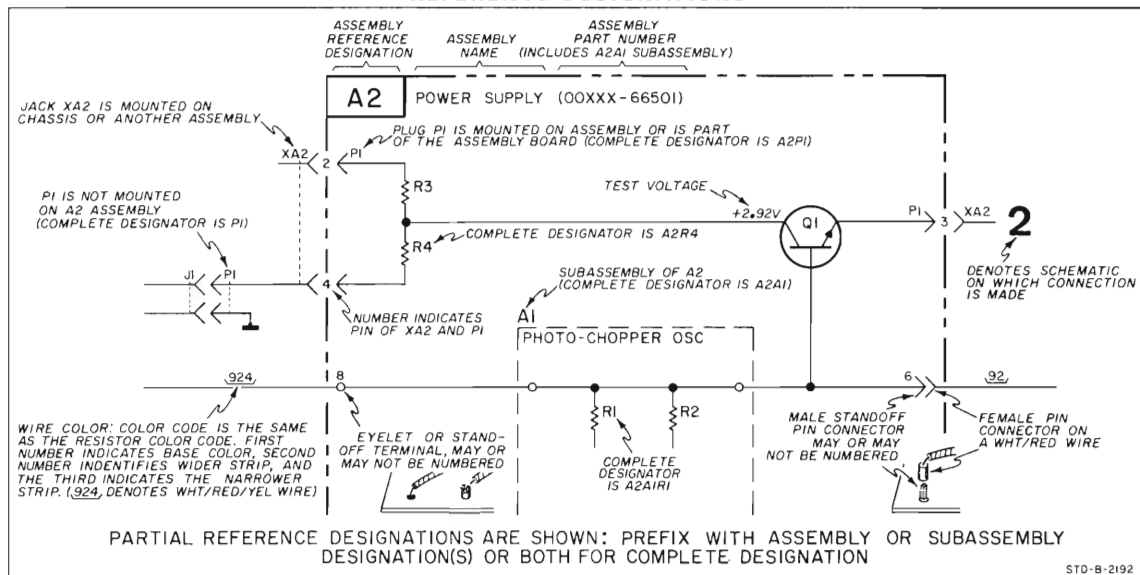

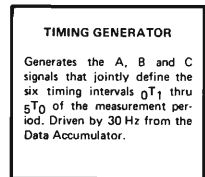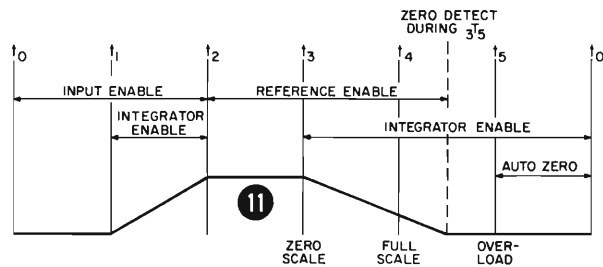


TIMING A, B

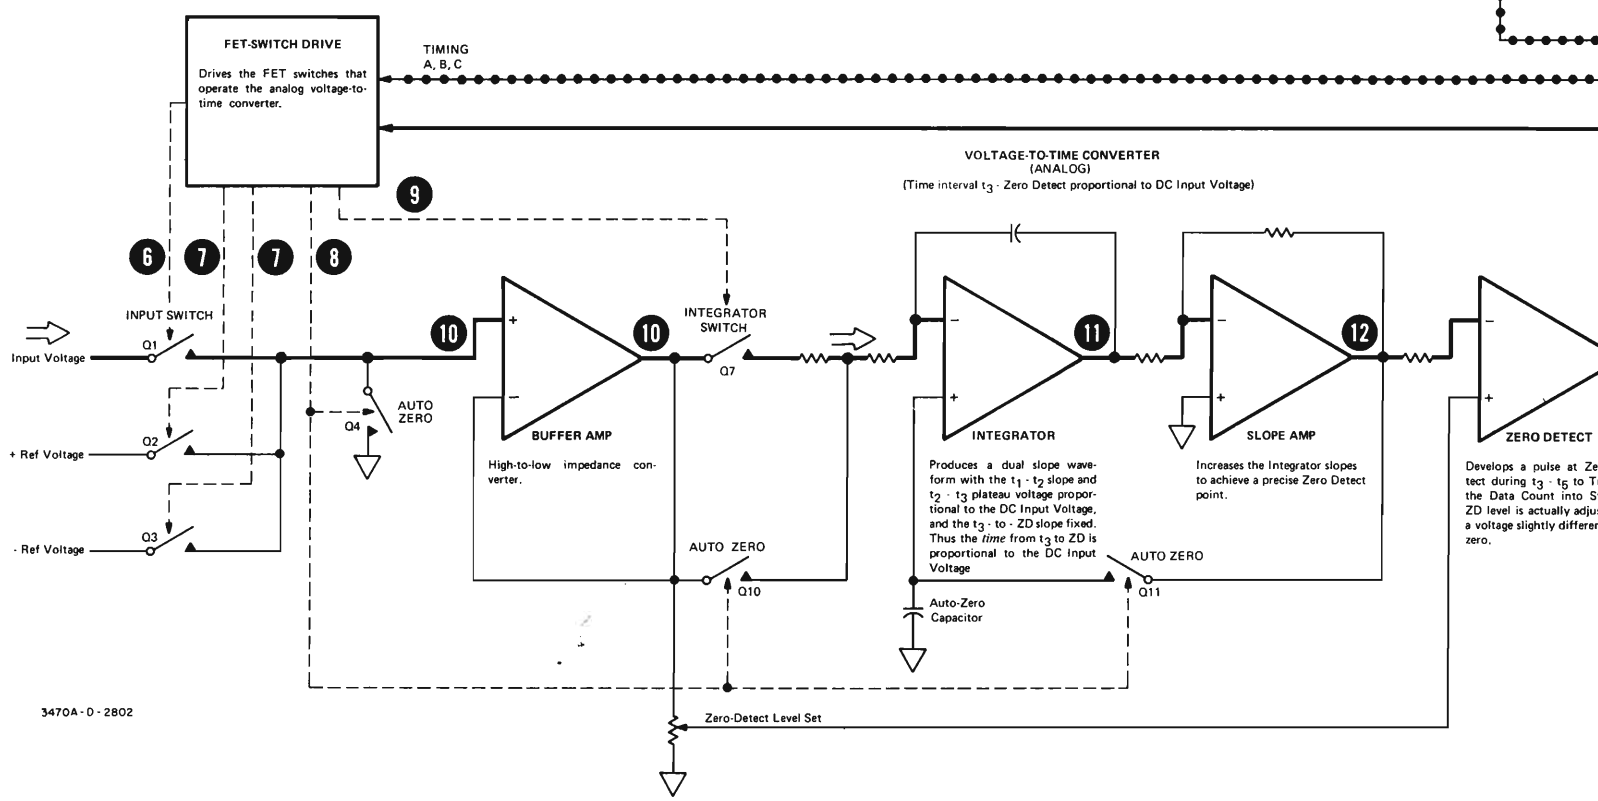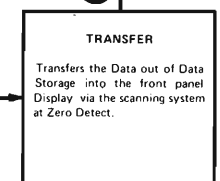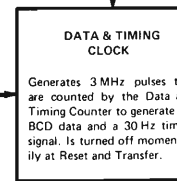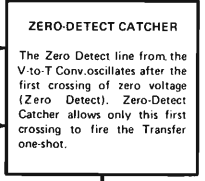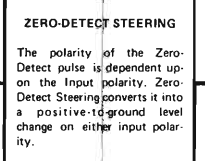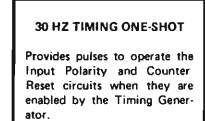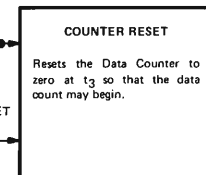

- NOTES**
- Timing System - free running; does not depend on Input Voltage.
 - Data System - (Analog and Logic) conditions Input Voltage; controlled by Timing.
 - Scanning System - basically free running, but Input Voltage determines BCD code in (19) and (24), and decimal code in (26).

34740A SIGNAL DEVELOPMENT

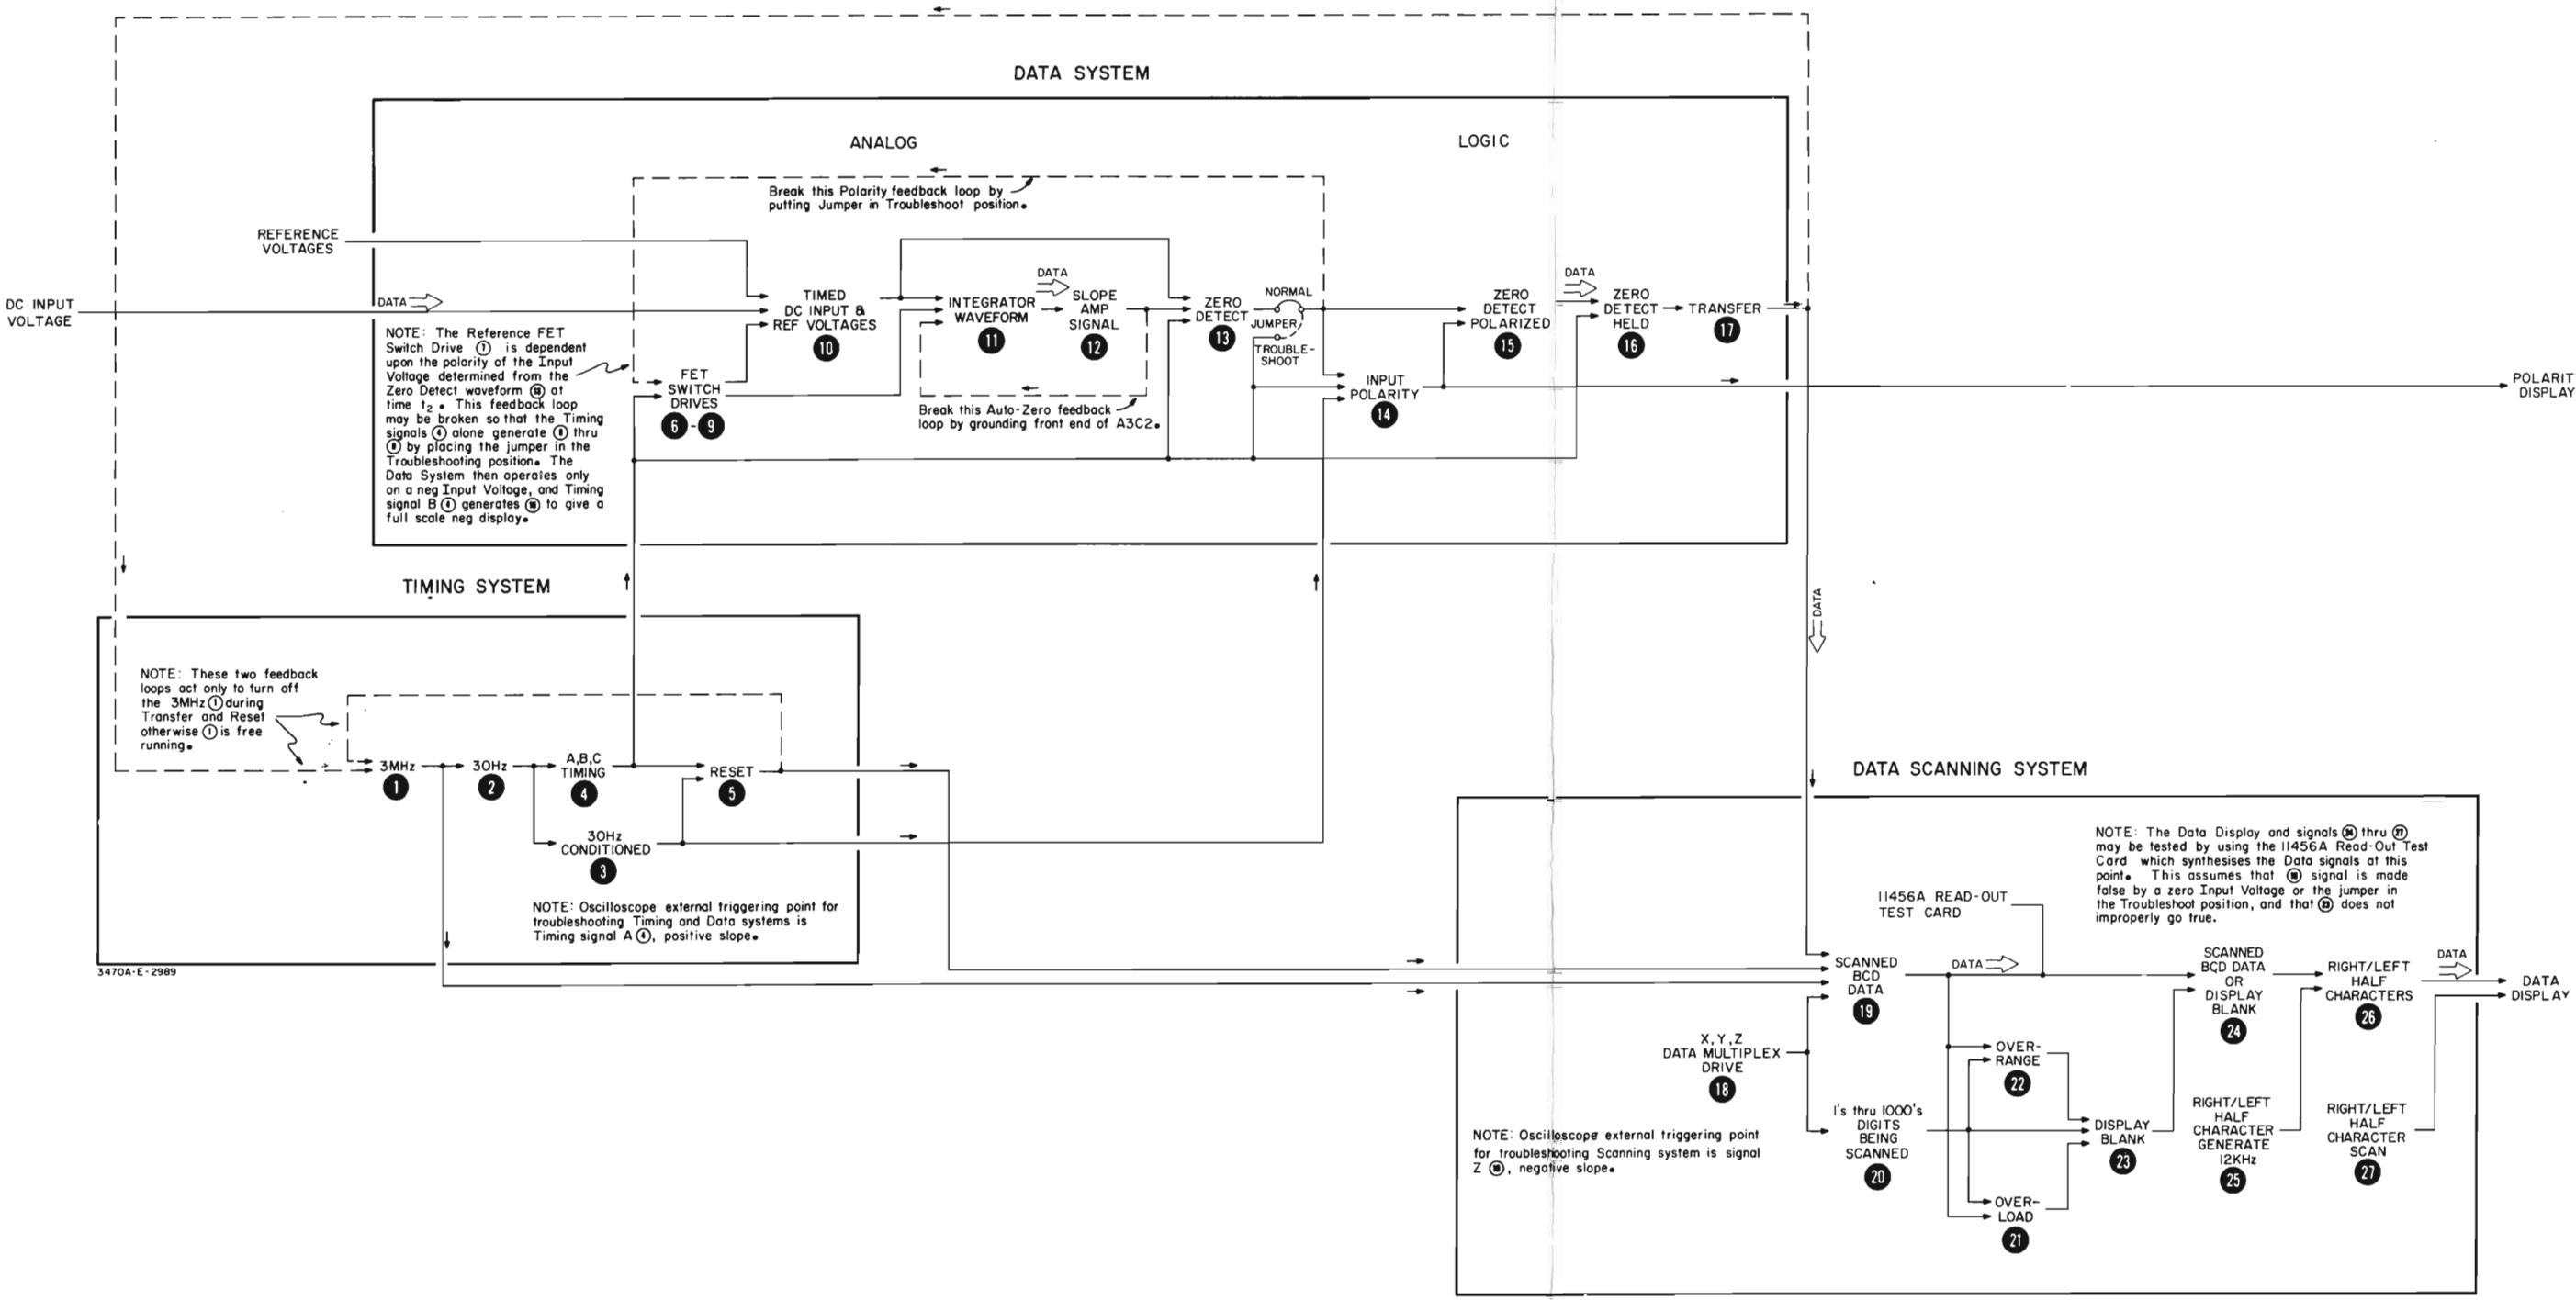

3470A-E-2989

Table 7-1. Faulty Components.

Signals that Develop The 27 Major Signals	Major Signals	Faulty Components**
(5)* (17)*	(1)	U7, U13, Y1/U9
(1)	(2)	U9, Q18, CR13, CR15/U11, U7
(2)	(3)	U11/U10, U11
(2)	(4)	U7, U16, U18, U20, U17/U10, U19, Q17, CR12 (U14, U16, U17 if Jumper in troubleshoot (B) position)
(3) (4)	(5)	U11, U19/U7
(4)	(6)	Q12, CR2
(4) (13)*	(7)	Q13, Q14, CR3, CR4, U17, U14
(4)	(8)	Q15, CR5, CR6, CR8, U17/U10
(4)	(9)	Q16, CR7, U19
(6) (7) (8) (9)	(10)	Q1 thru Q6, CR1 thru CR7, U21/Q7
(10) (12)*	(11)	Q7, Q8, U22, CR7
(4) (10) (12)	(11)	U23, Q11, CR8 thru CR10
(3) (4) (13)	(13)	U24, CR11, Q17, CR12
(13) (14)	(14)	U16, U10/U14, Q20
(4) (15)	(15)	U14/U10
(16)	(16)	U10, U4, U17/U15
(16)	(17)	U15
(16)	(18)	U1/U9, U5
(1) (5) (17) (18)	(19)	U7, U9, U12/U8, U6
(18)	(20)	U4, U5/U8, U5
(19) (20)	(21)	U4, U6, U8/U4, U5
(19) (20)	(22)	U8, U6/U5
(20) (21) (22)	(23)	U6, U5/U3
(18) (23)	(24)	U3, U5, U4/U2
(24)	(25)	U1/U2
(24) (25)	(26)	U2/U27
(26)	(27)	U1/Q21 thru Q29

* These are feedback signals. (5) and (17) act only to cut off (1) momentarily; check that they are not permanently in the disabling state. (13) may be broken by putting the troubleshooting jumper in the troubleshoot position. (12) may be broken by grounding the front end of A3C2.

** Components to left of diagonal generate the signal; those to right may load down signal.

The 3MHz signal is the only one in the Timing System not developed by other signals. It is free running except for being turned off momentarily by the Reset and Transfer signals.

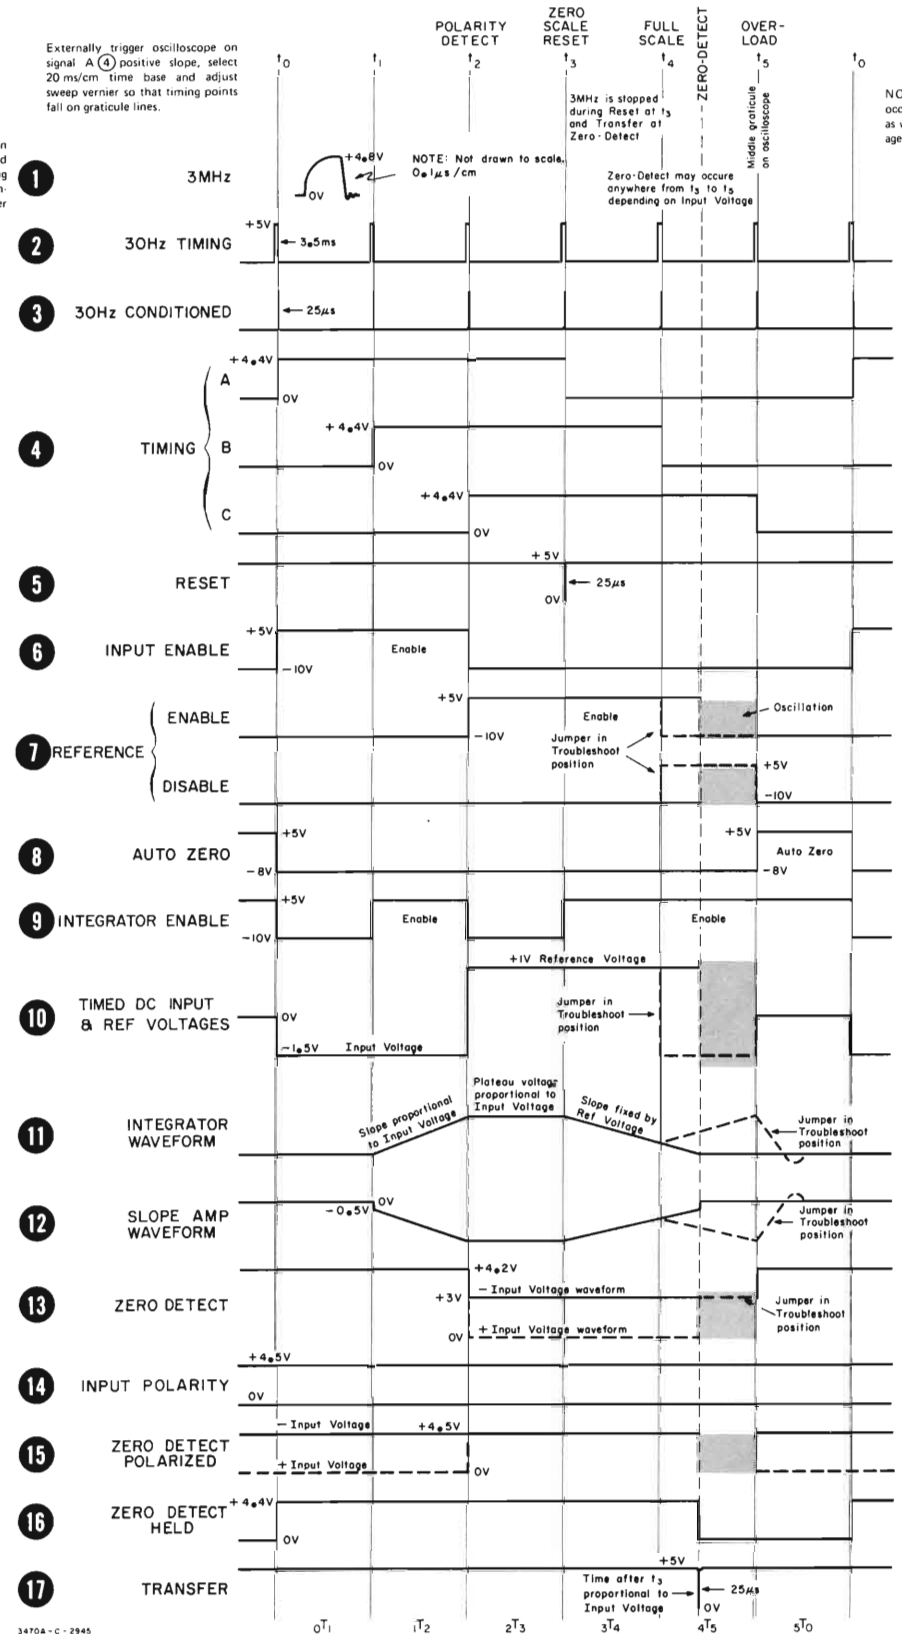


Figure 7-3. Timing Diagram.

SCANNING SYSTEM

18

DATA MULTIPLEX DRIVE

19

24

SCANNED DATA

(These waveforms are a binary code of the five Display digits. A typical display of 18075 is shown here.)

20

1'S THRU 1000'S DIGITS BEING SCANNED

21

OVERLOAD

22

NOT OVERRANGE

23


DISPLAY BLANK

25

RIGHT/LEFT HALF CHARACTER GENERATE (SCANNER CLOCK)

27

DISPLAY SCAN

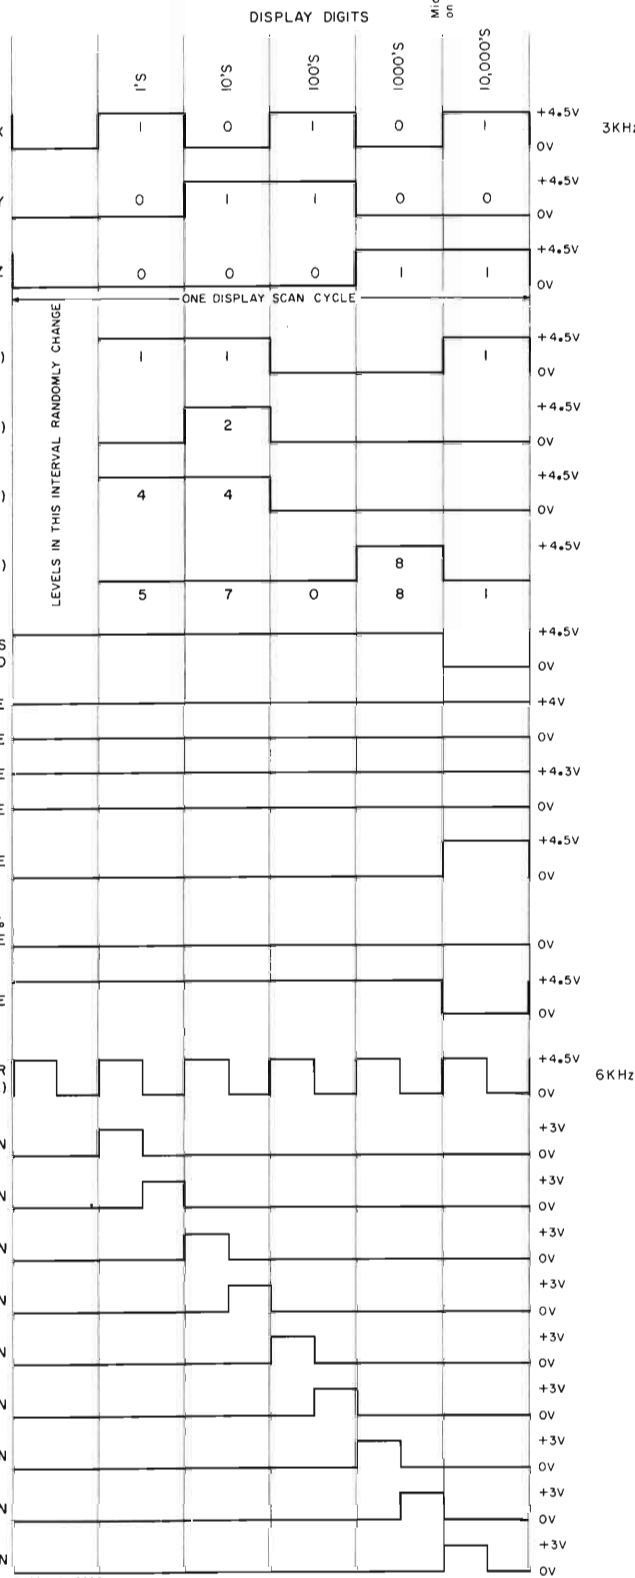

3470A-C-2992

Figure 7-4. Scanning Diagram.

11456A READOUT TEST CARD

Power Supply Voltages.
(See A3 drawing for position of $\pm 6V$ supply voltages.)

Reference Voltages.
Connect these pins to INPUT pin to test full scale readout. Display should be $\pm 10000 (\pm 3 \text{ counts})$.

3470A-B-3010

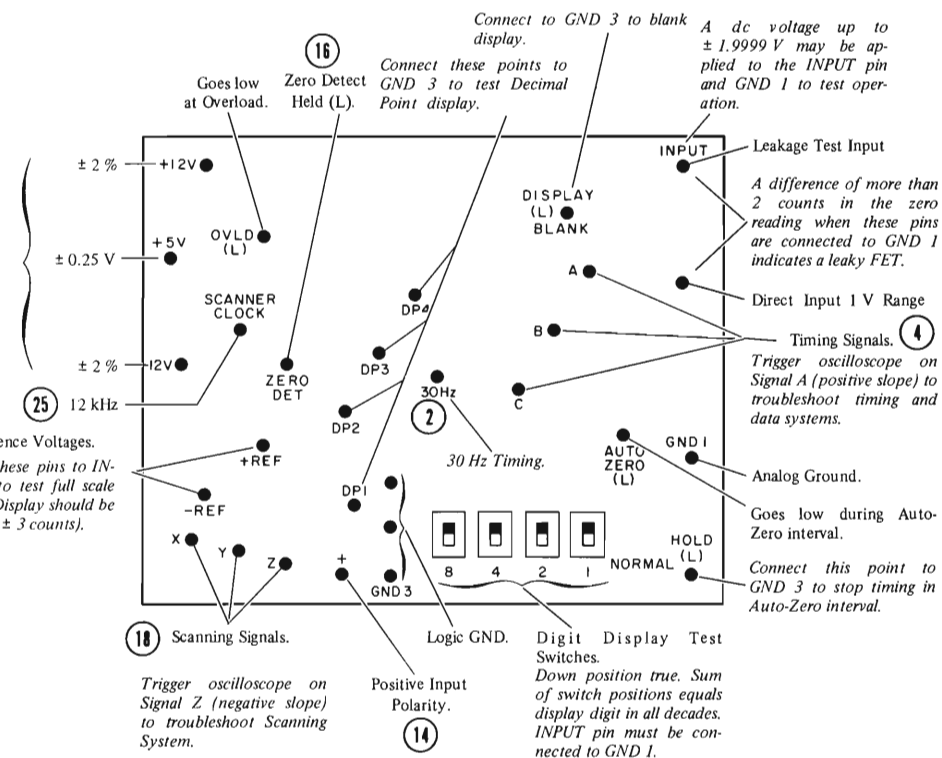


Figure 7-5. 11456A Readout Test Card.

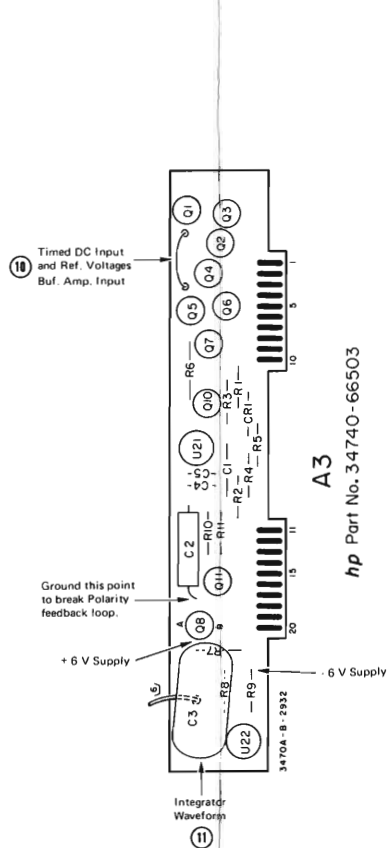


Figure 7-6. A3.

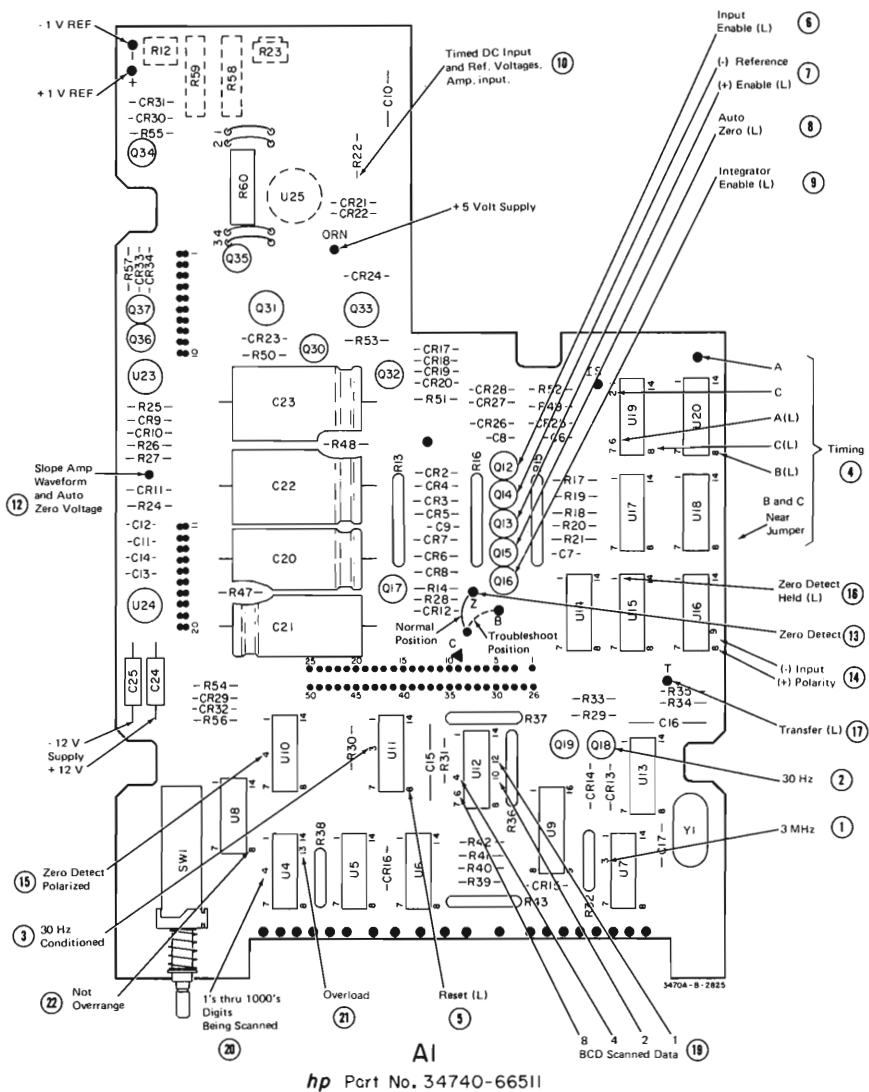


Figure 7-7. A1.




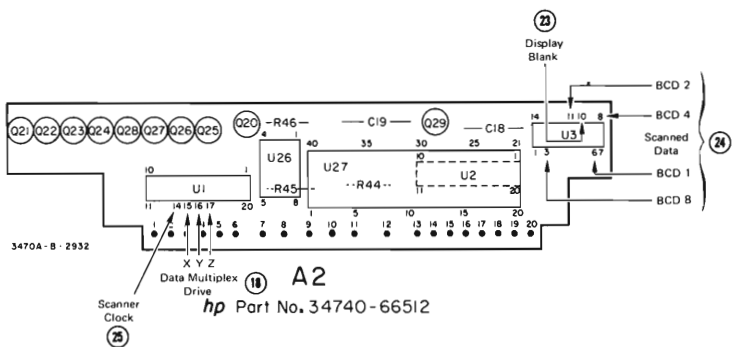


Figure 7-8. A2.

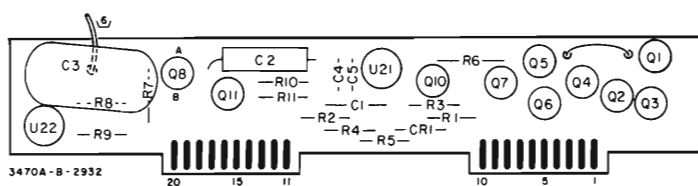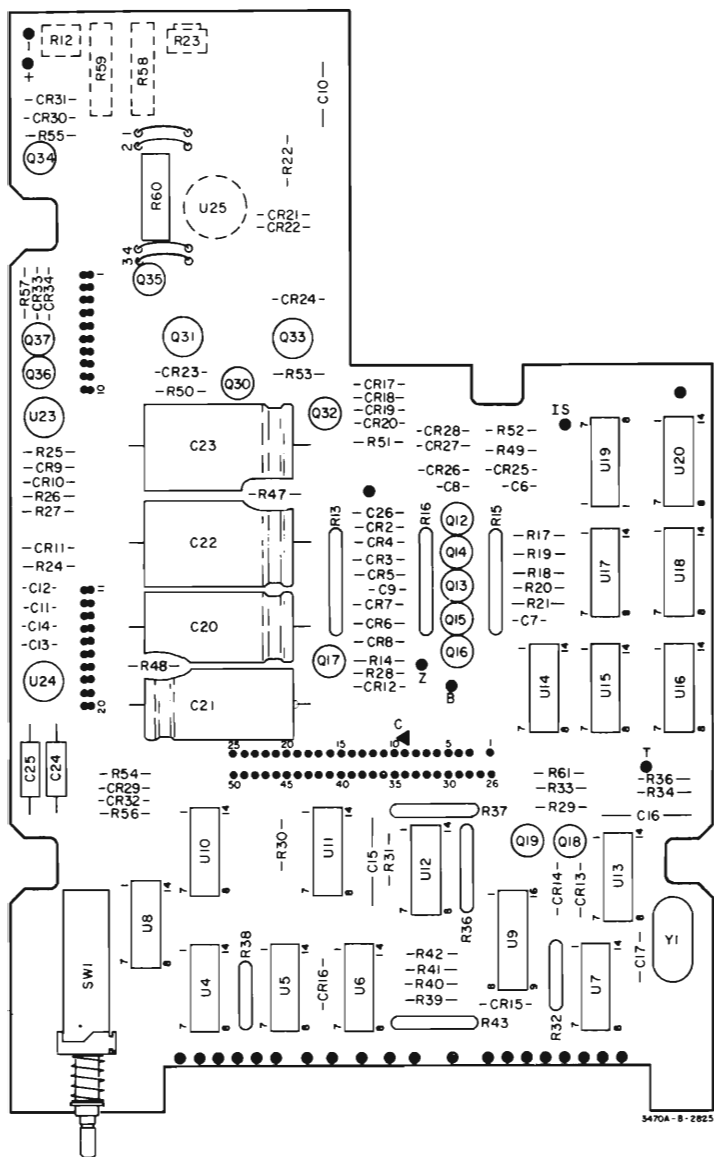



A3

hp Part No. 34740-66503

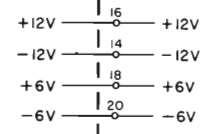




PLUG-ON
MODULE

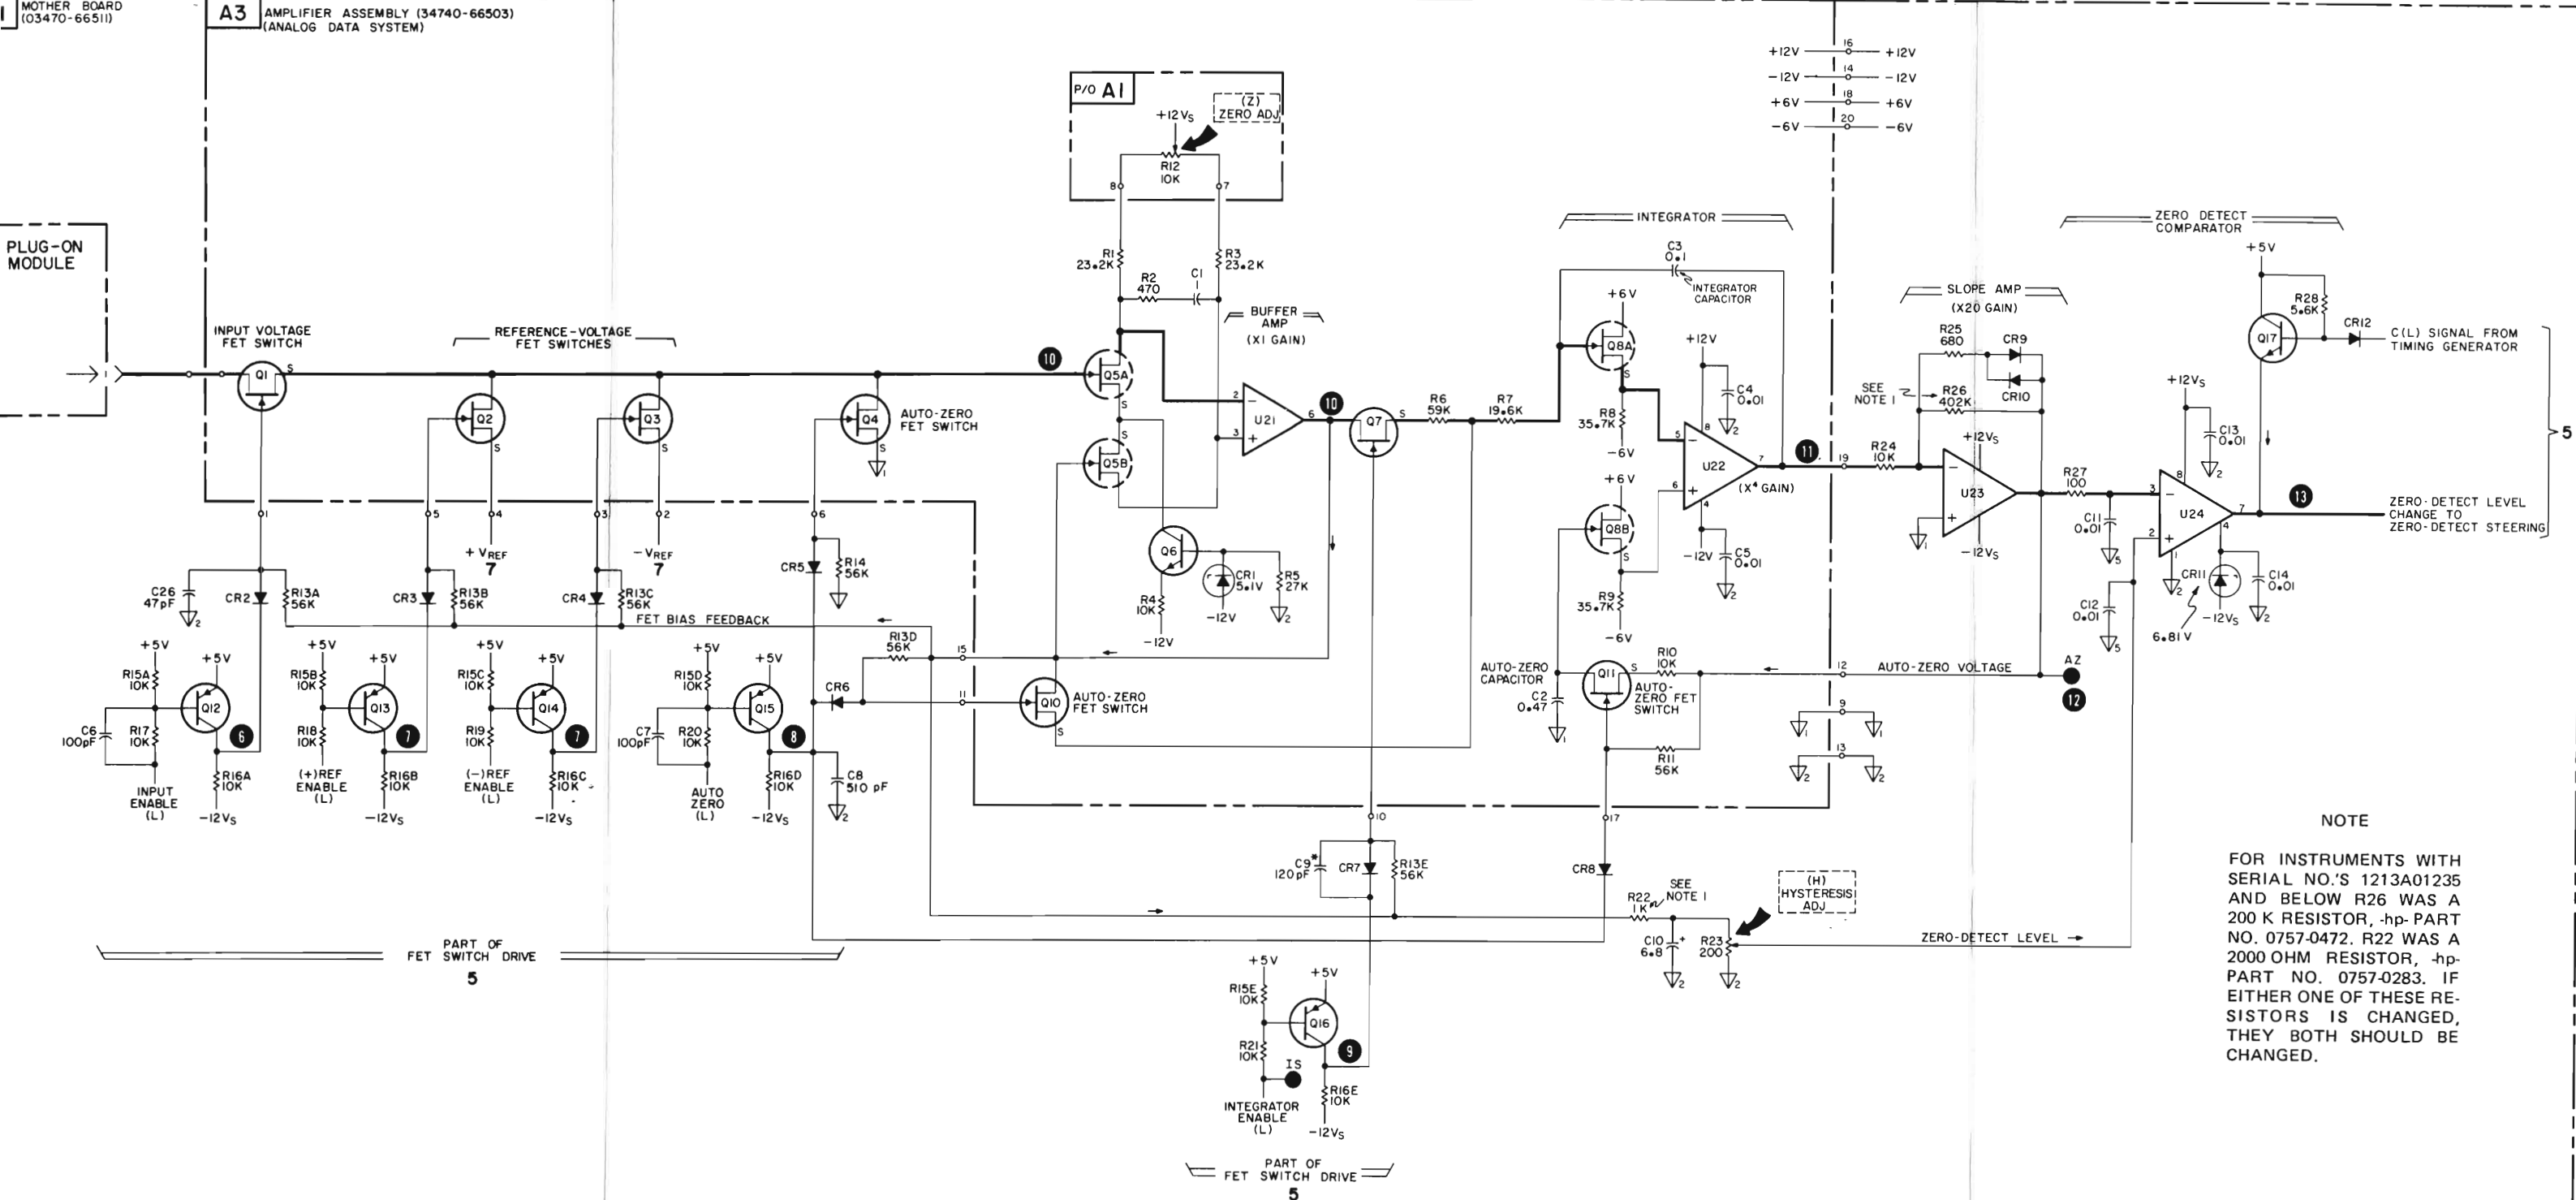


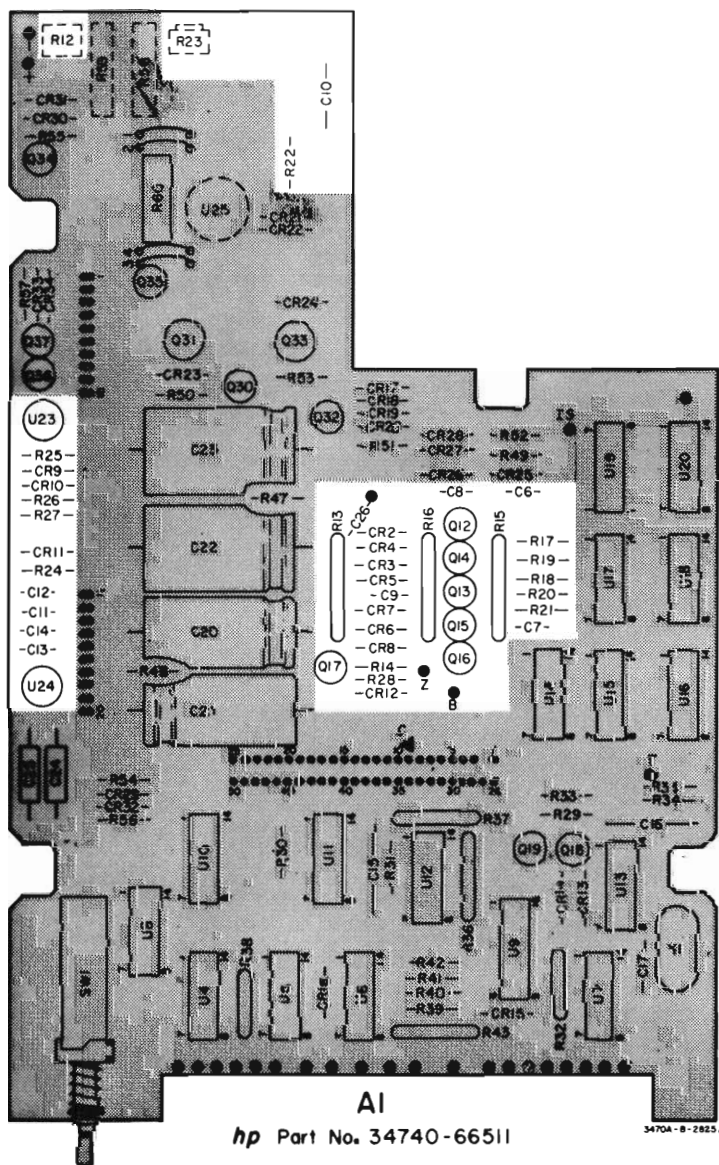

LOGIC DATA SYSTEM & TIMING SYSTEM

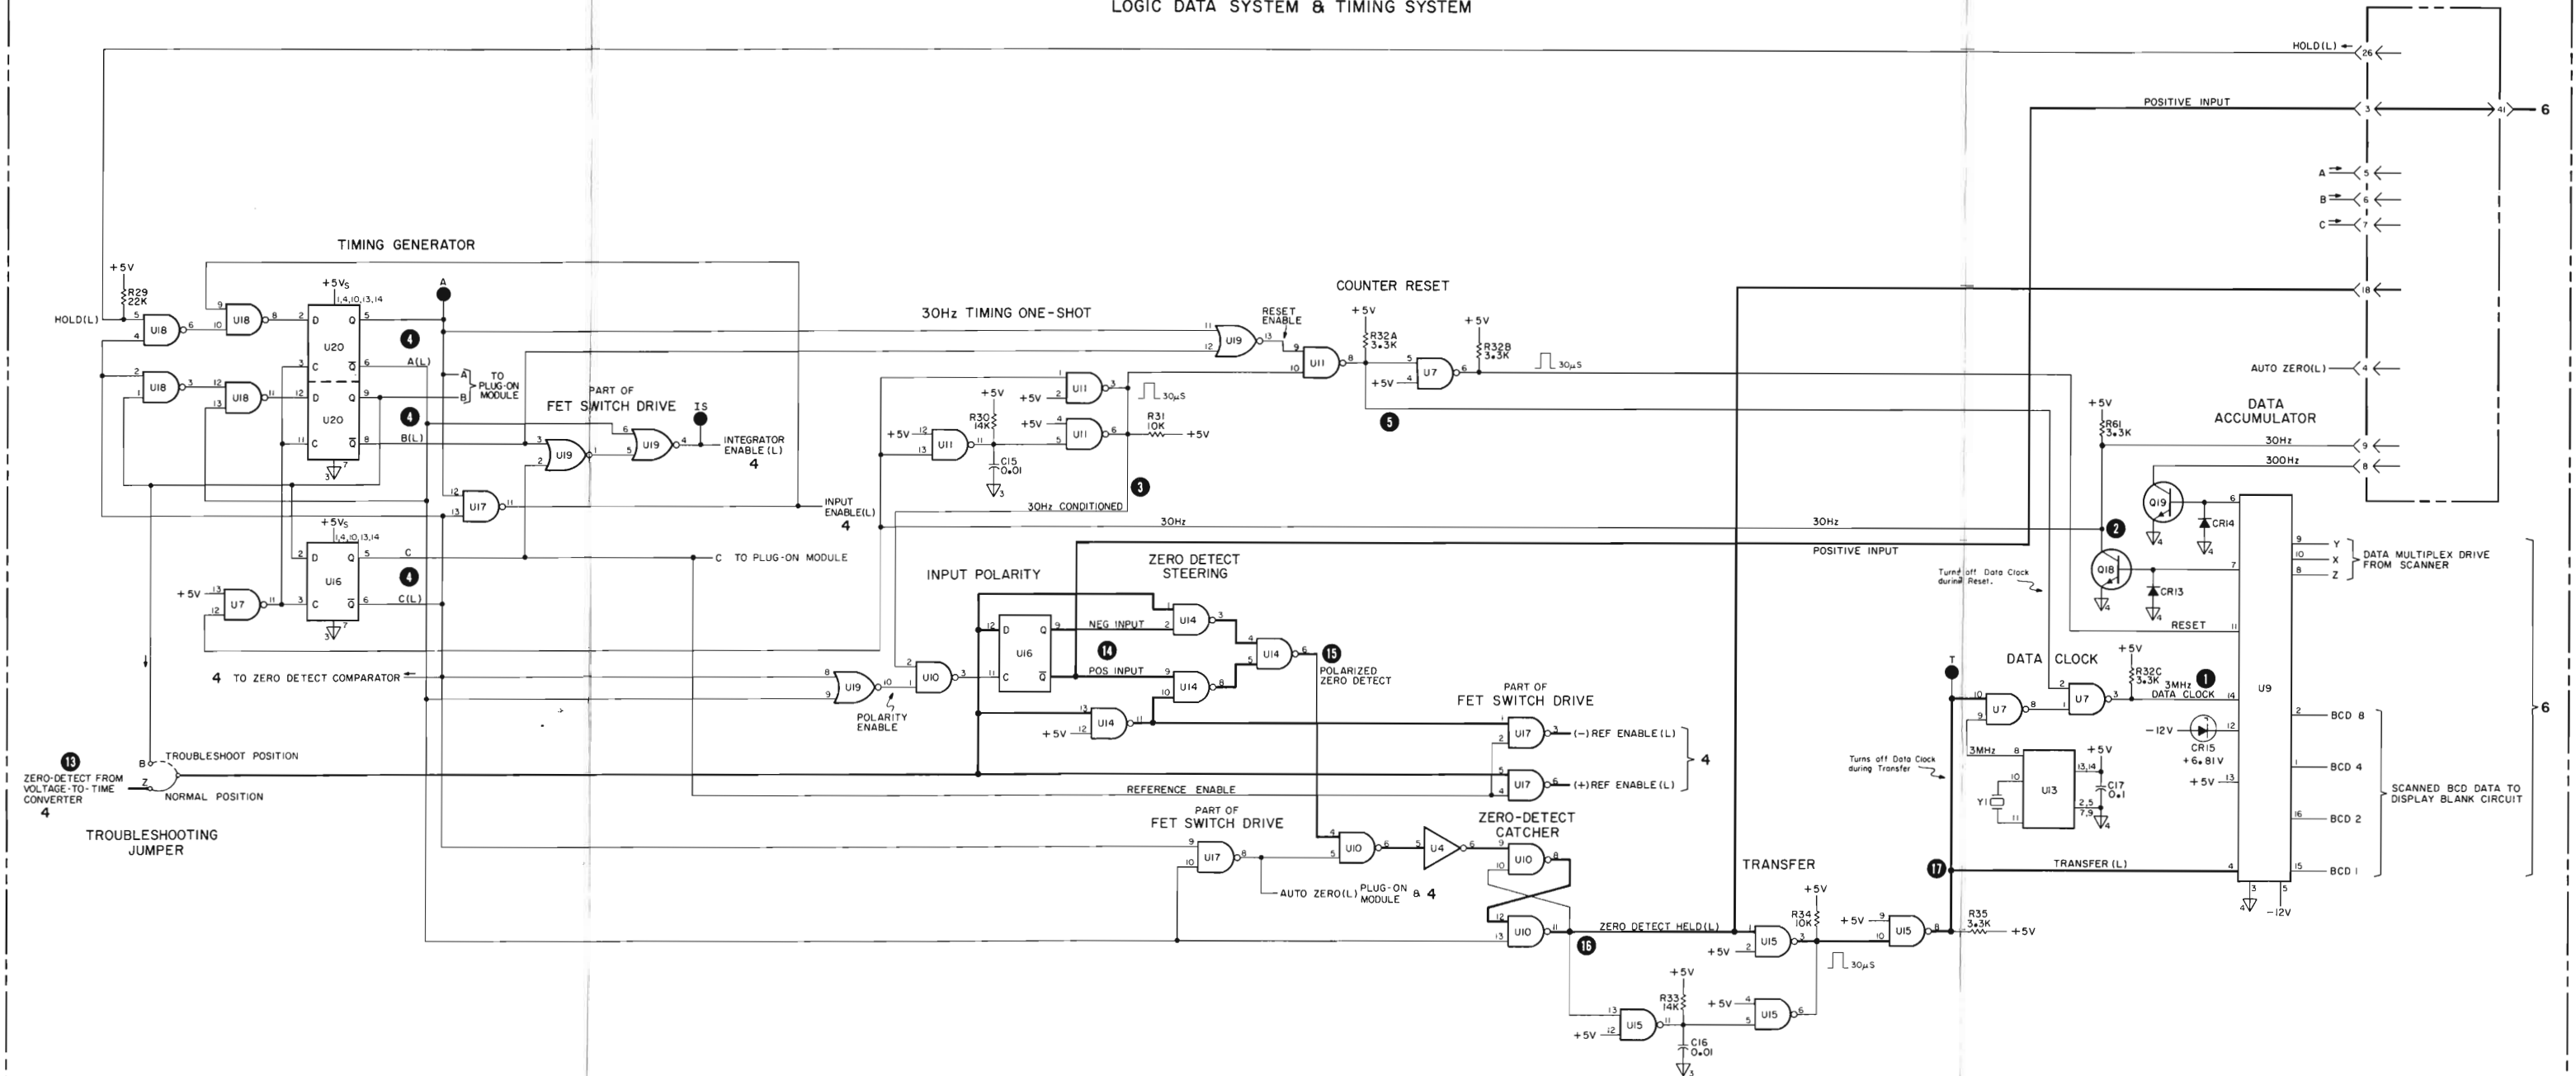

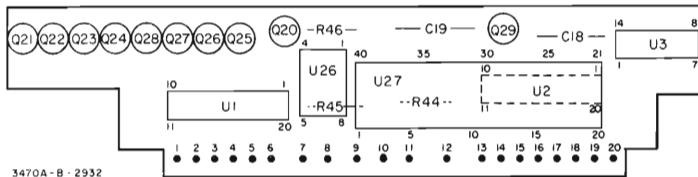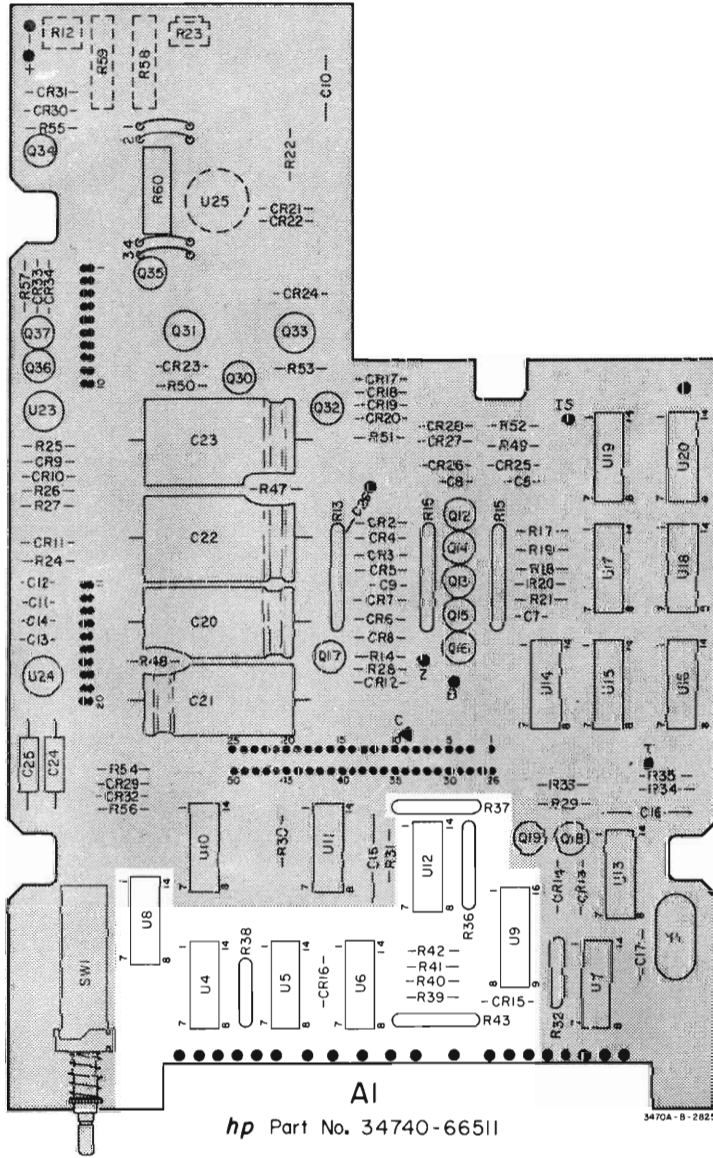

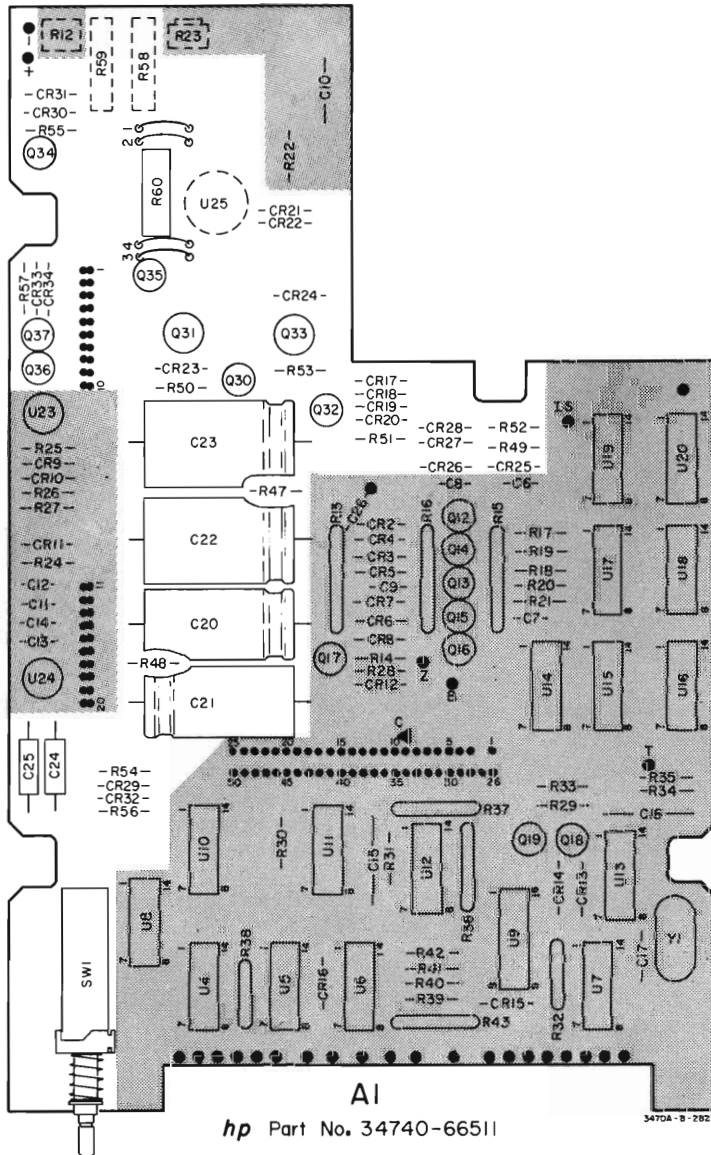

AI
hp Part No. 34740-66511

3470A-B-2825A



7-15/7-16

Rev. A

CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A Common	Any supplier of U. S.	05347	Ultronix, Inc.	San Mateo, Cal.	11236	CTS of Berne, Inc.	Berne, Ind.
00136	McCoy Electronics	Mount Holly Springs, Pa.	05397	Union Carbide Corp., Elect.	Div.	11237	Chicago Telephone of	California, Inc.
00213	Sage Electronics Corp.	Rochester, N. Y.	05574	Viking Ind. Inc.	Canoga Park, Cal.	11242	Bay State Electronics Corp.	Waltham, Mass
00287	Cemco, Inc.	Danielson, Conn.	05593	Icore Electro-Plastics Inc.	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave	Div.
00334	Humidial	Colton, Calif.	05616	Cosmo Plastic (c/o Electrical	Spec Co.)	11314	National Seal	Palo Alto, Cal.
00348	Mictron, Co., Inc.	Valley Stream, N. Y.	05624	Barber Colman Co.	Rockford, Ill.	11453	Precision Connector Corp.	Jamaica, N. Y.
00373	Carlock Inc.	Cherry Hill, N. J.	05728	Tiffen Optical Co.	Roslyn Heights, Long Island, N. Y.	11534	Duncan Electronics Inc.	Costa Mesa, Cal.
00656	Aerovox Corp.	New Bedford, Mass.	05729	Metro-Tel Corp.	Westbury, N. Y.	11711	General Instrument Corp.,	Semiconductor Division Products
00779	Amp, Inc.	Harrisburg, Pa.	05783	Stewart Engineering Co.	Santa Cruz, Cal.	Group	Newark, N. J.	
00781	Aircraft Radio Corp.	Boonton, N. J.	05820	Wakefield Engineering Inc.	Wakefield, Mass.	11717	Imperial Electronic, Inc.	Buena Park, Cal.
00809	Croven, Ltd.	Whitby, Ontario, Canada	06004	Bassick Co., Div. of Stewart	Warner Corp.	11870	Melabs, Inc.	Palo Alto, Cal.
00815	Northern Engineering	Laboratories, Inc.	06090	Raychem Corp.	Redwood City, Cal.	12136	Philadelphia Handle Co.	Camden, N. J.
00853	Sangamo Electric Co.,	Pickens Div.	06175	Bausch and Lomb Optical	Co.	12361	Grove Mfg. Co., Inc.	Shady Grove, Pa.
00866	Goe Engineering Co.	City of Industry, Cal.	06402	E. T. A. Products Co. of	America	12574	Gulton Ind. Inc., Data System	Div.
00891	Carl E. Holmes Corp.	Los Angeles, Cal.	06540	Amatam Electronic Hardware	Co., Inc.	12697	Clarostat Mfg. Co.	Dover, N. H.
00929	Microlab Inc.	Livingston, N. J.	06555	Beebe Electrical Instrument	Co., Inc.	12728	Elmar Filter Corp.	W. Haven, Conn.
01002	General Electric Co.,	Capacitor Dept.	06666	General Devices Co., Inc.	Indianapolis, Ind.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan
01009	Alden Products Co.	Brockton, Mass.	06751	Components Inc., Ariz. Div.	Phoenix, Arizona	12881	Metex Electronics Corp.	Clark, N. J.
01121	Allen Bradley Co.	Milwaukee, Wis.	06812	Torrington Mfg. Co., West Div.	Van Nuys, Cal.	12930	Delta Semiconductor Inc.	Newport Beach, Cal.
01255	Litton Industries, Inc.	Beverly Hills, Cal.	06980	Varian Assoc. Etmac Div.	San Carlos, Cal.	12954	Dickson Electronics Corp.	Scottsdale, Arizona
01281	TRW Semiconductors, Inc.	Lawndale, Cal.	07088	Kelvin Electric Co.	Van Nuys, Cal.	13019	Aircro Supply Co., Inc.	Wichita, Kansas
01295	Texas Instruments, Inc.,	Transistor Products Div.	07126	Digitran Co.	Pasadena, Cal.	13061	Wilco Products	Detroit, Mich.
01349	The Alliance Mfg. Co.	Alliance, Ohio	07137	Transistor Electronics	Corp.	13103	Thermolloy	Dallas, Texas
01538	Small Parts Inc.	Los Angeles, Cal.	07138	Westinghouse Electric	Corp., Electronic Tube Div.	13327	Solitron Devices Inc.	Tappan, N. Y.
01589	Pacific Relays, Inc.	Van Nuys, Cal.	07149	Filmohm Corp.	New York, N. Y.	13396	Telefunken (GmbH)	Hanover, Germany
01670	Gudebrod Bros. Silk Co.	New York, N. Y.	07233	Cinch-Graphix Co.	City of Industry, Cal.	13835	Midland-Wright Div. of	Pacific Industries, Inc.
01930	Amerock Corp.	Rockford, Ill.	07256	Silicon Transistor Corp.	Carle Place, N. Y.	14099	Sem-Tech	Newbury Park, Cal.
01960	Pulse Engineering Co.	Santa Clara, Cal.	07261	Avnet Corp.	Culver City, Cal.	14193	Calif. Resistor Corp.	Santa Monica, Cal.
02114	Ferroxcube Corp. of	America	07263	Fairchild Camera & Inst. Corp.,	Semiconductor Div.	14298	American Components, Inc.	Conshohocken, Pa.
02116	Wheelock Signals, Inc.	Saugerties, N. Y.	07322	Minnesota Rubber Co.	Mountain View, Cal.	14433	ITT Semiconductor, a Div. of	Int. Telephone and Telegraph
02286	Cole Rubber and Plastics Inc.	Sunnyvale, Cal.	07387	Bircher Corp., The	Monterey Park, Cal.	Corporation	West Palm Beach, Fla.	
02660	Amphenol-Borg Electronics	Corp.	07397	Sylvania Elect. Prod. Inc.,	Mt. View Operations	14493	Hewlett-Packard Company	Loveland, Colo.
02735	Radio Corp. of America, Semi-	conductor and Materials	07700	Technical Wire Products	Inc.	14655	Cornell Dublier Electric Corp.	Newark, N. J.
02771	Vocaline Co. of America,	Inc.	07829	Bodine Elect. Co.	Cranford, N. J.	14674	Corning Glass Works	Corning, N. Y.
02777	Hopkins Engineering Co.	San Fernando, Cal.	07910	Continental Device Corp.	Hawthorne, Cal.	14752	Electro Cube Inc.	San Gabriel, Cal.
02875	Hudson Tool & Die	Newark, N. J.	07933	Raytheon Mfg. Co., Semi-	conductor Div.	14960	Williams Mfg. Co.	San Jose, Cal.
03296	Nylon Molding Corp.	Springfield, N. J.	08145	U. S. Engineering Co.	Los Angeles, Cal.	15106	The Sphere Co., Inc.	Little Falls, N. J.
03508	G. E. Semiconductor Prod.	Dept.	08289	Blinn, Delbert Co.	Pomona, Cal.	15203	Webster Electronics Co.	New York, N. Y.
03705	Apex Machine & Tool Co.	Dayton, Ohio	08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada	15287	Scionics Corp.	Northridge, Cal.
03797	Eldema Corp.	Compton, Calif.	08524	Deutsch Fastener Corp.	Los Angeles, Cal.	15291	Adjustable Bushing Co.	N. Hollywood, Cal.
03818	Parker Seal Co.	Los Angeles, Cal.	08664	Bristol Co., The	Waterbury, Conn	15558	Micron Electronics, Garden City, Long Island, N. Y.	
03877	Transitron Electric Corp.	Wakefield, Mass.	08717	Sloan Company	Sun Valley, Cal.	15566	Amprobe Inst. Corp.	Lynbrook, N. Y.
03888	Pyrofilm Resistor Co.,	Inc.	08718	ITT Cannon Electric Inc.,	Phoenix Div.	15631	Cabletronics	Costa Mesa, Cal.
03954	Singer Co., Diehl Div.,	Finderne Plant	08727	National Radio Lab. Inc.	Paramus, N. J.	15772	Twentieth Century Coil	Spring Co.
04009	Arrow, Hart and Hegeman	Elect. Co.	08792	CBS Electronics Semiconductor	Operations, Div. of CBS Inc.	15801	Fenwal Elect. Inc.	Frankingham, Mass.
04013	Taruus Corp.	Lambertville, N. J.	08806	General Electric Co.,	Miniature Lamp Dept.	15818	Ameco Inc.	Mountain View, Cal.
04062	Arco Electronic Inc.	Great Neck, N. Y.	08984	Mel-Rain	Indianapolis, Ind.	16037	Spruce Pine Mica Co.	Spruce Pine, N. C.
04217	Essex Wire	Los Angeles, Cal.	09026	Babcock Relays Div.	Costa Mesa, Cal.	16179	Omni-Spectra Inc.	Detroit, Ill.
04222	Hi-Q Division of Aerovox.	Myrtle Beach, S. C.	09097	Electronic Enclosures Inc.	Los Angeles, Calif.	16352	Computer Diode Corp.	Lodi, N. J.
04354	Precision Paper Tube Co.	Wheeling, Ill.	09134	Texas Capacitor Co.	Houston, Texas	16554	Electroid Co.	Union, N. J.
04404	Palo Alto Division of Hewlett-	Packard Co.	09145	Tech. Ind. Inc. Atohm	Elect.	16585	Boots Aircraft Nut Corp.	Pasadena, Cal.
04651	Sylvania Electric Products,	Microwave Device Div.	09250	Electro Assemblies, Inc.	Chicago, Ill.	16688	Ideal Prec. Meter Co., Inc.,	De Jur Meter Div.
04673	Dakota Engr. Inc.	Culver City, Cal.	09353	C & K Components Inc.	Newton, Mass.	16758	Delco Radio Div. of G. M. Corp.	Kokomo, Ind.
04713	Motorola Inc. Semiconductor	Prod. Div.	09569	Mallory Battery Co. of	Canada, Ltd.	17109	Thermometrics Inc.	Canoga Park, Cal.
04732	Filttron Co., Inc. Western	Div.	09795	Pennsylvania Florocarbon.	Clifton Heights, Penn.	17474	Tranex Company	Mountain View, Cal.
04773	Automatic Electric Co.	Northlake, Ill.	09822	Burdry Corp.	Norwalk, Conn.	17675	Hamlin Metal Products Corp.	Akron, Ohio
04796	Sequoia Wire Co.	Redwood City, Cal.	10214	General Transistor Western	Corp.	17745	Angstrom Prec. Inc.	No. Hollywood, Cal.
04811	Precision Coil Spring Co.	El Monte, Cal.	10411	Ti-Tal, Inc.	Berkeley, Cal.	17856	Siliconix Inc.	Sunnyvale, Cal.
04870	P. M. Motor Company	Westchester, Ill.	10646	Carborundum Co.	Niagara Falls, N. Y.	17870	McGraw-Edison Co.	Manchester, N. H.
04919	Component Mfg. Service	Co.				18042	Power Design Pacific Inc.	Palo Alto, Cal.
05006	Twentieth Century Plastics,	Inc.				18083	Clevite Corp. Semiconductor Div.	Palo Alto, Cal.
05277	Westinghouse Electric Corp.	Semiconductor Dept.				18324	Synetics Corp.	Sunnyvale, Cal.
						18476	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
						18486	TRW Elect. Comp. Div.	Des Plaines, Ill.
						18565	Chomerics	Plainville, Mass.
						18583	Curtis Instrument, Inc.	Mt. Kisco, N. Y.
						18612	Vishay Instruments Inc.	Malvern, Pa.
						18873	E. I. DuPont and Co., Inc.	Wilmington, Del.
						18911	Durant Mfg. Co.	Milwaukee, Wis.
						19315	The Bendix Corp., Navigation &	Control Div.
						19500	Thomas A. Edison Industries,	Div. of McGraw-Edison
						19589	Concoa	Baldwin Park, Cal.

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
19644	LRC Electronics	Horseheads, N. Y.	71482	C. P. Clare & Co.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
19701	Electra Mfg. Co.	Independence, Kansas	71590	Centralab Div. of		78471	Tilley Mfg. Co.	San Francisco, Cal.
20183	General Atomics Corp.	Philadelphia, Pa.		Globe Union Inc.	Milwaukee, Wis.	78488	Stackpole Carbon Co.	St. Marys, Pa.
21226	Executone, Inc.	Long Island City, N. Y.	71616	Commercial Plastics Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
21355	Fafnir Bearing Co., The	New Britain, Conn.	71700	Cornish Wire Co., The	New York, N. Y.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
21520	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71707	Coto Coil Co., Inc.	Providence, R. I.	78790	Transformer Engineers	San Gabriel, Cal.
23020	General Reed Co.	Metuchen, N. J.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78947	Ucinite Co.	Newtonville, Mass.
23042	Texscan Corp.	Indianapolis, Ind.	71785	Cinch Mfg. Co.		79136	Waldes Kohinoor Inc.	Long Island City, N. Y.
23783	British Radio Electronics Ltd.	Washington, D.C.		Howard B. Jones Div.	Chicago, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
24455	G. E. Lamp Division	Nela Park, Cleveland, Ohio	71984	Dow Corning Corp.	Midland, Mich.	79251	Wenco Mfg. Co.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	72136	Electro Motive Mfg. Co., Inc.		79727	Continental-Wirt Electronics Corp.	
24681	Memcor Inc., Comp. Div.	Huntington Ind.			Willimantic, Conn.			
26365	Gries Reproductor Corp.	New Rochelle, N. Y.	72619	Dialight Corp.	Brooklyn, N. Y.	79963	Zierick Mfg. Corp.	New Rochelle, N. Y.
26462	Grobert File Co. of America, Inc.	Carlstadt, N. J.	72656	Indiana General Corp.,		80031	Mepco Division of Sessions Clock Co.	
26851	Compac/Hollister Co.	Hollister, Cal.		Electronics Div.	Keasby, N. J.			
26992	Hamilton Watch Co.	Lancaster, Pa.	72699	General Instrument Corp.,		80033	Prestole Corp.	Morristown, N. J.
28480	Hewlett-Packard Co.	Palo Alto, Cal.		Cap Division	Newark, N. J.	80120	Schnitzler Alloy Products Co.	Elizabeth, N. J.
28520	Heyman Mfg. Co.	Kenilworth, N. J.	72765	Drake Mfg. Co.	Harwood Heights, Ill.	80131	Electronic Industries Association.	
30817	Instrument Specialties Co.,		72825	Hugh H. Eby Inc.	Philadelphia, Pa.		Standard tube or semi-conductor device,	
	Inc.	Little Falls, N. J.	72928	Quedman Co.	Chicago, Ill.		any manufacturer.	
33173	G. E. Receiving Tube Dept.	Owensboro, Ky.	72962	Elastic Stop Nut Corp.	Union, N. J.	80207	Unimax Switch, Div. Maxon Electronics	
35434	Lectrohm Inc.	Chicago, Ill.	72964	Robert M. Hadley Co.	Los Angeles, Cal.		Corp.	Wallingford, Conn.
36196	Stanwyck Coil Products		72982	Erie Technological Products, Inc.	Erie, Pa.	80223	United Transformer Corp.	New York, N. Y.
	Ltd.	Hawkesbury, Ontario, Canada	73061	Hansen Mfg. Co., Inc.	Princeton, Ind.	80248	Oxford Electric Corp.	Chicago, Ill.
36287	Cunningham, W. H. & Hill,		73076	H. M. Harper Co.	Chicago, Ill.	80294	Bourns Inc.	Riverside, Cal.
	Ltd.	Toronto, Ontario, Canada	73138	Helipot Div. of Beckman Inst., Inc.		80411	Arco Div. of Robertshaw Controls Co.	
37942	P. R. Mallory & Co., Inc.	Indianapolis, Ind.			Fullerton, Cal.			
39543	Mechanical Industries Prod. Co.	Akron, Ohio	73293	Hughes Products Division of		80486	All Star Products Inc.	Columbus, Ohio
40920	Miniature Precision Bearings, Inc.	Keene, N. H.		Hughes Aircraft Co.	Newport Beach, Cal.	80509	Avery Label Co.	Defiance, Ohio
40931	Honeywell Inc.	Minneapolis, Minn.	73445	Amperex Elect. Co.	Hicksville, L. I., N. Y.	80583	Hammamund Co., Inc.	Monrovia, Cal.
42190	Muter Co.	Chicago, Ill.	73506	Bradley Semiconductor Corp.		80640	Stevens, Arnold, Co., Inc.	Mars Hill, N. C.
43990	C. A. Norgren Co.	Englewood, Colo.			New Haven, Conn.	80813	Dimco Gray Co.	Boston, Mass.
44655	Ohmite Mfg. Co.	Skokie, Ill.	73559	Carling Electric, Inc.	Hartford, Conn.	80813	International Inst. Inc.	Dayton, Ohio
46384	Penn Eng. & Mfg. Corp.	Doylestown, Pa.	73586	Circle F Mfg. Co.	Trenton, N. J.	81030	Grayhill Co.	Orange, Conn.
46904	Polaroid Corp.	Cambridge, Mass.	73682	George K. Garrett Co.,		81073	Grayhill Co.	LaGrange, Ill.
48620	Precision Thermometer &			Div. MSL Industries, Inc.	Philadelphia, Pa.	81095	Triad Transformer Corp.	Venice, Cal.
	Inst. Co.	Southampton, Pa.	73734	Federal Screw Products, Inc.	Chicago, Ill.	81312	Winchester Elec. Div. Litton Ind., Inc.	
49956	Microwave & Power Tube Div.	Waltham, Mass.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio			Oakville, Conn.
50290	Rowan Controller Co.	Westminster, Md.	73793	General Industries Co., The	Elyria, Ohio	81349	Military Specification	
52983	H. P. Co., Med. Elec. Div.	Waltham, Mass.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81483	International Rectifier Corp.	El Segundo, Cal.
54294	Shallcross Mfg. Co.	Selma, N. C.	73899	JFD Electronics Corp.	Brooklyn, N. Y.	81541	Airpax Electronics, Inc.	Cambridge, Maryland
55026	Simpson Electric Co.	Chicago, Ill.	73905	Jennings Radio Mfg. Corp.	San Jose, Cal.	81860	Barry Controls, Div. Barry Wright Corp.	Watertown, Mass.
55933	Sonotone Corp.	Elmsford, N. Y.	73957	Groove-Pin Corp.	Ridgefield, N. J.			
55938	Raytheon Co. Commercial Apparatus		74276	Signalite Inc.	Neptune, N. J.	82042	Carrier Precision Electric Co.	Skokie, Ill.
	& System Div.	So. Norwalk, Conn.	74455	J. H. Winns, and Sons	Winchester, Mass.	82047	Sperit Faraday Inc., Copper Hewitt	
56137	Spaulding Fibre Co., Inc.	Tonawanda, N. Y.	74861	Industrial Condenser Corp.	Chicago, Ill.		Electric Div.	Hoboken, N. J.
56289	Sprague Electric Co.	North Adams, Mass.	74868	R. F. Products Division of		82116	Electric Regulator Corp.	Norwalk, Conn.
58474	Superior Elect. Co.	Bristol, Conn.		Amphenol-Borg Electronic Corp.		82142	Jeffers Electronics Division of	
59446	Telex Corp.	Tulsa, Okla.			Danbury, Conn.		Speer Carbon Co.	Du Bois, Pa.
59730	Thomas & Betts Co.	Elizabeth, N. J.	74970	E. F. Johnson Co.	Waseca, Minn.	82170	Fairchild Camera & Inst. Corp.,	
60741	Triplet Electrical Inst. Co.	Bluffton, Ohio	75042	International Resistance Co.	Philadelphia, Pa.		Space & Defense Systems Div.	Paramus, N. J.
61775	Union Switch and Signal Div. of		75263	Keystone Carbon Co., Inc.	St. Marys, Pa.	82209	Magurie Industries, Inc.	Greenwich, Conn.
	Westinghouse Air Brake Co.	Pittsburgh, Pa.	75378	CTS Knights, Inc.	Sandwich, Ill.	82219	Sylvania Electric Prod., Inc.	
62119	Universal Electric Co.	Owosso, Mich.	75382	Kulka Electric Corp.	Mt. Vernon, N. Y.		Electronic Tube Division	Emporium, Pa.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N. Y.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.	82376	Astron Corp.	East Newark, Harrison, N. J.
64959	Western Electric Co., Inc.	New York, N. Y.	75915	Littlefuse, Inc.	Des Plaines, Ill.	82389	Switchcraft, Inc.	Chicago, Ill.
65092	Weston Inst. Inc. Weston-Newark	Newark, N. J.	76005	Lord Mfg. Co.	Erie, Pa.	82647	Metals & Controls Inc.,	
66295	Witte Mfg. Co.	Chicago, Ill.	76210	C. W. Marwedel	San Francisco, Cal.		Spencer Products	Attleboro, Mass.
66346	Minnesota Mining & Mfg. Co.		76433	General Instrument Corp.,		82768	Phillips-Advance Control Co.	Joliet, Ill.
	Revere Mincom Div.	St. Paul, Minn.		Micamold Division	Newark, N. J.	82866	Research Products Corp.	Madison, Wis.
70276	Allen Mfg. Co.	Hartford, Conn.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.	82877	Rolton Mfg. Co., Inc.	Woodstock, N. Y.
70309	Allied Control	New York, N. Y.	76493	J. W. Miller Co.	Los Angeles, Cal.	82893	Vector Electronic Co.	Glendale, Cal.
70318	Allmetal Screw Product Co., Inc.		76530	Cinch-Monadnock, Div. of United Carr		83058	Carr Fastener Co.	Cambridge, Mass.
		Garden City, N. Y.		Fastener Corp.	San Leandro, Cal.	83086	New Hampshire Ball	
70417	Amplex, Div. of Chrysler Corp.	Detroit, Mich.	76545	Mueller Electric Co.	Cleveland, Ohio		Bearing, Inc.	Peterborough, N. H.
70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	76703	National Union	Newark, N. J.	83125	General Instrument Corp.,	
70563	Amperite Co., Inc.	Union City, N. J.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.		Capacitor Div.	Darlington, S. C.
70674	ADC Products Inc.	Minneapolis, Minn.	77068	The Bendix Corp.,		83148	ITT Wire and Cable Div.	Los Angeles, Cal.
70903	Belden Mfg. Co.	Chicago, Ill.		Electrodynamics Div.	N. Hollywood, Cal.	83186	Victory Eng. Corp.	Springfield, N. J.
70998	Bird Electric Corp.	Cleveland, Ohio	77075	Pacific Metals Co.	San Francisco, Cal.	83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.
71002	Birnbach Radio Co.	New York, N. Y.	77221	Phaostan Instrument and		83315	Hubbell Corp.	Mundelein, Ill.
71034	Bliley Electric Co., Inc.	Erie, Pa.		Electronic Co.	So. Pasadena, Cal.	83324	Rosan Inc.	Newport Beach, Cal.
71041	Boston Gear Works Div. of		77252	Philadelphia Steel and		83330	Smith, Herman H., Inc.	Brooklyn, N. Y.
	Murray Co. of Texas	Quincey, Mass.		Wire Corp.	Philadelphia, Pa.	83332	Tech Labs	Palisades Park, N. J.
71218	Bud Radio, Inc.	Willoughby, Ohio	77342	American Machine & Foundry Co.		83385	Central Screw Co.	Chicago, Ill.
71279	Cambridge Thermionics Corp.	Cambridge, Mass.		Potter & Brumfield Div.	Princeton, Ind.	83501	Gavitt Wire and Cable Co., Div. of	
71286	Camloc Fastener Corp.	Paramus, N. J.	77630	TRW Electronic Components Div.	Camden, N. J.		Amerace Corp.	Brookfield, Mass.
71313	Cardwell Condenser Corp.		77638	General Instrument Corp.,		83594	Burroughs Corp., Electronic	
		Lindenhurst, L. I., N. Y.		Rectifier Division	Brooklyn, N. Y.		Tube Div.	Plainfield, N. J.
71400	Bussmann Mfg. Div. of		77764	Resistance Products Co.	Harrisburg, Pa.	83740	Union Carbide Corp., Consumer	
	McGraw-Edison Co.	St. Louis, Mo.	77969	Rubbercraft Corp. of Calif.	Torrance, Cal.		Prod. Div.	New York, N. Y.
71436	Chicago Condenser Corp.	Chicago, Ill.	78189	Shakeproof Division of		83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
71447	Calif. Spring Co., Inc.	Pico-Rivera, Cal.		Illinois Tool Works	Elgin, Ill.	83821	Loyd Scruggs Co.	Festus, Mo.
71450	CTS Corp.	Elkhart, Ind.	78277	Sigma	So. Braintree, Mass.	83942	Aeronautical Inst. & Radio Co.	Lodi, N. J.
71468	ITT Cannon Electric Inc.	Los Angeles, Cal.	78283	Signal Indicator Corp.	New York, N. Y.	84171	Arco Electronics Inc.	Great Neck, N. Y.
71471	Cinema, Div. Aerovox Corp.	Burbank, Cal.	78290	Struthers-Dunn Inc.	Pitman, N. J.	84396	A. J. Glensner Co., Inc.	San Francisco, Cal.
						84411	TRW Capacitor Div.	Ogallala, Neb.

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkes Tarzian, Inc.	Bloomington, Ind.	91929	Honeywell Inc., Micro Switch Division	Freeport, Ill.	96095	Hi-Q Div. of Aerovox Corp.	Olean, N.Y.
85454	Boonton Molding Company	Boonton, N.J.	91961	Nahm-Bros. Spring Co.	Oakland, Cal.	96256	Thordarson-Meissner Inc.	Mt. Carmel, Ill.
85471	A. B. Boyd Co.	San Francisco, Cal.	92180	Tru-Connector Corp.	Peabody, Mass.	96296	Solar Mfg. Co.	Los Angeles, Cal.
85474	R. M. Bracamonte & Co.	San Francisco, Cal.	92367	Elgeet Optical Co., Inc.	Rochester, N.Y.	96396	Microswitch, Div. of	Freeport, Ill.
85660	Kolled Kords, Inc.	Hamden, Conn.	92607	Tensolite Insulated Wire Co., Inc.	Tarrytown, N.Y.	96330	Carlton Screw Co.	Chicago, Ill.
85911	Seamless Rubber Co.	Chicago, Ill.	92702	IMC Magnetics Corp.	Westbury, L.I., N.Y.	96341	Microwave Associates, Inc.	Burlington, Mass.
86174	Fafnir Bearing Co.	Los Angeles, Calif.	92966	Hudson Lamp Co.	Kearney, N.J.	96501	Excel Transformer Co.	Oakland, Cal.
86197	Clifton Precision Products Co., Inc.	Clifton Heights, Pa.	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	96508	Xcelite, Inc.	Orchard Park, N.Y.
86579	Precision Rubber Products Corp.	Dayton, Ohio	93369	Robbins & Myers Inc.	Pallisades Park, N.J.	96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
86684	Radio Corp. of America, Electronic Comp. & Devices Division	Harrison, N.J.	93410	Stemco Controls, Div. of Essex Wire Corp.	Mansfield, Ohio	96881	Thomson Ind. Inc.	Long Island, N.Y.
86928	Seastrom Mfg. Co.	Glendale, Cal.	93632	Waters Mfg. Co.	Culver City, Cal.	97464	Industrial Retaining Ring Co.	Irvington, N.J.
87034	Marco Industries	Anaheim, Cal.	93929	G. V. Controls	Livingston, N.J.	97539	Automatic & Precision Mfg.	Englewood, N.J.
87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	94137	General Cable Corp.	Bayonne, N.J.	97979	Reon Resistor Corp.	Yonkers, N.Y.
87473	Western Fibrous Glass Products Co.	San Francisco, Cal.	94144	Raytheon Co., Comp. Div.	Quincy, Mass.	97983	Litton System Inc., Adler-Westrex Commun. Div.	New Rochelle, N.Y.
87664	Van Waters & Rogers Inc.	San Francisco, Cal.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	98141	R-Tronics, Inc.	Jamaica, N.Y.
87930	Tower Mfg. Corp.	Providence, R.I.	94154	Wagner Elect. Corp., Tung-Sol Div.	Newark, N.J.	98159	Rubber Teck, Inc.	Gardena, Cal.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94197	Curtiss-Wright Corp., Electronics Div.	East Patterson, N.J.	98220	Hewlett-Packard Co., Medical Elec. Div.	Pasadena, Cal.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94222	South Chester Corp.	Chester, Pa.	98278	Microdot, Inc.	So. Pasadena, Cal.
88698	General Mills, Inc.	Buffalo, N.Y.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98291	Sealectro Corp.	Mamaronech, N.Y.
89231	Graybar Electric Co.	Oakland, Cal.	94375	Automatic Metal Products Co.	Brooklyn, N.Y.	98376	Zero Mfg. Co.	Burbank, Cal.
89473	G. E. Distributing Corp.	Schenectady, N.Y.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	98410	Etc. Inc.	Cleveland, Ohio
89479	Security Co.	Detroit, Mich.	94696	Magnecraft Electric Co.	Chicago, Ill.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
89665	United Transformer Co.	Chicago, Ill.	95023	George A. Philbrick Researchers, Inc.	Boston, Mass.	98734	Paeo Division of Hewlett-Packard Co.	Palo Alto, Cal.
90030	United Shoe Machinery Corp.	Beverly, Mass.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	98821	North Hills Electronics, Inc.	Glen Cove, N.Y.
90179	U.S. Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N.J.	95236	Allies Products Corp.	Dania, Fla.	98978	International Electronic Research Corp.	Burbank, Cal.
90365	Belleville Speciality Tool Mfg., Inc.	Belleville, Ill.	95238	Continental Connector Corp.	Woodside, N.Y.	99109	Columbia Technical Corp.	New York, N.Y.
90763	United Carr Fastener Corp.	Chicago, Ill.	95263	Leecraft Mfg. Co., Inc.	Long Island, N.Y.	99313	Varian Associates	Palo Alto, Cal.
90970	Bearing Engineering Co.	San Francisco, Cal.	95265	National Coil Co.	Sheridan, Wyo.	99378	Atlee Corp.	Winchester, Mass.
91146	ITT Cannon Elect. Inc., Salem Div.	Salem, Mass.	95275	Vitramon, Inc.	Bridgeport, Conn.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
91260	Connor Spring Mfg. Co.	San Francisco, Cal.	95348	Gordos Corp.	Bloomfield, N.J.	99707	Control Switch Division, Controls Co. of America	El Segundo, Cal.
91345	Miller Dial & Nameplate Co.	El Monte, Cal.	95354	Methode Mfg. Co.	Rolling Meadows, Ill.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
91418	Radio Materials Co.	Chicago, Ill.	95566	Arnold Engineering Co.	Marengo, Ill.	99848	Wilco Corporation	Indianapolis, Ind.
91506	Augat Inc.	Attleboro, Mass.	95712	Dage Electric Co., Inc.	Franklin, Ind.	99928	Branson Corp.	Whippany, N.J.
91637	Dale Electronics, Inc.	Columbus, Nebr.	95984	Siemon Mfg. Co.	Wayne, Ill.	99934	Rembrandt, Inc.	Boston, Mass.
91662	Elco Corp.	Willow Grove, Pa.	95987	Wackesser Co.	Chicago, Ill.	99942	Hoffman Electronics Corp., Semiconductor Division	El Monte, Cal.
91673	Epiphone Inc.	New York, N.Y.	96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.	99957	Technology-Instrument Corp. of California	Newbury Park, Cal.
91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.						
91827	K F Development Co.	Redwood City, Cal.						
91886	Malco Mfg., Inc.	Chicago, Ill.						

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado Springs Div.	Colorado Springs, Colorado	000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N.J.	000MM	Rubber Eng. & Development	Hayward, Cal.	000WW	California Eastern Lab	Burlington, Cal.
000AB	ETA	England	000NN	A "N" D Mfg. Co.	San Jose, Cal.	000YY	S. K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.						

ELECTRONIC

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA

P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA

2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 252-5061
TWX: 910-951-1330

5737 East Broadway
Tucson 85716
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA

1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-5500
TWX: 910-373-1280

2220 Watt Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

9606 Aero Drive
San Diego 92123
Tel: (714) 279-3200
TWX: 910-335-2000

COLORADO

7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT

12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA

P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando, 32809
Tel: (305) 859-2900
TWX: 810-850-0113

GEORGIA

P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

HAWAII

2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455

ILLINOIS

5500 Howard Street
Skokie 60076
Tel: (312) 617-0400
TWX: 910-223-3613

INDIANA

3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA

P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-9157

MASSACHUSETTS

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MINNESOTA

2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MICHIGAN

21840 West Nine Mile Road
Southfield 48075
Tel: (313) 353-9100
TWX: 810-224-4882

MISSOURI

2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI

11131 Colorado Ave.
Kansas City 64137
Tel: (816) 753-8000
TWX: 910-771-2087

148 Weldon Parkway
Maryland Heights 63043
Tel: (314) 567-1455
TWX: 910-764-0830

NEW JERSEY

W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

1060 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-852-4945

NEW MEXICO

P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 265-3713
TWX: 910-989-1665

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK

6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-441-8270

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

PENNSYLVANIA

2500 Moss Side Boulevard
Memphis 15146
Tel: (412) 271-0724
TWX: 710-797-3650

RHODE ISLAND

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

TEXAS

8588 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
TWX: 510-223-0811

NORTH CAROLINA

P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 910-926-1516

OHIO

25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

3460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

OKLAHOMA

1120 Morse Road
Columbus 43229
Tel: (614) 846-1300
Tel: (614) 846-1300

OREGON

Westhills Mall, Suite 158
4475 S.W. Scholls Ferry Road
Portland 97225
Tel: (503) 292-9171
Tel: (503) 292-9171

PENNSYLVANIA

2500 Moss Side Boulevard
Memphis 15146
Tel: (412) 271-0724
TWX: 710-797-3650

WASHINGTON

433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

*WEST VIRGINIA

Charleston
Tel: (304) 768-1232

*TENNESSEE

Memphis
Tel: (901) 274-7472

TEXAS

P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

P.O. Box 27409
6300 Westpark Drive
Suite 100
Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645

UTAH

231 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

VERMONT

2890 South Main Street
Sail Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VIRGINIA

P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 285-3431
TWX: 710-956-0157

WASHINGTON

433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

*WEST VIRGINIA

Charleston
Tel: (304) 768-1232

FOR U.S. AREAS NOT LISTED:

Contact the regional office nearest you: Atlanta, Georgia...
North Hollywood, California...
Paramus, New Jersey...
Skokie, Illinois. Their complete addresses are listed above.

*Service Only

CANADA

ALBERTA

Hewlett-Packard (Canada) Ltd.
1748 Kingsway Ave.
Edmonton
Tel: (403) 452-3670
TWX: 610-831-2431

BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd.
4519 Canada Way
North Burnaby 2
Tel: (604) 433-8213
TWX: 610-922-5059

MANITOBA

Hewlett-Packard (Canada) Ltd.
513 Century St.
Winnipeg
Tel: (204) 786-7581
TWX: 610-871-3531

NOVA SCOTIA

Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 206
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO

Hewlett-Packard (Canada) Ltd.
1785 Woodward Dr.
Ottawa 3
Tel: (613) 255-6180, 255-6530
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.

50 Galaxy Blvd.
Rexdale
Tel: (416) 677-9611
TWX: 610-492-4246

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:

Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA

Hewlett-Packard Argentina
S.A.C.I.
Laval 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0431
Telex: 012-1009
Cable: HEWPACK ARG

BRAZIL

Hewlett-Packard Do Brasil
i.e.C. Ltda.
Rua Frel Caneca 1119
Sao Paulo - 3, SP
Tel: 288-7111, 287-5858
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil

Praca Dom Feliciano 78
Salas 806/808
Porto Alegre
Rio Grande do Sul (RS)-Brasil
Tel: 25-8470
Cable: HEWPACK Porto Alegre

Hewlett-Packard Do Brasil

i.e.C. Ltda.
Rua da Matriz 29
Botafogo 20-02
Rio de Janeiro, GB
Tel: 246-4417, 246-2919
Cable: HEWPACK Rio de Janeiro

CHILE

Héctor Calcagni y Cia, Ltda.
Casilla 16.475
Santiago
Tel: 423 96
Cable: CALCAGNI Santiago

COLOMBIA

Instrumentacion
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-59
Apartado Aereo 6287
Bogota, 1 D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogota
Telex: 44400INSTCO

COSTA RICA

Lic. Alfredo Gallegos Gurdian
Apartado 10159
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR

Laboratorios de Radio-Ingenieria
Calle Guayaquil 1246
Post Office Box 3199
Quito
Tel: 212-496; 219-185
Cable: HORVATH Quito

EL SALVADOR

Electronic Associates
Apartado Postal 1682
Centro Comercial Gigante
San Salvador, El Salvador C.A.
Paseo Escalon 4649-4° Piso
Tel: 23-44-60, 23-32-37
Cable: ELECAS

GUATEMALA

IPESA
Sa via 2-01, Zona 4
Guatemala City
Tel: 63-5-27 & 64-7-86
Telex: 4176 Mahohegu

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
622 Adolfo Prieto
Col. del Valle
Mexico 12, D.F.
Tel: 543-4232; 523-1874
Telex: 017-74-507

NICARAGUA

Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA

Electrónica Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 230833
Telex: 3481003, Curundu,
Canal Zone
Cable: ELECTRON Panama City

PARAGUAY

Z.T. Melamed S.R.L.
Division: Aparatos y Equipos
Medicos
Salon de Exposicion y Escritorio:
Chile 482
Edificio Victoria—Planta Baja
Asuncion, Paraguay
Tel: 4-5069, 4-6272
Cable: RAMEL

PERU

Compañía Electro Medica S.A.
Ave. Enrique Canaval 312
San Isidro
Casilla 1030
Lima
Tel: 22-3900
Cable: ELMED Lima

PUERTO RICO

San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3-PTA de Tierra
San Juan 00906
Tel: (809) 725-3342, 722-3342
Cable: SATRONICS San Juan
Telex: SATRON 3450 332

URUGUAY

Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA

Hewlett-Packard De Venezuela
C.A.
Apartado 50933
Caracas
Tel: 71.88.05, 71.88.69, 71.99.30
Cable: HEWPACK Caracas
Telex: 21146 HEWPACK

FOR AREAS NOT LISTED,

CONTACT:

Hewlett-Packard
INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 493-1501
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

EUROPE

AUSTRIA
Hewlett-Packard Ges.m.b.H.
Handelskz 52/3
P.O. Box 7
A-1205 Vienna
Tel: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BELGIUM
Hewlett-Packard Benelux
S.A./N.V.
Avenue du Col-Vert, 1
B-1170 Brussels
Tel: (02) 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

DENMARK
Hewlett-Packard A/S
Datavej 38
DK-3460 Birkerød
Tel: (01) 81 66 40
Cable: HEWPAK AS
Telex: 16640 hp as

Hewlett-Packard A/S
Torvet 5
DK-8600 Silkeborg
Tel: (06) 82-71-66
Telex: 16640 hp as
Cable: HEWPAKAS

FINLAND
Hewlett-Packard Oy
Bulevardi 26
P.O. Box 12185
SF-00120 Helsinki 12
Tel: (90) 13730
Cable: HEWPAK OY-Helsinki
Telex: 17-1563 hei

FRANCE
Hewlett-Packard France
Quartier de Courlaubeuf
Boite Postale No. 6
F-91401 Orsay
Tel: (1) 907 78 25
Cable: HEWPAK Orsay
Telex: 60048

Hewlett-Packard France
4 Quai des Etoiles
F-93221 Lyon Cedex 1
Tel: (78) 42 63 45
Cable: HEWPAK Lyon
Telex: 31617

Hewlett-Packard France
2 rue de la Gare
F-31700 Blagnac
Tel: (61) 85 82 29
Telex: 51957

**GERMAN FEDERAL
REPUBLIC**
Hewlett-Packard Vertriebs-GmbH
Berliner Strasse 117
Postfach 560 140
D-6 Nieder-Eschbach/Fm 56
Tel: (0611) 50-04-1
Cable: HEWPAKSA Frankfurt
Telex: 41 32 49 FRA

Hewlett-Packard Vertriebs-GmbH
Herenbergstrasse 110
D-7030 Böblingen, Württemberg
Tel: (07031) 66 72 87
Cable: HEPAK Böblingen
Telex: 72 65 739 bbn

Hewlett-Packard Vertriebs-GmbH
Vogelsanger Weg 38
D-4 Büsselsdorf
Tel: (0211) 63 40 31/35
Telex: 65786 533 hpd d

Hewlett-Packard Vertriebs-GmbH
Wendenstr. 23
D-2 Hamburg 1
Tel: (0411) 24 05 51/52
Cable: HEWPAKSA Hamburg
Telex: 21 53 032 hphh d

Hewlett-Packard Vertriebs-GmbH
Unterhächinger Strasse 28
ISAR Center
D-8012 Ottobrunn
Tel: (0811) 601 30 61/7
Telex: 52 49 85
Cable: HEWPAKSA München

(West Berlin)
Hewlett-Packard Vertriebs-GmbH
Wilmsdorfer Strasse 113/114
D-1000 Berlin W. 12
Tel: (0311) 3137046
Telex: 18 34 05 hpbm d

GREECE
Kostas Karayannis
18, Ermou Street
Athens 126
Tel: 3230-303
Cable: RAKAR Athens
Telex: 21 59 62 rkar gr

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
Slough, SL1 4 DS, Bucks
Tel: Slough (0753) 33341
Cable: HEWPIE Slough
Telex: 84413

Hewlett-Packard Ltd.
The Graftons
Stamford New Road
Altrincham, Cheshire, England
Tel: (061) 928-8626
Telex: 668068

ITALY
Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci 2
I-20124 Milan
Tel: (2) 6251 (10 lines)
Cable: HEWPAKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Piazza Marconi
I-00144 Rome - Eur
Tel: (6) 5912544/5, 5915947
Cable: HEWPAKIT Rome
Telex: 61514

Hewlett-Packard Italiana S.p.A.
Vicolo Pastori, 3
I-35100 Padova
Tel: (49) 66 40 62
Telex: 32046 via Milan

Hewlett-Packard Italiana S.p.A.
Via Molino 21-23
I-10129 Turin
Tel: (11) 53 82 64
Telex: 32046 via Milan

LUXEMBURG
Hewlett-Packard Benelux
S.A./N.V.
Avenue du Col-Vert, 1
B-1170 Brussels
Tel: (03) 02 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

NETHERLANDS
Hewlett-Packard Benelux, N.V.
Weerdestein 117
P.O. Box 7825
Amsterdam, Z 11
Tel: 020-42 77 77
Cable: PALOBEN Amsterdam
Telex: 13 216 hepa nl

NORWAY
Hewlett-Packard Norge A/S
Box 149
Nesveien 13
N-1344 Næslund
Tel: (02) 53 83 60
Telex: 16621 hpnas n

PORTUGAL
Teletra Empresa Tecnica de
Equipamentos
Electricos S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-Lisbon 1
Tel: (19) 68 60 72
Cable: TELETRA Lisbon
Telex: 1598

SPAIN
Hewlett-Packard Española, S.A.
Jerez No 8
Madrid 16
Tel: 458 26 00
Telex: 23515 hpe

Hewlett-Packard Española, S.A.
Palasado 21-23
E-Barcelona 17
Tel: (3) 203 62 00
Telex: 52603 hpbe e

SWEDEN
Hewlett-Packard Sverige AB
Enighetsvägen 1-3
Fack
S-161 20 Bromma 20
Tel: (08) 98 12 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

Hewlett-Packard Sverige AB
Hagakersgatan 9C
Tel: (01) 98 18 21/24
Cable: HPAC CH
Telex: 53933 hpac ch

SWITZERLAND
Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
P.O. Box 64
CH-8952 Schlieren Zurich
Tel: (01) 98 18 21/24
Cable: HPAC CH
Telex: 53933 hpac ch
Hewlett-Packard (Schweiz) AG
Rue du Bois-du-Lan 7
P.O. Box 85
1217 Meyrin 2 Geneva
Tel: (022) 41 54 00
Cable: HEWPAKSA Geneva
Telex: 27333 hpsa ch

TURKEY
Telekom Engineering Bureau
Saglik Sok No. 15/1
Ayaspaşa-Beyoğlu
P.O. Box 437 Beyoğlu
Istanbul
Tel: 49 40 40
Cable: TELEMATON Istanbul

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
Slough, SL1 4 DS, Bucks
Tel: Slough (0753) 33341
Cable: HEWPIE Slough
Telex: 84413

Hewlett-Packard Ltd.
"The Graftons"
Stamford New Road
Altrincham, Cheshire
Tel: (061) 928-8626
Telex: 668068

**SOCIALIST COUNTRIES
PLEASE CONTACT:
COUNTRIES CONTACT:**
Hewlett-Packard Ges.m.b.H.
Hankelski 52/3
P.O. Box 7
A-1205 Vienna
Ph: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

**ALL OTHER EUROPEAN
COUNTRIES CONTACT:**
Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
P.O. Box 85
CH-1217 Meyrin 2 Geneva
Cable: HEWPAKSA Geneva
Telex: 27333 hpsa ch

AFRICA, ASIA, AUSTRALIA

ANGOLA
Teletra Empresa Técnica
de Equipamentos Eléctricos
SAR
Rua de Barbosa Rodrigues
42-1º
Box 6487
Luanda
Cable: TELETRA Luanda

AUSTRALIA
Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20-1371 (6 lines)
Cable: HEWPAK Melbourne
Telex: 31 024

Hewlett-Packard Australia
Pty. Ltd.
Corner Bridge & West Streets
Pymble, New South Wales, 2073
Tel: 449 6566
Cable: HEWPAK Sydney
Telex: 21561

Hewlett-Packard Australia
Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 65-2386
Cable: HEWPAK Adelaide
Telex: 21561

Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, Suite 13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 25 6800
Cable: HEWPAK Perth
Telex: 21561

Hewlett-Packard Australia
Pty. Ltd.
10 Woolley Street
P.O. Box 191
Dickson A.C.T. 2602
Tel: 49-8194
Cable: HEWPAK Canberra ACT
Telex: 21561

Hewlett-Packard Australia
Pty. Ltd.
6 Harvard Street
P.O. Box 135
Kenmore 4069 Queensland
Tel: 70-4050

CEYLON
United Electricals Ltd.
P.O. Box 681
Yahala Building
Staples Street
Colombo 2
Tel: 26696
Cable: HOTPOINT Colombo
Telex: 51473

Blue Star Ltd.
Blue Star House
11/11A Magarath Road
Bangalore, 25
Tel: 51473
Telex: 430
Cable: BLUESTAR

CYPRUS
Kypnronics
19 Gregorios & Xenopoulos Road
P.O. Box 1152
Nicosia
Tel: 45628/29
Cable: Kypnronics Pandehis
Telex: 21561

ETHIOPIA
African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa
Telex: 21561

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building 15th Floor
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDT CO Hong Kong
Telex: 21561

INDIA
Blue Star Ltd.
Kasturi Buildings
Jamshedji Tata Rd.
Bombay 208R, India
Tel: 29 50 21
Telex: 3751
Cable: BLUEFROST

Blue Star Ltd.
Band Box House
Prabhadevi
Bombay 250D, India
Tel: 45 73 01
Telex: 3751
Cable: BLUESTAR

Blue Star Ltd.
14/40 Civil Lines
Kanpur, India
Tel: 6 88 82
Cable: BLUESTAR

Blue Star Ltd.
7 Hare Street
P.O. Box 506
Calcutta 1, India
Tel: 23-0131
Telex: 655
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House,
34 Ring Road
Lalpat Nagar
New Delhi 24, India
Tel: 62 32 76
Telex: 463
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House
11/11A Magarath Road
Bangalore, 25
Tel: 51473
Telex: 430
Cable: BLUESTAR

Blue Star Ltd.
1-1-117-1
Sarajini Devi Road
Secunderabad 3
Tel: 7 63 91, 7 73 93
Cable: BLUEFROST

Blue Star Ltd.
23/24 Second Line Beach
Madras 1, India
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR

Blue Star Ltd.
18 Kaiser Bungalow
Dindli Road
Jamshedpur, India
Tel: 38 04
Cable: BLUESTAR

INDONESIA
Bah Bolon Trading Coy. N.V.
Dialah Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

IRAN
Multicorp International Ltd.
Avenue Soraya 130
P.O. Box 1212
Tehran
Tel: 83 10 35-39
Cable: MULTICORP Tehran
Telex: 2893 mci tn

ISRAEL
Electronics & Engineering
Div. of Motorola Israel Ltd.
17 Aminadav Street
Tel-Aviv
Tel: 36941 (3 lines)
Cable: BASTEL Tel-Aviv
Telex: MOTIL IL

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
1-59-1 Yoyogi
Shibuya-ku, Tokyo
Tel: 03-370-2281/92
Telex: 232-2024YHP
Cable: YHPMARKET TOK 23-724

Yokogawa-Hewlett-Packard Ltd.
Nisei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: (0726) 23-1641
Telex: 5332-385 YHP OSAKA

Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: (052) 551-0215

Yokogawa-Hewlett-Packard Ltd.
Nitto Bldg.
2-4-2 Shinohara-Kita
Noboku-ku
Yokohama 222
Tel: 045-432-1504
Telex: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.
Rm. 603 3.
Tel: 41924
Cable: FEMUS Rawalpindi

KENYA
Kenya Kinetics
P.O. Box 18311
Nairobi, Kenya
Tel: 57726
Cable: PROTON

KOREA
Amtraco Corporation
Industrial Products Div.
Seoul P.O. Box 1103
8th floor, Daekyung Bldg.
107 Sejong Ro
Chongro-Ku, Seoul
Tel: 73-8924-7
Cable: AMTRACO Seoul

LEBANON
Constantin E. Macridis
P.O. Box 7213
Ri-Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA
MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Pataing Jaya, Selangor
Cable: MECOMB Kuala Lumpur

MOZAMBIQUE
A. N. Gonçalves, LDA.
4.1 Apt. 14 Av. D. Luis
P.O. Box 107
Lourenço Marques
Cable: NEGON

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
94-96 Dixon St.
P.O. Box 9443
Courtenay Place
Wellington, N.Z.
Tel: 56-559
Cable: HEWPAK Wellington

Hewlett-Packard (N.Z.) Ltd.
Box 51092
Pukuranga
Tel: 56-9837
Cable: HEWPAK Auckland

PAKISTAN
Mushko & Company, Ltd.
Dusman Chambers
Abdullah Haroon Road
Karachi 3
Tel: 511027, 512927
Cable: COOPERATOR Karachi

Mushko & Company, Ltd.
38B, Satellite Town
Rawalpindi
Tel: 41924
Cable: FEMUS Rawalpindi

PHILIPPINES
Electromex Inc.
5th Floor, Architects
Center Bldg.
Ayala Ave., Makati, Rizal
C.C.P.O. Box 1028
Makati, Rizal
Tel: 86-18-87, 87-76-77
Cable: ELEMEX Manila

SINGAPORE
Mechanical and Combustion
Engineering Company Ltd.
9, Jalan Kilang
Red Hill Industrial Estate
Singapore, 3
Tel: 642361-3, 632611
Cable: MECOMB Singapore

Hewlett-Packard Far East
Area Office
P.O. Box 87
Alexandra Post Office
Singapore 3
Tel: 633022
Cable: HEWPAK SINGAPORE

SOUTH AFRICA
Hewlett-Packard South Africa
(Pty.), Ltd.
P.O. Box 31716
Braamfontein Transvaal
Milverton
30 De Beer Street
Johannesburg
Tel: 725-2080, 725-2030
Telex: 0226 JH
Cable: HEWPAK Johannesburg

Hewlett-Packard South Africa
(Pty.), Ltd.
Breechale House
Bree Street
Cape Town
Tel: 3-6019, 3-6545
Cable: HEWPAK Cape Town
Telex: 5-0006

Hewlett-Packard South Africa
(Pty.), Ltd.
641 Ridge Road, Durban
P.O. Box 99
Overport, Natal
Tel: 910-373-1267
Cable: HEWPAK Palo Alto
Telex: 034-8300, 034-8493

TAIWAN
Hewlett-Packard Taiwan
39 Chung Shiao West Road
Sec. 1
Overseas Insurance
Corp. Bldg. 7th Floor
Taipei
Tel: 389160, 1, 2, 375121,
Ext. 240-249
Telex: 1P824 HEWPAK Taipei
Cable: HEWPAK Taipei

THAILAND
UNIMESA Co., Ltd.
Chongkoinsee Building
56 Suriwongse Road
Bangkok
Tel: 37956, 31300, 31307,
37540
Cable: UNIMESA Bangkok

UGANDA
Uganda Tele-Electric Co., Ltd.
P.O. Box 4449
Kampala
Cable: COMCO Kampala

VIETNAM
Peninsular Trading Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20-805, 93398
Cable: PENTRA, SAIGON 242

ZAMBIA
R. J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa
Tel: 73793
Cable: ARIAYTEE, Lusaka

**MEDITERRANEAN AND
MIDDLE EAST COUNTRIES
NOT SHOWN PLEASE
CONTACT:**
Hewlett-Packard
Co-ordination Office for
Mediterranean and Middle
East Operations
Via Marocco, 7
I-00144 Rome-Eur, Italy
Tel: (6) 59 40 29
Cable: HEWPAKIT Rome
Telex: 61514

**OTHER AREAS NOT
LISTED, CONTACT:**
Hewlett-Packard
INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
P.O. Box 99
(Feb. 71 493-1501)
TWX: 910-373-1267
Cable: HEWPAK Palo Alto
Telex: 034-8300, 034-8493



OPERATING AND SERVICE MANUAL

MODEL 34750A DISPLAY

The main body of this instruction manual applies to

Serial Number 1304A00101

and higher. Any changes made in instruments having serial numbers higher than the above number are, or will be, integrated into the manual by page revision as they occur. Revised pages are identified by a revision letter in the lower corner of the page. You may receive subsequent revised pages by returning the questionnaire in the front of the manual with the appropriate square marked. If a change is made that does not apply to all previously manufactured instruments, backdating information in Section VIII adapts the manual to the earlier instruments.

Manual Part No. 34750-90001

Microfiche Part No. 34750-90051

Copyright Hewlett-Packard Company 1973
P. O. Box 301, Loveland, Colorado U.S.A. 80537



CERTIFICATION

Hewlett-Packard Company certifies that this instrument met its published specifications at the time of shipment from the factory. Hewlett-Packard Company further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY AND ASSISTANCE

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of one year from the date of shipment, except that in the case of certain components, if any, listed in Section I of this operating manual, the warranty shall be for the specified period. Hewlett-Packard will, at its option, repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard, and provided the proper preventive maintenance procedures as listed in this manual are followed. Repairs necessitated by misuse of the product are not covered by this warranty. **NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD IS NOT LIABLE FOR CONSEQUENTIAL DAMAGES.**

If this product is sold as part of a Hewlett-Packard integrated instrument system, the above warranty shall not be applicable, and this product shall be covered only by the system warranty.

Service contracts or customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL INFORMATION	1-1	4-25. Data Display and Control Circuits (Refer to Figure 4-11)	4-6
1-1. Description	1-1	4-27. Reset Timing (See Figure 4-12)	4-7
1-6. Specifications	1-3	4-29. Least Significant Digit Blank (Refer to Figure 7-8)	4-7
1-8. Options	1-3		
1-10. Accessories Available (See Figure 1-2)	1-3		
1-11. Instrument and Manual Identification	1-3		
Section	Page	V MAINTENANCE	5-1
II INSTALLATION	2-1	5-1. Introduction	5-1
2-1. Introduction	2-1	5-3. Operational Checks	5-1
2-3. Initial Inspection	2-1	5-6. Adjustment Procedures	5-1
2-5. Power Requirements	2-1	5-8. Cover Removal	5-2
2-7. Grounding Requirements	2-2	5-10. Adjustment Locator	5-2
2-10. Environmental Requirements	2-2	5-12. Power Supply Adjustment	5-2
2-12. Instrument Mounting	2-2	5-13. Input Amp. Offset Adjustment	5-2
2-13. Bench Use	2-2	5-14. Zero Detect Comparator Offset	5-2
2-15. Rack Use	2-2	5-15. Zero Detect Hysteresis Adjustment	5-2
2-17. Repackaging for Shipment	2-2	5-16. Reference Voltage Adjustments	5-3
2-21. Power Cords and Receptacles	2-3		
Section	Page	Section	Page
III OPERATING INSTRUCTIONS	3-1	VI REPLACEABLE PARTS	6-1
3-1. Introduction	3-1	6-1. Introduction	6-1
3-3. Rear Panel Features	3-1	6-4. Ordering Information	6-1
3-5. Warm-Up	3-1	6-6. Non-Listed Parts	6-1
3-7. Operation with Plug-On Modules	3-1	6-8. Proprietary Parts	6-1
Section	Page	Section	Page
IV THEORY OF OPERATION	4-1	VII CIRCUIT DIAGRAMS AND TROUBLESHOOTING	7-1
4-1. Introduction	4-1	7-1. Introduction	7-1
4-3. Basic Measurement Sequence	4-1	7-3. Troubleshooting	7-1
4-5. Analog Circuits	4-1	7-4. Troubleshooting Trees	7-1
4-6. Input Amplifier	4-1	7-6. Troubleshooting Procedures	7-1
4-8. Integrator	4-2	7-8. Functional Block Diagram (Figure 7-4)	7-1
4-10. Zero Detect Circuits	4-2	7-10. Timing Circuits (Figure 7-5)	7-1
4-12. Auto-Zero Cycle	4-2	7-12. Schematic Diagrams (Figures 7-6, 7-7 and 7-8)	7-1
4-14. Digital Processing Circuits	4-2	7-14. Component Location Diagrams	7-1
4-17. Data Clock (Refer to Figure 4-8)	4-4		
4-19. Timing Generator Circuit (See Figure 7-8)	4-4		
4-21. Zero Detect and Data Transfer (Refer to Figure 4-10)	4-4		
4-23. Data Accumulator and Storage (Refer to Figure 7-7)	4-6		
		APPENDICES	
		A. CODE LIST OF MANUFACTURERS	
		B. SALES AND SERVICE OFFICES	

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
1-1. Plug-On Modules which can be used with the 34750A Display Module	1-1	4-9. 34750A Flow Chart	4-5
1-2. Accessories Available for use with 34750A . . .	1-2	4-10. Zero Detect and Data Transfer Timing	4-6
1-3. Instrument Serial Number (on rear panel) . . .	1-3	4-11. Data Display Circuits	4-6
2-1. Voltage Selection	2-1	4-12. Reset Timing	4-7
2-2. Rack Mount Kits	2-2	5-1. 11456A Readout Test Card	5-1
2-3. Power Receptacles	2-3	5-2. Cover Removal	5-2
3-1. 34750A Rear Panel	3-1	5-3. Zero Detect Comparator Offset Adjustment	5-2
4-1. Basic Block Diagram of 34750A	4-0	5-4. Chassis Mounted Component and Adjustment Locator	5-3
4-2. Simplified Diagram of the Input Amplifier	4-1	7-1. Power Supply Troubleshooting Tree	7-3/7-4
4-3. Simplified Diagram of the Integrator Circuit	4-2	7-2. Analog Troubleshooting Tree	7-5
4-4. Simplified Diagram of Zero Detect Circuits	4-2	7-3. Digital Troubleshooting Tree	7-6
4-5. 34750A Circuits shown in Auto-Zero Mode	4-3	7-3. Digital Troubleshooting Tree	7-7/7-8
4-6. Block Diagram of Typical ASM	4-3	7-4. Functional Block Diagram	7-9/7-10
4-7. ASM Simplified Block Diagram	4-4	7-5. Timing Waveforms	7-11/7-12
4-8. Data Clock	4-4	7-6. Analog Signal Processor	7-13/7-14
		7-7. Digital Signal Processor	7-15/7-16
		7-8. Power Supply	7-17/7-18

LIST OF TABLES

Table	Page
1-1. 3470A Series Signal Conditioning Modules	1-3
1-2. Available Options	1-3
5-1. Recommended Test Equipment	5-1
5-2. Operational Checks	5-1
6-1. Replaceable Parts	6-2
7-1. Troubleshooting Trees	7-1

SECTION I GENERAL INFORMATION

1-1. DESCRIPTION.

1-2. The Hewlett-Packard Model 34750A Display Module is part of the low cost 3470 Measurement System designed to measure AC volts, DC volts, current and

resistance. It can be combined with the Model 34701A, Model 34702A or Model 34703A Plug-On Module, shown in Figure 1-1, to make these measurements. Table 1-1 lists the various plug-on modules which condition the input to the Model 34750A, and indicates the functions of each.


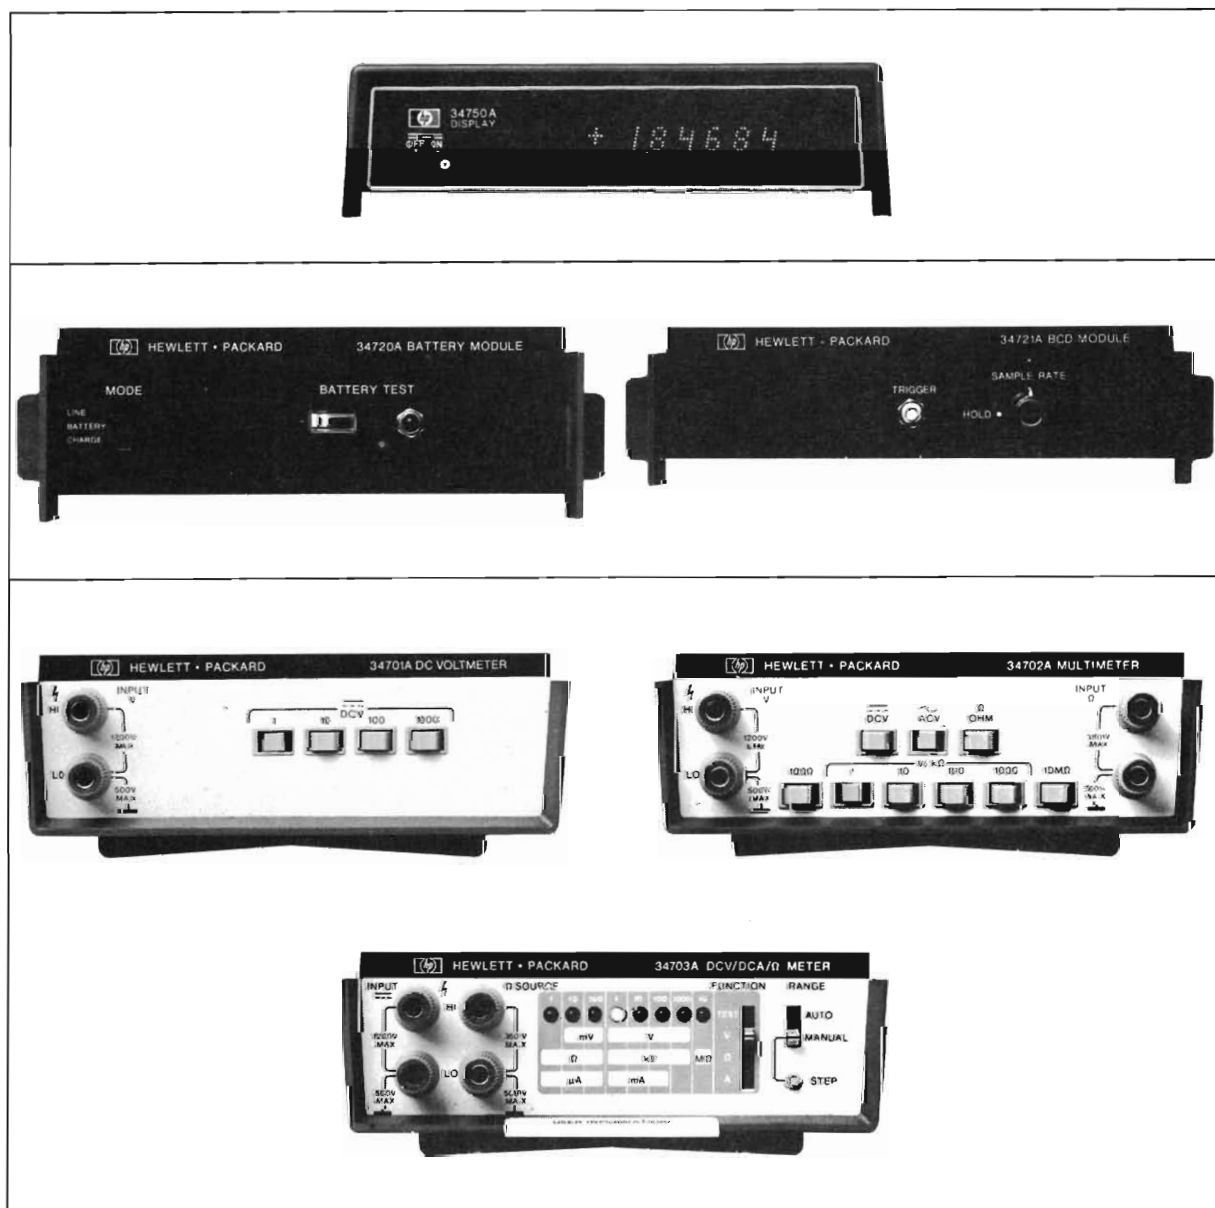



Figure 1-1. Plug-On Modules which can be used with the 34750A Display Module.




**11456A
READ OUT TEST CARD**

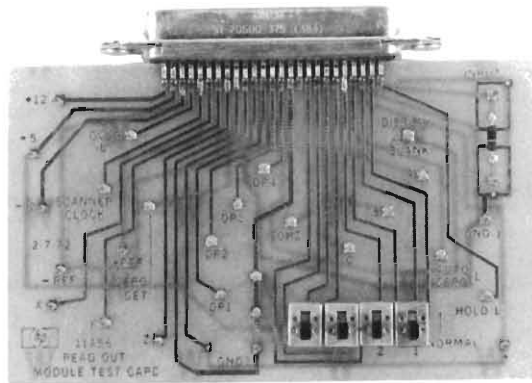

**18019A
CARRYING CASE**

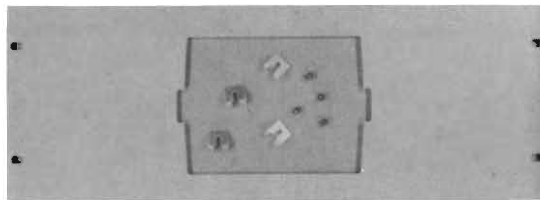

**11457A
RACK MOUNT KIT**

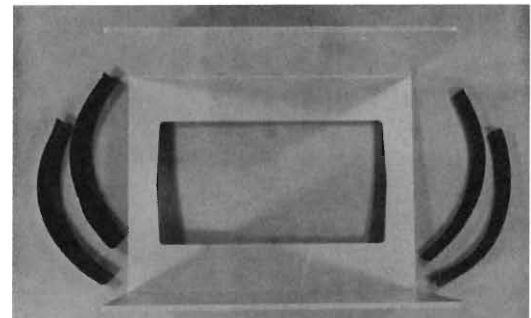

**10576A
RACK MOUNT KIT**



**562A-16C
PRINTER CABLE**

Figure 1-2. Accessories Available for use with 34750A.

Table 1-1. 3470A Series Signal Conditioning Modules.

Plug-On (Signal Conditioning) Module	Function				
	DCV	Ω	ACV	DCA	Auto-Ranging
34701A DC Voltmeter	X				
34702A Multimeter	X	X	X		
34703A DCV/DCA/ Ω Meter	X	X		X	X

1-3. Two center (sandwich) modules are also available for use with the Model 34750A and a signal conditioning module. These modules (Model 34720A and Model 34721A) add the capabilities of battery operation and BCD output to the 3470A measurement system. These modules are also shown in Figure I-1.

1-4. The digital readout of the 34750A consists of five full digits plus an overrange "1". The LED (Light Emitting Diode) display provides a bright clear readout with a maximum display of 199999.

1-5. The Model 34750A has an internal jumper wire which may be positioned to test the logic and display circuits.

1-6. SPECIFICATIONS.

1-7. Specifications for the 34750A are included in Section I of the Operating and Service manuals for the "plug-on" modules.

1-8. OPTIONS.

1-9. Options available for the 34750A are listed in Table 1-2.

Table 1-2. Available Options.

Option	Purpose	Measurement Rate
060	Operation with 60 Hz line.	5/sec
050	Operation with 50 Hz line.	8/sec

1-10. ACCESSORIES AVAILABLE (See Figure 1-2).

- a. 11456A - Read Out Test Card - Facilitates testing and troubleshooting the Model 34750A Display Module.
- b. 18019A - Carrying Case - Accommodates the 34750A Display Module, a center module, and a "plug-on" module plus the power cord and input cables.
- c. 11457A - Rack Mount Kit - Permits rack mounting of a 34750A Display Module, a 34721B Center Module, and a "plug-on" module.
- d. 10576A - Rack Mount Kit - Permits rack mounting of a 34750A Display Module and a "plug-on" module.
- e. 562A-16C - Printer Cable - Connects the output of the Model 34721B BCD Module to a Model 5055A Digital Recorder.

1-11. INSTRUMENT AND MANUAL IDENTIFICATION.

1-12. A three-section serial number is used to identify your Model 34750A. Figure 1-3 illustrates the meaning of the three parts of the number.

1-13. This manual is kept up-to-date with revised pages. If the serial number on your instrument is lower than the one on the title page of this manual refer to the backdating information in Section VIII which adapts this manual to your instrument. All correspondence with Hewlett-Packard Company should include the complete serial number.

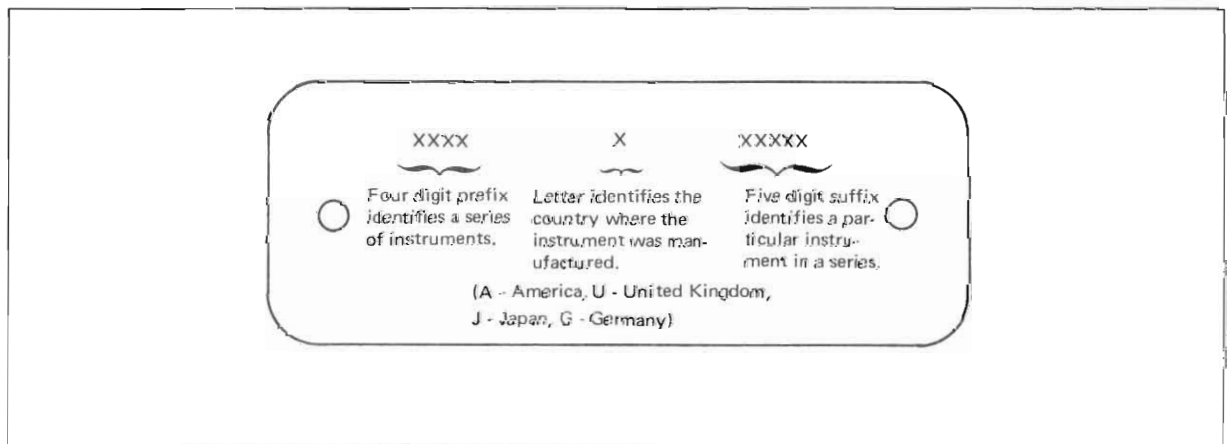


Figure 1-3. Instrument Serial Number (on rear panel).

SECTION II INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information and instructions for the installation and shipping of the 34750A. Included are initial inspection procedures, power and grounding requirements, environmental information and repackaging for shipment.

2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be physically free of marks or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage incurred in transit. If the instrument was damaged in transit, file a claim with the carrier. Check to ensure you have received a power cord with the instrument. Using the performance test procedures referred to in Section V, test the electrical performance of the instrument. If there is damage or deficiency see the warranty on the reverse side of the title page of this manual.

2-5. POWER REQUIREMENTS.

2-6. The 34750A can be operated from the following nominal primary power sources:

Line Voltage	Tolerances	Frequency Range
100 V	+ 5 % to - 10 %	48 to 440 Hz
120 V	+ 5 % to - 10 %	48 to 440 Hz
220 V	+ 5 % to - 10 %	48 to 440 Hz
240 V	+ 5 % to - 10 %	48 to 440 Hz

The 34750A is set for 120 volt operation at the factory. Refer to Figure 2-1 for the procedure to change your unit for operation on a different voltage.



IF THE INSTRUMENT IS NOT SET FOR THE CORRECT PRIMARY POWER VOLTAGE IT MAY BE SERIOUSLY DAMAGED.

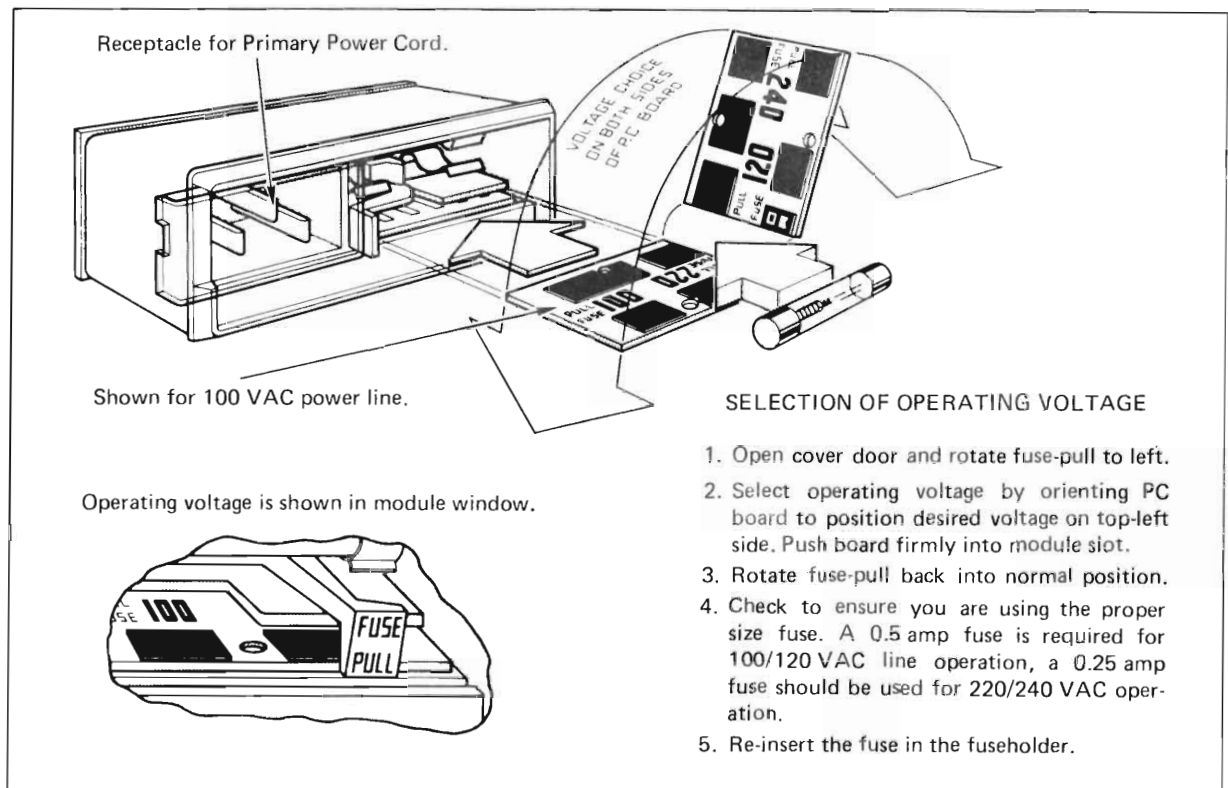


Figure 2-1. Voltage Selection.

The primary power voltage that is currently selected to operate your 34750A can be observed in the power module window. (See Figure 2-1).

2-7. GROUNDING REQUIREMENTS.

2-8. To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that the instrument panel and cabinet be grounded. The Model 34750A is equipped with a three-conductor power cable that grounds the instrument when it is plugged into the appropriate receptacle. The offset pin on the power cable is the ground wire.

2-9. To preserve this protection feature when operating from a two-contact outlet, use a three-prong to two-prong adapter and connect the pigtail on the adapter to power line ground.

2-10. ENVIRONMENTAL REQUIREMENTS.

2-11. The 34750A should not be operated where the ambient temperature exceeds 0° C to 50° C (32° F to 122° F) or stored where the ambient temperature exceeds -40° C to 75° C (-40° F to 167° F).

2-12. INSTRUMENT MOUNTING.

2-13. Bench Use.

2-14. The front of the 34750A may be elevated for operating convenience by lowering the tilt stand on the bottom module.

2-15. Rack Use.

2-16. Figure 2-2 shows the available kits for rack mounting the various module combinations of the 3470 series of instruments.

2-17. REPACKAGING FOR SHIPMENT.

2-18. The following paragraphs contain a general guide for repackaging the instrument for shipment. Refer to Paragraph 2-19 if the original container is to be used; 2-20 if it is not. If you have any questions, contact your nearest -hp- Sales and Service Office (See Appendix B for office locations).

NOTE

If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument identifying the owner and indicating the service or repair to be accomplished. Include the module number and full serial number of the instrument. In any correspondence, identify the instrument by model number and full serial number.

2-19. Place the instrument in the original container with appropriate packing material and seal well with strong tape or metal bands.

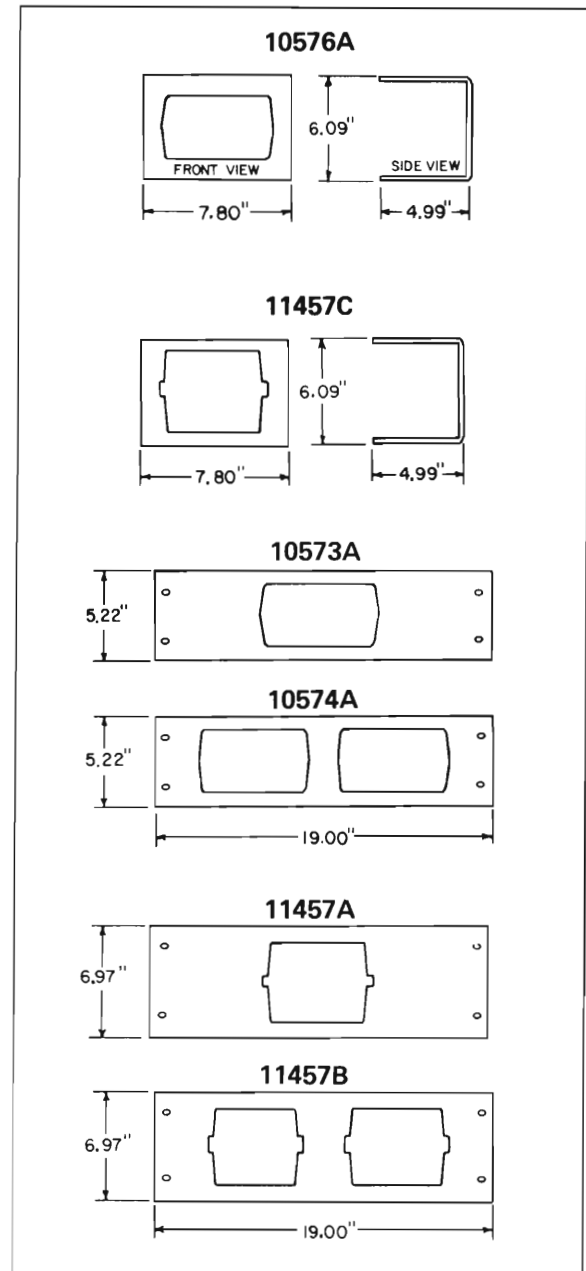


Figure 2-2. Rack Mount Kits.

2-20. If the original container is not to be used, proceed as follows:

- Wrap the instrument in heavy paper or plastic before placing in an inner container.
- Place the packing material around all sides of the instrument and protect the panel face with cardboard strips.

c. Place instrument and inner container in a heavy carton or wooden box and seal with strong tape or metal bands.

2-21. POWER CORDS AND RECEPTACLES.

2-22. Figure 2-3 illustrates power receptacle (wall outlet) configurations that are used throughout the United States and in other countries. The -hp- part number shown directly below each receptacle drawing is the part number for a 34750A power cord equipped with the appropriate mating plug for that receptacle. If the appropriate power cord is not included with the instrument, notify the nearest -hp- Sales and Service Office

and a replacement cord will be provided. The 34750A power cord, power input receptacle and mating connectors meet the safety standards set forth by the International Electrotechnical Commission (IEC).

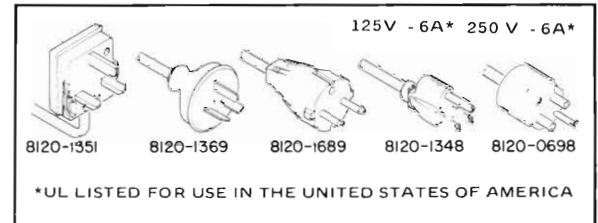


Figure 2-3. Power Receptacles.

SECTION III OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. This section contains instructions and information which will assist you in proper operation of your Model 34750A Display Module. A signal conditioning module (Model 34701A, 34702A or 34703A) is required for proper operation of the display module.

3-3. REAR PANEL FEATURES.

3-4. The rear panel of the Model 34750A is shown in Figure 3-1.



DO NOT PLUG IN THE POWER CORD WITHOUT FIRST SELECTING THE PROPER LINE VOLTAGE.

3-5. WARM-UP.

3-6. A warm-up period of 1 hour is normally required for the instrument to achieve specified accuracy. The instrument should be calibrated with the bottom and center modules to be used with the instrument.

NOTE

Due to temperature change inside the instrument between line and battery operation, the + and - references must be readjusted when changing modes to achieve specified accuracy. The nominal temperature change between line and battery operation is - 15° C.

3-7. OPERATION WITH PLUG-ON MODULES.

3-8. Information regarding operation of the instrument with a plug-on module can be found in the Operating and Service Manual for the plug-on.


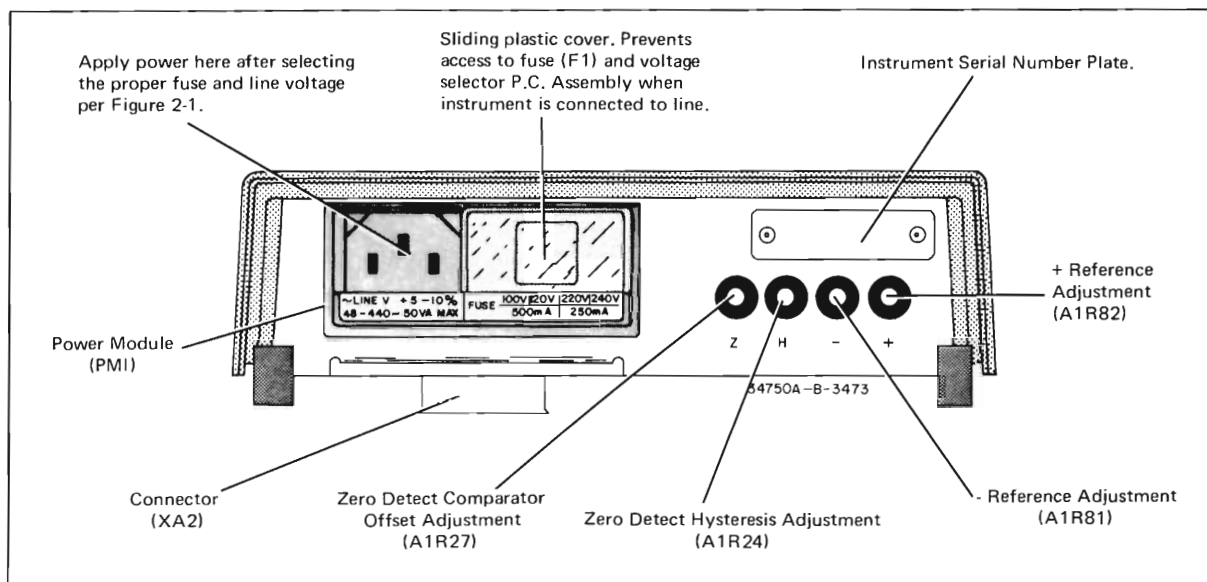


Figure 3-1. 34750A Rear Panel.



INSTALLATION OR REMOVAL OF PLUG-ON MODULES IS TO BE MADE BY QUALIFIED PERSONNEL ONLY.

Figure 4-1. Basic Block Diagram of 34750A.

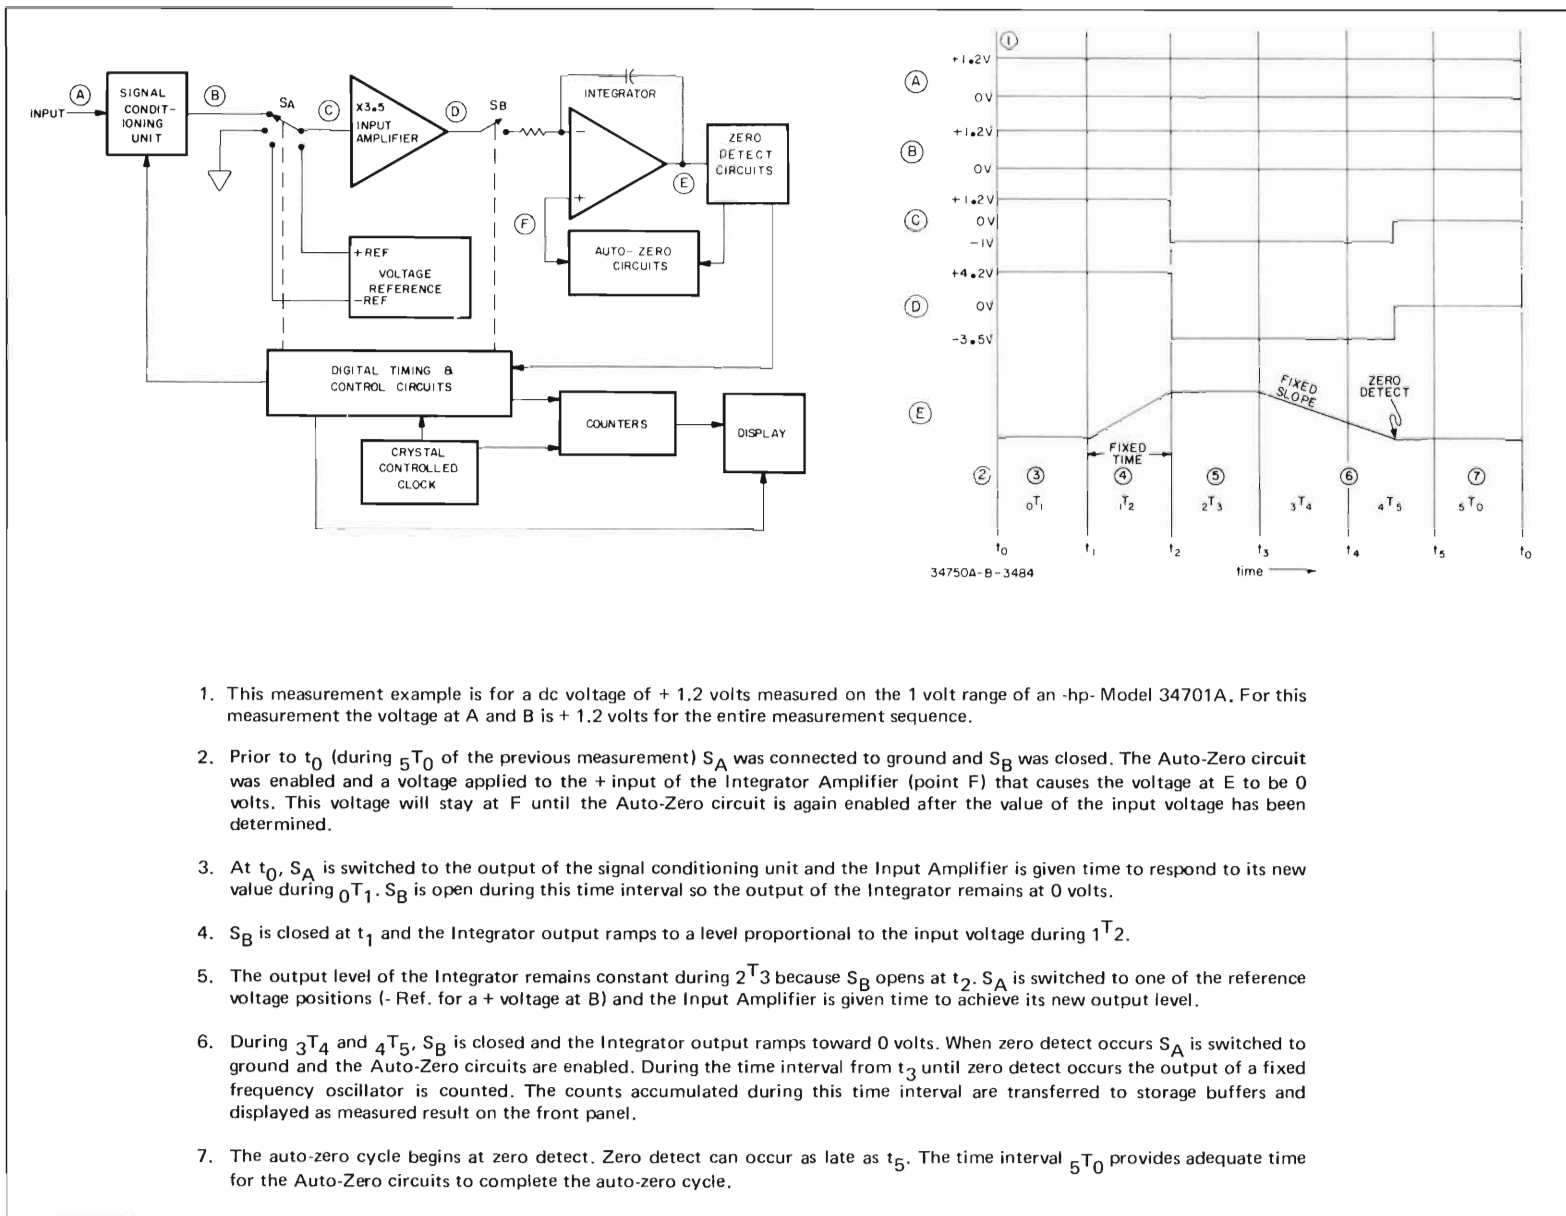

SECTION IV THEORY OF OPERATION

4-1. INTRODUCTION.

4-2. The 34750A Display is a five-digit analog-to-digital converter that utilizes the dual slope integrating technique and a LED (light-emitting diode) display. The 34750A is designed to operate with a signal-conditioning "Plug-On Module". The signal-conditioning unit converts the input signal to a dc voltage between ± 2 volts (± 1 volt full scale + 100 % overrange) which is measured and displayed by the 34750A. A Basic Block Diagram of the 34750A (Figure 4-1) will be discussed in this section followed by a more detailed description of these blocks and the circuits involved.

4-3. Basic Measurement Sequence.

4-4. The dual slope integrating measurement technique employed by the 34750A is described with waveforms and a timing sequence in Figure 4-1. Each measurement

sequence is divided into six time intervals of equal length. Figure 4-1 shows the designations that will be used to identify the beginning of each time interval, the time intervals and a description of the measurement cycle.

4-5. ANALOG CIRCUITS.

4-6. Input Amplifier.

4-7. A stable gain of +3.5 is provided by the Input Amplifier (see Figure 4-2). Only one of the FET switches Q1 through Q4 is conducting at a time to provide an input to the amplifier. Bias current is minimized by the FET input stage of the amplifier. Adjustment R8 sets the output at TP1 to 0 V with point 1 grounded. The FET Bias Network is discussed in Note 1 of Figure 4-2.

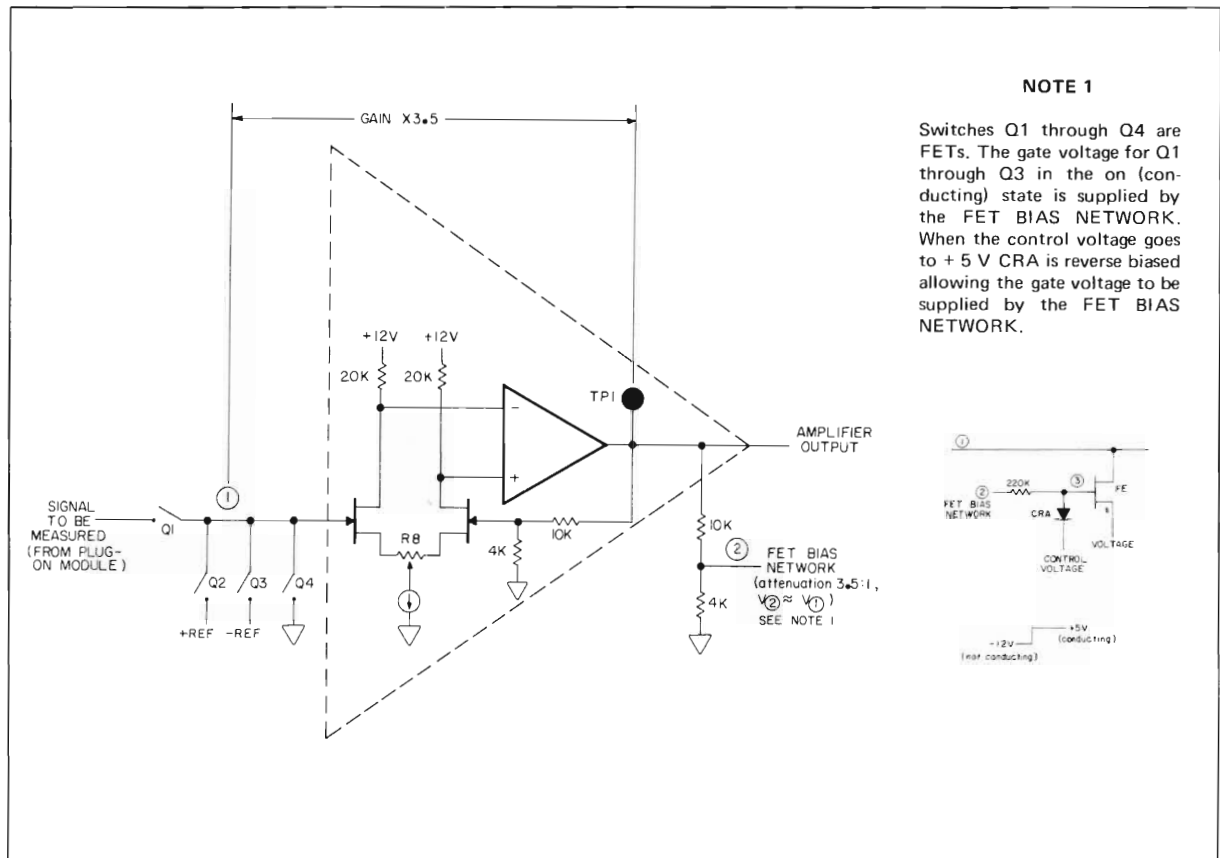


Figure 4-2. Simplified Diagram of the Input Amplifier.

4-8. Integrator.

4-9. The Integrator utilizes a high gain amplifier and a FET input stage to minimize the input current required by the amplifier. A simplified diagram of the Integrator is shown in Figure 4-3. Switch Q6 enables the Integrator during a measurement cycle. FET switch Q13 conducts during the auto-zero cycle to speed up the circuit response during auto-zero. This rapid response is required to quickly recover from overload conditions. The Auto-Zero feedback voltage for the Integrator and the Slope Amplifiers is stored on the Auto-Zero Capacitor. This voltage is applied to the gate of Q7B during the measurement cycle. The auto-zero cycle is discussed in more detail in Paragraph 4-12.

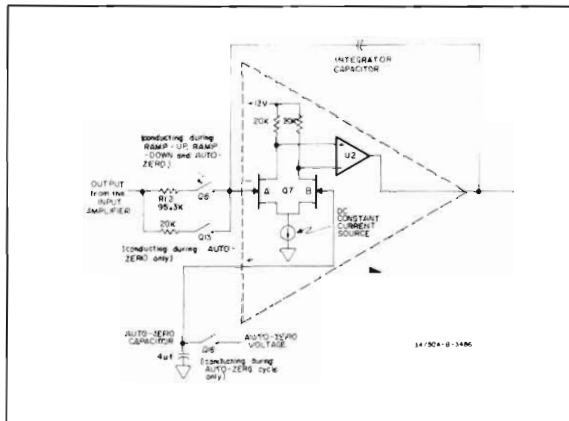


Figure 4-3. Simplified Diagram of the Integrator Circuit.

4-10. Zero Detect Circuits.

4-11. The Zero Detect circuits consist of two amplifiers, each with a gain of 10, and a high gain comparator

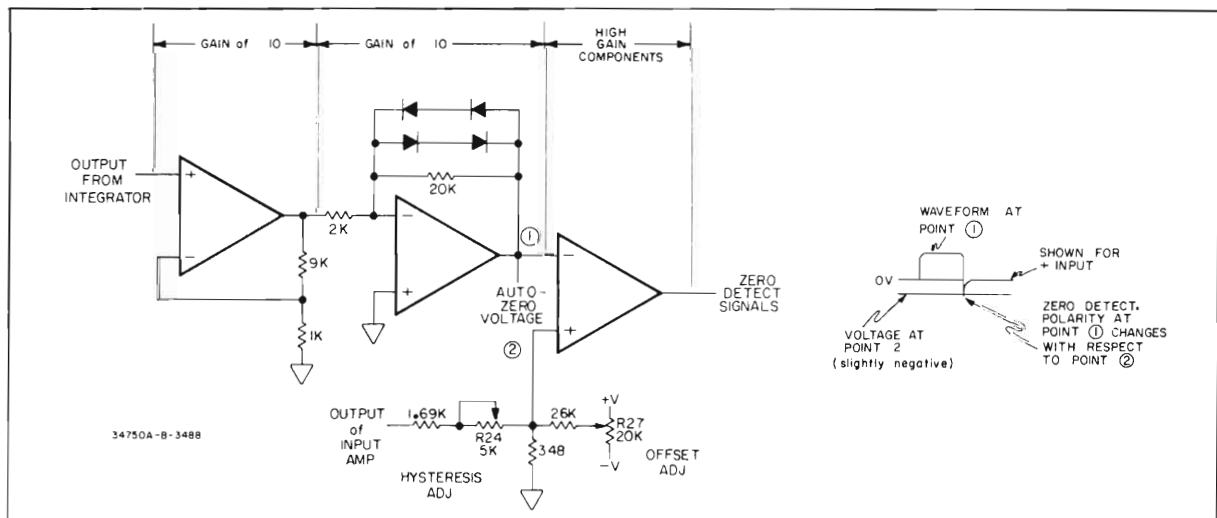


Figure 4-4. Simplified Diagram of Zero Detect Circuits.

* The Comparator Amplifier is clamped internally to prevent it from swinging to the + and - power supply voltages.

shown in Figure 4-4. The second amplifier has diode clamps between its output and the inverting input to prevent amplifier saturation. Depending on the polarity of the input at point 1 with respect to point 2 the Comparator output is either +3 V or 0 V*. The polarity of the voltage at point 2 is determined by the output of the Input Amplifier. At zero detect the Integrator output passes through 0 V. This causes the signal at point 1 to momentarily swing to the polarity opposite that at point 2. Accordingly, the Comparator Amplifier output switches to the level opposite the one that it previously held (i.e. +3 V to 0 V or 0 V to +3 V). Adjustments R24 and R27 are used to calibrate the instrument for small input voltages.

4-12. Auto-Zero Cycle.

4-13. Figure 4-5 shows the 34750A circuits in the auto-zero mode. FET switch Q13 is conducting, which speeds up the recovery of the Integrator to a 0 volt output level (this is important when recovery from overload is required). When Q16 conducts the voltage on the Auto-Zero Capacitor becomes equal to the offset at point 2 with point 1 grounded. After the auto-zero cycle, Q13 and Q16 do not conduct until the next auto-zero cycle. The voltage acquired on the Auto-Zero Capacitor during the auto-zero cycle remains as offset compensation for the rest of the measurement cycle.

4-14. DIGITAL PROCESSING CIRCUITS.

4-15. The Model 34750A Digital Processing Circuits comprise an Algorithmic State Machine (ASM). Figure 4-6 shows a typical simplified block diagram of an ASM. The ASM is a sequential logic circuit that can be described completely with a flow chart. The "Next State Function" and "Output Function" blocks are combinational logic networks. A combinational network is a

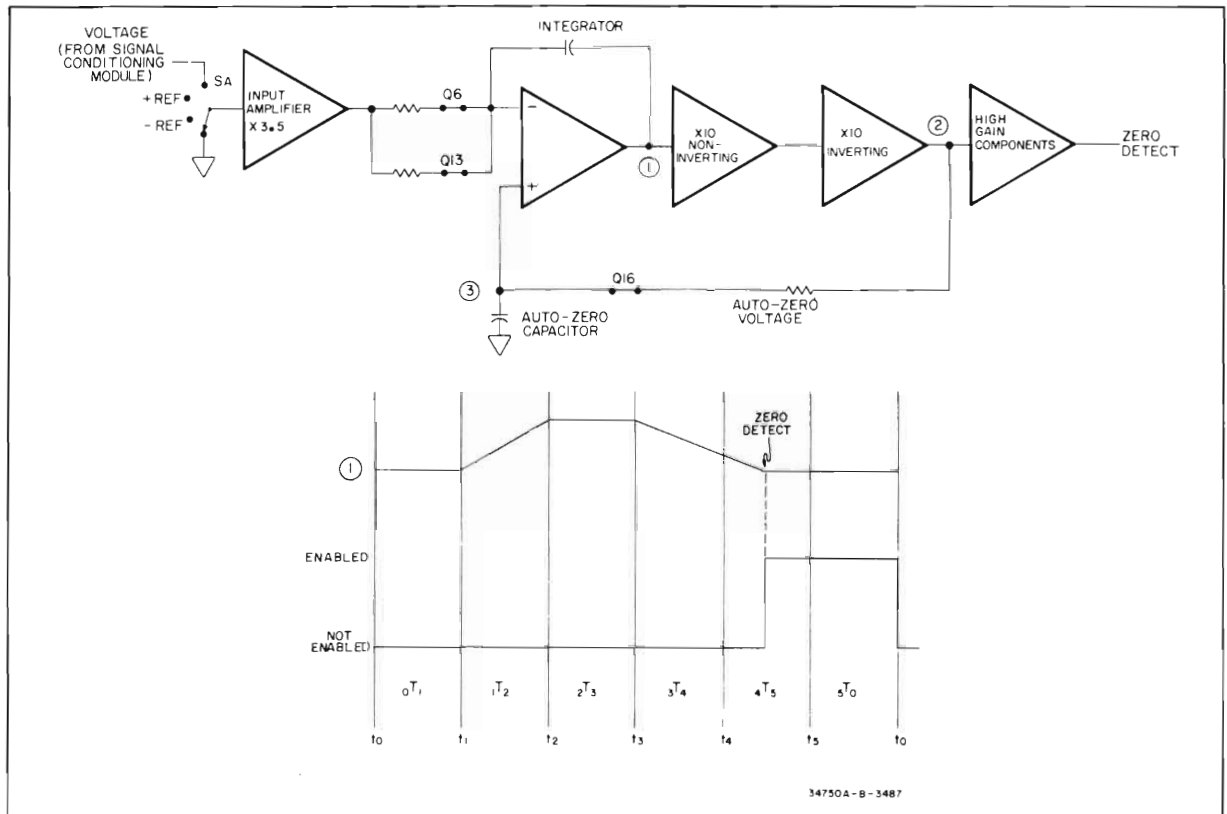


Figure 4-5. 34750A Circuits shown in Auto-Zero Mode.

logical network whose output is completely determined by its present input states. Sequential logic circuits contain memory or storage elements such as flip-flops. As the circuits operate the state of the memory changes. The memory elements may have one state at first and later take on another state. The "Next State" that the memory goes to is dependent on the "Present State", the Clock and the external inputs that are supplied to the logic circuit. The output is dependent on the external inputs and the "Present State" of the memory.

The "Present State" of the memory is dependent on the past sequence of inputs that have been applied.

4-16. The Algorithmic State Machine (ASM). The State Machine in the Model 34750A is shown in Figure 4-7 in block form. The inputs to the State Machine come from the Analog Circuits and the plug-on modules. The output consists of the Data Display of the instrument and logic signals which are applied to the various plug-on modules.

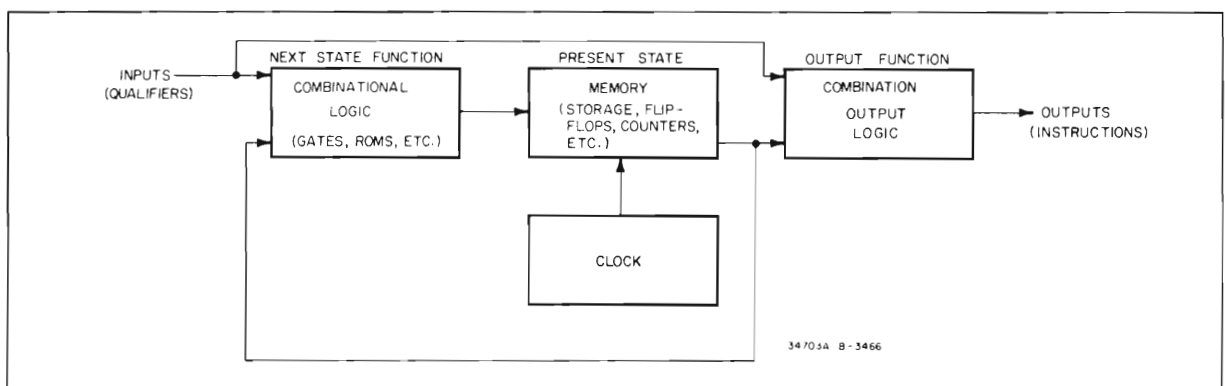


Figure 4-6. Block Diagram of Typical ASM.

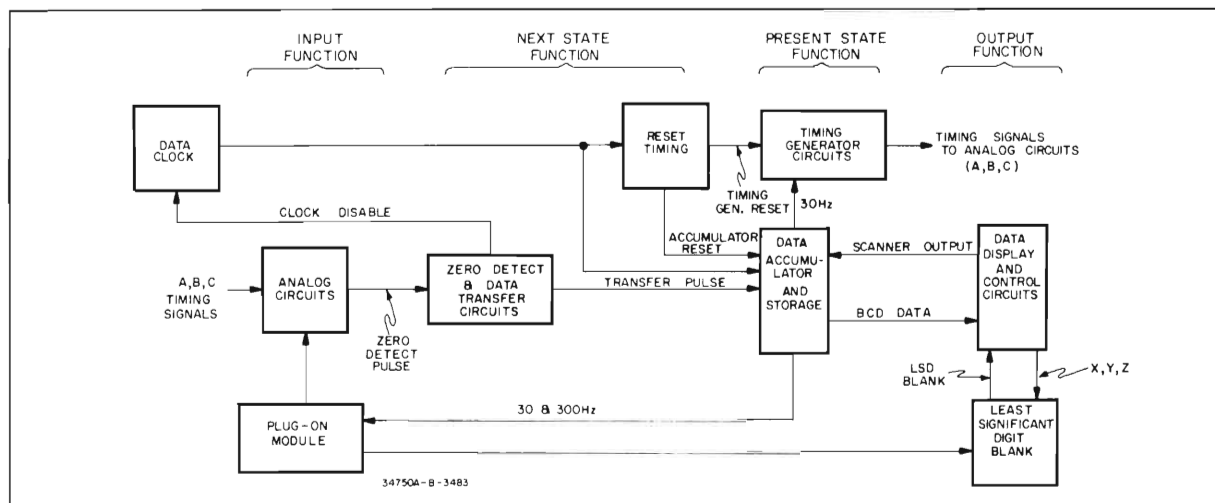


Figure 4-7. ASM Simplified Block Diagram.

4-17. Data Clock (Refer to Figure 4-8).

4-18. The Data Clock generates controlled pulses to which the timing of the analog to digital converter of the Model 34750A is synchronized.* Its frequency is determined by Crystal Y1. The crystal output is amplified by two inverting amplifiers (U6). The output of these amplifiers is then applied to the crystal to sustain oscillations. Buffer U7 is a unity gain amplifier which isolates the clock circuit and prevents loading of the clock by the external circuitry.

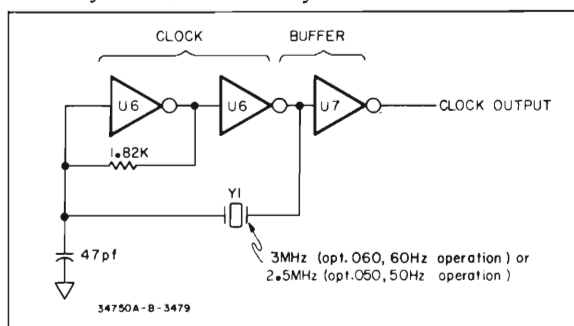


Figure 4-8. Data Clock.

4-19. Timing Generator Circuit (See Figure 7-8).

4-20. The Timing Generator consists of three D flip-flops which generate signals A, B and C. Signal A is used to generate signal B, and signal B is used to generate signal C. The inverse of signal C (i.e., $\bar{C}$) is then used to produce signal A (via gates U16 and U8). The various combinations of signals A, B and C determine the "State Codes" of the instrument timing. Figure 4-9 shows the timing relationships for the Timing Generator and provides a flow chart indicating the sequence in which events occur within the instrument. State Codes 101 and 010 are illegal and will be entered only if caused to do so

by transient pulses generated when the instrument is turned on. If an illegal state is entered, the Timing Generator flip-flops will be cleared on the next reset pulse. This sets the instrument to state 000, at which time an auto-zero cycle occurs. The timing sequence then continues in its normal fashion.

4-21. Zero Detect and Data Transfer Circuits (Refer to Figure 4-10).

4-22. The Zero Detect circuits generate a voltage transition when the integrator waveform reaches approximately 0 V. The polarity of the transition is determined by the polarity of the input. This pulse is then used by the Data Transfer circuits to initiate the following sequence of events:

The polarity of voltage on the D input of Flip-Flop U18 during input enable determines whether the flip-flop is set or reset. If a negative voltage is connected to the 34750A input, the Q output of the flip-flop is high (> 3 V). The zero detect pulse, in this instance, is a negative transition. For a positive input the $\bar{Q}$ output of the flip-flop is high and the zero detect pulse is a positive transition. If the Q output is high the + Reference Gate is enabled. If $\bar{Q}$ is high the - Reference Gate is enabled. The zero detect pulse is applied to the Zero Detect Gates. These gates generate a positive going transition regardless of the polarity of the Zero Detect Pulse. Normally, oscillations occur on the Zero Detect waveform after the initial transition at zero detect. The Zero Detect Catcher is a flip-flop which responds to only

* This does not include the scanning system which has its own clock.

the first transition of the positive pulse from the zero detect gates. It provides a negative going pulse to the Data Transfer Timing circuits. The Data Transfer Timing circuits inhibit the main clock during the period of data transfer within the Data Accumulator. The Transfer Timing Waveforms in Figure 4-10 show the relationship between the Data Clock Disable pulse and the Transfer Pulse. The length of the Data Clock Disable

pulse is set by the time constant of C23 and R52. The length of the Transfer pulse is set by the time constant of C26 and R53. Since the time constant of C23 and R52 is larger than that for C26 and R53 the Data Clock Disable pulse remains low for a longer period than the Transfer Pulse. This prevents the Data Clock from altering the count in the Data Accumulator during a transfer cycle.

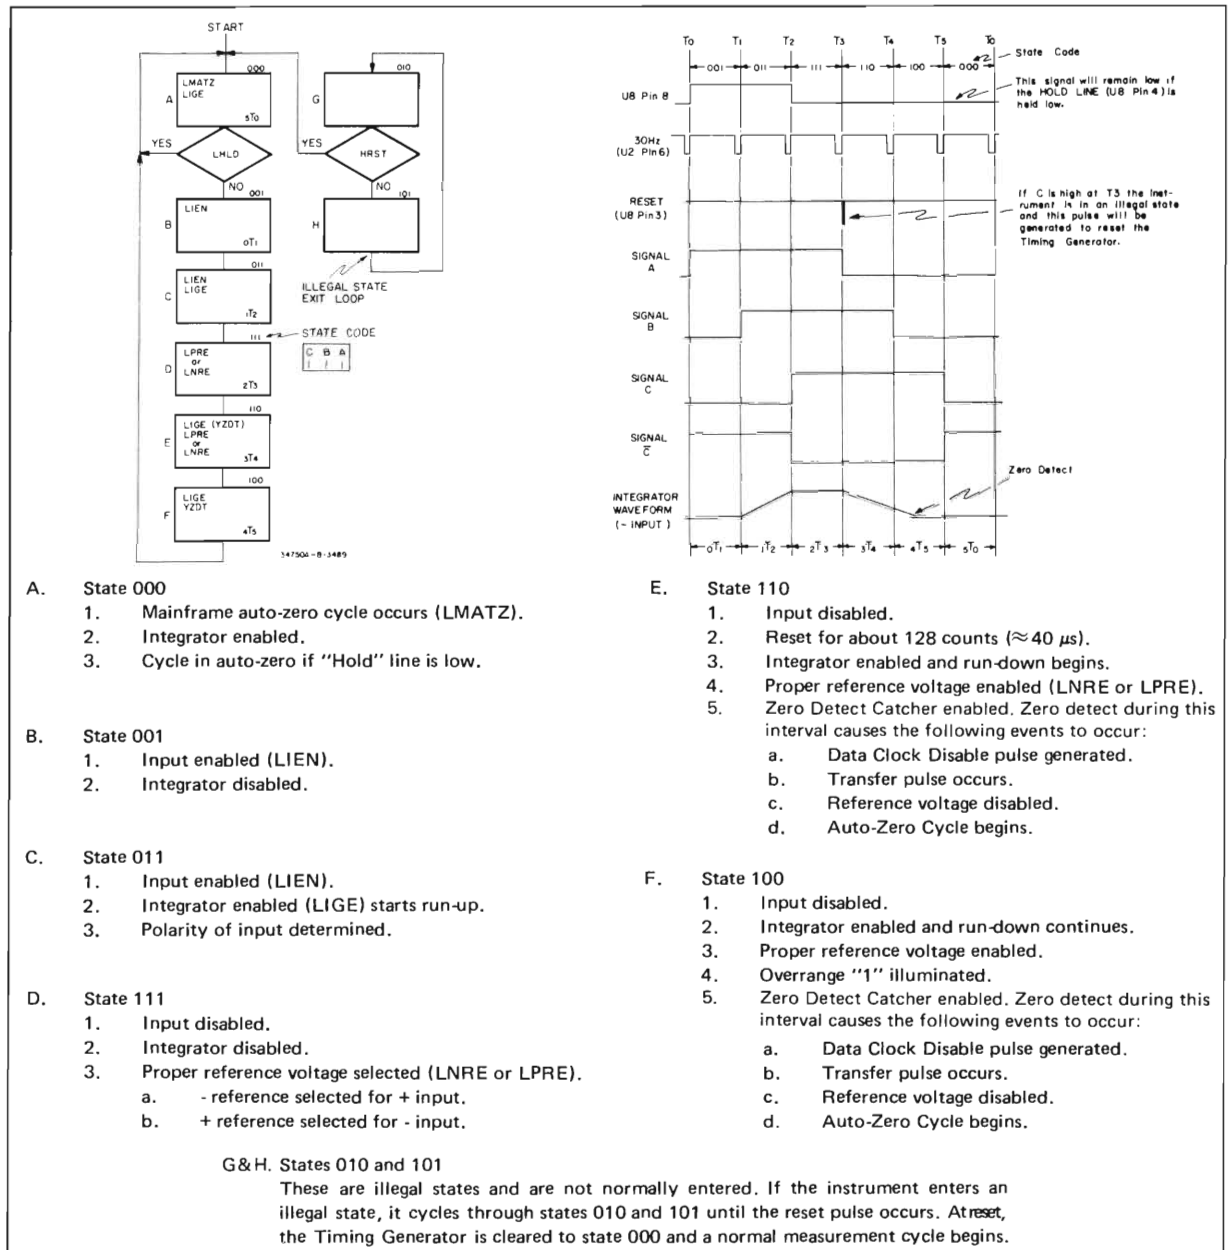


Figure 4-9. 34750A Flow Chart.

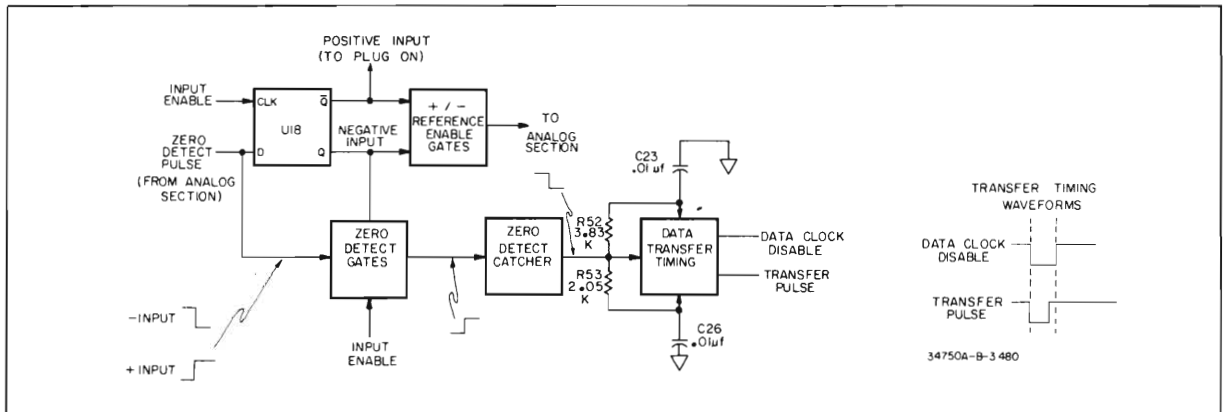


Figure 4-10. Zero Detect and Data Transfer Timing.

4-23. Data Accumulator and Storage (Refer to Figure 7-7).

4-24. The Data Accumulator counts pulses from the Data Clock starting at the beginning of run-down (T3 on Figure 4-9) and continuing until zero detect. The Data Accumulator reset pulse is generated at the beginning of run-down. This pulse resets the 5 decades of the Data Accumulator Counter. At zero detect the Transfer Pulse goes low and the Data Clock is inhibited. Each decade of the accumulated count is then transferred in 8421

parallel BCD form to storage elements within the Data Accumulator. This data is then scanned a decade at a time by signals X, Y and Z, and applied to the BCD output lines.

4-25. Data Display and Control Circuits (Refer to Figure 4-11).

4-26. The Data Scanner controls the timing of the Display circuits. Signal X occurs at a 3 kHz rate. Signals Y and Z occur at a 1.5 kHz rate. Scanner clock and

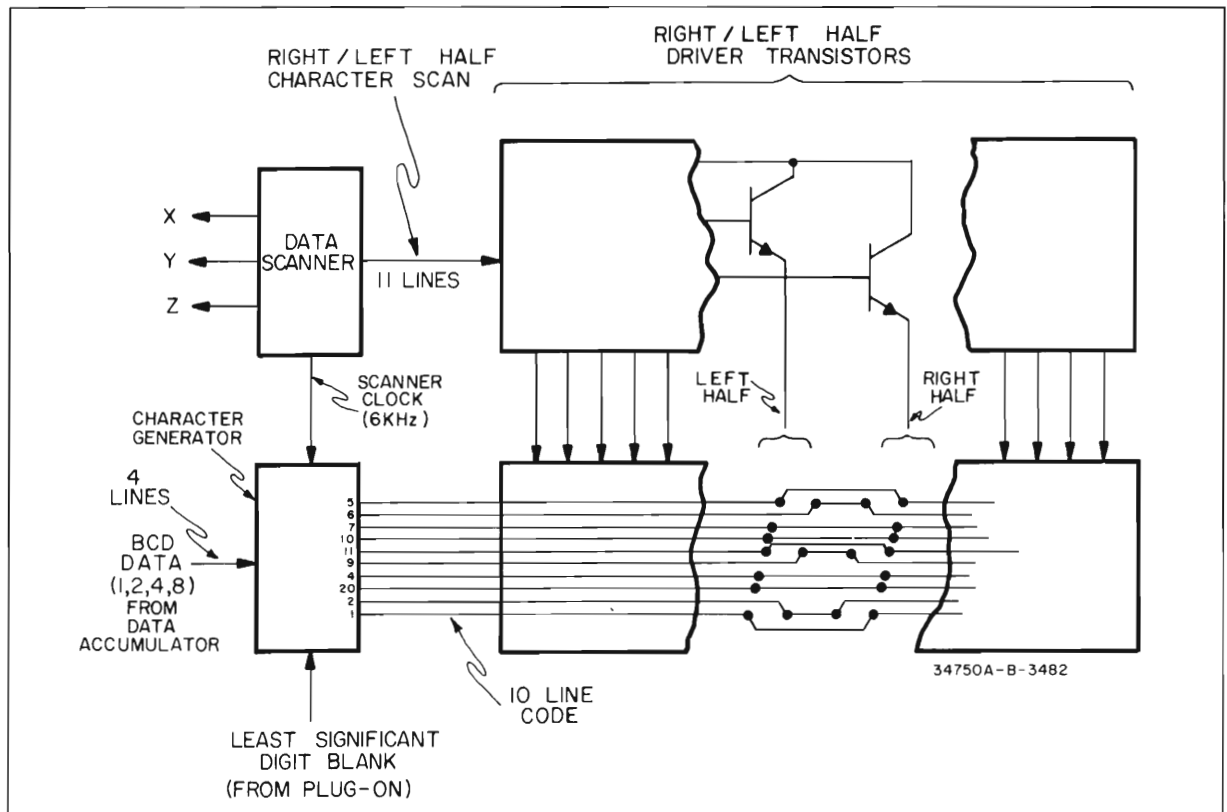


Figure 4-11. Data Display Circuits.

Right Half/Left Half character scan occur at a 6 kHz rate. The BCD data from the Data Accumulator is converted to a 10 line code. The desired lines go low (ground) when selected, providing a ground path for current through the Right Half/Left Half Driver Transistors and the LED chips connected to the lines. Each character is individually scanned beginning with the least significant and proceeding to the most significant (right to left as you face the instrument). Each character is also divided into a left and right half. The selected LED's of the right half are illuminated first followed by those of the left half.

4-27. Reset Timing (See Figure 4-12).

4-28. The Reset Timing circuits generate a reset pulse at the beginning of run-down (T3) in the measurement cycle. When signal "A" goes low the $\div 32$ counter (U12) is reset causing Pin 2 of U8 to go low and pin 1 to go high. This initiates the Reset Pulse and enables the flip-flops in the $\div 4$ counter (U11). Figure 4-12 shows

the timing relationship of the reset pulse to signal A of the Timing Generator. The Data Clock is divided by a factor of 128 (4×32). Pin 2 of U8 goes high after approximately 128 counts of the Data Clock causing Pin 1 of U8 to go low. This completes the reset sequence for one measurement cycle.

4-29. Least Significant Digit Blank (Refer to Figure 7-7).

4-30. Depending upon the signal conditioning module used it is sometimes necessary to blank the last digit of the Model 34750A. This is accomplished by grounding Pin 12 of the character generator during the time the least significant digit is scanned. Two "Nor" Gates (U13) and one "Nand" Gate (U14) are used to do this. As indicated on the schematic diagram, all inputs to the Nor Gates (Pins 5, 6, 9 and 8) must be low in order to obtain a low at Pin 11 of U14. A low at Pin 11 of U14 will blank the digit.

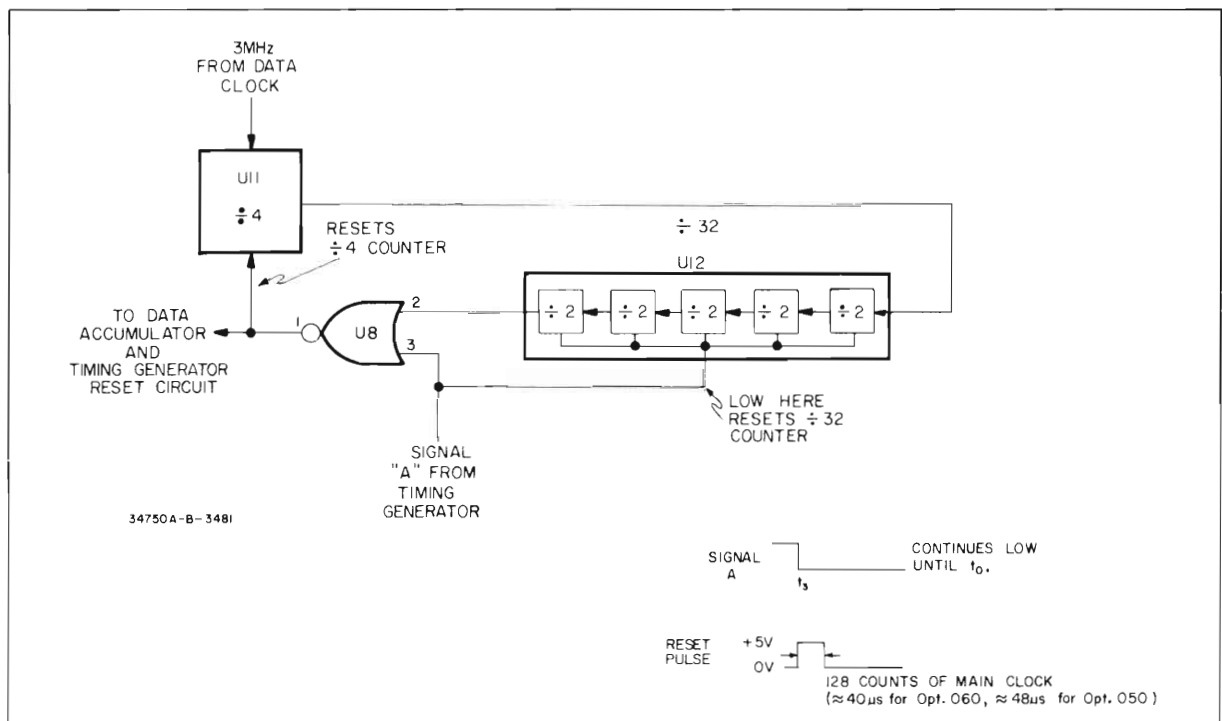


Figure 4-12. Reset Timing.

SECTION V MAINTENANCE

5-1. INTRODUCTION.

5-2. Operational checks and Adjustment Procedures for the Model 34750A are contained in this section of the manual. Performance tests relating to the operation of a 34750A and a plug-on module are contained in the manual for the plug-on module (34701A, 34702A or 34703A).



INSTALLATION OR REMOVAL OF PLUG-ON MODULES IS TO BE MADE BY QUALIFIED PERSONNEL ONLY.

5-3. OPERATIONAL CHECKS.

5-4. The following checks will assist in determining if your instrument is functioning correctly. These tests are not intended to check instrument specifications.



Figure 5-1. 11456A Readout Test Card.

5-5. Connect an 11456A Readout Test Card to the model 34750A as shown in Figure 5-1. Use a short clip lead to make the required connections listed in Table 5-2, and compare the test results with those indicated.

5-6. ADJUSTMENT PROCEDURE.

5-7. Paragraphs 5-12 through 5-16 are adjustment procedures for the Model 34750A Display. These procedures require the use of a 34701A, 34702A or 34703A plug-on module. We recommend that these procedures be performed only if the performance checks show that the instrument does not meet its specifications. If the instrument cannot be adjusted to meet its specifications, refer to Troubleshooting (Paragraph 7-3) in Section VII. Table 5-1 lists test equipment recommended for the adjustment procedures and troubleshooting.

WARNING

DISCONNECT THE POWER CORD BEFORE REMOVING THE COVERS.

Table 5-1. Recommended Test Equipment.

Instrument Type	Required Specifications	Recommended Model
DC Digital Voltmeter	4 digit resolution Accuracy: ± (.03 % of reading + 0.01 % of range)	-hp- Model 34740A
DC Standard	1 V Range Accuracy: ± (0.002 % of setting + 0.0004 % of range)	-hp- Model 740B

Table 5-2. Operational Checks.

Connections on 11456A Assembly	Display Expected	Refer to the following Areas of the Manual if the Correct Display is not Obtained.
Input Pin to + Ref. Input Pin to - Ref. DP1 to GND3 DP2 to GND3 DP3 to GND3 DP4 to GND3	+ 1.00000 (± 2 counts) - 1.00000 (± 2 counts) XXX.XX XX.XXX X.XXXX .XXXXX NOTE X represents any digit between 0 and 9.	Paragraph 5-16, Figure 7-3 Paragraph 5-16, Figure 7-3 Figure 7-3 Figure 7-3 Figure 7-3 Figure 7-3

5-8. Cover Removal.

5-9. In order to perform two of the adjustments in this section, it will be necessary to obtain access to the interior of the instrument. If your Display Module is connected to a plug-on module separate the two modules by pulling the slide lock levers, shown in Figure 3-1, to the rear and lifting the Display Module from the plug-on module. The 34750A Cover can then be removed by unscrewing a mounting bolt near the transformer (see Figure 5-2) and spreading apart two sets of plastic fingers which hold the Display printed circuit assembly in place. The printed circuit (p.c.) assembly is covered by a black metal shield which must also be removed. This is accomplished by unscrewing the four bolts holding it in place and lifting it off the p.c. assembly. Connect a plug-on module to the 34750A and apply power.

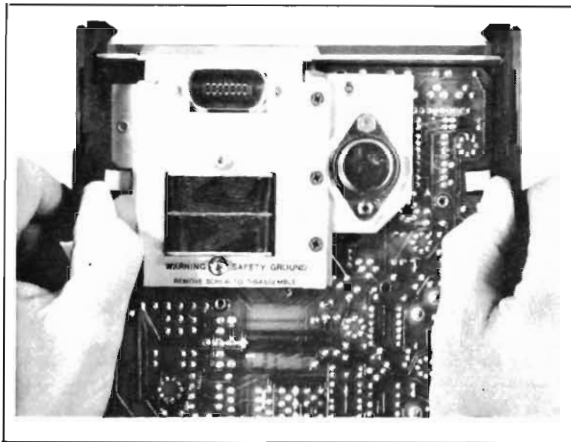


Figure 5-2. Cover Removal.

WARNING

A NUMBER OF BRASS TERMINALS EXTEND FROM THE POWER MODULE (PMI) INTO THE INSTRUMENT. (SEE FIGURE 5-4). A PLASTIC COVER HAS BEEN PLACED OVER THE TERMINALS TO PREVENT ELECTRICAL SHOCK WHEN WORKING IN THE AREA OF THE POWER MODULE. EXTREME CARE SHOULD BE EXERCISED, PARTICULARLY IF THIS COVER IS REMOVED, TO AVOID CONTACT WITH THE TERMINALS. THIS WARNING APPLIES WHENEVER THE INSTRUMENT IS CONNECTED TO THE POWER LINE.

5-10. Adjustment Locator.

5-11. Figure 5-4. shows the location of all adjustments within the Model 34750A.

NOTE

The following procedures require a properly functioning plug-on module. Refer to the Operating and Service

manual of the associated plug-on module if it appears to be malfunctioning.

5-12. Power Supply Adjustment.

a. Connect a dc voltmeter (-hp- Model 34740A/34701A or equivalent) between A1GND1 and the cathode of A1CR25.

b. Observe the voltmeter and adjust A1R69 for $+12\text{ V} \pm 10\text{ mV}$.

5-13. INPUT AMP. OFFSET ADJUSTMENT.

a. Connect TP4 of the A1 assembly to GND1.

b. Connect a digital voltmeter (-hp- Model 34740A/34701A or equivalent) to TP1, using GND1 as reference, and adjust A1R8 for $0\text{ V} \pm 1\text{ mV}$.

NOTE

Before proceeding, all covers removed in Paragraph 5-8 should be reinstalled. The instrument should then be allowed to warm up for approximately 2 hours. See Paragraph 3-5 for information on instrument warm-up time.

5-14. ZERO DETECT COMPARATOR OFFSET.

a. Connect the equipment as shown in Figure 5-3

b. Set the plug-on module to the 1000 V range and the DC STANDARD for a .20000 V output. (If a Model 34703A plug-on is used, set it for "MANUAL" operation.) Note the indication of the voltmeter display.

c. Invert the input and again observe the display. If the indications in steps b and c do not agree, adjust the "Z" (ZERO) control on the rear panel until the display indication for both polarities is the same.

5-15. ZERO DETECT HYSTERESIS ADJUSTMENT.

a. With the instruments connected and set as in Paragraph 5-14, adjust the "H" Hysteresis on the rear panel to give a display indication of 20 counts.

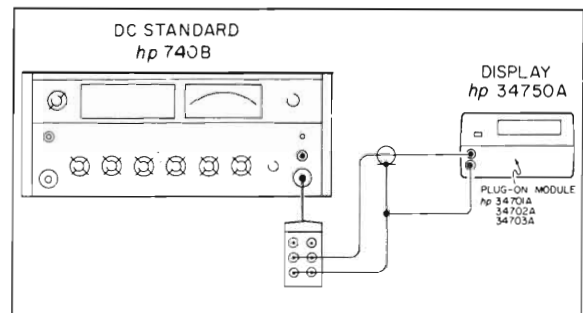


Figure 5-3. Zero Detect Comparator Offset Adjustment.

5-16. REFERENCE VOLTAGE ADJUSTMENTS.

a. Apply +1.00000 V to the plug-on module input from the DC STANDARD. The plug-on module should be set to the 1 V range.

b. Adjust the "+" control on the rear panel of the

instrument for +1 V $\pm$ 1 count.

c. Apply -1.00000 V to the Model 34750A input from the DC STANDARD.

d. Adjust the "-" control on the rear panel of the instrument for -1 V $\pm$ 1 count.

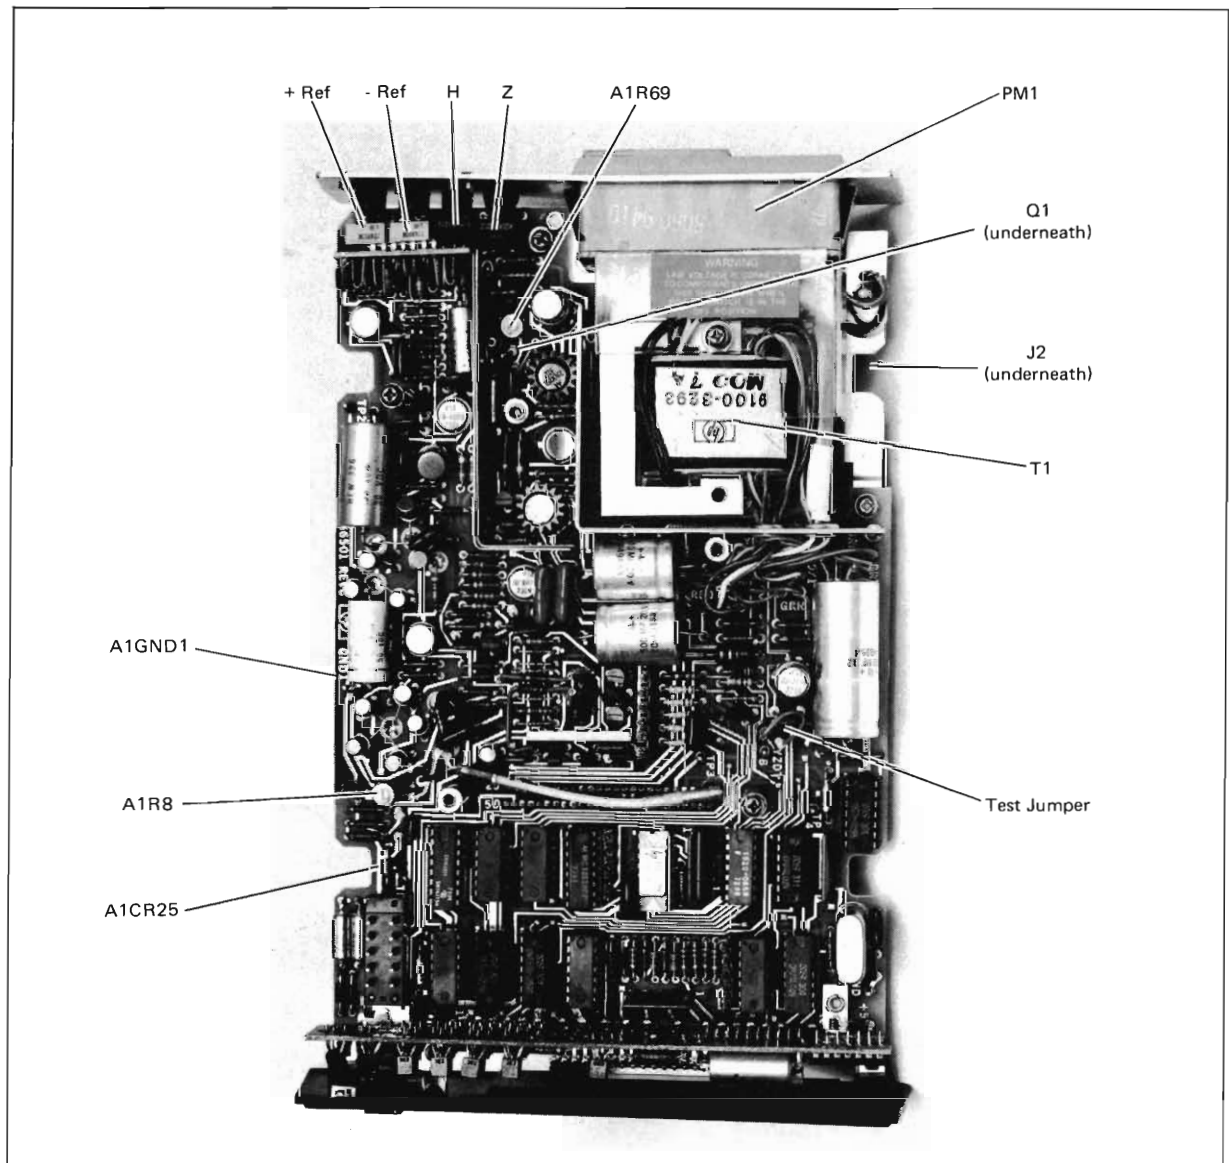


Figure 5-4. Chassis Mounted Component and Adjustment Locator.

ABBREVIATIONS			
Ag	silver	Hz	hertz (cycle(s) per second)
Al	aluminum	ID	inside diameter
A	ampere(s)	imp	impregnated
Au	gold	incd	incandescent
C	capacitor	ins	insulation(ed)
cer	ceramic	k Ω	kiloohm(s) = 10^3 ohms
coef	coefficient	kHz	kilohertz = 10^3 hertz
com	common	L	inductor
comp	composition	lin	linear taper
conn	connection	log	logarithmic taper
dep	deposited	mA	milliampere(s) = 10^{-3} amperes
DPDT	double-pole double-throw	MHz	megahertz = 10^6 hertz
DPST	double-pole single-throw	M Ω	megohm(s) = 10^6 ohms
elect	electrolytic	met flm	metal film
encap	encapsulated	mfr	manufacturer
F	farad(s)	ms	millisecond
FET	field effect transistor	mtg	mounting
fxd	fixed	mV	millivolt(s) = 10^{-3} volts
GaAs	gallium arsenide	μ F	microfarad(s)
GHz	gigahertz = 10^9 hertz	μ s	microsecond(s)
gd	guard(ed)	μ V	microvolt(s) = 10^{-6} volts
Ge	germanium	mv	Mylar(R)
gnd	ground(ed)	nA	nanoampere(s) = 10^{-9} amperes
H	henry(ies)	NC	normally closed
Hg	mercury	Ne	neon
		NO	normally open
DECIMAL MULTIPLIERS			
Prefix	Symbols	Multiplier	
tera	T	10^{12}	
giga	G	10^9	
mega	M or Meg	10^6	
kilo	K or k	10^3	
hecto	h	10^2	
deka	da	10	
deci	d	10^{-1}	
Prefix	Symbols	Multiplier	
centi	c	10^{-2}	
milli	m	10^{-3}	
micro	μ	10^{-6}	
nano	n	10^{-9}	
pico	p	10^{-12}	
femto	f	10^{-15}	
atto	a	10^{-18}	
DESIGNATORS			
A	assembly	FL	filter
B	motor	HR	heater
BT	battery	IC	integrated circuit
C	capacitor	J	jack
CR	diode	K	relay
DL	delay line	L	inductor
DS	lamp	M	meter
E	misc electronic part	MP	mechanical part
F	fuse	P	plug
		Q	transistor
		OCR	transistor-diode
		R	resistor
		RT	thermistor
		S	switch
		T	transformer
		TB	terminal board
		TC	thermocouple
		TP	test point
		TS	terminal strip
		U	microcircuit
		V	vacuum tube, neon bulb, photocell, etc.
		W	cable
		X	socket
		XDS	lampholder
		XF	fuseholder
		Y	crystal
		Z	network

* optimum value selected at factory.
 ** average value shown (part may be omitted)
 no standard type number assigned
 selected or special type
 (R) Dupont de Nemours

STD-B-2734

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphameric order of their reference designators and indicates the description, -hp- Part Number of each part, together with any applicable notes, and provides the following:

- a. Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.
- b. Description of the part. (See list of abbreviations below.)
- c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)
- d. Manufacturers part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

6-8. PARTS CHANGES.

6-9. Components which have been changed are so marked by one of three symbols; i.e. Δ , Δ with a letter subscript, e.g. Δ_a , or Δ with a number subscript e.g. Δ_{10} . A Δ with no subscript indicates the component listed is the preferred replacement for an earlier component. A Δ with a letter subscript indicates a change which is explained in a note at the bottom of the page. A Δ with a number subscript indicates the related change is discussed in backdating (Section 8). The number of the subscript indicates the number of the change in backdating which should be referred to.

6-10. PROPRIETARY PARTS.

6-11. Items marked by a dagger ($\dagger$) in the reference designator column are available only for repair and service of Hewlett-Packard instruments.

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	34750-66501	1	BOARD ASSY:MAIN (INCLUDES A2)	2848C	34750-66501
A1C1	0140-0204	3	C:FXD MICA 47PF 500V	72136	DM15E470J0500WV1CR
A1C2	0160-2207	2	C:FXD MICA 300 PF 5%	28480	0160-2207
A1C3	0160-2204		C:FXD MICA 100PF 5%	72136	RD15F101J3C
A1C4	0160-3622	10	C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C5	0140-0204	2	C:FXD MICA 47 PF 5% NPO 500VDCW	14655	6DM15E470J5C
A1C6	0160-2199	2	C:FXD MICA 30 PF 5% 300VDCW	28480	0160-2199
A1C7	0150-0045	1	C:FXD TI 8.2 PF 5% 500VDCW	78488	TYPE GA
A1C8	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C9	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C10	0160-4025	1	C:FXD 0.33 UF 10%	28480	0160-4025
A1C11	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A1C12	0160-3501	1	C:FXD POLY 4 UF 10% 50VDCW	84411	HEW 138
A1C13	0160-0820	1	C:FXD CER 0.05 UF +80-20% 25VDCW	72982	5855 Y5U 503Z
A1C14	0150-0050	2	C:FXD CER 1000 PF +80-20% 100VDCW	56285	CG67B102E102ZS26-CDH
A1C15	0180-1794	1	C:FXD ELECT 22 UF 10% 35VDCW	56285	1500226X9035R2-DYS
A1C16	0160-2199		C:FXD MICA 30 PF 5% 300VDCW	28480	0160-2199
A1C17	0160-3077	2	C:FXD MY 0.027 UF 10% 100VDCW	56285	225P2739WB1-PWM
A1C18	0160-3077		C:FXD MY 0.027 UF 10% 100VDCW	56285	225P2739WB1-PWM
A1C19	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C21	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C22	0140-0204		C:FXD MICA 47 PF 5% NPO 500VDCW	14655	RD15E470J5C
A1C23	0160-3847	2	C:FXD CER 0.01 UF +100-10% 25VDCW	72982	8005-Q1ACB-W5R-1C3P
A1C24	0180-1701	2	C:FXD ELECT 6.8 UF 20% 6VDCW	28480	0180-1701
A1C25	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C26	0160-3847		C:FXD CER 0.01 UF +100-10% 25VDCW	72982	8005-Q1ACB-W5R-103P
A1C27	0140-0200	1	C:FXD MICA 390 PF 5%	72136	RD15F351-J3C
A1C28	0180-0229	1	C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A1C29	0160-0382		C:FXD MICA 510 PF 5%	28480	0160-0382
A1C31	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C32	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C33	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C34	0180-0228	2	C:FXD ELECT 22 UF 10% 15VDCW	56285	1500226X9015B2-DYS
A1C35	0180-0465	2	C:FXD 500 UF 30VDCW	28480	0160-4080
A1C36	0180-0465		C:FXD 500 UF 30VDCW	28480	0160-4080
A1C37	0180-0228		C:FXD ELECT 22 UF 10% 15VDCW	56285	1500226X9015B2-DYS
A1C38	0160-3622		C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A1C39	0180-0466	1	C:FXD 2200 UF 15VDCW	28480	0160-4081
A1C41	0150-0050		C:FXD CER 1000 PF +80-20% 1000VDCW	56285	CG67B102E102ZS26-CDH
A1C42	0180-1701		C:FXD ELECT 6.8 UF 20% 6VDCW	28480	0180-1701
Δ _b A1C43	0180-4095		C:FXD 5PF 500V	95275	VY13C0R5B
A1CR 1,2	1901-0040	10	DIODE:SILICON 50 MA 30 WV	07263	FDG1688
A1CR3	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A1CR4	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A1CR5	1901-0376	3	DIODE:SILICON 35V	28480	1901-0376
A1CR6	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A1CR7	1902-0041	2	DIODE: BREAKDOWN 5.11V 5%	04713	SZ10939-98
A1CR8	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A1CR9	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A1CR10	1901-0586	1	DIODE:SI 30 WV 10 PA LEAKAGE	28480	1901-0586
A1CR11	1901-0376		DIODE:SILICON 35V	28480	1901-0376
A1CR12	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A1CR13	1901-0376		DIODE:SILICON 35V	28480	1901-0376
A1CR14	1902-0048	3	DIODE: BREAKDOWN 6.81V 5%	04713	SZ10939-134
A1CR15	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A1CR16	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A1CR17	1901-0518	1	DIODE:HOT CARRIER	28480	1901-0518
A1CR18	1902-0048		DIODE: BREAKDOWN 5.81V 5%	04713	SZ10939-134
A1CR19	1901-0028	7	DIODE:SILICON 0.75A 400PIV	04713	SR1358-9
A1CR21	1901-0028		DIODE:SILICON 0.75A 400PIV	04713	SR1358-9
A1CR22	1901-0028		DIODE:SILICON 0.75A 400PIV	04713	SR1358-9
A1CR23	1901-0028		DIODE:SILICON 0.75A 400PIV	04713	SR1358-9
A1CR24	1902-0048		DIODE: BREAKDOWN 6.81V 5%	04713	SZ10939-134
A1CR25, CR26	1902-0202	2	DIODE BREAKDOWN:15.0V 5% 1W	28480	1902-0202
A1CR27, CR28			DIODE BREAKDOWN:6.43V (MATCHED WITH A1U25 AS A SET, SEE A1U25 FOR PART NUMBER TO ORDER)		
A1CR29, CR31	1901-0028		DIODE:SILICON 0.75A 400PIV	04713	SR1358-9
A1CR32	1902-0551	1	DIODE BREAKDOWN:6.19V 5%	28480	1902-0551
A1CR33	1901-0028		DIODE:SILICON 0.75A 400PIV	04713	SR1358-9
A1CR34	1902-0541		DIODE: BREAKDOWN 5.11V 5%	04713	SZ10939-98
A1L1	9100-3223	2	COIL:FXD 220 UH	28480	9100-3223
A1L2	9100-3223		COIL:FXD 220 UH	28480	9100-3223
A1L3	9170-0894		BEAD:SHIELDING	02114	56-59-65/4A6

See introduction to this section for ordering information

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1L4	9170-0894	6	BEAD:SHIELDING	2848C	9170-0894
A1L5	9170-0894		BEAD:SHIELDING	2848C	9170-0894
A1L6	9170-0894		BEAD:SHIELDING	2848C	9170-0894
A1L7	9170-0894		BEAD:SHIELDING	2848C	9170-0894
A1Q1	1855-0208		TSTR: SI	17856	2N4117
A1Q2	1855-0305	1	TSTR:SI	80131	2N4117A
A1Q3	1855-0305		TSTR:SI	80131	2N4117A
A1Q4	1855-0305		TSTR:SI	80131	2N4117A
A1Q5	1855-0418		TRANSISTOR:FET	2848C	1855-0418
A1Q6	1855-0093		TSTR:FET N-CHANNEL	2848C	1855-0093
A1Q7	1855-0308	1	TSTR:SI NPN DUAL	2848C	1855-0308
A1Q8	1853-0020	5	TSTR:SI PNP(SELECTED FROM 2N3702)	2848C	1853-0020
A1Q9	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	2848C	1853-0020
A1Q11	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	2848C	1853-0020
A1Q12	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	2848C	1853-0020
A1Q13	1855-0412		TSTR:FET	2848C	1855-0412
A1Q14	1854-0071	5	TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A1Q15	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A1Q16	1855-0412		TSTR:FET	2848C	1855-0412
A1Q17	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	2848C	1853-0020
A1Q18	1853-0089	1	TSTR:SI PNP	80131	2N4517
A1Q19	1854-0094	1	TSTR:SI NPN	80131	2N3646
A1Q21	1854-0071	1	TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A1Q22	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A1Q23	1854-0039		TSTR:SI NPN	80131	2N3053
A1Q24	1853-0016		TSTR:SI PNP	80131	2N3638
A1Q25	1853-0051		TSTR:SI PNP	80131	2N4037
A1R1	0684-5641	1	R:FXD COMP 560K OHM 10% 1/4W	01121	CB 5641
A1R2	0684-2241	3	R:FXD COMP 220K OHM 10% 1/4W	01121	CB 2241
A1R3	0684-2241		R:FXD COMP 220K OHM 10% 1/4W	01121	CB 2241
A1R4	0684-2241		R:FXD COMP 220K OHM 10% 1/4W	01121	CB 2241
A1R5	0684-3331		R:FXD COMP 33K OHM 10% 1/4W	01121	CB 3331
A1R6	0757-0446		R:FXD FLM 15K OHM 1% 1/8W	2848C	0757-0449
A1R7	0757-0446	1	R:FXD FLM 15K OHM 1% 1/8W	2848C	0757-0449
A1R8	2100-2061		R:VAR FLM 20G OHM 10% LIN 1/2W	2848C	2100-2061
A1R9	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	2848C	0757-0442
A1R11	0698-3558		R:FXD MET FLM 4.02K OHM 1% 1/8W	2848C	0698-3558
A1R12	0757-0978		R:FXD FLM 95.3K OHM 1% 1/8W	2848C	0757-0978
A1R13	0757-0449	1	R:FXD FLM 20K OHM 1% 1/8W	2848C	0698-3271
A1R14	0757-0449		R:FXD FLM 20K OHM 1% 1/8W	2848C	0757-0449
A1R15	0684-2701		R:FXD COMP 27 OHM 10% 1/4W	01121	CB 2701
A1R16	0684-2711		R:FXD COMP 270 OHM 10% 1/4W	01121	CB 2711
A1R17	0757-0283		R:FXD MET FLM 2.00K OHM 1% 1/8W	2848C	0757-0283
A1R18	0757-0449	1	R:FXD FLM 20K OHM 1% 1/8W	2848C	0757-0449
A1R19	0698-3443		R:FXD MET FLM 287 OHM 1% 1/8W	2848C	0698-3443
A1R21	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	2848C	0757-0280
A1R22	0757-0288		R:FXD MET FLM 9.09K OHM 1% 1/8W	2848C	0757-0288
A1R23	0698-4428		R:FXD FLM 1.69K OHM 1% 1/8W	2848C	0698-4428
A1R24	2100-3207	1	R:VAR CERMET 5K OHM 10% LIN 1/2W	2848C	2100-3207
A1R25	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	2848C	0698-3445
A1R26	0698-3159		R:FXD MET FLM 26.1K OHM 1% 1/8W	2848C	0698-3159
A1R27	2100-3353		R:VAR CERMET 20K OHM 10% 1/2W	2848C	2100-3353
A1R28	1810-0171		RES. NETWORK 5 X 2.7K OHM	2848C	1810-0171
A1R29	0684-1031	5	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A1R31	1810-0151		RESISTIVE NETWORK	2848C	1810-0151
A1R32	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A1R33	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A1R34	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A1R35	0757-0449	2	R:FXD FLM 20K OHM 1% 1/8W	2848C	0757-0449
A1R36	0684-5631		R:FXD COMP 56K OHM 10% 1/4W	01121	CB 5631
A1R37	0698-3268		R:FXD MET FLM 10.0K OHM 1% 1/8W	2848C	0757-0442
A1R38	0757-0430		R:FXD MET FLM 2.21K OHM 1% 1/8W	2848C	0757-0430
A1R39	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	2848C	0757-0442
A1R41	0698-3558	1	R:FXD MET FLM 4.02K OHM 1% 1/8W	2848C	0698-3558
A1R42	0698-3268		R:FXD FLM 11.5K OHM 1% 1/8W	2848C	0698-3268
A1R43	0684-5631		R:FXD COMP 56K OHM 10% 1/4W	01121	CB 5631
A1R44	0698-3499		R:FXD FLM 40.2K OHM 1% 1/8W	2848C	0698-3499
A1R45	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A1R46	0684-3321	3	R:FXD COMP 3300 OHM 10% 1/4W	01121	CB 3321
A1R47	0684-3321		R:FXD COMP 3300 OHM 10% 1/4W	01121	CB 3321
A1R48	1810-0139		RES. NETWORK 4 X 22K OHM 5% 0.125W EA.	2848C	1810-0139
A1R49	1810-0172		RES. NETWORK	2848C	1810-0172
A1R51	0684-3321		R:FXD COMP 3300 OHM 10% 1/4W	01121	CB 3321
A1R52	0698-3153	4	R:FXD MET FLM 3.83 K OHM 1% 1/8W	2848C	0698-3153

See introduction to this section for ordering information

Δ_a Use for all replacement. Replace all components marked Δ_a if any one is replaced.

Rev. B 6-3

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1R53	0698-4431	2	R:FXD MET FLM 2.05 K OHM 1% 1/8W	28480	0698-4431
A1R54	1810-0173	1	RES. NETWORK	28480	1810-0173
A1R55	0684-3331		R:FXD COMP 33K OHM 10% 1/4W	01121	CB 3331
A1R56	1810-0139		RES. NETWORK 4 X 22K OHM 5% 0.125W EA.	28480	1810-0139
A1R57	1810-0139		RES. NETWORK 4 X 22K OHM 5% 0.125W EA.	28480	1810-0139
A1R58	1810-0139		RES. NETWORK 4 X 22K OHM 5% 0.125W EA.	28480	1810-0139
A1R59	0684-3311	4	R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A1R61	0684-3311		R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A1R62	0684-3311		R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A1R63	0684-3311		R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A1R64	0757-0429	1	R:FXD MET FLM 1.82K OHM 1% 1/8W	28480	0757-0429
A1R65	0757-0273		R:FXD MET FLM 3.01K OHM 1% 1/8W	28480	0757-0273
A1R66	0687-2701	1	R:FXD COMP 27 OHM 10% 1/2W	01121	CB 2701
A1R67	0683-0365	1	R:FXD COMP 3.6 OHM 5% 1/4W	01121	CB-3665
A1R68	0698-4441	1	R:FXD MET FLM 3.74K OHM 1% 1/8W	28480	0698-4441
A1R69	2100-2497	1	R:VAR FLM 2600 OHM 10% LIN 1/2W	28480	2100-2497
A1R71	0757-0290	1	R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A1R72	0812-0040	1	R:FXD WW 0.27 OHM 5% 1/2W	28480	0812-0040
A1R73	0683-1025	1	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025
A1R74	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A1R75	0698-4470	1	R:FXD FLM 6.98K OHM 1% 1/8W	28480	0698-4470
A1R76	0698-3279	1	R:FXD MET FLM 4990 OHM 1% 1/8W	28480	0698-3279
A1R77	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A1R78	0684-0271	1	R:FXD COMP 2.7 OHM 10% 1/4W	01121	CB 2761
A1R79	0687-1201	1	R:FXD COMP 12 OHM 10% 1/2W	01121	CB 12C1
A1R80	0683-1525		R:FXD 1.5K OHM 5% 1/4W	01121	CB1525
A1R81	2100-3274	2	R:VAR CER 10K OHM 10% LIN 1/2W	28480	2100-3274
A1R82	2100-3274		R:VAR CER 10K OHM 10% LIN 1/2W	28480	2100-3274
Δ _b A1R83, 84	0811-0639		R:FXD 51 OHM 5% 1/4W	75042	BW-20
Δ _b A1R85	0684-2721		R:FXD 2700 OHM 10% 1/4W	01121	CB2721
A1S1	3101-1723	1	SWITCH:PUSHBUTTON 4PDT SINGLE STA.	71590	A-3101-1723-1
A1U1	1820-0223	3	INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A1U2	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A1U3	1826-0009	1	IC:LINEAR OP. AMPL.	28480	1826-0009
A1U4	1820-0223		INTEGRATED CIRCUIT:OPERATIONAL AMPL.	28480	1820-0223
A1U5	1820-0321	1	INTEGRATED CIRCUIT:HI-SPEED COMPARATOR	01295	SN72 71CL
A1U6	1820-0586	1	IC:TTL LP HEX INVERTER	1204C	DM74L04N
A1U7	1820-0668	1	IC:TTL HEX DRIVER W/OPEN COLL(30V)	01295	SN74C7N
A1U8	1820-0583	4	IC:TTL LP QUAD 2-INPT NAND GATE	1204C	DM74L00N
A1U9	1820-0839	1	IC:TTL QUAD D-TYPE F/F	01295	SN74L75N
A1U11	1820-0596	2	IC:TTL LP DUAL EDGE TRIG. D F/F	1204C	DM74L74N
A1U12	1820-1150	1	IC:RESET COUNTER	28480	1820-1150
A1U13	1820-0584	1	IC:TTL LP QUAD 2-INPT NOR GATE	1204C	DM74L02N
A1U14	1820-0583		IC:TTL LP QUAD 2-INPT NAND GATE	1204C	DM74L00N
A1U15	1820-0598	1	IC:TTL LP QUAD 2-INPT EXCL. OR GATE	1204C	DM74L86N
A1U16	1820-0583		IC:TTL LP QUAD 2-INPT NAND GATE	1204C	DM74L00N
A1U17	1820-0587	1	IC:TTL LP TRIPLE 3-INPT NAND GATE	1204C	DM74L10N
A1U18	1820-0596		IC:TTL LP DUAL EDGE TRIG. D F/F	1204C	DM74L74N
A1U19	1820-0585	1	IC:TTL LP QUAD 2-INPT NAND GATE	1204C	DM74L03N
A1U21	1820-0798	1	IC:TTL SIX DECADE	28480	1820-0798
A1U22	1820-0196	2	IC:LINEAR VOLTAGE REGULATOR(INPUT)	28480	1820-0196
A1U23	1826-0043	1	IC:LINEAR OPERATIONAL AMPLIFIER	28480	1826-0043
A1U24	1820-0196		IC:LINEAR VOLTAGE REGULATOR(INPUT)	28480	1820-0196
A1U25	1813-0032	1	REFERENCE:HYBRID	28480	1813-0032
A1XA1	1251-2564	1	CONNECTOR:R & P, 50 CONTACT PLUG	7486E	57-10500-27
A1Y1	0410-0467	1	CRYSTAL (FOR 60 HZ OPERATION)	28480	0410-0467
A1Y1	0410-0490	1	CRYSTAL:QUARTZ (FOR 50 HZ OPERATION)	28480	0410-0490
A2	34750-66502	1	BOARD ASSY: HPA (PART OF A1 ASSY)	28480	34750-66502
A2C1	0180-1714	1	C:FXD ELECT 330 UF 10% 6VDCW	28480	0180-1714
A2C2	0160-0156	1	C:FXD MY 0.0039 UF 10% 200VDCW	56285	152P39292-PTS
A2Q1	1854-0215	11	TSTR:SI NPN	80131	2N3904
A2Q2	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q3	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q4	1854-0215		TSTR:SI NPN	80131	2N3904

See introduction to this section for ordering information

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2Q5	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q6	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q7	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q8	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q9	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q11	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q12	1854-0215		TSTR:SI NPN	80131	2N3904
A2Q13	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A2R1	0684-4721	1	R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A2R2	0684-8201	2	R:FXD COMP 82 OHM 10% 1/4W	01121	CB 8201
A2R3	0684-8201		R:FXD COMP 82 OHM 10% 1/4W	01121	CB 8201
A2U1 †	1820-0635	1	IC:DIGITAL	28480	1820-0635
A2U2 †	1990-0413	1	NUMERIC DISPLAY:LED	28480	1990-0413
A2U3	1990-0405	1	NUMERIC DISPLAY:LED(PLUS-MINUS)	28480	1990-0405
A2U4	1820-0583		IC:TTL LP QUAD 2-INPT NAND GATE	1204C	DM74LCON
A2U5 †	1820-0571	1	IC:TTL NUMERIC DISPLAY CHARACTER GEN.	28480	1820-0571
CHASSIS MOUNTED COMPONENTS					
F1	2110-0012	1	FUSE:0.5 AMP 250V	75915	312-500
F1	2110-0004	1	FUSE:CARTRIDGE 1/4 AMP 250V	75915	3AG/CAT. 312.250
XA2	1251-0291	1	CONNECTOR:14 PIN	02660	57-10140
PM1	34750-28801	1	POWER MODULE	28480	34750-28801
Q1	1854-0245	1	TRANSISTOR:SI NPN	80131	2N3771
T1	9100-3293	1	TRANSFORMER:POWER	28480	9100-3293
W1	8120-1348	1	CABLE ASSY:POWER, DETACHABLE	70903	KHS-7041
MISCELLANEOUS					
	05300-20010	1	CASE	28480	05300-20010
	34750-00601	1	SHIELD:POWER INPUT PROTECTION	28480	34750-00601
	34750-61601	1	CABLE(FROM XA2 TO MOTHER BOARD)	28480	34750-61601
	4040-0920	1	PANEL:FRONT	28480	4040-0920
	7120-3265	1	NAMEPLATE	28480	7120-3265
	7120-3534	1	DECAL	28480	7120-3534
	7122-0058	1	PLATE:SERIAL	28480	7122-0058
	7124-2308	1	LABEL:INFORMATION	28480	7124-2308
	0370-2159	1	KNOB: PUSHBUTTON	28480	0370-2159
	1600-0421	1	SHIELD: ANALOG (L - SHAPED)	28480	1600-0421
	0340-0787	1	INSULATOR: POWER SWITCH	28480	0340-0787
	1200-0423	1	SOCKET: IC BLK 16 CONTACT	23880	CSA2900 - 168
	1205-0002	2	HEAT SINK: TRANSISTOR	07387	3AL-635-2R
	34750-60601	1	SHIELD ASSY: TRANSFORMER	28480	34750-60601
	34750-61602	1	CABLE: INPUT	28480	34750-61602
	1200-0462	48	SOCKET: IC CONTACT (FOR DISPLAY)	00779	3-116141-2
	9170-0894		BEAD: SHIELDING (USED ON A2 ASSEMBLY)	28480	9170-0894
	0340-0782	1	INSULATOR:TRANSISTOR) FOR Q1	28480	0340-0782
	0340-0783	2	INSULATOR:SPRING	28480	0340-0783
	5040-7001	1	SLIDE LOCK, BLACK, RIGHT	28480	5040-7001
	5040-6000	1	SLIDE LOCK, BLACK, LEFT	28480	5040-6000

See introduction to this section for ordering information

Δ Use for all replacement.

SECTION VII

CIRCUIT DIAGRAMS TROUBLESHOOTING

7-1. INTRODUCTION.

7-2. This section of the Operating and Service Manual contains troubleshooting information and circuit diagrams for the Model 34750A Display Module. Included are troubleshooting trees, a functional block diagram, schematic and component location diagrams and timing diagrams.

7-3. TROUBLESHOOTING.

7-4. Troubleshooting Trees.

7-5. Figures 7-1 through 7-3 are troubleshooting trees designed to assist in the isolation of malfunctions. Table 7-1 lists the troubleshooting trees and their respective figure numbers.

Table 7-1. Troubleshooting Trees.

Figure	Troubleshooting Tree
7-1	Power Supply Troubleshooting Tree
7-2	Analog Troubleshooting Tree
7-3	Digital Troubleshooting Tree

7-6. Troubleshooting Procedures.

7-7. The following procedure is recommended for troubleshooting the Model 34750A.

a. Ensure the signal conditioning plug-on is functioning properly. Normally, if the Model 34750A passes the operational checks given in Paragraph 5-3, the Display Module is functioning properly and the signal conditioning module is malfunctioning. If you have checked the signal conditioning module and found it to be good proceed to step b.

b. Determine the exact symptoms of the failure. This can usually be accomplished by attempting the performance tests for the instrument. These procedures are found in the Operating and Service Manual for the signal conditioning plug-on module. Often this method will isolate the trouble to a particular circuit which affects the parameter under test.

c. Once the problem has been characterized, assuming the instrument is not completely dead, attempt the Adjustment Procedures outlined in Section V. Some apparent malfunctions can be corrected by these

adjustments. Inability to obtain a correct adjustment can also help in localizing the problem.

d. Check for burned or loose components, or other conditions which might be the source of trouble.

e. Begin with the Power Supply Troubleshooting Tree (No. 1). If the power supplies are functioning properly the tree will quickly lead to the troubleshooting tree for either the analog or the digital portion of the instrument.

f. If the end of a tree is reached without finding the trouble, carefully recheck the symptoms to ensure you have interpreted them properly. Using the schematics, voltages and timing waveforms in Section VII (Figures 7-5 through 7-8) attempt to localize the malfunction. The problem can usually be isolated to the analog or digital section by connecting the test jumper shown in Figure 5-4 to "B". A +1.00000 should be displayed. If it is not, the digital section is malfunctioning.

7-8. FUNCTIONAL BLOCK DIAGRAM (Figure 7-4).

7-9. The Functional Block Diagram is a detailed block diagram showing the overall relationship between circuit elements of the Model 34750A. The diagram shows all adjustments within the Model 34750A and provides waveforms that should be helpful in troubleshooting.

7-10. TIMING DIAGRAM (Figure 7-5).

7-11. Figure 7-5 shows the timing relationships between the major signals generated within the Model 34750A. Each signal has been assigned a number within a circle, e.g. ③, which corresponds to an identical number on one of the schematic diagrams. Illustrations of the 34750-66501 and 34750-66502 printed circuit assemblies, showing the physical location of each signal is also provided.

7-12. SCHEMATIC DIAGRAMS (Figures 7-6, 7-7 and 7-8).

7-13. The circuits contained within the Model 34750A are shown in the schematic diagrams. These diagrams are provided to assist in troubleshooting the instrument.

7-14. COMPONENT LOCATION DIAGRAMS.

7-15. Component Location Diagrams are provided with each schematic to show the location of the various components mounted on the printed circuit assemblies. Each component is identified by a reference designator.

GENERAL SCHEMATIC NOTES

1. PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. PREFIX WITH ASSEMBLY OR SUB-ASSEMBLY DESIGNATION(S) OR BOTH FOR COMPLETE DESIGNATION.
2. COMPONENT VALUES ARE SHOWN AS FOLLOWS UNLESS OTHERWISE NOTED.


RESISTANCE IN OHMS
CAPACITANCE IN MICROFARADS
INDUCTANCE IN MILLIHENRIES

3.  DENOTES EARTH GROUND. USED FOR TERMINALS WITH NO LESS THAN A NO. 18 GAUGE WIRE CONNECTED BETWEEN TERMINAL AND EARTH GROUND TERMINAL OR AC POWER RECEPTACLE.
4.  DENOTES FRAME GROUND. USED FOR TERMINALS WHICH ARE PERMANENTLY CONNECTED WITHIN APPROXIMATELY 0.1 OHM OF EARTH GROUND.
5.  DENOTES GROUND ON PRINTED CIRCUIT ASSEMBLY. (PERMANENTLY CONNECTED TO FRAME GROUND).
6.  ANY LETTER OR NUMBER IN TRIANGLE DENOTES A SPECIAL GROUND.
7.  DENOTES ASSEMBLY.
8.  DENOTES MAIN SIGNAL PATH.
9.  DENOTES FEEDBACK PATH.
10.  DENOTES FRONT PANEL MARKING.
11.  DENOTES REAR PANEL MARKING.
12.  DENOTES SCREWDRIVER ADJUST.
13. * AVERAGE VALUE SHOWN. OPTIMUM VALUE SELECTED AT FACTORY. THE VALUE OF THESE COMPONENTS MAY VARY FROM ONE INSTRUMENT TO ANOTHER.
14.  DENOTES SECOND APPEARANCE OF A CONNECTOR PIN.
15.  DENOTES WIRE COLOR: COLOR CODE SAME AS RESISTOR COLOR CODE. FIRST NUMBER IDENTIFIES BASE COLOR, SECOND NUMBER IDENTIFIES STRIP.

16. ALL RELAYS ARE SHOWN DEENERGIZED.

17. WAVEFORMS AND AC VOLTAGE MEASUREMENTS WERE MADE WITH RESPECT TO CHASSIS GROUND USING AN OSCILLOSCOPE WITH A 10:1 DIVIDER PROBE (10 MEGOHM, 10 pF). THE VOLTAGE LEVELS SHOWN ON THE WAVEFORMS ARE ACTUAL VOLTAGE LEVELS AND ARE NOT TO BE CONFUSED WITH OSCILLOSCOPE SETTING. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER. A VARIATION OF $\pm 10\%$ IN MEASUREMENTS SHOULD BE ALLOWED.


18. DC VOLTAGE LEVELS WERE MEASURED WITH RESPECT TO CIRCUIT GROUND USING A VTVM WITH 10 MEGOHM INPUT IMPEDANCE. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER DUE TO CHANGE IN TRANSISTOR CHARACTERISTICS. A VARIATION OF $\pm 10\%$ SHOULD BE ALLOWED.

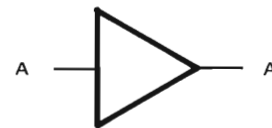

DENOTES BUFFER




DENOTES INVERTER



DENOTES AND GATE

A	B	Q
1	1	1
1	0	0
0	1	0
0	0	0



DENOTES NAND GATE

A	B	Q
1	1	0
1	0	1
0	1	1
0	0	1



DENOTES NOR GATE

A	B	Q
1	1	0
1	0	0
0	1	0
0	0	1



DENOTES "EXCLUSIVE" OR GATE

A	B	Q
1	1	0
1	0	1
0	1	1
0	0	0

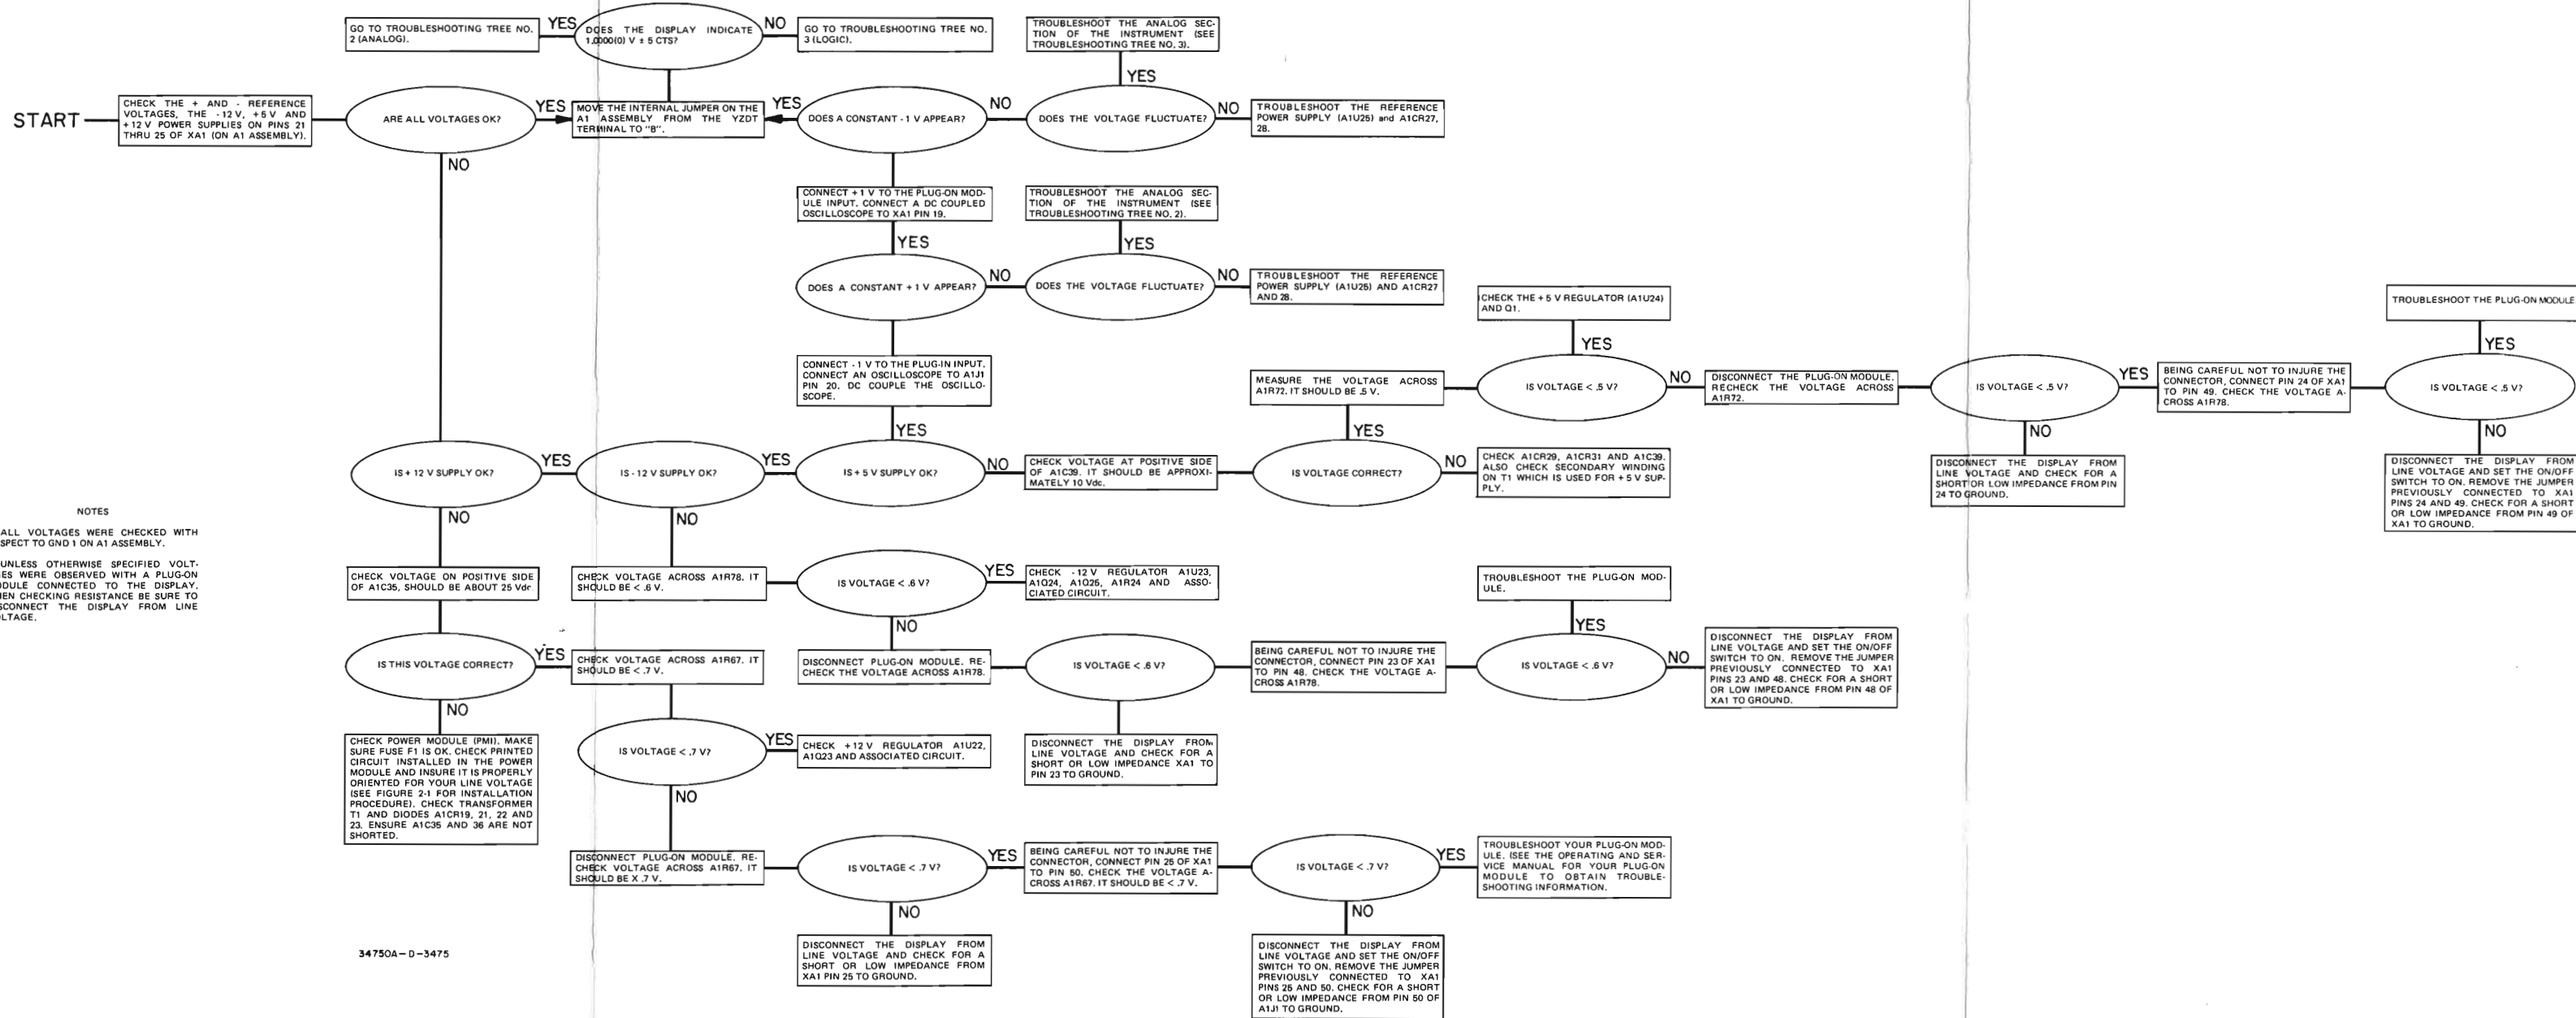


Figure 7-1. Power Supply Troubleshooting Tree.
7-3/7-4


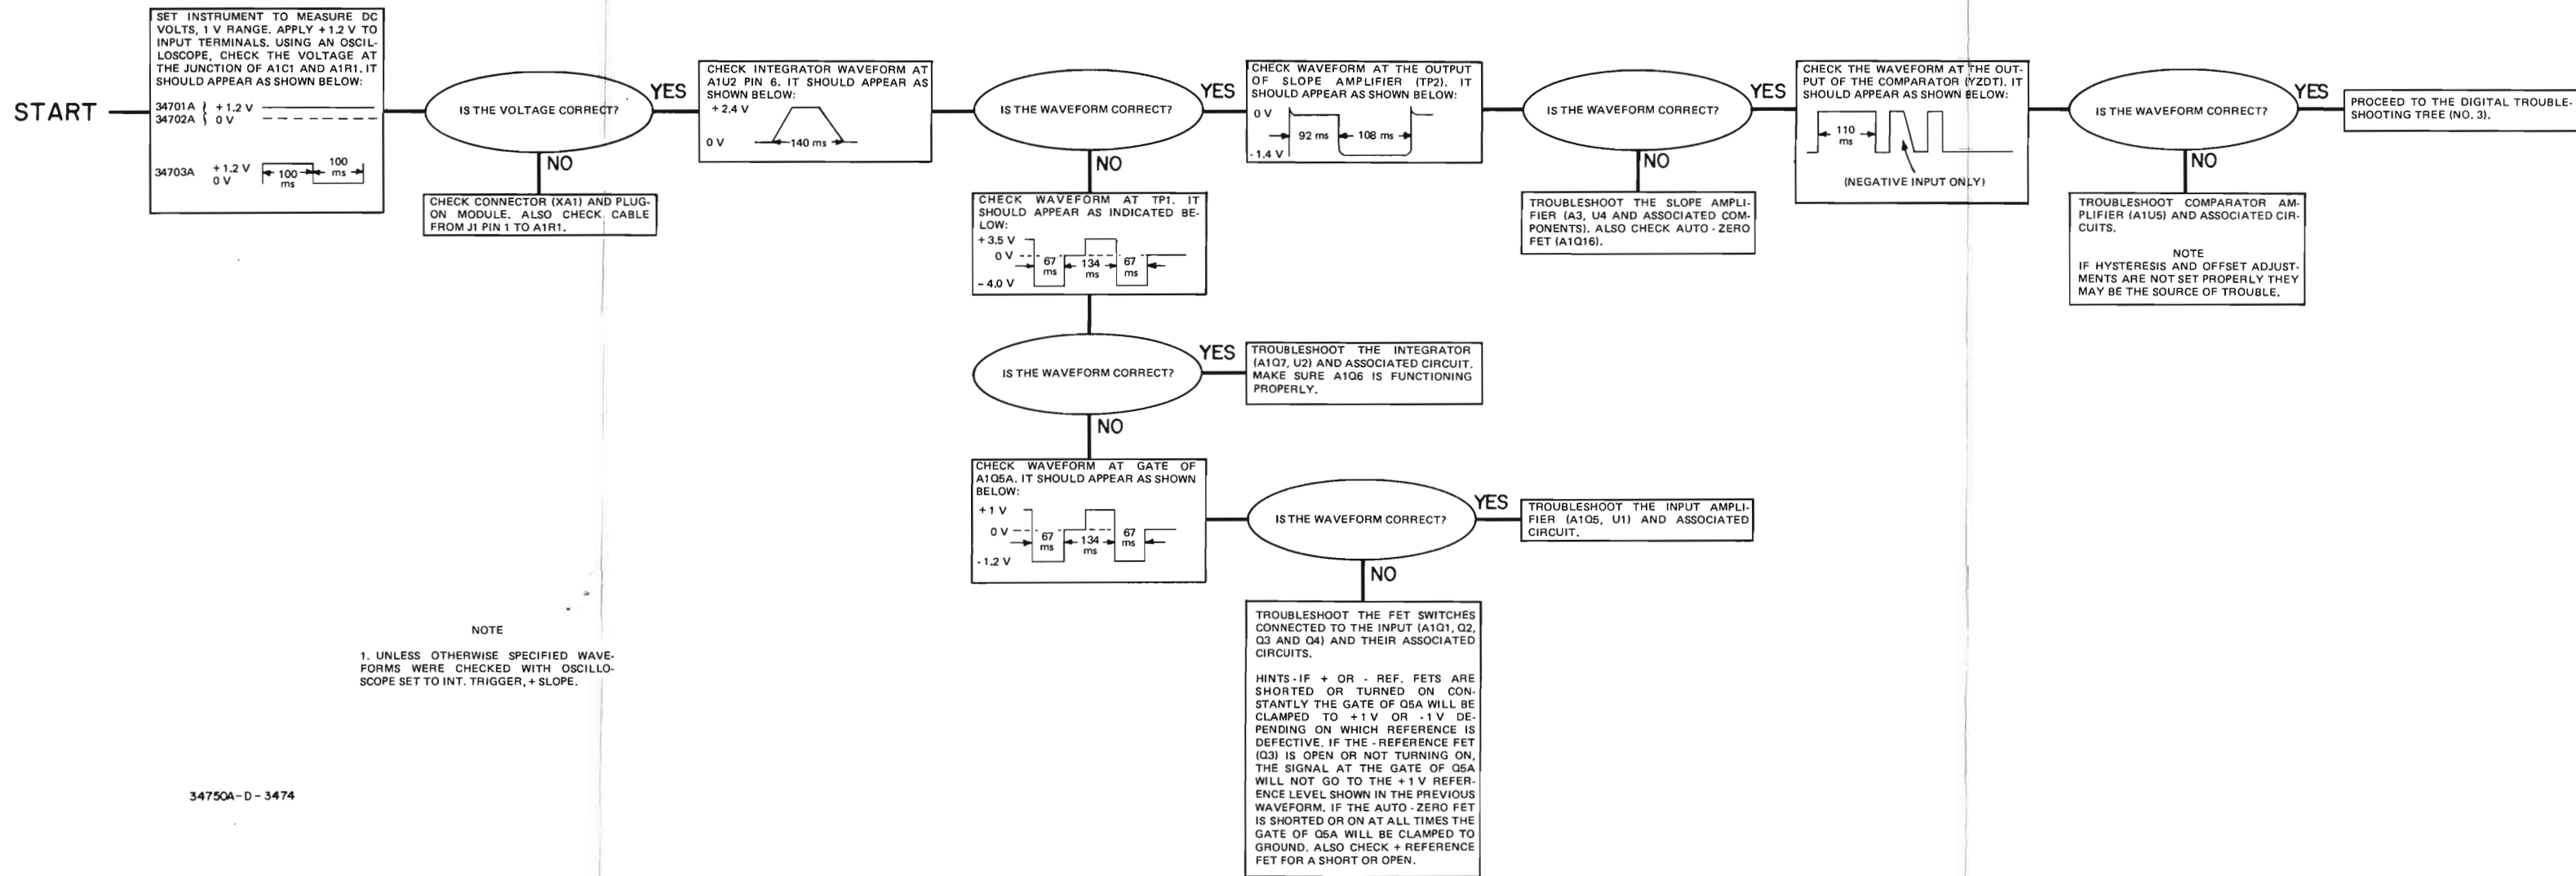



Figure 7-2. Analog Troubleshooting Tree.
7-5

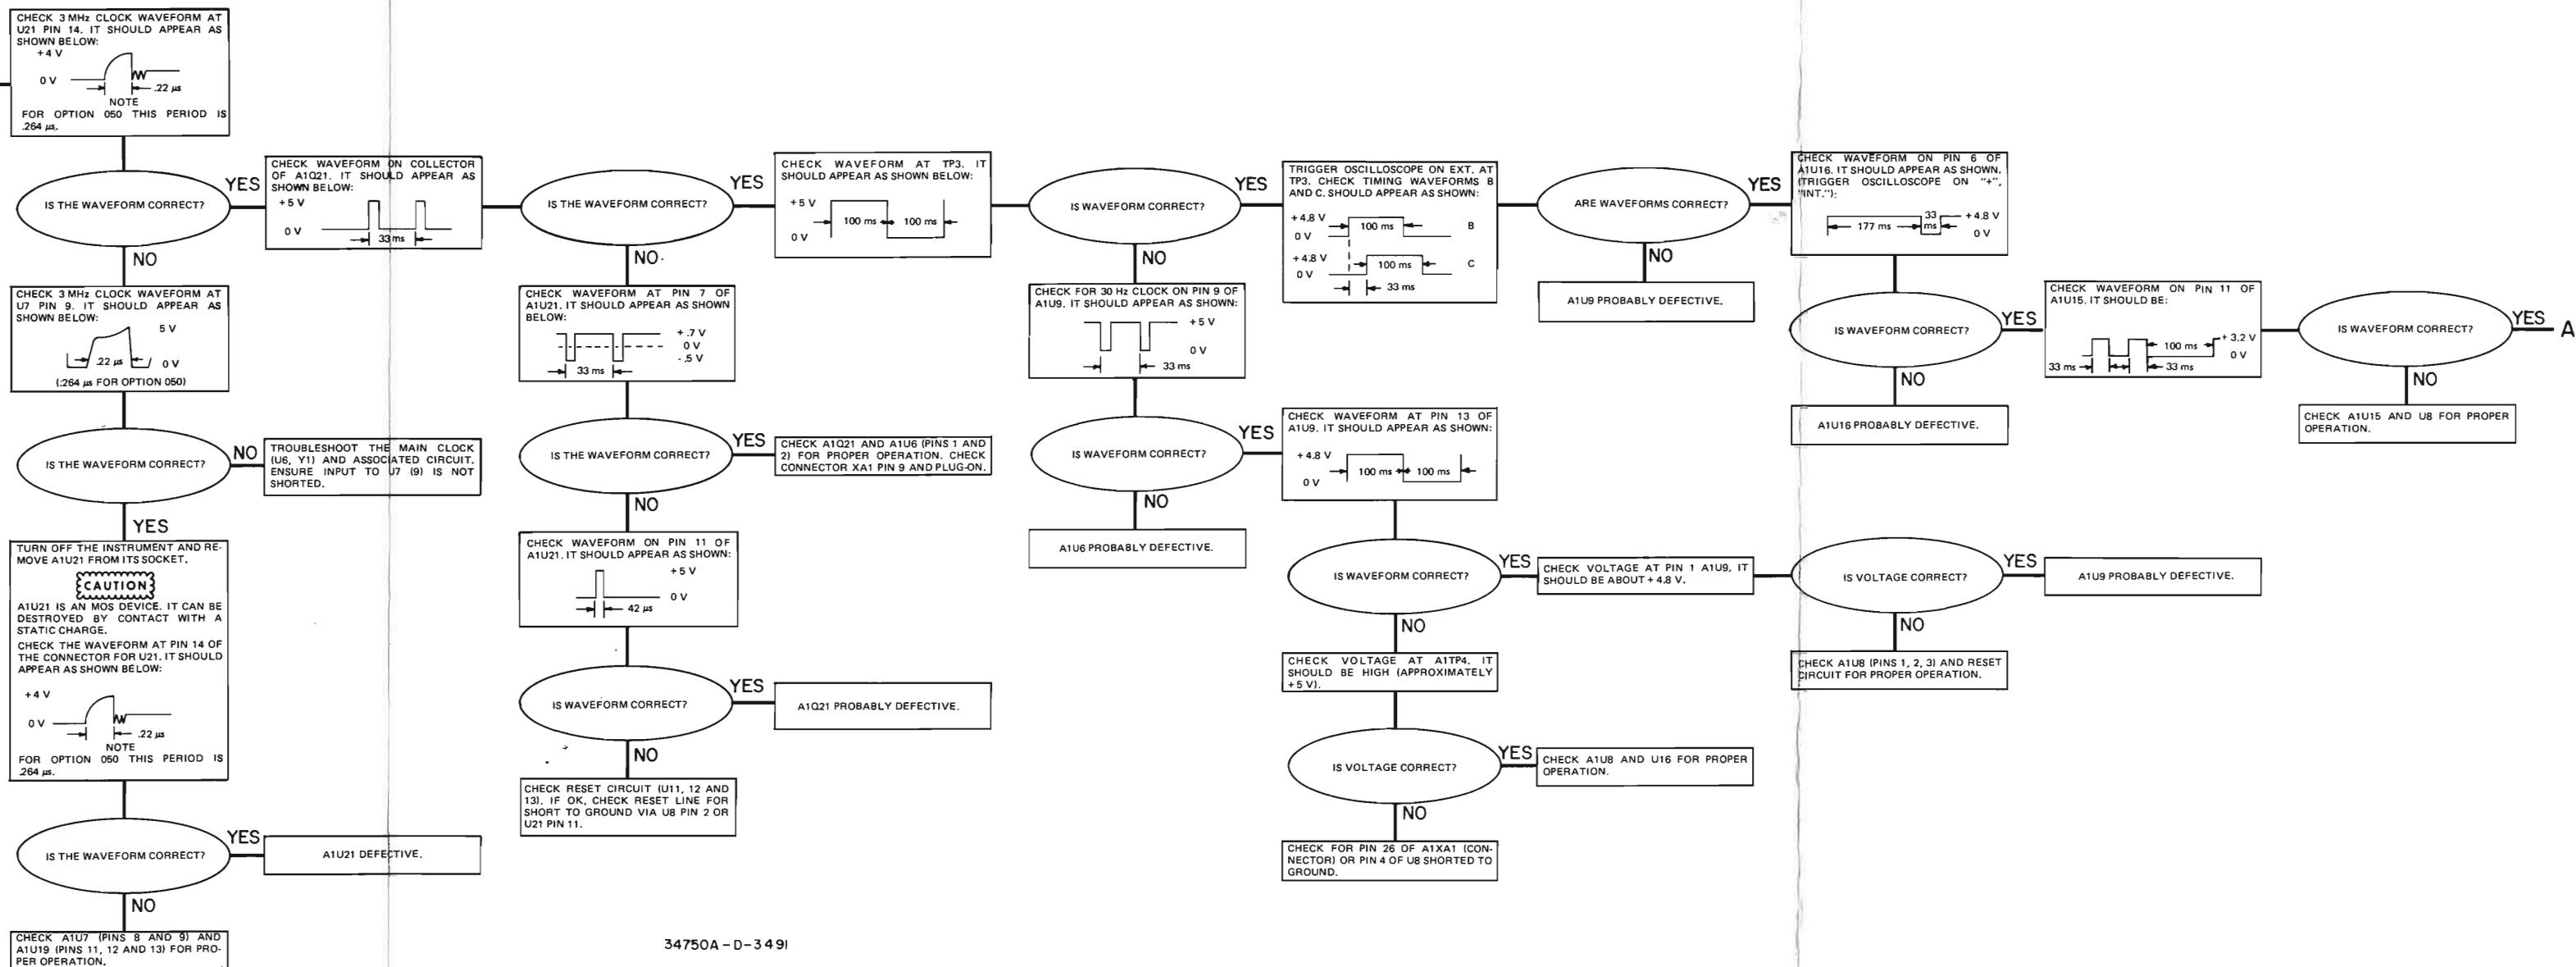

34750A - D-3491

START

CHECK 3 MHz CLOCK WAVEFORM AT U21 PIN 14. IT SHOULD APPEAR AS SHOWN BELOW:
+4 V



NOTE
FOR OPTION 050 THIS PERIOD IS .264 μs.

IS THE WAVEFORM CORRECT?

YES

NO

CHECK 3 MHz CLOCK WAVEFORM AT U7 PIN 9. IT SHOULD APPEAR AS SHOWN BELOW:



(.264 μs FOR OPTION 050)

IS THE WAVEFORM CORRECT?

YES

NO

CHECK WAVEFORM ON COLLECTOR OF A1Q21. IT SHOULD APPEAR AS SHOWN BELOW:
+5 V



0 V

IS THE WAVEFORM CORRECT?

YES

NO

CHECK WAVEFORM AT TP3. IT SHOULD APPEAR AS SHOWN BELOW:
+5 V



0 V

IS WAVEFORM CORRECT?

YES

NO

CHECK FOR 30 Hz CLOCK ON PIN 9 OF A1U9. IT SHOULD APPEAR AS SHOWN:



+5 V

0 V

IS WAVEFORM CORRECT?

YES

NO

A1U6 PROBABLY DEFECTIVE.

TURN OFF THE INSTRUMENT AND REMOVE A1U21 FROM ITS SOCKET.

CAUTION

A1U21 IS AN MOS DEVICE. IT CAN BE DESTROYED BY CONTACT WITH A STATIC CHARGE.

CHECK THE WAVEFORM AT PIN 14 OF THE CONNECTOR FOR U21. IT SHOULD APPEAR AS SHOWN BELOW:



NOTE
FOR OPTION 050 THIS PERIOD IS .264 μs.

IS THE WAVEFORM CORRECT?

YES


NO

TROUBLESHOOT THE MAIN CLOCK (U6, Y1) AND ASSOCIATED CIRCUIT. ENSURE INPUT TO U7 (9) IS NOT SHORTED.

A1U21 DEFECTIVE.

CHECK A1U7 (PINS 8 AND 9) AND A1U19 (PINS 11, 12 AND 13) FOR PROPER OPERATION.

CHECK WAVEFORM AT PIN 7 OF A1U21. IT SHOULD APPEAR AS SHOWN BELOW:



+ .7 V

0 V

.5 V

IS THE WAVEFORM CORRECT?

YES

NO

CHECK A1Q21 AND A1U6 (PINS 1 AND 2) FOR PROPER OPERATION. CHECK CONNECTOR XA1 PIN 9 AND PLUG-ON.

CHECK WAVEFORM ON PIN 11 OF A1U21. IT SHOULD APPEAR AS SHOWN:



+5 V

0 V

IS WAVEFORM CORRECT?

YES


NO

A1Q21 PROBABLY DEFECTIVE.

CHECK RESET CIRCUIT (U11, 12 AND 13). IF OK, CHECK RESET LINE FOR SHORT TO GROUND VIA U8 PIN 2 OR U21 PIN 11.

A

CHECK WAVEFORM ON PIN 12 OF A1U17. IT SHOULD APPEAR AS SHOWN:



IS WAVEFORM CORRECT?

YES

CHECK A1U17 PIN 6 FOR CONSTANT HIGH (+4.8 V).


NO

CHECK VOLTAGE ON PIN 5 OF A1U18. IT SHOULD BE $\approx +4.8$ V.

IS VOLTAGE CORRECT?

YES

CHECK WAVEFORM ON PIN 13 OF A1U17. IT SHOULD APPEAR AS SHOWN:



NO

A1U18 PROBABLY DEFECTIVE.


IS WAVEFORM CORRECT?

YES

A1U17 PROBABLY DEFECTIVE.

NO

CHECK WAVEFORM ON PIN 11 OF A1U16. IT SHOULD APPEAR AS SHOWN:



IS WAVEFORM CORRECT?


YES

TROUBLESHOOT ZERO DETECT CATCHER (A1U16 PINS 8, 9, 10 AND A1U17 PINS 8, 9, 10, AND 11).

NO

CHECK A1U15 (PINS 1, 2, 3) AND A1U16 (PINS 11, 12, 13) FOR PROPER OPERATION.

CHECK WAVEFORMS X, Y AND Z ON PINS 10, 9 AND 8 OF A1U21. EXTERNALLY TRIGGER OSCILLOSCOPE ON SIGNAL Z. WAVEFORMS SHOULD APPEAR AS SHOWN:

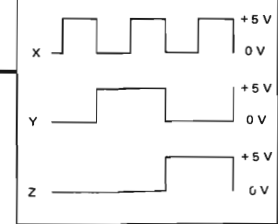

ARE WAVEFORMS CORRECT?

YES

RETURN JUMPER TO YZDT APPLY .87 VOLTS TO THE 34750A INPUT. CHECK VOLTAGE AT PINS 1, 2, 15 AND 16 OF A1U21 WITH AN OSCILLOSCOPE. THE VOLTAGE AT EACH PIN SHOULD BE SWITCHING BETWEEN ≈ 0 V AND +4.8 V.

NO

A2U1 IS PROBABLY DEFECTIVE.


ARE VOLTAGES SWITCHING AS INDICATED?

YES

NO

A1U21 PROBABLY DEFECTIVE.

CHECK WAVEFORM ON A1XA1 PIN 46. IT SHOULD BE:



IS WAVEFORM CORRECT?

YES

NO

ENSURE SCANNER CLOCK IS NOT SHORTED TO GROUND BY THE PLUG. ON, CHECK A2U1 (SCANNER) AND A2C2.

OBSERVE DISPLAY. CHECK TO SEE IF A HORIZONTAL ROW OF LED'S IS NOT ILLUMINATING. e.g. MIDDLE ROW NOT ILLUMINATING.

DO ALL HORIZONTAL ROWS ILLUMINATE?

YES

NO

PROBABLE CAUSE IS EITHER DISPLAY IC (A2U3) OR A2U5.

OBSERVE DISPLAY. CHECK TO SEE IF VERTICAL 1/2 OF ANY DIGIT IS MISSING. e.g. RIGHT HALF NOT ILLUMINATED.

YES

NO


PROBABLE CAUSE IS A2U1 OR TRANSISTORS (Q2-12) WHICH SELECT MISSING 1/2 DIGIT. e.g. A2Q9 SELECTS RIGHT HALF OF 10'S DIGIT.

YES

NO


APPLY +1.2 V TO 34750A INPUT AND OBSERVE DISPLAY. THE OVERRANGE "1" SHOULD ILLUMINATE. TROUBLESHOOT A2U5 AND BCD1 GATE OF A1U4.

YES

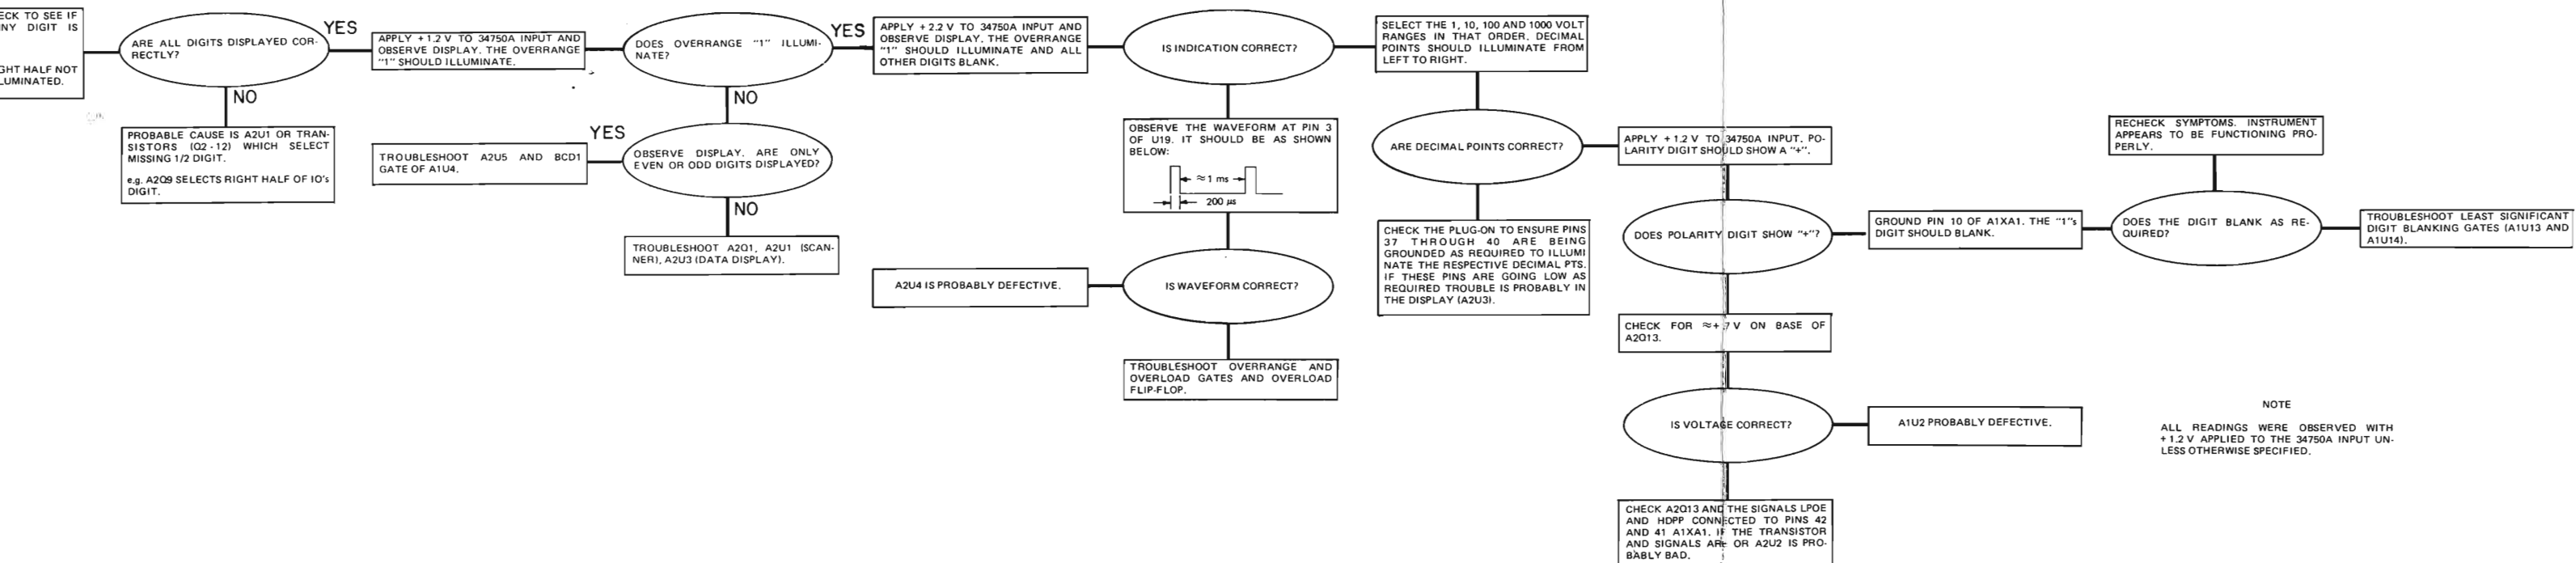

p/o Figure 7-3. Digital Troubleshooting Tree.
7-7/7-8

AI

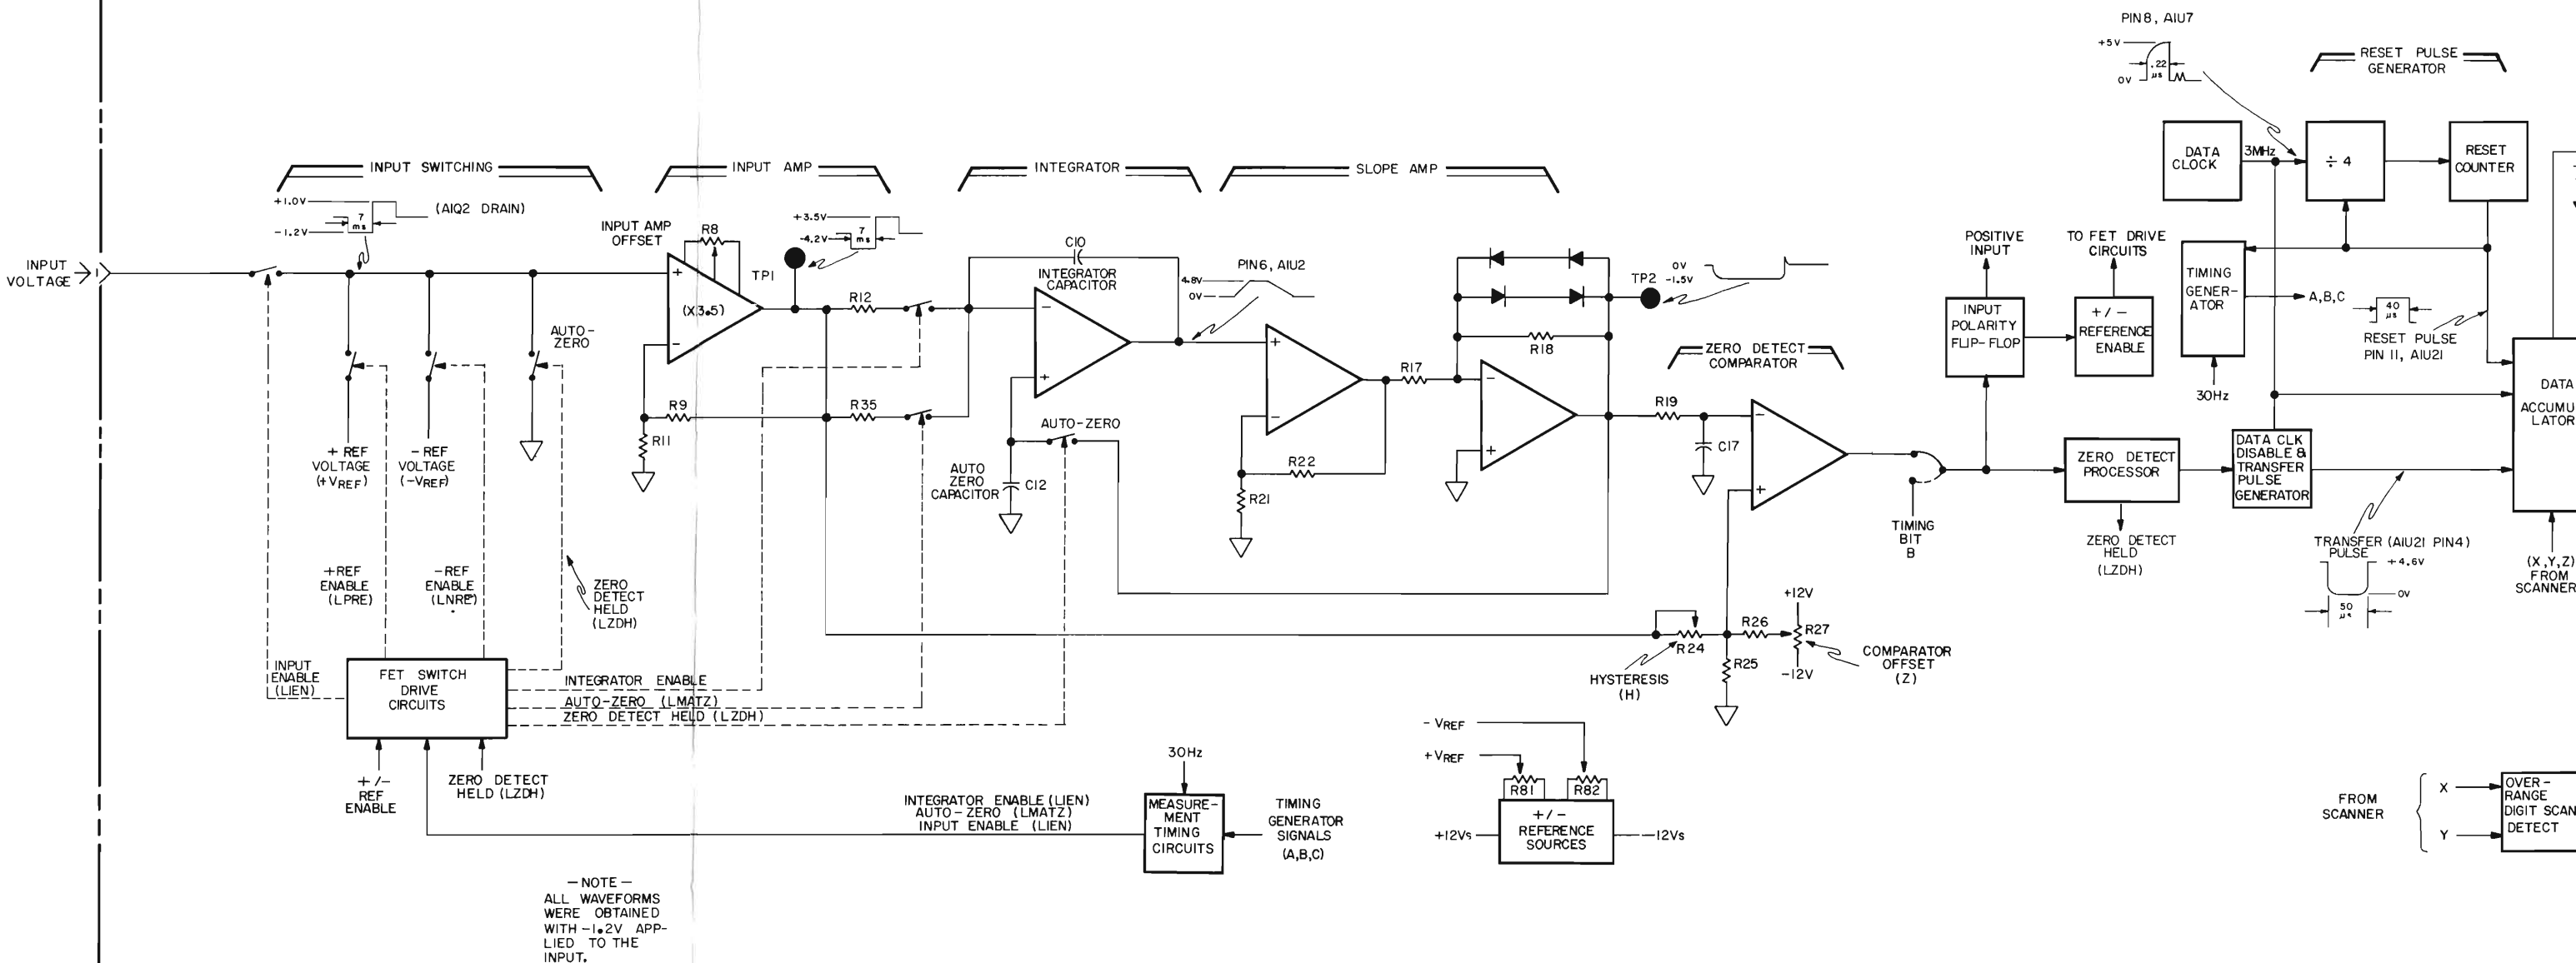

COPYRIGHT 1973 BY HEWLETT-PACKARD COMPANY

34750A


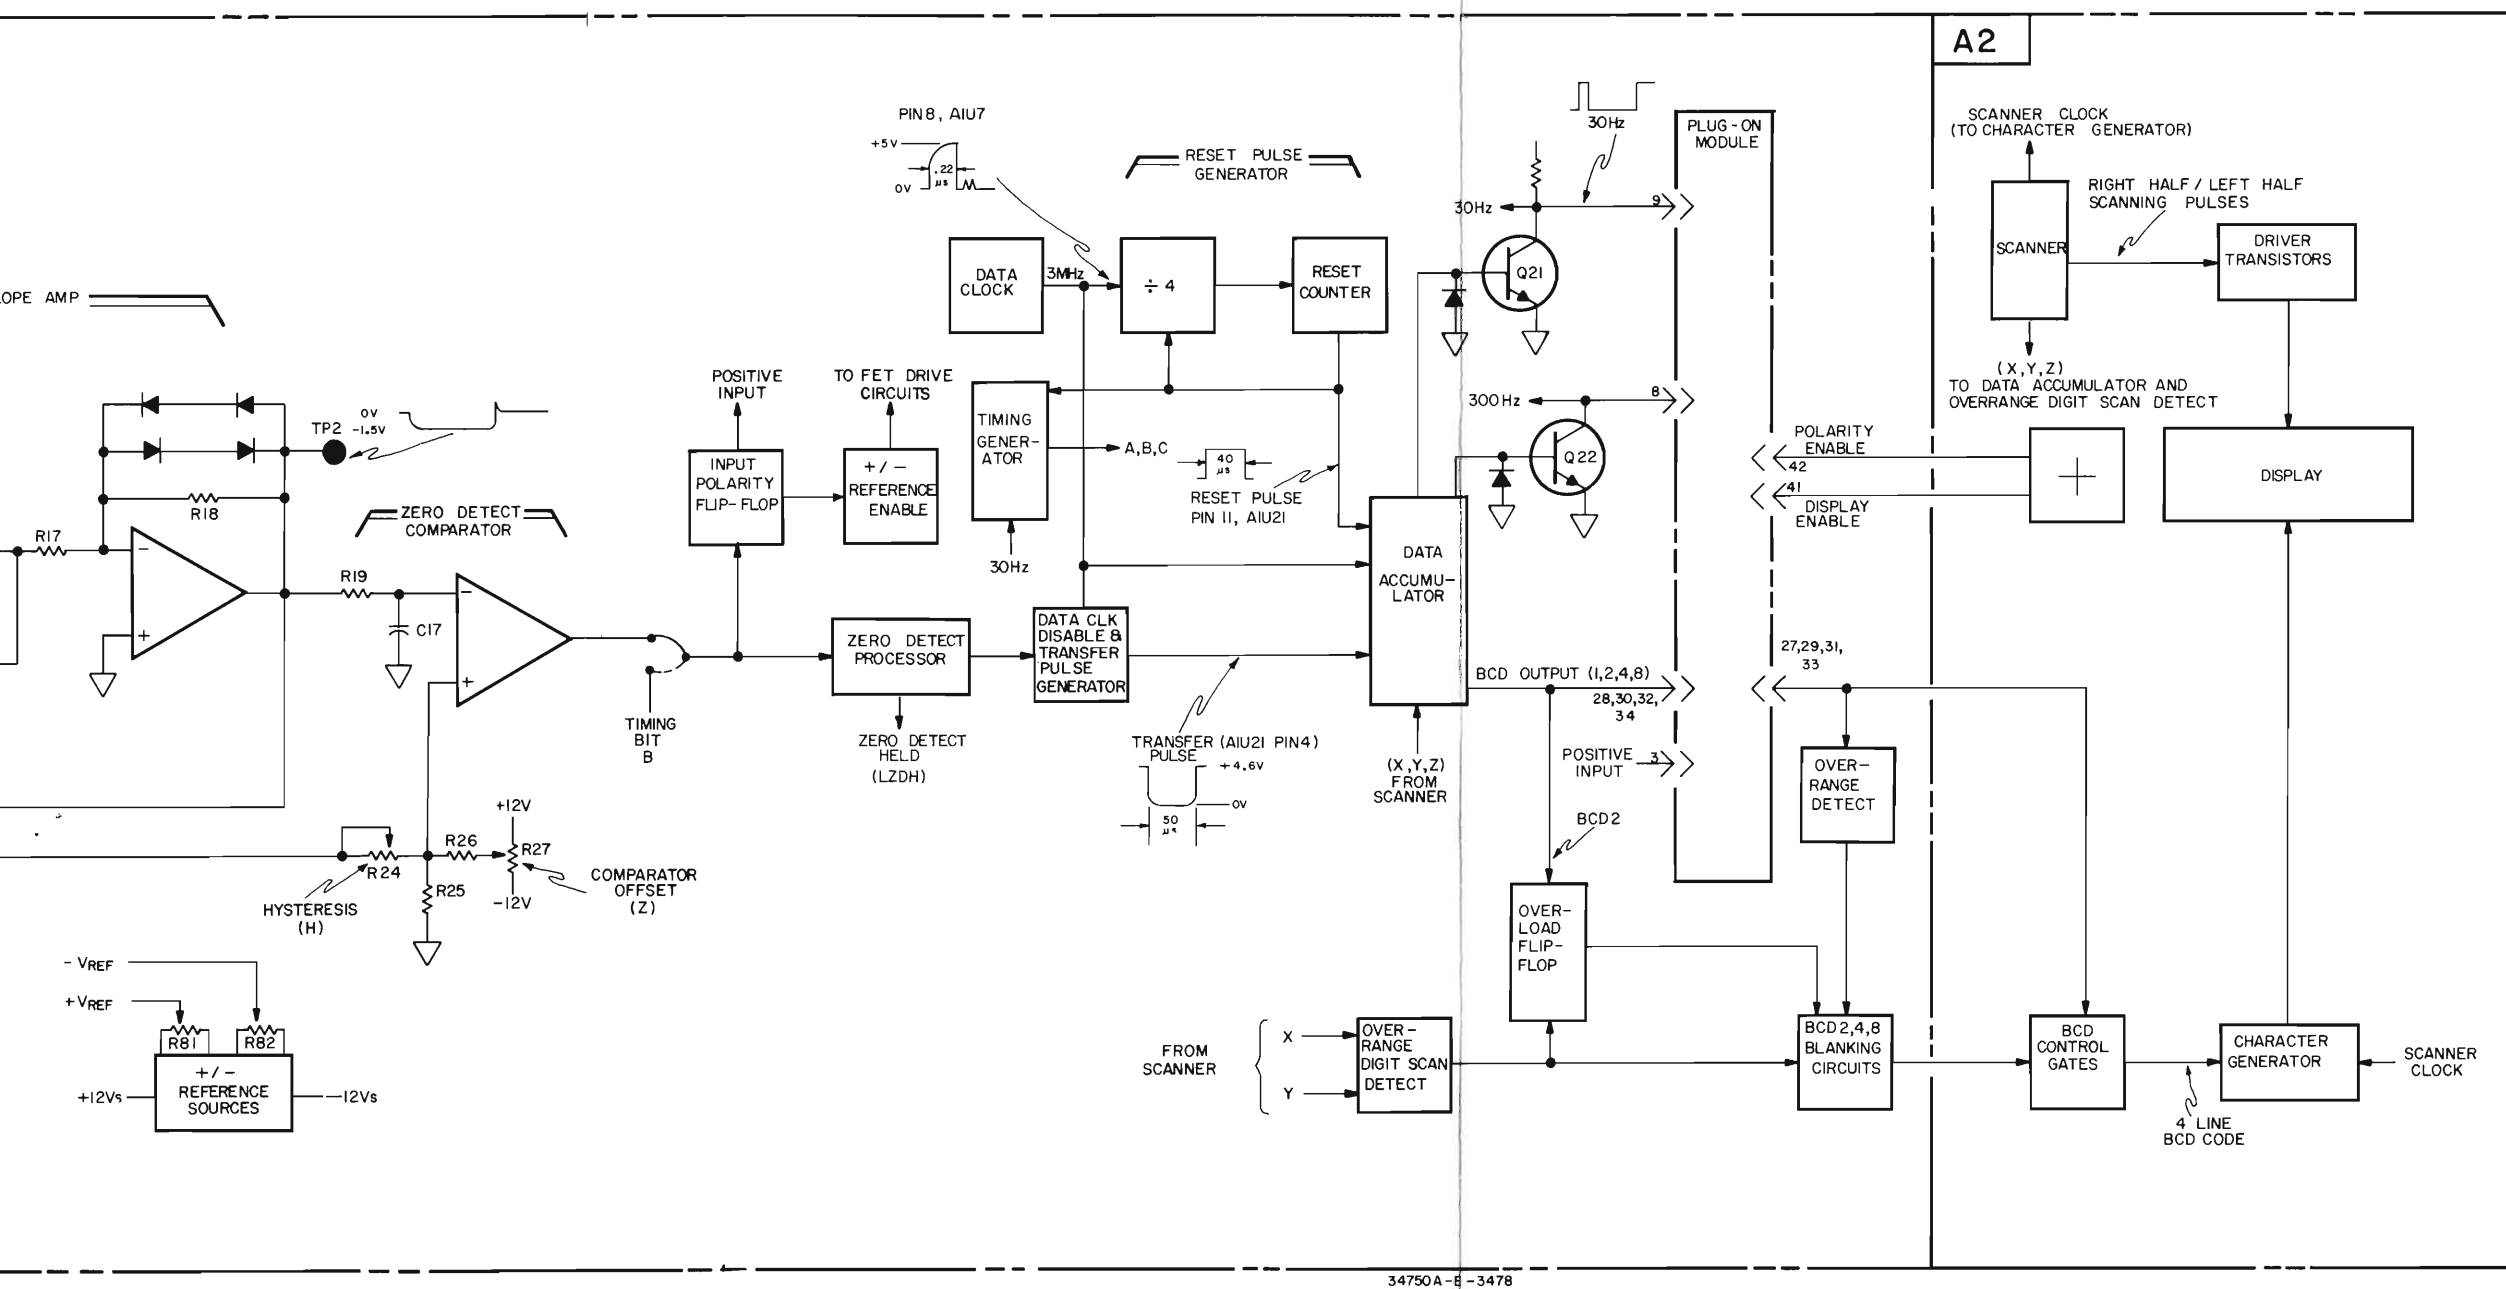


Figure 7-4. Functional Block Diagram.
7-9/7-10

34750A TIMING & DATA WAVEFORMS

Using a two channel oscilloscope (-hp- Model 180A/1801A/1821A) or equivalent, connect signal A to Channel B input, set oscilloscope to "CHOP", trigger on Channel B. Use Channel A to check the various test points. Use 20ms/cm time base.

All measurements were taken with -1.2V applied to the 34750A input.

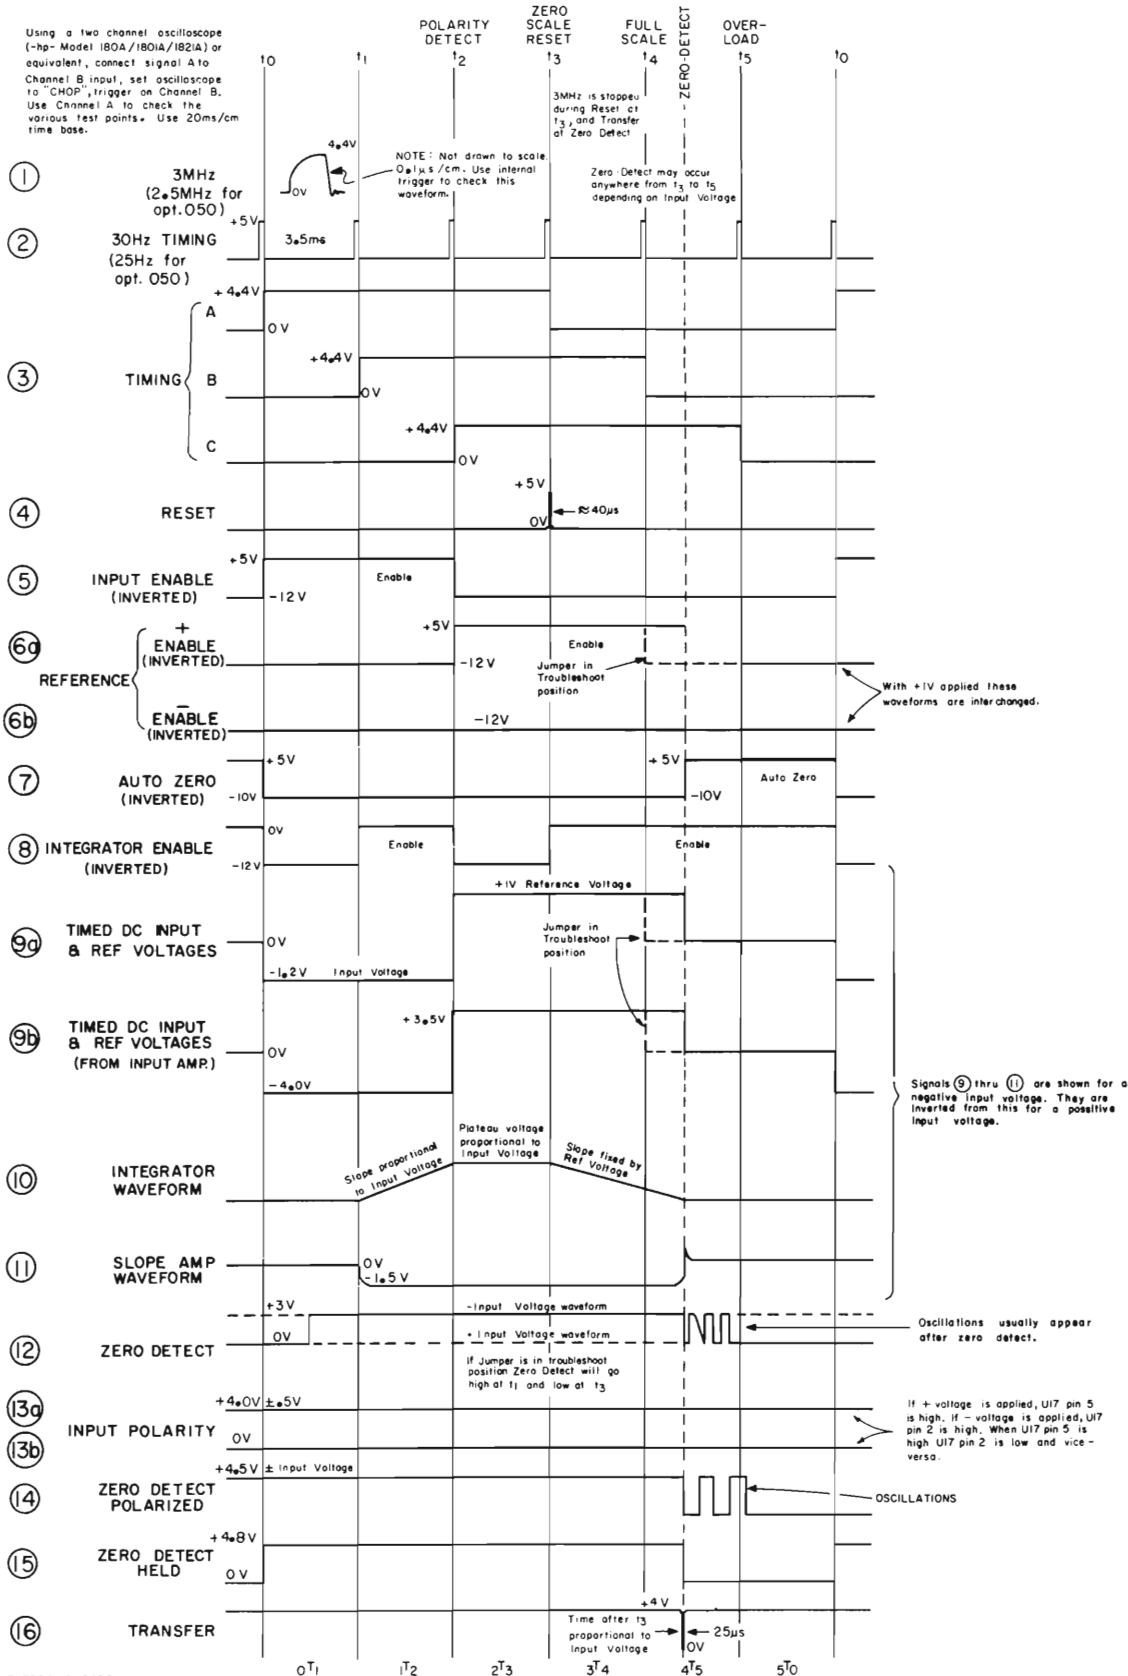

34750A SCANNING SYSTEM

Externally trigger oscilloscope on signal Z negative slope, select 40ms/cm time base and adjust sweep vernier so that alternations of signal X fall on graticule lines.

DISPLAY DIGITS

Middle gradiculate on oscilloscope

DATA MULTIPLEX DRIVE

	1'S	10'S	100'S	1000'S	10,000'S	100,000'S	
X		1	0	1	0	1	+4.5V
Y		0	1	1	0	0	0V
Z		0	0	0	1	1	+4.5V

3KHz

Levels in this interval randomly change.

SCANNED DATA

BCD(1)	1	1				1	+4.5V
BCD(2)			2				0V
BCD(4)		4	4				+4.5V
BCD(8)					8		0V
	4	5	7	0	8	1	+4.5V

1'S THRU 1000'S DIGITS BEING SCANNED

DISPLAY BLANK

<100% OF RANGE

≥100% & <200% OF RANGE

≥200% OF RANGE

RIGHT/LEFT HALF CHARACTER GENERATE (SCANNER CLOCK)


DISPLAY SCAN

RIGHT HALF 1'S SCAN							+4.5V
LEFT HALF 1'S SCAN							0V
RIGHT HALF 10'S SCAN							+3V
LEFT HALF 10'S SCAN							0V
RIGHT HALF 100'S SCAN							+3V
LEFT HALF 100'S SCAN							0V
RIGHT HALF 1000'S SCAN							+3V
LEFT HALF 1000'S SCAN							0V
RIGHT HALF 10,000'S SCAN							+3V
LEFT HALF 10,000'S SCAN							0V
RIGHT HALF 100,000'S SCAN							+3V
LEFT HALF 100,000'S SCAN							0V


12KHz

34750 MNEMONIC DICTIONARY


LHLD	(Low HoLD) - When low, this signal inhibits the instrument from taking additional readings.
LMATZ	(Low Mainframe Auto - Zero) - This signal goes low during mainframe auto - zero period.
LZDH	(Low Zero Detect Hold) - This signal goes low at zero detect.
L5DB	(Low 5th Digit Blank) - When low, this signal blanks the 5th digit of the mainframe.
LPOE	(Low POLarity Enable) - When low, this signal enables the polarity display digit.
HDPP	(High Display Positive Polarity) - When high, this signal causes the polarity indicator to show a +.
LDP4	(Low Decimal Point 4) - When low, this signal illuminates decimal point 4.
LDP3	(Low Decimal Point 3) - When low, this signal illuminates decimal point 3.
LDP2	(Low Decimal Point 2) - When low, this signal illuminates decimal point 2.
LDP1	(Low Decimal Point 1) - When low, this signal illuminates decimal point 1.
LOVL	(Low OvERLoad) - When low, this signal indicates the instrument is in overload.
LBLK	(Low BLanK) - The display is blanked when this signal is low.
LIGE	(Low InteGrator Enable) - When low, this signal enables the integrator.
LJEN	(Low Input ENable) - When low, this signal enables the 34750A input circuits.
LNRE	(Low Negative Reference Enable) - When low, this signal enables the negative reference supply.
LPRE	(Low Positive Reference Enable) - When low, this signal enables the positive reference supply.

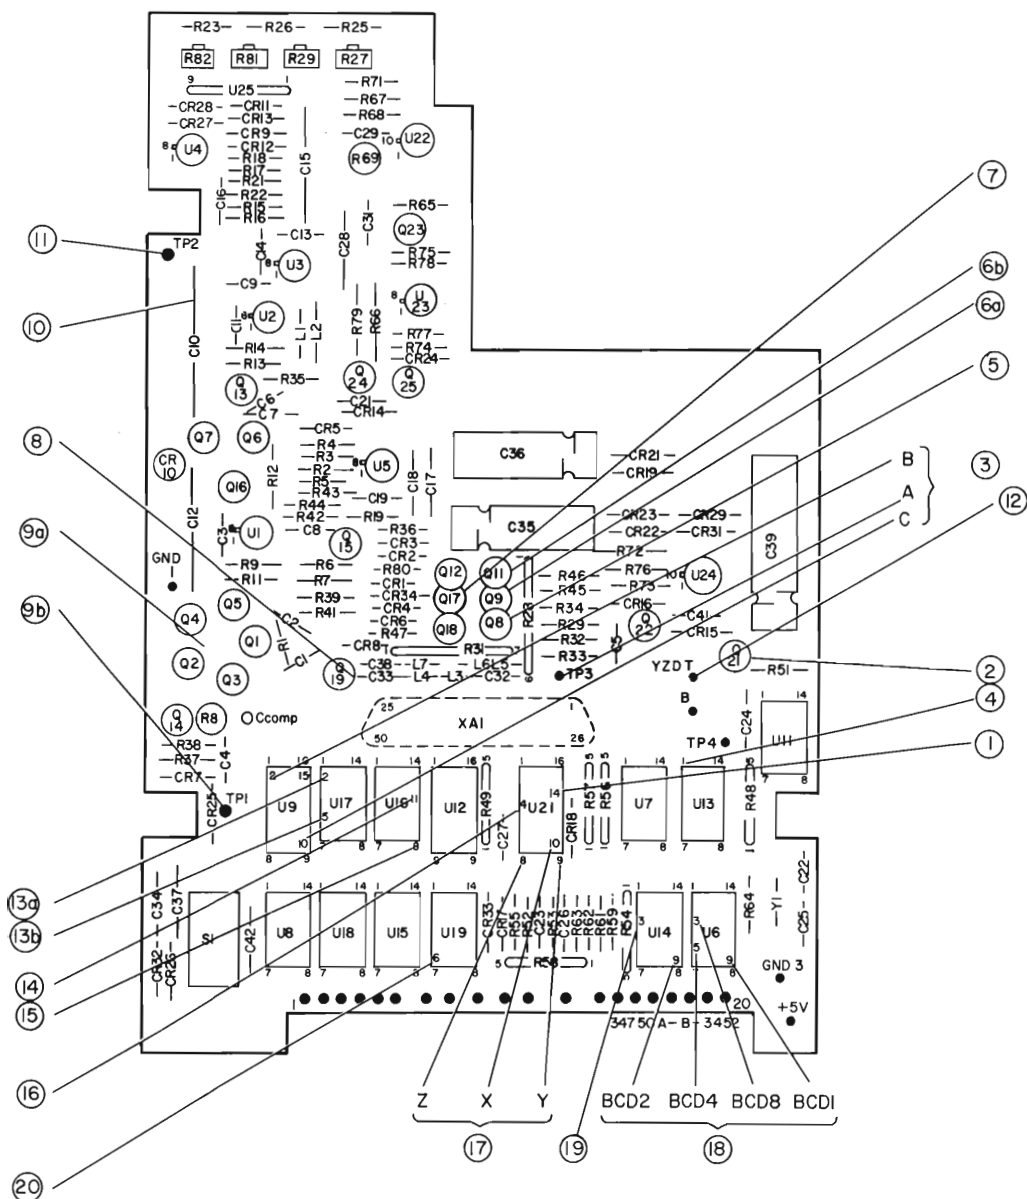


AI
hp Part No. 034750-66501
Rev C

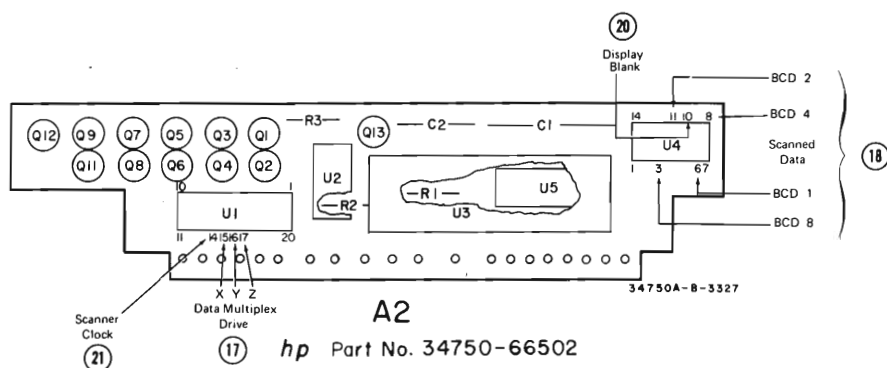


11456A READOUT TEST CARD

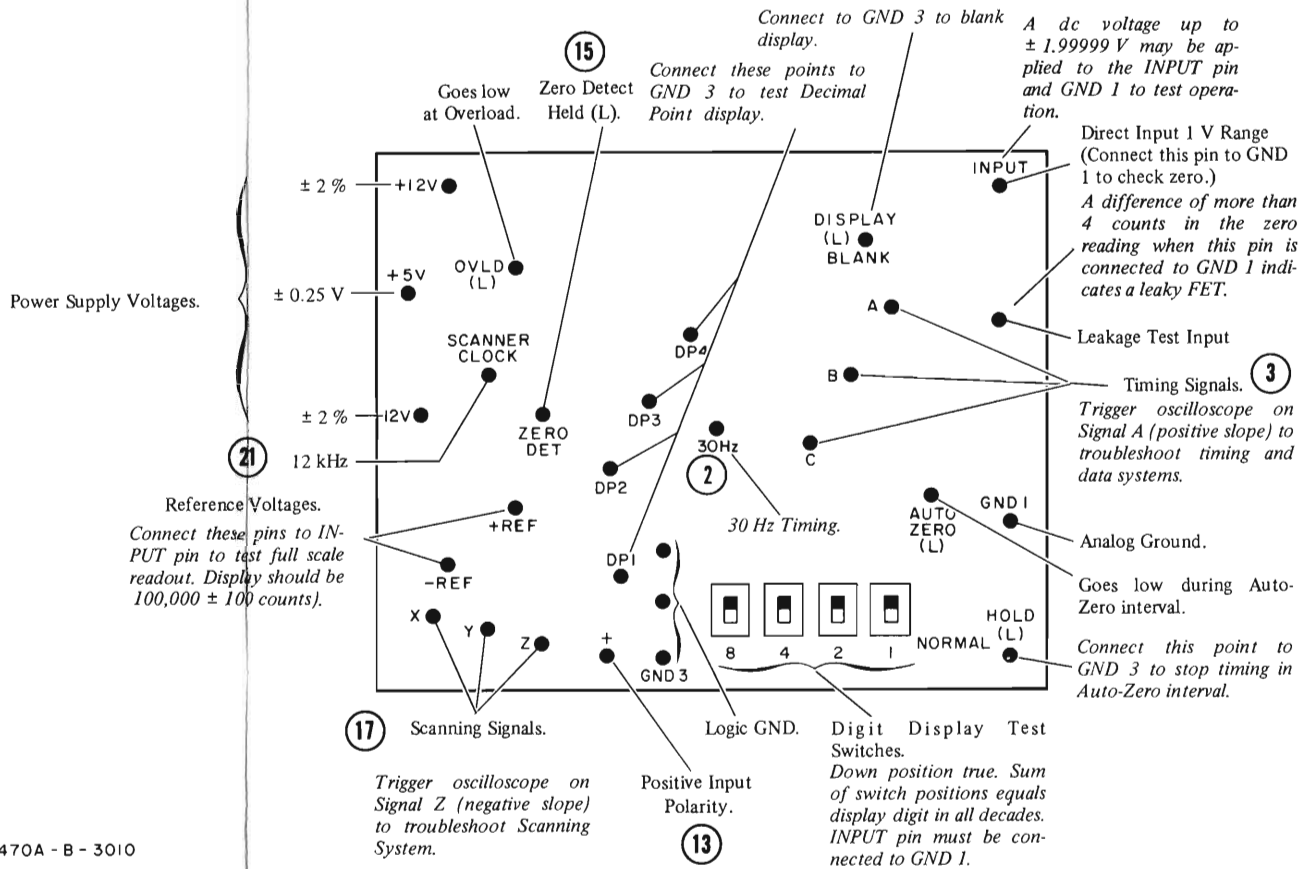


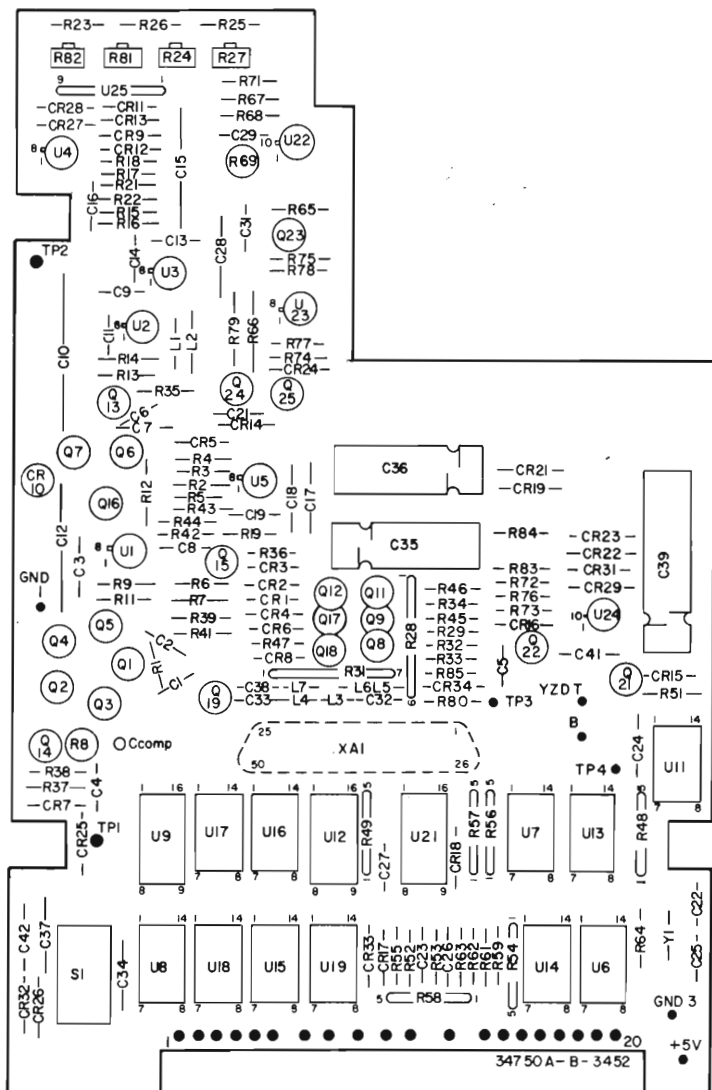


NOTES

1. | DENOTES SCHEMATIC ON WHICH SIGNAL CONNECTION IS MADE.
 2. ③ NUMBERS IN CIRCLES REFER TO WAVEFORMS ON FIGURE 7-5.
- Δ_a USE FOR ALL REPLACEMENT. IF EITHER R6, R7, OR R37 IS REPLACED, ALL SHOULD BE REPLACED.
- Δ_b INSTRUMENT SERIAL NO.'s. 1304A00275 AND BELOW DID NOT CONTAIN R85. IT WAS PART OF RESISTOR PACK R28.
- Δ_i REFER TO CHANGE NO.1 IN SECTION 8 FOR INSTRUMENT SERIAL NO.'s 1304A00275 AND BELOW.

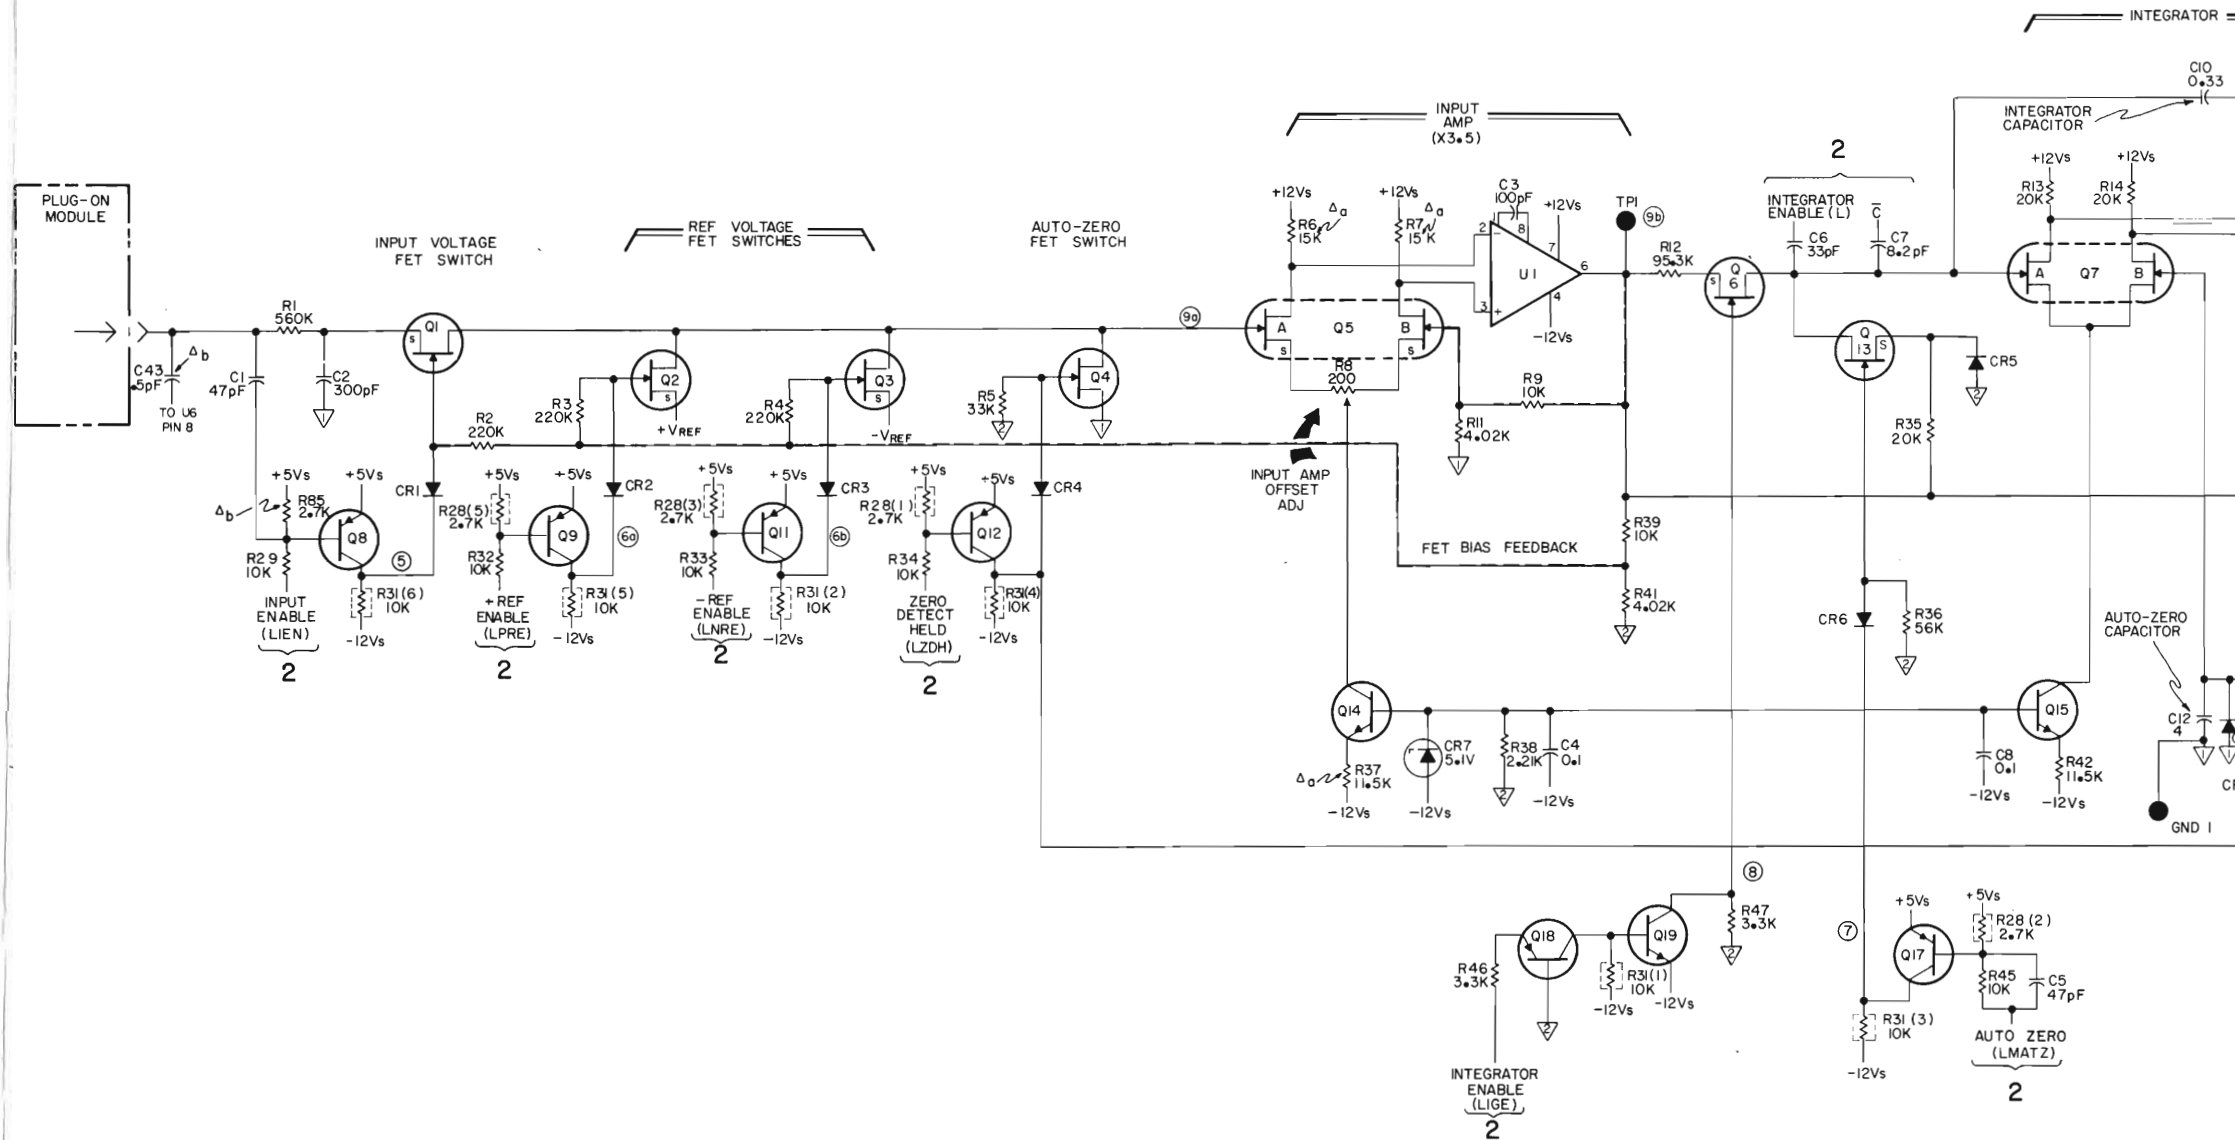

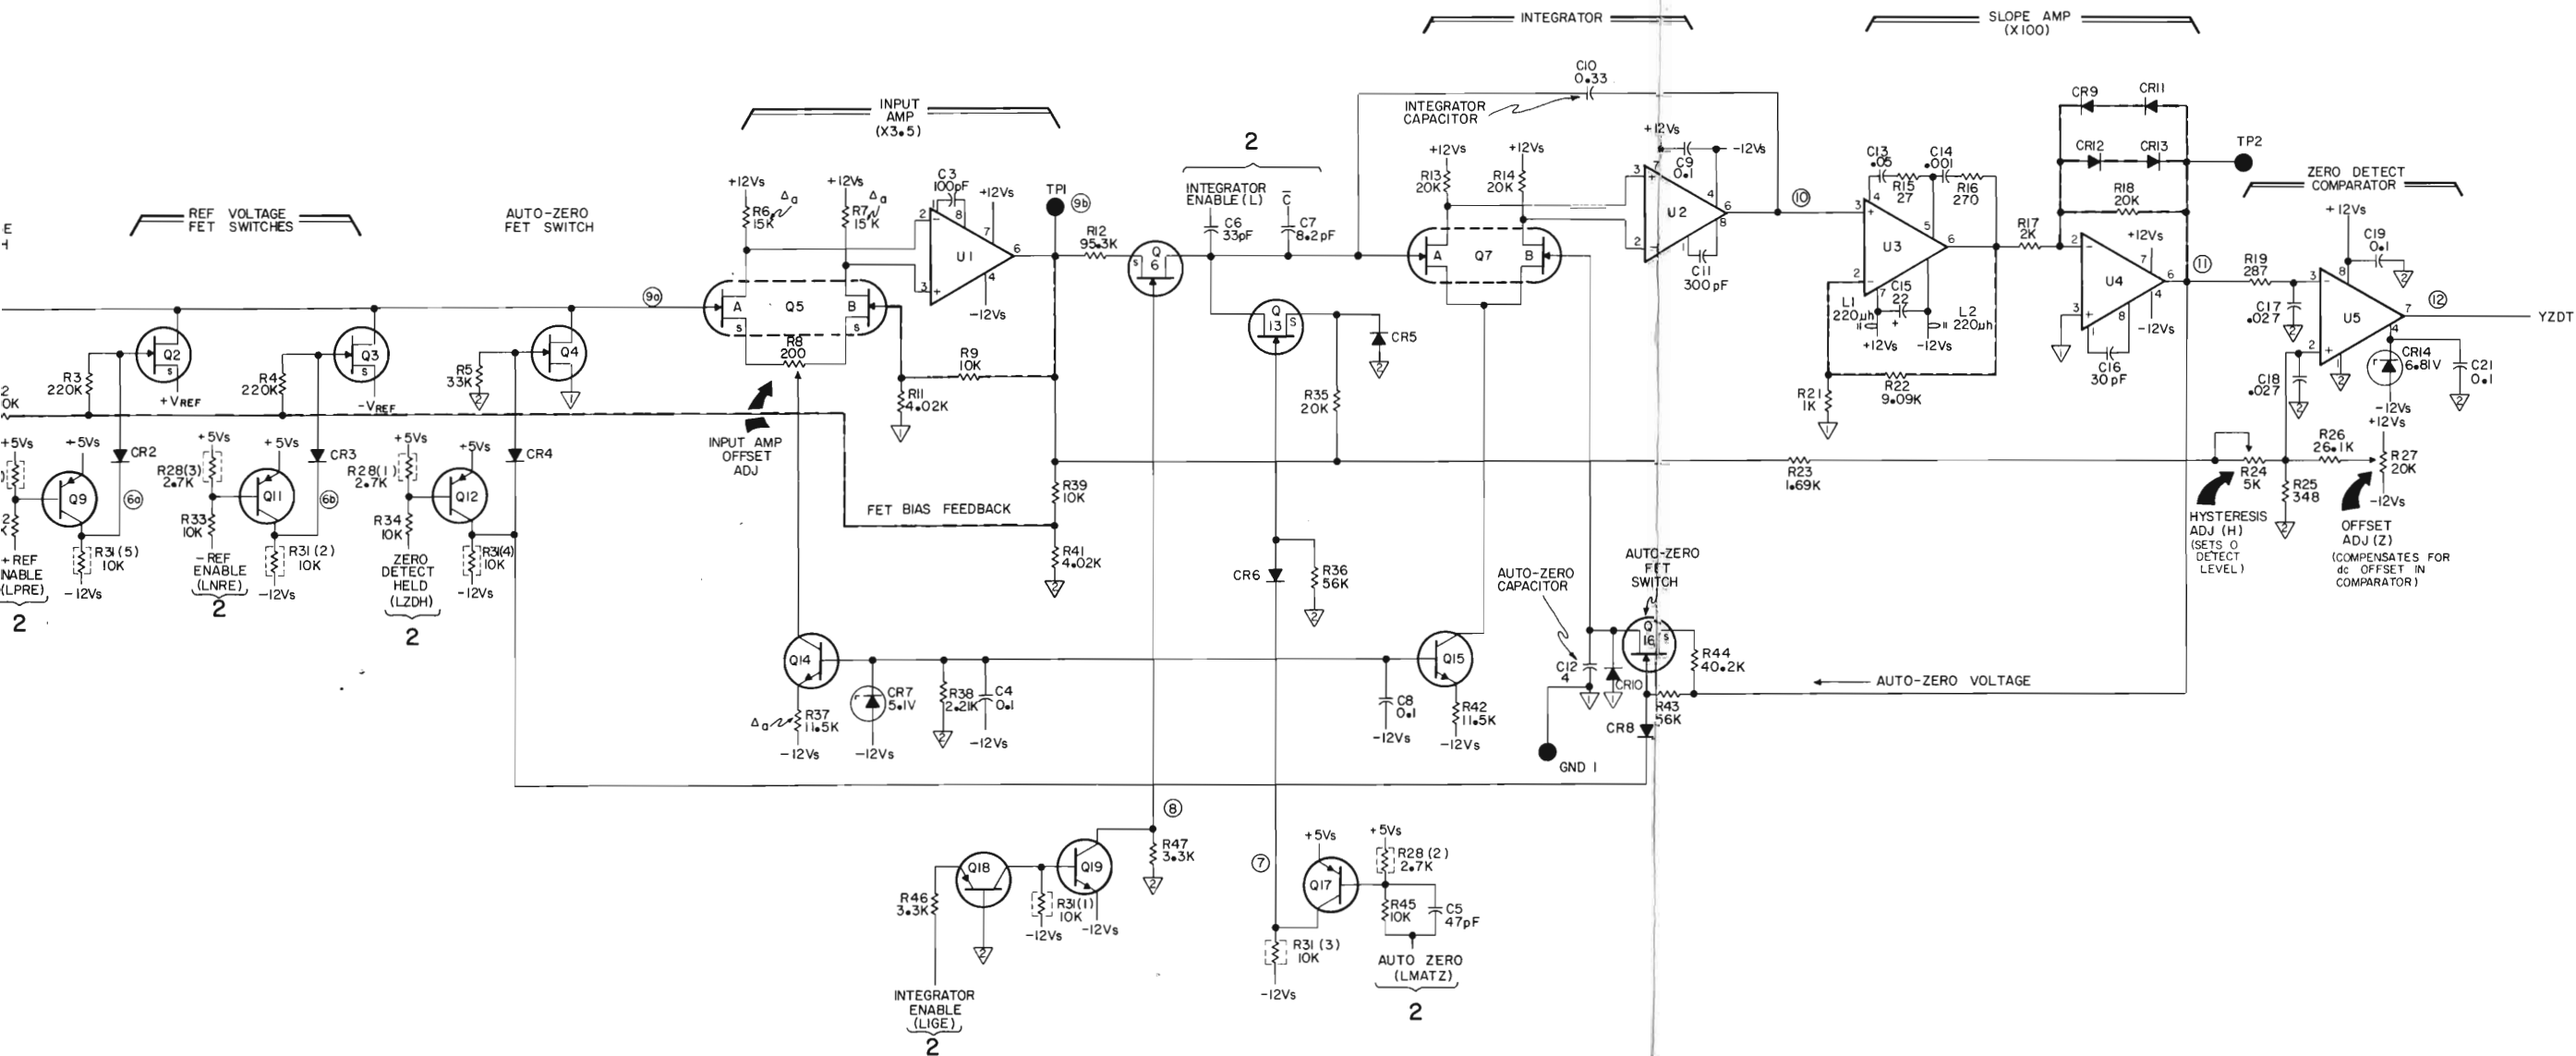


Δ₁

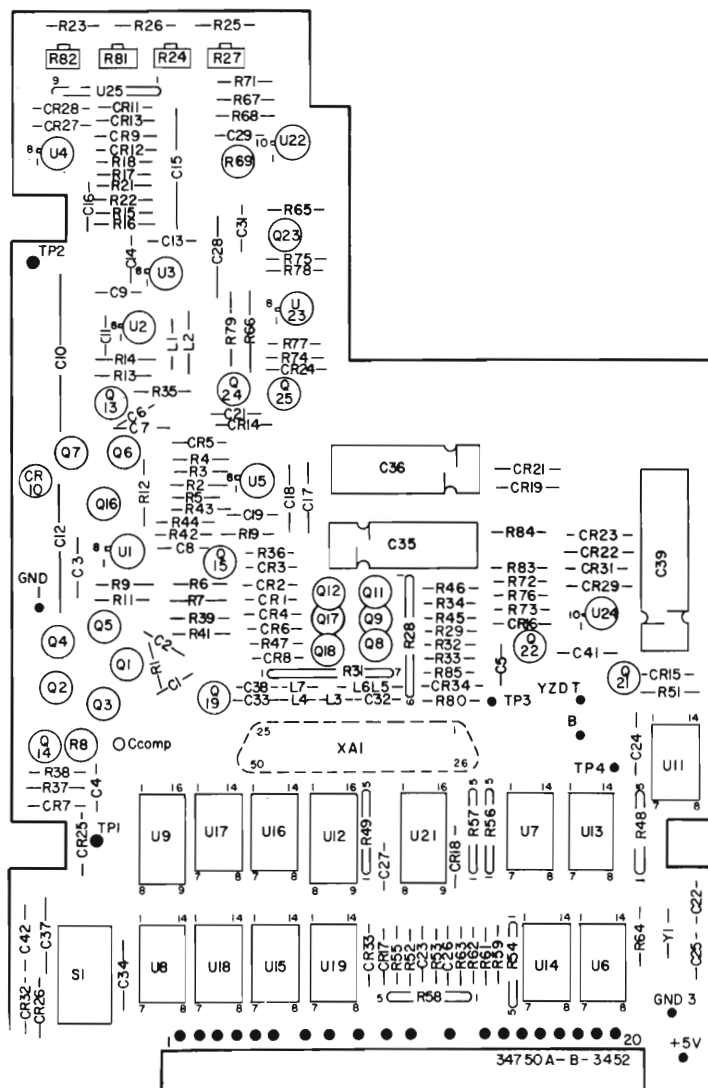


A1

hp Part No. 034750-66501
Rev D

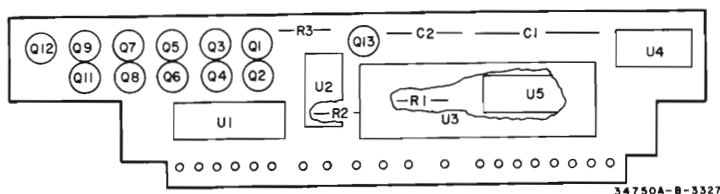

A2

hp Part No. 34750-66502

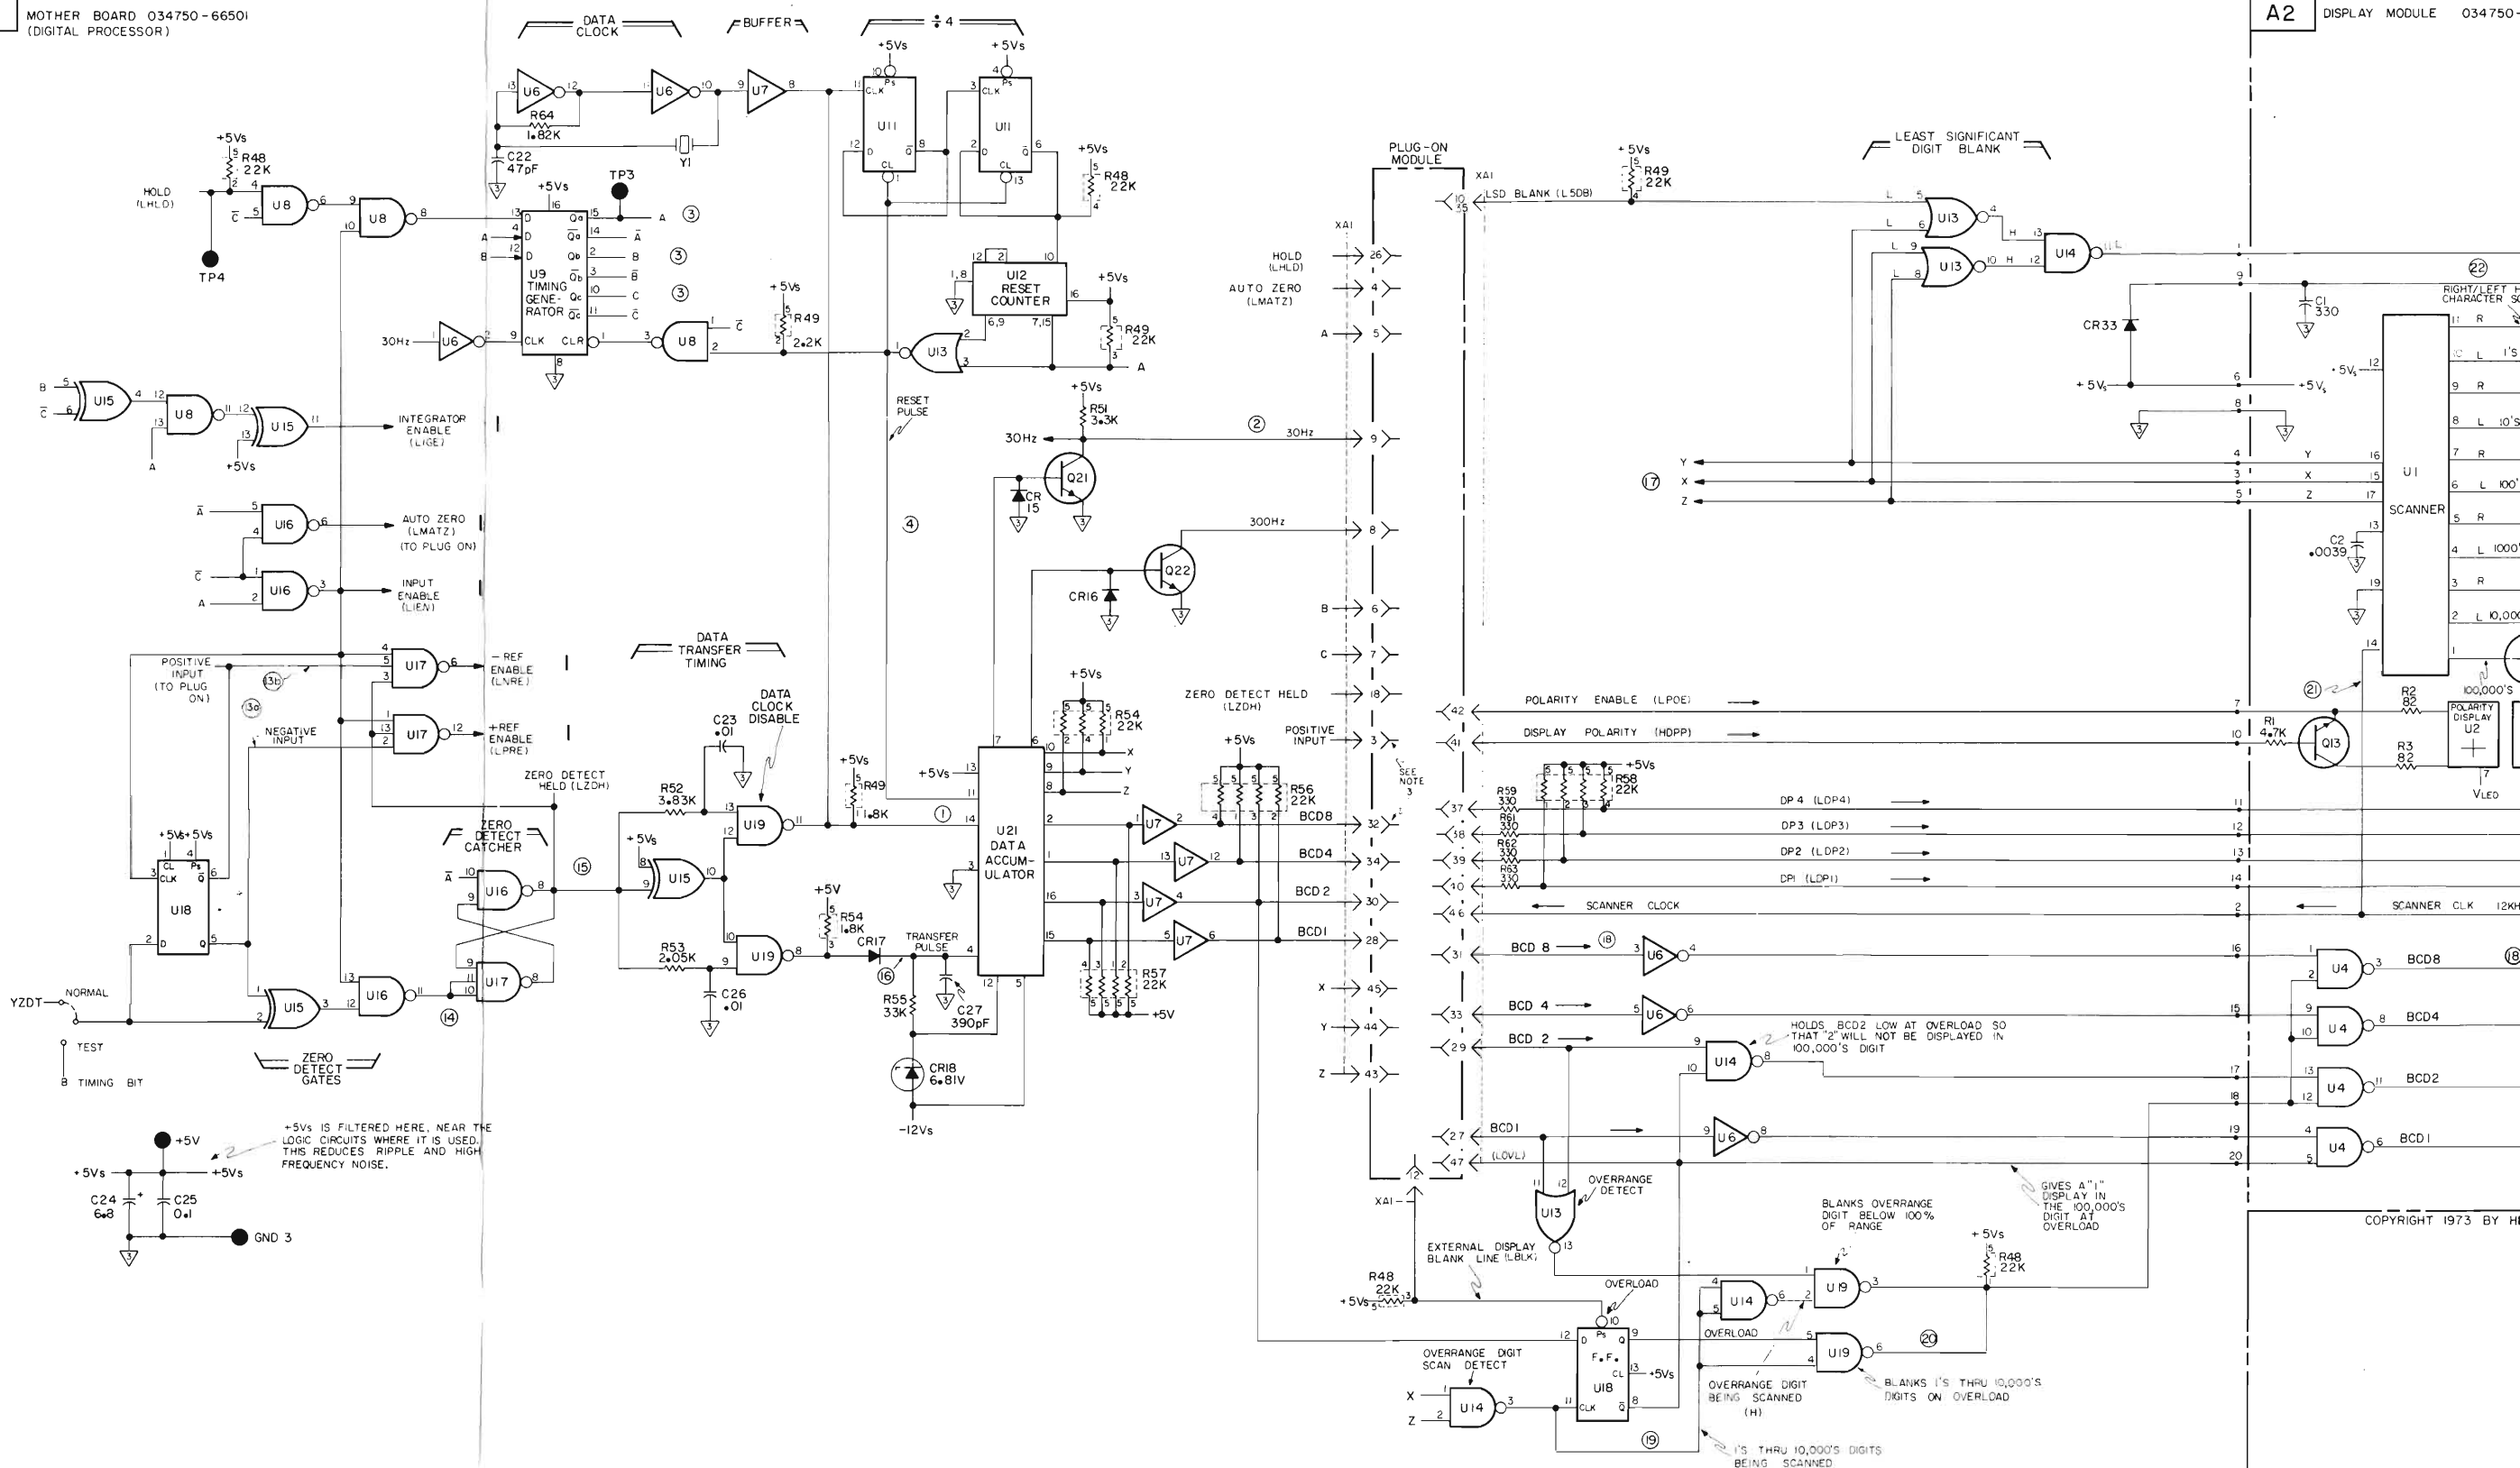


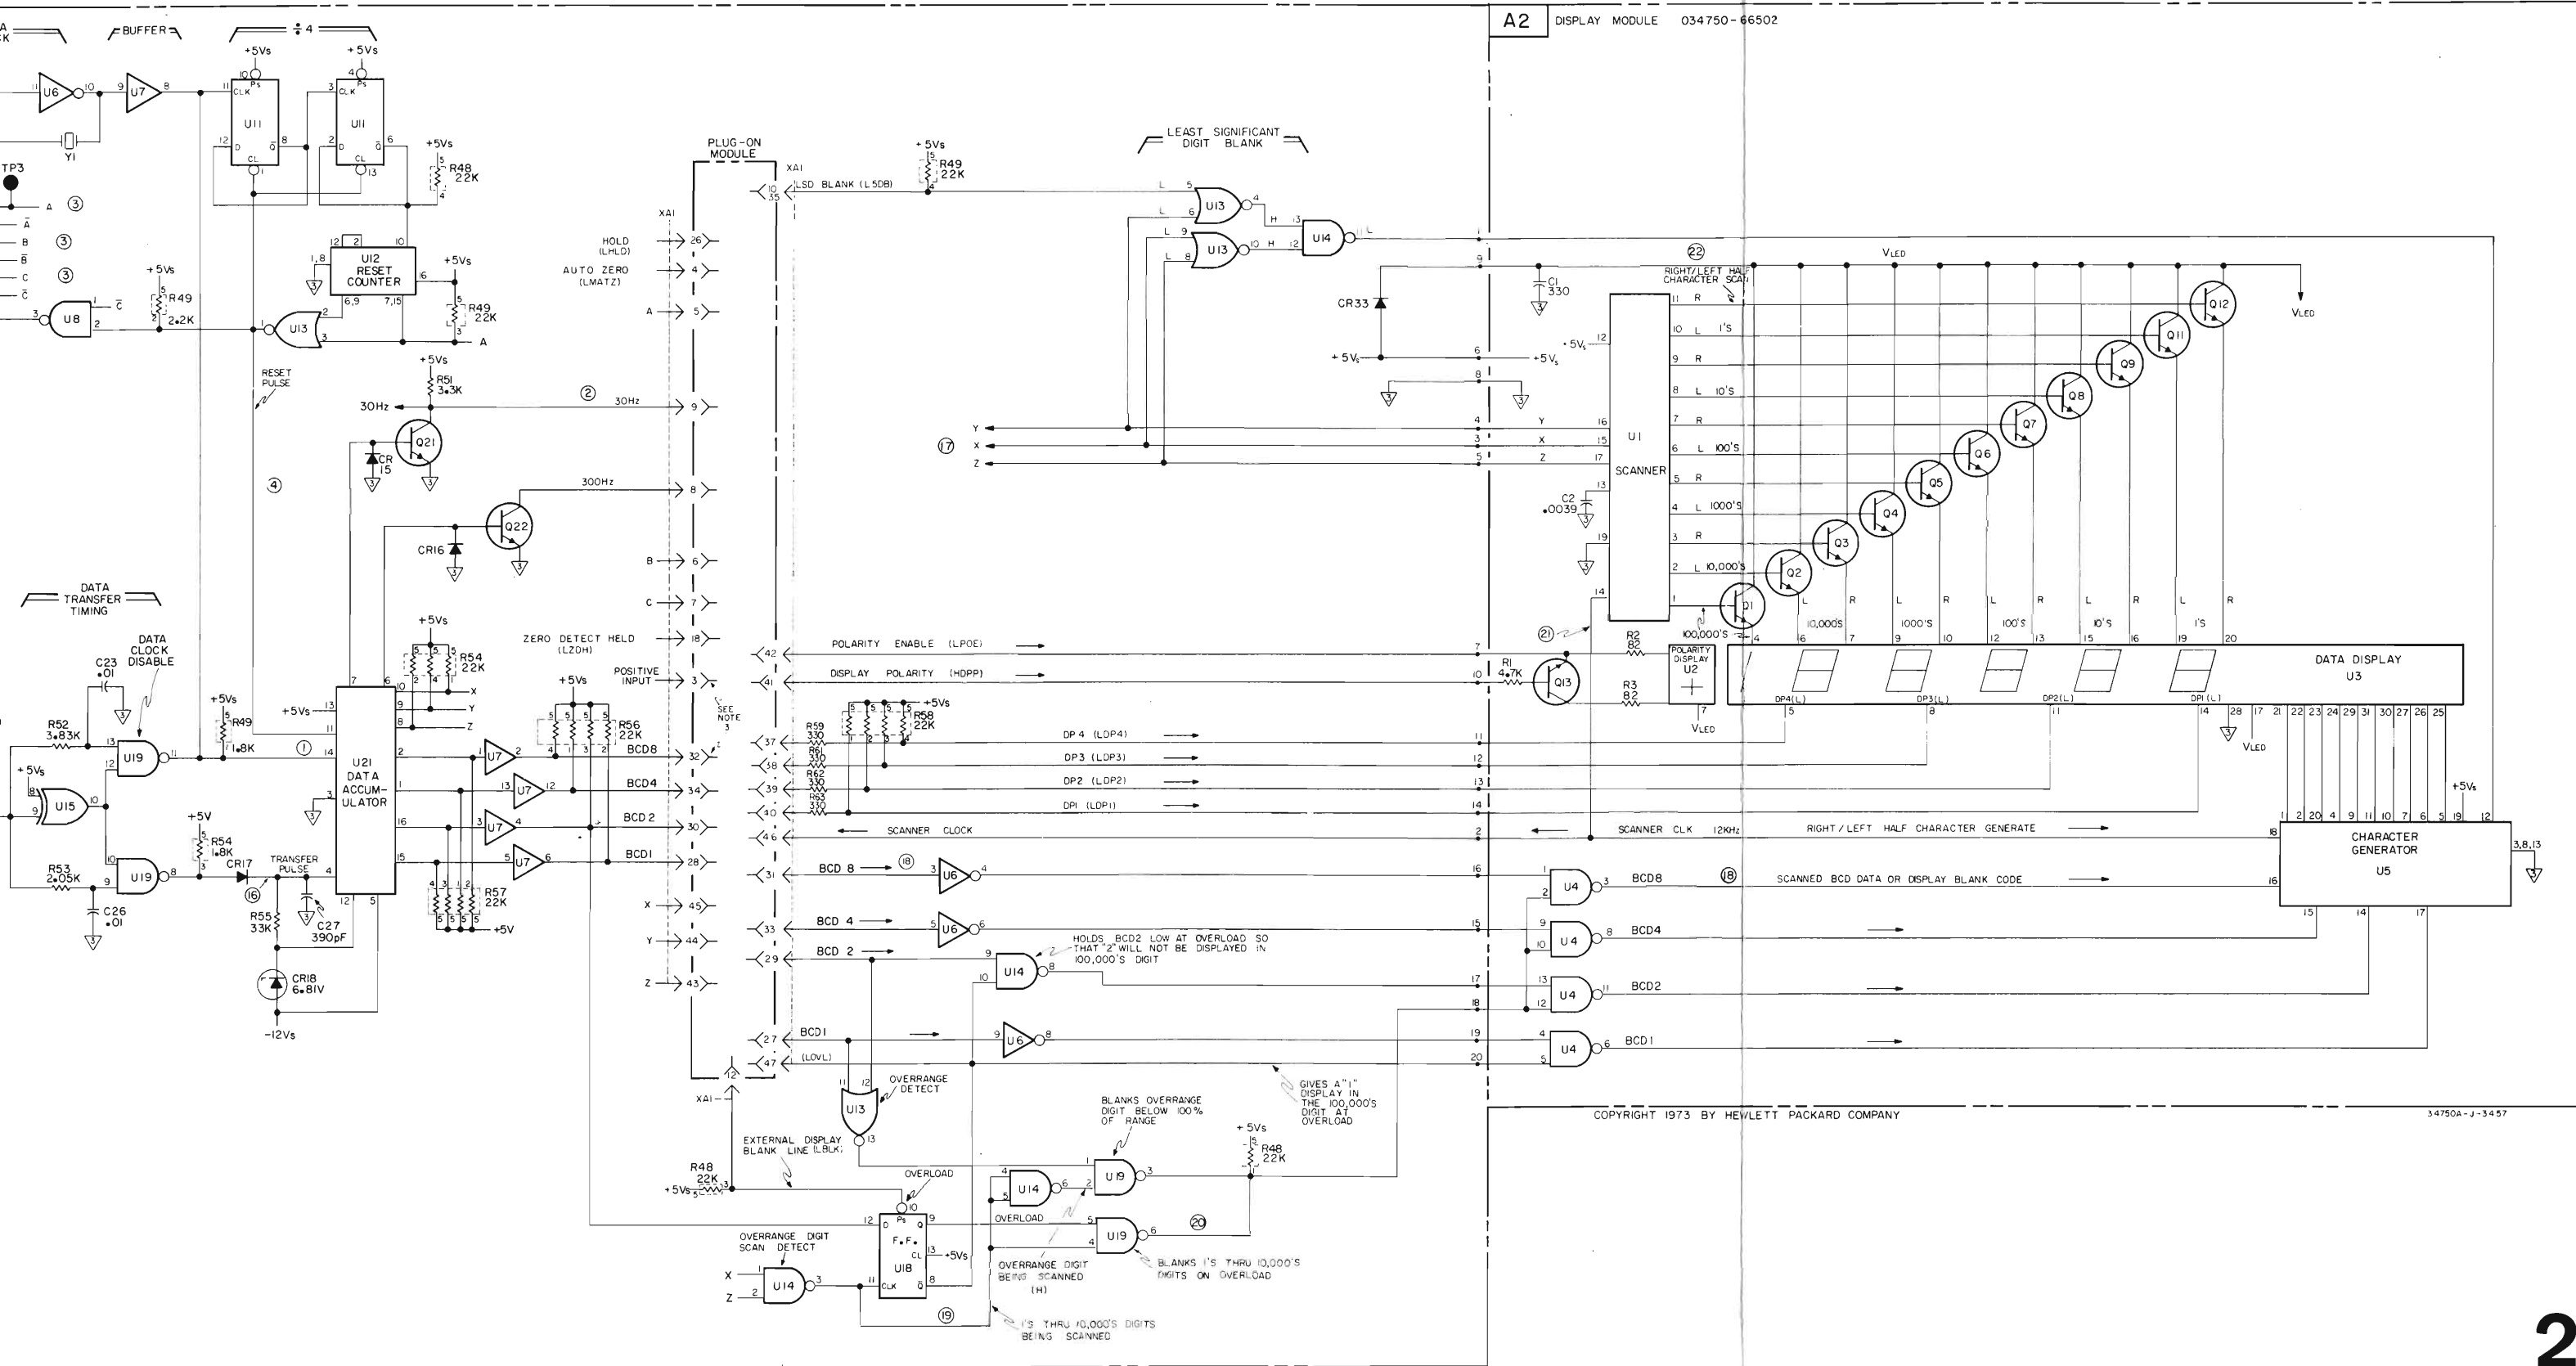


Figure 7-7. Digital Signal Processor.
Rev. B 7-15/7-16

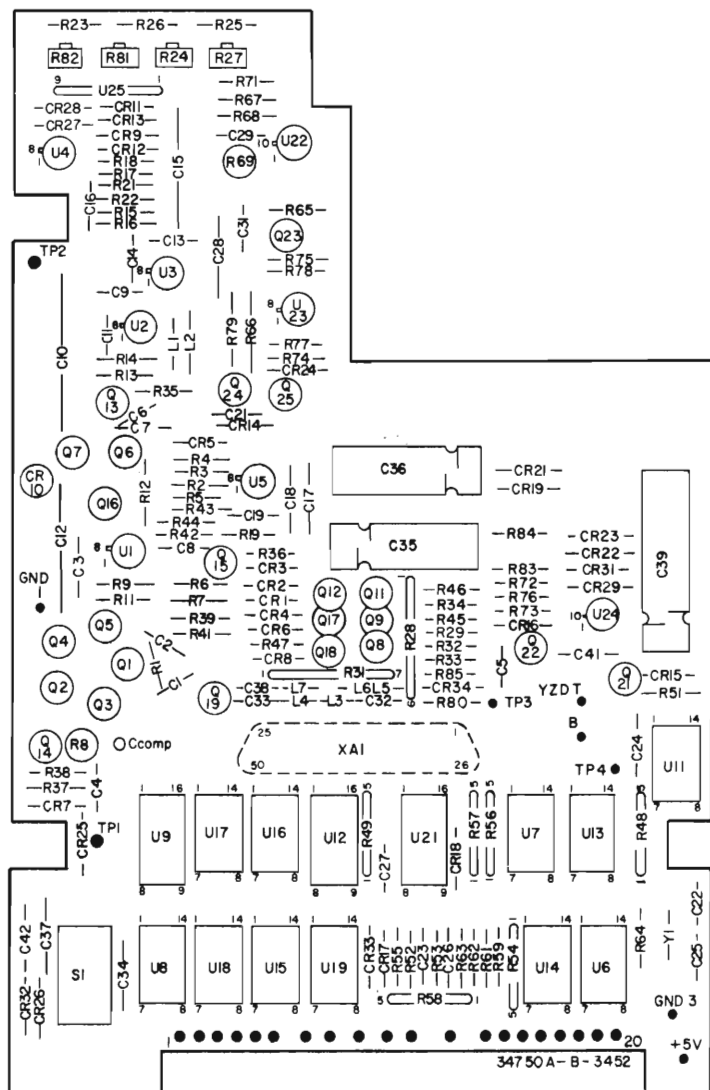

SECTION VIII

BACKDATING

8-1. INTRODUCTION.

8-2. This section contains backdating information which adapts this manual to instruments with serial numbers lower than that shown on the title page.

8-3. CHANGE SEQUENCE.

8-4. Changes are listed in the serial number order that they occurred in the manufacture of the instrument. However, in adapting this manual to an instrument with a particular serial number, apply the changes in reverse order. That is, begin with the latest change and progress to the earliest change that applies to the serial number in question. Table 8-1 lists the serial numbers to which each change applies.

8-5. PARTS NOT INCLUDED IN BACKDATING.

8-6. When replacing a part whose value or part number differs from the schematic diagram or parts list in this manual, yet is not listed in the following changes, use the replacement part number shown in Section VI. These parts are identified by the symbol Δ .


Table 8-1. Manual Backdating Changes.

[illegible]

CHANGE NO. 1

Applies to instrument Serial No's 1304A00275 & below.

Change the 34750-90001 Component Locator as shown below:

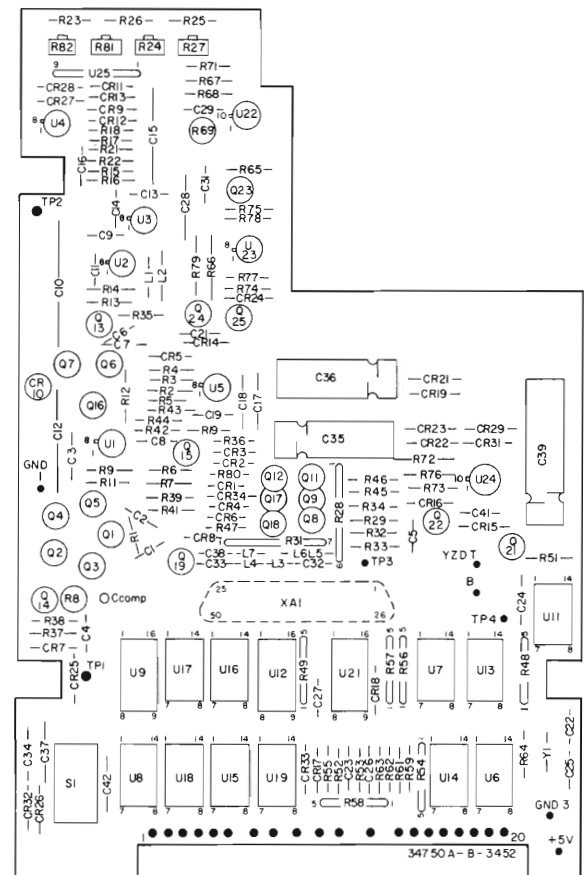

AI
Part No. 034750-66501
Rev C

CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A Common	Any supplier of U. S.	05347	Ultronix, Inc.	San Mateo, Cal.	11236	CTS of Berne, Inc.	Berne, Ind.
00136	McCoy Electronics	Mount Holly Springs, Pa.	05397	Union Carbide Corp., Elect.		11237	Chicago Telephone of	
00213	Sage Electronics Corp.	Rochester, N. Y.		Div.	New York, N. Y.		California, Inc.	So. Pasadena, Cal.
00287	Cemco, Inc.	Danielson, Conn.	05574	Viking Ind. Inc.	Canoga Park, Cal.	11242	Bay State Electronics Corp.	Waltham, Mass
00334	Humidial	Colton, Calif.	05593	Icore Electro-Plastics Inc.	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave	
00348	Mictron, Co., Inc.	Valley Stream, N. Y.	05616	Cosmo Plastic (c/o Electrical			Div.	Palo Alto, Cal.
00373	Garlock Inc.	Cherry Hill, N. J.		Spec. Co.)	Cleveland, Ohio	11314	National Seal	Dowen, Conn.
00656	Aerovox Corp.	New Bedford, Mass.	05624	Barber Colman Co.	Rockford, Ill.	11453	Precision Connector Corp.	Jamaica, N. Y.
00779	Amp. Inc.	Harrisburg, Pa.	05728	Tiffen Optical Co.		11534	Duncan Electronics Inc.	Costa Mesa, Cal.
00781	Aircraft Radio Corp.	Boonton, N. J.			Roslyn Heights, Long Island, N. Y.	11711	General Instrument Corp.,	
00809	Croven, Ltd.	Whitby, Ontario, Canada	05729	Metro-Tel Corp.	Westbury, N. Y.		Semiconductor Division Products	
00815	Northern Engineering		05783	Stewart Engineering Co.	Santa Cruz, Cal.		Group	Newark, N. J.
	Laboratories, Inc.	Burlington, Wis.	05820	Wakefield Engineering Inc.	Wakefield, Mass.	11717	Imperial Electronic, Inc.	Buena Park, Cal.
00853	Sangamo Electric Co.,		06004	Warner Corp., Div. of Stewart		11870	Melabs, Inc.	Palo Alto, Cal.
	Pickens Div.	Pickens, S. C.	06090	Raychem Corp.	Bridgeport, Conn.	12136	Philadelphia Handle Co.	Camden, N. J.
00866	Goe Engineering Co.	City of Industry, Cal.	06175	Bausch and Lomb Optical		12361	Grove Mfg. Co., Inc.	Shady Grove, Pa.
00891	Carl E. Holmes Corp.	Los Angeles, Cal.		Co.	Rochester, N. Y.	12574	Gulton Ind. Inc., Data System	
00929	Microlab Inc.	Livingston, N. J.	06402	E. T. A. Products Co. of			Div.	Albuquerque, N. M.
01002	General Electric Co.,			America	Chicago, Ill.	12697	Clarostat Mfg. Co.	Dover, N. H.
	Capacitor Dept.	Hudson Falls, N. Y.	06540	Amatom Electronic Hardware		12728	Elmar Filter Corp.	W. Haven, Conn.
01009	Aiden Products Co.	Brockton, Mass.		Co., Inc.	New Rochelle, N. Y.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan
01121	Liton Bradley Co.	Milwaukee, Wis.	06555	Beede Electrical Instrument		12881	Metex Electronics Corp.	Clark, N. J.
01255	Litton Industries, Inc.	Beverly Hills, Cal.		Co., Inc.	Penacook, N. H.	12930	Delta Semiconductor Inc.	Newport Beach, Cal.
01281	TRW Semiconductors, Inc.	Lawndale, Cal.	06666	General Devices Co., Inc.	Indianapolis, Ind.	12954	Dickson Electronics Corp.	Scottsdale, Arizona
01295	Texas Instruments, Inc.		06751	Components Inc., Ariz. Div.	Phoenix, Arizona	13019	Airco Supply Co., Inc.	Wichita, Kansas
	Transistor Products Div.	Dallas, Texas	06812	Torrington Mfg. Co., West Div.	San Carlos, Cal.	13061	Wilco Products	Detroit, Mich.
01349	The Alliance Mfg. Co.	Alliance, Ohio	06980	Varian Assoc. Etmac Div.	San Carlos, Cal.	13103	Thermolloy	Dallas, Texas
01538	Small Parts Inc.	Los Angeles, Cal.	07088	Kelvin Electric Co.	San Nuy, Cal.	13327	Soliton Devices Inc.	Tappan, N. Y.
01589	Pacific Relays, Inc.	Van Nuys, Cal.	07126	Digitran Co.	Pasadena, Cal.	13396	Telefunken (GmbH)	Hanover, Germany
01670	Gudebrod Bros. Silk Co.	New York, N. Y.	07137	Transistor Electronics		13835	Midland-Wright Div. of	
01930	Amerock Corp.	Rockford, Ill.		Corp.	Minneapolis, Minn.		Pacific Industries, Inc.	Kansas City, Kansas
01960	Pulse Engineering Co.	Santa Clara, Cal.	07138	Westinghouse Electric		14099	Sem-Tech	Newbury Park, Cal.
02114	Ferroxcube Corp. of			Corp.	Elmira, N. Y.	14193	Calif. Resistor Corp.	Santa Monica, Cal.
	America	Saugerties, N. Y.	07149	Filmohm Corp.	New York, N. Y.	14298	American Components, Inc.	Conshohocken, Pa.
02116	Wheelock Signals, Inc.	Long Branch, N. J.	07233	Cinch-Graphik Co.	City of Industry, Cal.	14433	ITT Semiconductor, a Div. of	
02286	Cole Rubber and Plastics Inc.	Sunnyvale, Cal.	07256	Silicon Transistor Corp.	Carle Place, N. Y.		Int. Telephone and Telegraph	
02660	Amphenol-Borg Electronics		07261	Avnet Corp.	Culver City, Cal.		Corporation	West Palm Beach, Fla.
	Corp.	Broadview, Ill.	07263	Fairchild Camera & Inst. Corp.		14493	Hewlett-Packard Company	Loveland, Colo.
02735	Radio Corp. of America, Semi-			conductor Div.	Mountain View, Cal.	14655	Cornell Dublier Electric Corp.	Newark, N. J.
	conductor and Materials		07322	Minnesota Rubber Co.	Minneapolis, Minn.	14674	Corning Glass Works	Corning, N. Y.
	Division	Somerville, N. J.	07387	Birtcher Corp. The	Monterey Park, Cal.	14752	Electro Cube Inc.	San Gabriel, Cal.
02771	Vocaline Co. of America,		07397	Sylvania Elect. Prod. Inc.		14960	Williams Mfg. Co.	San Jose, Cal.
	Inc.	Old Saybrook, Conn.		Mt. View Operations	Mountain View, Cal.	15106	The Sphere Co., Inc.	Little Falls, N. J.
02777	Hopkins Engineering Co.	San Fernando, Cal.	07700	Technical Wire Products		15203	Webster Electronics Co.	New York, N. Y.
02875	Hudson Tool & Die	Newark, N. J.		Inc.	Cranford, N. J.	15287	Scionics Corp.	Northridge, Cal.
03296	Nylon Molding Corp.	Springfield, N. J.	07829	Bodine Elect. Co.	Chicago, Ill.	15291	Adjustable Bushing Co.	N. Hollywood, Cal.
03508	G. E. Semiconductor Prod.		07910	Continental Device Corp.	Hawthorne, Cal.	15558	Micron Electronics, Garden City	Long Island, N. Y.
	Dept.	Syracuse, N. Y.	07933	Raytheon Mfg. Co., Semi-		15566	Amprobe Inst. Corp.	Lynbrook, N. Y.
03705	Apex Machine & Tool Co.	Dayton, Ohio		conductor Div.	Mountain View, Cal.	15631	Cabletronics	Costa Mesa, Cal.
03797	Eldema Corp.	Compton, Calif.	07980	Hewlett-Packard Co.		15772	Twentieth Century Coil	
03818	Parker Seal Co.	Los Angeles, Cal.		New Jersey Division	Rockaway, N. J.		Spring Co.	Santa Clara, Cal.
03877	Transitron Electric Corp.	Wakefield, Mass.	08145	U. S. Engineering Co.	Los Angeles, Cal.	15801	Fenwal Elect. Inc.	Frammingham, Mass.
03888	Pyrofilm Resistor Co.,		08289	Blinn, Delbert Co.	Pomona, Cal.	15818	Amelco Inc.	Mountain View, Cal.
	Inc.	Cedar Knolls, N. J.	08358	Burgess Battery Co.		16037	Spruce Pine Mica Co.	Spruce Pine, N. C.
03954	Singer Co., Diehl Div.,			Niagara Falls, Ontario, Canada		16179	Omni-Spectra Inc.	Detroit, Ill.
	Finderne Plant	Sumerville, N. J.	08524	Deutsch Fastener Corp.	Los Angeles, Cal.	16352	Computer Diode Corp.	Lodi, N. J.
04009	Arrow, Hart and Hegeman		08564	Bristol Co., The	Waterbury, Conn.	16554	Electroid Co.	Union, N. J.
	Elect. Co.	Hartford, Conn.	08717	Sloan Company	Sun Valley, Cal.	16585	Boots Aircraft Nut Corp.	Pasadena, Cal.
04013	Tarus Corp.	Lambertville, N. J.	08718	ITT Cannon Electric Inc.,		16688	Ideal Prec. Meter Co., Inc.	
04062	Arco Electronic Inc.	Great Neck, N. Y.		Phoenix Div.	Phoenix, Arizona		De Jur Meter Div.	Brooklyn, N. Y.
04217	Essex Wire	Los Angeles, Cal.	08727	National Radio Lab. Inc.	Paramus, N. J.	16758	Delco Radio Div. of G. M. Corp.	Kokomo, Ind.
04222	Hi-Q Division of Aerovox	Myrtle Beach, S. C.	08792	CBS Electronics Semiconductor		17109	Thermonetics Inc.	Canoga Park, Cal.
04354	Precision Paper Tube Co.	Wheeling, Ill.		Operations, Div. of CBS Inc.	Lowell, Mass.	17474	Tranex Company	Mountain View, Cal.
04404	Palo Alto Division of Hewlett-		08806	General Electric Co.,		17675	Hamlin Metal Products Corp.	Akron, Ohio
	Packard Co.	Palo Alto, Cal.		Miniature Lamp Dept.	Cleveland, Ohio	17745	Angstrom Prec. Inc.	No. Hollywood, Cal.
04651	Sylvania Electric Products,		08984	Mel-Rain	Indianapolis, Ind.	17856	Siliconix Inc.	Sunnyvale, Cal.
	Microwave Device Div.	Mountain View, Cal.	09026	Babcock Relays Div.	Costa Mesa, Cal.	17870	McGraw-Edison Co.	Manchester, N. H.
04673	Dakota Engr. Inc.	Culver City, Cal.	09097	Electronic Enclosures Inc.	Los Angeles, Calif.	18042	Power Design Pacific Inc.	Palo Alto, Cal.
04713	Motorola Inc. Semiconductor		09134	Texas Capacitor Co.	Houston, Texas	18083	Clevite Corp. Semiconductor Div.	Palo Alto, Cal.
	Prod. Div.	Phoenix, Arizona	09145	Tech. Ind. Inc. Atohm		18324	Signetics Corp.	Sunnyvale, Cal.
04732	Filttron Co., Inc. Western			Elect.	Burbank, Cal.	18476	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
	Div.	Culver City, Cal.	09250	Electro Assemblies, Inc.	Chicago, Ill.	18486	TRW Elect. Comp. Div.	Des Plaines, Ill.
04773	Automatic Electric Co.	Northlake, Ill.	09353	C & K Components Inc.	Newton, Mass.	18565	Chomerics	Plainville, Mass.
04796	Sequoia Wire Co.	Redwood City, Cal.	09569	Mallory Battery Co. of		18583	Curtis Instrument, Inc.	Mt. Kisco, N. Y.
04811	Precision Coil Spring Co.	El Monte, Cal.		Canada, Ltd.	Toronto, Ontario, Canada	18612	Vishay Instruments Inc.	Malvern, Pa.
04870	P. M. Motor Company	Westchester, Ill.	09795	Pennsylvania Florocarbon	Clifton Heights, Penn.	18873	E. I. DuPont and Co., Inc.	Wilmington, Del.
04919	Component Mfg. Service		09922	Burndy Corp.	Norwalk, Conn.	18911	Durant Mfg. Co.	Milwaukee, Wis.
	Co.	W. Bridgewater, Mass.	10214	General Transistor Western		19315	The Bendix Corp., Navigation &	
05006	Twentieth Century Plastics,			Corp.	Los Angeles, Cal.		Control Div.	Teterboro, N. J.
	Inc.	Los Angeles, Cal.	10411	Ti-Tal, Inc.	Berkeley, Cal.	19500	Thomas A. Edison Industries,	
05277	Westinghouse Electric Corp.		10646	Carborundum Co.	Niagara Falls, N. Y.		Div. of McGraw-Edison	West Orange, N. J.
	Semiconductor Dept.	Youngwood, Pa.				19589	Concoa	Baldwin Park, Cal.

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
19644	LRC Electronics	Horseheads, N. Y.	71482	C. P. Clare & Co.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
19701	Electra Mfg. Co.	Independence, Kansas	71590	Centralab Div. of		78471	Tilley Mfg. Co.	San Francisco, Cal.
20183	General Atronics Corp.	Philadelphia, Pa.		Globe Union Inc.	Milwaukee, Wis.	78488	Stackpole Carbon Co.	St. Marys, Pa.
21226	Executone, Inc.	Long Island City, N. Y.	71616	Commercial Plastics Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
21355	Fafnir Bearing Co., The	New Britain, Conn.	71700	Cornish Wire Co., The	New York, N. Y.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
21520	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71707	Coto Coil Co., Inc.	Providence, R. I.	78790	Transformer Engineers	San Gabriel, Cal.
23020	General Reed Co.	Metuchen, N. J.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78947	Ucinite Co.	Newtonville, Mass.
23042	Texscan Corp.	Indianapolis, Ind.	71785	Cinch Mfg. Co.		79136	Waldes Kohinoor Inc.	Long Island City, N. Y.
23783	British Radio Electronics Ltd.	Washington, D.C.		Howard B. Jones Div.	Chicago, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
24455	G. E. Lamp Division	Nela Park, Cleveland, Ohio	71984	Dow Corning Corp.	Midland, Mich.	79251	Wenco Mfg. Co.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	72136	Electro Motive Mfg. Co., Inc.		79727	Continental-Wirt Electronics Corp.	
24681	Memcor Inc., Comp. Div.	Huntington, Ind.			Willimantic, Conn.			Philadelphia, Pa.
26365	Gries Reproducer Corp.	New Rochelle, N. Y.	72619	Dialight Corp.	Brooklyn, N. Y.	79963	Zierick Mfg. Corp.	New Rochelle, N. Y.
26462	Grobert File Co. of America, Inc.	Carlstadt, N. J.	72656	Indiana General Corp.		80031	Mepco Division of Sessions Clock Co.	
26851	Compac/Hollister Co.	Hollister, Cal.		Electronics Div.	Keasby, N. J.			Morristown, N. J.
26992	Hamilton Watch Co.	Lancaster, Pa.	72699	General Instrument Corp.		80033	Prestole Corp.	Toledo, Ohio
28480	Hewlett-Packard Co.	Palo Alto, Cal.		Cap Division	Newark, N. J.	80120	Schnitzer Alloy Products Co.	Elizabeth, N. J.
28520	Heyman Mfg. Co.	Kenilworth, N. J.	72765	Drake Mfg. Co.	Harwood Heights, Ill.	80131	Electronic Industries Association.	
30817	Instrument Specialties Co., Inc.	Little Falls, N. J.	72825	Hugh H. Eby Inc.	Philadelphia, Pa.		Standard tube or semi-conductor device, any manufacturer.	
33173	G. E. Receiving Tube Dept.	Owensboro, Ky.	72928	Gudeman Co.	Chicago, Ill.	80207	Unimax Switch, Div. Maxon Electronics Corp.	Wallingford, Conn.
35434	Lectrohm Inc.	Chicago, Ill.	72964	Elastic Stop Nut Corp.	Union, N. J.	80223	United Transformer Corp.	New York, N. Y.
36196	Stanwyck Coil Products Ltd.	Hawkesbury, Ontario, Canada	72982	Robert M. Hadley Co.	Los Angeles, Cal.	80248	Oxford Electric Corp.	Chicago, Ill.
36287	Cunningham, W. H. & Hill, Ltd.	Toronto, Ontario, Canada	73061	Ernie Technological Products, Inc.	Erie, Pa.	80294	Bourns Inc.	Riverside, Cal.
37942	P. R. Mallory & Co., Inc.	Indianapolis, Ind.	73076	Hansen Mfg. Co., Inc.	Princeton, Ind.	80411	Arco Div. of Robertshaw Controls Co.	
39543	Mechanical Industries Prod. Co.	Akron, Ohio	73138	H. M. Harper Co.	Chicago, Ill.			Columbus, Ohio
40920	Miniature Precision Bearings, Inc.	Keene, N. H.	73293	Helipot Div. of Beckman Inst., Inc.	Fullerton, Cal.	80486	All Star Products Inc.	Defiance, Ohio
40931	Honeywell Inc.	Minneapolis, Minn.	73445	Hughes Aircraft Co.	Newport Beach, Cal.	80509	Avery Label Co.	Monrovia, Cal.
42190	Muter Co.	Chicago, Ill.	73506	Amperex Elect. Co.	Hicksville, L. I., N. Y.	80583	Hammarlund Co., Inc.	Mars Hill, N. C.
43990	C. A. Norgren Co.	Englewood, Colo.		Bradley Semiconductor Corp.		80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
44655	Ohmite Mfg. Co.	Skokie, Ill.			New Haven, Conn.	80813	Dimco Gray Co.	Dayton, Ohio
46384	Penn Eng. & Mfg. Corp.	Doylestown, Pa.	73559	Carling Electric, Inc.	Hartford, Conn.	81030	International Inst. Inc.	Orange, Conn.
47904	Polaroid Corp.	Cambridge, Mass.	73586	Circle F Mfg. Co.	Trenton, N. J.	81073	Grayhill Co.	LaGrange, Ill.
48620	Precision Thermometer & Inst. Co.	Southampton, Pa.	73682	George K. Garrett Co.		81095	Triad Transformer Corp.	Venice, Cal.
49956	Microwave & Power Tube Div.	Waltham, Mass.	73734	Div. MSL Industries, Inc.	Philadelphia, Pa.	81312	Winchester Elec. Div. Litton Ind., Inc.	Oakville, Conn.
50290	Rowan Controller Co.	Westminster, Md.	73743	Federal Screw Products, Inc.	Chicago, Ill.	81349	Military Specification	
52983	HP Co., Med. Elec. Div.	Waltham, Mass.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio	81483	International Rectifier Corp.	El Segundo, Cal.
54294	Shallcross Mfg. Co.	Selma, N. C.	73793	General Industries Co., The	Elyria, Ohio	81541	Airpax Electronics, Inc.	Cambridge, Maryland
55026	Simpson Electric Co.	Chicago, Ill.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81860	Barry Controls, Div. Barry Wright Corp.	
55933	Sonotone Corp.	Elmsford, N. Y.	73899	JFD Electronics Corp.	Brooklyn, N. Y.			Watertown, Mass.
55938	Raytheon Co. Commercial Apparatus & System Div.	Norwalk, Conn.	73905	Jennings Radio Mfg. Corp.	San Jose, Cal.	82042	Carter Precision Electric Co.	Skokie, Ill.
56137	Spaulding Fibre Co., Inc.	Tonawanda, N. Y.	73957	Groove-Pin Corp.	Ridgely, N. J.	82047	Sperli Faraday Inc., Copper Hewitt Electric Div.	Hoboken, N. J.
56289	Sprague Electric Co.	North Adams, Mass.	74276	Signalite Inc.	Neptune, N. J.	82116	Electric Regulator Corp.	Norwalk, Conn.
58474	Superior Elect. Co.	Bristol, Conn.	74455	J. H. Winns, and Sons	Winchester, Mass.	82142	Jeffers Electronics Division of	
59446	Telex Corp.	Tulsa, Okla.	74461	Industrial Condenser Corp.	Chicago, Ill.		Speer Carbon Co.	Du Bois, Pa.
59730	Thomas & Betts Co.	Elizabeth, N. J.	74868	R. F. Products Division of		82170	Fairchild Camera & Inst. Corp.	
60741	Triplett Electric Inst. Co.	Bluffton, Ohio		Amphenol-Borg Electronic Corp.		82170	Space & Defense Systems Div., Paramus, N. J.	
61775	Union Switch and Signal Div. of		74970	E. F. Johnson Co.	Danbury, Conn.	82209	Magurie Industries, Inc.	Greenwich, Conn.
62143	Westinghouse Air Brake Co.	Pittsburgh, Pa.	75042	International Resistance Co.	Philadelphia, Pa.	82219	Thomas Electric Prod., Inc.	
63719	Universal Electric Co.	Owosso, Mich.	75263	Keystone Carbon Co., Inc.	St. Marys, Pa.		Electronic Tube Division	Emporium, Pa.
64959	Ward-Leonard Electric Co.	Mt. Vernon, N. Y.	75378	CTS Knights, Inc.	Sandwich, Ill.	82376	Astron Corp.	East Newark, Harrison, N. J.
65092	Western Electric Co., Inc.	New York, N. Y.	75382	Kulka Electric Corp.	Mt. Vernon, N. Y.	82389	Switchcraft, Inc.	Chicago, Ill.
66295	Weston Inst. Inc.	Weston-Newark, Newark, N. J.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.	82647	Metals & Controls Inc.	
66346	Witek Mfg. Co.	Chicago, Ill.	75915	Littlefuse, Inc.	Des Plaines, Ill.		Spencer Products	Attleboro, Mass.
	Minnesota Mining & Mfg. Co.		76005	Lord Mfg. Co.	Erie, Pa.	82768	Phillips-Advance Control Co.	Joliet, Ill.
	Revere Mincom Div.	St. Paul, Minn.	76210	C. W. Marwedel	San Francisco, Cal.	82866	Research Products Corp.	Madison, Wis.
70276	Allen Mfg. Co.	Hartford, Conn.	76433	General Instrument Corp.		82877	Rolton Mfg. Co., Inc.	Woodstock, N. Y.
70309	Allied Control	New York, N. Y.	76487	Micamold Division	Newark, N. J.	82893	Vector Electronic Co.	Glendale, Cal.
70318	Allmetal Screw Product Co., Inc.		76493	James Millen Mfg. Co., Inc.	Malden, Mass.	83058	Carr Fastener Co.	Cambridge, Mass.
			76530	J. W. Miller Co.	Los Angeles, Cal.	83086	New Hampshire Ball Bearing, Inc.	Peterborough, N. H.
70417	Amplex, Div. of Chrysler Corp.	Detroit, Mich.		Cinch-Monadnock, Div. of United Carr Fastener Corp.	San Leandro, Cal.	83125	General Instrument Corp.	
70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	76545				Capacitor Div.	Darlington, S. C.
70563	Amperite Co., Inc.	Union City, N. J.	76545	Mueller Electric Co.	Cleveland, Ohio	83148	ITT Wire and Cable Div.	Los Angeles, Cal.
70674	ADC Products Inc.	Minneapolis, Minn.	76703	National Union	Newark, N. J.	83186	Victory Eng. Corp.	Springfield, N. J.
70903	Belden Mfg. Co.	Chicago, Ill.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.	83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.
70998	Bird Electric Corp.	Cleveland, Ohio	77068	The Bendix Corp.		83315	Hubbell Corp.	Mundelein, Ill.
71002	Birnbach Radio Co.	New York, N. Y.		Electrodynamics Div.	N. Hollywood, Cal.	83324	Rosan Inc.	Newport Beach, Cal.
71034	Bliley Electric Co., Inc.	Erie, Pa.	77075	Pacific Metals Co.	San Francisco, Cal.	83330	Smith, Herman H., Inc.	Brooklyn, N. Y.
71041	Boston Gear Works Div. of		77221	Phaotran Instrument and Electronic Co.	So. Pasadena, Cal.	83332	Tech Labs	Palisades Park, N. J.
	Murray Co. of Texas	Quincey, Mass.	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.	83385	Central Screw Co.	Chicago, Ill.
71218	Bud Radio, Inc.	Willoughby, Ohio	77342	American Machine & Foundry Co.		83501	Gavitt Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.
71279	Cambridge Thermionics Corp.	Cambridge, Mass.		Potter & Brumfield Div.	Princeton, Ind.	83594	Burroughs Corp., Electronic Tube Div.	Plainfield, N. J.
71286	Camloc Fastener Corp.	Paramus, N. J.	77630	TRW Electronic Components Div.	Camden, N. J.	83740	Union Carbide Corp., Consumer Prod. Div.	New York, N. Y.
71313	Cardwell Condenser Corp.		77638	General Instrument Corp., Rectifier Division	Brooklyn, N. Y.	83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
71400	Bussmann Mfg. Div. of McGraw-Edison Co.	St. Louis, Mo.	77764	Resistance Products Co.	Harrisburg, Pa.	83821	Loyd Scruggs Co.	Festus, Mo.
71436	Chicago Condenser Corp.	Chicago, Ill.	77969	Rubbercraft Corp. of Calif.	Torrance, Cal.	83942	Aeronautical Inst. & Radio Co.	Lodi, N. J.
71447	Calif. Spring Co., Inc.	Pico-Rivera, Cal.	78189	Shakeproof Division of Illinois Tool Works	Elgin, Ill.	84171	Arco Electronics Inc.	Great Neck, N. Y.
71450	CTS Corp.	Elkhart, Ind.	78277	Sigma	So. Braintree, Mass.	84396	A. J. Glesener Co., Inc.	San Francisco, Cal.
71468	ITT Cannon Electric Inc.	Los Angeles, Cal.	78283	Signal Indicator Corp.	New York, N. Y.	84411	TRW Capacitor Div.	Ogallala, Neb.
71471	Cinema, Div. Aerovox Corp.	Burbank, Cal.	78290	Struthers-Dunn Inc.	Pitman, N. J.			

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkes Tarzian, Inc.	Bloomington, Ind.	91929	Honeywell Inc., Micro Switch Division	Freeport, Ill.	96095	Hi-Q Div. of Aerovox Corp.	Olean, N.Y.
85454	Boonton Molding Company	Boonton, N.J.	91961	Nahn-Bros. Spring Co.	Oakland, Cal.	96256	Thordarson-Meissner Inc.	Mt. Carmel, Ill.
85471	A. B. Boyd Co.	San Francisco, Cal.	92180	Tru-Connector Corp.	Peabody, Mass.	96296	Solar Mfg. Co.	Los Angeles, Cal.
85474	R. M. Bracamonte & Co.	San Francisco, Cal.	92367	Elgeet Optical Co., Inc.	Rochester, N.Y.	96396	Microswitch, Div. of Minn.-Honeywell	Freeport, Ill.
85660	Kolled Kords, Inc.	Hamden, Conn.	92607	Tensolite Insulated Wire Co., Inc.	Tarrytown, N.Y.	96330	Carlton Screw Co.	Chicago, Ill.
85911	Seamless Rubber Co.	Chicago, Ill.	92702	IMC Magnetics Corp.	Westbury, L.I., N.Y.	96341	Microwave Associates, Inc.	Burlington, Mass.
86174	Fafnir Bearing Co.	Los Angeles, Calif.	92966	Hudson Lamp Co.	Kearney, N.J.	96501	Excel Transformer Co.	Oakland, Cal.
86197	Clifton Precision Products Co., Inc.	Clifton Heights, Pa.	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	96508	Xcelite, Inc.	Orchard Park, N.Y.
86579	Precision Rubber Products Corp.	Dayton, Ohio	93369	Robbins & Myers Inc.	Pallisades Park, N.J.	96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
86684	Radio Corp. of America, Electronic Comp. & Devices Division	Harrison, N.J.	93410	Stemco Controls, Div. of Essex Wire Corp.	Mansfield, Ohio	96881	Thomson Ind. Inc.	Long Island, N.Y.
86928	Seastrom Mfg. Co.	Glendale, Cal.	93632	Waters Mfg. Co.	Culver City, Cal.	97464	Industrial Retaining Ring Co.	Irvington, N.J.
87034	Marco Industries	Anaheim, Cal.	93929	G. V. Controls	Livingston, N.J.	97539	Automatic & Precision Mfg.	Englewood, N.J.
87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	94137	General Cable Corp.	Bayonne, N.J.	97979	Reon Resistor Corp.	Yonkers, N.Y.
87473	Western Fibrous Glass Products Co.	San Francisco, Cal.	94144	Raytheon Co., Comp. Div., Ind. Comp. Operations	Quincy, Mass.	97983	Litton System Inc., Adler-Westrex Commun. Div.	New Rochelle, N.Y.
87664	Van Waters & Rogers Inc.	San Francisco, Cal.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	98141	R-Tronics, Inc.	Jamaica, N.Y.
87930	Tower Mfg. Corp.	Providence, R.I.	94154	Wagner Elect. Corp., Tung-Sol Div.	Newark, N.J.	98159	Rubber Teck, Inc.	Gardena, Cal.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94197	Curtiss-Wright Corp., Electronics Div.	East Patterson, N.J.	98220	Hewlett-Packard Co., Medical Elec. Div.	Pasadena, Cal.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94222	South Chester Corp.	Chester, Pa.	98278	Microdot, Inc.	So. Pasadena, Cal.
88698	General Mills, Inc.	Buffalo, N.Y.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98291	Sealectro Corp.	Mamaronech, N.Y.
89231	Graybar Electric Co.	Oakland, Cal.	94375	Automatic Metal Products Co.	Brooklyn, N.Y.	98376	Zero Mfg. Co.	Burbank, Cal.
89473	G. E. Distributing Corp.	Schenectady, N.Y.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	98410	Etc Inc.	Cleveland, Ohio
89479	Security Co.	Detroit, Mich.	94696	Magnecraft Electric Co.	Chicago, Ill.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
89665	United Transformer Co.	Chicago, Ill.	95023	George A. Philbrick Researchers, Inc.	Boston, Mass.	98734	Paeco Division of Hewlett-Packard Co.	Palo Alto, Cal.
90030	United Shoe Machinery Corp.	Beverly, Mass.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	98821	North Hills Electronics, Inc.	Glen Cove, N.Y.
90179	U. S. Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N.J.	95236	Allies Products Corp.	Dania, Fla.	98978	International Electronic Research Corp.	Burbank, Cal.
90365	Belleville Speciality Tool Mfg., Inc.	Belleville, Ill.	95238	Continental Connector Corp.	Woodside, N.Y.	99109	Columbia Technical Corp.	New York, N.Y.
90763	United Carr Fastener Corp.	Chicago, Ill.	95263	Leecraft Mfg. Co., Inc.	Long Island, N.Y.	99313	Varian Associates	Palo Alto, Cal.
90970	Bearing Engineering Co.	San Francisco, Cal.	95265	National Coil Co.	Sheridan, Wyo.	99378	Atlee Corp.	Winchester, Mass.
91146	ITT Cannon Elect. Inc., Salem Div.	Salem, Mass.	95275	Vitramon, Inc.	Bridgeport, Conn.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
91260	Connor Spring Mfg. Co.	San Francisco, Cal.	95348	Gordos Corp.	Bloomfield, N.J.	99707	Control Switch Division, Controls Co. of America	El Segundo, Cal.
91345	Miller Dial & Nameplate Co.	El Monte, Cal.	95354	Method Mfg. Co.	Rolling Meadows, Ill.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
91418	Radio Materials Co.	Chicago, Ill.	95566	Arnold Engineering Co.	Marengo, Ill.	99848	Wilco Corporation	Indianapolis, Ind.
91506	Augat Inc.	Attleboro, Mass.	95712	Dage Electric Co., Inc.	Franklin, Ind.	99928	Branson Corp.	Whippany, N.J.
91637	Dale Electronics, Inc.	Columbus, Nebr.	95984	Siemon Mfg. Co.	Wayne, Ill.	99934	Rembrandt, Inc.	Boston, Mass.
91662	Elco Corp.	Willow Grove, Pa.	95987	Weckesser Co.	Chicago, Ill.	99942	Hoffman Electronics Corp., Semiconductor Division	El Monte, Cal.
91673	Epiphone Inc.	New York, N.Y.	96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.	99957	Technology-Instrument Corp. of California	Newbury Park, Cal.
91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.						
91827	K F Development Co.	Redwood City, Cal.						
91886	Malco Mfg., Inc.	Chicago, Ill.						

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado Springs Div.	Colorado Springs, Colorado	000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N.J.	000MM	Rubber Eng. & Development	Hayward, Cal.	000WW	California Eastern Lab	Burlington, Cal.
000AB	ETA	England	000NN	A "N" D Mfg. Co.	San Jose, Cal.	000YY	S. K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.						

SUPPLEMENTAL CODE LIST OF MANUFACTURERS

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
12040	National Semiconductor Corp.	Danbury, Connecticut	06810		
23880	Stanford Applied Engineering	Santa Clara, California	95050		

WORLD WIDE SALES & SERVICE OFFICES

UNITED STATES

ALABAMA
8290 Whitesburg Dr. S.E.
P.O. Box 4207
Huntsville 35892
Tel: (205) 881-4591
TWX 810-726-2204
*Birmingham
Medical Service only
Tel: (205) 879-2081

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
TWX 910-951-1331
2424 East Arizon Rd.
Tucson 85706
Tel: (602) 888-4661

CALIFORNIA
1430 East Orangehurst Ave.
Fullerton 92631
Tel: (714) 870-1000
TWX 910-592-1288
3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 777-1282
TWX 910-499-2170
6305 Arizona Place
Los Angeles 90045
Tel: (213) 649-2511
TWX 910-328-6147
*Los Angeles
Tel: (213) 776-7500
3053 Scott Boulevard
Santa Clara 95050
Tel: (408) 249-7000
TWX 910-338-0518
*Ridgcrest
Tel: (714) 445-6165
2232 Wom Ave.
Sacramento 95825
Tel: (916) 482-1463
9606 Aero Drive
P.O. Box 73332
San Diego 92123
Tel: (714) 279-3200
TWX 910-335-2000

COLORADO
5600 South Ulster Parkway
Englewood 80110
Tel: (303) 777-3455
TWX 910-935-0705
CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX 710-465-2079

FLORIDA
P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX 510-955-4099
*Jacksonville
Medical Service only
Tel: (904) 725-6333
P.O. Box 13910
6177 Lake Eleanor Dr.
Orlando 32809
Tel: (305) 859-2900
TWX 810-850-0113
21 East Wright St.
Suite 1
Pensacola 32501
Tel: (904) 434-3081

GEORGIA
P.O. Box 26234
450 Interstate North
Atlanta 30328
Tel: (404) 434-4000
TWX 810-766-4890
HAWAII
2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455
ILLINOIS
(Circulator Only)
300 Wacker Drive
Suite 1100
Chicago 60606
Tel: (312) 436-9701
5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX 910-225-3613
*St. Joseph
Tel: (312) 469-2133

INDIANA
3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX 810-341-3263
IOWA
1902 Broadway
Iowa City 52240
Tel: (319) 338-9466
Night: (319) 338-9467

KANSAS
Derby
Tel: (316) 267-3655
LOUISIANA
P.O. Box 840
3239 Marquette Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX 810-955-5524

MARYLAND
6101 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX 710-862-9157
4 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX 710-828-9685
710-828-4487
P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX 710-828-9684

MASSACHUSETTS
2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455
MICHIGAN
32351 Research Drive
Farmington 48024
Tel: (313) 476-6400
TWX 810-242-2900

MINNESOTA
2400 N. Prior Ave.
Roseville 55113
Tel: (612) 636-0700
TWX 910-563-3734
MISSISSIPPI
Jackson
Medical Service only
Tel: (601) 982-9363

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX 910-771-2087
123 Weston Parkway
Maryland Heights 63043
Tel: (314) 567-1455
TWX 910-764-0830

NEBRASKA
(Medical Only)
11902 Elm Street
Suite 4C
Omaha 68144
Tel: (402) 333-6017
*NEVADA
Las Vegas
Tel: (702) 382-5777
NEW JERSEY
W. 120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX 710-990-2951

NEW MEXICO
P.O. Box 8396
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 265-3713
TWX 910-989-1665
156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX 910-983-0550

NEW YORK
5 Automation Lane
Computer Park
Albany 12205
Tel: (518) 438-1550
TWX 710-441-8270
New York City
Manhattan, Bronx
Contact Paramus, NJ Office
Tel: (201) 265-5000
Brooklyn, Queens, Richmond
Contact Woodbury, NY Office
Tel: (516) 921-0300
201 South Avenue
Poughkeepsie 12601
Tel: (914) 454-7330
TWX 510-248-0012
39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX 510-253-5991
5858 East Mulloy Road
Syracuse 13211
Tel: (315) 455-2486
Columbia 32660
Tel: (803) 282-6493

NORTH CAROLINA
P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX 510-926-1516
OHIO
16300 Sprague Road
Richardson 75080
Tel: (214) 231-6101
TWX 910-867-4723
P.O. Box 27409
6300 Westpark Drive
Suite 100
Houston 77077
Tel: (713) 781-8000
TWX 910-881-2643
1041 Kingsmill Parkway
Columbus 43225
Tel: (614) 436-1041

OKLAHOMA
2400 N. Prior Ave.
Roseville 55113
Tel: (612) 636-0700
TWX 910-563-3734
OREGON
17890 SW Boones Ferry Road
Tualatin 97062
Tel: (503) 620-3350
TWX 910-467-8714
PENNSYLVANIA
117 Zeta Drive
Pittsburgh 15238
Tel: (412) 782-0400
Night: 782-0401
TWX 710-795-3124
1027 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX 910-660-2670

SOUTH CAROLINA
6941 O N. Tremont Road
Columbia 29260
Tel: (803) 782-6493
TENNESSEE
Medical Service only
Tel: (901) 274-7472
*Nashville
Tel: (615) 244-5448
TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX 910-867-4723
P.O. Box 27409
6300 Westpark Drive
Suite 100
Houston 77077
Tel: (713) 781-8000
TWX 910-881-2643
1041 Kingsmill Parkway
Columbus 43225
Tel: (614) 436-1041

UTAH
205 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-8241
TWX 910-671-1170
UTAH
205 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-8241
TWX 910-671-1170
VIRGINIA
Medical Service only
Tel: (804) 497-1026
P.O. Box 9854
2914 Highway Springs Road
Richmond 23228
Tel: (804) 285-3431
TWX 710-956-0157

WASHINGTON
Eastfield Office Pk.
1201 14th St.
Bellevue 98004
Tel: (206) 454-3971
TWX 910-443-2446
WEST VIRGINIA
Charleston
Tel: (304) 345-1640
WISCONSIN
9431 W. Beloit Road
Suite 117
Milwaukee 53227
Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED:
Contact the regional office
nearest you: Atlanta, Georgia
North Hollywood, California
Rockville, Md. (Choke Cherry Rd.)
Maryland, Skokie, Illinois
Their complete addresses
are listed above
*Service Only

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11748 Kingsway Ave.
Edmonton T5G 0X5
Tel: (403) 452-3670
*TWX 610-831-2431
Hewlett-Packard (Canada) Ltd.
915-42 Avenue S.E. Suite 102
Calgary T2G 1Z
Tel: (403) 287-1672

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
837 E. Cordova Street
Vancouver V6A 3P2
Tel: (604) 254-0531
*TWX 610-902-5059
Hewlett-Packard (Canada) Ltd.
915-42 Avenue S.E. Suite 102
Calgary T2G 1Z
Tel: (403) 287-1672

MANITOBA
Hewlett-Packard (Canada) Ltd.
513 Century St.
St. James
Winnipeg R3H 0L8
Tel: (204) 786-7581
TWX 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
800 Windmill Road
Dartmouth B3C 1L1
Tel: (902) 499-7820

ONTARIO
Hewlett-Packard (Canada) Ltd.
1785 Woodward Dr.
Ottawa K2C 0P9
Tel: (613) 225-5530
TWX 610-562-8968
Hewlett-Packard (Canada) Ltd.
6917 Goreway Drive
Mississauga L4V 1L9
Tel: (416) 678-9430
TWX 610-492-4245

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Blvd.
Pointe Claire H9R 1G7
Tel: (514) 697-4232
TWX 610-422-3022
TLX 05-821521 HPCQL

Hewlett-Packard (Canada) Ltd.
2376 Galtway Street
Ste-Foy G1N 4G4
Tel: (418) 688-6710

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada)
Ltd. in Mississauga

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina
S.A.C. s.r.l.
Luzerne 1771-3, Piso
Buenos Aires
Tel: 35-0436, 35-0627, 35-0341
Telex 012-1009
Cable: HEWPACK ARG
BOLIVIA
Stambuk & Marx (Bolivia) Ltda.
Av. Mariscal Santa Cruz 1342
La Paz
Tel: 40026, 51163, 52421
Telex 3560014
Cable: BUKMAR
BRAZIL
Hewlett-Packard do Brasil
I.E.C. Ltda.
Rua Frei Caneca, 1152-Bela Vista
01307-Sao Paulo-SP
Tel: 288-7111, 287-8120
287-6193
Telex 309151 2.3
Cable: HEWPACK Sao Paulo

Hewlett-Packard do Brasil
I.E.C. Ltda.
Praça Dom Feliciano, 78-8
andar (Sala 808-8)
0000-Porto Alegre-RS
Tel: 25-8470-DDD (0512)
Cable: HEWPACK Porto Alegre
Hewlett-Packard do Brasil
I.E.C. Ltda.
Rua Siqueira Campos, 53-4
andar, Copacabana
2000-Rio de Janeiro-GB
Tel: 257-80-94-DDD (021)
Telex 2100 79 HEWPACK
Cable: HEWPACK
- Rio de Janeiro
CHILE
Calcarpe y Melcarpe Ltda.
Calle Liza 81, Oficina 5
Casilla 2118
Santiago
Tel: 398613
Cable: CALMET

COLOMBIA
Instrumentación
Hernix A. Langebæk & Kier S.A.
Carretera N.º 48-59
Apartado Aéreo 5287
Bogotá, D.E.
Tel: 45-78-06, 45-55-46
Cable: AAKS Bogotá
Telex 44400INSTCO
COSTA RICA
Lic. Alfredo Gallegos Gurdian
Apartado 10159
San José
Tel: 21-86-13
Cable: GALGUR San José
GUATEMALA
IPESA
Avenida La Reforma 3-48
Zona 9
Guatemala
Tel: 63627, 64736
Telex 4192 TELTRO GU

MEXICO
Hewlett-Packard Mexicana
S.A. de C.V.
Torres Adair N.º 21-11 Piso
Col. del Valle
Mexico 12 D.F.
Tel: (055) 547-0232
Telex 017-74-507
Hewlett-Packard Mexicana
S.A. de C.V.
Ave. Constitución N.º 2184
Monterrey, N.L.
Tel: 46-71-32, 46-71-84
NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA
Electrónica Babco S.A.
P.O. Box 4929
Cable: SAMUL Lewis
Ciudad de Panamá
Tel: 64-2700
Telex 3431103 Curunda
Canal Zone
Cable: ELECTRON Panama
PARAGUAY
Z. J. Melamet S.R.L.
Division Aparatos y Equipos
Medicos
Division Aparatos y Equipos
Scientificos y de
Investigacion
P.O. Box 676
Chile, 482 Edificio Victoria
Asuncion
Tel: 4-5069, 4-6272
Cable: RAMEL

PERU
Compañía Electro Médica S.A.
Ave. Enrique Canales 372
San Isidro
Casilla 1030
Lima
Tel: 22-3900
Cable: ELMED Lima
PUERTO RICO
San Juan Electronics, Inc.
P.O. Box 5187
Ponce de León 354
Bd. 3 PTA de Tierra
San Juan 00908
Tel: (809) 725-3342, 722-2342
Cable: SATRONICS San Juan
Telex: SATRON 3450 333
URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370

Venezuela
Hewlett-Packard de Venezuela
C.A.
Apartado 50933
Edificio Segre
Torre Transparencia
Los Rucos Norte
Caracas 107
Tel: 535-0311
Telex 21146 HEWPACK
Cable: HEWPACK Caracas
FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard
Inter-Américas
3200 Millview Ave.
Palo Alto, California 94304
Tel: (415) 493-1501
Telex 910-323-1260
Cable: HEWPACK Palo Alto
Telex 034-8300, 034-8493

EUROPE

AUSTRIA
Hewlett-Packard Ges.m.b.H.
Mendelssohn 52.3
P.O. Box 7
A-1205 Vienna
Tel: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex 75923 HEWPAK A

BELGIUM
Hewlett-Packard Benelux
S.A. N.V.
Avenue de Col-Ven 1
(Grootenkraaijnen)
B-1170 Brussels
Tel: (02) 617 22 42
Cable: PALUBEN Brussels
Telex 23 494 paloben br

DENMARK
Hewlett-Packard A/S
Ostervang 5
DK-3450 Birkerød
Tel: (01) 81 66 40
Cable: HEWPAK AS
Telex 166 45 hp as

Hewlett-Packard A/S
Alverne 1
DK-8500 Silkeborg
Tel: (06) 82 71 66
Telex 765 40 hp as
Cable: HEWPAK AS

FINLAND
Hewlett-Packard Oy
Rauhajoukkie 5
P.O. Box 6
SF-00271 Helsinki 21
Tel: 6923031
Cable: HEWPAK Oy Helsinki
Telex 12 1363

FRANCE
Hewlett-Packard France
Agence Régionale
Quartier de Courbevoie
Boite Postale No. 6
92400 Orsay
Tel: (1) 907 78 28
Cable: HEWPAK Orsay
Telex 60048

Hewlett-Packard France
Agence Régionale
Chemin des Moulins
Route Postale No. 12
69430 Ecully
Tel: (1) 93 61 25
Telex 91 61 27

SALES & SERVICE OFFICES (CONT'D)

HEWLETT-PACKARD FRANCE
Agence Regionale
Zone Aeronautique
Avenue de la Republique
F-91170 Colomiers
Tel: 01 78 11 55
Telex: 51957

HEWLETT-PACKARD FRANCE
Agence Regionale
Centre d'aviation generale
F-13721 Aeroport de
Marignane
Tel: 91 92 12 36
TWX: 41770 F

HEWLETT-PACKARD FRANCE
Agence Regionale
63 Avenue de Rochester
F-35000 Rennes
Tel: 74912 F
Telex: 74 912 F

HEWLETT-PACKARD FRANCE
Agence Regionale
74 Allée de la Robertsau
F-67000 Strasbourg
Tel: 88 55 23 20 21
Telex: 88141
Cable: HEWPAK STRBG

GERMAN FEDERAL REPUBLIC
HEWLETT-PACKARD GMBH
Vertriebsstelle Frankfurt
Bismarckstrasse 117
Postfach 560 140
D-6009 Frankfurt 56
Tel: 0611 50 04 1
Cable: HEWPAKSA Frankfurt
Telex: 41 32 48 1/6

HEWLETT-PACKARD GMBH
Vertriebsstelle Bielefeld
Hendelstrasse 110
D-33501 Bielefeld
Tel: 0531 66 72 87
Cable: HEWPAK Bielefeld
Telex: 72 65 739 bbn

HEWLETT-PACKARD GMBH
Vertriebsstelle Düsseldorf
Vogelsanger Weg 38
D-4000 Düsseldorf
Tel: 0211 65 80 11 5
Telex: 85 86 533 hdd d

HEWLETT-PACKARD GMBH
Vertriebsstelle Hamburg
Wendlandstrasse 23
D-2000 Hamburg 1
Tel: 040 24 13 95
Cable: HEWPAKSA Hamburg
Telex: 21 63 032 hdd d

HEWLETT-PACKARD GMBH
Vertriebsstelle Hannover
Meinertstrasse 3
D-3000 Hannover-Kleefeld
Tel: 0511 55 60 46
Telex: 092 3259

HEWLETT-PACKARD GMBH
Vertriebsstelle Nürnberg
Hirschgasse 42
D-9100 Nürnberg
Tel: 0911 57 10 66
Telex: 523 889

HEWLETT-PACKARD GMBH
Vertriebsstelle München
Unterföhringer Strasse 28
ISAR Center
D-8012 Ottobrunn
Tel: 089 601 30 61 7
Telex: 52 49 85
Cable: HEWPAKSA München
(West Berlin)

HEWLETT-PACKARD GMBH
Vertriebsstelle Berlin
Kottbusstrasse 24
D-1000 Berlin 40
Tel: 030 24 90 86
Telex: 18 34 00 nhd d

GREECE
Kostas Karayannis
18 Ermou Street
G.P. Athens 126
Tel: 3230 303 Sales SVC
3230 305 Adm. Order Proc
Cable: RAKAR Athens
Tel: 21 59 62 141 97
HEWLETT-PACKARD S.A.
Mediteranean & Middle East
Operations
35 Kolonakion Street
P.O. Box 141
G.P. Athens 115
Tel: 8080337 8080355
Tel: 8080479 8018893
Tel: 21 6588
Cable: HEWPAKSA Athens

IRELAND
HEWLETT-PACKARD LTD
King Street Lane
Mullingham
GB-Berkshire RG11 5AR
Tel: 0911 57 10 66
Telex: 847178 848179
HEWLETT-PACKARD LTD
The Grange
Stamford New Road
GB-Altrincham Cheshire
Tel: 061 528 9021
Telex: 658086

ITALY
HEWLETT-PACKARD S.p.A.
Via Amerigo Vesputio 2
I-20124 Milan
Tel: 02 6251 10 10
Cable: HEWPAKIT Milan
Telex: 32046
HEWLETT-PACKARD Italiana S.p.A.
Via Pietro Maroncelli 40
(ang. Via Varesini)
I-35100 Padova
Tel: 06 42 62 66 31 88
Telex: 32046 via Milan

HEWLETT-PACKARD Italiana S.p.A.
Via Metastasio 2 Orto 2
I-56100 Pisa
Tel: 050 500022
Telex: 32046 via Milan
HEWLETT-PACKARD S.p.A.
Via G. Arminio 10
I-00143 Rome-Eur
Tel: 06 5912544 5
Telex: 61514
Cable: HEWPAKIT Rome
HEWLETT-PACKARD Italiana S.p.A.
Via San Geronimo 46
I-01121 Turin
Tel: 011 53 82 64
Telex: 32046 via Milan

LUXEMBURG
HEWLETT-PACKARD Benelux S.A.N.V.
Avenue de Col-Vent 1
Weertdreef 117
B-1050 Brussels
Tel: 021 612 22 40
Cable: PALOEN Brussels
Telex: 23 484

NETHERLANDS
HEWLETT-PACKARD Benelux N.V.
Weertdreef 117
B-1050 Brussels
Tel: 021 612 22 40
Cable: PALOEN Brussels
Telex: 23 484

NETHERLANDS
HEWLETT-PACKARD Benelux N.V.
Weertdreef 117
B-1050 Brussels
Tel: 021 612 22 40
Cable: PALOEN Brussels
Telex: 23 484

NORWAY
HEWLETT-PACKARD Norge A.S.
Nevinsgt. 13
Box 149
N-1344 Haslum
Tel: 0231 83 60
Telex: 16621 hpnas n

PORTUGAL
Tecnica Empresa Tecnica de
Equipamentos Electronicos S.A. Lda
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 01 98 18 21
Cable: TELCTRA Lisbon
Telex: 12598

SPAIN
HEWLETT-PACKARD Espanola S.A.
Jerez No. 3
E-Madrid 16
Tel: 438 10 00
Telex: 23515 hpe
HEWLETT-PACKARD Espanola S.A.
Majestado 21-23
E-Barcelona 17
Tel: 03 203600-08
204098 9
Telex: 32003 hnd e
HEWLETT-PACKARD Espanola S.A.
Av. Ramon y Cajal 1
Edificio Sevilla 1 planta 9
E-Sevilla
Tel: 94 44 54 58

HEWLETT-PACKARD Espanola S.A.
Edificio Sevilla 1 planta 9
E-Sevilla
Tel: 94 44 54 58

SWEDEN
HEWLETT-PACKARD Sverige AB
Engelstegen 1-3
Fack
S-161 20 Bromma 20
Tel: 08 750 05 00
Cable: HMASJERMENTS
Stockholm
Telex: 10721
HEWLETT-PACKARD Sverige AB
Hälsjögränd 52
S-431 41 Mölndal
Tel: 031 27 68 00 01
Telex: Via Bromma

SWITZERLAND
HEWLETT-PACKARD (Schweiz) AG
Zürcherstrasse 20
P.O. Box 94
CH-8952 Schlieren Zurich
Tel: 01 98 18 21
Cable: HPAG CH
Telex: 53933 hpsg
HEWLETT-PACKARD (Schweiz) AG
9 chemin Louis-Pictet
CH-1214 Vernier Geneva
Tel: 0221 41 49 50
Cable: HEWPAKSA Geneva
Telex: 27 333 npsa ch

TURKEY
HEWLETT-PACKARD Engineering Bureau
Saglik Sok. No. 15 1
Ayvazpaşa Beyoğlu
P.O. Box 437 Beyoğlu
TR-Istanbul
Tel: 49 40 40
Cable: TELEMAST Istanbul

UNITED KINGDOM
HEWLETT-PACKARD LTD
King Street Lane
Mullingham
GB-Berkshire RG11 5AR
Tel: 0911 57 10 66
Telex: 847178 848179
HEWLETT-PACKARD LTD
The Grange
Stamford New Road
GB-Altrincham Cheshire
Tel: 061 528 9021
Telex: 658086

HEWLETT-PACKARD LTD
c/o Makro
South Service Wholesale Centre
Amber Way
Halesowen Industrial Estate
GB-Halesowen Worcs
Tel: Birmingham 7860

HEWLETT-PACKARD LTD
c/o Makro
South Service Wholesale Centre
Amber Way
Halesowen Industrial Estate
GB-Halesowen Worcs
Tel: Birmingham 7860

HEWLETT-PACKARD LTD
4th Floor
Wedge House
799 London Road
GB-Thornton Heath CR4 6XL
Surrey
Tel: 071 684 0105
Telex: 945825
HEWLETT-PACKARD LTD
c/o Makro
South Service Wholesale Centre
Amber Way
Halesowen Industrial Estate
GB-Halesowen Worcs
Tel: Birmingham 7860

HEWLETT-PACKARD LTD
c/o Makro
South Service Wholesale Centre
Amber Way
Halesowen Industrial Estate
GB-Halesowen Worcs
Tel: Birmingham 7860

USSR
HEWLETT-PACKARD
Representative Office USSR
Miner Buzdakov Royn 201
Petrovsky Linn 2 18
Moscow
Tel: 221-79-71

YUGOSLAVIA
Iskra Standard Hewlett-Packard
Promiska 58 3
61000 Ljubljana
Tel: 314561 or 314927
Telex: 31300

SOCIALIST COUNTRIES
PLEASE CONTACT:
HEWLETT-PACKARD S.A.
7 rue du Bois-du-Lan
P.O. Box 349
CH-1217 Meyrin 1 Geneva
Switzerland
Tel: 022 41 54 00
Cable: HEWPAKSA Geneva
Telex: 2 24 85

AFRICA, ASIA, AUSTRALIA

ANGOLA
Teletra
Empresa Tecnica de
Equipamentos
Electronicos S.A. R.L.
R. Barbosa Rodrigues 42-1 DT
Caxa Postal 648 Luanda
Tel: 25515 6
Cable: TELETRA Luanda

AUSTRALIA
HEWLETT-PACKARD Australia Pty. Ltd.
31-41 Joseph Street
Blackburn Victoria 3130
Tel: 89-6351 89-6306
Telex: 31-024
Cable: HEWPAK Melbourne
HEWLETT-PACKARD Australia Pty. Ltd.
31 Bridge Street
Pymble
New South Wales 2073
Tel: 449-6556
Cable: HEWPAK Sydney
HEWLETT-PACKARD Australia Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 44-8151
Cable: HEWPAK Adelaide
HEWLETT-PACKARD Australia Pty. Ltd.
141 Shering Highway
Nedlands W.A. 6009
Tel: 86-5455
HEWLETT-PACKARD Australia Pty. Ltd.
121 Wellington Street
Fyshwick A.C.T. 2609
Tel: 95-3733
HEWLETT-PACKARD Australia Pty. Ltd.
5th Floor
Teachers Union Building
895-899 Boundary Street
Spring Hill 4000 Queensland
Tel: 26-1544
Telex: 44-2133

CEYLON
United Electricals Ltd
P.O. Box 681
60 Park St
Colombo 2
Tel: 26696
Cable: MOTPOINT Colombo

INDIA
Blue Star Ltd
Kasturi Buildings
Jamaiah Tani Bldg
Bombay 400 020
Tel: 29 50 21
Telex: 3751
Cable: BLUESTAR
Blue Star Ltd
Sahas
474-2 Viji Sankar Marg
Pune
Bombay 400 025
Tel: 35 75 87
Telex: 4033
Cable: FROSTBLUE
Blue Star Ltd
Band Box House
Prabhadar
Bombay 400 025
Tel: 35 75 87
Telex: 3751
Cable: BLUESTAR
Blue Star Ltd
14-40 Civil Lines
Kampur 208 001
Tel: 6 88 82
Cable: BLUESTAR
Blue Star Ltd
7 Main Street
P.O. Box 506
Calcutta 700 001
Tel: 22-7131
Telex: 455
Cable: BLUESTAR

INDONESIA
BEICA Indonesia P.T.
1st Floor J.L. Cikini Raya 51
Jakarta
Tel: 56038 40369 49886
Telex: 2895 Jakarta
IRAN
Muh Corp International Ltd
Avenue Sorayz 139
P.O. Box 1215
IR-Teheran
Tel: 83 10 35 39
Cable: MULTICORP Tehran
Telex: 2893 mcrn
ISRAEL
Electronics & Engineering
Div. of Motorola Israel Ltd
17 Ben-Gurion Street
Tel-Aviv
Tel: 39901 13 lines
Cable: ISRAEL Tel-Aviv
Telex: 53369

JAPAN
Yokogawa-Hewlett-Packard Ltd
1-59-1 Yoyogi
Shibuya-ku Tokyo
Tel: 03-370-2281 92
Telex: 232-2024 YHP
Cable: YHPMARKET TOK 23-724
Yokogawa-Hewlett-Packard Ltd
Nishi-ibaragi Bldg
2-2-8 Kasuga
Osaka
Tel: 07-761-23 1641
Telex: 5332-385 YHP OSAKA
Yokogawa-Hewlett-Packard Ltd
Nakano Building
No. 24 Nakagaya-cho
Nakamura-ku Nagoya City
Tel: 0521 571-5171
Yokogawa-Hewlett-Packard Ltd
Mito Bldg
2-4-2 Shinjohara-ku
Tokyo
Tel: 0276 23 1641
Telex: 5332-385 YHP OSAKA
Yokogawa-Hewlett-Packard Ltd
Nishi-ibaragi Bldg
2-2-8 Kasuga
Osaka
Tel: 07-761-23 1641
Telex: 5332-385 YHP OSAKA
Yokogawa-Hewlett-Packard Ltd
Nakano Building
No. 24 Nakagaya-cho
Nakamura-ku Nagoya City
Tel: 0521 571-5171
Yokogawa-Hewlett-Packard Ltd
Mito Bldg
2-4-2 Shinjohara-ku
Tokyo
Tel: 0276 23 1641
Telex: 5332-385 YHP OSAKA

KENYA
Technical Engineering Services
P.O. Box 18311
Nairobi Kenya
Tel: 57726
Cable: PROTION
KOREA
American Trading Company
Korea
P.O. Box 1103
Dae Young Bldg 8th Floor
107 Seong-Ro
Chongro-ku Seoul
Tel: 41 lines 73-8924 7
Cable: AMTRACOR Seoul
KUWAIT
Al-Khazaj Trading &
Contracting Co
Al-Son Sheeh
Michael Bldg No. 4
Kuwait
Tel: 42 99 10
Cable: VISCOUNTE
LEBANON
Constantin M. Maronis
Chrysi Bldg 3rd Fl
P.O. Box 7213
Beirut
Tel: 01 220846
Telex: 21114 Leb
Cable: ELECTRONUCLEAR Beirut
LIBERIA
Mushko & Company Ltd
368 Swallow Tower
Rawalpindi
Tel: 15924
Cable: FEMUS Rawalpindi
PHILIPPINES
Electronics Inc.
6th Floor Amalgamated
Development Corp Bldg
Avala Avenue Makati Rizal
Cebu City 1028
Makati Rizal
Tel: 86-18-87 87-76-77
Cable: ELEMEX Manila
MOZAMBIQUE
A.N. Gonçalves Ltd
No. 1 Apt. 14 Av. D. Lúis
Caxa Postal 107
Lourenço Marques
Tel: 27091 27114
Telex: 6-203 Negom Mo
Cable: NEGON
NEW ZEALAND
HEWLETT-PACKARD (N.Z.) Ltd
94-96 Dixon Street
P.O. Box 9443
Courtney Place
Wellington
Tel: 35-359
Telex: 8698
Cable: HEWPAK Wellington
HEWLETT-PACKARD (N.Z.) Ltd
Pakuranga Professional Centre
267 Pakuranga Highway
Box 51092
Pakuranga
Tel: 564 651
Cable: HEWPAK Auckland
NIGERIA
The Electronics
Instrumentations Ltd
No. 770 Oyo Road
Ouseun House
P.M.B. 5402
Ibadan
Tel: 23225
Cable: INETEL Ibadan
The Electronics Instrumentations Ltd (TEL)
16th Floor Cocoa House
P.M.B. 5402
Ibadan
Tel: 23225
Cable: INETEL Ibadan
PAKISTAN
Mushko & Company Ltd
Osman Chambers
Abdullah Noonan Road
Karachi
Tel: 51927 51927
Cable: COPPERATOR Karachi
TAIWAN
HEWLETT-PACKARD Taiwan
36 Chung Shue West Road
3rd & 4th Floors
Bangkok Sukumvit Ave
Bangkok
Tel: 381600 1 2 375121
Ext. 240 249
Telex: 1P824 HEWPAK
Cable: HEWPAKSA Taipei
HEWLETT-PACKARD Taiwan
38 Po-Ju Lane San Min Dny
Kaohsiung
Tel: 297319
THAILAND
United Electricals Ltd
Eisen Research Building
Bangkok Sukumvit Ave
Bangkok
Tel: 33381 930338
Cable: UNIMESA Bangkok
UGANDA
Uganda Tele-Electric Co. Ltd
P.O. Box 4449
Kampala
Tel: 57279
Cable: COMCO Kampala
VIETNAM
Pentamar Trading Inc
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20-805 93398
Cable: HENTRA SAIGON 242
ZAMBIA
S.J. Tibury (Zambia) Ltd
P.O. Box 2792
Lusaka
Zambia Centre Africa
Tel: 73793
Cable: ARJAYTEE Lusaka
MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN PLEASE CONTACT:
HEWLETT-PACKARD S.A.
7 rue du Bois-du-Lan
P.O. Box 349
CH-1217 Meyrin 1 Geneva
Switzerland
Tel: 022 41 54 00
Cable: HEWPAKSA Geneva
Telex: 2 24 85

BATTERY MODULE 34720A





OPERATING AND SERVICE MANUAL

Manual Part No. 34720-90002
Microfiche Part No. 34720-90052

MODEL 34720A BATTERY MODULE

The main body of this instruction manual applies to

Serial Number 1224A00101

and higher. Any changes made in instruments having serial numbers higher than the above number are, or will be, integrated into the manual by page revision as they occur. Revised pages are identified by a revision letter in the lower corner of the page. You may receive subsequent revised pages by returning the questionnaire in the front of the manual with the appropriate square marked. If a change is made that does not apply to all previously manufactured instruments, backdating information in Section VIII adapts the manual to the earlier instruments.

Copyright Hewlett-Packard Company 1972
P. O. Box 301, Loveland, Colorado 80537 U.S.A.

NAME _____

COMPANY _____

JOB TITLE _____

ADDRESS _____

ADDITIONAL COMMENT

IMPORTANT

Occasionally this manual, or parts thereof will be revised due to engineering changes, specification changes or to correct errors in the manual. If you would like to receive revised pages to update your manual, please complete the top of this form and return it to us. Just complete, fold and staple or tape and mail. No postage is required if mailed in the United States.

This publication represents our latest effort in improving the quality of our instruction manuals. We would like to know what you think of it and how you feel we can better serve your needs. Will you give us a few minutes of your time by completing the questionnaire on the reverse side?

ADDITIONAL COMMENT

— FIRST FOLD

— SECOND FOLD

FIRST CLASS
PERMIT NO. 37
LOVELAND, COLORADO

BUSINESS REPLY MAIL

NO POSTAGE STAMP NECESSARY IF MAILED IN UNITED STATES

POSTAGE WILL BE PAID BY

HEWLETT-PACKARD COMPANY
LOVELAND DIVISION, Dept. 4169
P.O. BOX 301
LOVELAND, COLORADO 80537
U.S.A.



Model 34720A

To further improve the Hewlett-Packard instrument documentation, we would appreciate your comments on this manual. Please check yes or no to the following questions. Add any comments you wish. If more room is desired, additional comments may be added on the back of this questionnaire. When completed, tear on perforated line, fold, staple and mail.

- | | |
|--|-----------|
| 1. Would you like to see more applications information in the manual? | YES _____ |
| COMMENT _____ | NO _____ |
| 2. Is a detailed theory of operation necessary? | YES _____ |
| COMMENT _____ | NO _____ |
| 3. Are the performance checks and adjustment procedures clear as to the procedure and to the specification they are to verify? | YES _____ |
| COMMENT _____ | NO _____ |
| 4. Would you like to see a condensed adjustment procedure included? | YES _____ |
| COMMENT _____ | NO _____ |
| 5. Would you like to see the performance checks and adjustment procedures combined? | YES _____ |
| COMMENT _____ | NO _____ |
| 6. Would a more complete list of hardware be beneficial? | YES _____ |
| COMMENT _____ | NO _____ |
| 7. Are exploded views useful? | YES _____ |
| COMMENT _____ | NO _____ |
| 8. Is the troubleshooting section of this manual adequate? | YES _____ |
| COMMENT _____ | NO _____ |
| 9. Do you like and use the troubleshooting trees? | YES _____ |
| COMMENT _____ | NO _____ |
| 10. Are the schematic diagrams clearly illustrated and easy to follow? | YES _____ |
| COMMENT _____ | NO _____ |
| 11. Would you prefer the assembly outlines on the schematics in color? | YES _____ |
| COMMENT _____ | NO _____ |
| 12. Would you prefer drawings of waveforms and component locators as opposed to photographs; | YES _____ |
| COMMENT _____ | NO _____ |
| 13. Would you prefer to have a separate operating manual and service manual? | YES _____ |
| COMMENT _____ | NO _____ |
| 14. Do you use the red stripe and blue stripe board exchange program? | YES _____ |
| COMMENT _____ | NO _____ |
| 15. Would you like to receive revision pages? | YES _____ |
| COMMENT _____ | NO _____ |
| 16. Does the operating and service manual remain with the instrument? | YES _____ |
| If not, where does it go? _____ | NO _____ |
| 17. In what way do you feel we can most improve this manual? _____ | |
| 18. Do you prefer the loose leaf binder for manuals as opposed to the bound manuals? | YES _____ |
| _____ | NO _____ |
| 19. Do you use change sheets? | YES _____ |
| _____ | NO _____ |

TABLE OF CONTENTS

Section	Page	Section	Page
I. GENERAL INFORMATION	1-1	V. MAINTENANCE	5-1
1-1. Description	1-1	5-1. Introduction	5-1
1-3. Warranty	1-1	5-3. Recommended Test Equipment	5-1
1-5. Specifications	1-1	5-5. Adjusting the Battery Test Meter	5-1
1-7. Accessories Available (See Figure 1-1)	1-1	5-7. General Maintenance Information	5-1
1-8. Instrument and Manual Identification	1-2	5-9. Access to Components	5-2
		5-11. Meter Replacement	5-2
Section	Page	Section	Page
II. INSTALLATION	2-1	VI. REPLACEABLE PARTS	6-1
2-1. Introduction	2-1	6-1. Introduction	6-1
2-3. Initial Inspection	2-1	6-4. Ordering Information	6-1
2-5. Batteries	2-1	6-6. Non-Listed Parts	6-1
2-7. Environmental Requirements	2-1		
2-9. Installation of the Model 34720A	2-1	Section	Page
2-11. Repacking for Shipment	2-2	VII. TROUBLESHOOTING AND	
Section	Page	CIRCUIT DIAGRAMS	7-1
III. OPERATING INSTRUCTIONS	3-1	7-1. Introduction	7-1
3-1. Introduction	3-1	7-3. Troubleshooting	7-1
3-3. Panel Features	3-1	7-5. Battery Circuit Checks	7-1
3-5. Operation	3-1	7-9. Schematic Diagram	7-1
3-6. Line Mode	3-1	7-11. Component Location Diagram	7-1
3-8. Battery	3-1		
3-11. Charge Mode (fast charge)	3-1	APPENDICES	
3-14. Battery Storage	3-3	A. CODE LIST OF MANUFACTURERS	
3-16. Cycle-Life of Nickel-Cadmium Batteries ..	3-3	B. SALES AND SERVICE OFFICES	
Section	Page		
IV. THEORY OF OPERATION	4-1		
4-1. Battery Supplies	4-1		
4-4. Battery Test Circuit (See Figure 4-2)	4-1		
4-6. Nickel-Cadmium Batteries	4-1		

LIST OF ILLUSTRATIONS

Figure	Page
1-1. Accessories Available	1-1
1-2. Instrument Serial Number (on rear panel)	1-2
2-1. Installation of the Model 34720A	2-1
3-1. Front and Rear Panels	3-2
3-2. Battery Charge Acceptance vs. Temperature	3-3
4-1. Typical Battery Supply	4-1
4-2. Battery Test Circuit	4-1
5-1. Battery Location	5-2
7-1. Schematic Diagram, Battery Module	7-3/7-4

LIST OF TABLES

Table	Page
6-1. Replaceable Parts	6-2
7-1. Typical Battery Voltages	7-1

SECTION I

GENERAL INFORMATION

1-1. DESCRIPTION.

1-2. The -hp- Model 34720A Battery Module for the Model 3470 Measurement System connects between a display module and a signal-conditioning module to make the system completely portable. This battery module uses rechargeable nickel-cadmium batteries which, when charged and used according to the instructions in Paragraph 3-11, provide up to 6 hours of operation.

1-3. WARRANTY.

1-4. The Model 34720A Battery Module is covered by a one-year warranty on all parts except the batteries. *The batteries are warranted for six months against failure due to manufacturing defect.*

1-5. SPECIFICATIONS.

1-6. Specifications for the 3470 Measurement System are unchanged from those stated in the Operating and Service Manuals for the separate instruments when operating in a temperature range of 0°C to +50°C.

1-7. ACCESSORIES AVAILABLE (See Figure 1-1).

a. 11456A—Readout Test Card—facilitates testing and troubleshooting the Display Module with the 34720A connected.

b. 18019A—Carrying Case—accommodates a Display Module, a "signal conditioning" module, and the 34720A Battery Module plus the power cord and input cables. A

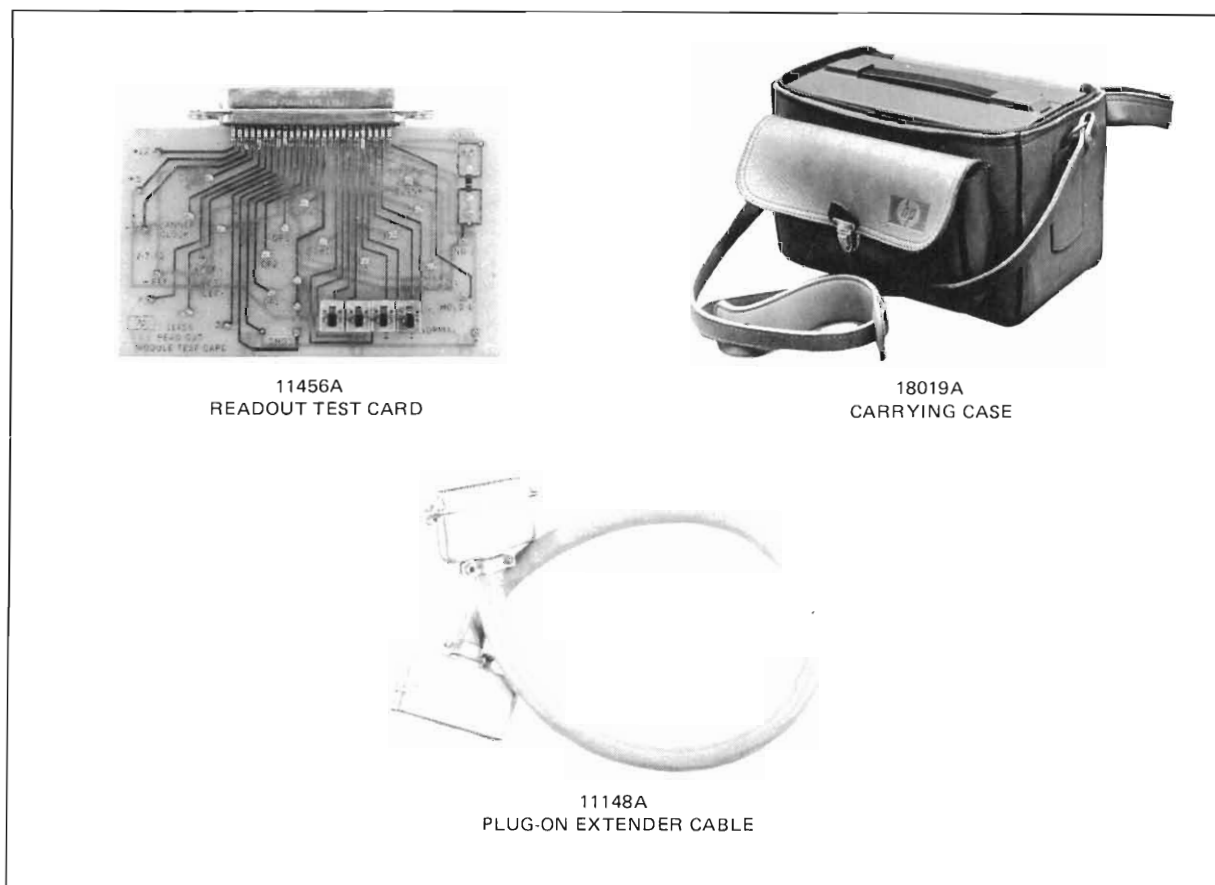


Figure 1-1. Accessories Available.

shoulder strap consisting of a web strap, -hp- Part No. 1440-0075, and a shoulder pad, -hp- Part No. 1440-0097, is available.

c. 11148A—Plug-on Extender Cable—allows the instrument to be operated with the bottom module separated from the battery module.

1-8. INSTRUMENT AND MANUAL IDENTIFICATION.

1-9. A three-section serial number is used to identify your Model 34720A. Figure 1-2 illustrates the meaning of the three parts of the number.

1-10. This manual is kept up to date with revised pages. If the serial number of your instrument is lower than the one on the title page of this manual, refer to the backdating

information in Section VIII which adapts this manual to your instrument. All correspondence with Hewlett-Packard Company should include the complete serial number.

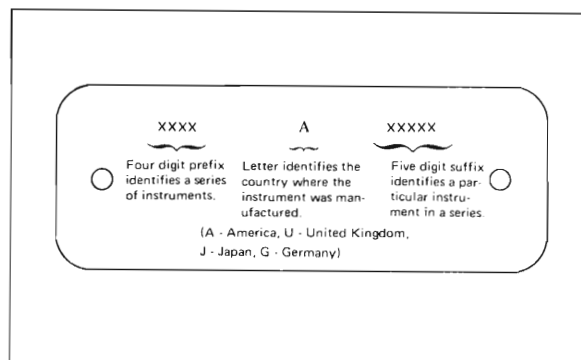


Figure 1-2. Instrument Serial Number (on rear panel).

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information and instructions for the installation and shipping of the Model 34720A. Included are initial inspection procedures, battery information, environmental information, and repackaging for shipment.

2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be free of marks or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage incurred in transit. If the instrument was damaged in transit file a claim with the carrier. If there is damage or deficiency not due to shipping, see the warranty on the reverse side of the title page of this manual.

2-5. BATTERIES.

2-6. Three sets of nickel-cadmium batteries are used in the 34720A Battery Module. They supply nominal voltages of

+ 5 V, + 12 V, and - 12 V. A fully charged pack will operate the instrument for up to 6 hours.

2-7. ENVIRONMENTAL REQUIREMENTS.

2-8. The following temperature limits should be observed:

Operating (discharge):	0°C to + 50°C
Charge:	+ 5°C to + 40°C
Storage:	- 40°C to + 75°C

2-9. INSTALLATION OF THE MODEL 34720A.

2-10. Referring to Figure 2-1, install the Model 34720A between the display module and the bottom module using the following procedure:

a. Separate the display module from the bottom module if they are connected together. This is done by pulling the two side locks on the back of the display module to the rear and lifting the display module from the bottom module.

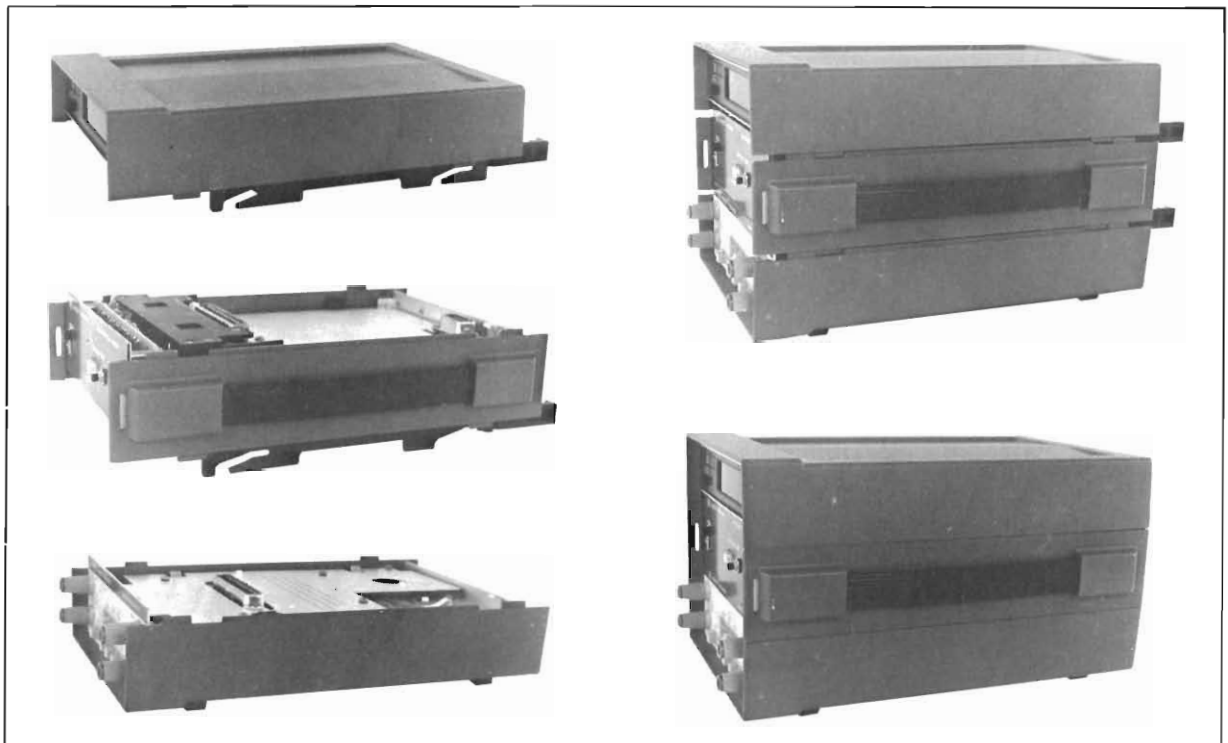


Figure 2-1. Installation of the Model 34720A.

b. Position the display module over the Model 34720A so that the plastic keys on the sides of the two modules interlock.

c. Push the side locks toward the display module. This fastens the two modules together.

d. Pull the side locks on the Model 34720A rearward and connect the bottom module to the 34720A. This can be accomplished in a manner similar to that previously described.

2-11. REPACKING FOR SHIPMENT.

2-12. If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument describing the work to be accomplished and identifying the owner of the instrument. Identify the instrument by serial,

number, model number, and name in any correspondence. If you have any questions, contact your local Hewlett-Packard Sales and Service Office.

2-13. If the original shipping container is to be used, place the instrument in the container with appropriate packing material and seal the container well with strong tape or metal bands.

2-14. If an -hp- container is not to be used, use a heavy carton or wooden box with an inner container. Wrap the instrument with heavy paper or plastic and place cardboard strips across the face for protection before placing the instrument in the inner container. Use packing material around all sides of the inner container and seal the outer container well with strong tape or metal bands. Mark the container with "DELICATE INSTRUMENT" or "FRAGILE."

SECTION III

OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. This section contains operating instructions for the Model 34720A. A display module (Model 34740A or Model 34750A) and a signal-conditioning module such as the Model 34702A are normally connected to the Model 34720A. Also included in this section is identification of controls, indicators, and connectors. The measurement procedure for the 3470 System using a battery module is identical to the procedure without a battery pack.

3-3. PANEL FEATURES.

3-4. Panel features of the instrument are described in Figure 3-1.

3-5. OPERATION.

3-6. Line Mode.

3-7. When the MODE switch is in LINE position (see Figure 3-1), the batteries are not used to power the instrument. However, a trickle charge is applied to the batteries whenever the line cord is connected, whether the power switch on the display module is ON or OFF. This trickle charge is not sufficient to charge the batteries when the instrument is on.

3-8. Battery.

NOTE

The nickel-cadmium batteries used in the 34720A are warranted for six months against failure due to manufacturing defect.

WARNING

Connect the solder lug terminal on the rear of the battery module to earth ground when operating in the battery mode. Otherwise a high voltage breakdown between the input circuit and instrument chassis could be dangerous to the operator.

3-9. Set the MODE switch to the BATTERY position, turn the instrument ON, and press the BATTERY TEST

pushbutton to check the condition of the batteries. Always test the batteries under normal operating load; i.e., with the display and signal-conditioning modules connected, the instrument on, and operating in BATTERY mode. If the BATTERY TEST indicator needle is in the red area, the batteries should be recharged. Refer to Paragraph 3-11 for information regarding charging the batteries. When the batteries are fully charged at normal temperature (25°C), they are capable of supplying up to 6 hours of operation.



Do not discharge the batteries to the point where the battery test indication is to the left of the red area. To do so may cause permanent damage to the batteries.

3-10. The instrument may be operated in the battery mode where the temperature within the battery module is between 0°C and 50°C (32°F to 122°F). The operating temperature within the battery module is normally 5°C (9°F) higher than ambient temperature.


3-11. Charge Mode (fast charge).

NOTE

A trickle charge is maintained on the batteries whenever the line cord is connected to the display module. While this small charging current will help to prevent the batteries from completely discharging, it should not be relied upon to fully charge the batteries.



The nickel-cadmium batteries are hermetically sealed and can be damaged if charged at a fast rate at temperatures above 104°F (40°C). Do not charge at the fast rate for more than 15 hours.

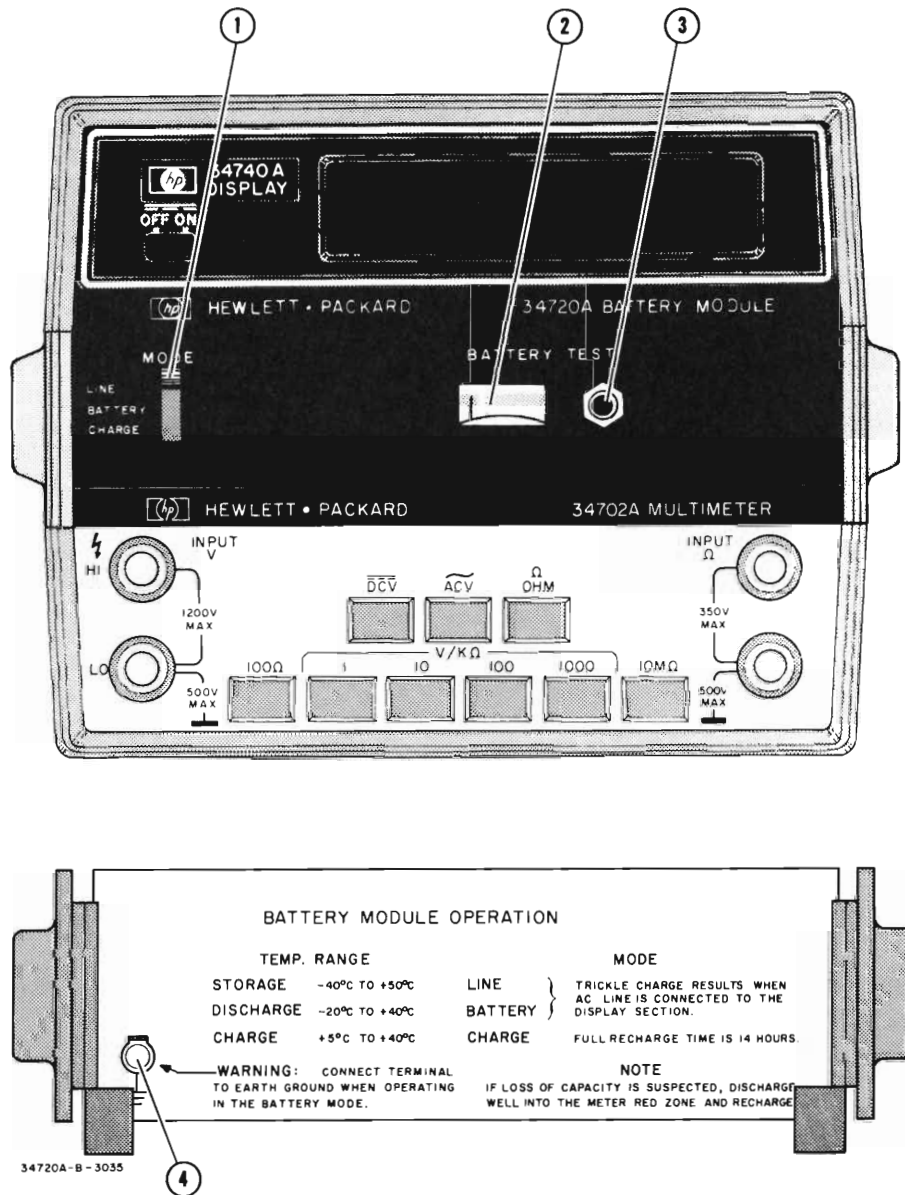

1. Mode Switch. Selects Line or Battery operation, or charge.
2. Battery Test Indicator. Batteries must be recharged when indication is in red area.
3. Battery Test Pushbutton.
4. Safety Ground Terminal (See Paragraph 3-6).

Figure 3-1. Front and Rear Panels.

3-12. When the BATTERY TEST indicator needle is in the red area, recharge the batteries using CHARGE MODE. Recharge time for completely discharged batteries is approximately 14 hours. Proceed as follows:

Connect the line cord to primary power and set the MODE switch to CHARGE. The display module power switch may be either ON or OFF, since the instrument will not operate while in CHARGE mode. Although the batteries will probably not be damaged by allowing them to fast charge more than 14 hours, repeated overcharging may shorten battery life.

3-13. The battery pack may be charged at temperatures between 5°C and 40°C (41°F to 104°F), but will accept a greater charge if the temperature is between 5°C and 25°C. Figure 3-2 shows the decrease in charge acceptance at temperatures up to 40°C. Charging at temperatures outside the specified range may cause the batteries to vent, with a resulting decrease in capacity.

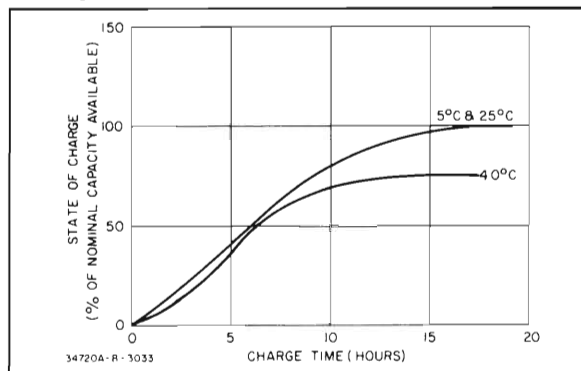


Figure 3-2. Battery Charge Acceptance vs. Temperature.

3-14. BATTERY STORAGE.

3-15. When shipped from the factory the nickel-cadmium batteries are in the discharged state (≥ 1 V/battery for the 3/5 D size cells and ≥ 2.0 V/battery for the batteries in the 5 V supply). When possible the batteries should be stored in this state. If the batteries are stored in the charged state they should be recharged for a period of 14 to 15 hours every 3 months. If this is not done significant loss of battery capacity will occur. To minimize self-discharge during storage the batteries should be stored at a temperature of 20°C or lower. Although a nickel-cadmium battery will eventually lose all of its charge through self discharge it can be returned to service with a normal recharge.



Permanent battery damage may result if the batteries are stored at high temperatures for a prolonged period.

3-16. CYCLE-LIFE OF NICKEL-CADMIUM BATTERIES.

3-17. The cycle-life of the batteries is based, by the manufacturer, on an end point of 80% of the rated 225 milliamper-hour capacity. This is with a ten hour charge and discharge current of 22.5 milliamperes with discharge carried to the normal ten-hour end voltage (1.10 volts/battery) of every cycle. Under these conditions a cycle-life in excess of 100 cycles can be expected.

SECTION IV

THEORY OF OPERATION

4.1. BATTERY SUPPLIES.

4-2. Three voltages are supplied by the battery module; i.e., +12 V, -12 V, and +5 V. Figure 4-1 represents a typical battery supply. Power for the various plug-on modules is provided by the display module power supplies when the MODE switch is in LINE position. In the BATTERY position, power is supplied by the battery module. When the MODE switch is in either LINE or BATTERY position, charging current is applied to the battery through the diode and R_{LO} in series with R_{HI} . This provides a trickle charge.

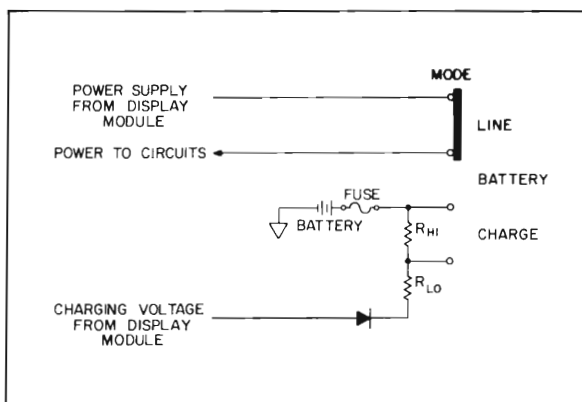


Figure 4-1. Typical Battery Supply.

When the switch is set to the CHARGE position, only the diode and R_{LO} are in the charge path. This increases the charging current by a factor of 10. The diode prevents the battery from discharging back through the charge circuit when the line cord is disconnected.

4-3. The nickel-cadmium batteries used in the Model 34720A are able to supply relatively high discharge currents. Because of this, a fuse is inserted in each battery supply line to prevent damage to wiring or circuits due to an accidental short circuit or component failures.

4.4. BATTERY TEST CIRCUIT (See Figure 4-2).

4-5. The BATTERY TEST switch connects the meter circuit to the +5 V battery to monitor its state of charge. The +5 V battery is monitored because its rate of discharge is normally greater than for the other supplies. Current through the meter is limited by a resistor and a zener diode. A 50 Ω potentiometer is connected in shunt with the meter. This potentiometer is adjusted to give a full scale meter reading when the batteries are fully charged and operating under normal load conditions.

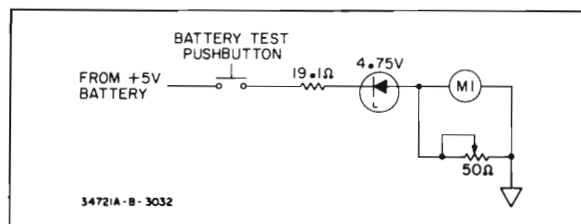


Figure 4-2. Battery Test Circuit.

4.6. NICKEL-CADMIUM BATTERIES.

4-7. The 34720A Battery Module uses resealable vented nickel-cadmium batteries. These cells are normally in a sealed condition, but will vent under excessive internal pressure, then reseal as the pressure is relieved. Charging at temperatures outside the specified range (+5°C to +40°C) may cause the batteries to vent, and repeated venting will result in a decrease in battery capacity because of loss of electrolyte.

4-8. The nickel-cadmium batteries in the separate supply packs are connected in series. Since the batteries do not all have exactly the same charge capacity, some will reach the complete discharge state before others. If discharge is continued beyond this point (below the meter red zone), the batteries with lower capacity may reverse polarity causing venting and resulting loss of capacity.

SECTION V

MAINTENANCE

5-1. INTRODUCTION.

5-2. This section contains information necessary for proper maintenance of the Model 34720A. The 34720A requires no performance tests.

NOTE

The nickel-cadmium batteries in this instrument are warranted for six months against failure due to manufacturing defect.

5-3. RECOMMENDED TEST EQUIPMENT.

5-4. A dc voltmeter with at least 10 M Ω input resistance and an ohmmeter are needed to maintain the 34720A Battery Module. An -hp- Model 427A Multi-Function Meter is recommended. Also an -hp- 11148A Plug-on Extender Cable is required to perform the procedures outlined in this section.

WARNING

The following precautions should be observed when working with nickel-cadmium batteries.

- a. Be very careful with uninsulated tools when working with charged batteries. Severe arcing may result from an accidental short circuit because nickel-cadmium batteries are capable of high discharge current.
- b. Do not wear rings without wearing gloves when handling charged cells. Metal watch bands, identification bracelets, and other such jewelry are also dangerous. Severe burns can be realized from shorting a charged cell.
- c. Do not attempt to solder directly to a sealed cell. Too much heat can damage the seal. Solder only to the metal tab.
- d. Do not place uninsulated batteries on a metal bench or metal surface. This may place a direct short across the cells.
- e. Do not dispose of batteries in a fire.
- f. In case you get electrolyte on your hands, wash quickly and neutralize with a mild acid such as vinegar.

NOTE

Individual batteries cannot be replaced in this instrument because the individual battery capacities are matched in each pack. For information regarding charging and care of the nickel-cadmium batteries refer to Section III of this manual.

5-5. ADJUSTING THE BATTERY TEST METER.

5-6. The meter circuit should not require adjustment unless one or both batteries in the +5 V supply have been replaced or unless the meter itself has been replaced. Use the following procedure to adjust the meter:

NOTE

The battery module must be connected to a display module. Also, an 11456A Readout Test Card or an 11148A Extender Cable is required in this procedure.

- a. Remove the signal-conditioning (bottom) module from the instrument.
- b. Connect an 11148A Extender Cable between the signal-conditioning module and the 34720A or connect the -hp- 11456A Read-Out Test Card in place of the signal-conditioning module.
- c. Connect the line cord to primary power and set the MODE switch to CHARGE. Allow the batteries to charge for approximately 14 hours.
- d. After the batteries have been charged, set the MODE switch to BATTERY and turn the instrument on. Allow the instrument to operate for 5 minutes.
- e. Turn A1R8 fully counterclockwise. (Figure 5-1 shows the location of A1R8.) The meter needle should move against the right-hand stop when the pushbutton is pressed.
- f. Hold the BATTERY TEST pushbutton in and adjust A1R8 until the meter needle just begins to move away from the right-hand edge of the meter. This completes the meter adjustment.

5-7. GENERAL MAINTENANCE INFORMATION.

5-8. The following paragraphs provide servicing and repair information for your Model 34720A.

5-9. Access to Components.

5-10. To gain access to the components on the A1 printed circuit (P.C.) assembly, use the following procedure:

a. Remove the covers from both battery compartments and take out the batteries.



*Do not place the batteries on a metal surface.
Also be careful when using uninsulated tools.*

b. Remove the screws securing the rear battery compartment to the side frames. Remove the compartment from the module.

c. Remove the screws holding the 50 pin connector to the battery compartment.

d. Remove the four No. 4 allen screws securing the front compartment to the side frames. Remove the compartment.

e. Remove the four screws holding the A1 P.C. assembly to the front panel. The P.C. assembly can now be removed for troubleshooting or repair.

5-11. Meter Replacement.

5-12. In order to remove the BATTERY TEST meter, first perform steps a through e of Paragraph 5-9. After this has been accomplished, remove the nut from the pushbutton on the front panel. Take out the screws holding the front panel to the side frames and separate the front panel from the sub-panel. Unsolder the two wires which connect to the meter and remove the two screws which hold it to the sub-panel. Install the new meter and reassemble the instrument.

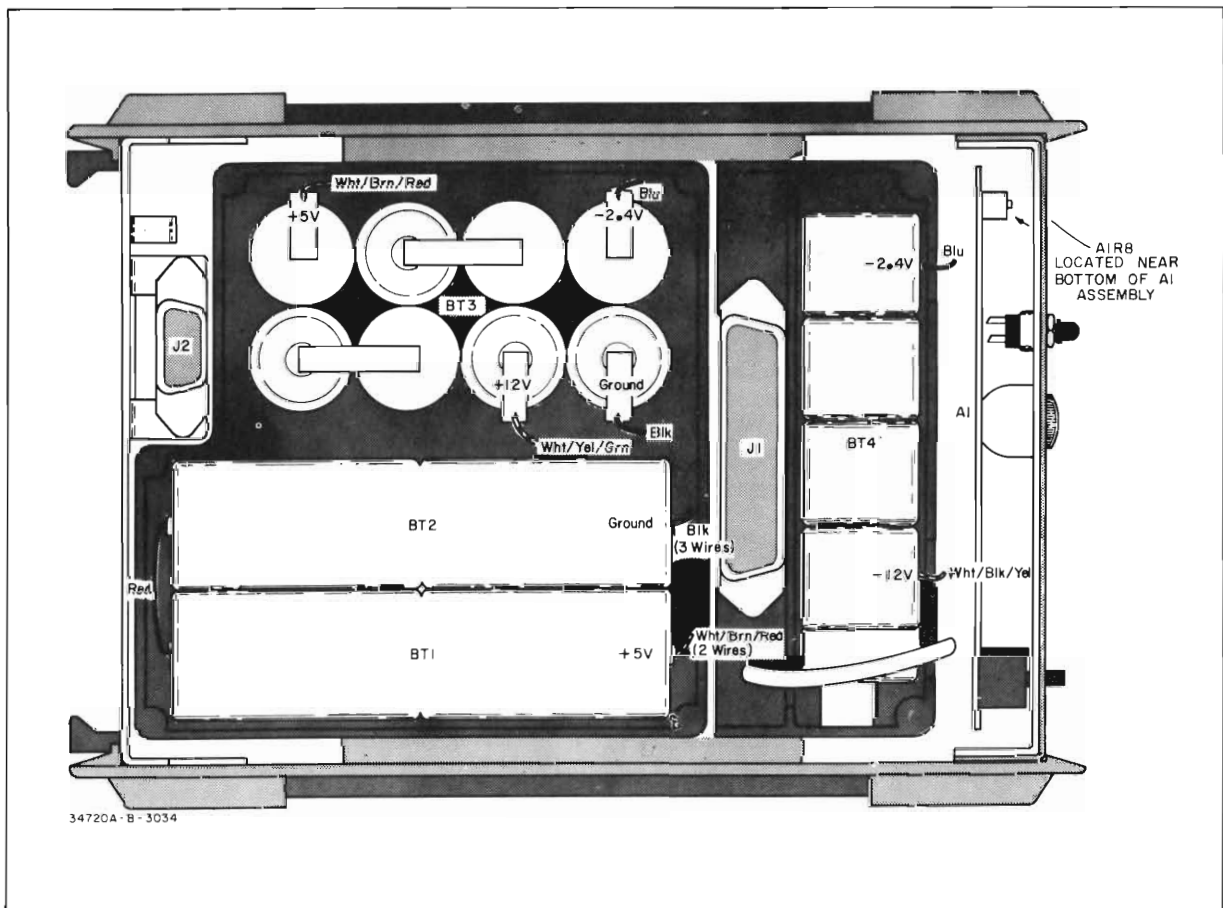


Figure 5-1. Battery Location.

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphabetic order of their reference designators and indicates the description, -hp- part number of each part, together with any applicable notes and provides the following:

a. Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.

b. Description of the part. (See list of abbreviations below.)

c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)

d. Manufacturers part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

ABBREVIATIONS			ABBREVIATIONS		
Ag	silver	Hz	hertz (cycle(s) per second)	NPO	negative positive zero
Al	aluminum	ID	inside diameter	ns	(zero temperature coefficient)
A	ampere(s)	imp	impregnated	nsr	nanosecond(s) = 10 ⁻⁹ seconds
Au	gold	incd	incandescent		not separately replaceable
C	capacitor	ins	insulation(ed)	Ω	ohm(s)
cer	ceramic	kΩ	kilohm(s) = 10 ⁺³ ohms	obd	order by description
coef	coefficient	KHz	kilohertz = 10 ⁺³ hertz	OD	outside diameter
com	common	L	inductor	p	peak
comp	composition	lin	linear taper	pA	picoampere(s)
conn	connection	log	logarithmic taper	pc	printed circuit
dep	deposited	mA	milliampere(s) = 10 ⁻³ amperes	pF	picofarad(s) 10 ⁻¹² farads
DPDT	double-pole double-throw	MHz	megahertz = 10 ⁺⁶ hertz	piv	peak inverse voltage
DPST	double-pole single-throw	MΩ	megohm(s) = 10 ⁺⁶ ohms	p/o	part of
elect	electrolytic	met flm	metal film	pos	position(s)
encap	encapsulated	mfr	manufacturer	pot	potentiometer
F	farad(s)	ms	millisecond	p-p	peak-to-peak
FET	field effect transistor	mtg	mounting	p-pm	parts per million
fxd	fixed	mV	millivolt(s) = 10 ⁻³ volts	prec	precision (temperature coefficient, long term stability and/or tolerance)
GaAs	gallium arsenide	μF	microfarad(s)	R	resistor
GHz	gigahertz = 10 ⁺⁹ hertz	μs	microsecond(s)	Rh	rhodium
gd	guard(ed)	μV	microvolt(s) = 10 ⁻⁶ volts	rms	root-mean-square
Ge	germanium	my	Mylar®	rot	rotary
gnd	ground(ed)	nA	nanoampere(s) = 10 ⁻⁹ amperes	Se	selenium
H	henry(ies)	NC	normally closed	sect	section(s)
Hg	mercury	Ne	neon	Si	silicon
		NO	normally open		
DECIMAL MULTIPLIERS			DECIMAL MULTIPLIERS		
Prefix	Symbols	Multiplier	Prefix	Symbols	Multiplier
tera	T	10 ¹²	centi	c	10 ⁻²
giga	G	10 ⁹	milli	m	10 ⁻³
mega	M or Meg	10 ⁶	micro	μ	10 ⁻⁶
kilo	K or k	10 ³	nano	n	10 ⁻⁹
hecto	h	10 ²	pico	p	10 ⁻¹²
deka	da	10	femto	f	10 ⁻¹⁵
deci	d	10 ⁻¹	atto	a	10 ⁻¹⁸
DESIGNATORS			DESIGNATORS		
A	assembly	FL	filter	Q	transistor
B	motor	HR	heater	QCR	transistor-diode
BT	battery	IC	integrated circuit	R	resistor
C	capacitor	J	jack	RT	thermistor
CR	diode	K	relay	S	switch
DL	delay line	L	inductor	T	transformer
DS	lamp	M	meter	TB	terminal board
E	misc electronic part	MP	mechanical part	TC	thermocouple
F	fuse	P	plug	TP	test point
				TS	terminal strip
				U	microcircuit
				V	vacuum tube, neon bulb, photocell, etc.
				W	wire
				X	socket
				XDS	lampholder
				XF	fuseholder
				Y	crystal
				Z	network

STD-B-2734

® Dupont de Nemours

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
A1	34720-66501	1	Main Circuit Assembly	-hp-	
CR1 thru CR4	1901-0028	4	Diode: Si 400 piv	04713	SR 1358-9
CR5	1902-3086	1	Diode: breakdown 4.75 V $\pm$ 2 %	04713	SZ 11213-48
F1	2110-0003	1	Fuse: 3 A 250 V normal blow	71400	AGC-3
F2, F3	2110-0002	2	Fuse: 2 A 250 V normal blow	71400	AGC-2
R1	0698-3605	1	R: fxd flm 15.0 Ω $\pm$ 5 % 2 W	75042	RG-42 obd
R2, R3	0698-5019	2	R: fxd flm 32.4 Ω $\pm$ 1 % 1/2 W	75042	CEC T-0 obd
R4	0698-3333	1	R: fxd flm 137 Ω $\pm$ 1 % 1/8 W	75042	CEA T-0 obd
R5, R6	0698-3443	2	R: fxd flm 287 Ω $\pm$ 1 % 1/8 W	75042	CEA T-0 obd
R7	0698-4366	1	R: fxd flm 19.1 Ω $\pm$ 1 % 1/8 W	75042	CEA T-0 obd
R8	2100-2520	1	R: var cermet 50 Ω $\pm$ 20 % 1/2 W	73138	62-220-1
S1	3101-1717	1	Switch: slide, 3 pole, 3 pos.	79727	G-1685
XF1	2110-0269	6	Fuse clip	91506	6008-32CN
A2	34720-66502	1	Plug-On Connector Assembly	-hp-	
P1	1251-0099	1	Connector: 50-pin male	02660	57-10500-375
J1	34720-27601	1	Connector: 50-pin female	-hp-	
A3	34720-66503	1	Battery Connector Assembly	-hp-	
J2	1251-0290	1	Connector: 14-pin female	02660	57-20140
P2	1251-0291	1	Connector: 14-pin male	02660	57-10140
CHASSIS MOUNTED COMPONENTS					
BT1, BT2	1420-0097	2	Battery pack	-hp-	
BT3	1420-0094	1	Battery pack	-hp-	
BT4	1420-0095	1	Battery pack	-hp-	
M1	1120-0537	1	Meter	-hp-	
S2	3101-1747	1	Switch: pushbutton SPST	09353	8532
W1	34720-61601		Assembly: cable	-hp-	
MISCELLANEOUS					
	34720-00201	1	Panel: front	-hp-	
	34720-00203	1	Panel: sub	-hp-	
	5020-6894	2	Frame: side	-hp-	
	5040-6000	1	Catch: left, slide	-hp-	
	1440-0096	2	Handle: strap	12136	7835-Y12561
	5040-7036	4	Support: slide catch	-hp-	
	2200-0778	12	Screw: 4-40 x 0.312 in. long, flat head	02615	obd
	34720-60204	1	Panel assy: rear	-hp-	
	1460-1312	2	Spring clip	-hp-	
	34720-04101	1	Cover: rear battery case	-hp-	
	5040-7384	1	Cover: front battery case	-hp-	
	5040-7001	1	Catch: right slide	-hp-	
	5040-7381	1	Battery case: rear	-hp-	
	34720-66401	1	Battery case: front	-hp-	
	9220-1762	2	Dust cover	-hp-	
	34720-90002	1	Manual: Operating and Service	-hp-	

SECTION VII TROUBLESHOOTING AND CIRCUIT DIAGRAMS

7-1. INTRODUCTION.

7-2. This section of the Operating and Service Manual contains troubleshooting information and a circuit diagram for the Model 34720A Battery Module.

7-3. TROUBLESHOOTING.

7-4. If the instrument operates correctly with the MODE switch set to LINE, but will not operate correctly on BATTERY, the trouble is in the battery module or in the connections between modules. The battery test circuit monitors only the voltage across the + 5 V supply. Therefore, it is possible to have a "good" indication and still have a bad battery in either the + 12 V or - 12 V supply. Each battery supply is fused. The fuses are accessible by separating the bottom module and the battery module. The end of the fuse which is connected to the battery is indicated by a "B" (See Figure 7-1).

7-5. Battery Circuit Checks.

7-6. The best method of troubleshooting the battery module is to trace voltages through the suspected circuit. Table 7-1 shows typical voltages for each supply under charged and discharged conditions. Voltages should be measured with the power cord disconnected and the instrument operating in BATTERY MODE.

7-7. To check the voltage of the batteries, first separate the display module from the battery module. Remove the covers in the battery compartment and connect the battery module to the display module using an 11148A Extender Cable. This procedure is outlined in steps a - c of Paragraph 5-6 in the Maintenance Section of this manual.

7-8. If a single battery in a battery pack has failed, the overall voltage of the pack should be about 1.2 V less than

normal (2.2 V in the 5 V supply). The voltage drops approximately 1.2 V for each battery that has failed. If the + 5 V and + 12 V supplies both indicate the same voltage error, the trouble is probably in the + 5 V battery pack. The + 5 V supply is also part of the + 12 V supply. To isolate the batteries from the rest of the circuit, remove the fuse in the circuit of interest. Two batteries in the - 12 V supply are part of battery pack BT3. The remainder of the batteries in the - 12 V supply are part of BT4.

Table 7-1. Typical Battery Voltages.

Supply	Fully Charged Voltage	Discharged* Voltage
+ 5 V	+ 5.2 V to + 5.4 V	+ 4.6 V to + 4.8 V
+ 12 V	+ 13.5 V to + 14 V	+ 11.5 V to + 12 V
- 12 V	- 13.5 V to - 14 V	- 11.5 V to - 12 V

* Test conditions: Charge for at least 14 hours, then operate on battery (power cord disconnected) for 6 hours.


7-9. SCHEMATIC DIAGRAM.


7-10. Figure 7-1 is the schematic diagram of the Model 34720A. This diagram is provided to assist in troubleshooting the instrument.

7-11. COMPONENT LOCATION DIAGRAM.

7-12. A Component Location Diagram of the 34720-66501 printed circuit assembly is provided on the schematic diagram. The Component Location Diagram shows location of all components mounted on the assembly. Each component is identified by a reference designator which corresponds to the same component on the schematic diagram.

REFERENCE DESIGNATIONS

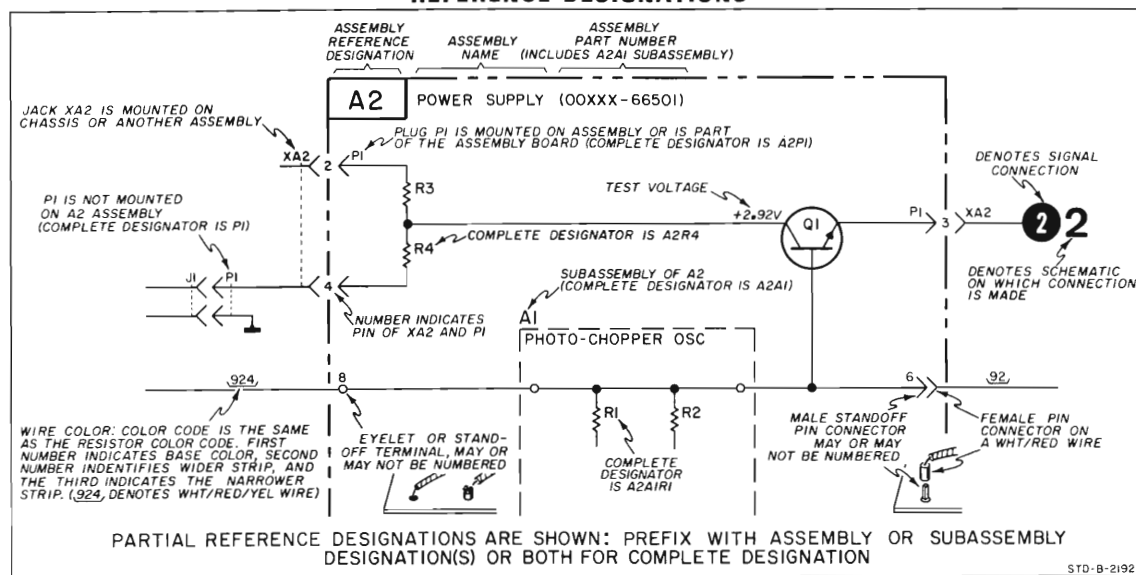

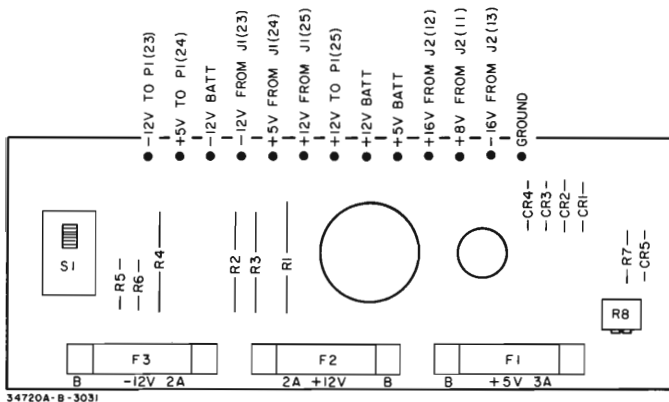

34720A-B-3031

AI

hp Part No. 34721-66501

CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A. Common	Any supplier of U. S.	05347	Ultronix, Inc.	San Mateo, Cal.	11236	CTS of Berne, Inc.	Berne, Ind.
00136	McCoy Electronics	Mount Holly Springs, Pa.	05397	Union Carbide Corp., Elect.	Div. New York, N. Y.	11237	Chicago Telephone of	California, Inc. So. Pasadena, Cal.
00213	Sage Electronics Corp.	Rochester, N. Y.	05574	Viking Ind. Inc.	Canoga Park, Cal.	11242	Bay State Electronics Corp.	Waltham, Mass.
00287	Cemco, Inc.	Danielson, Conn.	05593	Icore Electro-Plastics Inc.	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave	Div. Palo Alto, Cal.
00334	Humidial	Colton, Calif.	05616	Cosmo Plastic (c/o Electrical	Spec. Co.) Cleveland, Ohio	11314	National Seal	Downey, Cal.
00348	Mictron, Co., Inc.	Valley Stream, N. Y.	05624	Barber Colman Co.	Rockford, Ill.	11453	Precision Connector Corp.	Jamaica, N. Y.
00373	Garlock Inc.	Cherry Hill, N. J.	05728	Tiffen Optical Co.	Roslyn Heights, Long Island, N. Y.	11534	Duncan Electronics Inc.	Costa Mesa, Cal.
00656	Aerovox Corp.	New Bedford, Mass.	05729	Metro-Tel Corp.	Westbury, N. Y.	11711	General Instrument Corp.,	Semiconductor Division Products
00779	Amp. Inc.	Harrisburg, Pa.	05783	Stewart Engineering Co.	Santa Cruz, Cal.	Group	Newark, N. J.	
00781	Aircraft Radio Corp.	Boonton, N. J.	05820	Wakefield Engineering Inc.	Wakefield, Mass.	11717	Imperial Electronic, Inc.	Buena Park, Cal.
00809	Croven, Ltd.	Whitby, Ontario, Canada	06004	Bassick Co., Div. of Stewart	Warner Corp. Bridgeport, Conn.	11870	Melabs, Inc.	Palo Alto, Cal.
00815	Northern Engineering	Laboratories, Inc. Burlington, Wis.	06090	Raychem Corp.	Redwood City, Cal.	12136	Philadelphia Handle Co.	Camden, N. J.
00853	Sangamo Electric Co.,	Pickens Div. Pickens, S. C.	06175	Bausch and Lomb Optical	Co. Rochester, N. Y.	12361	Grove Mfg. Co., Inc.	Shady Grove, Pa.
00866	Goe Engineering Co.	City of Industry, Cal.	06402	E. T. A. Products Co. of	America Chicago, Ill.	12574	Gulton Ind. Inc., Data System	Div. Albuquerque, N. M.
00891	Carl E. Holmes Corp.	Los Angeles, Cal.	06540	Amatom Electronic Hardware	Co., Inc. New Rochelle, N. Y.	12697	Clarostat Mfg. Co.	Dover, N. H.
00929	Microlab Inc.	Livingston, N. J.	06555	Beede Electrical Instrument	Co., Inc. Penacook, N. H.	12728	Elmar Filter Corp.	W. Haven, Conn.
01002	General Electric Co.,	Capacitor Dept. Hudson Falls, N. Y.	06666	General Devices Co., Inc.	Indianapolis, Ind.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan
01009	Alden Products Co.	Brockton, Mass.	06751	Components Inc., Ariz. Div.	Phoenix, Arizona	12881	Metex Electronics Corp.	Clark, N. J.
01121	Allen Bradley Co.	Milwaukee, Wis.	06812	Torrington Mfg. Co., West Div.	Van Nuys, Cal.	12930	Delta Semiconductor Inc.	Newport Beach, Cal.
01255	Liton Industries, Inc.	Beverly Hills, Cal.	06980	Varian Assoc. Etmac Div.	San Carlos, Cal.	12954	Dickson Electronics Corp.	Scottsdale, Arizona
01281	TRW Semiconductors, Inc.	Lawndale, Cal.	07088	Kelvin Electric Co.	Van Nuys, Cal.	13019	Airco Supply Co., Inc.	Wichita, Kansas
01295	Texas Instruments, Inc.	Transistor Products Div. Dallas, Texas	07126	Digitran Co.	Pasadena, Cal.	13061	Wilco Products	Detroit, Mich.
01349	The Alliance Mfg. Co.	Alliance, Ohio	07137	Transistor Electronics	Corp. Minneapolis, Minn.	13103	Thermolloy	Dallas, Texas
01538	Small Parts Inc.	Los Angeles, Cal.	07138	Westinghouse Electric	Corp., Electronic Tube Div. Elmira, N. Y.	13272	Soliton Devices Inc.	Tappan, N. Y.
01589	Pacific Relays, Inc.	Van Nuys, Cal.	07149	Filmohm Corp.	New York, N. Y.	13396	Telefunken (GmbH)	Hanover, Germany
01670	Gudebrod Bros. Silk Co.	New York, N. Y.	07233	Cinch-Graphik Co.	City of Industry, Cal.	13835	Midland-Wright Div. of	Pacific Industries, Inc. Kansas City, Kansas
01930	Amerock Corp.	Rockford, Ill.	07256	Silicon Transistor Corp.	Carle Place, N. Y.	14099	Sem-Tech	Newbury Park, Cal.
01960	Pulse Engineering Co.	Santa Clara, Cal.	07261	Avnet Corp.	Culver City, Cal.	14193	Calif. Resistor Corp.	Santa Monica, Cal.
02114	Ferroxcube Corp. of	America Saugerties, N. Y.	07263	Fairchild Camera & Inst. Corp.	Mountain View, Cal.	14298	American Components, Inc.	Conshohocken, Pa.
02116	Wheelock Signals, Inc.	Long Branch, N. J.	07322	Semiconductor Div.	Mountain View, Cal.	14433	ITT Semiconductor, a Div. of	Int. Telephone and Telegraph
02286	Cole Rubber and Plastics Inc.	Sunnyvale, Cal.	07387	Birtcher Corp., The	Monterey Park, Cal.	Corporation	West Palm Beach, Fla.	
02660	Amphenol-Borg Electronics	Corp. Broadview, Ill.	07397	Sylvania Electric Prod. Inc.	Mountain View, Cal.	14493	Hewlett-Packard Company	Loveland, Colo.
02735	Radio Corp. of America, Semi-	conductor and Materials	07700	Mt. View Operations	Mountain View, Cal.	14555	Cornell Dublier Electric Corp.	Newark, N. J.
02771	Vocaline Co. of America,	Inc. Old Saybrook, Conn.	07829	Bodine Elect. Co.	Cranford, N. J.	14674	Corning Glass Works	Corning, N. Y.
02777	Hopkins Engineering Co.	San Fernando, Cal.	07910	Continental Device Corp.	Hawthorne, Cal.	14752	Electro Cube Inc.	San Gabriel, Cal.
02875	Hudson Tool & Die	Newark, N. J.	07933	Raytheon Mfg. Co., Semi-	conductor Div. Mountain View, Cal.	14960	Williams Mfg. Co.	San Jose, Cal.
03296	Nylon Molding Corp.	Springfield, N. J.	07980	Hewlett-Packard Co.	New Jersey Division Rockaway, N. J.	15106	The Sphere Co., Inc.	Little Falls, N. J.
03508	G. E. Semiconductor Prod.	Dept. Syracuse, N. Y.	08145	U. S. Engineering Co.	Los Angeles, Cal.	15203	Webster Electronics Co.	New York, N. Y.
03705	Apex Machine & Tool Co.	Dayton, Ohio	08289	Blinn, Delbert Co.	Pomona, Cal.	15287	Scionics Corp.	Northridge, Cal.
03797	Edelma Corp.	Compton, Calif.	08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada	15291	Adjustable Bushing Co.	N. Hollywood, Cal.
03818	Parker Seal Co.	Los Angeles, Cal.	08524	Deutsch Fastener Corp.	Los Angeles, Cal.	15558	Micron Electronics, Garden City, Long Island, N. Y.	
03877	Transitron Electric Corp.	Wakefield, Mass.	08664	Bristol Co., The	Waterbury, Conn.	15566	Amprobe Inst. Corp.	Lynbrook, N. Y.
03888	Pyrofilm Resistor Co.	Inc. Cedar Knolls, N. J.	08717	Sloan Company	Sun Valley, Cal.	15631	Cabletronics	Costa Mesa, Cal.
03954	Singer Co., Diehl Div.,	Finderne Plant Sumerville, N. J.	08718	ITT Cannon Electric Inc.	Phoenix Div. Phoenix, Arizona	15772	Twentieth Century Coil	Spring Co. Santa Clara, Cal.
04009	Arrow, Hart and Hegeman	Elect. Co. Hartford, Conn.	08984	Miniature Lamp Dept.	Cleveland, Ohio	15801	Fenwal Elect. Inc.	Frammingham, Mass.
04013	Tarus Corp.	Lambertville, N. J.	09026	Babcock Relays Div.	Costa Mesa, Cal.	15818	Amelco Inc.	Mountain View, Cal.
04062	Arco Electronic Inc.	Great Neck, N. Y.	09097	Electronic Enclosures Inc.	Los Angeles, Calif.	16037	Spruce Pine Mica Co.	Spruce Pine, N. C.
04217	Essex Wire	Los Angeles, Cal.	09134	Texas Capacitor Co.	Houston, Texas	16179	Omni-Spectra Inc.	Detroit, Ill.
04222	Hi-Q Division of Aerovox.	Myrtle Beach, S. C.	09145	Tech. Ind. Inc. Atohm	Elect. Burbank, Cal.	16352	Computer Diode Corp.	Lodi, N. J.
04354	Precision Paper Tube Co.	Wheeling, Ill.	09250	Electro Assemblies, Inc.	Chicago, Ill.	16554	Electroid Co.	Union, N. J.
04404	Palo Alto Division of Hewlett-	Packard Co. Palo Alto, Cal.	09353	C & K Components Inc.	Newton, Mass.	16585	Boots Aircraft Nut Corp.	Pasadena, Cal.
04651	Sylvania Electric Products,	Microwave Device Div. Mountain View, Cal.	09569	Mallory Battery Co. of	Canada, Ltd. Toronto, Ontario, Canada	16688	Ideal Prec. Meter Co., Inc.	De Jur Meter Div. Brooklyn, N. Y.
04673	Dakota Engr. Inc.	Culver City, Cal.	09795	Pennsylvania Florocarbon	Clifton Heights, Penn.	16758	Delco Radio Div. of G. M. Corp.	Kokomo, Ind.
04713	Motorola Inc. Semiconductor	Prod. Div. Phoenix, Arizona	09922	Burdury Corp.	Norwalk, Conn.	17109	Thermonetics Inc.	Canoga Park, Cal.
04732	Filttron Co., Inc. Western	Div. Culver City, Cal.	10214	General Transistor Western	Corp. Los Angeles, Cal.	17474	Tranex Company	Mountain View, Cal.
04773	Automatic Electric Co.	Northlake, Ill.	10411	Ti-Tal, Inc.	Berkeley, Cal.	17675	Hamlin Metal Products Corp.	Akron, Ohio
04796	Sequoia Wire Co.	Redwood City, Cal.	10646	Carborundum Co.	Niagara Falls, N. Y.	17745	Angstrom Prec. Inc.	No. Hollywood, Cal.
04811	Precision Coil Spring Co.	El Monte, Cal.				17856	Siliconix Inc.	Sunnyvale, Cal.
04870	P. M. Motor Company	Westchester, Ill.				17870	McGraw-Edison Co.	Manchester, N. H.
04919	Component Mfg. Service	Co. W. Bridgewater, Mass.				18042	Power Design Pacific Inc.	Palo Alto, Cal.
05006	Twentieth Century Plastics,	Inc. Los Angeles, Cal.				18083	Clevite Corp. Semiconductor Div.	Palo Alto, Cal.
05277	Westinghouse Electric Corp.	Semiconductor Dept. Youngwood, Pa.				18324	Signetics Corp.	Sunnyvale, Cal.
						18476	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
						18486	TRW Elect. Comp. Div.	Des Plaines, Ill.
						18565	Chomerics	Plainville, Mass.
						18583	Curtis Instrument, Inc.	Mt. Kisco, N. Y.
						18612	Vishay Instruments Inc.	Malvern, Pa.
						18873	E. I. DuPont and Co.	Wilmington, Del.
						18911	Durant Mfg. Co.	Milwaukee, Wis.
						19315	The Bendix Corp., Navigation &	Control Div. Teterboro, N. J.
						19500	Thomas A. Edison Industries,	Div. of McGraw-Edison West Orange, N. J.
						19589	Concoa	Baldwin Park, Cal.

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
19644	LRC Electronics	Horseheads, N. Y.	71482	C. P. Clare & Co.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
19701	Electra Mfg. Co.	Independence, Kansas	71590	Centralab Div. of		78471	Tilley Mfg. Co.	San Francisco, Cal.
20183	General Atomics Corp.	Philadelphia, Pa.		Globe Union Inc.	Milwaukee, Wis.	78488	Stackpole Carbon Co.	St. Marys, Pa.
21226	Executone, Inc.	Long Island City, N. Y.	71616	Commercial Plastics Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
21355	Fafnir Bearing Co., The	New Britain, Conn.	71700	Cornish Wire Co., The	New York, N. Y.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
21520	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71707	Coto Coil Co., Inc.	Providence, R. I.	78790	Transformer Engineers	San Gabriel, Cal.
23020	General Reed Co.	Metuchen, N. J.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78947	Ucinite Co.	Newtonville, Mass.
23042	Texscan Corp.	Indianapolis, Ind.	71785	Cinch Mfg. Co.		79136	Waldes Kohinoor Inc.	Long Island City, N. Y.
23783	British Radio Electronics Ltd.	Washington, D.C.		Howard B. Jones Div.	Chicago, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
24455	G. E. Lamp Division, Nela Park	Cleveland, Ohio	71984	Dow Corning Corp.	Midland, Mich.	79251	Wenco Mfg. Co.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	72136	Electro Motive Mfg. Co., Inc.		79727	Continental-Wirt Electronics Corp.	Philadelphia, Pa.
24681	Memcor Inc., Comp. Div.	Huntington, Ind.			Willimantic, Conn.			
26365	Gries Reproducer Corp.	New Rochelle, N. Y.	72619	Dialight Corp.	Brooklyn, N. Y.	79963	Zierick Mfg. Corp.	New Rochelle, N. Y.
26462	Grobert File Co. of America, Inc.	Carlstadt, N. J.	72656	Indiana General Corp.		80031	Mepco Division of Sessions Clock Co.	
26851	Compac Hollister Co.	Hollister, Cal.		Electronics Div.	Keasby, N. J.			Morrisrow, N. J.
26992	Hamilton Watch Co.	Lancaster, Pa.	72699	General Instrument Corp.		80033	Prestole Corp.	Toledo, Ohio
28480	Hewlett-Packard Co.	Palo Alto, Cal.		Cap Division	Newark, N. J.	80120	Schnitzer Alloy Products Co.	Elizabeth, N. J.
28520	Heyman Mfg. Co.	Kenilworth, N. J.	72765	Drake Mfg. Co.	Harwood Heights, Ill.	80131	Electronic Industries Association.	
30617	Instrument Specialties Co., Inc.	Little Falls, N. J.	72825	Hugh H. Eby Inc.	Philadelphia, Pa.		Standard tube or semi-conductor device, any manufacturer.	
33173	G. E. Receiving Tube Dept.	Owensboro, Ky.	72962	Elastic Stop Nut Corp.	Union, N. J.	80207	Unimax Switch, Div. Maxon Electronics Corp.	Wallingford, Conn.
35434	Lectrohm Inc.	Chicago, Ill.	72964	Robert M. Hadley Co.	Los Angeles, Cal.	80223	United Transformer Corp.	New York, N. Y.
36196	Stanwyck Coil Products, Ltd.	Hawkesbury, Ontario, Canada	72982	Erle Technological Products, Inc.	Erie, Pa.	80248	Oxford Electric Corp.	Chicago, Ill.
			73061	Hansen Mfg. Co., Inc.	Princeton, Ind.	80294	Bourns Inc.	Riverside, Cal.
36287	Cunningham, W. H. & Hill, Ltd.	Toronto, Ontario, Canada	73076	H. M. Harper Co.	Chicago, Ill.	80411	Arco Div. of Robertshaw Controls Co.	
			73138	Helipot Div. of Beckman Inst., Inc.				Columbus, Ohio
37942	P. R. Mallory & Co., Inc.	Indianapolis, Ind.	73293	Hughes Products Division of	Fullerton, Cal.	80486	All Star Products Inc.	Defiance, Ohio
39543	Mechanical Industries Prod. Co.	Akron, Ohio		Hughes Aircraft Co.	Newport Beach, Cal.	80509	Avery Label Co.	Monrovia, Cal.
40920	Miniature Precision Bearings, Inc.	Keene, N. H.	73445	Amporex Elect. Co.	Hicksville, L. I., N. Y.	80563	Hammarlund Co., Inc.	Mars Hill, N. C.
40931	Honeywell Inc.	Minneapolis, Minn.	73506	Bradley Semiconductor Corp.		80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
42190	Muter Co.	Chicago, Ill.			New Haven, Conn.	80813	Dimeo Gray Co.	Dayton, Ohio
43990	C. A. Norgren Co.	Englewood, Colo.	73559	Carling Electric, Inc.	Hartford, Conn.	81030	International Inst. Inc.	Orange, Conn.
44655	Ohmite Mfg. Co.	Skokie, Ill.	73586	Circle F Mfg. Co.	Trenton, N. J.	81073	Grayhill Co.	LaGrange, Ill.
46384	Penn Eng. & Mfg. Corp.	Doylestown, Pa.	73682	George K. Garrett Co.		81095	Trud Transformer Corp.	Venice, Cal.
47904	Polaroid Corp.	Cambridge, Mass.		Div. MSL Industries, Inc.	Philadelphia, Pa.	81312	Winchester Elec. Div. Litton Ind. Inc.	Oakville, Conn.
48620	Precision Thermometer & Inst. Co.	Southampton, Pa.	73734	Federal Screw Products, Inc.	Chicago, Ill.			
49956	Microwave & Power Tube Div.	Waltham, Mass.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio	81349	Military Specification	
52090	Rowan Controller Co.	Westminster, Md.	73793	General Industries Co., The	Elyria, Ohio	81483	International Rectifier Corp.	El Segundo, Cal.
52983	HP Co., Med. Elec. Div.	Waltham, Mass.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81541	Airpax Electronics, Inc.	Cambridge, Maryland
54294	Shallcross Mfg. Co.	Selma, N. C.	73899	JFD Electronics Corp.	Brooklyn, N. Y.	81860	Barry Controls, Div. Barry Wright Corp.	Watertown, Mass.
55026	Simpson Electric Co.	Chicago, Ill.	73905	Jennings Radio Mfg. Corp.	San Jose, Cal.	82042	Carter Precision Electric Co.	Skokie, Ill.
55933	Sonotone Corp.	Elmsford, N. Y.	73957	Groove-Pin Corp.	Ridgefield, N. J.	82047	Spartan Faraday Inc., Copper Hewitt Electric Div.	Hoboken, N. J.
55938	Raytheon Co. Commercial Apparatus & System Div.	So. Norwalk, Conn.	74276	Signalite Inc.	Neptune, N. J.	82116	Electric Regulator Corp.	Norwalk, Conn.
			74455	J. H. Winns, and Sons	Winchester, Mass.	82142	Jeffers Electronics Division of Speer Carbon Co.	Du Bois, Pa.
56137	Spaulding Fibre Co., Inc.	Tonawanda, N. Y.	74861	Industrial Condenser Corp.	Chicago, Ill.			
56249	Sprague Electric Co.	North Adams, Mass.	74868	R. F. Products Division of Amphenol-Borg Electronic Corp.		82170	Fairchild Camera & Inst. Corp.	Paramus, N. J.
58474	Superior Elect. Co.	Bristol, Conn.			Danbury, Conn.	82209	Magurie Industries, Inc.	Greenwich, Conn.
59446	Telex Corp.	Tulsa, Okla.	74970	E. F. Johnson Co.	Waseca, Minn.	82219	Sylvania Electric Prod., Inc.	Emporium, Pa.
59730	Thomas & Betts Co.	Elizabeth, N. J.	75042	International Resistance Co.	Philadelphia, Pa.	82376	Astron Corp.	East Newark, Harrison, N. J.
60741	Triplet Electrical Inst. Co.	Bluffton, Ohio	75263	Keystone Carbon Co., Inc.	St. Marys, Pa.	82389	Switchcraft, Inc.	Chicago, Ill.
61775	Union Switch and Signal Div. of Westinghouse Air Brake Co.	Pittsburgh, Pa.	75378	CTS Knights, Inc.	Sandwich, Ill.	82647	Metals & Controls Inc.	
62119	Universal Electric Co.	Owosso, Mich.	75382	Kulka Electric Corp.	Mt. Vernon, N. Y.	82768	Phillips-Advance Control Co.	Joliet, Ill.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N. Y.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.	82866	Research Products Corp.	Madison, Wis.
64959	Western Electric Co., Inc.	New York, N. Y.	75915	Littlefuse, Inc.	Des Plaines, Ill.	82877	Rolton Mfg. Co., Inc.	Woodstock, N. Y.
65092	Western Inst. Inc. Weston-Newark	Newark, N. J.	76005	Lord Mfg. Co.	Erie, Pa.	82893	Vector Electronic Co.	Glendale, Cal.
66295	Witte Mfg. Co.	Chicago, Ill.	76210	C. W. Marwedel	San Francisco, Cal.	83058	Carr Fastener Co.	Cambridge, Mass.
66346	Minnesota Mining & Mfg. Co.		76433	General Instrument Corp.		83086	New Hampshire Ball Bearing, Inc.	Peterborough, N. H.
	Revere Mincom Div.	St. Paul, Minn.		Micamold Division	Newark, N. J.			
70276	Allen Mfg. Co.	Hartford, Conn.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.	83125	General Instrument Corp.	
70309	Allied Control	New York, N. Y.	76493	J. W. Miller Co.	Los Angeles, Cal.		Capacitor Div.	Darlington, S. C.
70318	Allmetal Screw Product Co., Inc.		76530	Cinch-Monadnock, Div. of United Carr Fastener Corp.	San Leandro, Cal.	83148	ITT Wire and Cable Div.	Los Angeles, Cal.
		Garden City, N. Y.			Cleveland, Ohio	83186	Victory Eng. Corp.	Springfield, W. J.
70417	Amplex, Div. of Chrysler Corp.	Detroit, Mich.	75545	Mueller Electric Co.	Newark, N. J.	83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.
70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	76703	National Union		83315	Hubbell Corp.	Mundelein, Ill.
70563	Amperite Co., Inc.	Union City, N. J.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.	83324	Rosan Inc.	Newport Beach, Cal.
70674	ADC Products Inc.	Minneapolis, Minn.	77068	The Bendix Corp.		83330	Smith, Herman H., Inc.	Brooklyn, N. Y.
70903	Belden Mfg. Co.	Chicago, Ill.		Electrodynamics Div.	N. Hollywood, Cal.	83332	Tech Labs	Palisades Park, N. J.
70998	Bird Electric Corp.	Cleveland, Ohio	77075	Pacific Metals Co.	San Francisco, Cal.	83351	Central Screw Co.	Chicago, Ill.
71002	Birmbach Radio Co.	New York, N. Y.	77221	Phaotran Instrument and Electronic Co.	So. Pasadena, Cal.	83505	Gavitt Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.
71034	Bliley Electric Co., Inc.	Erie, Pa.	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.	83594	Burroughs Corp., Electronic Tube Div.	Plainfield, N. J.
71041	Boston Gear Works Div. of Murray Co. of Texas	Quincey, Mass.	77342	American Machine & Foundry Co.		83740	Union Carbide Corp., Consumer Prod. Div.	New York, N. Y.
71218	Bud Radio, Inc.	Willoughby, Ohio		Potter & Brumfield Div.	Princeton, Ind.	83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
71279	Cambridge Thermionics Corp.	Cambridge, Mass.	77630	TRW Electronic Components Div.	Camden, N. J.	83821	Loyd Scruggs Co.	Festus, Mo.
71286	Camloc Fastener Corp.	Paramus, N. J.	77638	General Instrument Corp.		83942	Aeronautical Inst. & Radio Co.	Lodi, N. J.
71313	Cardwell Condenser Corp.	Lindenhurst, L. I., N. Y.		Rectifier Division	Brooklyn, N. Y.	84171	Arco Electronics Inc.	Great Neck, N. Y.
			77764	Resistance Products Co.	Harrisburg, Pa.	84396	A. J. Glesener Co., Inc.	San Francisco, Cal.
71400	Bussmann Mfg. Div. of McGraw-Edison Co.	St. Louis, Mo.	77969	Rubbercraft Corp. of Calif.	Torrance, Cal.	84411	TRW Capacitor Div.	Ogallala, Neb.
71436	Chicago Condenser Corp.	Chicago, Ill.	78189	Shakeproof Division of Illinois Tool Works	Elgin, Ill.			
71447	Calif. Spring Co., Inc.	Pico-Rivera, Cal.			So. Braintree, Mass.			
71450	CTS Corp.	Elkhart, Ind.	78277	Sigma				
71468	ITT Cannon Electric Inc.	Los Angeles, Cal.	78283	Signal Indicator Corp.	New York, N. Y.			
71471	Cinema, Div. Aerovox Corp.	Burbank, Cal.	78290	Struthers-Dunn Inc.	Pitman, N. J.			

00015-49
Revised: May, 1970

From: Handbook Supplements
H4-1 Dated January 1970

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkes Tarzian, Inc.	Bloomington, Ind.	91929	Honeywell Inc., Micro Switch Division	Freeport, Ill.	96095	Hi-Q Div. of Aerovox Corp.	Olean, N.Y.
85454	Boonton Molding Company	Boonton, N.J.				96256	Thordarson-Meissner Inc.	Mt. Carmel, Ill.
85471	A. B. Boyd Co.	San Francisco, Cal.	91961	Nahm-Bros. Spring Co.	Oakland, Cal.	96296	Solar Mfg. Co.	Los Angeles, Cal.
85474	R. M. Bracamonte & Co.	San Francisco, Cal.	92180	Tru-Connector Corp.	Peabody, Mass.	96396	Microswitch, Div. of	
85660	Koiled Kords, Inc.	Hamden, Conn.	92367	Elgeet Optical Co., Inc.	Rochester, N.Y.			
85911	Seamless Rubber Co.	Chicago, Ill.	92607	Tensolite Insulated Wire Co., Inc.				
86174	Fafnir Bearing Co.	Los Angeles, Calif.				96330	Carlton Screw Co.	Chicago, Ill.
86197	Clifton Precision Products Co., Inc.					96341	Microwave Associates, Inc.	Burlington, Mass.
		Clifton Heights, Pa.	92702	IMC Magnetics Corp.	Westbury, L.I., N.Y.	96501	Excel Transformer Co.	Oakland, Cal.
86579	Precision Rubber Products Corp.	Dayton, Ohio	92966	Hudson Lamp Co.	Kearney, N.J.	96508	Xcelite, Inc.	Orchard Park, N.Y.
86684	Radio Corp. of America, Electronic Comp. & Devices Division	Harrison, N.J.	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
86928	Seastrom Mfg. Co.	Glendale, Cal.	93369	Robbins & Myers Inc.	Pallisades Park, N.J.	96881	Thomson Ind. Inc.	Long Island, N.Y.
87034	Marco Industries	Anaheim, Cal.	93410	Semco Controls, Div. of Essex Wire Corp.	Mansfield, Ohio	97464	Industrial Retaining Ring Co.	Irvington, N.J.
87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	93632	Waters Mfg. Co.	Culver City, Cal.	97539	Automatic & Precision Mfg.	Englewood, N.J.
			93929	G.V. Controls	Livingston, N.J.	97979	Reon Resistor Corp.	Yonkers, N.Y.
87473	Western Fibrous Glass Products Co.	San Francisco, Cal.	94137	General Cable Corp.	Bayonne, N.J.	97983	Litton System Inc., Adler-Westrex Commun. Div.	New Rochelle, N.Y.
			94144	Raytheon Co., Comp. Div., Ind. Comp. Operations	Quincy, Mass.	98141	R-Tronics, Inc.	Jamaica, N.Y.
87664	Van Waters & Rogers Inc.	San Francisco, Cal.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	98159	Rubber Teck, Inc.	Gardena, Cal.
87930	Tower Mfg. Corp.	Providence, R.I.				98220	Hewlett-Packard Co., Medical Elec. Div.	Pasadena, Cal.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94154	Wagner Elect. Corp., Tung-Sol Div.	Newark, N.J.	98278	Microdot, Inc.	So. Pasadena, Cal.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94197	Curtiss-Wright Corp., Electronics Div.	East Patterson, N.J.	98291	Sealectro Corp.	Mamaronech, N.Y.
88698	General Mills, Inc.	Buffalo, N.Y.	94222	South Chester Corp.	Chester, Pa.	98376	Zero Mfg. Co.	Burbank, Cal.
89231	Graybar Electric Co.	Oakland, Cal.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98410	Etc. Inc.	Cleveland, Ohio
89473	G. E. Distributing Corp.	Schenectady, N.Y.	94375	Automatic Metal Products Co.	Brooklyn, N.Y.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
89479	Security Co.	Detroit, Mich.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	98734	Paeco Division of Hewlett-Packard Co.	
89665	United Transformer Co.	Chicago, Ill.	94696	Magnecraft Electric Co.	Chicago, Ill.	98821	North Hills Electronics, Inc.	Palo Alto, Cal.
90030	United Shoe Machinery Corp.	Beverly, Mass.	95023	George A. Philbrick Researchers, Inc.	Boston, Mass.	98978	International Electronic Research Corp.	
90179	U. S. Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N.J.						
90365	Belleville Speciality Tool Mfg., Inc.	Belleville, Ill.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	99109	Columbia Technical Corp.	New York, N.Y.
90763	United Carr Fastener Corp.	Chicago, Ill.	95236	Allies Products Corp.	Dania, Fla.	99313	Varian Associates	Palo Alto, Cal.
90970	Bearing Engineering Co.	San Francisco, Cal.	95238	Continental Connector Corp.	Woodside, N.Y.	99378	Atlee Corp.	Winchester, Mass.
91146	ITT Cannon Elect. Inc., Salem Div.	Salem, Mass.	95263	Leecraft Mfg. Co., Inc.	Long Island, N.Y.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
			95265	National Coil Co.	Sheridan, Wyo.	99707	Control Switch Division, Controls Co. of America	El Segundo, Cal.
91260	Connor Spring Mfg. Co.	San Francisco, Cal.	95275	Vitramon, Inc.	Bridgeport, Conn.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
91345	Miller Dial & Nameplate Co.	El Monte, Cal.	95348	Gordos Corp.	Bloomfield, N.J.	99848	Wilco Corporation	Indianapolis, Ind.
91418	Radio Materials Co.	Chicago, Ill.	95354	Methode Mfg. Co.	Rolling Meadows, Ill.	99928	Branson Corp.	Whippany, N.J.
91506	Augat Inc.	Attleboro, Mass.	95566	Arnold Engineering Co.	Marengo, Ill.	99934	Rembrandt, Inc.	Boston, Mass.
91637	Dale Electronics, Inc.	Columbus, Nebr.	95712	Dage Electric Co., Inc.	Franklin, Ind.	99942	Hoffman Electronics Corp., Semiconductor Division	El Monte, Cal.
91662	Elco Corp.	Willow Grove, Pa.	95984	Siemon Mfg. Co.	Wayne, Ill.	99957	Technology-Instrument Corp. of California	Newbury Park, Cal.
91673	Epiphone Inc.	New York, N.Y.	95987	Weckesser Co.	Chicago, Ill.			
91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.	96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.			
91827	K F Development Co.	Redwood City, Cal.						
91886	Malco Mfg., Inc.	Chicago, Ill.						

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado Springs Div.	Colorado Springs, Colorado	000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N.J.	000MM	Rubber Eng. & Development	Hayward, Cal.	000WW	California Eastern Lab.	Burlington, Cal.
000AB	ETA	England	000NN	A "N" D Mfg. Co.	San Jose, Cal.	000YY	S. K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.						

ELECTRONIC

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA

8250 Whiteburg Dr., S.E.
P.O. Box 4207
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA

2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
TWX: 910-951-1330

5737 East Broadway
Tucson 85711
Tel: (602) 298-2313
TWX: 910-952-1162

(Effective Dec. 15, 1973)
2424 East Aragon Rd.
Tucson 85706
Tel: (602) 889-4661

CALIFORNIA

1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
TWX: 910-952-1288

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2179

6309 Arizona Place
Los Angeles 90045
Tel: (213) 445-2511
TWX: 910-328-6148

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2220 Wall Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

9606 28th Drive
P.O. Box 23333
San Diego 92123
Tel: (714) 279-3200
TWX: 910-335-2000

1301 E. Main St.
San Jose 95128
Tel: (408) 251-1000
TWX: 910-335-2000

1301 E. Main St.
San Jose 95128
Tel: (408) 251-1000
TWX: 910-335-2000

1301 E. Main St.
San Jose 95128
Tel: (408) 251-1000
TWX: 910-335-2000

CANADA

ALBERTA

Howell-Packard (Canada) Ltd.
11748 Kingsway Ave.
Edmonton T6C 0X5
Tel: (403) 450-3870
TWX: 610-831-2431

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

COLORADO

7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT

12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA

P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando 32809
Tel: (305) 850-2500
TWX: 810-850-0113

P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 910-766-4890

6309 Arizona Place
Los Angeles 90045
Tel: (213) 445-2511
TWX: 910-328-6148

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2220 Wall Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

9606 28th Drive
P.O. Box 23333
San Diego 92123
Tel: (714) 279-3200
TWX: 910-335-2000

1301 E. Main St.
San Jose 95128
Tel: (408) 251-1000
TWX: 910-335-2000

1301 E. Main St.
San Jose 95128
Tel: (408) 251-1000
TWX: 910-335-2000

1301 E. Main St.
San Jose 95128
Tel: (408) 251-1000
TWX: 910-335-2000

1301 E. Main St.
San Jose 95128
Tel: (408) 251-1000
TWX: 910-335-2000

BRITISH COLUMBIA

Howell-Packard (Canada) Ltd.
837 B. Cordova St.
Vancouver 6
Tel: (604) 254-0534

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

Howell-Packard (Canada) Ltd.
825 8th Ave. S.W.
Suite 804
Calgary
Tel: (403) 262-4279

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-9157

20010 Century Blvd.
Germantown 20767
Tel: (311) 428-0700

P.O. Box 1648
2 Cedar Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

156 Wyalit Drive
Las Graces 89001
Tel: (505) 526-2485
TWX: 910-983-0550

6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-441-8270

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

New York City
Manhattan, Bronx
Contact Paramus, N.Y. Office
Tel: (212) 265-5000
Brooklyn, Queens, Richmond
Contact Woodbury, N.Y. Office
Tel: (516) 921-0300

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7230
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9000
TWX: 510-253-5961

5858 East Milroy Road
Saratoga 12121
Tel: (518) 454-7486
TWX: 510-941-0482

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

1 Crossway Park West
Woodbury 11797
Tel: (516) 421-0300
TWX: 910-221-2168

NEW MEXICO

P.O. Box 8366
Station C
1923 North Main Street
High Point 27021
Tel: (919) 488-8101
TWX: 910-867-4723

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (216) 835-0368
TWX: 910-477-9129

330 Progress Rd.
Dayton 45419
Tel: (513) 859-8202
TWX: 810-460-1925

6665 Quince Blvd.
Columbus 43279
Tel: (614) 838-1300

25575 Center Ridge Road
Cleveland 44125
Tel: (2

-hp- 34702A



OPERATING AND SERVICE MANUAL

Manual Part No. 34702-90002
Microfiche Part No. 34702-90052

MODEL 34702A MULTIMETER

The main body of this instruction manual applies to

Serial Number 1212A0336

and higher. Any changes made in instruments having serial numbers higher than the above number are, or will be, integrated into the manual by page revision as they occur. Revised pages are identified by a revision letter in the lower corner of the page. If a change is made that does not apply to all previously manufactured instruments, backdating information in Section VIII adapts the manual to the earlier instruments.

WARNING

To help minimize the possibility of electrical fire or shock hazards, do not expose this instrument to rain or excessive moisture.

Copyright Hewlett-Packard Company 1972
P.O. Box 301, Loveland, Colorado, 80537 U.S.A.

1

)

)

TABLE OF CONTENTS

Section	Page	Section	Page
I. GENERAL INFORMATION	1-1	V. MAINTENANCE	5-1
1-1. Introduction	1-1	5-1. Introduction	5-1
1-3. Description	1-1	5-3. Recommended Test Equipment	5-1
1-5. Specifications and General Information	1-1	5-5. Performance Tests	5-1
1-8. Instrument and Manual Identification	1-1	5-9. DC Accuracy Test (DCV Function)	5-1
		5-10. Input Impedance Test (DCV and ACV Function)	5-2
		5-11. DC Effective Common Mode Rejection	5-3
II. INSTALLATION	2-1	5-12. Normal Mode Rejection	5-4
2-1. Introduction	2-1	5-13. AC Accuracy	5-4
2-3. Initial Inspection	2-1	5-14. Response Time	5-5
2-5. Connection to the Display Module	2-1	5-15. Ohms Accuracy	5-6
2-8. Repackaging for Shipment	2-1	5-16. Adjustment Procedure	5-8
		5-18. Cover Removal	5-8
		5-20. DC Adjustments	5-8
III. OPERATING INSTRUCTIONS	3-1	5-21. 34702A AC Adjustments	5-8
3-1. Introduction	3-1	5-22. 34702A Ohms Adjustments	5-9
3-3. Panel Features	3-1		
3-5. Front Panel Operation	3-1	Section	Page
3-7. DC Voltage Measurement	3-1	VI. REPLACEABLE PARTS	6-1
3-9. AC Voltage Measurement	3-1	6-1. Introduction	6-1
3-11. Resistance Measurement	3-1	6-4. Ordering Information	6-1
3-13. 34721B/5055A Output Codes	3-1	6-6. Non-Listed Parts	6-1
		6-8. Parts Changes	6-1
		6-10. Proprietary Parts	6-1
IV. THEORY OF OPERATION	4-1		
4-1. Introduction	4-1	Section	Page
4-3. Block Diagram Description	4-1	VII. TROUBLESHOOTING AND CIRCUIT DIAGRAMS	7-1
4-5. ACV and DCV Attenuator	4-1	7-1. Introduction	7-1
4-7. Current Source	4-1	7-3. Schematic Diagram	7-1
4-9. Range/Function Switches	4-1	7-5. Component Location Diagrams	7-1
4-11. AC Converter	4-1	7-7. Troubleshooting	7-1
4-13. Detailed Theory of Operation	4-1	7-8. Troubleshooting Trees	7-1
4-14. ACV/DCV Attenuator	4-1	7-10. Troubleshooting Procedure	7-1
4-16. Ohms Converter	4-1		
4-19. AC Measuring Circuits	4-3	Section	Page
		VIII. BACKDATING	8-1
		8-1. Introduction	8-1

Appendices

- A. CODE LIST OF MANUFACTURERS
- B. SALES AND SERVICE OFFICES

LIST OF TABLES

Table	Page
1-1. Specifications	1-2
1-2. General Information	1-3
3-1. 34721B/5055A Output Codes	3-1
5-1. Recommended Test Equipment	5-1
5-2. DC Accuracy	5-2
5-3(a). AC Accuracy (45 Hz and 20 kHz)	5-5
5-3(b). AC Accuracy (100 kHz)	5-6
5-4. Ohms Accuracy Test	5-7
6-1. Replaceable Parts	6-3

LIST OF ILLUSTRATIONS

Figure	Page
1-1. Instrument Serial Number	1-1
2-1. Installation of the Model 34702A	2-1
3-1. Front and Rear Panel Features	3-0
4-1. Block Diagram	4-0
4-2. ACV/DCV Attenuator	4-1
4-3. Ohms Converter	4-2
4-4. AC/DC Converter	4-3
4-5. Impedance Converter	4-4
5-1. Input Impedance Test	5-3
5-2. Effective Common Mode Rejection	5-3
5-3. Normal Mode Rejection	5-4
5-4. Removal from Case	5-8
5-5. Adjustment Locator	5-9
7-1. AC Converter Troubleshooting Tree	7-3/7-4
7-2. Ohms Converter Troubleshooting Tree	7-3/7-4
7-3. 34702A Schematic	7-5/7-6

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This manual contains installation and operating instructions as well as maintenance information which includes performance checks for the Model 34702A. A schematic diagram, theory of operation, and troubleshooting information are provided for use in maintaining the 34702A Multimeter Module.

1-3. DESCRIPTION.

1-4. The Hewlett-Packard Model 34702A Multimeter is a signal conditioning module that may be connected to a Model 34740A or 34750A Display Module, to measure AC Voltage, DC Voltage, or resistance. The AC and DC volts functions provide four decade ranges from 1 V to 1000 V. Six resistance ranges from 100 Ω full scale to 10 M Ω full scale are provided by the "OHM (Ω)" function. Each available range of the Model 34702A has 100% overranging capability except the 1000 V range which has 20%.



Overload protection circuits allow up to 1200 V peak to be applied to the INPUT V terminals without damaging the instrument. Up to 350 V can be applied to the INPUT Ω terminals without damaging the instrument. No more than 500 V should be applied between LO and Chassis (). Do not apply voltage between LO and Chassis when using the 34721A or 34721B BCD Module. These modules connect LO to Chassis when attached to the Model 34702A.

1-5. SPECIFICATIONS AND GENERAL INFORMATION.

1-6. Table 1-1 lists specifications for the Model 34702A Multimeter. This table supercedes all other previously

printed specifications. Procedures are provided in Section V to verify performance of the instrument to its specifications and to readjust the instrument if required. The accuracy specifications apply for ambient temperatures of 23°C $\pm$ 5°C. For temperatures outside this range, a temperature coefficient factor (listed in Table 1-1) must be used.

1-7. Table 1-2 lists general information relating to the instrument.

1-8. INSTRUMENT AND MANUAL IDENTIFICATION.

1-9. A three-section serial number (xxxxAxxxxx) is used to identify your Model 34702A. Figure 1-1 illustrates the meaning of the three parts of the number.

1-10. This manual is kept up-to-date with revised pages. If the serial number of your instrument is lower than the one on the title page of this manual, refer to the backdating information in Section VIII which adapts this manual to your instrument. All correspondence with Hewlett-Packard Company should include the complete serial number.

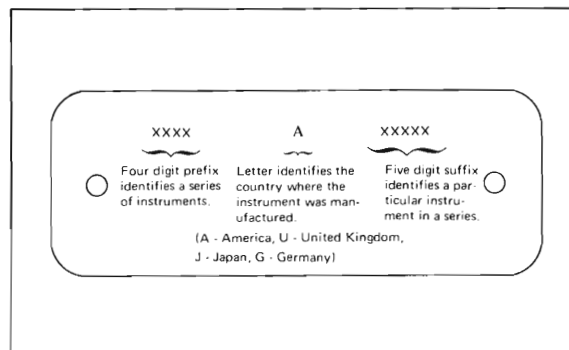


Figure 1-1. Instrument Serial Number.

Table 1-1. Specifications. (Measured using 34740A or 34750A Display Unit)

DC VOLTAGE 34740A Performance: Accuracy (+ 23°C ± 5°C, ≤ 95% RH) 30 days ± (0.03% of reading + .01% of range) 90 days ± (0.04% of reading + .01% of range) 6 mo. ± (0.05% of reading + .02% of range) 1 yr. ± (0.06% of reading + .02% of range) Stability (24 hours, + 23°C ± 1°C) ± (0.01% of reading + 0.005% of range) Temperature Coefficient (0°C to + 50°C) DC voltage: ± (0.0035% of reading + 0.001% of range) / °C. Input Characteristics: Input resistance 1 and 10 V ranges: 11.11 MΩ ± 0.2% 100 V range: 10.1 MΩ ± 0.2% 1000 V range: 10 MΩ ± 0.2% Effective Common Mode Rejection (1 kΩ unbalance) DC: > 80 dB. * Normal Mode Rejection 50 Hz (Option 050): > 60 dB (50 Hz ± 0.1%) 60 Hz (Option 060): > 60 dB (60 Hz ± 0.1%) * Does not apply when BCD Module is used. AC VOLTAGE 34740A Performance: Accuracy (+ 23°C ± 5°C, ≤ 95% RH) 30 days 45 Hz to 20 kHz ± (0.25% of reading + .05% of range) 20 kHz to 100 kHz ± (0.75% of reading + .05% of range) 90 days 45 Hz to 20 kHz ± (0.30% of reading + .05% of range) 20 kHz to 100 kHz ± (0.80% of reading + .05% of range) 6 mo. 45 Hz to 20 kHz ± (0.35% of reading + .05% of range) 20 kHz to 100 kHz ± (0.85% of reading + .05% of range) 1 yr. 45 Hz to 20 kHz ± (0.50% of reading + 0.05% of range) 20 kHz to 100 kHz ± (1.0% of reading + 0.05% of range) Temperature Coefficient (0°C to + 50°C) AC voltage: ± (0.03% of reading + 0.001% of range) / °C. Stability (24 hours, + 23°C ± 1°C) AC voltage: 45 Hz to 20 kHz: ± (0.15% of reading + 0.05% of range) 20 kHz to 100 kHz: ± (0.4% of reading + 0.05% of range) Response Time: < 2 s within ± 0.3% of final value or 20 counts, whichever is greater. Input Characteristics:	Input impedance 1 and 10 V ranges: 11.11 MΩ ± 0.2% / 80 pF max. 100 V range: 10.1 MΩ ± 0.2% / 80 pF max. 1000 V range: 10 MΩ ± 0.2% / 80 pF max. OHMS 34740A Performance: Accuracy (+ 23°C ± 5°C, ≤ 95% RH) 30 days 10 MΩ range ± (0.25% of reading + 0.02% of range) All other ranges ± (0.05% of reading + 0.02% of range) 90 days 10 MΩ range ± (0.30% of reading + 0.02% of range) All other ranges ± (0.06% of reading + 0.02% of range) 6 mo. 10 MΩ range ± (0.35% of reading + 0.03% of range) All other ranges ± (0.07% of reading + 0.03% of range) 1 yr. 10 MΩ range ± (0.50% of reading + 0.03% of range) All other ranges ± (0.11% of reading + 0.03% of range) Stability (24 hours, 23°C ± 1°C) 10 MΩ range ± (0.1% of reading + 0.01% of range) All other ranges ± (0.02% of reading + 0.02% of range) Temperature Coefficient (0°C to + 50°C) Ohms 10 MΩ range: ± (0.035% of reading + 0.001% of range) / °C. All other ranges: ± (0.006% of reading + 0.001% of range) / °C. DC VOLTAGE 34750A Performance: Accuracy (+ 23°C ± 5°C, ≤ 95% RH) 30 days ± (0.025% of reading + .005% of range) 90 days ± (0.035% of reading + .005% of range) 6 mo. ± (0.045% of reading + .007% of range) 1 yr. ± (0.06% of reading + .01% of range) NOTE: Due to temperature change inside the instrument between line and battery operation, the references must be adjusted when changing modes to achieve these specifications. Stability (24 hours, + 23°C ± 1°C) DC voltage: ± (.008% of reading ± .004% of range) Temperature Coefficient (0°C to + 50°C) DC voltage: ± (0.0025% of reading + 0.0002% of range) / °C Input Characteristics Input resistance 1 and 10 V ranges: 11.11 MΩ ± 0.2% 100 V range: 10.1 MΩ ± 0.2% 1000 V range: 10 MΩ ± 0.2% Effective Common Mode Rejection (1 kΩ unbalance) DC: > 80 dB. * * Does not apply when BCD Module is used.
---	---

Table 1-1. Specifications (Cont'd).

Normal Mode Rejection 50 Hz (Option 050): > 60 dB (50 Hz $\pm 0.1\%$) 60 Hz (Option 060): > 60 dB (60 Hz $\pm 0.1\%$) AC VOLTAGE 34750A Performance: Accuracy ($+23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, $\leq 95\%$ RH) 30 days 45 Hz to 20 kHz $\pm (0.25\%$ of reading $+ .05\%$ of range) 20 kHz to 100 kHz $\pm (.75\%$ of reading $+ .05\%$ of range) 90 days 45 Hz to 20 kHz $\pm (.3\%$ of reading $+ .05\%$ of range) 20 kHz to 100 kHz $\pm (.8\%$ of reading $+ .05\%$ of range) 6 mo. 45 Hz to 20 kHz $\pm (.35\%$ of reading $+ .05\%$ of range) 20 kHz to 100 kHz $\pm (.85\%$ of reading $+ .05\%$ of range) 1 yr. 45 Hz to 20 kHz $\pm (0.50\%$ of reading $+ 0.05\%$ of range) 20 kHz to 100 kHz $\pm (1.0\%$ of reading $+ 0.05\%$ of range) Stability (24 hours, $+23^{\circ}\text{C} \pm 1^{\circ}\text{C}$) AC voltage: 45 Hz to 20 kHz: $\pm (0.15\%$ of reading $+ 0.05\%$ of range) 20 kHz to 100 kHz: $\pm (0.4\%$ of reading $+ 0.05\%$ of range) Temperature Coefficient (0°C to $+50^{\circ}\text{C}$) AC voltage: $+ (0.03\%$ of reading $+ 0.001\%$ of range) $/^{\circ}\text{C}$ Response Time: < 2 s within $\pm 0.3\%$ of final value or 200 counts, whichever is greater.	Input Characteristics: Input impedance 1 and 10 V ranges: $11.11\text{ M}\Omega \pm 0.2\%$ / 80 pF max. 100 V range: $10.1\text{ M}\Omega \pm 0.2\%$ / 80 pF max. 1000 V range: $10\text{ M}\Omega \pm 0.2\%$ / 80 pF max. OHMS 34750A Performance: Accuracy ($+23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, $\leq 95\%$ RH) 30 days 10 $\text{M}\Omega$ range $\pm (0.25\%$ of reading $+ 0.015\%$ of range) All other ranges $\pm (0.045\%$ of reading $+ 0.015\%$ of range) 90 days 10 $\text{M}\Omega$ range $\pm (0.3\%$ of reading $+ 0.015\%$ of range) All other ranges $\pm (0.055\%$ of reading $+ 0.015\%$ of range) 6 mo. 10 $\text{M}\Omega$ range $\pm (0.35\%$ of reading $+ 0.02\%$ of range) All other ranges $\pm (0.065\%$ of reading $+ 0.02\%$ of range) 1 yr. 10 $\text{M}\Omega$ range $\pm (0.50\%$ of reading $+ 0.02\%$ of range) All other ranges $\pm (0.11\%$ of reading $+ 0.02\%$ of range) NOTE: Due to temperature change inside the instrument between line and battery operation, the references must be adjusted when changing modes to achieve these specifications. Stability (24 hours, $23^{\circ}\text{C} \pm 1^{\circ}\text{C}$) 10 $\text{M}\Omega$ range $\pm (0.1\%$ of reading $+ 0.009\%$ of range) All other ranges $\pm (0.2\%$ of reading $+ 0.015\%$ of range) Temperature Coefficient (0°C to $+50^{\circ}\text{C}$) 10 $\text{M}\Omega$ range: $\pm (0.035\%$ of reading $+ 0.001\%$ of range) $/^{\circ}\text{C}$ All other ranges: $\pm (0.006\%$ of reading $+ 0.001\%$ of range) $/^{\circ}\text{C}$
---	---

Table 1-2. General Information.

DC VOLTAGE 34740A

Ranges:

Range	Full Scale Reading	Maximum Reading
1 V	$\pm 1.0000\text{ V}$	$\pm 1.9999\text{ V}$
10 V	$\pm 10.000\text{ V}$	$\pm 19.999\text{ V}$
100 V	$\pm 100.00\text{ V}$	$\pm 199.99\text{ V}$
1000 V	$\pm 1000.0\text{ V}$	$\pm 1200.0\text{ V}$

Overrange

1000 V range: 20%.

All other ranges: 100% (19999 max reading)

Range Selection: manual pushbuttons

Performance:

Reading Rate

Option 050 (50 Hz): 8/s fixed

Option 060 (60 Hz): 5/s fixed

Input Characteristics:

Input terminals: floating pair *

Maximum input voltage

High to Low: $\pm 1200\text{ V}$

Low to Chassis: $\pm 500\text{ V}$ *

* Does not apply when BCD Module is used.

AC VOLTAGE

34740A

Ranges:

Range	Full Scale Reading	Maximum Reading
1 V	1.0000 V	1.9999 V
10 V	10.000 V	19.999 V
100 V	100.00 V	199.99 V
1000 V	1000.0 V	1200.0 V

Table 1-2. General Information (Cont'd).

Overrange
1000 V range: 20%
All other ranges: 100% (19999 max reading)

Range selection: manual pushbuttons

Performance:

Frequency range: 45 Hz to 100 kHz

Input Characteristics:

Input terminals: floating pair. *

Maximum input voltage
High to low: 1200 V rms. Except 1 V range.
1 V Range:
1200 V rms maximum 45 Hz – 200 Hz
300 V rms maximum 200 Hz – 100 kHz

Low to Chassis: ± 500 V *

* Does not apply when BCD Module is used.

OHMS 34740A

Ranges:

Range	Full Scale Reading	Maximum Reading
100 Ω	100.00 Ω	199.99 Ω
1 k Ω	1.0000 k Ω	1.9999 k Ω
10 k Ω	10.000 k Ω	19.999 k Ω
100 k Ω	100.00 k Ω	199.99 k Ω
1000 k Ω	1000.0 k Ω	1999.9 k Ω
10 M Ω	10.000 M Ω	19.999 M Ω

Overrange: 100% on all ranges

Range selection: manual pushbuttons

Input Characteristics:

Input terminals: floating pair (different from voltage input terminals).

Current through measured resistor: 10 mA on 100 Ω range decreasing one decade per successively higher range.

Effective Common Mode Rejection: same as dc specifications.

Overload protection: ± 350 V peak (248 V rms sine wave).

Other:

Operating temperature: 0°C to +50°C.

Storage temperature: -40°C to +75°C.

Line requirements: 100/120/220/240 V
- 10%, + 5% switchable:
48 Hz to 440 Hz; ≤ 8.7 VA.

DC VOLTAGE

34750A

Ranges:

Range	Full Scale Reading	Maximum Reading
1 V	± 1.00000 V	± 1.99999 V
10 V	± 10.0000 V	± 19.9999 V
100 V	± 100.000 V	± 199.999 V
1000 V	± 1000.00 V	± 1200.00 V

Overrange
1000 V range: 20%
All other ranges: 100% (199999 max reading)

Range selection: manual pushbuttons

Reading rate

Option 050 (50 Hz): 4/s fixed

Option 060 (60 Hz): 5/s fixed

Input terminals: floating pair *

Maximum input voltage

High to Low: ± 1200 V

Low to Chassis: ± 500 V *

* Does not apply when BCD Module is used.

AC VOLTAGE

34750A

Ranges:

Range	Full Scale Reading	Maximum Reading
1 V	1.00000 V	1.99999 V
10 V	10.0000 V	19.9999 V
100 V	100.000 V	199.999 V
1000 V	1000.00 V	1200.00 V

Overrange

1000 V range: 20%

All other ranges: 100% (199999 max reading)

Range selection: manual pushbuttons

Frequency range: 45 Hz to 100 kHz

Input terminals: floating pair

Maximum input voltage

High to Low: 1200 V rms except on 1 V range.

On 1 V range 2.5×10^5 V Hz limit with minimum protection of 300 V rms.

Low Chassis: ± 500 V

OHMS

34750A

Ranges:

100 Ω	100.000 Ω	199.99 Ω
1 k Ω	1.00000 k Ω	1.99999 k Ω
10 k Ω	10.0000 k Ω	19.9999 k Ω
100 k Ω	100.000 k Ω	199.999 k Ω
1000 k Ω	1000.00 k Ω	1999.99 k Ω
10 M Ω	10.0000 M Ω	19.9999 M Ω

Overrange: 100% on all ranges

Range selection: manual pushbuttons

Input terminals: floating pair (different from voltage input terminals).

Current through measured resistor: 10 mA on 100 Ω range decreasing one decade per successively higher range.

Effective Common Mode Rejection: same as dc specifications.

Overload protection: ± 350 V peak (248 V rms sine wave).

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains installation and shipping information for the Model 34702A.

2-3. INITIAL INSPECTION.

2-4. The Model 34702A should be inspected upon receipt for damage that might have occurred in transit. If there is damage due to shipping, file a claim with the carrier. If there are other electrical or mechanical deficiencies refer to the warranty statement on the back of the title page. Use the procedures provided in Section V to check instrument performance.

2-5. CONNECTION TO THE DISPLAY MODULE.

2-6. Referring to Figure 2-1, connect the Model 34702A to the Display Module using the following procedure:

- a. Pull the side locks on the Display Module to the rear.
- b. Position the Display Module and 34702A together so that the tabs and slots on the sides of the two units interlock.
- c. Push the side locks toward the Display Module. This pulls the two units together and locks them.

2-7. If a 34720A Battery Module or a 34721B BCD Module is to be used between the display module and the 34702A then the side locks on this middle module hold the 34702A.

2-8. REPACKAGING FOR SHIPMENT.

2-9. If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument describing the work to be accomplished and identifying the owner of the instrument. Identify the instrument by serial number, model number and name in any correspondence. If you have any questions, contact your local Hewlett-Packard Sales and Service Office.

2-10. If the original shipping container is to be used, place the instrument in the container with appropriate packing material and seal the container well with strong tape or metal bands.

2-11. If an -hp- container is not to be used, use a heavy carton or wooden box with an inner container. Wrap the instrument with heavy paper or plastic and place cardboard strips across the face for protection before placing the instrument in the inner container. Use packing material around all sides of the inner container, and seal the outer container well with strong tape or metal bands. Mark the container with "DELICATE INSTRUMENT" or "FRAGILE."

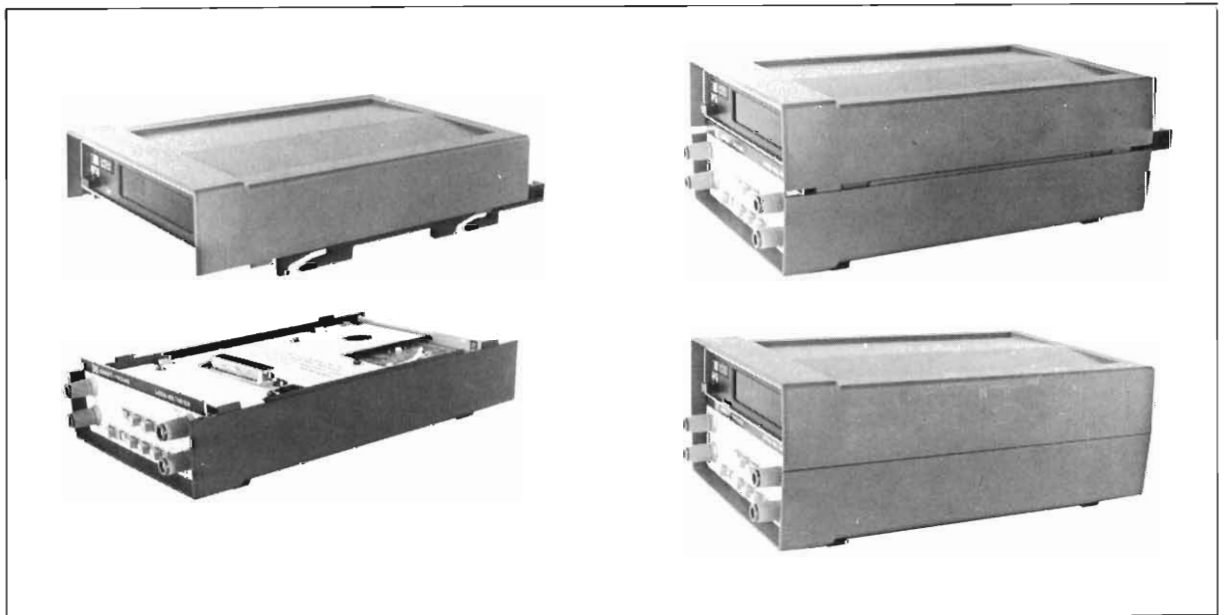


Figure 2-1. Installation of the Model 34702A.

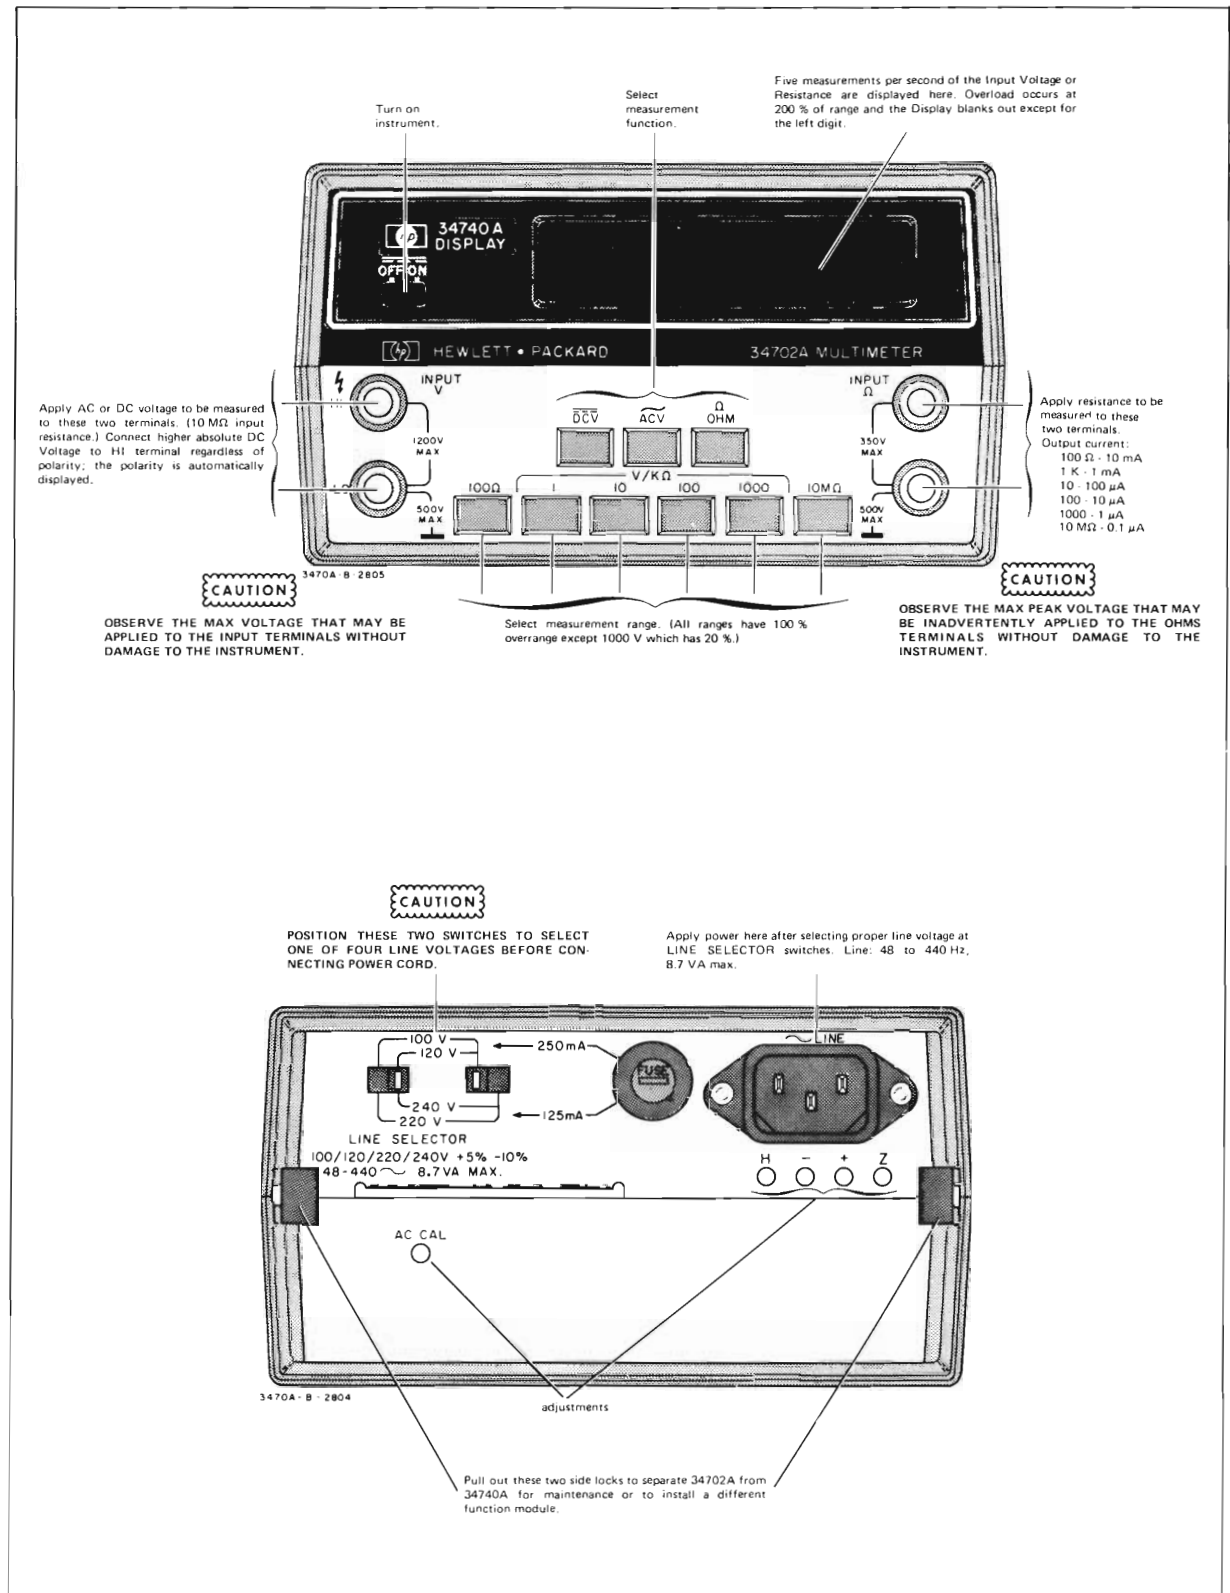


Figure 3-1. Front and Rear Panel Features.

SECTION III

OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. This section contains instructions and information which will assist you in proper operation of the Model 34702A Multimeter Module. A Model 34740A or 34750A Display Module is required to operate the Model 34702A. Included in this section is identification of controls, indicators and connectors; operating procedures; and BCD output code information (for use in conjunction with the 34721B BCD Module).

3-3. PANEL FEATURES.

3-4. The panel features of the instrument are described in Figure 3-1.

3-5. FRONT PANEL OPERATION.

3-6. There are two manual controls; the function switch and the range switch (See Figure 3-1). Each range, except the 1000 V range, has 100% overranging capability; e.g. using a four digit display module 1.9999 V can be measured on the 1 V range. The display blanks at 200% of range, indicating an overload.



Overload protection circuits allow up to 1200 V peak to be applied to the INPUT V terminals without damaging the instrument. Up to 350 V can be applied to the INPUT Ω

terminals without damaging the instrument. No more than 500 V should be applied between LO and Chassis (). Do not apply voltage between LO and Chassis when using the 34721A or 34721B BCD Module. These modules connect LO to Chassis when attached to the Model 34702A.

3-7. DC Voltage Measurement.

3-8. Set the Function switch to DCV, select the required voltage range, and apply the voltage to be measured to the INPUT V terminals.

3-9. AC Voltage Measurement.

3-10. Set the function switch to ACV, select the required voltage range, and apply the voltage to be measured to the INPUT V terminals.

3-11. Resistance Measurement.

3-12. Set the function switch to OHM (Ω), select the required resistance range, and connect the device to be measured to the INPUT Ω terminals.

3-13. 34721B/5055A OUTPUT CODES.

3-14. Output codes obtained from a 34721B BCD Module when used in conjunction with the Model 34702A and a display module are listed in Table 3-1. Refer to the 34721B Operating and Service Manual for further information regarding the BCD Module.

Table 3-1. 34721B/5055A Output Codes.

Number Printed	Polarity Overload Column 9	Range Column 8		Function Column 7	Overrange Column 6	Digits Columns 1 through 5
		k Ω	Volts			
0	+			DCV ACV k Ω	underrange overrange	0
1		10000				1
2		1000	1000			2
3		100	100			3
4		10	10			4
5		1	1			5
6		.1				6
7						7
8						8
9						9

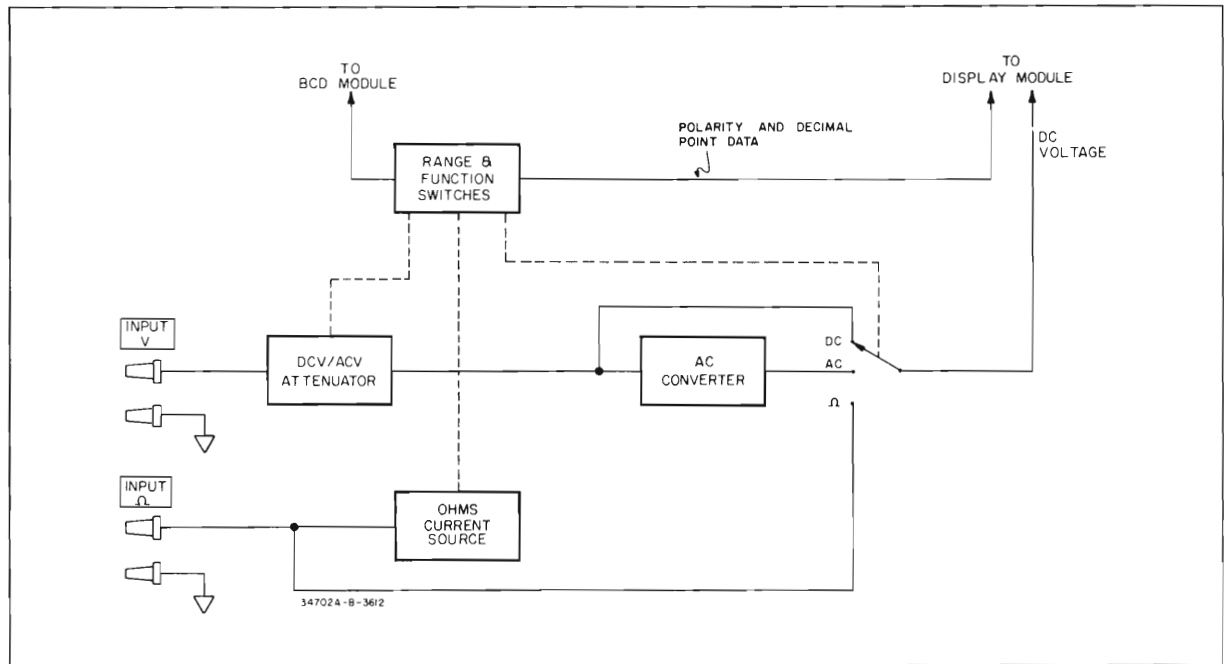


Figure 4-1. Block Diagram.

SECTION IV

THEORY OF OPERATION

4.1. INTRODUCTION.

4-2. This section contains a description of the Model 34702 Multimeter in simplified form followed by a more detailed functional description. A detailed circuit schematic is shown in Figure 7-3.

4.3. BLOCK DIAGRAM DESCRIPTION.

4-4. The circuits of the Model 34702A can be divided into four major blocks shown in Figure 4-1.

4.5. ACV And DCV Attenuator.

4-6. The ACV/DCV Attenuator reduces the level of the signal applied to the input so that it can be measured by the 34740A or 34750A Display Module. The signal can be attenuated by a factor of 1, 10, 100 or 1000.

4.7. Current Source.

4-8. Resistance measurements are made by passing a known current through the resistor being measured and then measuring the voltage developed across the resistor. The current source supplies five different currents used by the six available ohmmeter ranges. Resistance of an unknown is measured by connecting it across the OHMS terminals and selecting OHM (Ω) function.

4.9. Range/Function Switches.

4-10. Range and Function switching is accomplished by manual selection. Data from the Range and Function switches is supplied to the Display Module, and to the BCD Module when it is connected.

4.11. AC Converter.

4-12. The AC Converter accepts ac voltage from the attenuator and changes it to a dc voltage proportional to the level of the applied signal.

4.13. DETAILED THEORY OF OPERATION.

4.14. ACV/DCV Attenuator.

4-15. Figure 4-2 shows the ACV/DCV Attenuator with its AC and DC voltage accuracy adjustments deleted. Resistors R3, R5, and R7, shown in Figure 7-5 are dc adjustments. Capacitors C3 through C11, also shown in Figure 7-5, provide ac compensation for the attenuator.

4.16. Ohms Converter.

4-17. **Current Source.** A simplified diagram of the Ohmmeter current source is shown in Figure 4-3a. Zener diode CR16 is the voltage reference for the current source.

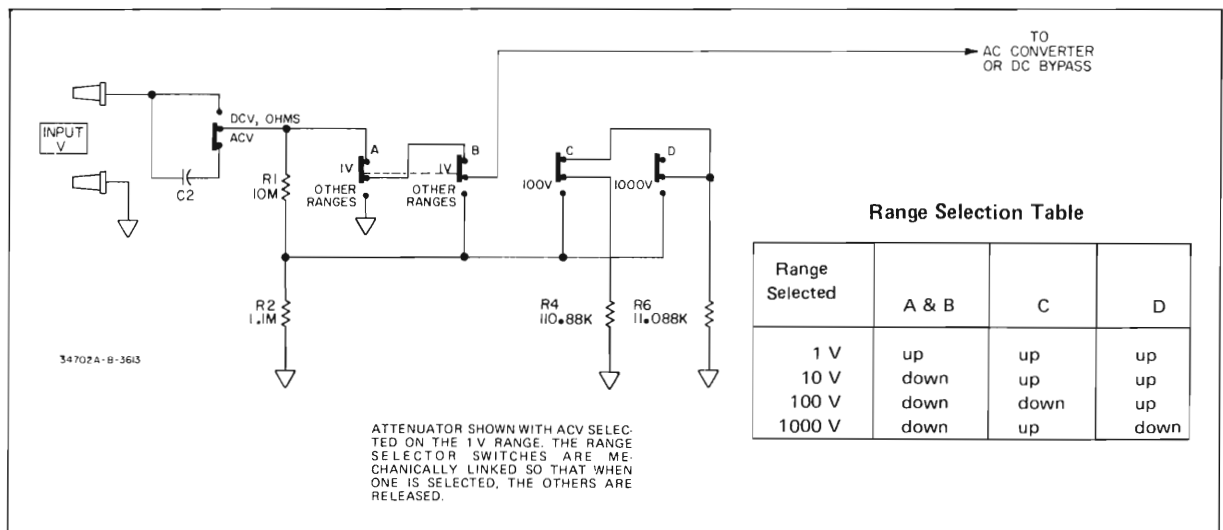


Figure 4-2. ACV/DCV Attenuator.

Amplifier A is connected in a non-inverting configuration and R_b is adjusted such that 1 V (.1 V for the 10 M Ω range) is developed across R_a and R_b . Amplifier B has its + input connected to a stable dc voltage of -6.2 V. The - input is connected to the output of Amplifier A through the range reference resistors R52 - R56. The 1 V across R_a and R_b causes the output of Amplifier B to become more positive. This allows the current through Q_x to vary such that the - input of Amplifier B becomes approximately -6.2 V. The input current to Amplifier B is very small. Consequently the current that flows through the range reference resistors is the same as the current supplied by the source of Q_x . The drain current of Q_x is almost identical to its source current because the gate current is extremely small. The drain current flows through R_x and develops a

dc voltage which is applied to the Display Module input. The output current, I_x , is changed for different resistance ranges by changing the value of R_a . On the 10 M Ω range Switch S_b is in the 10 M Ω position which reduces the voltage between points 4 and 5 to .1 V.

4-18. Ohms Protection Circuit. The actual circuit represented by Q_x in Figure 4-3a is shown in Figure 4-3b. The ohmmeter circuits are protected for voltages applied to the "OHM (Ω)" input up to 350 V peak. Large negative voltages are blocked by CR12. Large positive voltages are blocked by the high collector to base breakdown voltages of Q13 and Q14. CR13 conducts for positive voltages greater than approximately 2 V, causing CR14 to conduct,

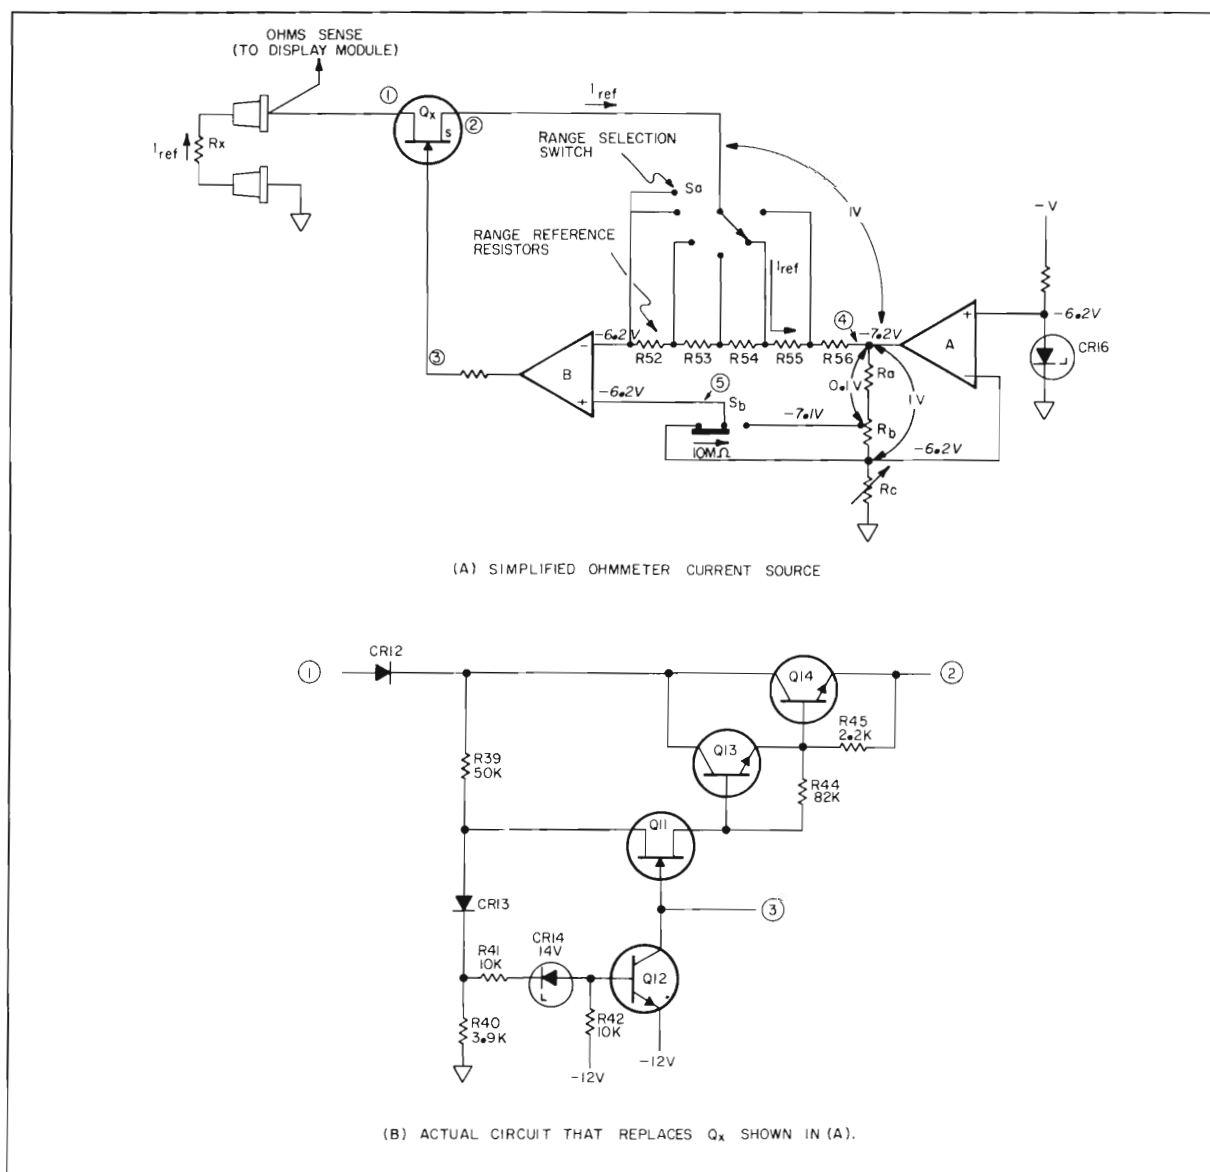


Figure 4-3. Ohms Converter.

turning on Q12. This places -12 V at the collector of Q12 which turns off transistors Q11, Q13, and Q14.

4-19. AC Measuring Circuits.

4-20. A simplified diagram of the circuits used to measure ac voltage is shown in Figure 4-4.

The attenuation of the input signal by the Attenuator for the four ac voltage ranges is:

Range	Attenuation Factor
1 V	X 1
10 V	X 0.1
100 V	X 0.01
1000 V	X 0.001

The output voltage of the attenuator is buffered by the Impedance Converter. The voltage gain of the Impedance Converter is adjustable and is approximately one. Its input impedance is very high to minimize loading of the Attenuator and its output resistance is low to drive the Converter Amplifier. The AC Converter yields a dc output voltage that is proportional to the average value of the negative half-wave rectified input signal. The resulting voltage is filtered and measured by the Display Module.

4-21. Impedance Converter. A simplified diagram of the Impedance Converter is shown in Figure 4-5. The input transistor Q1 is a source follower. Transistors Q2 and Q3 constitute an amplifier that provides bias current to Q1 and a high input resistance (load resistance) for Q1. A positive going voltage at point 1 causes the voltage at point 2 to increase. This increased voltage at point 2 increases the

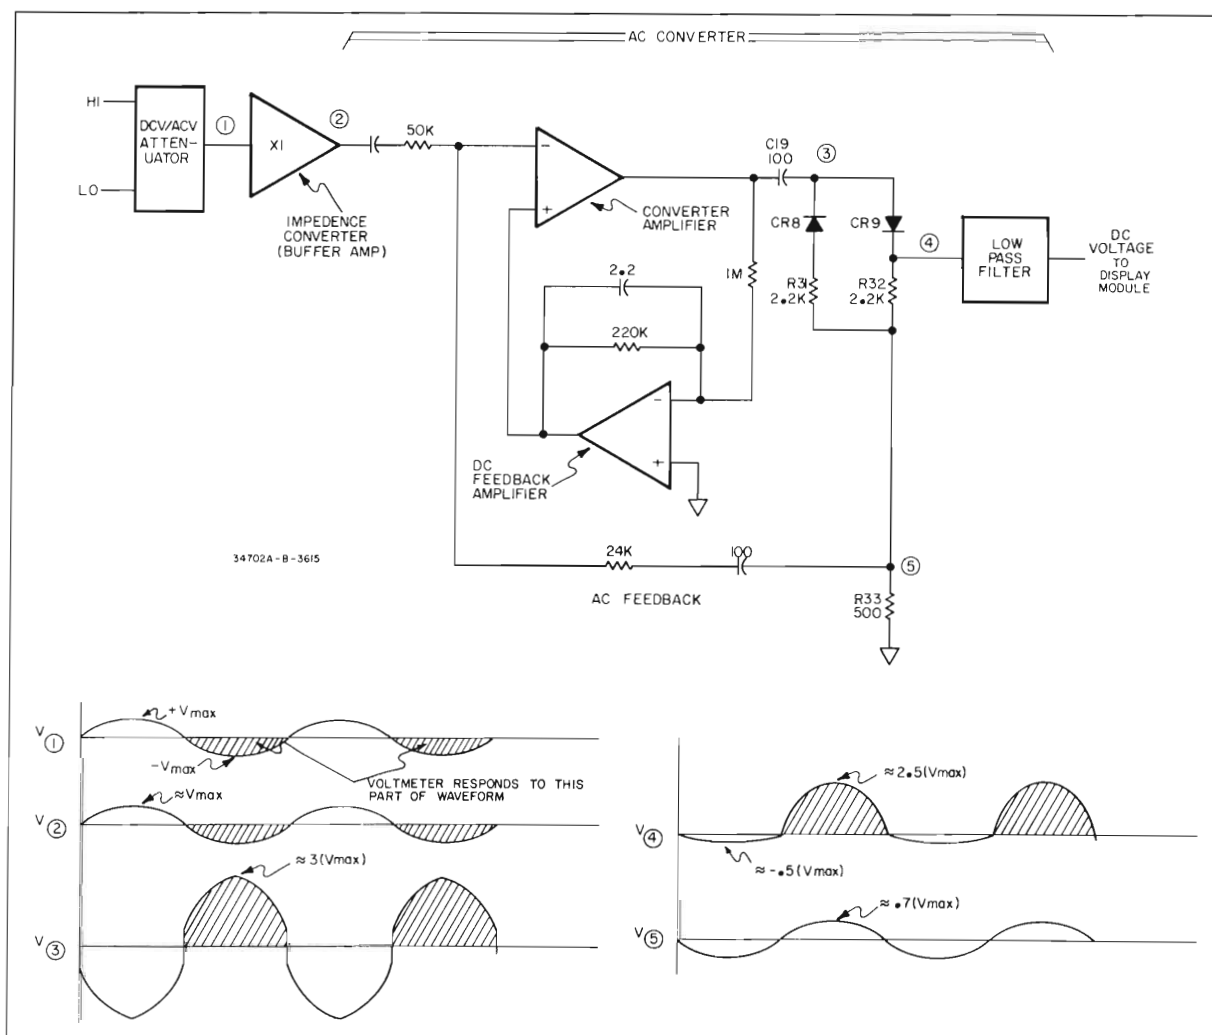


Figure 4-4. AC/DC Converter.

current through Q2. The increased current causes the voltage at point 4 to increase. Since Q3 is an emitter follower, point 3 will also increase and follow very closely the voltage at point 2. Since the output voltage is taken at the emitter of Q3, R13 may be increased to make the gain of the amplifier greater than unity.

4-22. AC Converter. Refer to Figure 4-4 for the following discussion. Overall ac feedback is supplied from point 5 back to the inverting input. The voltage at point 5 is similar in shape to the voltage at point 2, inverted and about one-half the amplitude. Current for the negative half of the waveform at point 5 flows through CR8, R31 and R33. Current for the positive half of this waveform flows through CR9, R32 and R33. The output voltage is taken at the cathode of CR9, filtered by the Low Pass Filter and measured by the Display Module. The DC Feedback Amplifier provides a low frequency feedback path around the Converter Amplifier to keep the Converter Amplifier biased properly.

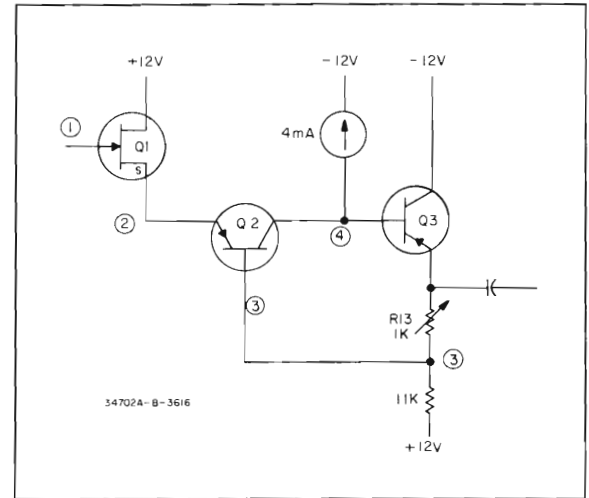


Figure 4-5. Impedance Converter.

SECTION V MAINTENANCE

5-1. INTRODUCTION.

5-2. This section contains information necessary for maintenance of the -hp- Model 34702A Multimeter. Included are Performance Tests and Adjustment Procedures for the 30 day, 90 day, 6 month, and 1 year intervals referred to in Table 1-1. To determine the optimum calibration interval for your instrument, refer to MIL Specification MIL-C-45662A. If, after completing the Performance Checks, you find that the instrument does not meet its required specifications, refer to the Adjustment Procedure (Paragraph 5-16). Attempt to readjust the instrument to bring it into specification. If, after adjusting the instrument, it is still out of specification, refer to troubleshooting in Section VII.

5-3. RECOMMENDED TEST EQUIPMENT.

5-4. The test equipment that is recommended for maintaining the Model 34702A is listed in Table 5-1. If the recommended model is not available, use equipment that has specifications equal to or better than those listed.

Table 5-1. Recommended Test Equipment.

Instrument Type	Required Characteristics	Recommended Model
AC Calibrator	1 V, 10 V, 100 V 1000 V, 45 Hz to 100 kHz Accuracy: $\pm 0.04\%$ of setting (45 Hz to 20 kHz) $\pm 0.15\%$ of setting (100 kHz)	-hp- Model 745A/746A
100 Ω , 1 k Ω 10 k Ω , 100 k Ω , 1 M Ω , 10 M Ω standard resistors	Accuracy: $\pm 0.01\%$	General Radio Model GR 1433-Z Decade Resistor
DC Standard	1 V, 10 V, 100 V, 1000 V Ranges Accuracy: $\pm 0.008\%$	-hp- 740B
Electronic Counter	Capable of measuring the period of 50 Hz or 60 Hz to within $\pm .01\%$	-hp- Model 5300A/ 5302A

5-5. PERFORMANCE TESTS.

5-6. The following tests verify that the Model 34702A is operating properly and meets the specifications listed in Table 1-1 of this manual. These tests should be completed before any attempt is made to adjust the instrument.

5-7. A Performance Test Record is provided at the end of this section for recording the results of the Performance Tests.

5-8. All of the following tests have been written to include the use of either a 34740A or 34750A Display Module.

5-9. DC Accuracy Test (DCV Function).

DESCRIPTION:

This test verifies the ability of the Model 34702A to measure dc voltage accurately within the specification limits.

SPECIFICATION:

34740A

Accuracy (+ 23°C $\pm$ 5°C), $\leq 95\%$ RH):

30 days	$\pm (0.03\% \text{ of reading} + .01\% \text{ of range})$
90 days	$\pm (0.04\% \text{ of reading} + .01\% \text{ of range})$
6 mo.	$\pm (0.05\% \text{ of reading} + .02\% \text{ of range})$
1 yr.	$\pm (0.06\% \text{ of reading} + .02\% \text{ of range})$

34750A

Accuracy (+ 23°C $\pm$ 5°C), $\leq 95\%$ RH):

30 days	$\pm (0.025\% \text{ of reading} + .005\% \text{ of range})$
90 days	$\pm (0.035\% \text{ of reading} + .005\% \text{ of range})$
6 mo.	$\pm (0.045\% \text{ of reading} + .007\% \text{ of range})$
1 yr.	$\pm (0.06\% \text{ of reading} + .01\% \text{ of range})$

RECOMMENDED TEST EQUIPMENT:

DC Standard, -hp- Model 740B

TEST PROCEDURE:

a. Select the DCV function of the Model 34702A and connect a dc standard (-hp- Model 740B or equivalent) to the 34702A INPUT V terminals.

b. Check dc accuracy for both polarities of input according to Table 5-2. Apply short to 34702A input to check 0 V reading on all ranges.

NOTE

With 1000 V applied only the positive polarity is checked due to the possibility of arcing within the Model 740B.

Table 5-2. DC Accuracy.

DC Standard	34702A Range	34740A Display				DC Standard	34702A Range	34750A Display			
		30 Day	90 Day	6 Months	1 Year			30 Day	90 Day	6 Months	1 Year
0 V	1 V	- .0001 to + .0001	- .0001 to + .0001	- .0002 to + .0002	- .0002 to + .0002	0 V	1 V	- .00004 to + .00004	- .00005 to + .00005	- .00007 to + .00007	- .00010 to + .00010
± 1 V	1 V	± .9996 to ± 1.0004	± .9995 to ± 1.0005	± .9993 to ± 1.0007	± .9992 to ± 1.0008	± 1 V	1 V	± .99971 to ± 1.00029	± .99960 to ± 1.00040	± .99948 to ± 1.00052	± .99930 to ± 1.00070
± 1.9 V	1 V	± 1.8993 to ± 1.9007	± 1.8991 to ± 1.9009	± 1.8989 to ± 1.9012	± 1.8987 to ± 1.9013	± 1.9 V	1 V	± 1.89948 to ± 1.90052	± 1.89929 to ± 1.90072	± 1.89908 to ± 1.90093	± 1.89876 to ± 1.90124
± 1.998 V	1 V	± 1.9973 to ± 1.9987	± 1.9971 to ± 1.9989	± 1.9968 to ± 1.9962	± 1.9965 to ± 1.9995	± 1.998 V	1 V	± 1.99746 to ± 1.99854	± 1.99725 to ± 1.99875	± 1.99703 to ± 1.99897	± 1.99660 to ± 1.99940
0 V	10 V	- 0.001 to + 0.001	- 0.001 to + 0.001	- 0.002 to + 0.002	- 0.002 to + 0.002	0 V	10 V	- 0.0004 to + 0.0004	- 0.0005 to + 0.0005	- 0.0007 to + 0.0007	- 0.0010 to + 0.0010
± 10 V	10 V	± 9.996 to ± 10.004	± 9.995 to ± 10.005	± 9.993 to ± 10.007	± 9.992 to ± 10.008	± 10 V	10 V	± 9.9971 to ± 10.0029	± 9.9960 to ± 10.0040	± 9.9948 to ± 10.0052	± 9.9939 to ± 10.0070
± 19 V	10 V	± 18.993 to ± 19.007	± 18.991 to ± 19.009	± 18.989 to ± 19.012	± 18.987 to ± 19.013	± 19 V	10 V	± 18.9948 to ± 19.0052	± 18.9929 to ± 19.0072	± 18.9908 to ± 19.0093	± 18.9876 to ± 19.0124
0 V	100 V	- 0.001 to + 0.001	- 0.001 to + 0.001	- 0.002 to + 0.002	- 0.002 to + 0.002	0 V	100 V	- 0.0004 to + 0.0004	- 0.0005 to + 0.0005	- 0.0007 to + 0.0007	- 0.0010 to + 0.0010
± 100 V	100 V	± 99.96 to ± 100.04	± 99.95 to ± 100.05	± 99.93 to ± 100.07	± 99.92 to ± 100.08	± 100 V	100 V	± 99.971 to ± 100.029	± 99.960 to ± 100.040	± 99.948 to ± 100.052	± 99.930 to ± 100.070
± 190 V	100 V	± 189.93 to ± 190.07	± 189.91 to ± 190.09	± 189.89 to ± 190.12	± 189.87 to ± 190.13	± 190 V	100 V	± 189.948 to ± 190.052	± 189.929 to ± 190.072	± 189.908 to ± 190.093	± 189.876 to ± 190.124
0 V	1000 V	- 0.001 to + 0.001	- 0.001 to + 0.001	- 0.002 to + 0.002	- 0.002 to + 0.002	0 V	1000 V	- 0.0004 to + 0.0004	- 0.0005 to + 0.0005	- 0.0007 to + 0.0007	- 0.0010 to + 0.0010
± 1000 V	1000 V	± 999.6 to + 1000.4	± 999.5 to + 1000.5	± 999.3 to + 1000.7	± 999.2 to + 1000.8	± 1000 V	1000 V	± 999.71 to + 1000.29	± 999.60 to + 1000.40	± 999.48 to + 1000.52	± 999.30 to + 1000.70

5-10. Input Impedance Test (DCV and ACV Function).**DESCRIPTION:**

Input impedance affects the ability of a voltmeter to accurately measure a given voltage because of loading effects caused by the impedance. Normally, it is desirable to achieve as high an input impedance as possible. This check ensures that the input impedance of the Model 34702A meets the specifications listed below.

SPECIFICATION:**Input Resistance**

1 and 10 V ranges: $11.11 \text{ M}\Omega \pm 0.2\% \leq 80 \text{ pF}$
 100 V range: $10.1 \text{ M}\Omega \pm 0.2\% \leq 80 \text{ pF}$
 1000 V range: $10 \text{ M}\Omega \pm 0.2\% \leq 80 \text{ pF}$

RECOMMENDED TEST EQUIPMENT:

AC Calibrator, -hp- Model 745A
 DC Standard, -hp- Model 740B
 Resistance Decade, GR Model 1433-Z

TEST PROCEDURE:

a. Connect the equipment as shown in Figure 5-1. The Model 34702A should be set to DCV on the 1 V range.

b. Set the resistance decade to 10 M Ω and then shunt it with a jumper lead. Set the DC standard for +1.0000 V (34740A Display) or +1.00000 V (34750A Display) as observed on the Display Module.

c. Remove the jumper lead and again observe the display. It should read between .5258 V and .5268 V (34740A) or between .52582 and .52681 (34750A).

NOTE

The 34702A is not checked on the 10 V range since the input circuit is equivalent for both the 1 V and the 10 V ranges.

d. Set the Model 34702A to the 100 V range and short the resistance box with a jumper lead.

e. Set the dc standard for + 100.00 V (34740A) or + 100.000 V (34750A) as observed on the Display Module.

WARNING

Use extreme caution when removing or replacing the jumper in Steps f, g and i to avoid electrical shock when performing the input impedance test on the 100 V and 1000 V ranges.

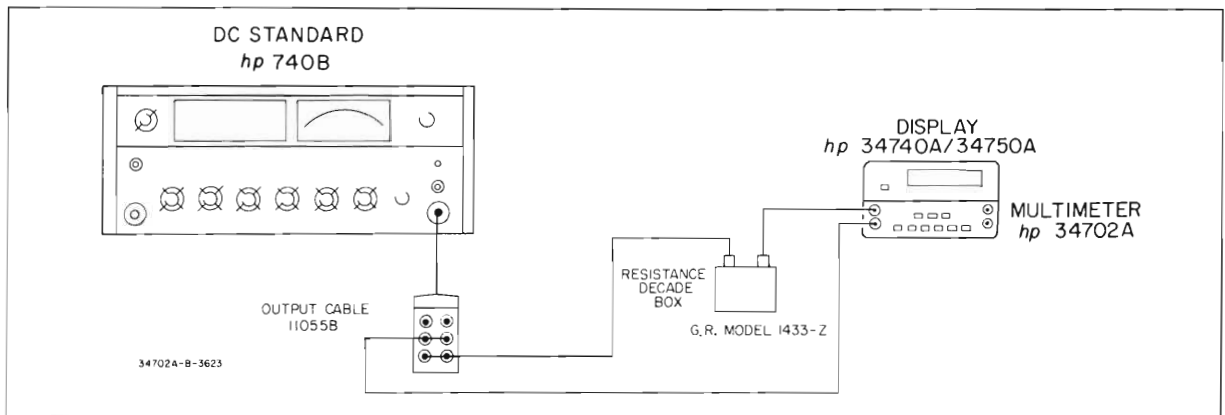


Figure 5-1. Input Impedance Test.

f. Turn the dc standard OUTPUT to OFF. Remove the jumper from the resistance box. Set dc standard OUTPUT to ON and again observe the display. It should read 50.20 to 50.30 (34740A) or 50.201 to 50.301 (34750A).

g. Turn the dc standard OUTPUT to OFF. Set the Model 34702A to the 1000 V range and short the resistance box with a jumper lead.

h. Turn the dc standard OUTPUT to ON. Set the dc standard for +1000.0 V (34740A) or +1000.00 V (34750A) as observed on the Display Module.

i. Turn the dc standard OUTPUT to OFF. Remove the jumper from the resistance box. Turn the dc standard OUTPUT to ON and again observe the display. It should read 499.7 to 500.7 (34740A) or 499.75 to 500.75 (34750A).

j. Set the dc standard OUTPUT to zero. Replace dc standard with the ac standard.

k. Set the Model 34702A to the 1 V range. Replace the resistance box with a 100 kilohm resistor (-hp- Part Number 0757-0465). Connect one end of the resistor directly to the HI terminal. Set the ac standard frequency to 1 kHz. Adjust the ac standard amplitude for + 1.0000 V $\pm$ 1 count

(34740A) or + 1.00000 V $\pm$ 1 count (34750A) as observed on the Display Module.

l. Change the ac standard frequency to 20 kHz. The 34702A display should indicate $\geq .7059$ (34740A) or $\geq .70594$ (34750A). This verifies the 34702A input capacity specification.

5-11. DC Effective Common Mode Rejection.

DESCRIPTION:

Effective Common Mode Rejection (ECMR) is a measure of the effect of a common mode source on the measured value or readout of the instrument with a 1 k Ω unbalance. Typically ECMR is measured in decibels (dB) and can be calculated by the following formula:

$$\text{ECMR (dB)} = 20 \log_{10} \left(\frac{\text{Common Mode Voltage Applied}}{\text{Change in Display Indication}} \right)$$

SPECIFICATION:

Effective Common Mode Rejection (1 k Ω unbalance): > 80 dB.

RECOMMENDED TEST EQUIPMENT:

DC Standard, -hp- Model 740B

Resistor, 1 k $\Omega \pm 1\%$ (resistance decade may be used for this)

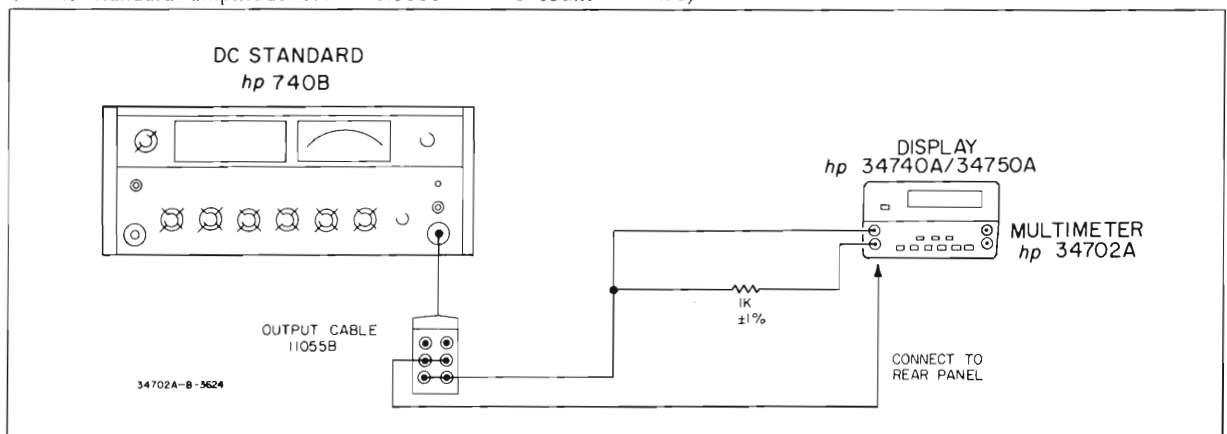


Figure 5-2. Effective Common Mode Rejection.

TEST PROCEDURE:

a. Disconnect all previous connections to the Model 34702A input and connect the equipment as shown in Figure 5-2. Set the dc standard for a +10 V output. Set the 34702A to the 1 V range.

b. Observe the voltmeter display. It should read less than 10 counts (34740A Display) or 100 counts (34750A Display). This verifies an effective common mode rejection at dc of > 80 dB.

5-12. Normal Mode Rejection.

DESCRIPTION:

Normal Mode Rejection (NMR) is a measure of the ability of the Model 34702A to reject ac signals applied to the INPUT V terminals while the instrument is operating in DCV function. NMR is measured in decibels (dB) and can be calculated by the following formula:

$$\text{NMR (dB)} = 20 \log_{10} \left(\frac{\text{Peak Normal Mode Voltage}}{\text{Peak Display Indication}} \right)$$

SPECIFICATION:

Normal Mode Rejection: Greater than 60 dB (at 50 Hz $\pm 0.1\%$ or 60 Hz $\pm 0.1\%$).

RECOMMENDED TEST EQUIPMENT:

AC Calibrator, -hp- Model 745A

Electronic Counter, -hp- Model 5300A/5302A

TEST PROCEDURE:

a. Disconnect all previous connections to the 34702A input and connect the equipment as shown in Figure 5-3. Set the Model 34702A to DCV and the 1 V range.

b. Adjust the ac calibrator output for .707 V rms (1 V peak).

c. Set the counter controls to measure period and adjust the ac calibrator frequency for a counter indication

between 16.650 ms and 16.683 ms (19.980 ms to 20.020 ms for Option 050). The Display Module should read < 10 counts (34740A Display) or < 100 counts (34750A Display).

5-13. AC Accuracy.

DESCRIPTION:

This test verifies the ability of the Model 34702A to measure ac voltage accurately to within the specification tolerances.

SPECIFICATION:

34740A

Accuracy ($+ 23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, $\leq 95\%$ RH):

30 days

45 Hz to 20 kHz $\pm(0.25\%$ of reading + $.05\%$ of range)

20 kHz to 100 kHz $\pm(0.75\%$ of reading + $.05\%$ of range)

90 days

45 Hz to 20 kHz $\pm(0.30\%$ of reading + $.05\%$ of range)

20 kHz to 100 kHz $\pm(0.80\%$ of reading + $.05\%$ of range)

6 mo.

45 Hz to 20 kHz $\pm(0.35\%$ of reading + $.05\%$ of range)

20 kHz to 100 kHz $\pm(0.85\%$ of reading + $.05\%$ of range)

1 yr.

45 Hz to 20 kHz $\pm(0.50\%$ of reading + 0.05% of range)

20 kHz to 100 kHz $\pm(1.0\%$ of reading + 0.05% of range)

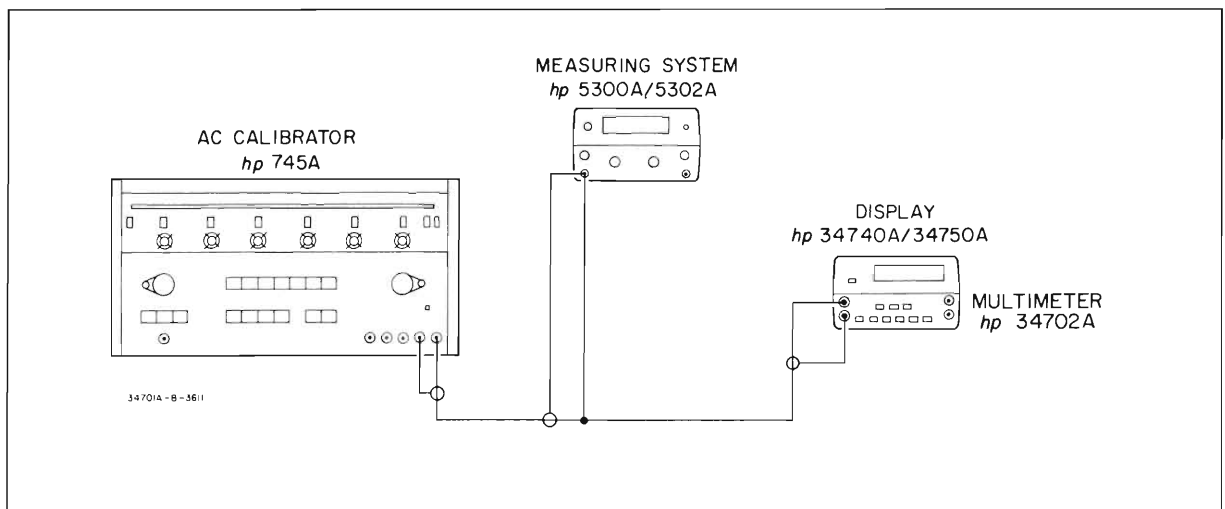


Figure 5-3. Normal Mode Rejection.

34750A

Accuracy (+ 23°C ± 5°C, ≤ 95% RH):

30 days

45 Hz to 20 kHz ±(0.25% of reading +
.05% of range)20 kHz to 100 kHz ±(.75% of reading +
.05% of range)

90 days

45 Hz to 20 kHz ±(.3% of reading +
.05% of range)20 kHz to 100 kHz ±(.8% of reading +
.05% of range)

6 mo.

45 Hz to 20 kHz ±(.35% of reading +
.05% of range)20 kHz to 100 kHz ±(.85% of reading +
.05% of range)

1 yr.

45 Hz to 20 kHz ±(0.50% of reading +
0.05% of range)20 kHz to 100 kHz ±(1.0% of reading +
0.05% of range)

RECOMMENDED TEST EQUIPMENT:

AC Calibrator/High Voltage Amplifier, -hp- Model 745A/746A or equivalent.

TEST PROCEDURE:

a. Set the Model 34702A function switch to ACV and select the 1 V range. Apply short to 34702A input and check 0 V reading on all ranges.

b. Using an ac calibrator and a high voltage amplifier (-hp- Model 745A/746A recommended), check the accuracy of the Model 34702A for inputs other than 0 V at 45 Hz and 20 kHz using Table 5-3(a). Also check the accuracy for these inputs at 100 kHz using Table 5-3(b). All readings should be within the limits specified by the tables:

5-14. Response Time.

DESCRIPTION:

This test verifies the ability of the Model 34702A to respond quickly to changes in input voltage.

SPECIFICATION:

34740A

Response time: < 2 s to within ± 0.3% of final value or 20 counts, whichever is greater.

Table 5-3(a). AC Accuracy (45 Hz and 20 kHz).

AC Standard	34702A Range	34740A Display				AC Standard	34702A Range	34750A Display			
		30 Day	90 Day	6 Months	1 Year			30 Day	90 Day	6 Months	1 Year
0 V	1 V	.0005	.0005	.0005	.0005	0 V	1 V	.00040	.00050	.00050	.00050
1 V	1 V	.9970 to 1.0030	.9965 to 1.0035	.9960 to 1.0040	.9945 to 1.0055	1 V	1 V	.99710 to 1.00290	.99650 to 1.00350	.99600 to 1.00400	.99550 to 1.00550
1.9 V	1 V	1.8948 to 1.9053	1.8938 to 1.9062	1.8929 to 1.9072	1.8900 to 1.9100	1.9 V	1 V	1.89485 to 1.90515	1.89380 to 1.90620	1.89285 to 1.90715	1.89000 to 1.91000
1.990 V	1 V	1.9845 to 1.9955	1.9835 to 1.9965	1.9825 to 1.9975	—	1.990 V	1 V	1.98463 to 1.99538	1.98353 to 1.99647	1.98254 to 1.99747	—
0 V	10 V	0.005	0.005	0.005	0.005	0 V	10 V	0.0040	0.0050	0.0050	0.0050
10 V	10 V	9.970 to 10.030	9.965 to 10.035	9.960 to 10.040	9.945 to 10.055	10 V	10 V	9.9710 to 10.0290	9.9650 to 10.0350	9.9600 to 10.0400	9.9550 to 10.0550
19 V	10 V	18.948 to 19.053	18.938 to 19.062	18.929 to 19.072	18.900 to 19.100	19 V	10 V	18.9485 to 19.0515	18.9380 to 19.0620	18.9285 to 19.0715	18.9000 to 19.1000
0 V	100 V	0.005	0.005	0.005	0.005	0 V	100 V	0.0040	0.0050	0.0050	0.0050
100 V	100 V	99.70 to 100.30	99.65 to 100.35	99.60 to 100.40	99.45 to 100.55	100 V	100 V	99.710 to 100.290	99.650 to 100.350	99.600 to 100.400	99.550 to 100.550
190 V	100 V	189.48 to 190.53	189.38 to 190.62	189.29 to 190.72	189.00 to 191.00	190 V	100 V	189.485 to 190.515	189.380 to 190.620	189.285 to 190.715	189.000 to 191.000
0 V	1000 V	0.005	0.005	0.005	0.005	0 V	1000 V	0.0040	0.0050	0.0050	0.0050
1000 V	1000 V	997.0 to 1003.0	996.5 to 1003.5	996.0 to 1004.0	994.5 to 1005.5	1000 V	1000 V	997.10 to 1002.90	996.50 to 1003.50	996.00 to 1004.00	995.50 to 1005.50

Table 5-3(b). AC Accuracy (100 kHz).

AC Standard	34702A Range	34740A Display				AC Standard	34702A Range	34750A Display			
		30 Day	90 Day	6 Months	1 Year			30 Day	90 Day	6 Months	1 Year
0 V	1 V	.0005	.0005	.0005	.0005	0 V	1 V	.00050	.00050	.00050	.00050
1 V	1 V	.9920 to 1.0080	.9915 to 1.0085	.9910 to 1.0090	.9895 to 1.0105	1 V	1 V	.99200 to 1.00800	.99150 to 1.00850	.99100 to 1.00900	.98950 to 1.01050
1.9 V	1 V	1.8853 to 1.9148	1.8839 to 1.9162	1.8829 to 1.9171	1.8801 to 1.9200	1.9 V	1 V	1.88525 to 1.91475	1.88430 to 1.91570	1.88335 to 1.91665	1.88050 to 1.91950
0 V	10 V	0.005	0.005	0.005	0.005	0 V	10 V	0.0050	0.0050	0.0050	0.0050
10 V	10 V	9.920 to 10.080	9.915 to 10.085	9.910 to 10.090	9.895 to 10.105	10 V	10 V	9.9200 to 10.0800	9.9150 to 10.0850	9.9100 to 10.0900	9.8950 to 10.1050
19 V	10 V	18.853 to 19.148	18.839 to 19.016	18.829 to 19.171	18.801 to 19.200	19 V	10 V	18.8525 to 19.1475	18.8430 to 19.1570	18.8335 to 19.1665	18.8050 to 19.1950
0 V	100 V	00.05	00.05	00.05	00.05	0 V	100 V	00.050	00.050	00.050	00.050
100 V	100 V	99.20 to 100.80	99.15 to 100.85	99.10 to 100.90	98.95 to 101.05	100 V	100 V	99.200 to 100.800	99.150 to 100.850	99.100 to 100.900	98.950 to 101.050
190 V	100 V	188.53 to 191.48	188.39 to 190.16	188.29 to 191.71	188.01 to 192.00	190 V	100 V	188.525 to 191.475	188.430 to 191.570	188.335 to 191.665	188.050 to 191.950
0 V	1000 V	000.5	000.5	000.5	000.5	0 V	1000 V	000.50	000.50	000.50	000.50
1000 V	1000 V	992.0 to 1008.0	991.5 to 1008.5	991.0 to 1009.0	989.5 to 1010.5	1000 V	1000 V	992.00 to 1008.00	991.50 to 1008.50	991.00 to 1009.00	989.50 to 1010.50

34750A

Response time: <2 s to within $\pm 0.3\%$ of final value or 200 counts, whichever is greater.

RECOMMENDED TEST EQUIPMENT:

AC Calibrator, -hp- Model 745A or equivalent

TEST PROCEDURE:

a. Set the ac calibrator output to 10 V at 1 kHz. Set the 34702A to ACV on the 10 V range.

b. Connect the output of the ac calibrator to the 34702A INPUT V terminals while observing the 34740A/34750A Display Module. The display indication should read within 30 counts (34740A) or 300 counts (34750A) of its final value within two seconds after the 34702A is connected to the ac calibrator.

5-15. Ohms Accuracy.

DESCRIPTION:

This test verifies the ability of the Model 34702A to accurately measure resistance to within the limits of the specification given below.

SPECIFICATION:

34740A

Accuracy ($+ 23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, $\leq 95\% \text{ RH}$):

30 days

10 M Ω range $\pm (0.25\% \text{ of reading} + 0.02\% \text{ of range})$

All other ranges $\pm (0.05\% \text{ of reading} + 0.02\% \text{ of range})$

90 days

10 M Ω range $\pm (0.30\% \text{ of reading} + 0.02\% \text{ of range})$

All other ranges $\pm (0.06\% \text{ of reading} + 0.02\% \text{ of range})$

6 mo.

10 M Ω range $\pm (0.35\% \text{ of reading} + 0.03\% \text{ of range})$

All other ranges $\pm (0.07\% \text{ of reading} + 0.03\% \text{ of range})$

1 yr.

10 M Ω range $\pm (0.50\% \text{ of reading} + 0.03\% \text{ of range})$

All other ranges $\pm (0.11\% \text{ of reading} + 0.03\% \text{ of range})$

34750A

Accuracy ($+ 23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, $\leq 95\% \text{ RH}$):

30 days

10 M Ω range $\pm (0.25\% \text{ of reading} + 0.015\% \text{ of range})$

All other ranges $\pm (0.045\% \text{ of reading} + 0.015\% \text{ of range})$

90 days		
10 M Ω range	$\pm(0.3\%$ of reading + 0.015% of range)	
All other ranges	$\pm(0.055\%$ of reading + 0.015% of range)	
6 mo.		
10 M Ω range	$\pm(0.35\%$ of reading + 0.02% of range)	
All other ranges	$\pm(0.065\%$ of reading + 0.02% of range)	
1 yr.		
10 M Ω range	$\pm(0.50\%$ of reading + 0.02% of range)	
All other ranges	$\pm(0.11\%$ of reading + 0.02% of range)	

Resistance Decade, GR Model 1433-Z or equivalent.

NOTE

Due to temperature change inside the instrument between line and battery operation, the voltage references in the Display Module must be adjusted when changing modes to achieve these specifications.

TEST PROCEDURE:

a. Connect a resistance decade with 100 Ω through 1 M Ω steps to the INPUT Ω terminals of the Model 34702A.

b. Refer to Table 5-4 and check the accuracy of the 34702A on the 100 Ω through 10 M Ω ranges.

RECOMMENDED TEST EQUIPMENT:

Table 5-4. Ohms Accuracy Test.

Resistance Standard	34702A Range	34740A Display				DC Standard	34702A Range	34750A Display			
		30 Day	90 Day	6 Months	1 Year			30 Day	90 Day	6 Months	1 Year
0 Ω	100 Ω	00.02	00.02	00.03	00.03	0 Ω	100 Ω	00.015	00.015	00.020	00.020
100 Ω	100 Ω	99.93 to 100.07	99.92 to 100.08	99.90 to 100.10	99.86 to 100.14	100 Ω	100 Ω	99.940 to 100.060	99.930 to 100.070	99.915 to 100.085	99.870 to 100.130
190 Ω	100 Ω	189.89 to 190.12	189.87 to 190.13	189.84 to 190.16	189.76 to 190.24	190 Ω	100 Ω	189.900 to 190.101	189.881 to 190.120	189.877 to 190.124	189.771 to 190.229
0 Ω	1 k Ω	.0002	.0002	.0003	.0003	0 Ω	1 k Ω	.00015	.00015	.00020	.00020
1000 Ω	1 k Ω	.9993 to 1.0007	.9992 to 1.0008	.9990 to 1.0010	.9986 to 1.0014	1000 Ω	1 k Ω	.99940 to 1.00060	.99930 to 1.00070	.99915 to 1.00085	.99870 to 1.00130
1900 Ω	1 k Ω	1.8989 to 1.9012	1.8987 to 1.9013	1.8984 to 1.9016	1.8976 to 1.9024	1900 Ω	1 k Ω	1.89900 to 1.90101	1.89881 to 1.90120	1.89877 to 1.90124	1.89771 to 1.90229
1990 Ω	1 k Ω	1.9888 to 1.9912	1.9886 to 1.9914	1.9883 to 1.9917	1.9875 to 1.9925	1990 Ω	1 k Ω	1.98895 to 1.99105	1.98891 to 1.99109	1.98871 to 1.99129	1.98761 to 1.99239
0 Ω	10 k Ω	0.002	0.002	0.003	0.003	0 Ω	10 k Ω	0.0015	0.0015	0.0020	0.0020
10 k Ω	10 k Ω	9.993 to 10.007	9.992 to 10.008	9.990 to 10.010	9.986 to 10.014	10 k Ω	10 k Ω	9.9940 to 10.0060	9.9930 to 10.0070	9.9915 to 10.0085	9.9870 to 10.0130
19 k Ω	10 k Ω	18.989 to 19.012	18.987 to 19.013	18.984 to 19.016	18.976 to 19.024	19 k Ω	10 k Ω	18.9900 to 19.0101	18.9881 to 19.0120	18.9877 to 19.0124	18.9771 to 19.0229
0 Ω	100 k Ω	00.02	00.02	00.03	00.03	0 Ω	100 k Ω	00.015	00.015	00.020	00.020
100 k Ω	100 k Ω	99.93 to 100.07	99.92 to 100.08	99.90 to 100.10	99.86 to 100.14	100 k Ω	100 k Ω	99.940 to 190.060	99.930 to 100.070	99.915 to 100.085	99.870 to 100.130
190 k Ω	100 k Ω	189.89 to 190.12	189.87 to 190.13	189.84 to 190.16	189.76 to 190.24	190 k Ω	100 k Ω	189.900 to 190.101	189.881 to 190.120	189.877 to 190.124	189.771 to 190.229
0 Ω	1000 k Ω	000.2	000.2	000.3	000.3	0 Ω	1000 k Ω	000.15	000.15	000.20	000.20
1 M Ω	1000 k Ω	999.3 to 1000.7	999.2 to 1000.8	999.0 to 1001.0	998.86 to 1001.4	1 M Ω	1000 k Ω	999.40 to 1900.60	999.30 to 1000.70	999.15 to 1000.85	998.70 to 1001.30
1.9 M Ω	1000 k Ω	1898.9 to 1991.2	1898.7 to 1901.3	1898.4 to 1901.6	1897.6 to 1902.4	1.9 M Ω	1000 k Ω	1899.00 to 1901.01	1898.81 to 1901.20	1898.77 to 1901.24	1897.71 to 1902.29
0 Ω	10 M Ω	0.002	0.002	0.003	0.003	0 Ω	10 M Ω	0.0015	0.0015	0.0020	0.0020
10 M Ω	10 M Ω	9.973 to 10.027	9.968 to 10.032	9.961 to 10.038	9.947 to 10.053	10 M Ω	10 M Ω	.99745 to 1.00265	.99685 to 1.00315	.99630 to 1.00370	.99480 to 1.00520

5-16. ADJUSTMENT PROCEDURE.

5-17. The following is a complete adjustment procedure for the Model 34702A.

NOTE

Before proceeding, it should be ascertained that the display module is operating properly and is calibrated.

5-18. Cover Removal.

5-19. Disconnect the power cord. Separate the 34702A from the display module by pulling the two side locks at the back of the instrument rearward and lifting the mainframe from the 34702A. Separate the 34702A main assembly from its cover by spreading apart two sets of plastic fingers, as shown in Figure 5-4, and removing the cover. After removing the cover reconnect the 34702A to the mainframe and attach the power cord.

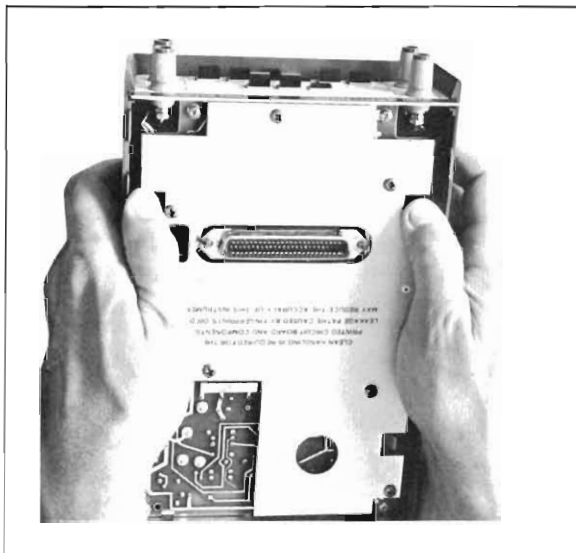


Figure 5-4. Removal From Case.

NOTE

It will be necessary to turn the instrument upside down to obtain access to the 34702A adjustments. Figure 5-5 shows the location of all adjustments in the Model 34702A.

5-20. DC Adjustments.**DESCRIPTION:**

These adjustments affect dc accuracy of the Model 34702A.

5-8

RECOMMENDED TEST EQUIPMENT:

DC Standard, -hp- Model 740B or equivalent

CALIBRATION PROCEDURE:**WARNING**

1000 V is used in the following procedure. Contact with this voltage can cause death or serious injury.

- a. Select the 10 V range of the 34702A and connect a dc standard to the INPUT V terminals.
- b. Set the output of the dc standard to 10 V and adjust A1R3 for a 10.000 V readout (34740A), or a 10.0000 V readout (34750A).
- c. Select the 100 V range of the 34702A and set the dc standard to 100 V output. Adjust R5 to obtain a 100.00 V readout (34740A) or a 100.000 V readout (34750A).
- d. Select the 1000 V range of the 34702A and set the dc standard to 1000 V output. Adjust R7 to give a 1000.0 V readout (34740A), or a 1000.00 V readout (34750A).

5-21. 34702A AC Adjustments.**DESCRIPTION:**

These adjustments affect ac accuracy of the Model 34702A.

RECOMMENDED TEST EQUIPMENT:

AC Calibrator, -hp- Model 745A

High Voltage Amplifier, -hp- Model 746A

CALIBRATION PROCEDURE:**WARNING**

1000 V ac is used in the following procedure. Contact with this voltage can cause death or serious injury.

- a. Select the ACV function of the Model 34702A and set it to the 1 V range.
- b. Apply 1 V at 10 kHz from the ac calibrator to the 34702A INPUT V terminals and adjust A1R13 for a 1.0000 V readout (34740A), or a 1.00000 readout (34750A).
- c. Select the 1000 V range of the Model 34702A and apply 1000 V from the ac calibrator/high voltage amplifier to the 34702A.

- d. Adjust A1C5 (coarse adj.) for a 1000.0 V readout (34740A), or a 1000.00 V readout (34750A).
- e. Select the 10 V range of the Model 34702A and set the ac calibrator to the 10 V range.
- f. Adjust A1C6 for a 10.000 V readout (34740A), or a 10.0000 V readout (34750A).
- g. Select the 100 V range of the Model 34702A and set the ac calibrator for 100 V output.
- h. Adjust A1C9 for a 100.00 V readout (34740A), or a 100.000 V readout (34750A).
- i. Select the 1000 V range of the Model 34702A and apply 1000 V from the ac calibrator/high voltage amplifier.
- j. Adjust A1C11 (fine adj.) for a 1000.0 V readout (34740A), or a 1000.00 V readout (34750A).

WARNING

To avoid possible electrical shock, turn off the high voltage amplifier before disconnecting it from the Model 34702A.

5-22. 34702A Ohms Adjustments.

DESCRIPTION:

These adjustments affect the Ohms Accuracy of the Model 34702A.

RECOMMENDED TEST EQUIPMENT:

Decade Resistor, General Radio Model 1433-Z or equivalent.

CALIBRATION PROCEDURE:

- a. Connect the resistance decade to the 34702A INPUT Ω terminals using two short lengths of copper wire. Set the resistance decade to 10 k Ω .
- b. Select the OHM function of the Model 34702A and set it to the 10 k Ω range. Adjust A1R64 to give a 10.000 k Ω readout (34740A), or a 10.0000 k Ω readout (34750A).
- c. Set the resistance decade to 10 M Ω . Select the 10 M Ω range of the 34702A and turn A1R59 to give a 10.000 M Ω readout (34740A) or a 10.0000 M Ω readout (34750A).

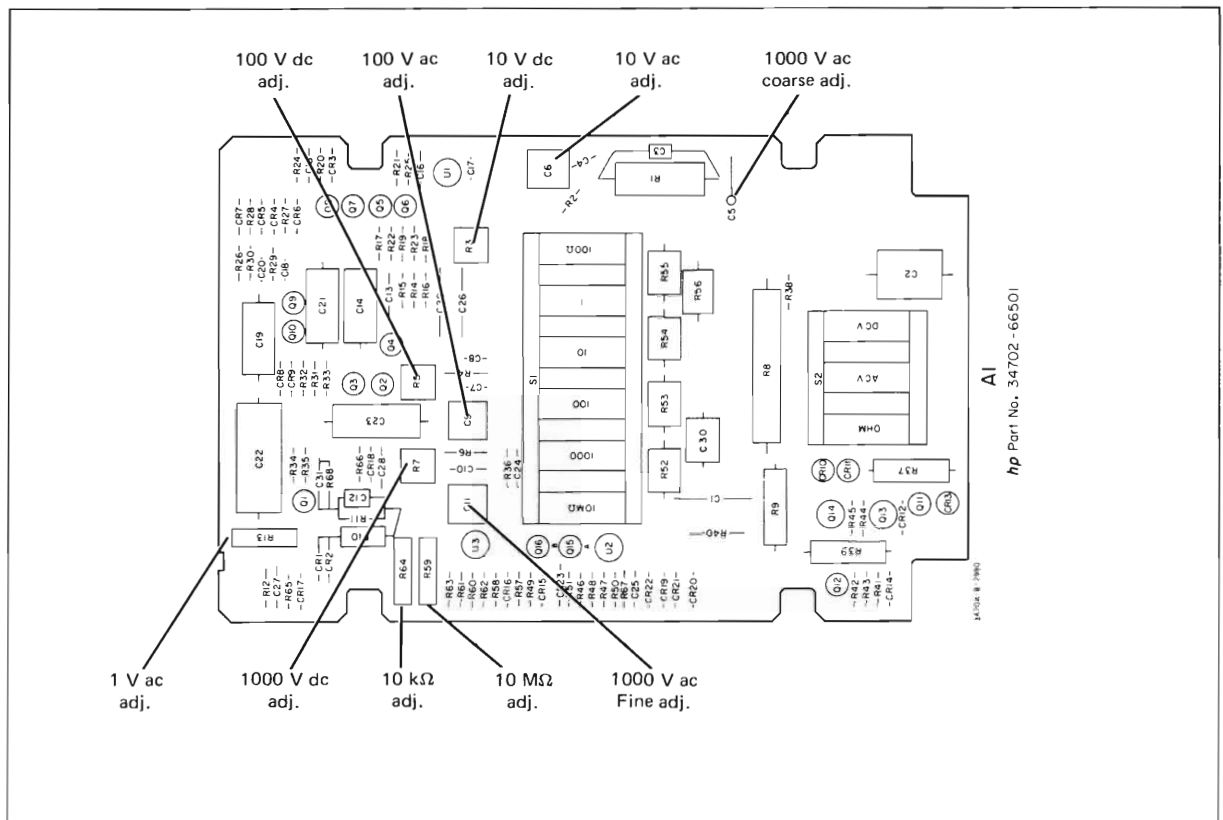


Figure 5-5. Adjustment Locator.

PERFORMANCE TEST CARD

Hewlett-Packard Model 34740A/34702A
Multimeter
Serial Number _____

Tests Performed By _____

Date _____

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-9	DC Accuracy (30 Days)			
	1 V	- .0001	_____	+ .0001
	Range	± .9996	_____	± 1.0004
		± 1.8993	_____	± 1.9007
		± 1.9973	_____	± 1.9987
	10 V	- 0.001	_____	+ 0.001
	Range	± 9.996	_____	± 10.004
		± 18.993	_____	± 19.007
	100 V	- 00.01	_____	+ 00.01
	Range	± 99.96	_____	± 100.04
		± 189.93	_____	± 190.07
	1000 V	- 000.1	_____	+ 000.1
	Range	+ 999.6	_____	+ 1000.4
	(90 Days)			
	1 V	- .0001	_____	+ .0001
	Range	± .9995	_____	± 1.0005
		± 1.8991	_____	± 1.9009
		± 1.9971	_____	± 1.9989
	10 V	- 0.001	_____	+ 0.001
	Range	± 9.996	_____	± 10.004
		± 18.993	_____	± 19.007
	100 V	- 00.01	_____	+ 00.01
	Range	± 99.96	_____	± 100.04
		± 189.93	_____	± 190.07
	1000 V	- 000.1	_____	+ 000.1
	Range	+ 999.5	_____	+ 1000.5
	(6 Months)			
	1 V	- .0002	_____	+ .0002
	Range	± .9993	_____	± 1.0007
		± 1.8989	_____	± 1.9012
		± 1.9968	_____	± 1.9992
	10 V	- 0.002	_____	+ 0.002
	Range	± 9.993	_____	± 10.007
		± 18.989	_____	± 19.012
	100 V	- 00.02	_____	+ 00.02
	Range	± 99.93	_____	± 100.07
		± 189.89	_____	± 190.12
	1000 V	- 000.2	_____	+ 000.2
	Range	+ 999.3	_____	+ 1000.7

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-9 (Cont'd)	(1 Year)	- .0002	_____	+ .0002
	1 V	± .9992	_____	± 1.0008
	Range	± 1.8987	_____	± 1.9013
		± 1.9966	_____	± 1.9994
	10 V	- 0.002	_____	+ 0.002
	Range	± 9.992	_____	± 10.008
		± 18.987	_____	± 19.013
	100 V	- 00.02	_____	+ 00.02
	Range	± 99.92	_____	± 100.08
		± 189.87	_____	± 190.13
	1000 V	- 000.2	_____	+ 000.2
	Range	+ 999.2	_____	+ 1000.8
5-10	Input Impedance: Resistance			
	1 V and 10 V Ranges	.5258	_____	.5268
	100 V Range	50.20	_____	50.30
	1000 V Range	499.7	_____	500.7
5-11	Capacitance		_____	≤ 80 pF
5-11	DC Effective Common Mode Rejection		_____	< 10 counts
5-12	Normal Mode Rejection		_____	< 10 counts
5-13	AC Accuracy			
	45 Hz to 20 kHz			
	(30 Days)			
	1 V	.9970	_____	.0005
	Range	1.8948	_____	1.0030
		1.9845	_____	1.9053
			_____	1.9955
	10 V	9.970	_____	0.005
	Range	18.948	_____	10.030
			_____	19.053
	100 V	99.70	_____	00.05
	Range	189.48	_____	100.30
			_____	190.53
	1000 V	000.5	_____	000.5
	Range	997.0	_____	1003.0
	(90 Days)			
	1 V	.9965	_____	.0005
	Range	1.8938	_____	10.035
		1.9835	_____	1.9062
			_____	1.9965
	10 V	9.965	_____	0.005
	Range	18.938	_____	10.035
			_____	19.062
	100 V	99.65	_____	00.05
	Range	189.38	_____	100.35
			_____	190.62

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-13 (Cont'd)	1000 V Range	996.5	_____	000.5 1003.5
	(6 Months)			
	1 V Range	.9960 1.8929 1.9825	_____ _____ _____	.0005 1.0040 1.9072 1.9975
	10 V Range	9.960 18.929	_____ _____	0.005 10.040 19.072
	100 V Range	99.60 189.29	_____ _____	00.05 100.40 190.72
	1000 V Range	994.5	_____	000.5 1005.5
	(1 Year)			
	1 V Range	.9945 1.8900	_____ _____	.0005 1.0055 1.9100
	10 V Range	9.945 18.900	_____ _____	0.005 10.055 19.100
	100 V Range	99.45 189.00	_____ _____	00.05 100.55 191.00
	1000 V Range	994.5	_____	000.5 1005.5
	AC Accuracy 100 kHz (30 Days)			
	1 V Range	.9920 1.8853	_____ _____	.0005 1.0080 1.9148
	10 V Range	9.920 18.853	_____ _____	0.005 10.080 19.148
	100 V Range	99.20 188.53	_____ _____	00.05 100.80 191.48
	1000 V Range	992.0	_____	000.5 1008.0
	(90 Days)			
	1 V Range	.9915 1.8839	_____ _____	.0005 1.0085 1.9162

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-13 (Cont'd)				0.005
	10 V	9.915		10.085
	Range	18.839		19.162
				00.05
	100 V	99.15		100.85
	Range	188.39		190.16
				000.5
	1000 V	991.5		1008.5
	Range			
	(6 Months)			
				.0005
	1 V	.9910		1.0090
	Range	1.8819		1.9171
				0.005
	10 V	9.910		10.090
	Range	18.829		19.171
				00.05
	100 V	99.10		100.90
	Range	188.29		191.71
				000.5
	1000 V	991.0		1009.0
	Range			
	(1 Year)			
				.0005
	1 V	.9895		1.0105
	Range	1.8801		1.9200
				0.005
	10 V	9.895		10.105
	Range	18.801		19.200
				00.05
	100 V	98.95		101.05
	Range	188.01		192.00
				000.5
	1000 V	989.5		1010.5
	Range			
5-14	Response Time			≤ 30 counts
5-15	Ohms Accuracy (30 Day)			
				00.02
	100 Ω	99.93		100.07
	Range	189.89		190.12
				.0002
	1 kΩ	.9993		1.0007
	Range	1.8989		1.9012
		1.9888		1.9912
				0.002
	10 kΩ	9.993		10.007
	Range	18.989		19.912

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-15 (Cont'd)				00.02
	100 k Ω	99.93		100.07
	Range	189.89		199.12
				000.2
	1000 k Ω	999.3		1000.7
	Range	1898.9		1991.2
				0.002
	10 M Ω	9.973		10.027
	Range			
	(90 Day)			
	100 Ω	99.92		00.02
	Range	189.87		100.08
				190.13
				.0002
	1 k Ω	.9992		1.0008
	Range	1.8987		1.9013
		1.9886		1.9914
				0.002
	10 k Ω	9.992		10.008
	Range	18.987		19.013
				00.02
	100 k Ω	99.92		100.08
	Range	189.87		190.13
				000.2
	1000 k Ω	999.2		1000.8
	Range	1898.7		1901.3
				0.002
	10 M Ω	9.973		10.027
	Range			
	(6 Months)			
	100 Ω	99.90		00.03
	Range	189.84		100.10
				190.16
				.0003
	1 k Ω	.9990		1.0010
	Range	1.8984		1.9016
		1.9883		1.9917
				0.002
	10 k Ω	9.990		10.010
	Range	19.883		19.917
				00.03
	100 k Ω	99.90		100.10
	Range	198.83		199.17
				000.3
	1000 k Ω	999.0		1001.0
	Range	1988.3		1991.7
				0.003
	10 M Ω	9.961		10.038
	Range			

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-15 (Cont'd)	(1 Year)			
				00.03
		99.86		100.14
		189.76		190.24
				.0003
		.9986		1.0014
		1.8976		1.9024
		1.9875		1.9925
				0.003
		9.986		10.014
		18.976		19.024
				00.03
		99.86		100.14
		189.76		190.24
				000.3
		998.86		1001.4
		1897.6		1902.4
				0.003
		9.947		10.053

PERFORMANCE TEST CARD

Hewlett-Packard Model 34750A/34702A
Multimeter

Tests Performed by _____

Serial No. _____

Date _____

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-9	DC Accuracy (30 Days)			
	1 V	- .00004	_____	+ .00004
	Range	± .99971	_____	± 1.00029
		± 1.89948	_____	± 1.90052
		± 1.99746	_____	± 1.99854
	10 V	- 0.0004	_____	+ 0.0004
	Range	± 9.9971	_____	± 10.0029
		± 18.9948	_____	± 19.0052
	100 V	- 00.004	_____	+ 00.004
	Range	± 99.971	_____	± 100.029
		± 189.948	_____	± 190.052
	1000 V	- 000.04	_____	+ 000.04
	Range	+ 999.71	_____	+ 1000.29
	(90 Days)			
	1 V	- .00005	_____	+ .00005
	Range	± .99960	_____	± 1.00040
		± 1.89929	_____	± 1.90072
		± 1.99725	_____	± 1.99875
	10 V	- 0.0005	_____	+ 0.0005
	Range	± 9.9960	_____	± 10.0040
		± 18.9929	_____	± 19.0072
	100 V	- 00.005	_____	+ 00.005
	Range	± 99.960	_____	± 100.040
		± 189.929	_____	± 190.072
	1000 V	- 000.05	_____	+ 000.05
	Range	+ 999.60	_____	+ 1000.40
	(6 Months)			
	1 V	- .00007	_____	+ .00007
	Range	± .99948	_____	± 1.00052
		± 1.89908	_____	± 1.90093
		± 1.99703	_____	± 1.99897
	10 V	- 0.0007	_____	+ 0.0007
	Range	± 9.9948	_____	± 10.0052
		± 18.9908	_____	± 19.0093
	100 V	- 00.007	_____	+ 00.007
	Range	± 99.948	_____	± 100.052
		± 189.908	_____	± 190.093
	1000 V	- 000.07	_____	+ 000.07
	Range	+ 999.48	_____	+ 1000.52

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-9 (Cont'd)	(1 Year)			
		- .00010	_____	+ .00010
	1 V	± .99930	_____	± 1.00070
	Range	± 1.89876	_____	± 1.90124
		± 1.99660	_____	± 1.99940
		- 0.0010	_____	+ 0.0010
	10 V	± 9.9930	_____	± 10.0070
	Range	± 18.9876	_____	± 19.0124
		- 00.010	_____	+ 00.010
	100 V	± 99.930	_____	± 100.070
	Range	± 189.876	_____	± 190.124
	1000 V	- 000.10	_____	+ 000.10
	Range	± 999.30	_____	± 1000.70
5-10	Input Impedance: Resistance			
	1 V and 10 V Ranges	.52582	_____	.52682
	100 V Ranges	50.201	_____	50.301
	1000 V Ranges	499.75	_____	500.75
5-11	Capacitance		_____	≤ 80 pF
5-11	DC Effective Common Mode Rejection		_____	< 100 counts
5-12	Normal Mode Rejection		_____	< 100 counts
5-13	AC Accuracy			
	45 Hz to 20 kHz			
	(30 Day)			
			_____	.00040
	1 V	.99710	_____	1.00290
	Range	1.89485	_____	1.90515
		1.98463	_____	1.99538
			_____	0.0040
	10 V	9.9710	_____	10.0290
	Range	18.9485	_____	19.0515
			_____	00.040
	100 V	99.710	_____	100.290
	Range	189.485	_____	190.515
			_____	000.40
	1000 V	997.10	_____	1002.90
	Range			
	(90 Day)			
			_____	.00050
	1 V	.99650	_____	1.00350
	Range	1.89380	_____	1.90620
		1.98353	_____	1.99647
			_____	0.0050
	10 V	9.9650	_____	10.0350
	Range	18.9380	_____	19.0620
			_____	00.050
	100 V	99.650	_____	100.350
	Range	189.380	_____	190.620

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-13 (Cont'd)	1000 V Range	996.50	_____	000.50 1003.50
	(6 Months)			
	1 V Range	.99600 1.89285 1.98254	_____	.00050 1.00400 1.90715 1.99747
	10 V Range	9.9600 18.9285	_____	0.0050 10.0400 19.0715
	100 V Range	99.600 189.285	_____	00.050 100.400 190.715
	1000 V Range	996.00	_____	000.50 1004.00
	(1 Year)			
	1 V Range	.99550 1.89000	_____	.00050 1.00550 1.91000
	10 V Range	9.9550 18.9000	_____	0.0050 10.0550 19.1000
	100 V Range	99.550 189.000	_____	00.050 100.550 191.000
	1000 V Range	995.50	_____	000.50 1005.50
	AC Accuracy 100 kHz (30 Days)			
	1 V Range	.99200 1.88525	_____	.00050 1.00800 1.91475
	10 V Range	9.9200 18.8525	_____	0.0050 10.0800 19.1475
	100 V Range	99.200 188.525	_____	00.050 100.800 191.475
	1000 V Range	992.00	_____	000.50 1008.00

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-13 (Cont'd)	(90 Days)			
	1 V			.00050
	Range	.99150 1.88430		1.00850 1.91570
	10 V			0.0050
	Range	9.9150 18.8430		10.0850 19.1570
	100 V			00.050
	Range	99.150 188.430		100.850 191.570
	1000 V			000.50
	Range	991.50		1008.50
	(6 Months)			
	1 V			.00050
	Range	.99100 1.88335		1.00900 1.91665
	10 V			0.0050
	Range	9.9100 18.8335		10.0900 19.1665
	100 V			00.050
	Range	99.100 188.335		100.900 191.665
	1000 V			000.50
	Range	991.00		1009.00
	(1 Year)			
	1 V			.00050
	Range	.98950 1.88050		1.01050 1.91950
	10 V			0.0050
	Range	9.8950 18.8050		1.01050 19.1950
	100 V			00.050
	Range	98.950 188.050		101.050 191.950
	1000 V			000.50
	Range	989.50		1010.50
5-14	Response Time			≤ 300 counts
5-15	Ohms Accuracy (30 Day)			
	100 Ω			00.015
	Range	99.940 189.900		100.060 190.101
	1 kΩ			.00015
	Range	.99940 1.89900 1.98895		1.00060 1.90101 1.99105

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-15 (Cont'd)	10 k Ω	9.9940	_____	0.0015
	Range	18.9900	_____	10.0060
			_____	19.0101
	100 k Ω	99.940	_____	00.015
	Range	189.900	_____	100.060
			_____	190.101
	1000 k Ω	999.40	_____	000.15
	Range	1899.00	_____	1000.60
			_____	1901.01
	10 M Ω	.99940	_____	0.0015
	Range		_____	1.00060
	(90 Day)			
	100 Ω	99.930	_____	00.015
	Range	189.881	_____	100.070
			_____	190.120
	1 k Ω	.99930	_____	.00015
	Range	1.89881	_____	1.00070
		1.98891	_____	1.90120
			_____	1.99109
	10 k Ω	9.9930	_____	0.0015
	Range	18.9881	_____	10.0070
			_____	19.0120
	100 k Ω	99.930	_____	00.015
	Range	189.881	_____	100.070
			_____	190.124
	1000 k Ω	999.30	_____	000.15
	Range	1898.81	_____	1000.70
			_____	1901.20
	10 M Ω	.99685	_____	0.0015
	Range		_____	1.00315
	(6 Months)			
	100 Ω	99.915	_____	00.020
	Range	189.877	_____	100.085
			_____	190.124
	1 k Ω	.99915	_____	.00020
	Range	1.89877	_____	1.00085
		1.98871	_____	1.90124
			_____	1.99129
	10 k Ω	9.9915	_____	0.0020
	Range	18.9877	_____	10.0085
			_____	19.0124
	100 k Ω	99.915	_____	00.020
	Range	189.877	_____	100.085
			_____	190.124
	1000 k Ω	998.70	_____	000.20
	Range	1897.71	_____	1001.30
			_____	1902.29

Paragraph Number	Test	Results		
		Minimum	Actual	Maximum
5-15 (Cont'd)	10 M Ω Range	.99630	_____	0.0020 1.00370
	(1 Year)			
	100 Ω Range	99.870 189.771	_____	00.020 100.130 190.229
	1 k Ω Range	.99870 1.89771 1.98761	_____	.00020 1.00130 1.90229 1.99239
	10 k Ω Range	9.9870 18.9771	_____	0.0020 10.0130 19.0229
	100 k Ω Range	99.870 189.771	_____	00.020 100.130 190.229
	1000 k Ω Range	998.70 1897.71	_____	000.20 1001.30 1902.39
	10 M Ω Range	.99480	_____	0.0020 1.00520

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphameric order of their reference designators and indicates the description, -hp- Part Number of each part, together with any applicable notes, and provides the following:

- a. Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.
- b. Description of the part. (See list of abbreviations below.)
- c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)
- d. Manufacturers part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

6-8. PARTS CHANGES.

6-9. Components which have been changed are so marked by one of three symbols; i.e. Δ , Δ with a letter subscript, e.g. Δ_a , or Δ with a number subscript e.g. Δ_{10} . A Δ with no subscript indicates the component listed is the preferred replacement for an earlier component. A Δ with a letter subscript indicates a change which is explained in a note at the bottom of the page. A Δ with a number subscript indicates the related change is discussed in backdating (Section 8). The number of the subscript indicates the number of the change in backdating which should be referred to.

6-10. PROPRIETARY PARTS.

6-11. Items marked by a dagger (†) in the reference designator column are available only for repair and service of Hewlett-Packard instruments.

6-2

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	34702-61501 ^a	1			
A1C1	0160-3965	1	C:FXD 0.001 UF 20%	28490	0160-3965
A1C2	0170-0022	1	C:FXD MY 0.1UF 20% 600VDCW	09134	TYPE 24
A1C3	0160-3930	1	C:FXD 10 PF 250V VDCW	28480	0160-3930
A1C4	0160-4425	1	C:FXD MICA 47 PF 5%	28480	0160-4425
A1C5	0121-0168	1	C:VAR TEFLON 0.25-1.5J PF 600VDCW	28480	0121-0168
A1C6	0121-0127	2	C:VAR AIR TRIMMER 1.7 TO 14.1 PF	28480	0121-0127
A1C7	0160-3972	1	C:FXD 101Z PF	28480	0160-3972
A1C8	0140-0145	1	C:FXD MICA 22 PF 5%	28480	0140-0145
A1C9	0121-0478	1	C:VAR AIR 2.4-34.0 PF 650VDCW	74970	193-0010-005
A1C10	0160-3973	1	C:FXD 1035J PF	28480	0160-3973
A1C11	0121-0147	1	C:VAR AIR 2.0/19.3 PF	28480	0121-0147
A1C12	0170-0043	2	C:FXD MY 022 UF 10% 600 VDCW	28480	0170-0043
A1C13	0100-0210	1	C:FXD ELFCT 3.3 UF 20% 15VDCW	56289	150335X0015A2-JYS
A1C14	0100-1800	3	C:FXD ELFCT 100 UF +100-10% 6VDCW	56289	300603(NP)
A1C15	0150-0014	1	C:FXD CER 0.005 UF 500 VDCW	96095	014
A1C16	0180-0197	1	C:FXD ELECT 2.2 UF 10% 20 VDCW	56289	1500225X9020A2-DYS
A1C17	0160-2199	1	C:FXD MICA 30 PF 5%	72136	080
A1C18	0140-0196	2	C:FXD MICA 150 PF 1%	72136	DM15F151J0300WV1CR
A1C19	0180-1800	1	C:FXD ELECT 100 UF +100-10% 6VDCW	56289	300603(NP)
A1C20	0140-0196	1	C:FXD MICA 150 PF 1%	72136	DM15F151J0300WV1CR
A1C21	0180-1800	1	C:FXD ELECT 100 UF +100-10% 6VDCW	56289	300603(NP)
A1C22	0160-2132	1	C:FXD MY 0.55 UF 10% 50VDCW	56289	410P SPEC
A1C23	0170-0038	1	C:FXD MY 0.22 UF 10% 200VDCW	56289	149P22492 PUM
A1C24	0170-0040	1	C:FXD MY 0.047JF 10% 200 VDCW	56289	292P47392-PTS
A1C25	0180-0291	1	C:FXD ELECT 1.0 UF 10% 35VDCW	56289	1503105X9035A2-DYS
A1C26	0180-0228	2	C:FXD ELECT 22 UF 10% 15VDCW	56299	1503226X901532-JYS
A1C27, C28	0180-1701	2	C:FXD ELECT 6.8 UF 20% 6 VDCW	28480	0180-1701
A1C29	0180-0228	1	C:FXD ELECT 22 UF 10% 15 VDCW	56289	1500226X901582-DYS
A1C30	0160-3992	1	C:FXD 300 PF 10% 300 VDCW	95275	VV13C301-K
A1C31	0170-0043	1	C:FXD MY 022 UF 10% 600 VDCW	84411	HEW-33
A1C81	1901-0378	2	DIODE: SILICON 35V	28480	1901-0378
A1C82	1901-0376	2	DIODE: SILICON 35V	28480	1901-0376
A1C83	1902-0049	2	DIODE: BREAKDOWN 5.19V 5%	04713	SZ10939-122
A1C84	1901-0040	6	DIODE: SILICON 50MA 304V	07263	FDG1088
A1C85	1902-0049	1	DIODE: BREAKDOWN 6.19V 5%	04713	SZ10939-122
A1C86	1902-3182	1	DIODE: BREAKDOWN: SILICON 12.1V 5%	28480	1902-3182
A1C87	1901-0040	1	DIODE: SILICON 50MA 304V	07263	FDG1088
A1C88	1901-0518	2	DIODE: HOT CARRIER	28480	1901-0518
A1C89	1901-0513	1	DIODE: HOT CARRIER	28480	1901-0518
A1C910	1901-0546 ^b	2	DIODE: SI 30 WV 1.0 PA LEAKAGE	17856	FN1705
A1C911	1901-0546	1	DIODE: SI 30 WV 1.0 PA LEAKAGE	17856	FN1705
A1C912	1901-0029	1	DIODE: SILICON 50J PIV	28480	1901-0029
A1C913	1901-0586	1	DIODE: SI 30 WV 1.0 PA LEAKAGE	28480	1901-0586
A1C914	1902-0040	1	DIODE: BREAKDOWN: 14.0V 5%	28480	1902-0040
A1C915	1902-0041	3	DIODE: BREAKDOWN 5.11V 5%	04713	SZ10939-98
A1C916	1902-0777	1	DIODE: BREAKDOWN 6.2V 5%	04713	19825
A1C917	1902-0041	1	DIODE: BREAKDOWN 5.11V 5%	04713	SZ10939-98
A1C918	1902-0041	1	DIODE: BREAKDOWN 5.11V 5%	04713	SZ10939-98
A1C919	1901-0040	1	DIODE: SILICON 50MA 304V	07263	FDG1088
A1C920	1901-0040	1	DIODE: SILICON 50MA 304V	07263	FDG1088
A1C921	1901-0040	1	DIODE: SILICON 50MA 304V	07263	FDG1088
A1C922	1801-0040	1	DIODE: SILICON 50MA 30 WV	07263	FDG1088
A1C923	1802-3148	1	DIODE: BREAKDOWN 9.09V 5%	04713	SZ10939-170
A1C91	1855-0412	2	TSTR: FET SI N-CHANNEL	17856	FN2960
A1C92	1853-0010	3	TSTR: SI NPN(SELECTED FROM 2N3251)	28480	1853-0010
A1C93	1853-0010	1	TSTR: SI NPN(SELECTED FROM 2N3251)	28480	1853-0010
A1C94	1854-0071	8	TSTR: SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A1C95	1854-0040	1	TSTR: SI NPN(SELECTED FROM 2N3704)	28480	1854-0040
A1C96	1854-0215	1	TSTR: SI NPN(SELECTED FROM 2N3704)	04713	SPS 3611
A1C97	1854-0071	1	TSTR: SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A1C98	1854-0215	1	TSTR: SI NPN(SELECTED FROM 2N3704)	04713	SPS 3611
A1C99	1853-0010	1	TSTR: SI NPN(SELECTED FROM 2N3251)	28480	1853-0010
A1C10	1854-0071	1	TSTR: SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A1C11	1855-0412	1	TSTR: FET SI N-CHANNEL	17856	FN2960
A1C12	1854-0071	1	TSTR: SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A1C13	1854-0629	2	TSTR: SI NPN	12040	NS48030
A1C14	1854-0629	1	TSTR: SI NPN	12040	NS48030
A1C15	1854-0071	1	TSTR: SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A1C16	0698-8233	4	RESISTOR: MATCHED SET	28480	0698-8233
A1C17	0598-8233	1	RESISTOR: MATCHED SET	28480	0698-8233
A1C18	2100-3250	1	RESISTOR: 5K OHM	28480	2100-3250
A1C19	0698-8233	1	RESISTOR: MATCHED SET	28480	0698-8233
A1C20	2100-3248	1	RESISTOR: 500 OHM	28480	2100-3248
A1C21	0698-8233	1	RESISTOR: MATCHED SET	28480	0698-8233
A1C22	2100-3259	1	RESISTOR: 50 OHM	28480	2100-3259
A1C23	0811-3029	1	RESISTOR: 100K OHM 5% 10W	28480	0811-3029

^aThis Part No. does not include A1C15^bhp-Part No. 1901-0586 can also be used for CR10 and CR11. However both diodes should have the same part number.

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1R9	0698-3648	1	R:FXD MET OX 20K OHM 5% 2W	28480	0698-3648
A1R10 Δ	0698-8425	1	R:FXD MET FLM 20K OHM 10% 5W	28480	0698-8425
A1R11	0598-5100	2	R:FXD COMP 22 MEGOHM 10% 1/4W	28480	0698-5100
A1R12	0757-0443	1	R:FXD MET FLM 11.0K OHM 1% 1/8W	28480	0757-0443
A1R13	2100-3154	1	R:VAR CERMET 1000 OHM 10% TYPE P 3/4W	28480	2100-3154
A1R14	0698-4523	1	R:FXD FLM 169K OHM 1% 1/8W	28480	0698-4523
A1R15	0757-0461	1	R:FXD MET FLM 58.1K OHM 1% 1/8W	28480	0757-0461
A1R16	0757-0451	1	R:FXD MET FLM 24.3K OHM 1% 1/8W	28480	0757-0451
A1R17	0757-0442	1	R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A1R18	0698-7652	1	R:FXD FLM 49.9K OHM 1.0% 1/8W	28480	0698-7652
A1R19	0698-8249	1	R:FXD FLM 23.7K OHM 1%	28480	0698-8249
A1R20	0698-3515	1	R:FXD FLM 5900 OHM 1% 1/8W	28480	0698-3515
A1R21	0598-3264	1	R:FXD FLM 11.8K OHM 1% 1/8W	28480	0698-3264
A1R22	0757-0449	1	R:FXD FLM 20K OHM 1% 1/8W	28480	0757-0449
A1R23	0698-3499	1	R:FXD FLM 40.2K OHM 1% 1/8W	28480	0698-3499
A1R24	0684-4721	1	R:FXD COMP 4700 OHM 10% 1/4W	01121	C8 4721
A1R25	0684-2241	1	R:FXD COMP 220K OHM 10% 1/4W	01121	C8 2241
A1R26	0684-1051	2	R:FXD COMP 1MEGOHM 1% 1/4W	01121	C8 1051
A1R27	0594-1821	1	R:FXD COMP 1800 OHM 10% 1/4W	01121	C3 1821
A1R28	0684-1021	1	R:FXD COMP 1000 OHM 10% 1/4W	01121	C8 1021
A1R29	0598-4123	2	R:FXD MET FLM 499 OHM 1% 1/8W	28480	0698-4123
A1R30	0698-4123	1	R:FXD MET FLM 499 OHM 1% 1/8W	28480	0698-4123
A1R31	0757-0430	1	R:FXD MET FLM 2.21K OHM 1% 1/8W	28480	0757-0430
A1R32	0698-8182	1	R:FXD FLM 2.21K OHM 1% 1/8W	28480	0698-8182
A1R33	0698-8183	1	R:FXD FLM 499 OHM 1.0% 1/8W	28480	0698-8183
A1R34	0698-3243	1	R:FXD MET FLM 178K OHM 1% 1/8W	28480	0698-3243
A1R35	0698-7803	1	R:FXD FLM 575K OHM 1% 1/8W	28480	0698-7803
A1R36	0757-0486	1	R:FXD MET FLM 750K OHM 1% 1/8W	28480	0757-0486
A1R37	0813-0032	2	R:FXD WW 50K OHM 10% 5W	28480	0813-0032
A1R38	0684-1221	1	R:FXD COMP 1.2K OHM 10% 1/4W	01121	C8 1221
A1R39	0813-0032	1	R:FXD WW 50K OHM 10% 5W	28480	0813-0032
A1R40	0137-2021	1	R:FXD COMP 3900 OHM 10% 1/2W	01121	E8 3921
A1R41	0584-1031	3	R:FXD COMP 10K OHM 10% 1/4W	01121	C3 1031
A1R42	0684-1031	1	R:FXD COMP 10K OHM 10% 1/4W	01121	C8 1031
A1R43	0584-1031	1	R:FXD COMP 10K OHM 10% 1/4W	01121	C3 1031
A1R44	0634-8231	1	R:FXD COMP 82K OHM 10% 1/4W	01121	C8 8231
A1R45	0584-2221	1	R:FXD COMP 2200 OHM 10% 1/4W	01121	C3 2221
A1R46	0757-0446	2	R:FXD FLM 15K OHM 1% 1/8W	91637	CMF-1/10-32 T-1
A1R47	0584-4711	2	R:FXD COMP 470 OHM 10% 1/4W	01121	C3 4711
A1R48	0757-0446	1	R:FXD FLM 15K OHM 1% 1/8W	91637	CMF-1/10-32 T-1
A1R49	0584-2731	1	R:FXD COMP 27K OHM 10% 1/4W	01121	C3 2731
A1R50	0698-3274	1	R:FXD MET FLM 10K OHM 1% 1/8W	28480	0698-3274
A1R51	0584-1051	1	R:FXD COMP 1MEGOHM 1% 1/4W	01121	C8 1051
A1R52	0698-8218	5	RESISTOR:MATCHED SET	28480	0698-8218
A1R53	0598-8218	1	RESISTOR:MATCHED SET	28480	0698-8218
A1R54	0698-8218	1	RESISTOR:MATCHED SET	28480	0698-8218
A1R55	0698-8218	1	RESISTOR:MATCHED SET	28480	0698-8218
A1R56	0698-8218	1	RESISTOR:MATCHED SET	28480	0698-8218
A1R57	0684-4711	1	R:FXD COMP 470 OHM 10% 1/4W	01121	C8 4711
A1R58	0698-6391	1	R:FXD FLM 350 OHM 1% 1/8W	28480	0698-6391
A1R59	2100-3103	1	R:VAR CERMET 10K OHM 10% TYPE P 3/4W	28480	2100-3103
A1R60	0698-6350	1	R:FXD FLM 110 OHM 1% 1/8W	28480	0698-6350
A1R61	0698-5673	1	R:FXD MET FLM 3.9K OHM 1% 1/8W	28480	0698-5673
A1R62	0698-3437	1	R:FXD MET FLM 130 OHM 1% 1/8W	28480	0698-3437
A1R63	0598-8181	1	R:FXD FLM 24.3K OHM 1% 1/8W	28480	0698-8181
A1R64	2100-3154	1	R:VAR CERMET 1K OHM 10% TYPE P 3/4W	28480	2100-3154
A1R65	0684-6821	2	R:FXD COMP 6.8K OHM 10% 1/4W	01121	C86821
A1R66	0684-6821	1	R:FXD COMP 6.8K OHM 10% 1/4W	01121	C86821
A1R67	0684-3921	1	R:FXD COMP 3900 OHM 10% 1/4W	01121	C83921
A1R68	0698-5100	1	R:FXD 22 MEGOHM 10% 1/4W	28480	0698-5100
A1R69*	0698-999P	1	PADDING LIST	28480	0698-999P
	0698-3700	1	RESISTOR 715 OHM 1% .125W	16299	C4-1/8-T0-715R-F
	0698-4424	1	RESISTOR 1400 OHM 1% .125W	16299	C4-1/8-T0-1401-F
	0698-4436	1	RESISTOR 2800 OHM 1% .125W	16299	C4-1/8-T0-2801-F
	0698-3493	1	RESISTOR 4120 OHM 1% .125W	16299	C4-1/8-T0-4121-F
	0698-4432	1	RESISTOR 2.10K OHM 1% .125W	16299	C4-1/8-T0-2101-F
	0698-3152	1	RESISTOR 3.48K OHM 1% .125W	16299	C4-1/8-T0-3481-F
A1S1	3101-1724	1	SWITCH: PUSHBUTTON	28480	3101-1724
A1S2	3101-1725	1	SWITCH: PUSHBUTTON	28480	3101-1725
A1U1	1820-0223	3	IC: OPERATIONAL AMPLIFIER	12040	SL8641
A1U2	1820-0203	1	IC: OPERATIONAL AMPLIFIER	07263	SL8940
A1U3	1820-0203	1	IC: OPERATIONAL AMPLIFIER	07263	SL8940
A1W1	34702-61601 1	1	CABLE ASSY:(ACV SWITCH TO R10)	14493	34702-61601
A1W2	34702-61602 1	1	CABLE ASSY:(DCV SWITCH TO 1 V SWITCH)	14493	34702-61602
A1W3	34702-61603 1	1	CABLE ASSY:(1 V SWITCH TO ACV SWITCH)	14493	34702-61603

Δ use for all replacement

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
			MISCELLANEOUS		
	5040-7023		PUSHER	28480	5040-7023
	5040-7032		FOOT-REAR	28480	5040-7032
	3050-0593	4	WASHER-SPRING	28480	3050-0593
Δa	0370-2486	9	KNOB: PUSHBUTTON SWITCH,	71590	J52395
	0370-0914	9	BEZEL: PUSHBUTTON KNOB, JADE GREY	28480	0370-0914
	5020-8315	2	CASE-BOTTOM	28480	5020-8315
	05300-40003	3	SUPPORT BOARD	28480	05300-40003
	05300-40004	8	GUIDE SLIDE	28480	05300-40004
	1460-1357	1	STAND TILT	28480	05301-20005
	05301-40001	2	FOOT	28480	05301-40001
	1510-0091	4	BINDING POST	28480	1510-0091
	34702-00201	1	PANEL: FRONT	14493	34702-00201
	34702-01201	1	BRACKET: LEFT HAND	14493	34702-01201
	34702-01202	1	BRACKET: RIGHT HAND	14493	34702-01202
	34702-05501	1	SHIELD: PLATE	14493	34702-05501
	34702-05502	1	SHIELD: BOX	14493	34702-05502
	34702-60205	1	PANEL ASSY: REAR	28480	34702-60205
	1460-1311	1	SPRING: GROUND	00000	030
	1460-1312	1	SPRING: CLIP	00000	040
	34702-90002	1	MANUAL	28480	34702-90002
	1855-0308	1	TSTR: SI DUAL N-CHANNEL (Q15 ON A1 ASSY)	28480	1855-0308
	3131-0347	2	SPRING CLIP: BRASS (FOR A151 AND A152)	28480	3131-0347
	1200-0474	1	14 PIN IC SOCKET	28480	1200-0474

Δa Instrument serial No's. 1212A00735 and below
used -hp- Part No. 0370-0450

SECTION VII

TROUBLESHOOTING AND CIRCUIT DIAGRAMS

7-1. INTRODUCTION.

7-2. This section of the Operating and Service Manual contains troubleshooting information and circuit diagrams for the Model 34702A Multimeter. Included are troubleshooting trees, a schematic diagram and a component locator.

7-3. SCHEMATIC DIAGRAM.

7-4. The circuits contained within the Model 34702A are shown on the schematic diagram (Figure 7-3). This diagram can be used to assist in understanding of the theory of operation as well as aid in troubleshooting the instrument. DC voltages and ac waveforms are given on the schematic.

7-5. COMPONENT LOCATION DIAGRAM.

7-6. The Component Location Diagram associated with the schematic shows the position of each part mounted on the pc assembly. Each part is identified by a reference designator.

7-7. TROUBLESHOOTING.

7-8. Troubleshooting Trees.

7-9. Figures 7-1 and 7-2 are troubleshooting trees designed to assist in the isolation of malfunctions. Figure 7-1 is a troubleshooting tree for the ac converter, Figure 7-2 is a troubleshooting tree for the ohms converter.

7-10. Troubleshooting Procedure.

7-11. The following procedure is recommended for troubleshooting the Model 34702A:

- a. Ensure the mainframe plug-on (Display Module) is functioning properly.
- b. Perform the following preliminary tests:
 1. Apply ± 1.0000 V dc to the INPUT V terminals. Check for turnover error.
 2. Apply full-scale voltages to the 10 V, 100 V, and 1000 V scales. Check for proper numerical display and decimal point location.

NOTE

The above checks verify proper functioning of many display module interconnections, range switches, and coaxial wiring.

c. Check the ac converter as follows:

1. Apply 1 V ac at 10 kHz to the INPUT V terminals.
2. Trace the propagation of this signal through the impedance converter, ac converter amplifier and filter circuitry.
3. If these circuits appear to be working, check the Input Attenuator.
 - (a) Apply full-scale voltages to the 34702A on the 10 V, 100 V, and 1000 V ranges. Do this at 10 kHz and 100 kHz.
 - (b) Note any inaccuracies in the readout. Any error is probably due to the input attenuator.

NOTE

Most frequency response problems are in the input attenuator.

4. Typical Problem Areas.

- (a) Noise—check ac converter amplifier.
- (b) Low output or zero output—check the ac converter amplifier.
- (c) Any type of inaccuracy—check dc feedback amplifier U1 by replacement. Also, check Q1 for leakage (by replacement).

d. Check the dc section of the instrument:

1. Check for shorted trimmer capacitors.
2. Using an ohmmeter, measure the contact resistance of the switches. Each switch should indicate a short circuit. Dirty switches can be cleaned with MS-180 Freon Degreaser.
3. Coax cables may be shorted or open.
4. Resistors in the dc attenuator may change value.

e. Check the ohms current source:

1. Place the 34702A in ohms function and verify that an overload indication occurs (overrange "1" illuminates and rest of display blanks) with no resistance applied.

2. Check all ohms ranges at full-scale to determine which ranges are bad. When only the two highest ranges are inaccurate, check Q11 if the display indication is high. Check CR13 if the indication is low.
3. Referring to the schematic diagram, check the voltages on the two operational amplifiers. If the -7.2 V and -6.2 V references are incorrect or absent, check U3 and CR16.
- f. Attempt the Performance Tests (Section V) in order to characterize the trouble. Also try the Adjustment

Procedures. Some apparent malfunctions can be corrected by these adjustments. Also, inability to obtain correct adjustment will help localize the problem.

g. Check for burned or loose components, loose connections, or other conditions which might be the source of the trouble.

h. If the problem exists on the DCV and ACV functions but not on the ohms function, troubleshoot the DCV/ACV attenuator. If the trouble exists only on the OHMS or ACV function, refer to the respective troubleshooting tree.

GENERAL SCHEMATIC NOTES

1. PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. PREFIX WITH ASSEMBLY OR SUB-ASSEMBLY DESIGNATION(S) OR BOTH FOR COMPLETE DESIGNATION.

2. COMPONENT VALUES ARE SHOWN AS FOLLOWS UNLESS OTHERWISE NOTED.

RESISTANCE IN OHMS
CAPACITANCE IN MICROFARADS
INDUCTANCE IN MILLIHENRIES

3.  DENOTES EARTH GROUND. USED FOR TERMINALS WITH NO LESS THAN A NO. 18 GAUGE WIRE CONNECTED BETWEEN TERMINAL AND EARTH GROUND TERMINAL OR AC POWER RECEPTACLE.

4.  DENOTES FRAME GROUND. USED FOR TERMINALS WHICH ARE PERMANENTLY CONNECTED WITHIN APPROXIMATELY 0.1 OHM OF EARTH GROUND.

5.  DENOTES GROUND ON PRINTED CIRCUIT ASSEMBLY. (PERMANENTLY CONNECTED TO FRAME GROUND.)

6.  ANY LETTER OR NUMBER IN TRIANGLE DENOTES A SPECIAL GROUND.

7.  DENOTES ASSEMBLY.

8.  DENOTES MAIN SIGNAL PATH.


9.  DENOTES FEEDBACK PATH.

10.  DENOTES FRONT PANEL MARKING.

11.  DENOTES REAR PANEL MARKING.

12.  DENOTES SCREWDRIVER ADJUST.

13. * AVERAGE VALUE SHOWN. OPTIMUM VALUE SELECTED AT FACTORY. THE VALUE OF THESE COMPONENTS MAY VARY FROM ONE INSTRUMENT TO ANOTHER.

14.  DENOTES SECOND APPEARANCE OF A CONNECTOR PIN.

15. 92 DENOTES WIRE COLOR: COLOR CODE SAME AS RESISTOR COLOR CODE. FIRST NUMBER IDENTIFIES BASE COLOR, SECOND NUMBER IDENTIFIES STRIP.

16. ALL RELAYS ARE SHOWN DEENERGIZED.

17. WAVEFORMS AND AC VOLTAGE MEASUREMENTS WERE MADE WITH RESPECT TO CHASSIS GROUND USING AN OSCILLOSCOPE WITH A 10:1 DIVIDER PROBE (10 MEGOHM, 10 pF). THE VOLTAGE LEVELS SHOWN ON THE WAVEFORMS ARE ACTUAL VOLTAGE LEVELS AND ARE NOT TO BE CONFUSED WITH OSCILLOSCOPE SETTING. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER. A VARIATION OF $\pm 10\%$ IN MEASUREMENTS SHOULD BE ALLOWED.

18. DC VOLTAGE LEVELS WERE MEASURED WITH RESPECT TO CIRCUIT GROUND USING A VTVM WITH 10 MEGOHM INPUT IMPEDANCE. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER DUE TO CHANGE IN TRANSISTOR CHARACTERISTICS. A VARIATION OF $\pm 10\%$ SHOULD BE ALLOWED.

CHECK AC
SIGNAL AT C19

CHECK DC GAIN
OF FEEDBACK AMP
FROM C19 TO C16.

CHECK AC VOLTAGE
AT C14.

GROUND BASES
OF Q5 AND Q6
TO CHECK BIAS
VOLTAGES.

TO CHECK Q1 AND Q4,
CONNECT A JUMPER
FROM Q2 EMITTER
TO COLLECTOR IF Q3
BASE NOT MORE NEG
THAN -7 V.


CHECK AC
VOLTAGE AT C31

CHECK DC
VOLTAGE
AT RIGHT
END OF C24.

- 6.2 V
Q15B
GATE

- 6.2 V
Q15A
GATE

CONNECT JUMPER
ACROSS C1 AND
DISENGAGE RANGE
SWITCHES TO CHECK
U2, Q15 AND Q16.

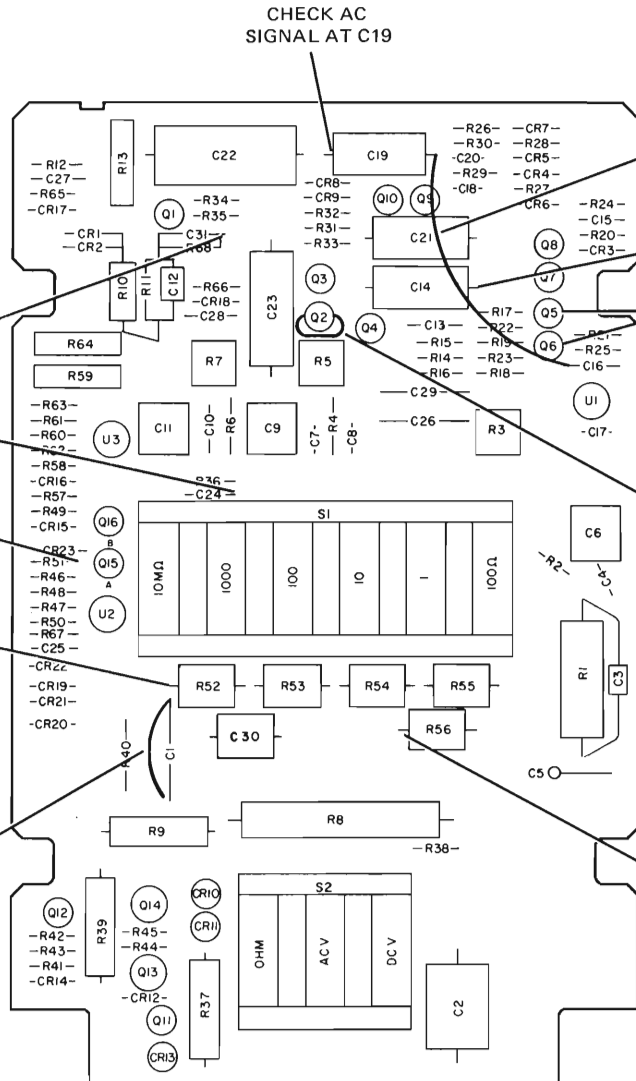

3470A-B-2990

AI

hp Part No. 34702-66501

USE LO INPUT TERMINAL AS GROUND POINT FOR TROUBLESHOOTING.

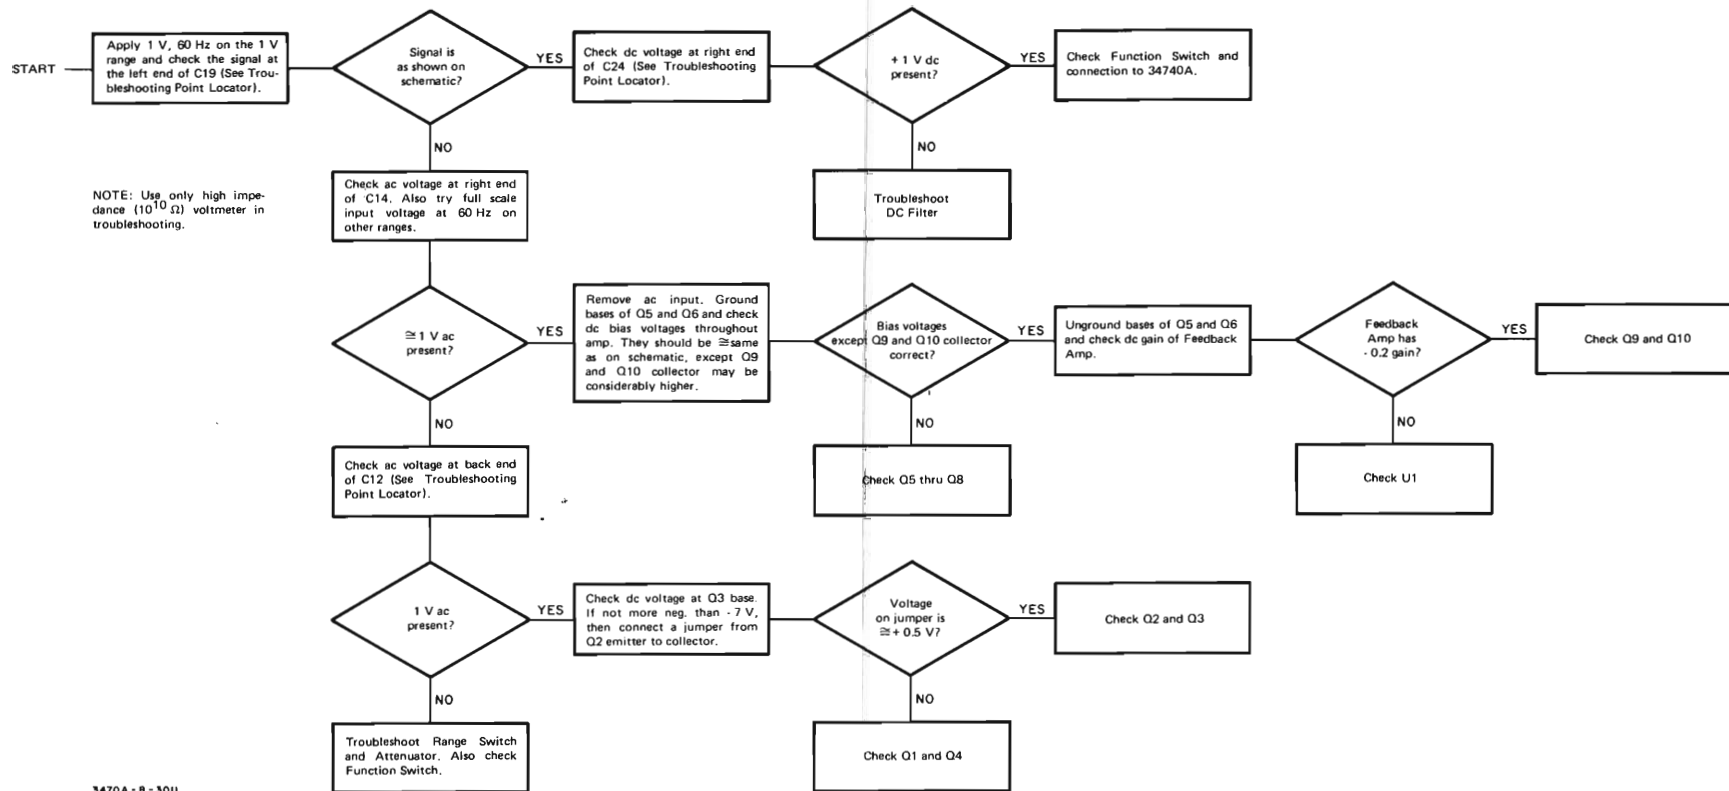


Figure 7-1. AC Converter Troubleshooting Tree.


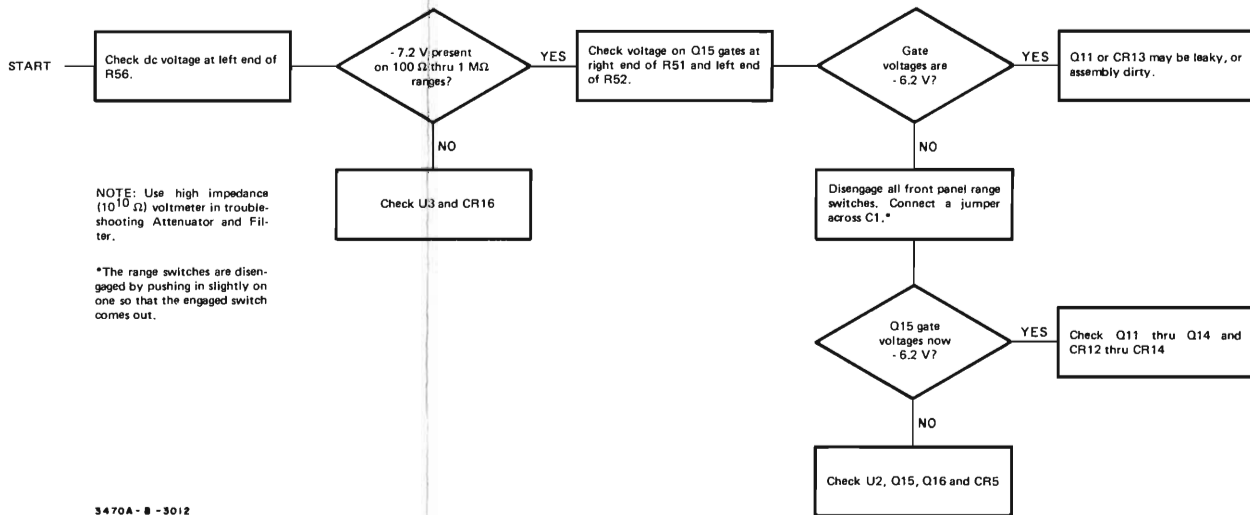


Figure 7-2. Ohms Converter Troubleshooting Tree.

For Serial No's 1212A00335


& below see backdating

Change No.1 (Section 8)

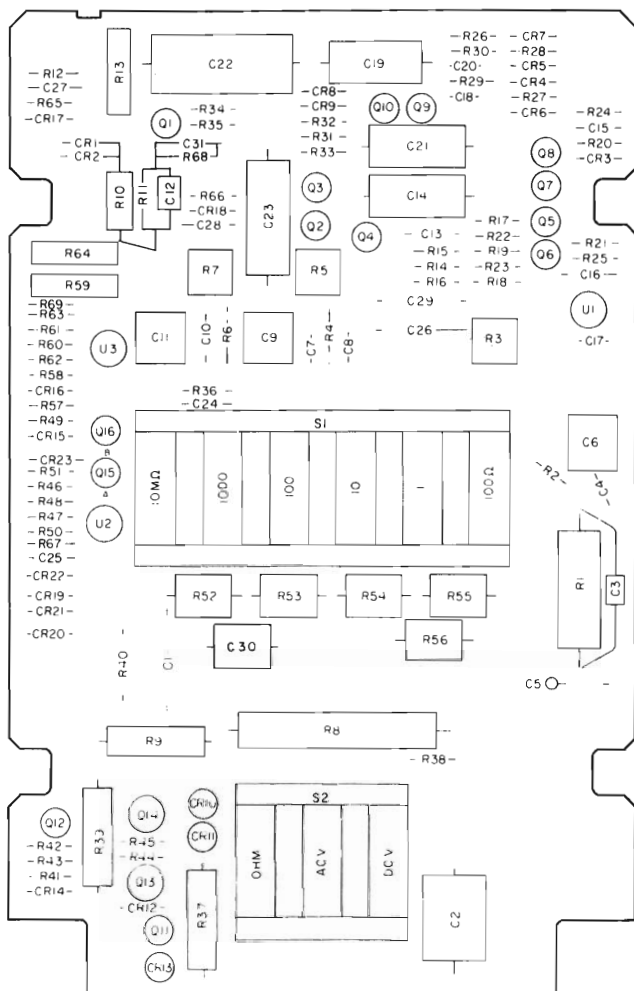

AI

hp Part No. 34702 - 66501

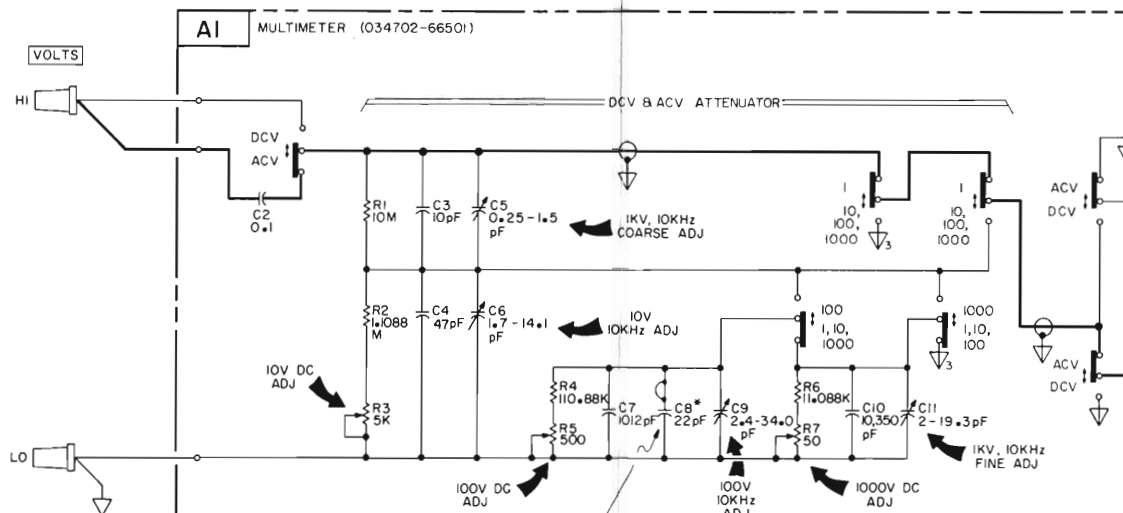

NOTES

1) The 1 V and ACV switches are shown engaged (up); all others disengaged (down). All voltages except those in the Ohms Converter were observed with 1 V RMS at 10 kHz applied to the volts terminal. The voltages in the Ohms Converter were observed with the instrument set to "OHM (Ω)" function with 1 k Ω across the "OHMS" terminals.

2) Use only a high resistance ($10^{10}\Omega$) voltmeter in checking the Attenuator, Filter and Ohm Converter.

3) The 34702A connects together the following pins of the 34740A connector:

25 - 50	19 - 22
23 - 48	31 - 32
24 - 49	33 - 34
3 - 41	29 - 30
20 - 21	27 - 28

4) Transistor and IC Lead Configurations:

a. Plastic bipolar



c. Dual FET's



top view

b. Single FET




top view

d. TO5 IC's



top view

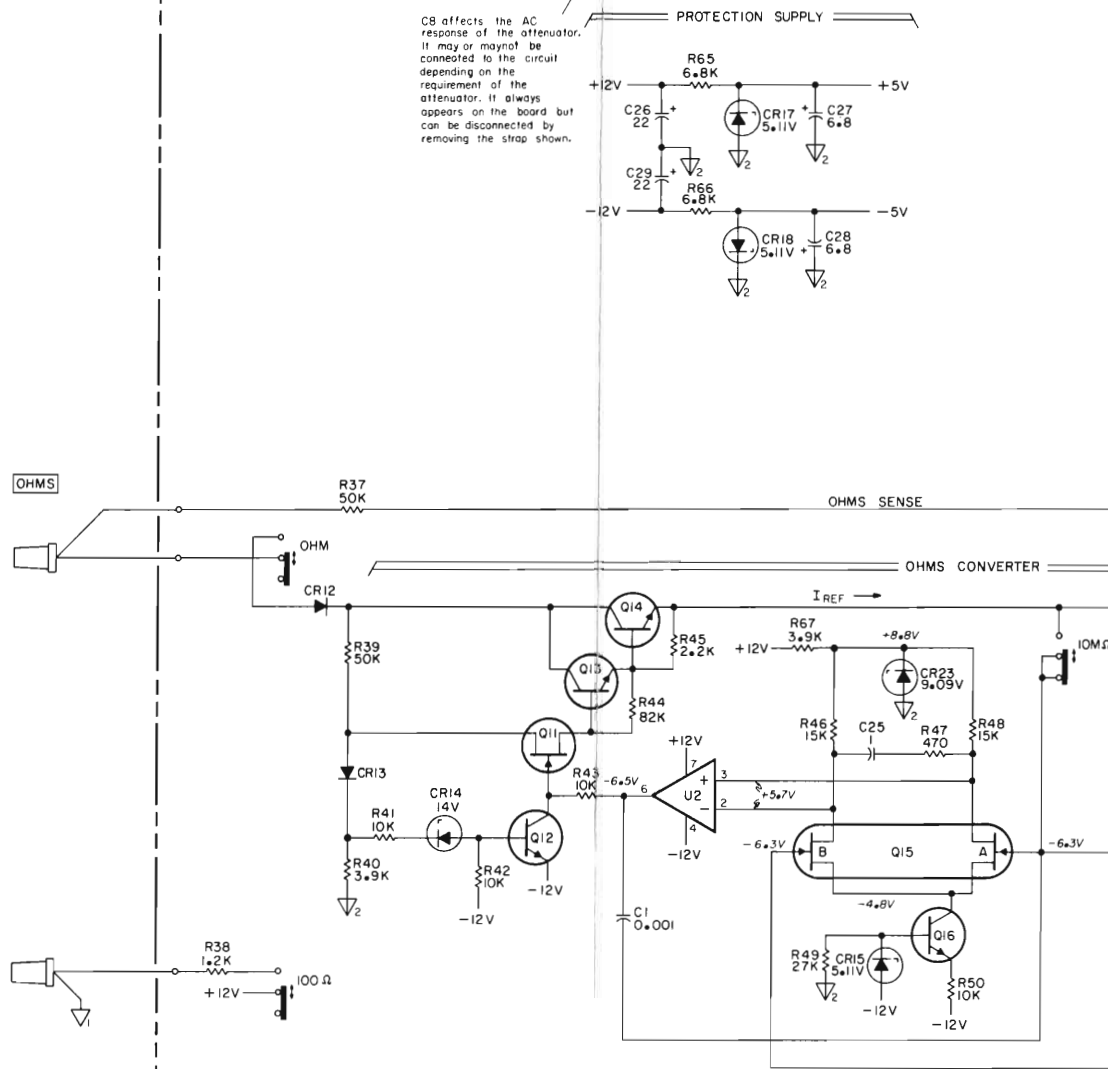

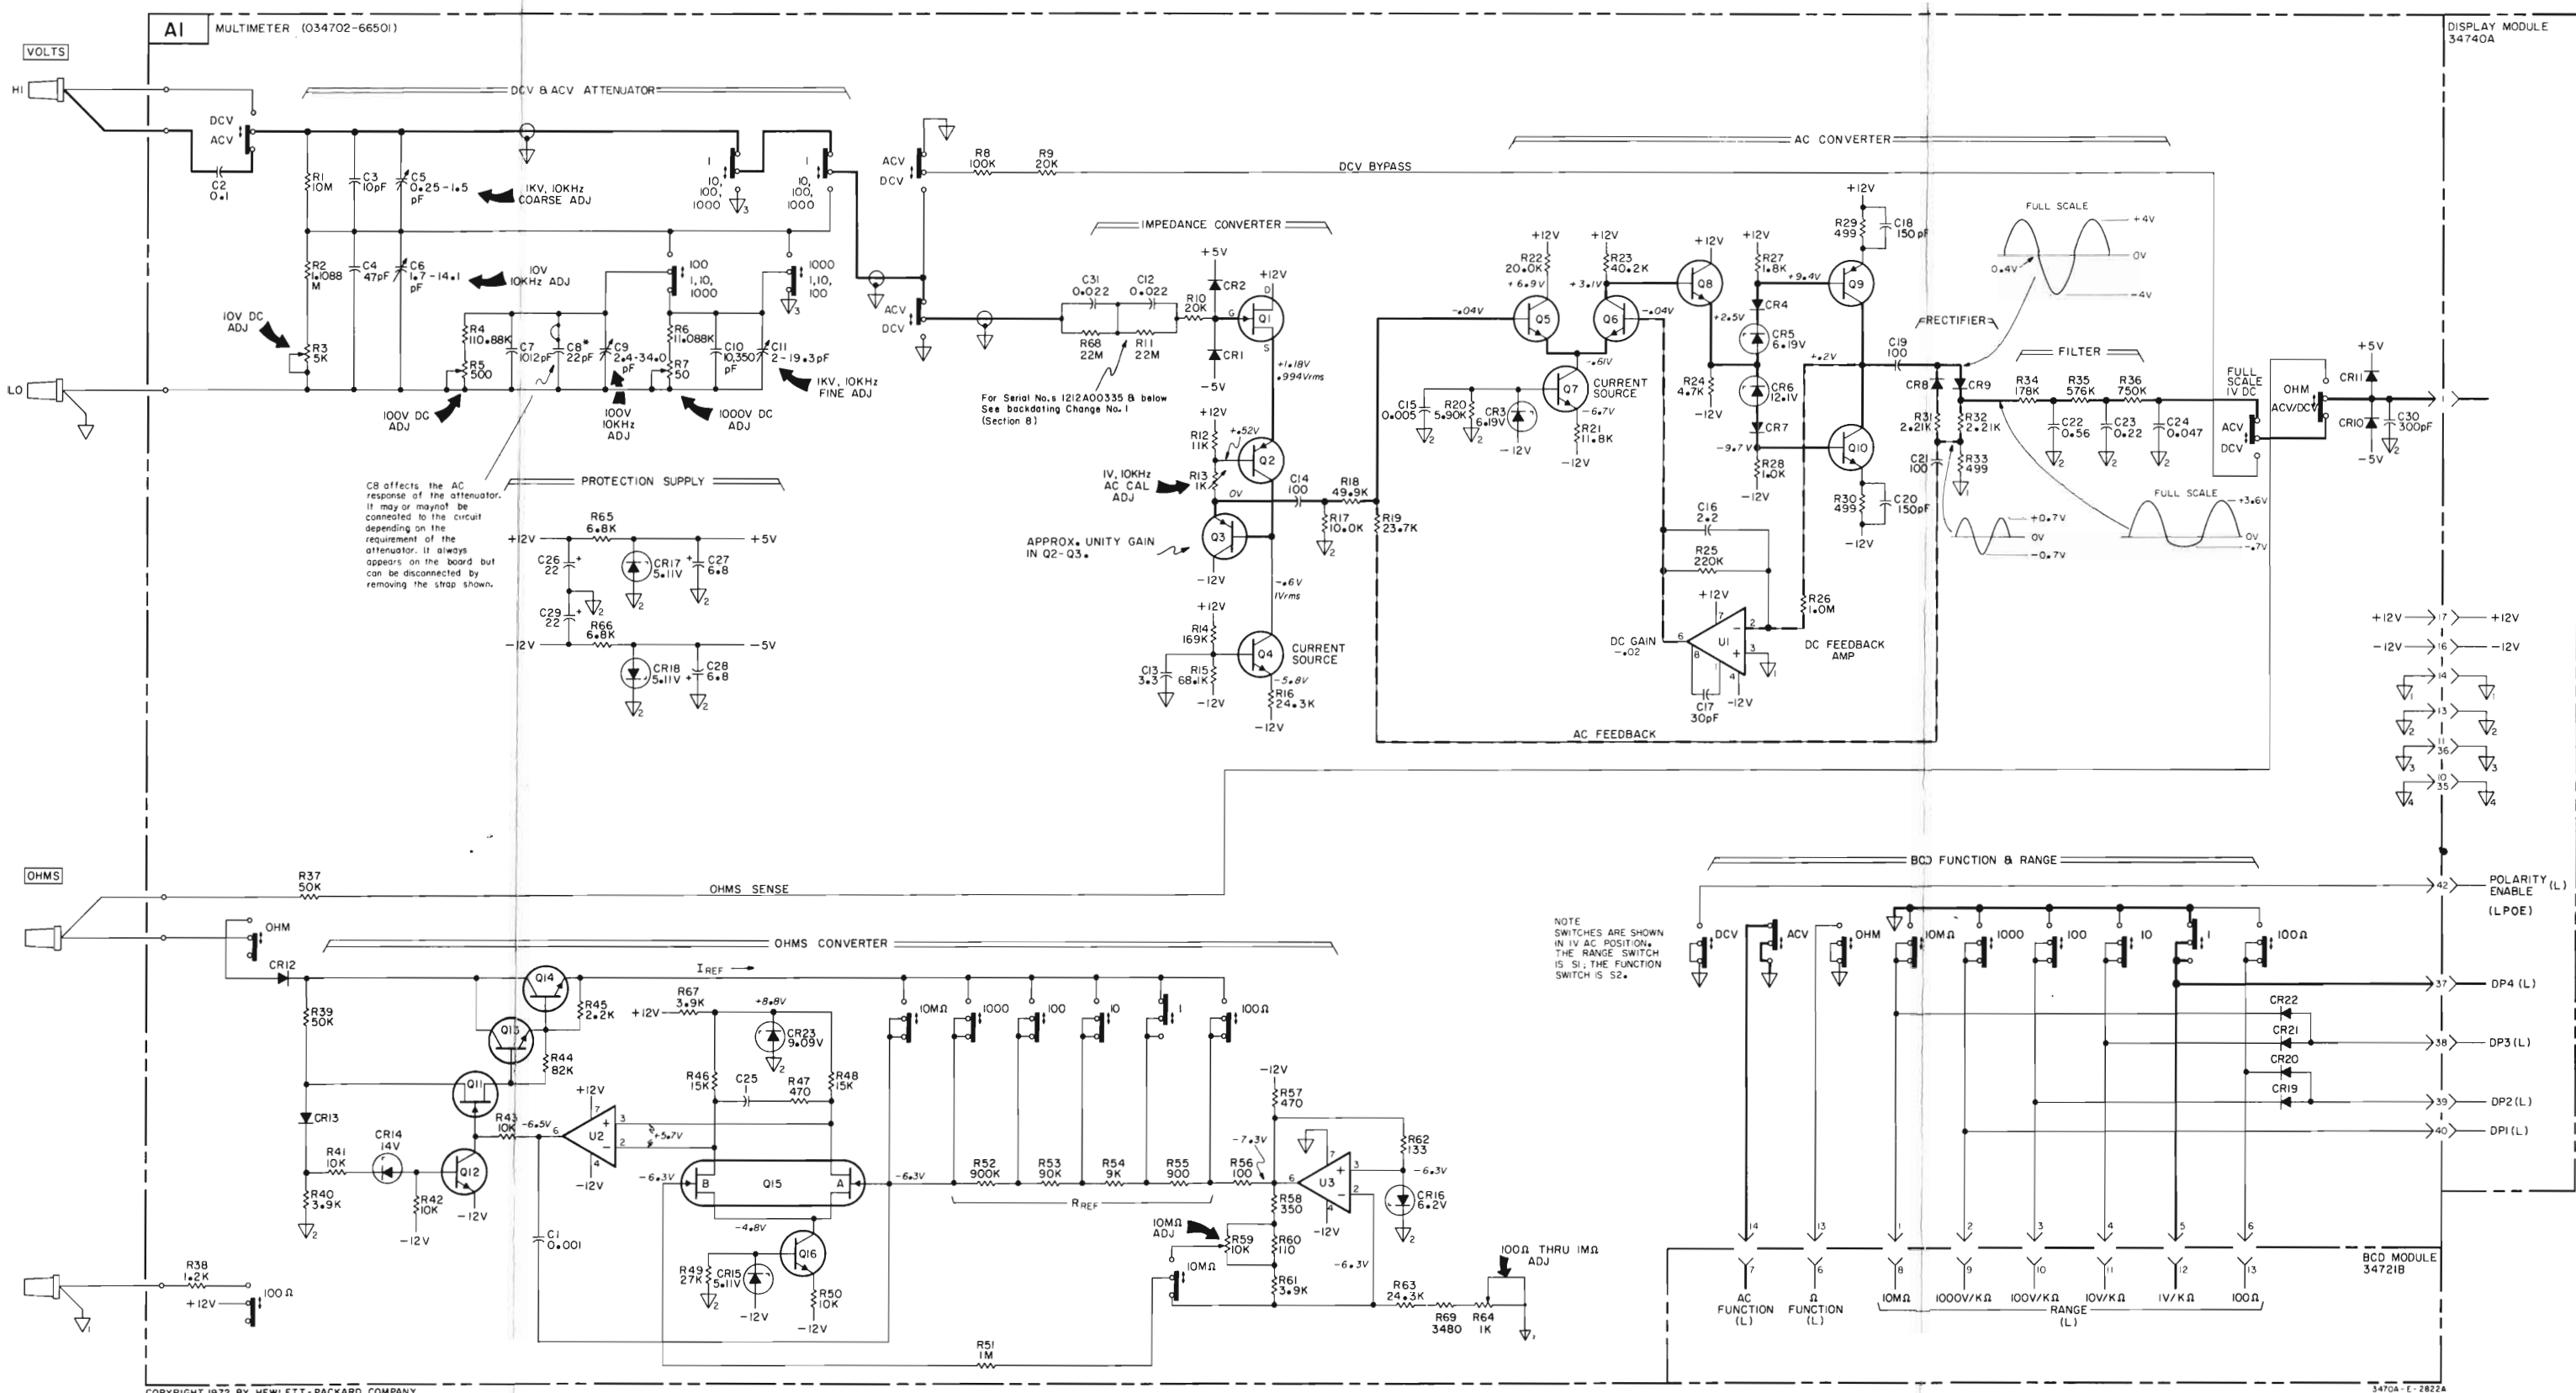


Figure 7-3. 34702A Schematic.

SECTION VIII BACKDATING

8-1. INTRODUCTION.

8-2. This section makes your manual applicable to earlier instruments. Where component values or part numbers in an instrument differ from the replaceable parts list, yet are not listed in this section, the part numbers and values listed in the parts list should be used for replacement.

8-3. Where practical, backdating entries have been incorporated into the text of the manual rather than into this section. If a backdating change is too long or otherwise impractical to incorporate in the text, the entry to be changed will be flagged with a delta having a number subscript; e.g. (Δ_1). The subscript refers to the number of the corresponding change in backdating. Make all changes listed in this backdating which apply to your instrument.


CHANGE NO. Δ_1 : Applies to serial numbers
1212A0335 and below

Table 6-1:


Delete A1C31, A1R68, and A1C8
Change A1C12 to C:fxd, .01 μ F $\pm$ 20%
2000 vdcw, -hp- Part No. 0160-0996

Figure 7-5, Page 7-3 & 7-4:

Change the input circuit to A1Q1 as follows:

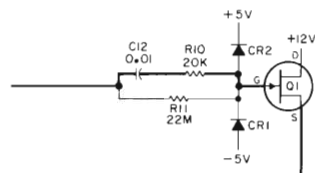

Change the component locator for the
A1 Assembly as follows:

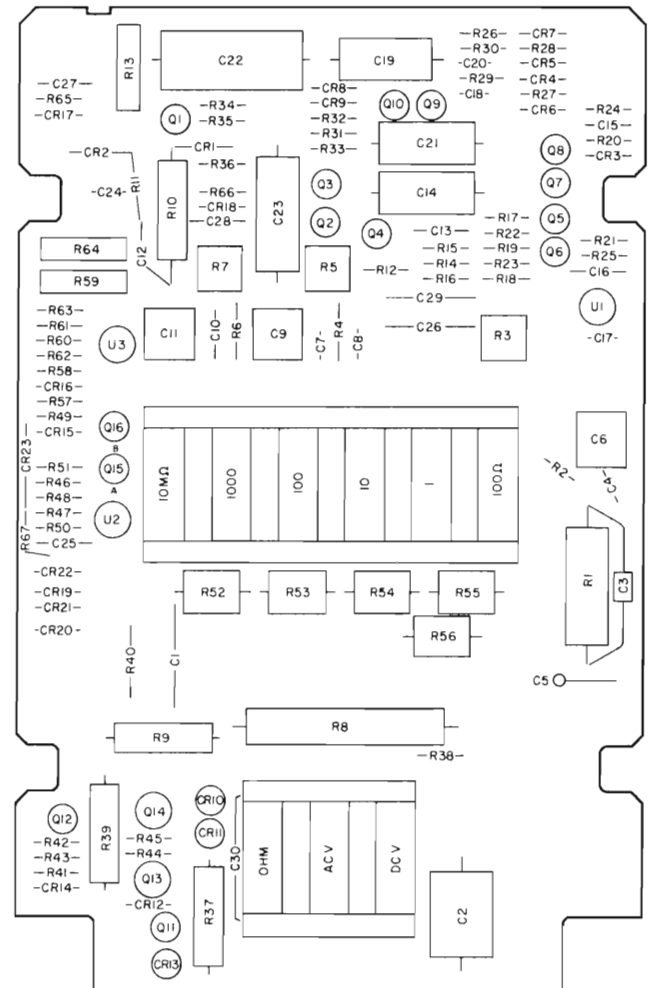

3470A-B-2990

A1

hp Part No. 34702-66501

CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A Common	Any supplier of U.S.	05347	Ultronix, Inc.	San Mateo, Cal.	11236	CTS of Berne, Inc.	Berne, Ind
00136	McCoy Electronics	Mount Holly Springs, Pa.	05397	Union Carbine Corp., Elect.	Div. New York, N. Y.	11237	Chicago Telephone of	California, Inc. So. Pasadena, Cal.
00213	Sage Electronics Corp.	Rochester, N. Y.	05574	Viking Ind. Inc.	Canoga Park, Cal.	11242	Bay State Electronics Corp.	Waltham, Mass
00287	Cemco, Inc.	Danielson, Conn.	05593	Icore Electro-Plastics Inc.	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave	Div. Palo Alto, Cal
00334	Humidial	Colton, Calif.	05616	Cosmo Plastic (c/o Electrical	Spec. Co.) Cleveland, Ohio	11314	National Seal	Downey, Cal.
00373	Garlock Inc.	Cherry Hill, N. J.	05624	Barber Colman Co.	Rockford, Ill.	11453	Precision Connector Corp.	Jamaica, N. Y.
00656	Aerovox Corp.	New Bedford, Mass.	05728	Tiffen Optical Co.	Roslyn Heights, Long Island, N. Y.	11534	Duncan Electronics Inc.	Costa Mesa, Cal.
00779	Amp, Inc.	Harrisburg, Pa.	05729	Metro-Tel Corp.	Westbury, N. Y.	11711	General Instrument Corp.,	Semiconductor Division Products
00781	Aircraft Radio Corp.	Boonton, N. J.	05783	Stewart Engineering Co.	Santa Cruz, Cal.		Group	Newark, N. J.
00809	Croven, Ltd.	Whitby, Ontario, Canada	05820	Wakefield Engineering Inc.	Wakefield, Mass.	11717	Imperial Electronic, Inc.	Buena Park, Cal.
00815	Northern Engineering	Laboratories, Inc. Burlington, Wis.	06004	Bassick Co., Div. of Stewart	Warner Corp. Bridgeport, Conn.	11870	Melabs, Inc.	Palo Alto, Cal.
00853	Sangamo Electric Co.,	Pickens Div. Pickens, S. C.	06090	Raychem Corp.	Redwood City, Cal.	12136	Philadelphia Handle Co.	Camden, N. J.
00866	Goe Engineering Co.	City of Industry, Cal.	06175	Bausch and Lomb Optical	Co. Rochester, N. Y.	12361	Grove Mfg. Co., Inc.	Shady Grove, Pa.
00891	Carl E. Holmes Corp.	Los Angeles, Cal.	06402	E. T. A. Products Co. of	America Chicago, Ill.	12574	Gulton Ind. Inc., Data System	Div. Albuquerque, N. M.
00929	Microlab Inc.	Livingston, N. J.	06540	Amatom Electronic Hardware	Co., Inc. New Rochelle, N. Y.	12697	Ciarostat Mfg. Co.	Dover, N. H.
01002	General Electric Co.,	Capacitor Dept. Hudson Falls, N. Y.	06555	Beebe Electrical Instrument	Co., Inc. Penacook, N. H.	12728	Elmar Filter Corp.	W. Haven, Conn.
01009	Alden Products Co.	Brockton, Mass.	06666	General Devices Co., Inc.	Indianapolis, Ind.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan
01121	Allen Bradley Co.	Milwaukee, Wis.	06751	Components Inc., Ariz. Div.	Phoenix, Arizona	12881	Metex Electronics Corp.	Clark, N. J.
01255	Litton Industries, Inc.	Beverly Hills, Cal.	06812	Torrington Mfg. Co., West Div.	Van Nuys, Cal.	12930	Delta Semiconductor Inc.	Newport Beach, Cal.
01281	TRW Semiconductors, Inc.	Lawndale, Cal.	06980	Varian Assoc. Etmac Div.	San Carlos, Cal.	12954	Dickson Electronics Corp.	Scottsdale, Arizona
01295	Texas Instruments, Inc.,	Transistor Products Div. Dallas, Texas	07088	Kelvin Electric Co.	Van Nuys, Cal.	13019	Airco Supply Co., Inc.	Wichita, Kansas
01349	The Alliance Mfg. Co.	Alliance, Ohio	07126	Digitran Co.	Pasadena, Cal.	13061	Wilco Products	Detroit, Mich.
01538	Small Parts Inc.	Los Angeles, Cal.	07137	Transistor Electronics	Corp. Minneapolis, Minn.	13103	Thermolloy	Dallas, Texas
01589	Pacific Relays, Inc.	Van Nuys, Cal.	07138	Westinghouse Electric	Corp., Electronic Tube Div. Elmira, N. Y.	13327	Solitron Devices Inc.	Tappan, N. Y.
01670	Gudebrod Bros. Silk Co.	New York, N. Y.	07149	Filmohm Corp.	New York, N. Y.	13396	Telefunken (GmbH)	Hanover, Germany
01930	Amerock Corp.	Rockford, Ill.	07233	Cinch-Graphik Co.	City of Industry, Cal.	13835	Midland-Wright Div. of	Pacific Industries, Inc. Kansas City, Kansas
01960	Pulse Engineering Co.	Santa Clara, Cal.	07256	Silicon Transistor Corp.	Carle Place, N. Y.	14099	Sem-Tech	Newbury Park, Cal.
02114	Ferroxcube Corp. of	America Saugerties, N. Y.	07261	Avnet Corp.	Culver City, Cal.	14193	Calif. Resistor Corp.	Santa Monica, Cal.
02116	Wheelock Signals, Inc.	Long Branch, N. J.	07263	Fairchild Camera & Inst. Corp.,	Semiconductor Div. Mountain View, Cal.	14298	American Components, Inc.	Conshohocken, Pa.
02286	Cole Rubber and Plastics Inc.	Sunnyvale, Cal.	07322	Minnesota Rubber Co.	Minneapolis, Minn.	14433	ITT Semiconductor, a Div. of	Int. Telephone and Telegraph
02260	Amphenol-Borg Electronics	Corp. Broadview, Ill.	07387	Birther Corp. The	Monterey Park, Cal.		Corporation	West Palm Beach, Fla.
02735	Radio Corp. of America, Semi-	conductor and Materials	07397	Sylvania Elect. Prod. Inc.,	Mt. View Operations Mountain View, Cal.	14493	Hewlett-Packard Company	Loveland, Colo.
02771	Vocaline Co. of America,	Inc. Old Saybrook, Conn.	07700	Technical Wire Products	Inc. Cranford, N. J.	14655	Cornell Dublier Electric Corp.	Newark, N. J.
02777	Hopkins Engineering Co.	San Fernando, Cal.	07829	Bodine Elect. Co.	Chicago, Ill.	14674	Corning Glass Works	Corning, N. Y.
02875	Hudson Tool & Die	Newark, N. J.	07910	Continental Device Corp.	Hawthorne, Cal.	14752	Electro Cube Inc.	San Gabriel, Cal.
03296	Nylon Molding Corp.	Springfield, N. J.	07933	Raytheon Mfg. Co., Semi-	conductor Div. Mountain View, Cal.	14960	Williams Mfg. Co.	San Jose, Cal.
03508	G. E. Semiconductor Prod.	Dept. Syracuse, N. Y.	07980	Hewlett-Packard Co.,	New Jersey Division Rockaway, N. J.	15106	The Sphere Co., Inc.	Little Falls, N. J.
03705	Apex Machine & Tool Co.	Dayton, Ohio	08145	U. S. Engineering Co.	Los Angeles, Cal.	15203	Webster Electronics Co.	New York, N. Y.
03797	Eldema Corp.	Compton, Calif.	08289	Blinn, Delbert Co.	Pomona, Cal.	15287	Scionics Corp.	Northridge, Cal.
03818	Parker Seal Co.	Los Angeles, Cal.	08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada	15291	Adjustable Bushing Co.	N. Hollywood, Cal.
03877	Transitron Electric Corp.	Wakefield, Mass.	08524	Deutsch Fastener Corp.	Los Angeles, Cal.	15558	Micron Electronics. Garden City, Long Island, N. Y.	
03888	Pyrofilm Resistor Co.,	Inc. Cedar Knolls, N. J.	08664	Bristol Co., The	Waterbury, Conn.	15566	Amprobe Inst. Corp.	Lyndon, N. Y.
03954	Singer Co., Diehl Div.,	Finderne Plant Sumerville, N. J.	08717	Sloan Company	Sun Valley, Cal.	15631	Cabletronics	Costa Mesa, Cal.
04009	Arrow, Hart and Hegeman	Elect. Co. Hartford, Conn.	08718	ITT Cannon Electric Inc.,	Phoenix Div. Phoenix, Arizona	15772	Twentieth Century Coil	Spring Co. Santa Clara, Cal.
04013	Tarus Corp.	Lambertville, N. J.	08727	National Radio Lab Inc.	Paramus, N. J.	15801	Fenwal Elect. Inc.	Framingham, Mass.
04062	Arco Electronic Inc.	Great Neck, N. Y.	08792	CBS Electronics Semiconductor	Operations, Div. of CBS Inc. Lowell, Mass.	15818	Amelco Inc.	Mountain View, Cal.
04217	Essex Wire	Los Angeles, Cal.	08806	General Electric Co.,	Miniature Lamp Dept. Cleveland, Ohio	16037	Spruce Pine Mica Co.	Spruce Pine, N. C.
04222	Hi-Q Division of Aerovox	Myrtle Beach, S. C.	08984	Mel-Rain	Indianapolis, Ind.	16179	Omni-Spectra Inc.	Detroit, Ill.
04354	Precision Paper Tube Co.	Wheeling, Ill.	09026	Babcock Relays Div.	Costa Mesa, Cal.	16352	Computer Diode Corp.	Lodi, N. J.
04404	Palo Alto Division of Hewlett-	Packard Co. Palo Alto, Cal.	09097	Electronic Enclosures Inc.	Los Angeles, Calif.	16554	Electroid Co.	Union, N. J.
04651	Sylvania Electric Products,	Microwave Device Div. Mountain View, Cal.	09134	Texas Capacitor Co.	Houston, Texas	16585	Boots Aircraft Nut Corp.	Pasadena, Cal.
04673	Dakota Engr. Inc.	Culver City, Cal.	09145	Tech. Ind. Attoh	Elect. Burbank, Cal.	16688	Ideal Prec. Meter Co., Inc.	Brooklyn, N. Y.
04713	Motorola Inc. Semiconductor	Prod. Div. Phoenix, Arizona	09250	Electro Assemblies, Inc.	Chicago, Ill.	16758	De Jur Meter Div.	Kokomo, Ind.
04732	Filtron Co., Inc. Western	Div. Culver City, Cal.	09353	C & K Components Inc.	Newton, Mass.	17109	Thermometrics Inc.	Canoga Park, Cal.
04773	Automatic Electric Co.	Northlake, Ill.	09569	Mallory Battery Co. of	Canada, Ltd. Toronto, Ontario, Canada	17474	Tranex Company	Mountain View, Cal.
04796	Sequoia Wire Co.	Redwood City, Cal.	09795	Pennsylvania Florocarbon	Clifton Heights, Penn.	17575	Hamlin Metal Products Corp.	Akron, Ohio
04811	Precision Coil Spring Co.	El Monte, Cal.	09922	Burndy Corp.	Norwalk, Conn.	17745	Angstrom Prec. Inc.	No. Hollywood, Cal.
04870	P. M. Motor Company	Westchester, Ill.	10214	General Transistor Western	Corp. Los Angeles, Cal.	17856	Siliconix Inc.	Sunnyvale, Cal.
04919	Component Mfg. Service	Co. W. Bridgewater, Mass.	10411	Ti-Tal, Inc.	Berkeley, Cal.	17870	McGraw-Edison Co.	Manchester, N. H.
05006	Twentieth Century Plastics,	Inc. Los Angeles, Cal.	10646	Carborundum Co.	Niagara Falls, N. Y.	18042	Power Design Pacific Inc.	Palo Alto, Cal.
05277	Westinghouse Electric Corp.	Semiconductor Dept. Youngwood, Pa.				18083	Clevite Corp. Semiconductor Div.	Palo Alto, Cal.

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
19644	LRC Electronics	Horseheads, N. Y.	71482	C. P. Clare & Co.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
19701	Electra Mfg. Co.	Independence, Kansas	71590	Centralab Div. of		78471	Tilley Mfg. Co.	San Francisco, Cal.
20183	General Altronics Corp.	Philadelphia, Pa.		Globe Union Inc.	Milwaukee, Wis.	78488	Stackpole Carbon Co.	St. Marys, Pa.
21226	Executone, Inc.	Long Island City, N. Y.	71616	Commercial Plastics Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
21355	Fafnir Bearing Co., The	New Britain, Conn.	71700	Cornish Wire Co., The	New York, N. Y.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
21520	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71707	Coto Coil Co., Inc.	Providence, R. I.	78790	Transformer Engineers	San Gabriel, Cal.
23020	General Reed Co.	Metuchen, N. J.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78947	Ucinite Co.	Newtonville, Mass.
23042	Texscan Corp.	Indianapolis, Ind.	71785	Cinch Mfg. Co.		79136	Waldes Kohinoor Inc.	Long Island City, N. Y.
23783	British Radio Electronics Ltd.	Washington, D.C.		Howard B. Jones Div.	Chicago, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
24455	G. E. Lamp Division, Nela Park	Cleveland, Ohio	71984	Dow Corning Corp.	Midland, Mich.	79251	Wenco Mfg. Co.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	72136	Electro Motive Mfg. Co., Inc.		79727	Continental-Wirt Electronics Corp.	
24681	Memcor Inc., Comp. Div.	Huntington, Ind.			Willimantic, Conn.			Philadelphia, Pa.
26365	Gries Reproduser Corp.	New Rochelle, N. Y.	72619	Dialight Corp.	Brooklyn, N. Y.	79963	Zierick Mfg. Corp.	New Rochelle, N. Y.
26462	Grobert File Co. of America, Inc.	Carlstadt, N. J.	72656	Indiana General Corp.		80031	Mepeco Division of Sessions Clock Co.	
26851	Compac Hollister Co.	Hollister, Cal.		Electronics Div.	Keasby, N. J.			Morristown, N. J.
26992	Hamilton Watch Co.	Lancaster, Pa.	72699	General Instrument Corp.		80033	Prestole Corp.	Toledo, Ohio
28480	Hewlett-Packard Co.	Palo Alto, Cal.		Cap Division	Newark, N. J.	80120	Schnitzer Alloy Products Co.	Elizabeth, N. J.
28520	Heyman Mfg. Co.	Kenilworth, N. J.	72765	Drake Mfg. Co.	Harwood Heights, Ill.	80131	Electronic Industries Association	
30817	Instrument Specialties Co., Inc.	Little Falls, N. J.	72825	Hugh H. Eby Inc.	Philadelphia, Pa.		Standard tube or semi-conductor device, any manufacturer.	
33173	G. E. Receiving Tube Dept.	Owensboro, Ky.	72928	Gudeman Co.	Chicago, Ill.	80207	Unimax Switch, Div. Maxon Electronics Corp.	Wallingford, Conn.
35434	Lectrohm Inc.	Chicago, Ill.	72962	Elastic Stop Nut Corp.	Union, N. J.	80223	United Transformer Corp.	New York, N. Y.
36196	Stanwyck Coil Products, Ltd.	Hawkesbury, Ontario, Canada	72964	Robert M. Hadley Co.	Los Angeles, Cal.	80248	Oxford Electric Corp.	Chicago, Ill.
36287	Cunningham, W. H. & Hill, Ltd.	Toronto, Ontario, Canada	72982	Erie Technological Products, Inc.	Erie, Pa.	80294	Bourns Inc.	Riverside, Cal.
37942	P. R. Mallory & Co., Inc.	Indianapolis, Ind.	73061	Hansen Mfg. Co., Inc.	Princeton, Ind.	80411	Arco Div. of Robertshaw Controls Co.	
39543	Mechanical Industries Prod. Co.	Akron, Ohio	73076	H. M. Harper Co.	Chicago, Ill.			Columbus, Ohio
40920	Miniature Precision Bearings, Inc.	Keene, N. H.	73138	Helipot Div. of Beckman Inst., Inc.		80486	All Star Products Inc.	Defiance, Ohio
40931	Honeywell Inc.	Minneapolis, Minn.	73293	Hughes Products Division of		80509	Avery Label Co.	Monrovia, Cal.
42190	Muter Co.	Chicago, Ill.		Hughes Aircraft Co.	Newport Beach, Cal.	80583	Hammarlund Co., Inc.	Mars Hill, N. C.
43990	C. A. Norgren Co.	Englewood, Colo.	73445	Amperex Elect. Co.	Hicksville, L. I., N. Y.	80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
44655	Ohmite Mfg. Co.	Skokie, Ill.	73506	Bradley Semiconductor Corp.		80813	Dimco Gray Co.	Dayton, Ohio
46384	Penn Eng. & Mfg. Corp.	Doylestown, Pa.	73559	Carling Electric, Inc.	New Haven, Conn.	81030	International Inst. Inc.	Orange, Conn.
47904	Polaroid Corp.	Cambridge, Mass.	73586	Circle F Mfg. Co.	Trenton, N. J.	81073	Grayhill Co.	LaGrange, Ill.
48620	Precision Thermometer & Inst. Co.	Southampton, Pa.	73682	George K. Garrett Co.		81095	Triad Transformer Corp.	Venice, Cal.
49556	Microwave & Power Tube Div.	Waltham, Mass.		Div. MSL Industries, Inc.	Philadelphia, Pa.	81312	Winchester Elec. Div. Litton Ind., Inc.	
52090	Rowan Controller Co.	Westminster, Md.	73734	Federal Screw Products, Inc.	Chicago, Ill.			Oakville, Conn.
52983	HP Co., Med. Elec. Div.	Waltham, Mass.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio	81349	Military Specification	
54294	Shallcross Mfg. Co.	Selma, N. C.	73793	General Industries Co., The	Elyria, Ohio	81483	International Rectifier Corp.	El Segundo, Cal.
55026	Simpson Electric Co.	Chicago, Ill.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81541	Airpax Electronics, Inc.	Cambridge, Maryland
55933	Sonetone Corp.	Elmsford, N. Y.	73899	JFD Electronics Corp.	Brooklyn, N. Y.	81860	Barry Controls, Div. Barry Wright Corp.	
55938	Raytheon Co. Commercial Apparatus & System Div.	So. Norwalk, Conn.	73905	Jennings Radio Mfg. Corp.	San Jose, Cal.			Watertown, Mass.
56137	Spaulding Fibre Co., Inc.	Tonawanda, N. Y.	73957	Groove-Pin Corp.	Ridgefield, N. J.	82042	Carter Precision Electric Co.	Skokie, Ill.
56289	Sprague Electric Co.	North Adams, Mass.	74276	Signalite Inc.	Neptune, N. J.	82047	Sperli Faraday Inc., Copper Hewitt Electric Div.	Hoboken, N. J.
58474	Superior Elect. Co.	Bristol, Conn.	74455	J. H. Winns, and Sons	Winchester, Mass.	82116	Electric Regulator Corp.	Norwalk, Conn.
59446	Telex Corp.	Tulsa, Okla.	74861	Industrial Condenser Corp.	Chicago, Ill.	82142	Jeffers Electronics Division of Speer Carbon Co.	Du Bois, Pa.
59730	Thomas & Betts Co.	Elizabeth, N. J.	74868	R. F. Products Division of Amphenol-Borg Electronic Corp.		82170	Fairchild Camera & Inst. Corp.	Paramus, N. J.
60741	Triplet Electrical Inst. Co.	Bluffton, Ohio			Danbury, Conn.	82209	Magurie Industries, Inc.	Greenwich, Conn.
61775	Union Switch and Signal Div. of Westinghouse Air Brake Co.	Pittsburgh, Pa.	74970	E. F. Johnson Co.	Waseca, Minn.	82219	Sylvania Electric Prod., Inc.	
62119	Universal Electric Co.	Owosso, Mich.	75042	International Resistance Co.	Philadelphia, Pa.		Electronic Tube Division	Emporium, Pa.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N. Y.	75263	Keystone Carbon Co., Inc.	St. Marys, Pa.	82376	Astron Corp.	East Newark, Harrison, N. J.
64959	Western Electric Co., Inc.	New York, N. Y.	75378	CTS Knights, Inc.	Sandwich, Ill.	82389	Switchcraft, Inc.	Chicago, Ill.
65092	Weston Inst. Inc. Weston-Newark	Newark, N. J.	75382	Kulka Electric Corp.	Mt. Vernon, N. Y.	82647	Melafis & Controls Inc.	
66295	Witteck Mfg. Co.	Chicago, Ill.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.		Spencer Products	Attleboro, Mass.
66346	Minnesota Mining & Mfg. Co.		75915	Littlefuse, Inc.	Des Plaines, Ill.	82768	Phillips-Advancon Control Co.	Joliet, Ill.
	Revere Mincom Div.	St. Paul, Minn.	76005	Lord Mfg. Co.	Erie, Pa.	82866	Research Products Corp.	Madison, Wis.
70276	Allen Mfg. Co.	Hartford, Conn.	76210	C. W. Marwedel	San Francisco, Cal.	82877	Rolton Mfg. Co., Inc.	Woodstock, N. Y.
70309	Allied Control	New York, N. Y.	76433	General Instrument Corp.		82893	Vector Electronic Co.	Glendale, Cal.
70318	Allmetal Screw Product Co., Inc.			Micamold Division	Newark, N. J.	83058	Carr Fastener Co.	Cambridge, Mass.
		Garden City, N. Y.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.	83086	New Hampshire Ball Bearing, Inc.	Peterborough, N. H.
70417	Amplex, Div. of Chrysler Corp.	Detroit, Mich.	76493	J. W. Miller Co.	Los Angeles, Cal.			
70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	76530	Cinch-Monadnock, Div. of United Carr Fastener Corp.	San Leandro, Cal.	83125	General Instrument Corp.	
70563	Amperite Co., Inc.	Union City, N. J.	76545	Mueller Electric Co.	Cleveland, Ohio		Capacitor Div.	Darlington, S. C.
70674	ADC Products Inc.	Minneapolis, Minn.	76703	National Union	Newark, N. J.	83148	ITT Wire and Cable Div.	Los Angeles, Cal.
70903	Belden Mfg. Co.	Chicago, Ill.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.	83186	Victory Eng. Corp.	Springfield, N. J.
70998	Bird Electric Corp.	Cleveland, Ohio	77068	The Bendix Corp.		83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.
71002	Birnbach Radio Co.	New York, N. Y.		Electrodynamics Div.	N. Hollywood, Cal.	83315	Hubbell Corp.	Mundelein, Ill.
71034	Bliley Electric Co., Inc.	Erie, Pa.	77075	Pacific Metals Co.	San Francisco, Cal.	83324	Rosan Inc.	Newport Beach, Cal.
71041	Boston Gear Works Div. of Murray Co. of Texas	Quincey, Mass.	77221	Phaostan Instrument and Electronic Co.	So. Pasadena, Cal.	83330	Smith, Herman H., Inc.	Brooklyn, N. Y.
71218	Bud Radio, Inc.	Willoughby, Ohio	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.	83332	Tech Labs	Palisades Park, N. J.
71279	Cambridge Thermionics Corp.	Cambridge, Mass.	77342	American Machine & Foundry Co.		83385	Central Screw Co.	Chicago, Ill.
71286	Camloc Fastener Corp.	Paramus, N. J.		Potter & Brumfield Div.	Princeton, Ind.	83501	Gavitt Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.
71313	Cardwell Condenser Corp.		77630	TRW Electronic Components Div.	Camden, N. J.	83594	Burroughs Corp., Electronic Tube Div.	Plainfield, N. J.
		Lindenhurst, L. I., N. Y.	77638	General Instrument Corp.		83740	Union Carbide Corp., Consumer Prod. Div.	New York, N. Y.
71400	Bussmann Mfg. Div. of McGraw-Edison Co.	St. Louis, Mo.		Rectifier Division	Brooklyn, N. Y.	83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
71436	Chicago Condenser Corp.	Chicago, Ill.	77764	Resistance Products Co.	Harrisburg, Pa.	83821	Loyd Scruggs Co.	Festus, Mo.
71447	Calif. Spring Co., Inc.	Pico-Rivera, Cal.	77969	Rubbercraft Corp. of Calif.	Torrance, Cal.	83942	Aeronautical Inst. & Radio Co.	Lodi, N. J.
71450	CTS Corp.	Elkhart, Ind.	78189	Shakeproof Division of Illinois Tool Works	Elgin, Ill.	84171	Arco Electronics Inc.	Great Neck, N. Y.
71468	ITT Cannon Electric Inc.	Los Angeles, Cal.	78277	Sigma	So. Braintree, Mass.	84396	A. J. Glesener Co., Inc.	San Francisco, Cal.
71471	Cinema, Div. Aerovox Corp.	Burbank, Cal.	78283	Signal Indicator Corp.	New York, N. Y.	84411	TRW Capacitor Div.	Ogallala, Neb.
			78290	Struthers-Dunn Inc.	Pittman, N. J.			

00015-49
Revised: May, 1970

From: Handbook Supplements
H4-1 Dated January 1970

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkes Tarzian, Inc.	Bloomington, Ind.	91929	Honeywell Inc., Micro Switch Division	Freeport, Ill.	96095	Hi-Q Div. of Aerovox Corp.	Olean, N.Y.
85454	Boonton Molding Company	Boonton, N.J.	91961	Nahm-Bros. Spring Co.	Oakland, Cal.	96256	Thordarson-Meissner Inc.	Mt. Carmel, Ill.
85471	A. B. Boyd Co.	San Francisco, Cal.	92180	Tru-Connector Corp.	Peabody, Mass.	96286	Solar Mig. Co.	Los Angeles, Cal.
85474	R. M. Bracamonte & Co.	San Francisco, Cal.	92367	Elgeet Optical Co., Inc.	Rochester, N.Y.	96396	Microswitch, Div. of	
85660	Koiled Kords, Inc.	Hamden, Conn.	92607	Tensolite Insulated Wire Co., Inc.	Tarrytown, N.Y.		Minn.-Honeywell	Freeport, Ill.
85911	Seamless Rubber Co.	Chicago, Ill.	92702	IMC Magnetics Corp.	Westbury, L.I., N.Y.	96330	Carlton Screw Co.	Chicago, Ill.
86174	Fafnir Bearing Co.	Los Angeles, Calif.	92966	Hudson Lamp Co.	Kearney, N.J.	96341	Microwave Associates, Inc.	Burlington, Mass.
86197	Clifton Precision Products Co., Inc.	Clifton Heights, Pa.	93332	Sylvania Electric Prod. Inc.	Woburn, Mass.	96501	Excel Transformer Co.	Oakland, Cal.
86579	Precision Rubber Products Corp.	Dayton, Ohio	93369	Robbins & Myers Inc.	Pallisades Park, N.J.	96508	Xcelite, Inc.	Orchard Park, N.Y.
86684	Radio Corp. of America, Electronic Comp. & Devices Division	Harrison, N.J.	93410	Stemco Controls, Div. of Essex	Mansfield, Ohio	96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
86928	Seastrom Mfg. Co.	Glendale, Cal.	93632	Waters Mfg. Co.	Culver City, Cal.	96881	Thomson Ind. Inc.	Long Island, N.Y.
87034	Marco Industries	Anaheim, Cal.	93929	G. V. Controls	Livingston, N.J.	97464	Industrial Retaining Ring Co.	Irvine, N.J.
87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	94137	General Cable Corp.	Bayonne, N.J.	97539	Automatic & Precision Mfg.	Englewood, N.J.
87473	Western Fibrous Glass Products Co.	San Francisco, Cal.	94144	Raytheon Co., Comp. Div.	Quincy, Mass.	97979	Reon Resistor Corp.	Yonkers, N.Y.
87664	Van Waters & Rogers Inc.	San Francisco, Cal.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	97983	Litton System Inc., Adler-Westrex Commun. Div.	New Rochelle, N.Y.
87930	Tower Mfg. Corp.	Providence, R.I.	94154	Wagner Elect. Corp.	Newark, N.J.	98141	R-Tronics, Inc.	Jamaica, N.Y.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94197	Curtiss-Wright Corp., Electronics Div.	East Patterson, N.J.	98159	Rubber Teck, Inc.	Gardena, Cal.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94222	South Chester Corp.	Chester, Pa.	98220	Hewlett-Packard Co., Medical Elec. Div.	Pasadena, Cal.
88598	General Mills, Inc.	Buffalo, N.Y.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98278	Microdot, Inc.	So. Pasadena, Cal.
89231	Graybar Electric Co.	Oakland, Cal.	94375	Automatic Metal Products Co.	Brooklyn, N.Y.	98291	Sealectro Corp.	Mamaronech, N.Y.
89473	G. E. Distributing Corp.	Schenectady, N.Y.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	98376	Zero Mfg. Co.	Burbank, Cal.
89479	Security Co.	Detroit, Mich.	94696	Magnecraft Electric Co.	Chicago, Ill.	98410	Etc. Inc.	Cleveland, Ohio
89665	United Transformer Co.	Chicago, Ill.	95023	George A. Philbrick Researchers, Inc.	Boston, Mass.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
90030	United Shoe Machinery Corp.	Beverly, Mass.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	98734	Paeco Division of Hewlett-Packard Co.	Palo Alto, Cal.
90179	U. S. Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N.J.	95236	Allies Products Corp.	Dania, Fla.	98821	North Hills Electronics, Inc.	Glen Cove, N.Y.
90365	Belleville Specialty Tool Mfg., Inc.	Belleville, Ill.	95238	Continental Connector Corp.	Woodside, N.Y.	98978	International Electronic Research Corp.	Burbank, Cal.
90763	United Carr Fastener Corp.	Chicago, Ill.	95263	Leecraft Mfg. Co., Inc.	Long Island, N.Y.	99109	Columbia Technical Corp.	New York, N.Y.
90970	Bearing Engineering Co.	San Francisco, Cal.	95265	National Coil Co., Inc.	Sheridan, Wyo.	99313	Varian Associates	Palo Alto, Cal.
91146	ITT Cannon Elect. Inc., Salem Div.	Salem, Mass.	95275	Vitramon, Inc.	Bridgeport, Conn.	99378	Atlee Corp.	Winchester, Mass.
91260	Connor Spring Mfg. Co.	San Francisco, Cal.	95348	Gordos Corp.	Bloomfield, N.J.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
91345	Miller Dial & Nameplate Co.	El Monte, Cal.	95354	Method Mfg. Co.	Rolling Meadows, Ill.	99707	Control Switch Division, Controls Co. of America	El Segundo, Cal.
91418	Radio Materials Co.	Chicago, Ill.	95566	Arnold Engineering Co.	Marengo, Ill.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
91506	Augat Inc.	Attleboro, Mass.	95712	Dage Electric Co., Inc.	Franklin, Ind.	99848	Wilco Corporation	Indianapolis, Ind.
91637	Dale Electronics, Inc.	Willow Grove, Pa.	95984	Siemon Mfg. Co.	Wayne, Ill.	99928	Branson Corp.	Whippany, N.J.
91662	Elco Corp.	New York, N.Y.	95987	Weckesser Co.	Chicago, Ill.	99934	Rembrandt, Inc.	Boston, Mass.
91673	Epiphone Inc.	Wakefield, Mass.	96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.	99942	Hoffman Electronics Corp., Semiconductor Division	El Monte, Cal.
91737	Gremar Mfg. Co., Inc.	Redwood City, Cal.				99957	Technology-Instrument Corp. of California	Newbury Park, Cal.
91827	K F Development Co.	Chicago, Ill.						
91886	Malco Mfg., Inc.	Chicago, Ill.						

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado Springs Div.	Colorado Springs, Colorado	000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N.J.	000MM	Rubber Eng. & Development	Hayward, Cal.	000WW	California Eastern Lab.	Burlington, Cal.
000AB	ETA	England	000NN	A "N" D Mfg. Co.	San Jose, Cal.	000YY	S. K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.						

SUPPLEMENTAL CODE LIST OF MANUFACTURERS

Code No.	Manufacturer	Address
15636	Elec. Tpl. Inc.	Northridge, California 91325
23880	Stanford Applied Engineering	Spring City, California 95050

ELECTRONIC

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA

P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA

2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
TWX: 910-951-1330

5737 East Broadway
Tucson 85711
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA

1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
TWX: 910-592-1288

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

6305 Arizona Place
Los Angeles 90045
Tel: (213) 649-2511
TWX: 910-328-6148

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2220 Watt Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

9606 Aero Drive
San Diego 92123
Tel: (714) 279-3200
TWX: 910-335-2000

COLORADO

7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT

12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA

P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando, 32809
Tel: (305) 859-2900
TWX: 810-850-0113

GEORGIA

P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

HAWAII

2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455

ILLINOIS

5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA

3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA

P.O. Box 856
3239 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-9157

MASSACHUSETTS

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN

21840 West Nine Mile Road
Southfield 48075
Tel: (313) 353-9100
TWX: 810-224-4882

MINNESOTA

2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI

11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

148 Weldon Parkway
Maryland Heights 63043
Tel: (314) 567-1455
TWX: 910-764-0830

*NEVADA

Las Vegas
Tel: (702) 382-5777

NEW JERSEY

W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

1060 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO

P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 265-3713
TWX: 910-989-1665

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK

6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-441-8270

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

New York City
Manhattan, Bronx
Contact Paramus, NJ Office
Tel: (201) 265-5000
Brooklyn, Queens, Richmond
Contact Woodbury, NY Office
Tel: (516) 921-0300

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
TWX: 510-221-2168

NORTH CAROLINA

P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 510-926-1516

OHIO

25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

3460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

1120 Morse Road
Columbus 43229
Tel: (614) 846-1300

OKLAHOMA

P.O. Box 32008
Oklahoma City 73132
Tel: (405) 721-0200
TWX: 910-833-6862

OREGON

17890 SW Boones Ferry Road
Tualatin 97062
Tel: (503) 620-3350
TWX: 910-467-8714

PENNSYLVANIA

2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

RHODE ISLAND

873 Waterman Ave.
East Providence 02914
Tel: (401) 434-5535
TWX: 710-381-7573

*TENNESSEE

Memphis
Tel: (901) 274-7472

TEXAS

P.O. Box 1270
201 E. Arapahoe Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

P.O. Box 27409
6300 Westpark Drive
Suite 100
Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645

231 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH

2890 South Main Street
Salt Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VIRGINIA

P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 285-3431
TWX: 710-956-0157

WASHINGTON

433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

*WEST VIRGINIA

Charleston
Tel: (304) 768-1232

WISCONSIN

9431 W. Beloit Road
Suite 117
Milwaukee 53227
Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED:

Contact the regional office nearest you: Atlanta, Georgia... North Hollywood, California... Paramus, New Jersey... Skokie, Illinois. Their complete addresses are listed above.
*Service Only

CANADA

ALBERTA

Hewlett-Packard (Canada) Ltd.
11748 Kingsway Ave.
Edmonton
Tel: (403) 452-3670
TWX: 610-831-2431

BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd.
4519 Canada Way
North Burnaby 2
Tel: (604) 433-8213
TWX: 610-922-5059

MANITOBA

Hewlett-Packard (Canada) Ltd.
513 Century St.
Winnipeg
Tel: (204) 786-7581
TWX: 610-671-3531

NOVA SCOTIA

Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 206
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO

Hewlett-Packard (Canada) Ltd.
1785 Woodward Dr.
Ottawa 3
Tel: (613) 255-6180, 255-6530
TWX: 610-562-8968

Hewlett-Packard (Canada) Ltd.
50 Galaxy Blvd.
Rexdale
Tel: (416) 677-9611
TWX: 610-492-4246

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:

Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA

Hewlett-Packard Argentina
S.A.C.e.I.
Lavalle 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0341
Telex: 012-1009
Cable: HEWPACK ARG

BRAZIL

Hewlett-Packard Do Brasil
I.E.C. LTDA.
Rua Frei Caneca 1119
01307-Sao Paulo - 3. SP
Tel: 288-7111, 287-5858
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil
I.E.C. LTDA.
Praça Dom Feliciano 78
Salas 806/808
9000-Porto Alegre RS
Rio Grande do Sul (RS)-Brasil
Tel: 25-8470
Cable: HEWPACK Porto Alegre

Hewlett-Packard Do Brasil
I.E.C. LTDA.
Rua da Matriz 29
2000-Rio de Janeiro, GB
Tel: 266-2643
Cable: HEWPACK Rio de Janeiro

BOLIVIA

Stambuk & Mark (Bolivia) LTDA.
Av. Mariscal, Santa Cruz 1342
La Paz
Tel: 40626, 53163, 52421
Telex: 3560014
Cable: BUKMAR

CHILE

Héctor Calcagni y Cia, Ltda.
Casilla 16.475
Santiago
Tel: 423 96
Cable: CALCAGNI Santiago

COLOMBIA

Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-59
Apartado Aéreo 6287
Bogotá, 1 D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogotá
Tel: 44400INSTCO

COSTA RICA

Lic. Alfredo Gallegos Gurdian
Apartado 10159
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR

Laboratorios de Radio-Ingeniería
Calle Guayaquil 1246
Post Office Box 3199
Quito
Tel: 212-496; 219-185
Cable: HORVATH Quito

EL SALVADOR

Electronic Associates
Apartado Postal 1682
Centro Comercial Gigante
San Salvador, El Salvador C.A.
Paseo Escalón 4649-4° Piso
Tel: 23-44-60, 23-32-37
Cable: ELECAS

GUATEMALA

IPESA
5a via 2-01, Zona 4
Guatemala City
Tel: 63-6-27 & 64-7-86
Telex: 4192 TELTRO GU

MEXICO
Hewlett-Packard Mexicana, S.A.
de C.V.
Adolfo Prieto 622
Col. del Valle
Mexico 12, D.F.
Tel: 543-4232; 523-1874
Telex: 017-54-507

NICARAGUA

Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA

Electrónico Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 230833
Telex: 3481003, Curundu,
Canal Zone
Cable: ELECTRON Panama City

PARAGUAY

Z.J. Melamed S.R.L.
Division: Aparatos y Equipos
Médicos
Salón de Exposición y Escritorio:
Chile 482
Edificio Victoria—Planta Baja
Asunción, Paraguay
Tel: 4-5069, 4-6272
Cable: RAMEL

PERU

Compañía Electro Médica S.A.
Ave. Enrique Canaual 312
San Isidro
Casilla 1030
Lima
Tel: 22-3900
Cable: ELMED Lima

PUERTO RICO

San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3 PTA de Tierra
San Juan 00906
Tel: (809) 725-3342, 722-3342
Cable: SATRONICS San Juan
Tel: SATRON 3450 332

URUGUAY

Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIMU Montevideo

VENEZUELA

Hewlett-Packard De Venezuela
C.A.
Apartado 50933
Caracas
Tel: 71.88.05, 71.88.69, 71.99.30
Cable: HEWPACK Caracas
Telex: 21146 HEWPACK

FOR AREAS NOT LISTED,

CONTACT:
Hewlett-Packard
Inter-Americas
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 493-1501
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

EUROPE

AUSTRIA
Hewlett-Packard Ges.m.b.H.
Handelskai 52/3
P.O. Box 7
A-1205 Vienna
Tel: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BELGIUM
Hewlett-Packard Benelux
S.A./N.V.
Avenue du Col-Vert, 1
B-1170 Brussels
Tel: (02) 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494 paloben bru

DENMARK
Hewlett-Packard A/S
Dalavej 38
DK-3460 Birkerød
Tel: (01) 81 66 40
Cable: HEWPAK AS
Telex: 166 40 hp as

Hewlett-Packard A/S
Torvet 9
DK-8600 Silkeborg
Tel: (06) 82-71-66
Telex: 166 40 hp as
Cable: HEWPAK AS

FINLAND
Hewlett-Packard Oy
Bulevardi 26
P.O. Box 12185
SF-00120 Helsinki 12
Tel: (90) 13730
Cable: HEWPAK OY Helsinki
Telex: 12-15363 hel

FRANCE
Hewlett-Packard France
Quartier de Courtois
Boite Postale No. 6
F-91401 Orsay
Tel: (1) 907 78 25
Cable: HEWPAK Orsay
Telex: 60048

Hewlett-Packard France
4 Quai des Etoiles
F-69321 Lyon Cedex 1
Tel: (78) 42 63 45
Cable: HEWPAK Lyon
Telex: 11617
Hewlett-Packard France
29 rue de la Gare
F-31700 Blagnac
Tel: (61) 85 82 29
Telex: 51957

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernerstrasse 117
Postfach 560 140
D-6000 Frankfurt 56
Tel: (0611) 50 04-1
Cable: HEWPAKSA Frankfurt
Telex: 41 32 49 fra

Hewlett-Packard GmbH
Vertriebsbüro Böblingen
Herrenbergerstrasse 110
D-7030 Böblingen, Württemberg
Tel: (07031) 66 72 87
Cable: HEPAK Böblingen
Telex: 72 65 739 bbn

Hewlett-Packard GmbH
Vertriebsbüro Düsseldorf
Vogelsanger Weg 38
D-4000 Düsseldorf
Tel: (0211) 63 80 31/35
Telex: 85/86 533 hppd d

Hewlett-Packard GmbH
Vertriebsbüro Hamburg
Wendensstr. 23
D-2000 Hamburg 1
Tel: (0411) 24 05 51/52
Cable: HEWPAKSA Hamburg
Telex: 21 63 032 hphh d

Hewlett-Packard GmbH
Vertriebsbüro München
Unterhachinger Strasse 28
ISAR Center
D-8012 Ottobrunn
Tel: (0811) 601 30 61/7
Telex: 52 49 85
Cable: HEWPAKSA München
(West Berlin)

Hewlett-Packard GmbH
Vertriebsbüro Berlin
Wilmsdorfer Strasse 113/114
D-1000 Berlin W. 12
Tel: (0311) 3137046
Telex: 18 34 05 hpbm d

GREECE
Kostas Karayannis
18, Ermou Street
GR-Athens 126
Tel: 3230-303
Cable: RAKAR Athens
Telex: 21 59 62 rkar gr

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
GB-Slough, SL1 4 OS, Bucks
Tel: Slough (0753) 33341
Cable: HEWPIE Slough
Telex: 84413
Hewlett-Packard Ltd.
The Griftons
Stamford New Road
Altrincham, Cheshire, England
Tel: (061) 928-8626
Telex: 668068

ITALY
Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci 2
I-20124 Milan
Tel: (2) 625110 (lines)
Cable: HEWPAKIT Milan
Telex: 32046
Hewlett-Packard Italiana S.p.A.
Piazza Marconi
I-00144 Rome - Eur
Tel: (6) 5912544/5, 5915947
Cable: HEWPAKIT Rome
Telex: 61514

Hewlett-Packard Italiana S.p.A.
Vicolo Pastori, 3
I-35100 Padova
Tel: (49) 66 40 62
Telex: 32046 via Milan

Hewlett-Packard Italiana S.p.A.
Via Colla, 24
I-10129 Turin
Tel: (11) 53 82 64
Telex: 32046 via Milan

LUXEMBURG
Hewlett-Packard Benelux
S.A./N.V.
Avenue du Col-Vert, 1
B-1170 Brussels
Tel: (03/02) 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

NETHERLANDS
Hewlett-Packard Benelux, N.V.
Weerdestein 117
P.O. Box 7825
NL-Amsterdam, Z 11
Tel: (020) 42 77 77
Cable: PALOBEN Amsterdam
Telex: 13 216 hepa nl

NORWAY
Hewlett-Packard Norge A/S
Nesveien 13
Box 149
N-1344 Haslum
Tel: (02) 53 83 60
Telex: 16621 hpnas n

PORTUGAL
Teletra-Empresa Técnica de
Eléctricos S.A.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-Lisbon 1
Tel: (19) 68 60 72
Cable: TELETRA Lisbon
Telex: 1598

SPAIN
Hewlett-Packard Espanola, S.A.
Jerez No 8
E-Madrid 16
Tel: 458 26 00
Telex: 23515 hpe

Hewlett-Packard Espanola, S.A.
Milanésado 21-23
E-Barcelona 17
Tel: (3) 203 62 00
Telex: 52603 hpbe e

SWEDEN
Hewlett-Packard Sverige AB
Enighetsvägen 1-3
Fack
S-161 20 Bromma 20
Tel: (08) 98 12 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

Hewlett-Packard Sverige AB
Hagagatan 9C
S-431 41 Mölndal
P.O. Box 85
CH-1217 Meyrin 2 Geneva
Tel: 21 312 hpmindl s

SWITZERLAND
Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
P.O. Box 64
CH-8952 Schlieren Zurich
Tel: (01) 98 18 21 24
Cable: HPAG CH
Telex: 53933 hpag ch

Hewlett-Packard (Schweiz) AG
9, Chemin Louis-Pictet
CH-1214 Vernier—Geneva
Tel: (022) 41 4950
Cable: HEWPAKSA Geneva
Telex: 27 333 hpsa ch

TURKEY
Telekom Engineering Bureau
Saglik Sok No. 15/1
Ayaspaşa-Beyoglu
P.O. Box 437 Beyoglu
TR-Istanbul
Tel: 49 40 40
Cable: TELEMATON Istanbul

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
GB-Slough, SL1 4 OS, Bucks
Tel: Slough (0753) 33341
Cable: HEWPIE Slough
Telex: 84413

Hewlett-Packard Ltd.
"The Griftons"
Stamford New Road
GB-Altrincham, Cheshire
Tel: (061) 928-8626
Telex: 668068

Hewlett-Packard Ltd.'s registered
address for V.A.T. purposes
only:
70, Finsbury Pavement
London, EC2A1SX
Registered No: 69057

**SOCIALIST COUNTRIES
PLEASE CONTACT:**
Hewlett-Packard Ges.m.b.H.
Handelskai 52/3
P.O. Box 7
A-1205 Vienna
Ph: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

**ALL OTHER EUROPEAN
COUNTRIES CONTACT:**
Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
P.O. Box 85
CH-1217 Meyrin 2 Geneva
Switzerland
Tel: (022) 41 54 00
Cable: HEWPAKSA Geneva
Telex: 2 24 86

AFRICA, ASIA, AUSTRALIA

ANGOLA
Teletra Empresa Técnica
de Equipamentos Eléctricos
SAR
Rua de Barbosa Rodrigues
42-1
Box 6487
Luanda
Cable: TELETRA Luanda

AUSTRALIA
Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20-1371 (6 lines)
Cable: HEWPARO Melbourne
Telex: 31 024

Hewlett-Packard Australia
Pty. Ltd.
Corner Bridge & West Streets
Pymble, New South Wales, 2073
Tel: 449 6566
Cable: HEWPARO Sydney
Telex: 21561

Hewlett-Packard Australia
Pty. Ltd.
97 Churchhill Road
Prospect 5082
South Australia
Tel: 65-2366
Cable: HEWPARO Adelaide

Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, Suite 13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 25-6800
Cable: HEWPARO Perth

Hewlett-Packard Australia
Pty. Ltd.
10 Woolley Street
P.O. Box 191
Dickson A.C.T. 2602
Tel: 49-8194
Cable: HEWPARO Canberra ACT

Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, 49 Gregory Terrace
Brisbane, Queensland, 4000
Tel: 29 1544

CEYLON
United Electricals Ltd.
P.O. Box 681
60, Park St.
Colombo 2
Tel: 26696
Cable: HOTPOINT Colombo

CYPRUS
Kypriotes
19 Gregorios & Xenopoulos Road
P.O. Box 1152
CY-Nicosia
Tel: 45628/29
Cable: KYPRONKS PANDEMIS

ETHIOPIA
African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building 15th Floor
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMITCO Hong Kong

INDIA
Blue Star Ltd.
Kasturi Buildings
Jamshedji Tata Rd.
Bombay 400 020
Tel: 29 50 21
Telex: 3751
Cable: BLUEFROST

Blue Star Ltd.
Band Box House
Prabhavei
Bombay 400 025
Tel: 45 73 01
Telex: 3751
Cable: BLUESTAR

Blue Star Ltd.
14/40 Civil Lines
Kampur 208 001
Tel: 6 88 82
Cable: BLUESTAR

Blue Star, Ltd.
7 Ware Street
P.O. Box 506
Calcutta 700 001
Tel: 23-0131
Telex: 655
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House,
34 Ring Road
Lipat Nagar
New Delhi 110 024
Tel: 62 32 76
Telex: 463
Cable: BLUESTAR

Blue Star, Ltd.
Blue Star House
17/11A Maragath Road
Bangalore 560 025
Tel: 51473
Telex: 430
Cable: BLUESTAR

Blue Star, Ltd.
1-11/7-1
Sarojini Devi Road
Secunderabad 500 003
Tel: 7 63 91, 7 73 93
Cable: BLUEFROST
Telex: 459

Blue Star, Ltd.
23/24 Second Line Beach
Madras 600 001
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR

Blue Star, Ltd.
18 Kaiser Bungalow
Dindri Road
Jamshedpur 831 001
Tel: 38 04
Cable: BLUESTAR
Telex: 240

INDONESIA
Bah Bolton Trading Coy. N.V.
Dialah Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

IRAN
Multicorp International Ltd.
Avenue Soraya 130
P.O. Box 1212
IR-Teheran
Tel: 83 10 35-39
Cable: MULTICORP Tehran
Telex: 2893 MCI TN

ISRAEL
Electronics & Engineering
Div. of Motorola Israel Ltd.
17 Aminadav Street
Tel-Aviv
Tel: 36941 (3 lines)
Cable: BASTEL Tel-Aviv
Telex: 33569

JAPAN
Hewlett-Packard-Hewlett-Packard Ltd.
Ohashi Building
1-59-1 Yoyogi
Shibuya-ku, Tokyo
Tel: 03-370-2281/92
Telex: 232-2024HP
Cable: YNPMARKET TOK 23-724

Yokogawa-Hewlett-Packard Ltd.
Nisei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: (0726) 23-1641
Telex: 5332-385 YHP OSAKA

Yokogawa-Hewlett-Packard Ltd.
Nakamo Building
No. 24 Kamisazima-cho
Nakamura-ku, Nagoya City
Tel: (052) 571-5171

Yokogawa-Hewlett-Packard Ltd.
Nitto Bldg.
2-4-2 Shinohara-Kita
Kohoku-ku
Yokohama 222
Tel: 045-432-1504
Telex: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.
Rm. 603 3,
2-Chome
IZUMI-CHO,
Mito, 310
Tel: 0292-25-7470

KENYA
Kenya Kinetics
P.O. Box 18311
Nairobi, Kenya
Tel: 57726
Cable: PROTON

KOREA
Amtraco Corporation
Industrial Products Div.
Seoul P.O. Box 1103
8th floor, Daekyung Bldg.
107 Sejong Ro
Chongro-Ku, Seoul
Tel: 73-8924-7
Cable: AMTRACO Seoul

LEBANON
Constantin E. Macridis
P.O. Box 7213
RL-Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA
MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, Selangor
Cable: MECOMB Kuala Lumpur

MOZAMBIQUE
A. N. Goncalves, LDA.
41 Apt. 14 Av. D. Luis
P.O. Box 107
Lourenço Marques
Tel: 6-203 NEGON MO
Cable: NEGON

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
94-96 Dixon St.
P.O. Box 943
Courtenay Place
Wellington, N.Z.
Tel: 56-559
Telex: 6-203 NEGON MU
Cable: HEWPAK Wellington

Hewlett-Packard (N.Z.) Ltd.
Box 5-162
Pukuranga
Tel: 56-9837
Cable: HEWPAK, Auckland

NIGERIA
Tei (MesaCom Division)
25 Moroni St, Suru-Lere,
P.O. Box 5705
Lagos
Cable: THETEIL LAGOS

PAKISTAN
Mushko & Company, Ltd.
Osman Chambers
Abdullah Haroon Road
Karachi 3
Tel: 511027, 512927
Cable: COOPERATOR Karachi

Mushko & Company, Ltd.
388 Satellite Town
Rawalpindi
Tel: 41924
Cable: FEMUS Rawalpindi

PHILIPPINES
Electromex Inc.
5th Floor, Architects
Center Bldg.
Ayala Ave., Makati, Rizal
C.C.P.O. Box 1028
Makati, Rizal
Tel: 86-18-87, 87-76-77
Cable: ELEMEX Manila

SINGAPORE
Mechanical and Combustion
Engineering Company Ltd.
9, Jalan Kilang
Red Hill Industrial Estate
Singapore, 3
Tel: 642361-3, 632611
Cable: MECOMB Singapore

Hewlett-Packard Far East
Area Office
P.O. Box 87
Alexandra Post Office
Singapore 3
Tel: 633022
Cable: HEWPAK SINGAPORE

SOUTH AFRICA
Hewlett-Packard South Africa
(Pty.) Ltd.
P.O. Box 31716
Braamfontein Transvaal
Minerton
30 De Beer Street
Johannesburg
Tel: 725-2080, 725-2030
Telex: 0226 JH
Cable: HEWPAK Johannesburg

Hewlett-Packard South Africa
(Pty.) Ltd.
Breakast House
Bree Street
Cape Town
Tel: 3-6019, 3-6545
Cable: HEWPAK Cape Town
Telex: 5-0006

Hewlett-Packard South Africa
(Pty.) Ltd.
641 Ridge Road, Durban
P.O. Box 99
Overport, Natal
Tel: 48-6102
Telex: 557954
Cable: HEWPAK

TAIWAN
Hewlett-Packard Taiwan
39 Chung Shiao West Road
Sec. 1
Overseas Insurance
Corp. Bldg. 7th Floor
Taipei
Tel: 389160, 1, 2, 375121,
Ext. 240-249
Telex: TP824 HEWPAK
Cable: HEWPAK Taipei

THAILAND
UNIMESA Co., Ltd.
Chongkoinsee Building
56 Surawongse Road
Bangkok
Tel: 37956, 31300, 31307,
37540
Cable: UNIMESA Bangkok

UGANDA
Uganda Tele-Electric Co., Ltd.
P.O. Box 4449
Kampala
Tel: 57279
Cable: COMCO Kampala

VIETNAM
Peninsular Trading Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20-805, 93398
Cable: PENTRA, SAIGON 242

ZAMBIA
R. J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa
Tel: 73793
Cable: ARJAYTEE, Lusaka

**MEDITERRANEAN AND
MIDDLE EAST COUNTRIES
NOT SHOWN PLEASE
CONTACT:**
Hewlett-Packard
Co-ordination Office for
Mediterranean and Middle
East Operations
Via Marocco, 7
I-00144 Rome-Eur, Italy
Tel: (6) 59 40 29
Cable: HEWPAKIT Rome
Telex: 61514

**OTHER AREAS NOT
LISTED, CONTACT:**
Hewlett-Packard
Export Trade Company
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
(Feb. 71: 453-1501)
TWX: 910-373-1267
Cable: HEWPAK Palo Alto
Telex: 034-8300, 034-8493

OPERATING AND SERVICE MANUAL

BCD MODULE 34721B



HEWLETT  PACKARD

hp-34721B

34721B
BCD MODULE



OPERATING AND SERVICE MANUAL

Manual Part No. 34721-90002
Microfiche Part No. 34721-90052

MODEL 34721B BCD MODULE

Serial Numbers 1326A00101 and Greater

IMPORTANT NOTICE

This loose leaf manual does not normally require a change sheet. All major change information has been integrated into the manual by page revision. In cases where only minor changes are required, a change sheet may be supplied.

If the Serial Number of your instrument is lower than the one on this title page, the manual contains revisions that do not apply to your instrument. Backdating information given in the manual adapts it to earlier instruments.

Where practical, backdating information is integrated into the text, parts list and schematic diagrams. Backdating changes are denoted by a delta sign. An open delta (Δ) or lettered delta (Δ_A) on a given page, refers to the corresponding backdating note on that page. Backdating changes not integrated into the manual are denoted by a numbered delta (Δ_1) which refers to the corresponding change in the Backdating section (Section VIII).

Copyright Hewlett-Packard Company 1973
P.O. Box 301, Loveland, Colorado U. S. A. 80537

TABLE OF CONTENTS

Section		Page	Section		Page
I	GENERAL INFORMATION	1-1	4-16.	State and Qualifier Flip-Flops	4-3
1-1.	Introduction	1-1	4-18.	ROM (Read Only Memory).	4-3
1-3.	Description	1-1	4-20.	Qualifier Multiplexer (See Figure 4-8)	4-3
1-5.	Operation Information	1-1	4-22.	Function and Range Decode Gates (See Figure 4-3)	4-4
1-7.	Accessories Available (See Figure 1-1)	1-1	4-24.	Function, Range, Overrange, and Polarity Flip-Flops (See Figure 4-3)	4-4
1-8.	Instrument and Manual Identification	1-2	4-26.	Data Storage Flip-Flops (See Figure 4-3)	4-4
Section		Page	4-28.	Overload Detect Gates (See Figure 4-3)	4-4
II	INSTALLATION	2-1	Section		Page
2-1.	Introduction	2-1	V	MAINTENANCE	5-1
2-3.	Initial Inspection	2-1	5-1.	Introduction	5-1
2-5.	Installation of the Model 34721B	2-1	5-3.	Operational Check	5-1
2-7.	Connection to the Printer	2-2	Section		Page
2-9.	Repacking for Shipment	2-2	VI	REPLACEABLE PARTS	6-1
Section		Page	6-1.	Introduction	6-1
III	OPERATING INSTRUCTIONS	3-1	6-4.	Ordering Information	6-1
3-1.	Introduction	3-1	6-6.	Non-Listed Parts	6-1
3-3.	Panel Features	3-1	6-8.	Proprietary Parts	6-1
3-5.	Operation of the Model 34721B	3-1	Section		Page
3-6.	Connecting the Digital Recorder	3-1	VII	CIRCUIT DIAGRAMS	7-1
3-8.	Selecting the Desired Mode of Operation	3-1	7-1.	Introduction	7-1
3-10.	Output and Control Signals	3-1	7-3.	Troubleshooting	7-1
Section		Page	7-5.	Timing Diagram	7-1
IV	THEORY OF OPERATION	4-1	7-7.	Schematic Diagram	7-1
4-1.	Introduction	4-1	7-9.	Component Location Diagram	7-1
4-4.	Basic Block Diagram (See Figure 4-1)	4-1	APPENDICES		
4-6.	Algorithmic State Machine	4-1	A.	CODE LIST OF MANUFACTURERS	
4-8.	34721B ASM Block Diagram	4-1	B.	SALES AND SERVICE OFFICES	
4-10.	Logic Flow Diagram	4-2			
4-12.	Sample Control Circuits (See Figure 4-5)	4-2			
4-14.	Sample Rate Generator (See Figure 4-3)	4-2			

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
1-1. Accessories Available	1-1	4-5. Sample Control Circuits	4-4
1-2. Instrument Serial Number	1-2	4-6. Octal Code	4-4
2-1. Installation of the Model 34721B	2-1	4-7. State Change Sequence	4-4
2-2. Routing of the Ribbon Cable	2-2	4-8. ROM and Qualifiers	4-4
2-3. Output and Control Signal Connector	2-2	5-1. 34721B/5055A Output Codes	5-2
3-1. Front and Rear Panel Features	3-2	7-1. Preliminary Troubleshooting Flow Diagram	7-3
3-2. Output and Control Signal Connector	3-3	7-2. Timing Diagram	7-5/7-6
4-1. Basic Block Diagram	4-1	7-3. Troubleshooting	7-7/7-8
4-2. Block Diagram of Typical ASM	4-2	7-4. BCD Logic	7-9/7-10
4-3. 34721B ASM Block Diagram	4-2		
4-4. Logic Flow Diagram	4-3		

LIST OF TABLES

Table	Page
1-1. Operating Information	1-2
3-1. 34721B Sampling Output Rate	3-1
5-1. Recommended Test Equipment	5-1
6-1. Replaceable Parts	6-2

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This manual contains installation and operating instructions as well as maintenance information which includes operational checks for the Model 34721B. A schematic diagram, theory of operation, and troubleshooting information are provided for use in maintaining the 34721B BCD Module.

1-3. DESCRIPTION.

1-4. The Model 34721B converts character serial data from the 34740A or 34750A Display Module to parallel character information for output to a printer (-hp-Model 5055A or equivalent is required). It supplies BCD data, polarity, range, and function information. A "print

command" signal which indicates when the data is ready to be printed is also provided.

1-5. OPERATION INFORMATION.

1-6. Table 1-1 lists general information relating to the operating characteristics of the Model 34721B. Operational checks are provided in Section V to verify proper operation of your instrument.

1-7. ACCESSORIES AVAILABLE (See Figure 1-1).

a. 11456A READOUT TEST CARD — Facilitates testing and troubleshooting the Model 34721B BCD Module.

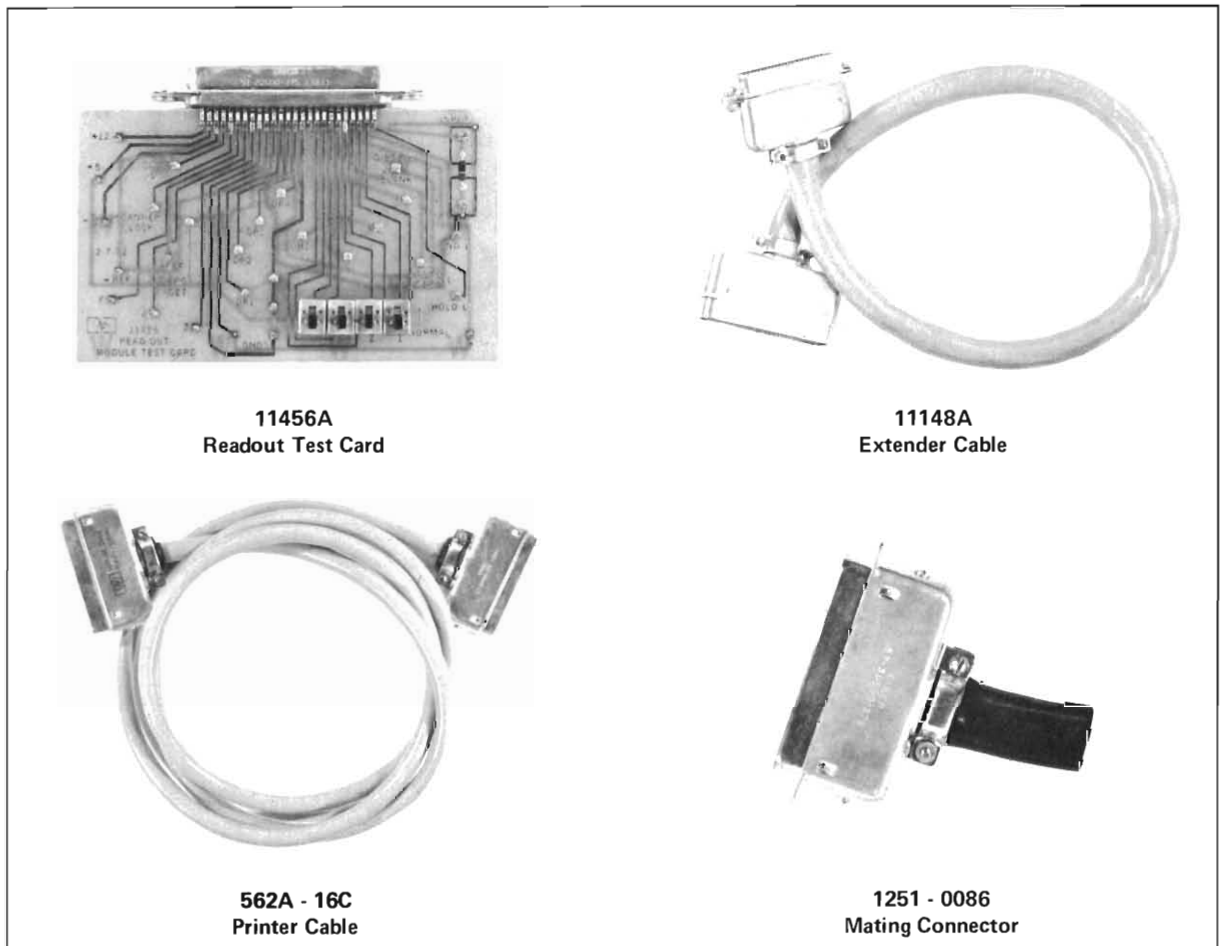


Figure 1-1. Accessories Available.

Table 1-1. Operating Information.

BCD DATA OUTPUTS 5 columns for digital decades 1 column for overrange digit 1 column for range 1 column for function 2 columns for polarity	MAX OUTPUT RATE Internal: 1, 2, 4, 8, and 16 Mainframe Samples/Print Cycle Manual and External: 5/s with 34740A Option 060 8/s with 34740A Option 050
INPUT CONTROL SIGNALS - Front Panel Lockout (+) Printer Holdoff - External Trigger	GENERAL Operating Temperature: 0° C to 50° C Storage Temperature: - 40° C to + 75° C Power: from Display Module  <i>Floating measurements may not be made when using the 34721B BCD Module with a grounded printer or other grounded devices.</i>
OUTPUT CONTROL SIGNAL Print Command	
LOGIC LEVELS "1" state = + 2.4 V to + 5 V "0" state = 0 V to + 0.5 V High reference: 5 V ± .25 V (1 kΩ impedance) Low reference: 0 V (ground)	

b. 562A-16C PRINTER CABLE – Connects the output of the Model 34721B to a Model 5055A Digital Recorder.

c. 11148A EXTENDER CABLE – Permits operation of the Model 34721B while separated from the display module or plug-on during troubleshooting.

d. MATING CONNECTOR - Connects to 50 pin connector on rear panel. -hp- Part No. 1251 - 0086. Manufactured by CINCH MANUFACTURING CO., Part No. 57 - 30500 - 375.

1-8. INSTRUMENT AND MANUAL IDENTIFICATION.

1-9. A three-section serial number (xxxx A xxxxx) is used to identify your Model 34721B. Figure 1-2 illustrates the meaning of the three parts of the number.

1-10. This manual is kept up - to - date with revised pages. If the serial number of your instrument is lower than the one on the title page of this manual, refer to the backdating information in Section 8 which adapts this manual to your instrument. All correspondence with Hewlett-Packard Company should include the complete serial number.

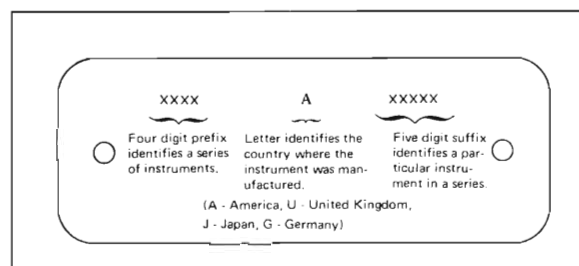


Figure 1-2. Instrument Serial Number.

SECTION II INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains installation and shipping information for the Model 34721B BCD Module.

2-3. INITIAL INSPECTION.

2-4. Your instrument was carefully inspected prior to shipment and should meet all electrical specifications and be free of marks or scratches. To confirm this, the instrument should be inspected upon receipt for damage that might have occurred in transit. If there is damage due to shipping, file a claim with the carrier. If there are other electrical or mechanical deficiencies refer to the Statement of Warranty on the back of the title page. Use the procedures provided in Section V to check instrument performance.

2-5. INSTALLATION OF THE MODEL 34721B.



Installation or removal of plug-on modules is to be made by qualified personnel only.

2-6. Referring to Figure 2-1, install the Model 34721B between the Display Module and the bottom module using the following procedure:

- a. Separate the Display Module from the bottom module if they are connected together. This is done by pulling the two side locks on the back of the Display Module to the rear and lifting the Display Module from the bottom module.
- b. Position the Display Module over the Model 34721B so that the plastic keys on the sides of the two modules interlock.
- c. Push the side locks toward the Display Module. This fastens the two modules together.

NOTE

Press downward on the 34721B connector assembly located in the center of the 34721B. This ensures that the 50 pin connector on the 34721B is properly mated to the Display Module connector.

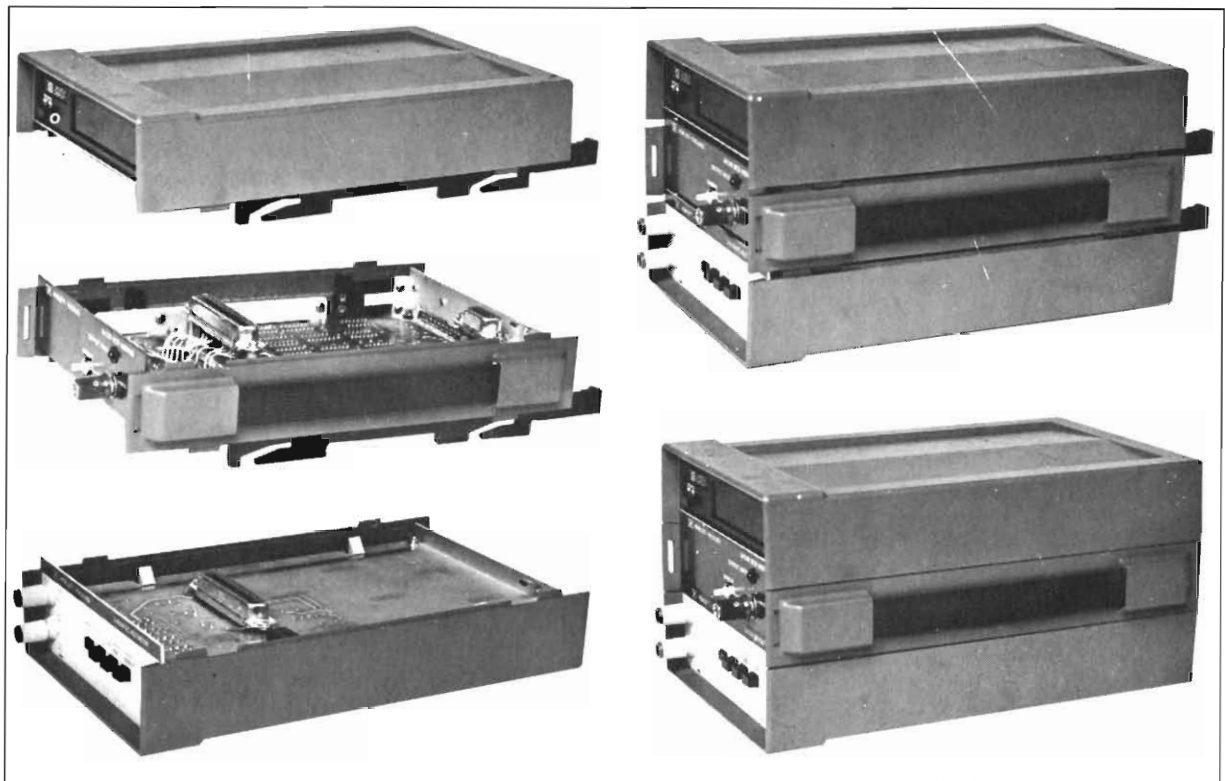


Figure 2-1. Installation of the Model 34721B.

d. Connect the ribbon cable supplied with the instrument to the appropriate connector of the Model 34721B (see Figure 2-2). Connect the other end of the cable to the 14 pin IC connector on the bottom module. The outer brown wire of the cable should be nearest the case of the instrument.



The cable should be looped at the end, not twisted, to align the plug and jack.

e. Pull the side locks on the Model 34721B rearward, and connect the bottom module to the 34721B. This can be accomplished in a manner similar to that previously described.

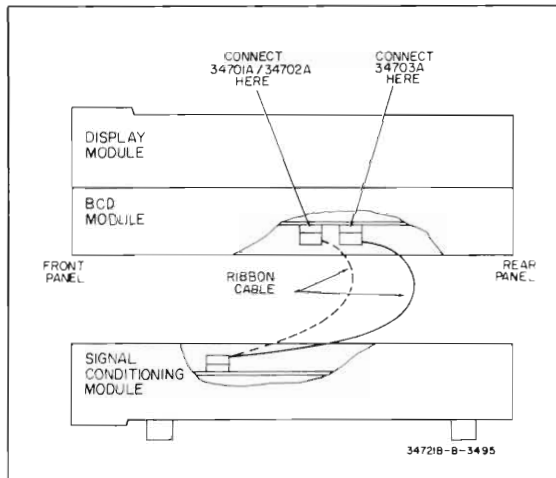


Figure 2-2. Routing of the Ribbon Cable.

2-7. CONNECTION TO THE PRINTER.

2-8. Figure 2-3 shows the rear panel connector and indicates the location of all output and control signals. Connect a 562A - 16C Printer Cable from this connector to the printer connector.

NOTE


See Section III of the Operating and Service Manual for the signal conditioning module to obtain a listing of the printer output codes and their meaning.

2-9. REPACKING FOR SHIPMENT.

2-10. If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument describing the work to be accomplished and identifying the owner of the instrument. Identify the instrument by serial number, model number and name in any correspondence. If you have any questions, contact your local Hewlett-Packard Sales and Service Office.

2-11. If the original shipping container is to be used, place the instrument in the container with appropriate packing material and seal the container well with strong tape or metal bands.

2-12. If an -hp- container is not to be used, use a heavy carton or wooden box with an inner container. Wrap the instrument with heavy paper or plastic and place cardboard strips across the face for protection before placing the instrument in the inner container. Use packing material around all sides of the inner container, and seal the outer container well with strong tape or metal bands. Mark the container with "DELICATE INSTRUMENT", or "FRAGILE".

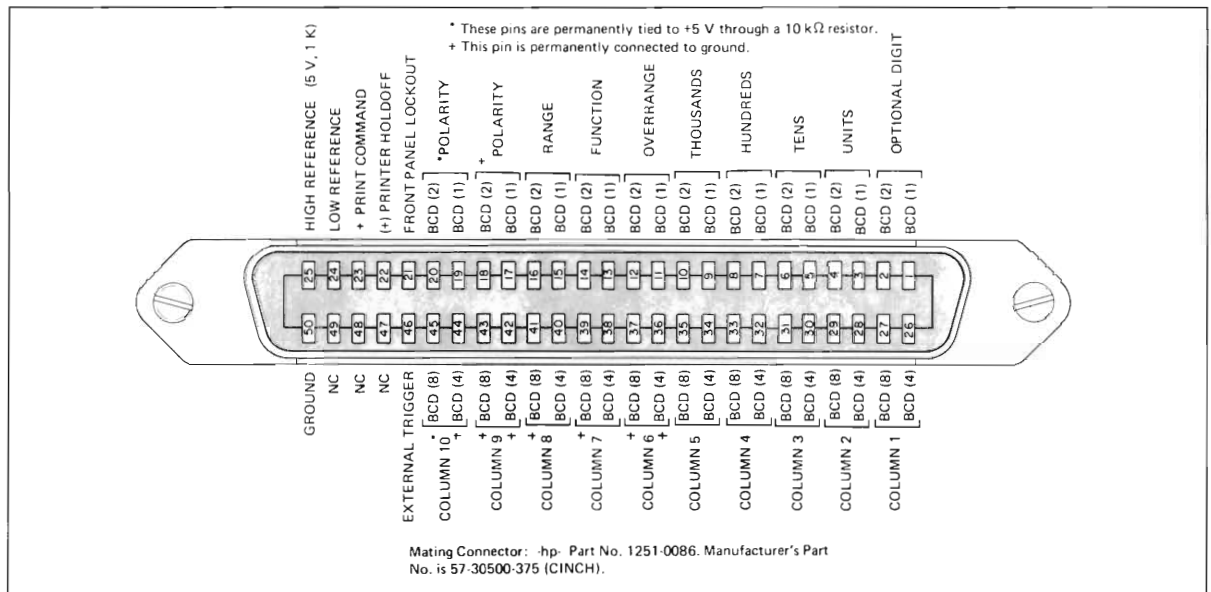

SECTION III OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. This section contains operating instructions for the Model 34721B. A Display Module (Model 34740A or 34750A) and a signal conditioning module such as the -hp- Model 34702A are required to operate the 34721B. This section contains identification of controls, indicators, and connectors, as well as operating instructions.

3-3. PANEL FEATURES.

3-4. Panel features of the instrument are described in Figure 3-1.

NOTE

While operating the Model 34721B, it may be noted that the Display Module indication continues to change while a sample is being taken. This mode of operation is normal since the 34721B does not control the measurement cycle of the Display Module.

3-5. OPERATION OF THE MODEL 34721B.



Do not make floating measurements when using the 34721B BCD Module with a grounded peripheral.

NOTE

When the 34721B is connected to an -hp- Model 34703A DCV/DCA/ Ω Meter, the self test function of the 34703A cannot be used.

3-6. Connecting the Digital Recorder.

3-7. Connect the Digital Recorder (-hp- Model 5055A or

equivalent) to the 50 pin connector at the rear of the 34721B using a 562A - 16C Printer Cable.

3-8. Selecting the Desired Mode of Operation.

3-9. A print command is issued at the conclusion of each 34721B sampling cycle. A sampling cycle can be initiated in any of the following ways:

- a. Internally, using the OUTPUT RATE switch on the front panel;
- b. Externally, by a pulse applied through the rear panel connector;
- c. Manually, by depressing the "MANUAL" push-button.

To prevent undesired triggering caused by the internal OUTPUT RATE generator, the OUTPUT RATE switch should be set on HOLD position. Table 3-1 shows the sampling rate for each setting of the OUTPUT RATE switch using either Option 050 or Option 060 of the Display Module.

3-10. Output and Control Signals.

3-11. Figure 3-2 indicates the requirements for the various control signals which may be applied to the 34721B. The outputs of the BCD Module are also discussed. A Print Command is issued after a trigger has been applied and the Display Module has completed a measurement cycle. The Print Command initiates a print cycle of the printer. The Front Panel Lockout signal disables OUTPUT RATE and MANUAL switches on the 34721B front panel. Under this condition the instrument can be triggered only with an external trigger. The Printer Holdoff signal prevents the 34721B from issuing a print command.

Table 3-1. 34721B Sampling (Output) Rate.

Switch Position	Option 050 Sampling Rate (ms/Sample)	Option 060 Sampling Rate (ms/Sample)
HOLD	In this position the sample is initiated manually or externally.	In this position the sample is initiated manually or externally.
(1)	125	200
(2)	250	400
(3)	500	800
(4)	1000	1600
(5)	2000	3200

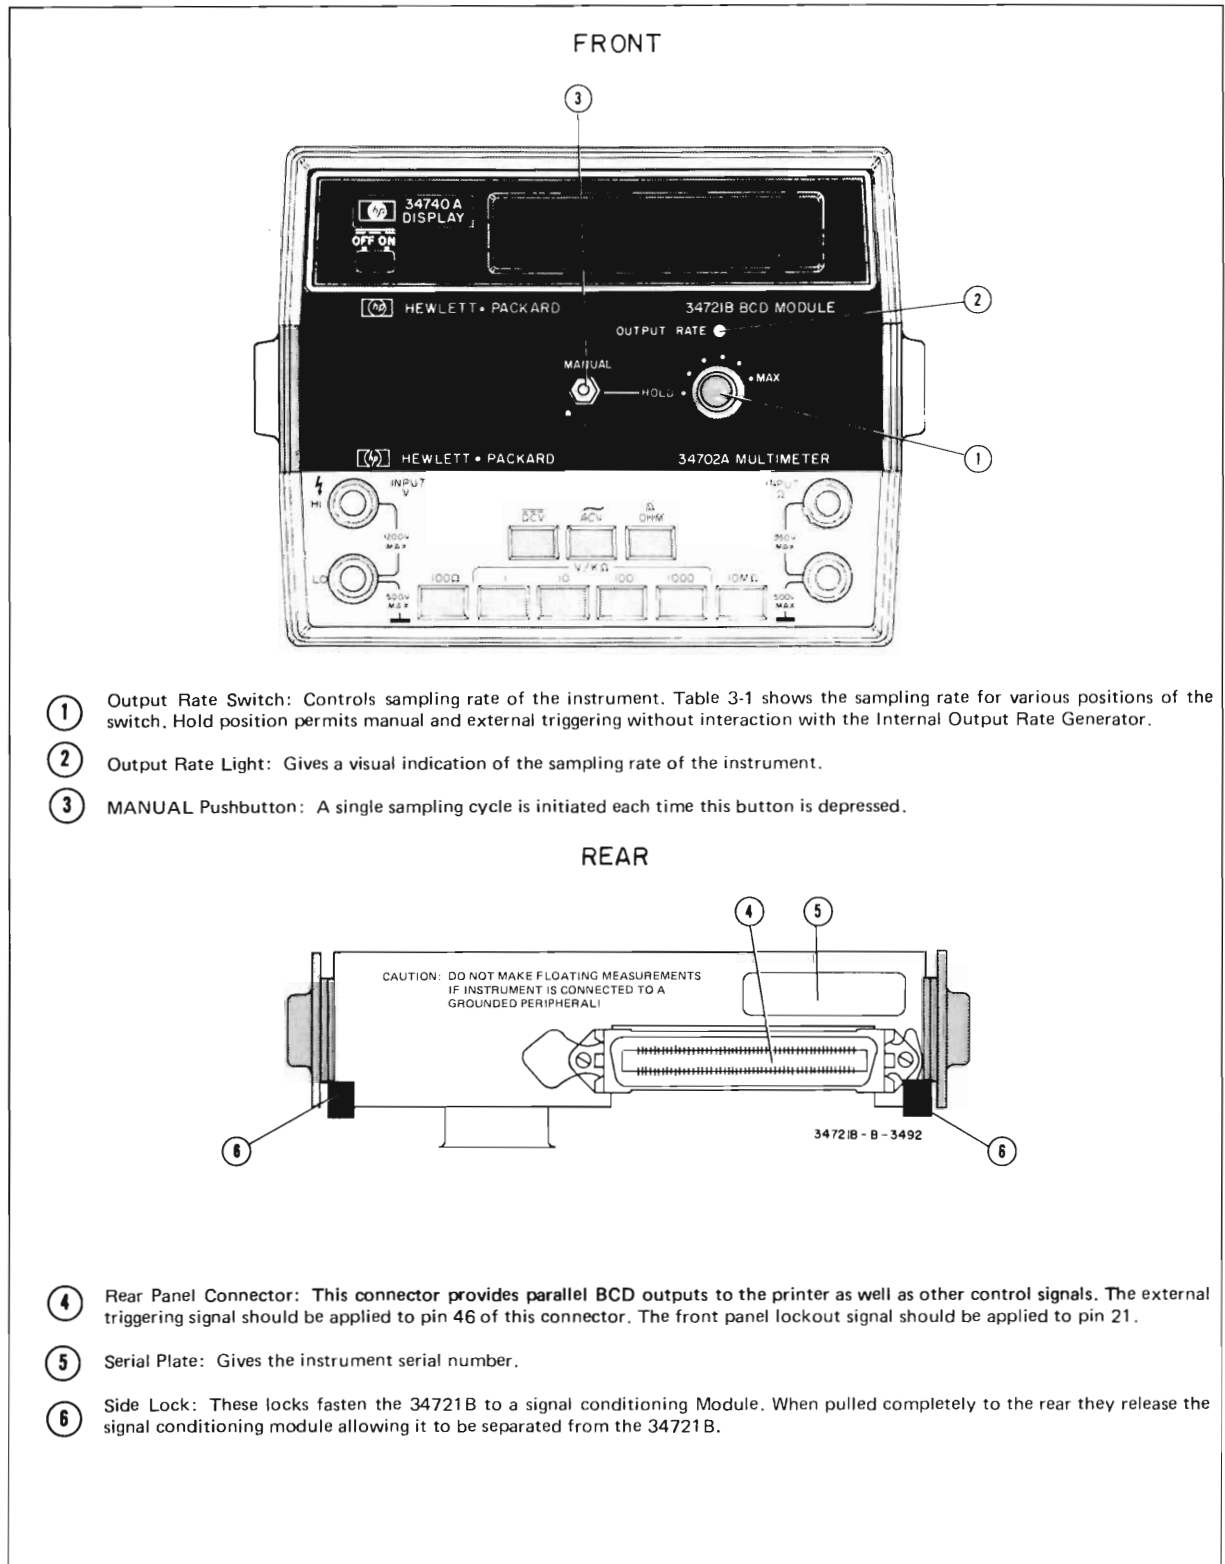


Figure 3-1. Front and Rear Panel Features.

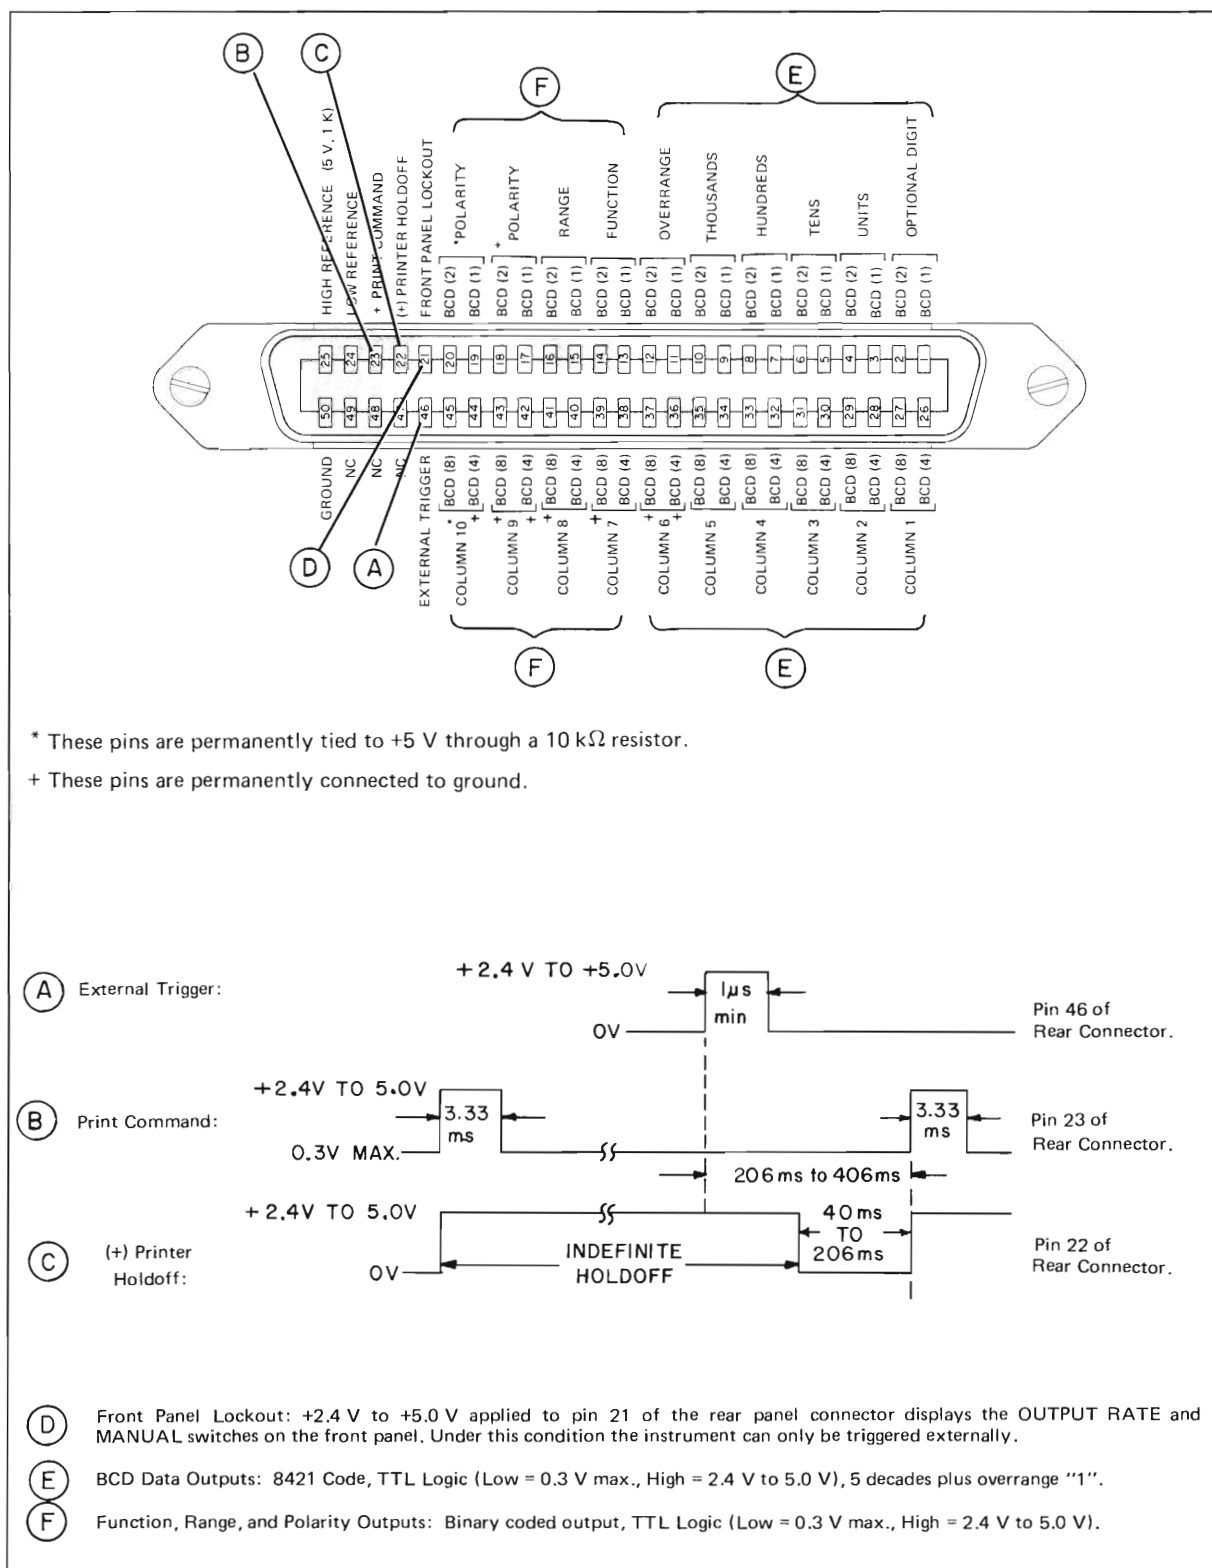


Figure 3-2. Output and Control Signal Connector.

SECTION IV THEORY OF OPERATION

4-1. INTRODUCTION.

4-2. The -hp- Model 34721B provides parallel BCD output to a printer in a 3470 Measurement System. The instrument accepts bit parallel, character serial data from the Display Module and converts it to bit parallel, character parallel data. Four or five digits of BCD data plus sign range, and function data and an overrange "1" are available to the printer (-hp- Model 5055A recommended).

4-3. A basic block diagram is discussed in this section. This is followed by a more detailed diagram and a detailed discussion of each block.

4-4. BASIC BLOCK DIAGRAM (See Figure 4-1).

4-5. The 34721B consists of four basic blocks shown in Figure 4-1. These circuits accept data and timing signals from the Display and signal conditioning modules and provide a parallel BCD output to a printer.

4-6. Algorithmic State Machine.

4-7. The Model 34721B digital logic is an Algorithmic State Machine (ASM). Figure 4-2 is a block diagram of a typical ASM. An ASM is a sequential logic circuit that

can be described completely with a flow chart. The "Next State Function" and "Output Function" blocks are combinational logic networks. A combinational network is a logic network whose output is completely determined by the present input states. Sequential logic circuits contain memory or storage elements such as flip-flops. As the circuits operate the state of the memory changes. The memory elements may have one state at first and later take on another state. The "Next State" that the memory goes to is dependent on the "Present State", the clock, and the external inputs that are supplied to the logic circuit. The output is dependent on the external inputs and the "Present State" of the memory. The "Present State" of the memory is dependent on the past sequence of inputs that have been applied.

4-8. 34721B ASM Block Diagram.

4-9. The block diagram in Figure 4-3 shows the major blocks of the Model 34721B. The inputs to the State Machine come from the Display Module and the signal conditioning module. The output of the State Machine consists of the parallel BCD code and the print command applied to the external printer.

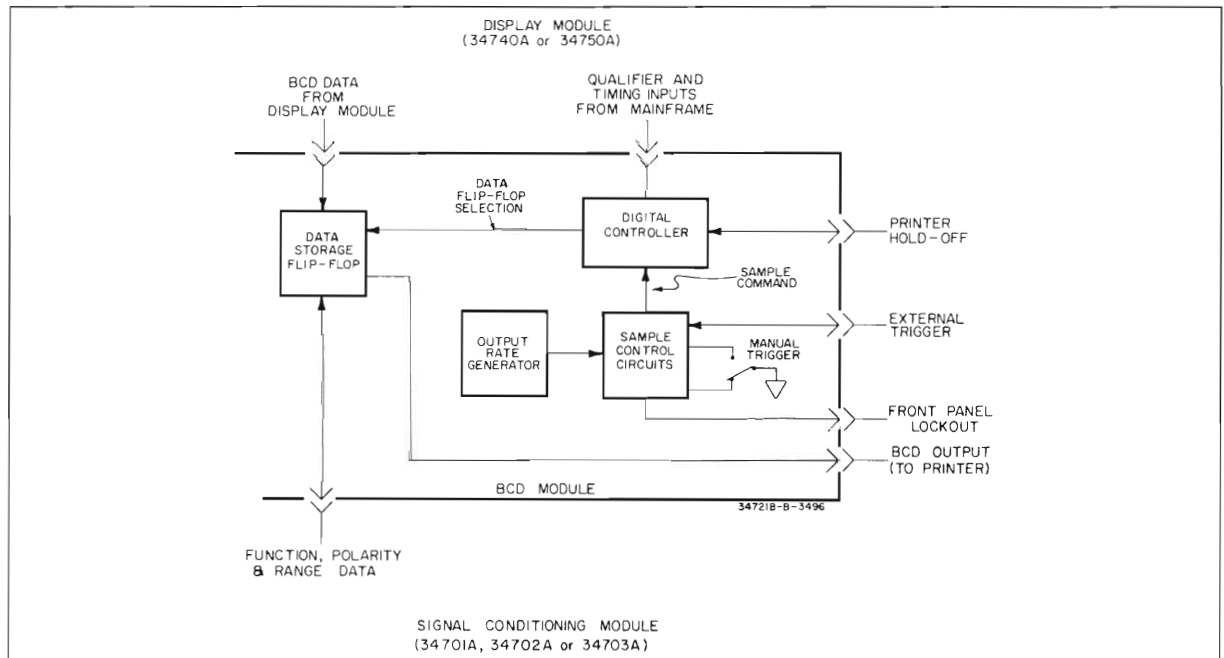


Figure 4-1. Basic Block Diagram.

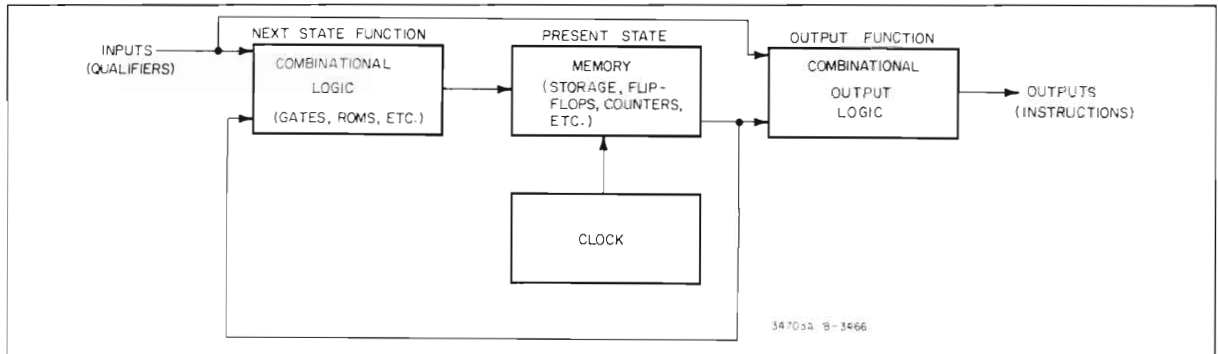


Figure 4-2. Block Diagram of Typical ASM.

4-10. Logic Flow Diagram.

4-11. Figure 4-4 is the Logic Flow Diagram for the Model 34721B. This flow chart indicates the sequence of events that takes place during every print cycle of the instrument.

4-12. SAMPLE CONTROL CIRCUITS (See Figure 4-5).

4-13. The Sample Control Circuits select the triggering mode of the 34721B, and prevent response to false triggers due to contact bounce. A measurement cycle of the instrument can be initiated externally from the external trigger input, manually from a front panel pushbutton, or internally from the output Rate Generator. A "HIGH" (2.4 V to 5.0 V) applied to the Front Panel Lockout disables the manual and internal sampling functions of the instrument. The waveforms in Figure

4-5 show the timing relationships of the circuits. The Trigger Catcher responds to only the first positive transition from the Trigger Selector. The output of the Trigger Catcher, in coincidence with LMATZ and $H \div 10^5$ initiates the Trigger Store Enable Pulse, (5). The negative transition of the pulse clears the Trigger Catcher. The positive transition sets the Trigger Store Flip-Flop, causing HTRG to go high. After a specified interval, depending on the sampling rate of the instrument, a pulse ROM (Read Only Memory) clears the Trigger Store Flip-Flop causing HTRG to go low. This indicates a store/print cycle of the 34721B is in process.

4-14. SAMPLE RATE GENERATOR (See Figure 4-3).

4-15. The Sample Rate Generator provides internally generated trigger pulses. Triggering rates from once per measurement cycle of the mainframe (Display) to once

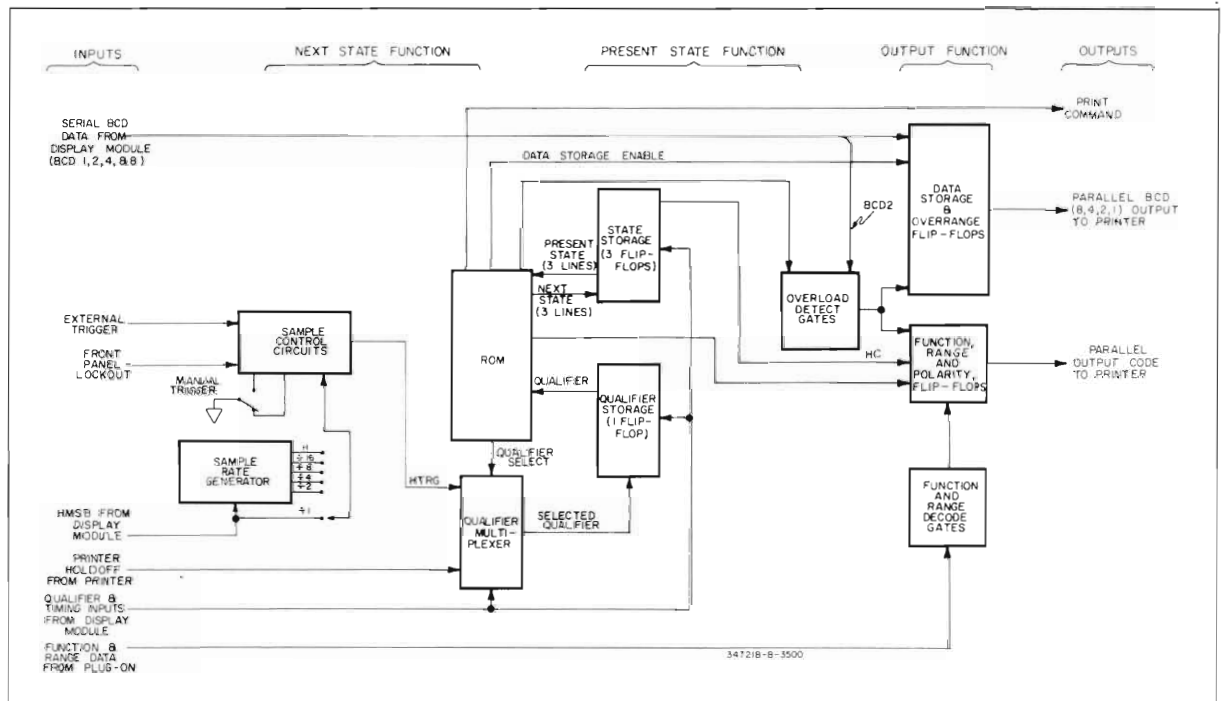


Figure 4-3. 34721B ASM Block Diagram.

every 16 cycles can be obtained. The Sample Rate Generator contains four flip-flops which are connected as a counter to provide the required outputs. Refer to Table 3-1 in Section III for information regarding print rates for the Display Module Options.

4-16. STATE AND QUALIFIER FLIP-FLOPS.

4-17. The output of the three State Flip-Flops is the "Present State" of the ASM. The state of these three lines (A through C) is described in octal code (see Figure 4-6). The "Next State" of the State Flip-Flops is determined by three lines of output from the ROM. The "Next State" output of the ROM is determined by the "Present State" of the State and Qualifier Flip-Flops. The "Next State" of the Qualifier Flip-Flop is determined by the output of the Qualifier Multiplexer (discussed in paragraph 4-20). Changes in state occur with each clock cycle. The time sequence of these changes is shown in Figure 4-7. The "Next State" may be the same as the "Present State" if the inputs to the flip-flops have not changed.

4-18. ROM (READ ONLY MEMORY).

4-19. Figure 4-8 shows the ROM, indicating its inputs and outputs. The ROM is a combinational logic block.

As such, its outputs are defined by its inputs. There are eight inputs to the ROM, three from the State Flip-Flops, one from the Qualifier Flip-Flop, and four from the scanner in the Display Module. Three outputs from the ROM are applied to the inputs of the State Flip-Flops. These outputs, as modified by the input from the Qualifier Flip-Flop determine the "Next State" of the instrument. The state of the Qualifier Flip-Flop is determined by the output of the Qualifier Multiplexer. Six lines of the ROM output provide a clock signal for twenty-two Data Storage Flip-Flops. Each line clocks four flip-flops except for the last which clocks only the overrange and polarity flip-flops. The clocking sequence is determined by the inputs from the Display Module scanner. The time this sequence occurs is determined by the "Present State" of the instrument.

4-20. QUALIFIER MULTIPLEXER (See Figure 4-8).

4-21. The ROM provides four enable lines to the Qualifier Multiplexer. Depending on the condition of the enable lines, the Qualifier Multiplexer selects one of its four input signals. The selected signal is inverted and applied to the output. The output is the "Next State" input to the Qualifier Flip-Flop.

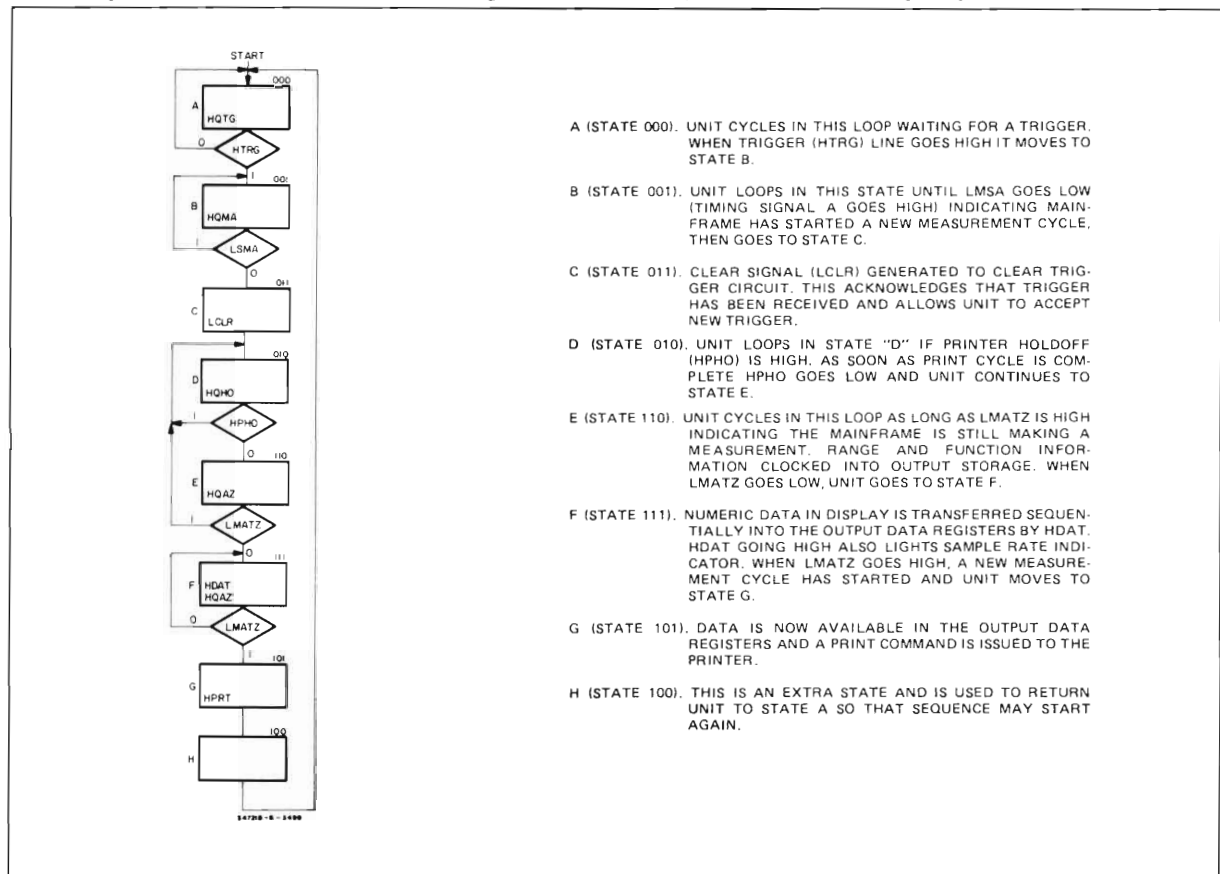


Figure 4-4. Logic Flow Diagram.

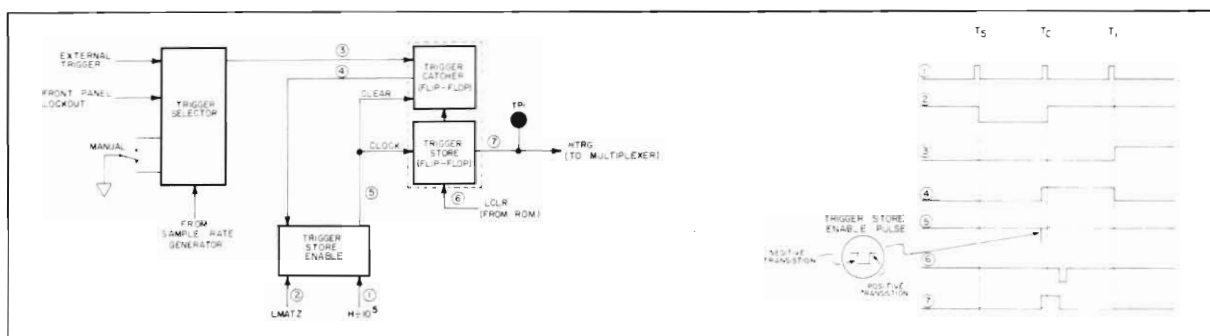


Figure 4-5. Sample Control Circuits.

4-22. FUNCTION AND RANGE DECODE GATES (See Figure 4-3).

4-23. The Function and Range Decode Gates accept function and range information from the signal conditioning module and decode it for storage on the Range and Function Flip-Flops. Six NAND gates are used for this purpose.

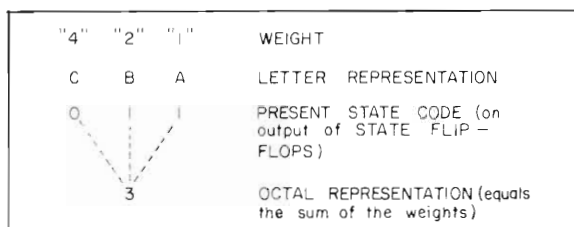


Figure 4-6. Octal Code.

4-24. FUNCTION, RANGE, OVERRANGE, AND POLARITY FLIP-FLOPS (See Figure 4-3).

4-25. The Function and Range Flip-Flops store the data from the Function and Range Decode Gates. This data is then applied through the connector on the rear panel to an external printer. Upon receipt of a "PRINT" command from the ROM the printer prints a decimal number which corresponds to the range and function data it receives. The Polarity and Overrange Flip-Flops receive data from the Display Module. This data is clocked into the flip-flops by a signal from the ROM and is printed simultaneously with the range and function data.

4-26. DATA STORAGE FLIP–FLOPS (See Figure 4-3).

4-27. The Data Storage Flip-Flops store four or five digits of decimal information in parallel BCD form for output to the printer. The fifth digit is useful only with the -hp- Model 34750A Display. It is always "0" when using the 34740A Display. BCD data from the Display Module is applied to the Data Storage Flip-Flops in serial form beginning with the least significant digit. The ROM clocks the flip-flops in a sequence which permits the proper flip-flops to be set by the current serial character from the Display. The data stored on the flip-flops is

then printed simultaneously with the range and function data.

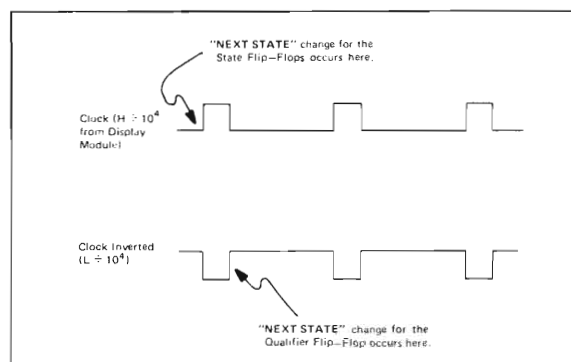


Figure 4-7. State Change Sequence.

4-28. OVERLOAD DETECT GATES (See Figure 4-3).

4-29. The Overload Detect Gates monitor BCD 2 from the Display Module. If BCD 2 is high while the overrange flip-flop is being clocked by the ROM, these gates issue an “overload” signal. This signal presets the Overrange and Data Storage Flip-Flops to 1’s. On the next print cycle, the printer will print “1xxxxx”¹ or “1*****” depending on the setting of the printer “blank” switch.

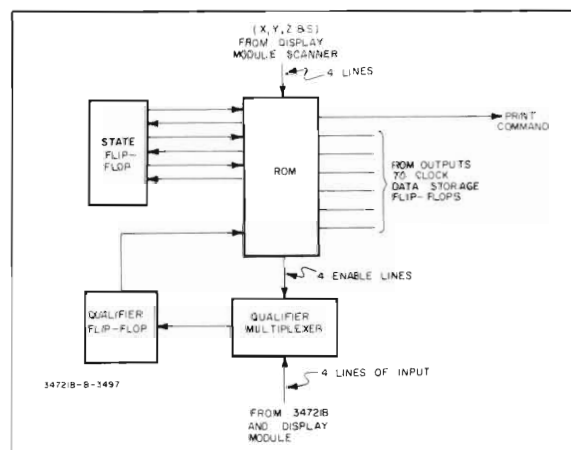


Figure 4-8. ROM and Qualifiers.

SECTION V MAINTENANCE

5-1. INTRODUCTION.

5-2. This section contains information necessary for proper maintenance of the Model 34721B. The 34721B requires no specification checks or adjustments. An operational check for the instrument is provided in this section. Table 5-1 lists the test equipment required for the check.

NOTE

While operating the Model 34721B it may be noted that the Display Module indication continues to change while a sample is being taken. This mode of operation is normal since the 34721B has no control over measurement cycle of the Display Module.

5-3. OPERATIONAL CHECK.



Do not make floating measurements when using the 34721B BCD Module with a grounded peripheral.

a. Install the 34721B between the Display Module and a signal conditioning module such as the Model 34702A (see Paragraph 2-5). Connect the 562A-16C cable between the 5055A Printer and the 50 pin output connector on the rear panel of the 34721B.

b. Set the OUTPUT RATE control to HOLD. Connect a dc standard to the signal conditioning module input and set the voltage to 1.7777 V as indicated on the Display Module (1.7777 V for 34750A Display).

NOTE

Some instability in the last two digits may be noted due to the dc standard. It is only necessary to ensure that a 7 is printed at least once in these digits.

c. Depress the MANUAL pushbutton several times and observe the printed output. Verify that the output is correct by comparing it with the Output Code table provided in Section III of the manual for the signal conditioning module. An example is given in Figure 5-1.

d. Change the voltage from the dc standard so that 1.8888 V appears on the Display Module (1.8888 V for 34750A). Repeat step c.

NOTE

Some instability in the last two digits may be noted due to the dc standard. It is only necessary to ensure that an 8 is printed at least once in these digits.

e. Disconnect the input voltage. Select each function and range on the signal conditioning module and check the printed output as per the example in Figure 5-1. Columns 1 through 6 can be ignored since the circuits which affect these digits were checked in steps c and d.

f. Turn the OUTPUT RATE switch clockwise, checking to see that the print rate of the printer increases at each step of the switch.

g. Disconnect the 34721B from the printer, and select HOLD mode. Connect the minus side of a 5 V source to pin 50 of the rear connector on the 34721B.

h. Momentarily apply +5 V to pin 46 of the rear connector while observing the OUTPUT RATE light on the front panel. It should flash when +5 V is applied.

i. Connect the + side of the 5 V supply used in step h to pin 21 of the rear panel connector. Attempt to trigger the instrument using the manual and OUTPUT RATE controls on the front panel. The OUTPUT RATE light should not flash.


j. If the instrument fails to operate as required in any of the proceeding steps refer to troubleshooting in Section VII.

Table 5-1. Recommended Test Equipment.

Instrument Type	Required Characteristics	Recommended Model
Digital Recorder	Printing Rate: 8 lines/second minimum. Parallel BCD data entry (8421).	-hp- Model 5055A
DC Standard	0 V to +5 V output. Accuracy: $\pm (0.002\% \text{ of setting} + 0.0004\% \text{ of range})$.	-hp- Model 740B
Interconnect cable		-hp- 562A-16C

Table 3-1. 34721B/5055A Output Codes (from 34702A Manual).

Number Printed	Polarity, Overload, Column 9	Range Column 8		Function Column 7	Overrange Column 6	Digits Columns 5 thru 1
		k Ω	Volts			
0	-			DCV	underrange	0
1	+	10000		ACV	overrange	1
2		1000	1000	k Ω		2
3		100	100			3
4		10	10			4
5		1	1			5
6		.1				6
7						7
8						8
9						9

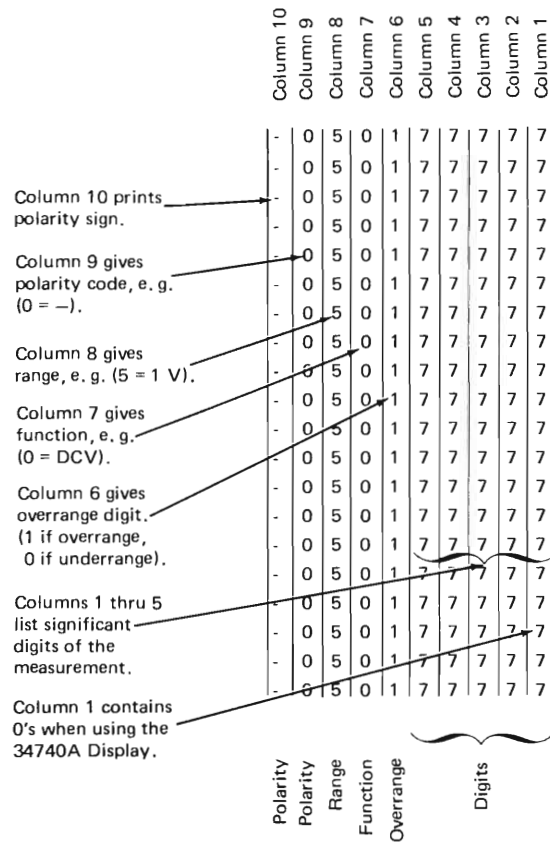

The instrument has ≈ -1.77777 VDC applied. It is set to DC FUNCTION, 1 V RANGE.

Figure 5-1. 34721B/5055A Output Codes.

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphabetic order of their reference designators and indicates the description, -hp- Part Number of each part, together with any applicable notes, and provides the following:

a. Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.

b. Description of the part. (See list of abbreviations below.)

c. Typical manufacturer of the part in a five - digit code. (See Appendix A for list of manufacturers.)

d. Manufacturers part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- Instrument model number.
- Instrument serial number.
- Description of the part.
- Function and location of the part.

6-8. PROPRIETARY PARTS.

6-9. Items marked by a dagger (†) in the reference designator column are available only for repair and service of Hewlett-Packard instruments.

ABBREVIATIONS													
Ag	silver	Hz	hertz (cycle(s) per second)	NPO	negative positive zero (zero temperature coefficient)	sl	slide						
Al	aluminum	ID	inside diameter	ns	nanosecond(s) = 10 ⁻⁹ seconds	SPDT	single-pole double-throw						
A	ampere(s)	imp	impregnated	nsr	not separately replaceable	SPST	single-pole single-throw						
Au	gold	incd	incandescent			Ta	tantalum						
C	capacitor	ins	insulation(led)	Ω	ohm(s)	TC	temperature coefficient						
cer	ceramic	kΩ	kilohm(s) = 10 ³ ohms	obd	order by description	TiO ₂	titanium dioxide						
coef	coefficient	kHz	kilohertz = 10 ³ hertz	OD	outside diameter	tog	toggle						
com	common	L	inductor	P	peak	tol	tolerance						
comp	composition	lin	linear taper	pA	picoampere(s)	trim	trimmer						
conn	connection	log	logarithmic taper	pc	printed circuit	TSTR	transistor						
dep	deposited	mA	milliampere(s) = 10 ⁻³ amperes	pF	picofarad(s) 10 ⁻¹² farads	V	volt(s)						
DPDT	double-pole double-throw	MHz	megahertz = 10 ⁶ hertz	piv	peak inverse voltage	vacw	alternating current working voltage						
DPST	double-pole single-throw	MΩ	megohm(s) = 10 ⁶ ohms	p/o	part of	var	variable						
elect	electrolytic	met flm	metal film	pos	position(s)	wdcw	direct current working voltage						
encap	encapsulated	mfr	manufacturer	pot	potentiometer	W	watt(s)						
F	farad(s)	ms	millisecond	p-p	peak-to-peak	w/	with						
FET	field effect transistor	mtg	mounting	ppm	parts per million	wiv	working inverse voltage						
fxd	fixed	mV	millivolt(s) = 10 ⁻³ volts	prec	precision (temperature coefficient, long term stability and/or tolerance)	w/o	without						
		μF	microfarad(s)			ww	wirewound						
		μs	microsecond(s)	R	resistor								
GaAs	gallium arsenide	μV	microvolt(s) = 10 ⁻⁶ volts	Rh	rhodium	*	optimum value selected at factory.						
GHz	gigahertz = 10 ⁹ hertz	my	Mylar®	rms	root-mean-square	**	average value shown (part may be omitted).						
gd	guard(led)	nA	nanampere(s) = 10 ⁻⁹ amperes	rot	rotary		no standard type number assigned selected or special type						
Ge	germanium	NC	normally closed	Se	selenium								
gnd	ground(led)	Ne	neon	sect	section(s)								
H	henry(ies)	NO	normally open	Si	silicon								
Hg	mercury												
DECIMAL MULTIPLIERS													
Prefix		Symbols		Multiplier		Prefix		Symbols		Multiplier			
		tera		T				centi		c		10 ⁻²	
		giga		G				milli		m		10 ⁻³	
		mega		M or Meg				micro		μ		10 ⁻⁶	
		kilo		K or k				nano		n		10 ⁻⁹	
		hecto		h				pico		p		10 ⁻¹²	
		deka		da				femto		f		10 ⁻¹⁵	
		deci		d				atto		a		10 ⁻¹⁸	
DESIGNATORS													
A	assembly	FL	filter	Q	transistor	TS	terminal strip						
B	motor	HR	heater	QCR	transistor-diode	U	microcircuit						
BT	battery	IC	integrated circuit	R	resistor	V	vacuum tube, neon bulb, photocell, etc.						
C	capacitor	J	jack	RT	thermistor	W	wire						
CR	diode	K	relay	S	switch	X	socket						
DL	delay line	L	inductor	T	transformer	XDS	lampholder						
DS	lamp	M	meter	TB	terminal board	XF	fuseholder						
E	misc electronic part	MP	mechanical part	TC	thermocouple	Y	crystal						
F	fuse	P	plug	TP	test point	Z	network						

STB-D-2734

STD-B-2734

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3	34721-66503	1	CONNECTOR ASSY: 14 PIN	28480	34721-66503
A4	34721-66504	1	PC BOARD ASSY	28480	34721-66504
C1	0150-0093	2	C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
C2	0150-0023	7	C:FXD CER 2000 PF 20% 1000VDCW	56289	20C295A2-CDH
C3	0150-0023		C:FXD CER 2000 PF 20% 1000VDCW	56285	20C295A2-CDH
C4, C5	0150-0023		C:FXD CER 2000 PF 20% 1000VDCW	56289	20C295A2-CDH
C6	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
C7 Δ _a	0140-0204		C:FXD MICA 47 PF 5% 500VDCW	14655	RDM15E470J5C
F1	2110-0046	1	FUSE:CARTRIDGE 1/2 AMP	28480	2110-0046
F1	1251-1636	1	CONNECTOR: SINGLE MALE CONTACT	28480	1251-1636
Q1	1854-0071	1	TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
R1	0684-2221	4	R:FXD COMP 2200 OHM 10% 1/4W	01121	CB 2221
R2	0684-2221		R:FXD COMP 2200 OHM 10% 1/4W	01121	CB 2221
R3	0684-1031	4	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
R4	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
R5	0684-2221		R:FXD COMP 2200 OHM 10% 1/4W	01121	CB 2221
R6	0684-2221		R:FXD COMP 2200 OHM 10% 1/4W	01121	CB 2221
R9	0684-3311	1	R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
R11	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
R12	0684-2231	1	R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
R13	0757-0283	1	R:FXD MET FLM 2.00K OHM 1% 1/8W	28480	0757-0283
R14	0757-0444	1	R:FXD MET FLM 12.1K OHM 1% 1/8W	28480	0757-0444
R15	0757-0442	1	R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
R16	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
R17	1810-0055	2	RESISTIVE NETWORK:8 ALL 10K OHM 5%	28480	1810-0055
R18	1810-0055		RESISTIVE NETWORK:8 ALL 10K OHM 5%	28480	1810-0055
R19	0684-1021	1	R:FXD COMP 1000 OHM 10% 1/4W	01121	CB 1021
U1	1820-0584	1	IC:TTL LP QUAD 2-INPT NOR GATE	12040	DM74LC2N
U2	1820-0583	3	IC:TTL LP QUAD 2-INPT NAND GATE	12040	DM74LCCN
U3	1820-0601	1	IC:TTL, 4-BIT BINARY COUNTER	12040	DM85L53N
U4	1820-0596	17	IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U5	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U6†	1818-2173	1	IC:ROM	28480	1818-2173
U7	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U8	1820-0583		IC:TTL LP QUAD 2-INPT NAND GATE	12040	DM74LCCN
U9	1820-0585	1	IC:TTL LP QUAD 2-INPT NAND GATE	12040	DM74LCCN
U10	1820-0583		IC:TTL LP QUAD 2-INPT NAND GATE	12040	DM74LCCN
U11	1820-0588	3	IC:TTL LP 4-INPT NAND GATE	12040	DM74L20N
U12	1820-0588		IC:TTL LP 4-INPT NAND GATE	12040	DM74L20N
U13	1820-0588		IC:TTL LP 4-INPT NAND GATE	12040	DM74L20N
U14	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U15	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U16	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U17	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U18	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U19	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U21	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U22	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U23	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U24	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U25	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U26	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U27	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
U28	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	12040	DM74L74N
XA1	1251-0087	1	CONNECTOR:FEMALE 50-PIN MINAT	28480	1251-0087
XA2	1200-0424	2	SOCKET:IC BLK 14 CONTACT	23880	CSA29CC-14B
XA3	1200-0424		SOCKET:IC BLK 14 CONTACT	23880	CSA29CC-14B
XA4	1200-0469	1	SOCKET:IC 28 CONTACT DUAL-INLINE TYPE	28480	1200-0469
A5	34721-66505	1	CONNECTOR ASSY:50 PIN	28480	34721-66505
CHASSIS MOUNTED COMPONENTS					
CR1	1990-0419	1	DIODE:LIGHT EMITTER	28480	1990-0419
S1	3100-3253	1	SWITCH:RECTARY	28480	3100-3253
S2	3101-1261	1	SWITCH:PUSHBUTTON MOM SPST 1A 115VAC	09353	PE121
MISCELLANEOUS PARTS					
	0370-1007	1	KNOB:POINTER,OLIVE BLK,FOR 0.125"SHAFT	28480	0370-1007
	05310-20004	2	FRAME:SIDE	28480	05310-20004
	05310-40001	4	GUIDE:SLIDE	28480	05310-40001
	1440-0096	2	HANDLE:STRAP	28480	1440-0096
	34721-00204	1	PANEL:FRONT	28480	34721-00204
	34721-01202	1	BRACKET,PC ASSY:LEFT (FOR A4 ASSY)	28480	34721-01202
	34721-01203	1	BRACKET,PC ASSY:RIGHT (FOR A4 ASSY)	28480	34721-01203

Δ_a Instrument Serial Numbers 1326A00150 & below did not contain C7.

See introduction to this section for ordering information

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
	34721-60206	1	PANEL ASSY: REAR	28480	34721-60206
	5040-6000	1	CATCH: LEFT SIDE	28480	5040-6000
	5040-7001	1	CATCH: RIGHT SIDE	28480	5040-7001
	7122-0058	1	PLATE: SERIAL	28480	7122-0058
	9220-0178	1	BAG: PLASTIC	05006	BF
	8120-1855	1	CABLE: RIBBON	04919	F1002-14-8

See introduction to this section for ordering information

SECTION VII CIRCUIT DIAGRAMS

7-1. INTRODUCTION.

7-2. This section of the Operating and Service Manual contains troubleshooting information and a circuit diagram for the Model 34721B BCD Module. A timing diagram is also included to assist in troubleshooting.

7-3. TROUBLESHOOTING.

7-4. Figure 7-3 is a comprehensive troubleshooting tree for the Model 34721B. Before proceeding to this tree make the following preliminary checks:

a. Ensure the signal conditioning and plug-on modules are functioning properly. Normally, if the Model 34721B passes the operational check given in Paragraph 5-3, the BCD Module is functioning as required. If the Model 34721B appears to be generating incorrect data check the Display and signal conditioning modules for proper operation first.

b. Determine the exact symptoms of failure. This can usually be accomplished by attempting the operational checks in Section V. Figure 7-1 is a brief flow chart which will assist isolation and characterization of the trouble.

c. Check for burned or loose components, or other unusual conditions which might be the source of trouble.

d. Proceed to the troubleshooting tree (Figure 7-3). If the end of the tree is reached without finding the trouble, carefully recheck symptoms to ensure you have interpreted them properly. Using the schematic and timing waveforms in this section of the manual attempt to localize the malfunction.

7-5. TIMING DIAGRAM.

7-6. Figure 7-2 shows the timing relationships between the major signals generated and used by the Model 34721B. Each signal has been assigned a number within a circle, e.g. . This number corresponds to an identical number on the schematic diagram. An illustration of the 34721-66504 printed circuit assembly, showing the physical location of each signal is also provided.


7-7. SCHEMATIC DIAGRAM.

7-8. Figure 7-4 is the schematic diagram of the Model 34721B. This diagram is provided to assist in troubleshooting the instrument.

7-9. COMPONENT LOCATION DIAGRAM.

7-10. A Component Location Diagram of the 34721-66504 printed circuit assembly is provided on the schematic diagram. This diagram shows the location of all components mounted on the assembly. Each component is identified by a reference designator which corresponds to the same component on the schematic diagram.


REFERENCE DESIGNATIONS

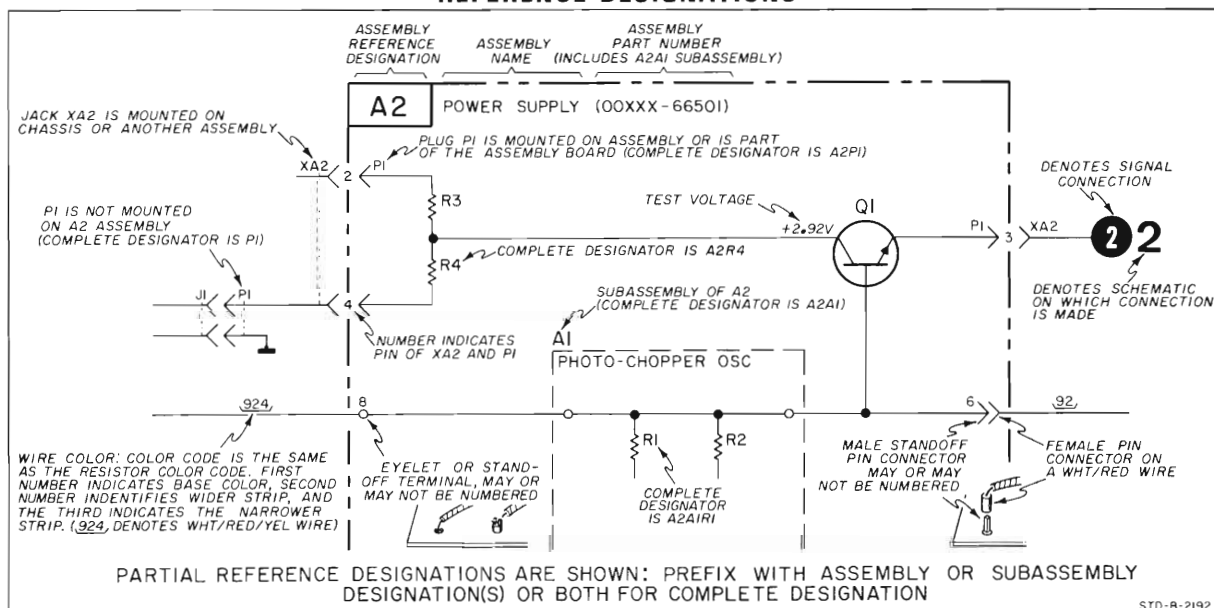

GENERAL SCHEMATIC NOTES

1. PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. PREFIX WITH ASSEMBLY OR SUB-ASSEMBLY DESIGNATION(S) OR BOTH FOR COMPLETE DESIGNATION.
2. COMPONENT VALUES ARE SHOWN AS FOLLOWS UNLESS OTHERWISE NOTED.







RESISTANCE IN OHMS
CAPACITANCE IN MICROFARADS
INDUCTANCE IN MILLIHENRIES

3.  DENOTES EARTH GROUND. USED FOR TERMINALS WITH NO LESS THAN A NO. 18 GAUGE WIRE CONNECTED BETWEEN TERMINAL AND EARTH GROUND TERMINAL OR AC POWER RECEPTACLE.
4.  DENOTES FRAME GROUND. USED FOR TERMINALS WHICH ARE PERMANENTLY CONNECTED WITHIN APPROXIMATELY 0.1 OHM OF EARTH GROUND.
5.  DENOTES GROUND ON PRINTED CIRCUIT ASSEMBLY. (PERMANENTLY CONNECTED TO FRAME GROUND).
6.  ANY LETTER OR NUMBER IN TRIANGLE DENOTES A SPECIAL GROUND.
7.  DENOTES ASSEMBLY.
8.  DENOTES MAIN SIGNAL PATH.
9.  DENOTES FEEDBACK PATH.
10.  DENOTES FRONT PANEL MARKING.
11.  DENOTES REAR PANEL MARKING.
12.  DENOTES SCREWDRIVER ADJUST.
13. * AVERAGE VALUE SHOWN. OPTIMUM VALUE SELECTED AT FACTORY. THE VALUE OF THESE COMPONENTS MAY VARY FROM ONE INSTRUMENT TO ANOTHER.
14.  DENOTES SECOND APPEARANCE OF A CONNECTOR PIN.
15. 92 DENOTES WIRE COLOR: COLOR CODE SAME AS RESISTOR COLOR CODE. FIRST NUMBER IDENTIFIES BASE COLOR, SECOND NUMBER IDENTIFIES STRIPE.

16. ALL RELAYS ARE SHOWN DEENERGIZED.

17. WAVEFORMS AND AC VOLTAGE MEASUREMENTS WERE MADE WITH RESPECT TO CHASSIS GROUND USING AN OSCILLOSCOPE WITH A 10:1 DIVIDER PROBE (10 MEGOHM, 10 pF). THE VOLTAGE LEVELS SHOWN ON THE WAVEFORMS ARE ACTUAL VOLTAGE LEVELS AND ARE NOT TO BE CONFUSED WITH OSCILLOSCOPE SETTING. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER. A VARIATION OF $\pm 10\%$ IN MEASUREMENTS SHOULD BE ALLOWED.

18. DC VOLTAGE LEVELS WERE MEASURED WITH RESPECT TO CIRCUIT GROUND USING A VTVM WITH 10 MEGOHM INPUT IMPEDANCE. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER DUE TO CHANGE IN TRANSISTOR CHARACTERISTICS. A VARIATION OF $\pm 10\%$ SHOULD BE ALLOWED.

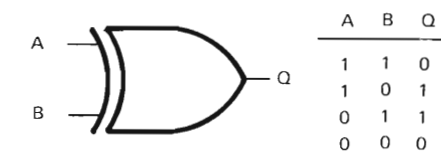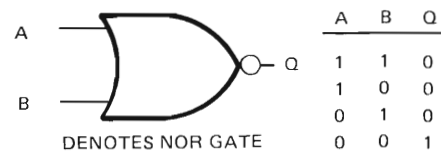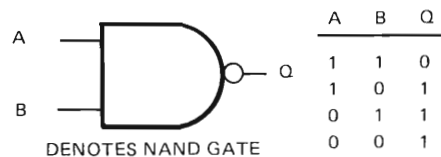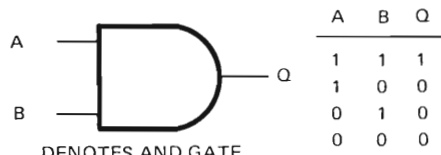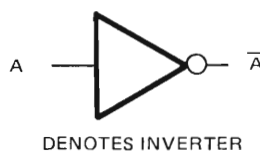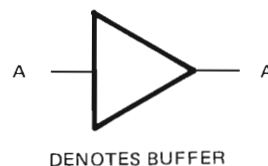



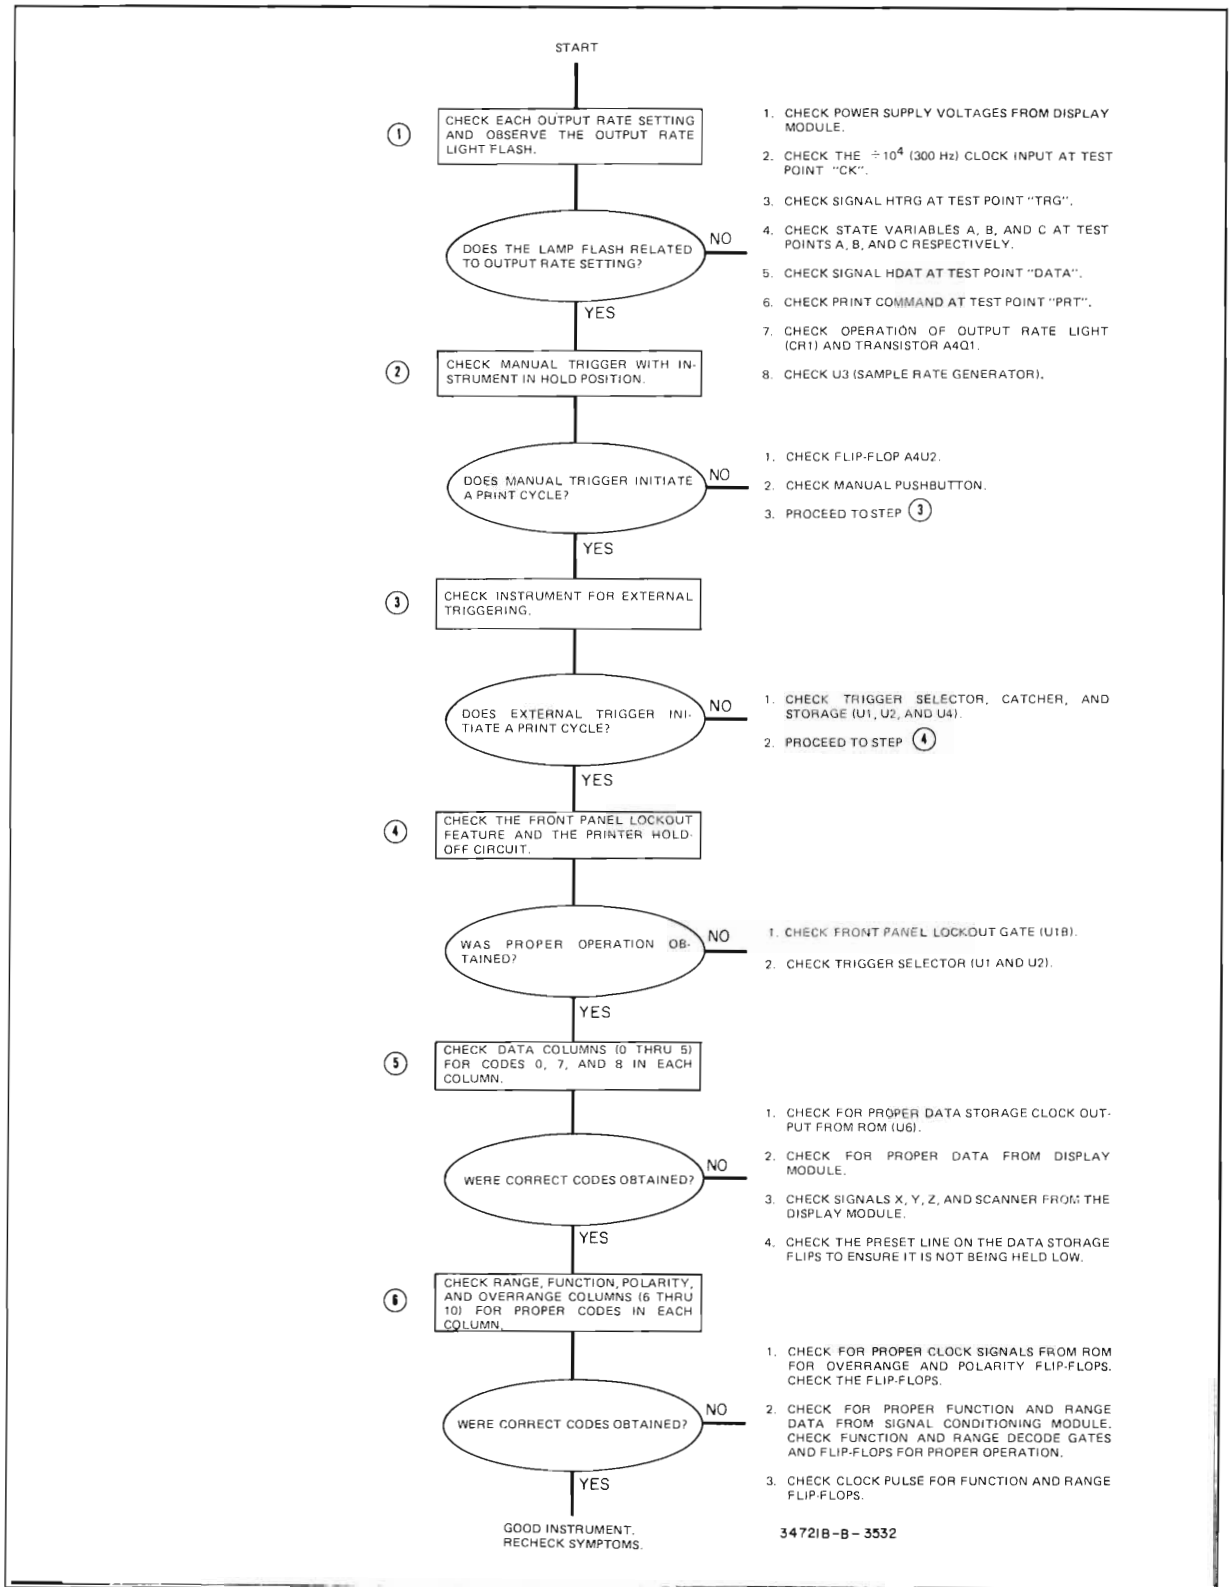


Figure 7-1. Preliminary Troubleshooting Flow Diagram.

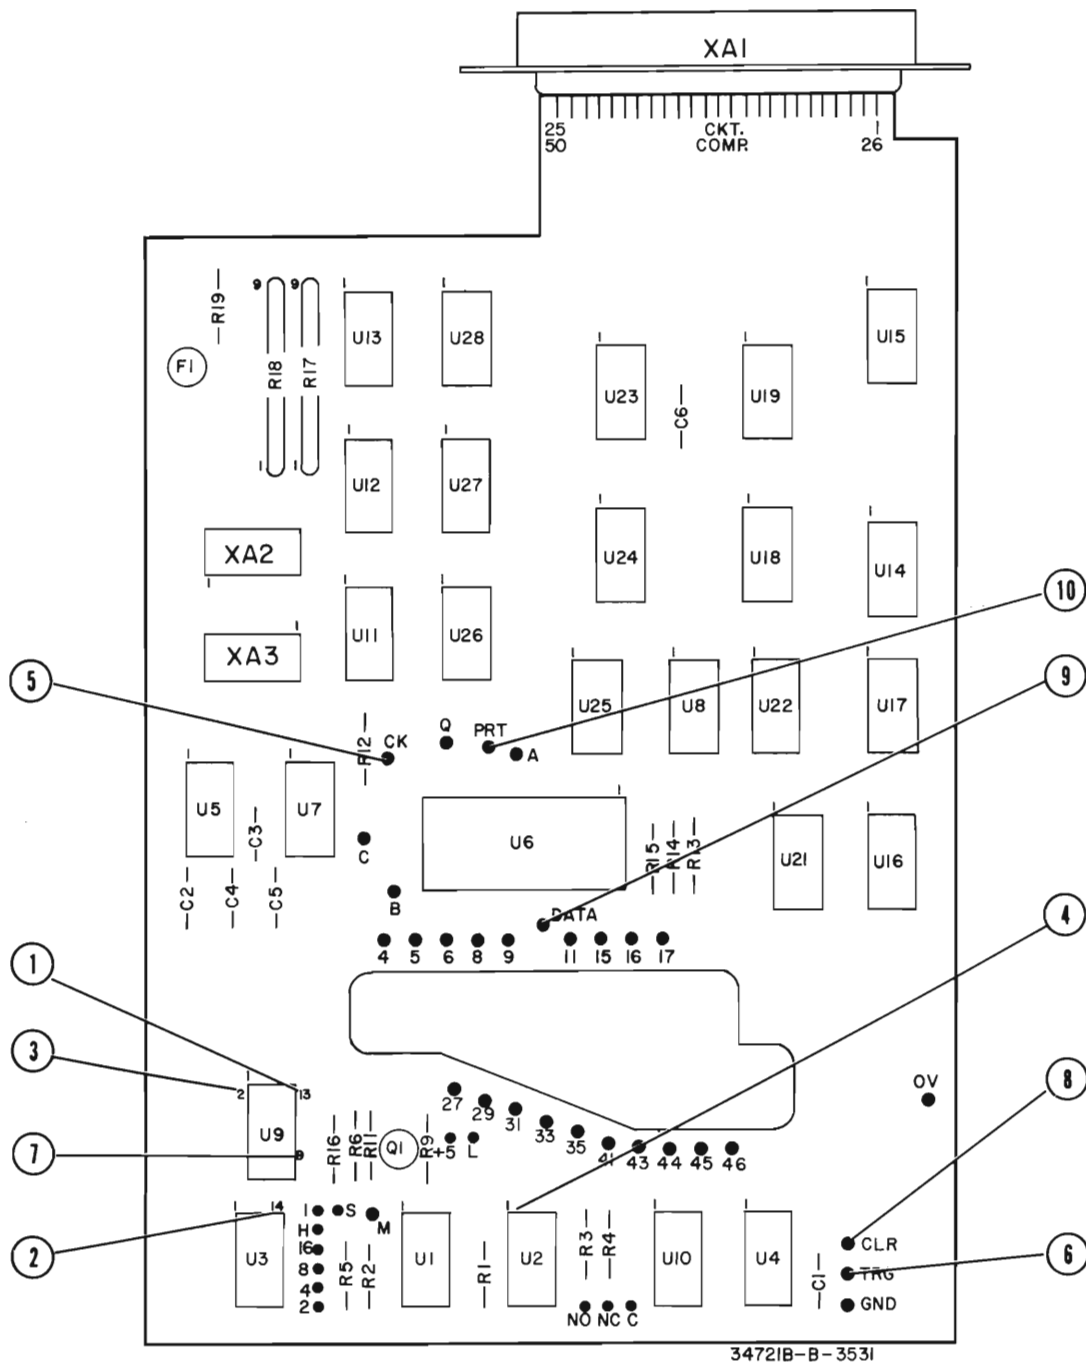


A4

hp Part No. 034721-66504
Rev. A

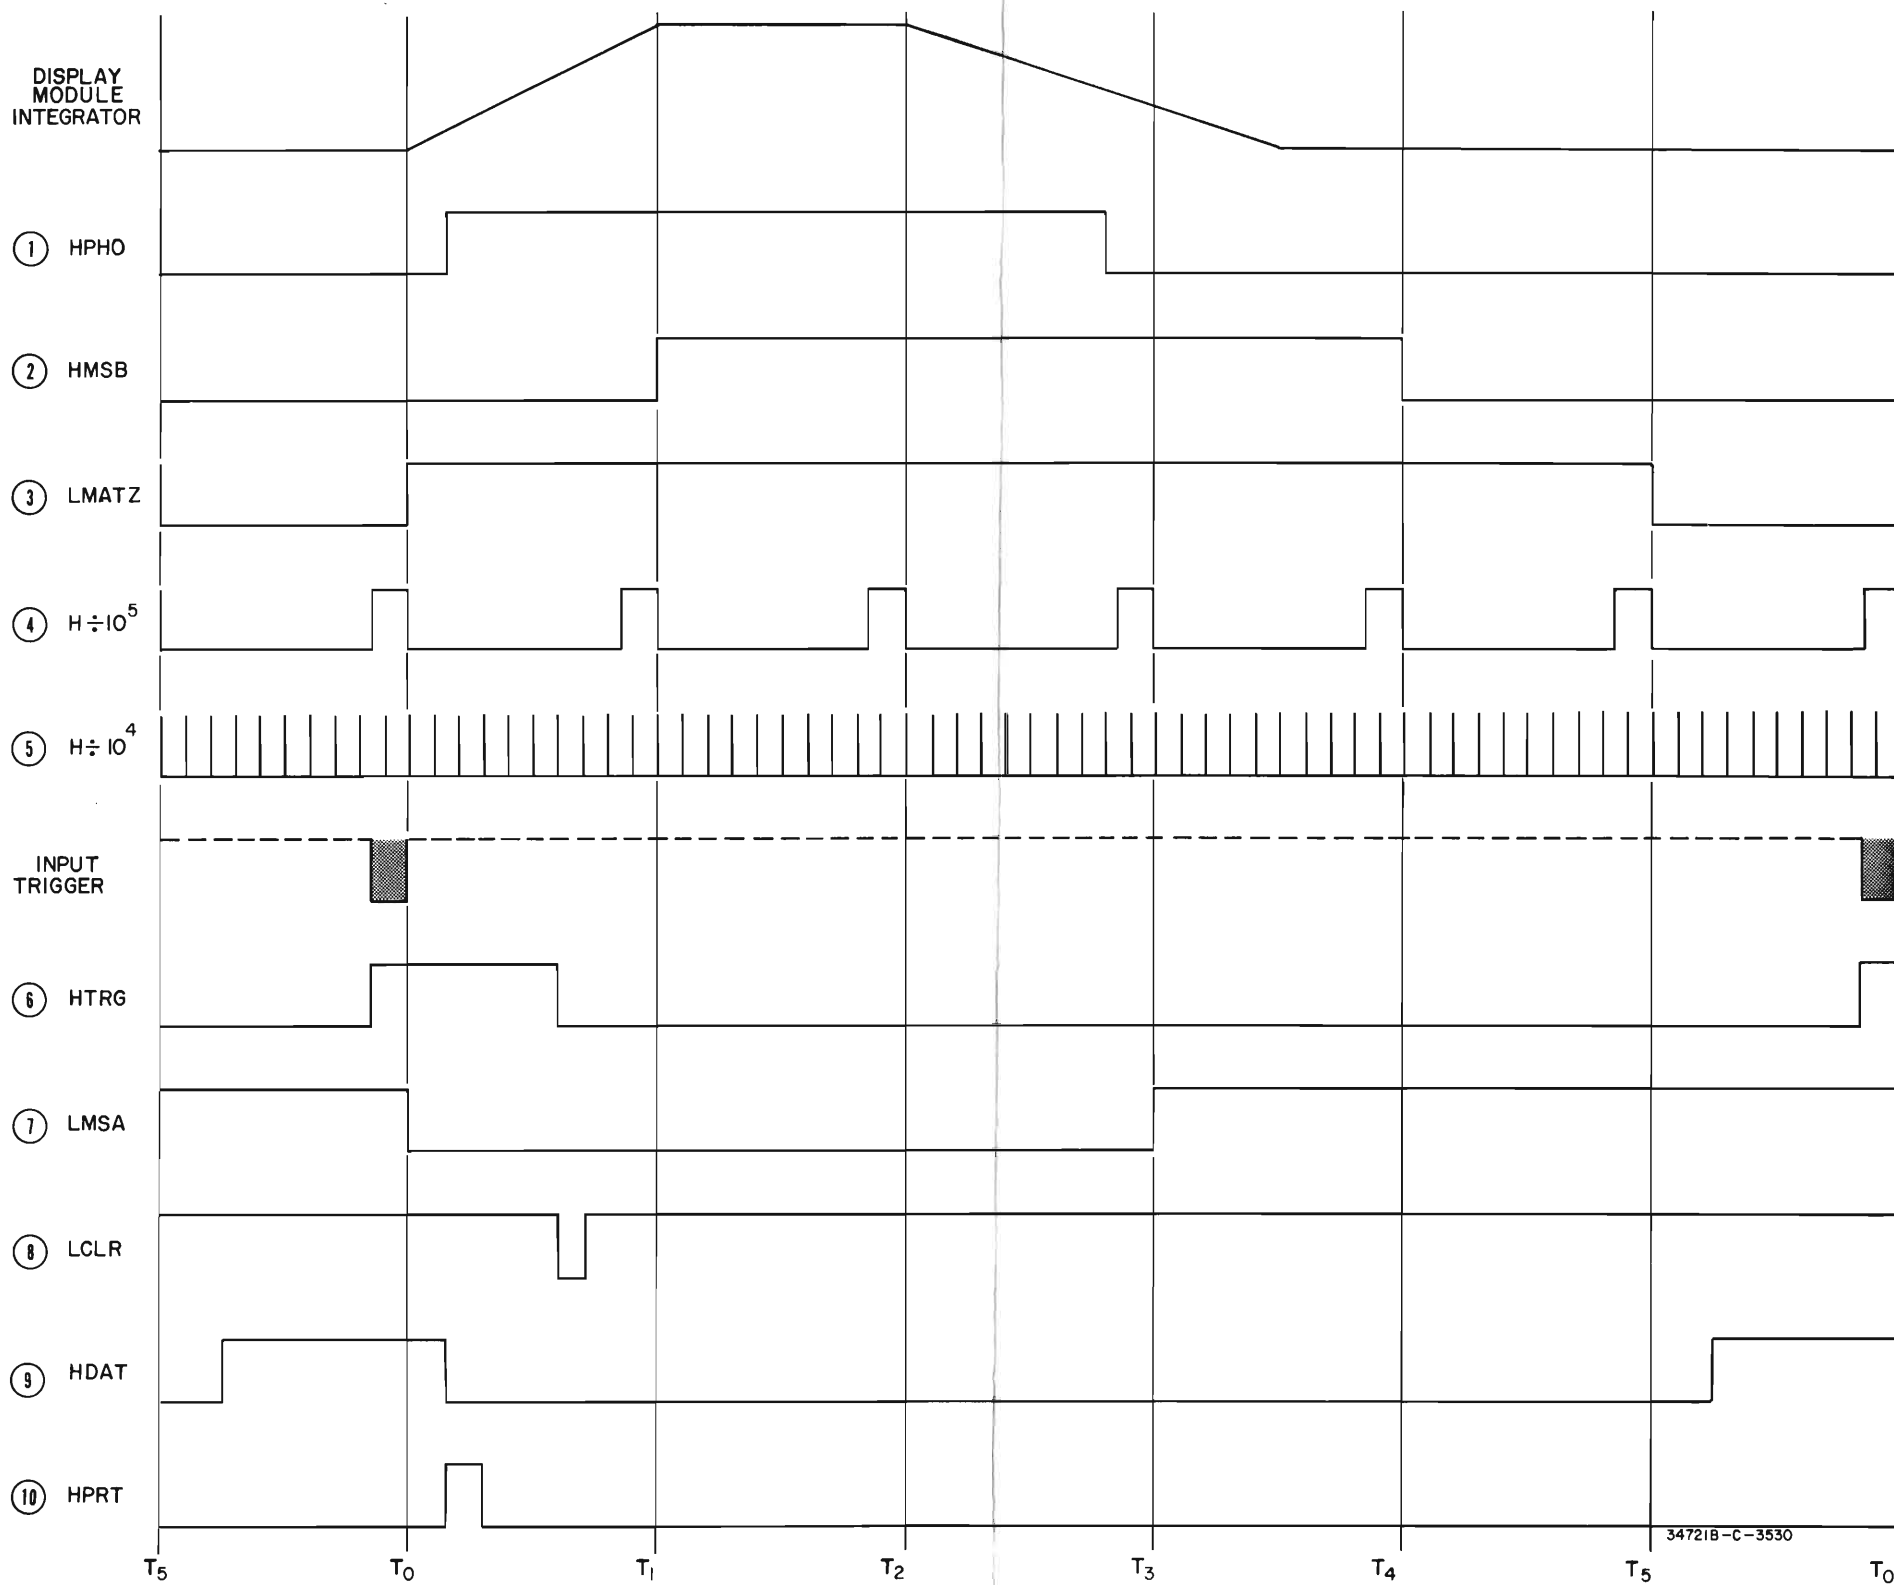


34721B-C-3530

Figure 7-2. Timing Diagram.
7-5/7-6

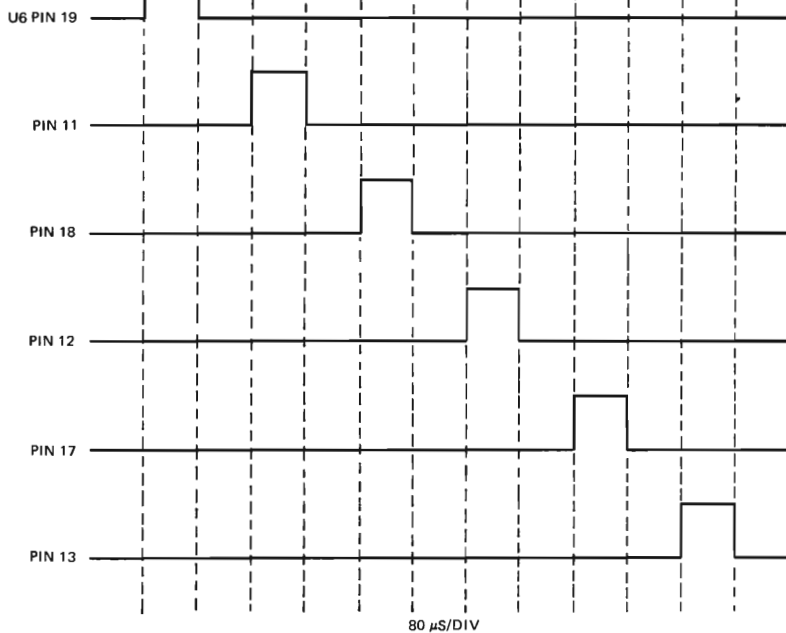

TRIGGER OSCILLOSCOPE ON PIN 19.

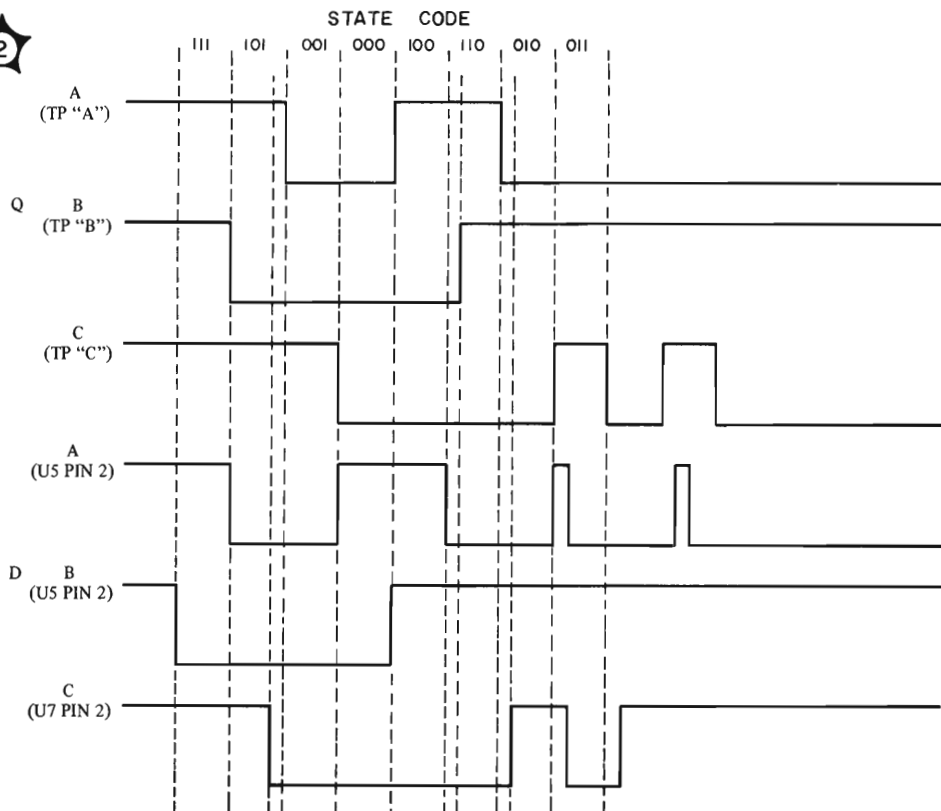

START
(SEE NOTE 1)

SEPARATE THE SIGNAL CONDITIONING (BOTTOM) MODULE FROM THE BCD MODULE. USING AN 11148A INTERCONNECT CABLE (OR EQUIVALENT) CONNECT THE BCD MODULE TO THE SIGNAL CONDITIONING MODULE. ALSO CONNECT THE RIBBON CABLE SUPPLIED WITH THE INSTRUMENT BETWEEN THE MODULES.

BEGINNING WITH THE MAX POSITION OF THE OUTPUT RATE SWITCH, SET THE SWITCH TO EACH POSITION WHILE OBSERVING THE OUTPUT RATE LIGHT. AT ALL POSITIONS EXCEPT HOLD THE LIGHT SHOULD FLASH AT A RATE WHICH DECREASES AT EACH LOWER POSITION. IN HOLD POSITION THE LIGHT SHOULD FLASH ONLY WHEN THE MANUAL BUTTON IS DEPRESSED OR WHEN AN EXTERNAL TRIGGER IS APPLIED TO PIN 46 OF THE REAR PANEL CONNECTOR.

1. BEFORE ENTERING THIS TROUBLESHOOTING TREE ENSURE THAT THE DISPLAY AND SIGNAL CONDITIONING MODULES ARE FUNCTIONING PROPERLY. ALSO CHECK THE VOLTAGES SUPPLIED TO THE 34721B FROM THE DISPLAY MODULE. CONNECT THE 34721B TO AN hp. MODEL 5055A DIGITAL RECORDER OR EQUIVALENT.

2. LOGIC LEVELS
HIGH - +2.4 to +5.0 V
LOW - 0V to +5 V

CHECK RIBBON CABLE TO ENSURE THAT IT IS PROPERLY CONNECTED BETWEEN THE BCD MODULE AND THE SIGNAL CONDITIONING MODULE. CHECK FLIP-FLOPS U26 AND U27 FOR PROPER OPERATION.

CHECK RIBBON CABLE TO ENSURE THAT IT IS PROPERLY CONNECTED BETWEEN THE BCD MODULE AND THE SIGNAL CONDITIONING MODULE. CHECK FLIP-FLOPS U27 AND U28 FOR PROPER OPERATION.

OBSERVE THE DISPLAY MODULE INDICATION. IF IT GIVES A CORRECT INDICATION FOR A DIGIT WHICH IS DEFECTIVE IN THE BCD MODULE THE DATA STORAGE FLIP-FLOP FOR THAT DIGIT IS PROBABLY BAD. OTHERWISE, THE DISPLAY MODULE IS DEFECTIVE.

WERE CORRECT INDICATIONS NOTED?

WERE CORRECT INDICATIONS NOTED?

ROM IS PROBABLY DEFECTIVE.

IS THE ROM OUTPUT CORRECT?

CHECK A4U25 FOR PROPER OPERATION.

WAS CORRECT LEVEL NOTED?

CHECK POLARITY OUTPUT FROM DISPLAY MODULE.

CHECK THE ROM OUTPUT WHICH CLOCKS THE DATA FLIP-FLOPS OF THE MALFUNCTIONING DIGIT. IT SHOULD BE FLUCTUATING BETWEEN +2 V AND +4.0 V (SEE WAVEFORMS IN ☆ 1).

CHECK ROM OUTPUTS WHICH CLOCK THE DATA STORAGE FLIP-FLOPS. THEY SHOULD APPEAR AS SHOWN IN ☆. IF THEY DO NOT THE ROM IS PROBABLY DEFECTIVE. CHECK THE PRESET LINE (LPOV) FOR A CONSTANT LOW. IF THIS LINE IS ALWAYS LOW TROUBLESHOOT THE OVERLOAD DETECT CIRCUITS (U8 and U10C). IF THESE TWO CHECKS DO NOT REVEAL THE PROBLEM THE BCD DATA FROM THE DISPLAY MODULE IS PROBABLY INCORRECT.

TEST THE FUNCTION DECODE GATES U11A AND B AND U12A. THIS CAN BE DONE BY SELECTING DCV FUNCTION AND DETERMINING WHETHER THE OUTPUTS OF THESE 3 GATES GO LOW. THEN CONSECUTIVELY SHORT EACH INPUT OF THE 3 GATES TO GROUND. THE OUTPUT OF THE RESPECTIVE GATE SHOULD GO HIGH EACH TIME ONE OF ITS INPUTS IS GROUND.

TEST THE RANGE DECODE GATES U12B AND U13A AND B. THIS CAN BE DONE BY TEMPORARILY DISCONNECTING THE RIBBON CABLE FROM THE BCD MODULE AND OBSERVING THE OUTPUT OF EACH GATE. THEY SHOULD ALL GO LOW. THEN CONSECUTIVELY CONNECT EACH INPUT OF THE 3 GATES TO GROUND. THE OUTPUT OF THE RESPECTIVE GATE SHOULD GO HIGH EACH TIME ONE OF ITS INPUTS IS GROUND. RECONNECT THE RIBBON CABLE.

CHECK THE LOGIC LEVEL AT PIN 12 OF A4U25. IT SHOULD BE HIGH FOR A + INPUT, LOW FOR A - INPUT.

IS FUNCTION DATA CORRECT?


IS RANGE DATA CORRECT?

IS POLARITY DATA CORRECT?

ARE ALL DIGITS INCORRECT?

ARE DATA DIGITS CORRECT (NOT INCLUDING OVERRANGE)?

IS PRINTER FUNCTIONING PROPERLY?

SET THE OUTPUT RATE CONTROL TO MAX. CHECK THE WAVEFORM ON TEST POINT "PRT". IT SHOULD APPEAR AS SHOWN:


IS WAVEFORM CORRECT?

PRINTER IS MALFUNCTIONING.

CHECK FOR +5 V ON PRINTER HOLD-OFF (PIN 22). IF +5 V IS NOT PRESENT, A4U6 (ROM) PROBABLY DEFECTIVE.

CHECK A4Q1 AND FRONT PANEL LIGHT (IC1).

IS WAVEFORM CORRECT?

EXTERNALLY TRIGGER AN OSCILLOSCOPE ON TEST POINT "TRG". CHECK WAVEFORM AT TEST POINT "M". IT SHOULD BE A SERIES OF PULSES WITH WIDTHS VARYING BETWEEN 4 ms AND 33 ms.

CHECK A4U9 AND ENABLE PULSES HQAZ, HDTG, HQMA, AND HQHO FROM THE ROM (U6). PINS 7 AND 21 HAVE A SERIES OF PULSES SIMILAR TO THAT PREVIOUSLY DESCRIBED. THE WAVEFORMS ON PINS 8 AND 22 ARE PULSES 4ms WIDE OCCURRING EVERY 200ms.

IS WAVEFORM CORRECT?


MONITOR TP "O" AND MOMENTARILY SHORT TP "M" TO GND. TP Q SHOULD GO HIGH.

SET THE OUTPUT RATE SWITCH TO MAX. AND OBSERVE THE WAVEFORM ON TEST POINT "TRG" OF THE A4 ASSEMBLY. IT SHOULD APPEAR AS SHOWN:


DOES WAVEFORM APPEAR AS INDICATED?

CHECK WAVEFORM AT TEST POINT DATA. IT SHOULD APPEAR AS SHOWN:


IS WAVEFORM CORRECT?

CHECK WAVEFORM AT PIN 1 OF A4U1. IT SHOULD APPEAR AS SHOWN:


CHECK FOR PIN 14 OF A4U3 SHORTED TO GROUND OR CLAMPED AT SOME VOLTAGE. THIS MAY BE DUE TO FAILURE OF A4U3. ALSO CHECK A5 CONNECTOR ASSEMBLY AND OUTPUT RATE SWITCH (S1).

IS WAVEFORM CORRECT?

SET OUTPUT RATE SWITCH (S1) TO HOLD. CHECK VOLTAGE LEVEL AT A4U1 PIN 2. IT SHOULD BE APPROXIMATELY 0 V. DEPRESS THE MANUAL PUSHBUTTON AND AGAIN OBSERVE THE VOLTAGE AT PIN 2. IT SHOULD CHANGE TO APPROXIMATELY +4.2 V.


WAS CORRECT INDICATION NOTED?

CONNECT +5 V TO PIN 46 OF THE REAR PANEL CONNECTOR WHILE OBSERVING THE VOLTAGE AT PIN 6 OF A4U2. IT SHOULD CHANGE FROM ≈0 V TO ≈4.4 V.

CHECK A4U2C AND D AND MANUAL PUSHBUTTON (S2).

WAS INDICATION CORRECT?

CHECK A4U2B AND A4U1B AND C.

SET 34721B OUTPUT RATE SWITCH TO MAX. POSITION. CHECK WAVEFORM AT A4U1 PIN 13. IT SHOULD APPEAR AS SHOWN:


E IC.

T?

R HOLD-
PRESENT,
CTIVE.T POINT
SHOWN:

CT?

SHORTED
T SOME
TO FAIL-
AS CON-
OUTPUT

OBSERVE THE DISPLAY MODULE INDICATION. IF IT GIVES A CORRECT INDICATION FOR A DIGIT WHICH IS DEFECTIVE IN THE BCD MODULE THE DATA STORAGE FLIP-FLOP FOR THAT DIGIT IS PROBABLY BAD. OTHERWISE, THE DISPLAY MODULE IS DEFECTIVE.

YES

IS THE ROM OUTPUT CORRECT?

NO

ROM IS PROBABLY DEFECTIVE.

CHECK A4U25 FOR PROPER OPERATION.

YES

WAS CORRECT LEVEL NOTED?

NO

CHECK POLARITY OUTPUT FROM DISPLAY MODULE.

CHECK THE LOGIC LEVEL AT PIN 12 OF A4U25. IT SHOULD BE HIGH FOR A + INPUT, LOW FOR A - INPUT.

NO

IS POLARITY DATA CORRECT?

YES

CHECK THE ROM OUTPUT WHICH CLOCKS THE DATA FLIP-FLOPS OF THE MALFUNCTIONING DIGIT. IT SHOULD BE FLUCTUATING BETWEEN +2 V AND +4.0 V (SEE WAVEFORMS IN ☆).

NO

ARE ALL DIGITS INCORRECT?

YES

CHECK ROM OUTPUTS WHICH CLOCK THE DATA STORAGE FLIP-FLOPS. THEY SHOULD APPEAR AS SHOWN IN ☆. IF THEY DO NOT THE ROM IS PROBABLY DEFECTIVE. CHECK THE PRESET LINE (LPOV) FOR A CONSTANT LOW. IF THIS LINE IS ALWAYS LOW TROUBLESHOOT THE OVERLOAD DETECT CIRCUITS (U8 AND U10C). IF THESE TWO CHECKS DO NOT REVEAL THE PROBLEM THE BCD DATA FROM THE DISPLAY MODULE IS PROBABLY INCORRECT.

NO

ARE DATA DIGITS CORRECT (NOT INCLUDING OVERRANGE)?

YES

CHECK U10, U14 AND U15.

NO

DOES THE DIGIT BLANK?

YES

TROUBLESHOOT THE DISPLAY MODULE.

GROUND PIN 1 OF A4U10. THE OPTIONAL DIGIT SHOULD BLANK.

NO

DOES OPTIONAL DIGIT BLANK ON REQUIRED FUNCTIONS AND RANGES?

YES

CHECK A4U25 FOR PROPER OPERATION.

NO

IS LOGIC LEVEL CORRECT?

YES

TROUBLESHOOT THE PRINTER.

APPLY 1.5 V TO THE SIGNAL CONDITIONING MODULE. CHECK THE LOGIC LEVEL ON U25 PIN 5. IT SHOULD BE HIGH.

NO

IS OVERRANGE "1" PRINTED WITH OVERRANGE VOLTAGE APPLIED?

YES

CHECK U8B, C AND D AND U10C FOR PROPER OPERATION.

NO

IS THE WAVEFORM CORRECT?

YES

CHECK DATA STORAGE FLIP-FLOPS TO ENSURE THEY ARE PRESETTING AS REQUIRED (ALL DATA FLIP-FLOP OUTPUTS HIGH WHEN LPOV IS LOW).

APPLY 2.2 V TO THE SIGNAL CONDITIONING MODULE. CHECK THE WAVEFORM ON TEST POINT "OV". IT SHOULD APPEAR AS SHOWN:

NO

IS CORRECT INDICATION PRINTED ON OVERLOAD (SEE PARAGRAPH 4-29)?

YES

GOOD INSTRUMENT. RECHECK SYMPTOMS.

PRINTER IS MALFUNCTIONING.

CHECK A4Q1 AND FRONT PANEL LIGHT (C11).

YES

IS WAVEFORM CORRECT?

NO

EXTERNALLY TRIGGER AN OSCILLOSCOPE ON TEST POINT "TRG". CHECK WAVEFORM AT TEST POINT "M". IT SHOULD BE A SERIES OF PULSES WITH WIDTHS VARYING BETWEEN 4 ms AND 33 ms.

CHECK A4U9 AND ENABLE PULSES HQA2, HQTG, HQMA, AND HQHO FROM THE ROM (U6). PINS 7 AND 21 HAVE A SERIES OF PULSES SIMILAR TO THAT PREVIOUSLY DESCRIBED. THE WAVEFORMS ON PINS 8 AND 22 ARE PULSES 4ms WIDE OCCURRING EVERY 200ms.

NO

IS WAVEFORM CORRECT?

YES

MONITOR TP "Q" AND MOMENTARILY SHORT TP "M" TO GND. TP Q SHOULD GO HIGH.

WAS CORRECT INDICATION OBSERVED?

YES

CHECK THE WAVEFORMS AT TEST POINTS "A", "B", AND "C". THEY SHOULD APPEAR AS SHOWN BY ☆ (UPPER THREE WAVEFORMS).

CHECK THE WAVEFORM ON PIN 11 OF A4U7. IT SHOULD APPEAR AS SHOWN:

NO

IS THE WAVEFORM CORRECT?

YES

U7 OR U6 PROBABLY DEFECTIVE.

NO

CHECK U8A FOR PROPER OPERATION. CHECK $\sim 10^4$ CLOCK FROM DISPLAY MODULE.

ROM (U6) PROBABLY DEFECTIVE.

YES

ARE THE WAVEFORMS CORRECT?

NO

CHECK THE WAVEFORMS ON PINS 2 AND 12 OF U5 AND PIN 2 OF U7. THEY SHOULD APPEAR AS SHOWN IN (LOWER THREE WAVEFORMS).

NO

ARE THE WAVEFORMS CORRECT?

NO

U5 OR U7 PROBABLY DEFECTIVE.

YES

ARE THE WAVEFORMS CORRECT?

NO

ROM (U6) PROBABLY DEFECTIVE.

CHECK WAVEFORM AT PIN 1 OF A4U1. IT SHOULD APPEAR AS SHOWN:

YES

IS WAVEFORM CORRECT?

YES

SET OUTPUT RATE SWITCH (S1) TO HOLD. CHECK VOLTAGE LEVEL AT A4U1 PIN 2. IT SHOULD BE APPROXIMATELY 0 V. DEPRESS THE MANUAL PUSHBUTTON AND AGAIN OBSERVE THE VOLTAGE AT PIN 2. IT SHOULD CHANGE TO APPROXIMATELY +4.2 V.

NO

CHECK A4U1A AND A4U2C AND D FOR PROPER OPERATION. CHECK MANUAL PUSHBUTTON (S2) FOR PROPER OPERATION.

WAS CORRECT INDICATION NOTED?

YES

CONNECT +5 V TO PIN 46 OF THE REAR PANEL CONNECTOR WHILE OBSERVING THE VOLTAGE AT PIN 8 OF A4U2. IT SHOULD CHANGE FROM ≈ 0 V TO ≈ 4.4 V.

NO

CHECK A4U2C AND D AND MANUAL PUSHBUTTON (S2).

WAS INDICATION CORRECT?

YES

SET 34721B OUTPUT RATE SWITCH TO MAX. POSITION. CHECK WAVEFORM AT A4U1 PIN 13. IT SHOULD APPEAR AS SHOWN:

NO

CHECK A4U2B AND A4U1B AND C.

CHECK WAVEFORM AT A4U2 PIN 1. IT SHOULD APPEAR AS SHOWN:

YES

IS WAVEFORM CORRECT?

NO

CHECK INPUTS AT PINS 11 AND 12 OF A4U1D. THEY SHOULD APPEAR AS SHOWN:

NO

ARE WAVEFORMS CORRECT?

YES

CHECK A4U1D AND A4U2A.

NO

CHECK DISPLAY MODULE IF LMATZ IS NOT PRESENT AT PIN 12. CHECK A4U1D AND A4U4.


A4U4 HAS PROBABLY FAILED. MAKE SURE LCLR LINE FROM ROM IS NOT SHORTED TO GROUND.

YES

IS WAVEFORM CORRECT?

NO

CHECK $\sim 10^5$ (30Hz) FROM DISPLAY MODULE.

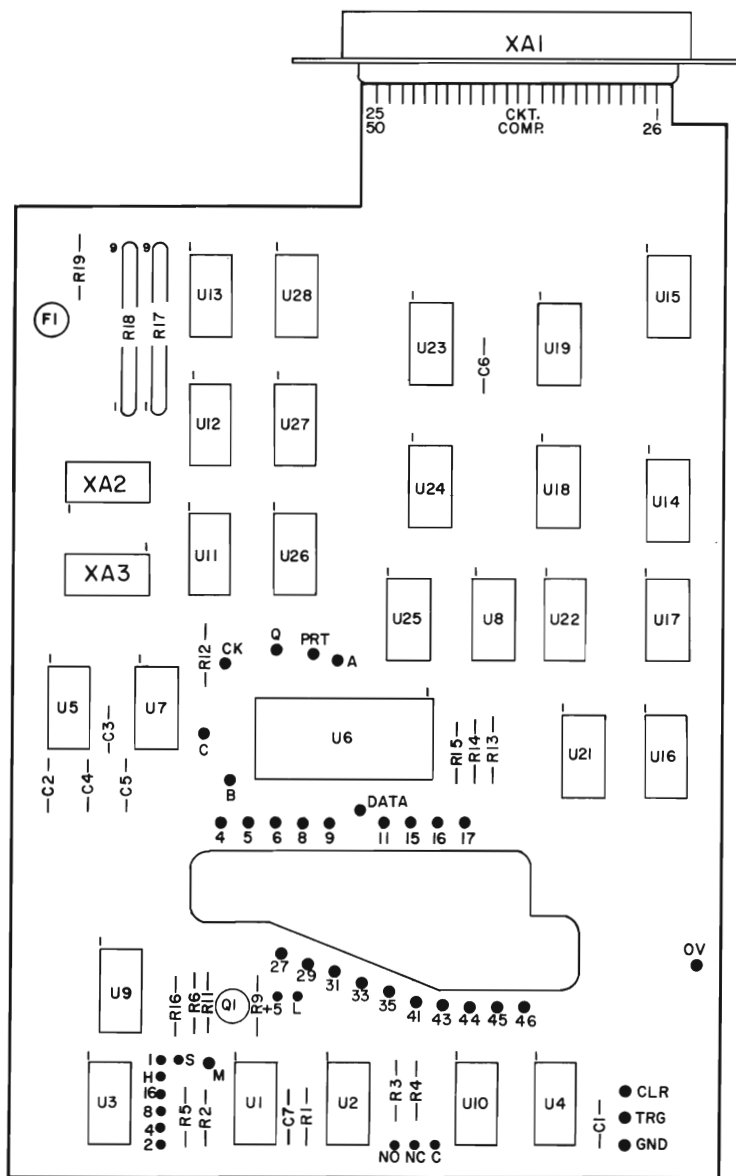

3472IB-B-3476

A4

hp Part No. 03472I-66504
Rev. A

CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A. Common	Any supplier of U.S.	05347	Ultronix, Inc.	San Mateo, Cal.	11236	CTS of Berne, Inc.	Berne, Ind.
00136	McCoy Electronics	Mount Holly Springs, Pa.	05397	Union Carbine Corp., Elect.		11237	Chicago Telephone of	
00213	Sage Electronics Corp.	Rochester, N. Y.		Div.	New York, N. Y.		California, Inc.	So. Pasadena, Cal.
00287	Cemco, Inc.	Danielson, Conn.	05574	Viking Ind. Inc.	Canoga Park, Cal.	11242	Bay State Electronics Corp.	Waltham, Mass.
00334	Humidial	Colton, Calif.	05593	Icore Electro-Plastics Inc.	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave	
00348	Mictron, Co., Inc.	Valley Stream, N. Y.	05616	Cosmo Plastic (c/o Electrical			Div.	Palo Alto, Cal.
00373	Garlock Inc.	Cherry Hill, N. J.		Spec. Co.)	Cleveland, Ohio	11314	National Seal	Downey, Cal.
00656	Aerovox Corp.	New Bedford, Mass.	05624	Barber Colman Co.	Rockford, Ill.	11453	Precision Connector Corp.	Jamaica, N. Y.
00779	Amp, Inc.	Harrisburg, Pa.	05728	Tiffen Optical Co.		11534	Duncan Electronics Inc.	Costa Mesa, Cal.
00781	Aircraft Radio Corp.	Boonton, N. J.			Roslyn Heights, Long Island, N. Y.	11711	General Instrument Corp.	
00809	Croven, Ltd.	Whitby, Ontario, Canada	05729	Metro-Tel Corp.	Westbury, N. Y.		Semiconductor Division Products	
00815	Northern Engineering		05783	Stewart Engineering Inc.	Santa Cruz, Cal.		Group	Newark, N. J.
	Laboratories, Inc.	Burlington, Wis.	05820	Wakefield Engineering Inc.	Wakefield, Mass.	11717	Imperial Electronic, Inc.	Buena Park, Cal.
00853	Sangamo Electric Co.,		06004	Bassick Co., Div. of Stewart		11870	Melabs, Inc.	Palo Alto, Cal.
	Pickens Div.	Pickens, S. C.	06090	Raychem Corp.	Bridgeport, Conn.	12136	Philadelphia Handle Co.	Camden, N. J.
00866	Goe Engineering Co.	City of Industry, Cal.	06175	Bausch and Lomb Optical	Redwood City, Cal.	12361	Grove Mfg. Co., Inc.	Shady Grove, Pa.
00891	Carl E. Holmes Corp.	Los Angeles, Cal.		Co.	Rochester, N. Y.	12574	Gulton Ind. Inc., Data System	
00929	Microlab Inc.	Livingston, N. J.	06402	E. T. A. Products Co. of			Div.	Albuquerque, N. M.
01002	General Electric Co.,			America	Chicago, Ill.	12697	Clarostat Mfg. Co.	Dover, N. H.
	Capacitor Dept.	Hudson Falls, N. Y.	06540	Anatom Electronic Hardware		12728	Elmar Filter Corp.	W. Haven, Conn.
01009	Alden Products Co.	Brockton, Mass.		Co., Inc.	New Rochelle, N. Y.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan
01121	Allen Bradley Co.	Milwaukee, Wis.	06555	Beebe Electrical Instrument		12881	Metex Electronics Corp.	Clark, N. J.
01255	Litton Industries, Inc.	Beverly Hills, Cal.		Co., Inc.	Penacook, N. H.	12930	Delta Semiconductor Inc.	Newport Beach, Cal.
01281	TRW Semiconductors, Inc.	Lawndale, Cal.	06666	General Devices Co., Inc.	Indianapolis, Ind.	12954	Dickson Electronics Corp.	Scottsdale, Arizona
01295	Texas Instruments, Inc.,		06751	Components Inc., Ariz. Div.	Phoenix, Arizona	13019	Airco Supply Co., Inc.	Wichita, Kansas
	Transistor Products Div.	Dallas, Texas	06812	Torrington Mfg. Co., West Div.	Van Nuys, Cal.	13061	Wilco Products	Detroit, Mich.
01349	The Alliance Mfg. Co.	Alliance, Ohio	06980	Varian Assoc. Etmae Div.	San Carlos, Cal.	13103	Thermolloy	Dallas, Texas
01538	Small Parts Inc.	Los Angeles, Cal.	07088	Kelvin Electric Co.	Van Nuys, Cal.	13327	Soliton Devices Inc.	Tappan, N. Y.
01589	Pacific Relays, Inc.	Van Nuys, Cal.	07126	Digitran Co.	Pasadena, Cal.	13396	Telefunken (GmbH)	Hanover, Germany
01670	Gudebrod Bros. Silk Co.	New York, N. Y.	07137	Transistor Electronics		13835	Midland-Wright Div. of	
01930	Amerock Corp.	Rockford, Ill.		Corp.	Minneapolis, Minn.		Pacific Industries, Inc.	Kansas City, Kansas
01960	Pulse Engineering Co.	Santa Clara, Cal.	07138	Westinghouse Electric		14099	Sem-Tech	Newbury Park, Cal.
02114	Ferrocube Corp. of			Corp., Electronic Tube Div.	Elmira, N. Y.	14193	Calif. Resistor Corp.	Santa Monica, Cal.
	America	Saugerties, N. Y.	07149	Filmohm Corp.	New York, N. Y.	14298	American Components, Inc.	Conshohocken, Pa.
02116	Wheelock Signals, Inc.	Long Branch, N. J.	07233	Cinch-Graphik Co.	City of Industry, Cal.	14433	ITT Semiconductor, a Div. of	
02286	Coie Rubber and Plastics Inc.	Sunnyvale, Cal.	07256	Silicon Transistor Corp.	Carle Place, N. Y.		Int. Telephone and Telegraph	
02660	Amphenol-Borg Electronics		07261	Avnet Corp.	Culver City, Cal.		Corporation	West Palm Beach, Fla.
	Corp.	Broadview, Ill.	07263	Fairchild Camera & Inst. Corp.		14493	Hewlett-Packard Company	Loveland, Colo.
02735	Radio Corp. of America, Semi-			Semiconductor Div.	Mountain View, Cal.	14655	Cornell Dublier Electric Corp.	Newark, N. J.
	conductor and Materials		07322	Minnesota Rubber Co.	Minneapolis, Minn.	14674	Corning Glass Works	Corning, N. Y.
	Division	Somerville, N. J.	07387	Birther Corp., The	Monterey Park, Cal.	14752	Electro Cube Inc.	San Gabriel, Cal.
02771	Vocaline Co. of America,		07397	Sylvania Elect. Prod. Inc.,		14960	Williams Mfg. Co.	San Jose, Cal.
	Inc.	Old Saybrook, Conn.		Mt. View Operations	Mountain View, Cal.	15106	The Sphere Co., Inc.	Little Falls, N. J.
02777	Hopkins Engineering Co.	San Fernando, Cal.	07700	Technical Wire Products		15203	Webster Electronics Co.	New York, N. Y.
02875	Hudson Tool & Die	Newark, N. J.		Inc.	Cranford, N. J.	15287	Scionics Corp.	Northridge, Cal.
03296	Nylon Molding Corp.	Springfield, N. J.	07829	Bodine Elect. Co.	Chicago, Ill.	15291	Adjustable Bushing Co.	N. Hollywood, Cal.
03508	G. E. Semiconductor Prod.		07910	Continental Device Corp.	Hawthorne, Cal.	15558	Micron Electronics, Garden City, Long Island, N. Y.	
	Dept.	Syracuse, N. Y.	07933	Raytheon Mfg. Co., Semi-		15566	Amprobe Inst. Corp.	Lynbrook, N. Y.
03705	Apex Machine & Tool Co.	Dayton, Ohio		conductor Div.	Mountain View, Cal.	15631	Cabletronics	Costa Mesa, Cal.
03797	Eldema Corp.	Compton, Calif.	07980	Hewlett-Packard Co.,		15772	Twentieth Century Coil	
03818	Parker Seal Co.	Los Angeles, Cal.		New Jersey Division	Rockaway, N. J.		Spring Co.	Santa Clara, Cal.
03877	Transitron Electric Corp.	Wakefield, Mass.	08145	U. S. Engineering Co.	Los Angeles, Cal.	15801	Fenwal Elect. Inc.	Framingham, Mass.
03888	Pyrofilm Resistor Co.,		08289	Blinn, Delbert Co.	Pomona, Cal.	15818	Amelco Inc.	Mountain View, Cal.
	Inc.	Cedar Knolls, N. J.	08358	Burgess Battery Co.		16037	Spruce Pine Mica Co.	Spruce Pine, N. C.
03954	Singer Co., Diehl Div.,			Niagara Falls, Ontario, Canada		16179	Omni-Spectra Inc.	Detroit, Ill.
	Finderne Plant	Sumerville, N. J.	08524	Deutsch Fastener Corp.	Los Angeles, Cal.	16352	Computer Diode Corp.	Lodi, N. J.
04009	Arrow, Hart and Hegeman		08664	Bristol Co., The	Waterbury, Conn.	16554	Electroform Co.	Union, N. J.
04013	Tarus Corp.	Lambertville, N. J.	08717	Sloan Company	Sun Valley, Cal.	16585	Boots Aircraft Nut Corp.	Pasadena, Cal.
04062	Arco Electronic Inc.	Great Neck, N. Y.	08718	ITT Cannon Electric Inc.,		16688	Ideal Prec. Meter Co., Inc.	
04217	Essex Wire	Los Angeles, Cal.		Phoenix Div.	Phoenix, Arizona		De Jur Meter Div.	Brooklyn, N. Y.
04222	Hi-Q Division of Aerovox.	Myrtle Beach, S. C.	08727	National Radio Lab. Inc.	Paramus, N. J.	16758	Delco Radio Div. of G. M. Corp.	Kokomo, Ind.
04354	Precision Paper Tube Co.	Wheeling, Ill.	08792	CBS Electronics Semiconductor		17109	Thermonetics Inc.	Canoga Park, Cal.
04404	Palo Alto Division of Hewlett-			Operations, Div. of CBS Inc.	Lowell, Mass.	17474	Tranex Company	Mountain View, Cal.
	Packard Co.	Palo Alto, Cal.	08806	General Electric Co.,		17675	Hamlin Metal Products Corp.	Akron, Ohio
04651	Sylvania Electric Products,			Miniature Lamp Dept.	Cleveland, Ohio	17745	Angstrom Prec. Inc.	No. Hollywood, Cal.
	Microwave Device Div.	Mountain View, Cal.	08984	Mel-Rain	Indianapolis, Ind.	17856	Siliconix Inc.	Sunnyvale, Cal.
04673	Dakota Engr. Inc.	Culver City, Cal.	09026	Babcock Relays Div.	Costa Mesa, Cal.	17870	McGraw-Edison Co.	Manchester, N. H.
04713	Motorola Inc. Semiconductor		09097	Electronic Enclosures Inc.	Los Angeles, Calif.	18042	Power Design Pacific Inc.	Palo Alto, Cal.
	Prod. Div.	Phoenix, Arizona	09134	Texas Capacitor Co.	Houston, Texas	18083	Clevite Corp. Semiconductor Div.	Palo Alto, Cal.
04732	Filtrom Co., Inc. Western		09145	Tech. Ind. Inc. Atohm		18324	Signetics Corp.	Sunnyvale, Cal.
	Div.	Culver City, Cal.	09250	Electro Assemblies, Inc.	Chicago, Ill.	18476	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
04773	Automatic Electric Co.	Northlake, Ill.	09353	C & K Components Inc.	Newton, Mass.	18486	TRW Elect. Comp. Div.	Des Plaines, Ill.
04796	Sequoia Wire Co.	Redwood City, Cal.	09569	Mallory Battery Co. of		18565	Chomerics	Plainville, Mass.
04811	Precision Coil Spring Co.	El Monte, Cal.		Canada, Ltd.	Toronto, Ontario, Canada	18583	Curtis Instrument, Inc.	Mt. Kisco, N. Y.
04870	P. M. Motor Company	Westchester, Ill.	09795	Pennsylvania Florecarbon		18612	Vishay Instruments Inc.	Malvern, Pa.
04919	Component Mfg. Service			Clifton Heights, Penn.		18873	E. I. DuPont and Co., Inc.	Wilmington, Del.
	Co.	W. Bridgewater, Mass.	09922	Burndy Corp.	Norwalk, Conn.	18911	Durant Mfg. Co.	Milwaukee, Wis.
05006	Twentieth Century Plastics,		10214	General Transistor Western		19315	The Bendix Corp., Navigation &	
	Inc.	Los Angeles, Cal.		Corp.	Los Angeles, Cal.		Control Div.	Teterboro, N. J.
05277	Westinghouse Electric Corp.		10411	Ti-Tal, Inc.	Berkeley, Cal.	19500	Thomas A. Edison Industries,	
	Semiconductor Dept.	Youngwood, Pa.	10646	Carborundum Co.	Niagara Falls, N. Y.		Div. of McGraw-Edison	West Orange, N. J.
						19589	Concoa	Baldwin Park, Cal.

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
19644	LRC Electronics	Horseheads, N. Y.	71482	C. P. Clare & Co.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
19701	Electra Mfg. Co.	Independence, Kansas	71590	Centralab Div. of		78471	Tilley Mfg. Co.	San Francisco, Cal.
20183	General Atomics Corp.	Philadelphia, Pa.		Globe Union Inc.	Milwaukee, Wis.	78488	Stackpole Carbon Co.	St. Marys, Pa.
21226	Executone, Inc.	Long Island City, N. Y.	71616	Commercial Plastics Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
21355	Fafnir Bearing Co., The	New Britain, Conn.	71700	Cornish Wire Co., The	New York, N. Y.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
21520	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71707	Coto Coil Co., Inc.	Providence, R. I.	78790	Transformer Engineers	San Gabriel, Cal.
23020	General Reed Co.	Metuchen, N. J.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78947	Ueinite Co.	Newtonville, Mass.
23042	Texscan Corp.	Indianapolis, Ind.	71785	Cinch Mfg. Co.		79136	Waldes Kohinoor Inc.	Long Island City, N. Y.
23783	British Radio Electronics Ltd.	Washington, D.C.		Howard B. Jones Div.	Chicago, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
24455	G. E. Lamp Division, Nela Park	Cleveland, Ohio	71984	Dow Corning Corp.	Midland, Mich.	79251	Wenco Mfg. Co.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	72136	Electro Motive Mfg. Co., Inc.		79727	Continental-Wirt Electronics Corp.	
24681	Memcor Inc., Comp. Div.	Huntington, Ind.			Willimantic, Conn.			Philadelphia, Pa.
26365	Gries Reproductor Corp.	New Rochelle, N. Y.	72619	Dialight Corp.	Brooklyn, N. Y.	79963	Zierick Mfg. Corp.	New Rochelle, N. Y.
26462	Grobert File Co. of America, Inc.	Carlstadt, N. J.	72656	Indiana General Corp.		80031	Mepec Division of Sessions Clock Co.	
26581	Compac Hollister Co.	Hollister, Cal.		Electronics Div.	Keasby, N. J.			Morristown, N. J.
26992	Hamilton Watch Co.	Lancaster, Pa.	72699	General Instrument Corp.		80033	Prestole Corp.	Toledo, Ohio
28480	Hewlett-Packard Co.	Palo Alto, Cal.		Cap Division	Newark, N. J.	80120	Schnitzer Alloy Products Co.	Elizabeth, N. J.
28520	Heyman Mfg. Co.	Kenilworth, N. J.	72765	Drake Mfg. Co.	Harwood Heights, Ill.	80131	Electronic Industries Association.	
30817	Instrument Specialties Co., Inc.	Little Falls, N. J.	72825	Hugh H. Eby Inc.	Philadelphia, Pa.		Standard tube or semi-conductor device, any manufacturer.	
			72928	Gudeman Co.	Chicago, Ill.	80207	Unimax Switch, Div. Maxon Electronics Corp.	Wallingford, Conn.
33173	G. E. Receiving Tube Dept.	Owensboro, Ky.	72962	Elastic Stop Nut Corp.	Union, N. J.	80223	United Transformer Corp.	New York, N. Y.
35434	Lectrohm Inc.	Chicago, Ill.	72964	Robert M. Hadley Co.	Los Angeles, Cal.	80248	Oxford Electric Corp.	Chicago, Ill.
36196	Stanwyck Coil Products Ltd.	Hawkesbury, Ontario, Canada	72982	Erie Technological Products, Inc.	Erie, Pa.	80294	Bourns Inc.	Riverside, Cal.
			73076	Hansen Mfg. Co., Inc.	Princeton, Ind.	80411	Arco Div. of Robertshaw Controls Co.	
36287	Cunningham, W. H. & Hill, Ltd.	Toronto, Ontario, Canada	73138	Helipot Div. of Beckman Inst., Inc.	Fullerton, Cal.			Columbus, Ohio
						80486	All Star Products Inc.	Defiance, Ohio
37942	P. R. Mallory & Co. Inc.	Indianapolis, Ind.	73293	Hughes Products Division of Hughes Aircraft Co.	Newport Beach, Cal.	80509	Avery Label Co.	Monrovia, Cal.
39543	Mechanical Industries Prod. Co.	Akron, Ohio	73445	Amperex Elect. Co.	Hicksville, L. I., N. Y.	80583	Hammamilton Co., Inc.	Mars Hill, N. C.
40931	Honeywell Inc.	Minneapolis, Minn.	73506	Bradley Semiconductor Corp.		80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
42190	Muter Co.	Chicago, Ill.			New Haven, Conn.	80813	Dimco Gray Co.	Dayton, Ohio
43990	C. A. Norgren Co.	Englewood, Colo.	73559	Carling Electric, Inc.	Hartford, Conn.	81030	International Inst. Inc.	Orange, Conn.
44655	Ohmite Mfg. Co.	Skokie, Ill.	73586	Circle F Mfg. Co.	Trenton, N. J.	81073	Grayhill Co.	LaGrange, Ill.
46384	Stan Eng. & Mfg. Corp.	Doylestown, Pa.	73682	George K. Garrett Co.		81095	Triad Transformer Corp.	Venice, Cal.
47904	Polaroid Corp.	Cambridge, Mass.		Div. MSL Industries, Inc.	Philadelphia, Pa.	81312	Winchester Elec. Div. Litton Ind. Inc.	Oakville, Conn.
48620	Precision Thermometer & Inst. Co.	Southampton, Pa.	73734	Federal Screw Products, Inc.	Chicago, Ill.			
49956	Microwave & Power Tube Div.	Waltham, Mass.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio	81349	Military Specification	
52090	Rowan Controller Co.	Westminster, Md.	73793	General Industries Co., The	Elyria, Ohio	81483	International Rectifier Corp.	El Segundo, Cal.
52983	HP Co., Med. Elec. Div.	Waltham, Mass.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81541	Airpax Electronics, Inc.	Cambridge, Maryland
54294	Shalleross Mfg. Co.	Selma, N. C.	73899	JFD Electronics Corp.	Brooklyn, N. Y.	81860	Barry Controls, Div. Barry Wright Corp.	Watertown, Mass.
55026	Simpson Electric Co.	Chicago, Ill.	73905	Jennings Radio Mfg. Corp.	San Jose, Cal.			
55933	Sonotone Corp.	Elmsford, N. Y.	73957	Groove-Pin Corp.	Ridgefield, N. J.	82042	Carter Precision Electric Co.	Skokie, Ill.
55938	Raytheon Co. Commercial Apparatus & System Div.	So. Norwalk, Conn.	74276	Signalite Inc.	Neptune, N. J.	82047	Sperit Faraday Inc. Copper Hewitt Electric Div.	Hoboken, N. J.
			74455	J. H. Winns, and Sons	Winchester, Mass.	82116	Electric Regulator Corp.	Norwalk, Conn.
56137	Spaulding Fibre Co., Inc.	Tonawanda, N. Y.	74861	Industrial Condenser Corp.	Chicago, Ill.	82142	Jeffers Electronics Division of Speer Carbon Co.	Du Bois, Pa.
56289	Sprague Electric Co.	North Adams, Mass.	74868	R. F. Products Division of Amphenol-Borg Electronic Corp.				
58474	Superior Elect. Co.	Bristol, Conn.			Danbury, Conn.	82170	Fairchild Camera & Inst. Corp.	Paramus, N. J.
59446	Telex Corp.	Tulsa, Okla.	74970	E. F. Johnson Co.	Waseca, Minn.	82209	Magurie Industries, Inc.	Greenwich, Conn.
59730	Thomas & Betts Co.	Elizabeth, N. J.	75042	International Resistance Co.	Philadelphia, Pa.	82219	Sylvania Electric Prod., Inc.	
60741	Triplet Electrical Inst. Co.	Bluffton, Ohio	75263	Keystone Carbon Co., Inc.	St. Marys, Pa.		Electronic Tube Division	Emporium, Pa.
61775	Union Switch and Signal Div. of Westinghouse Air Brake Co.	Pittsburgh, Pa.	75378	CTS Knights, Inc.	Sandwich, Ill.	82376	Astron Corp.	East Newark, Harrison, N. J.
62119	Universal Electric Co.	Owosso, Mich.	75382	Kulka Electric Corp.	Mt. Vernon, N. Y.	82389	Switchcraft, Inc.	Chicago, Ill.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N. Y.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.	82647	Metals & Controls Inc.	
64959	Western Electric Co., Inc.	New York, N. Y.	75915	Littlefuse, Inc.	Des Plaines, Ill.		Spencer Products	Attleboro, Mass.
65092	Weston Inst. Inc. Weston-Newark	Newark, N. J.	76005	Lord Mfg. Co.	Erie, Pa.	82768	Phillips-Advance Control Co.	Joliet, Ill.
66295	Witteck Mfg. Co.	Chicago, Ill.	76210	C. W. Marwedel	San Francisco, Cal.	82866	Research Products Corp.	Madison, Wis.
66346	Minnesota Mining & Mfg. Co.		76433	General Instrument Corp.		82877	Rolton Mfg. Co., Inc.	Woodstock, N. Y.
	Revere Mincom Div.	St. Paul, Minn.		Micamold Division	Newark, N. J.	82893	Vector Electronic Co.	Glendale, Cal.
70276	Allen Mfg. Co.	Hartford, Conn.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.	83058	Carr Fastener Co.	Cambridge, Mass.
70309	Allied Control	New York, N. Y.	76530	Cinch-Monadnock, Div. of United Carr Fastener Corp.	San Leandro, Cal.	83086	New Hampshire Ball Bearing, Inc.	Peterborough, N. H.
70318	Allmetal Screw Product Co., Inc.				Cleveland, Ohio			
		Garden City, N. Y.	76545	Mueller Electric Co.	Newark, N. J.	83125	General Instrument Corp.	
70417	Amplex, Div. of Chrysler Corp.	Detroit, Mich.	76703	National Union	Newark, N. J.		Capacitor Div.	Darlington, S. C.
70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.	83148	ITT Wire and Cable Div.	Los Angeles, Cal.
70563	Ameripet Co., Inc.	Union City, N. J.	77068	The Bendix Corp.		83186	Victory Eng. Corp.	Springfield, N. J.
70674	ADC Products Inc.	Minneapolis, Minn.		Electrodynamics Div.	N. Hollywood, Cal.	83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.
70903	Belden Mfg. Co.	Chicago, Ill.	77075	Pacific Metals Co.	San Francisco, Cal.	83315	Hubbell Corp.	Mundelein, Ill.
70998	Bird Electric Corp.	Cleveland, Ohio	77221	Phaostran Instrument and Electronic Co.	So. Pasadena, Cal.	83324	Rosan Inc.	Newport Beach, Cal.
71002	Birnbach Radio Co.	New York, N. Y.				83330	Smith, Herman H., Inc.	Brooklyn, N. Y.
71034	Bliley Electric Co., Inc.	Erie, Pa.	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.	83332	Tech Labs	Palisades Park, N. J.
71041	Boston Gear Works Div. of Murray Co. of Texas	Quincy, Mass.				83385	Central Screw Co.	Chicago, Ill.
71218	Bud Radio, Inc.	Willoughby, Ohio	77342	American Machine & Foundry Co.		83501	Gavitt Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.
71279	Cambridge Thermionics Corp.	Cambridge, Mass.		Potter & Brumfield Div.	Princeton, Ind.			
71286	Camloc Fastener Corp.	Paramus, N. J.	77630	TRW Electronic Components Div.	Camden, N. J.	83594	Burroughs Corp., Electronic Tube Div.	Plainfield, N. J.
71313	Cardwell Condenser Corp.		77638	General Instrument Corp.				
		Lindenhurst, L. I., N. Y.		Rectifier Division	Brooklyn, N. Y.	83740	Union Carbide Corp., Consumer Prod. Div.	New York, N. Y.
71400	Bussmann Mfg. Div. of McGraw-Edison Co.	St. Louis, Mo.	77764	Resistance Products Co.	Harrisburg, Pa.	83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
71436	Chicago Condenser Corp.	Chicago, Ill.	77969	Rubbercraft Corp. of Calif.	Torrance, Cal.	83821	Loyd Scruggs Co.	Festus, Mo.
71447	Calif. Spring Co., Inc.	Pico-Rivera, Cal.	78189	Shakeproof Division of Illinois Tool Works	Elgin, Ill.	83942	Aeronautical Inst. & Radio Co.	Lodi, N. J.
71450	CTS Corp.	Elkhart, Ind.	78277	Sigma	So. Braintree, Mass.	84171	Arco Electronics Inc.	Great Neck, N. Y.
71468	ITT Cannon Electric Inc.	Los Angeles, Cal.	78283	Signal Indicator Corp.	New York, N. Y.	84396	A. J. Giesener Co., Inc.	San Francisco, Cal.
71471	Cinema, Div. Aerovox Corp.	Burbank, Cal.	78290	Struthers-Dunn Inc.	Pitman, N. J.	84411	TRW Capacitor Div.	Ogallala, Neb.

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkes Tarzian, Inc.	Bloomington, Ind.	91929	Honeywell Inc., Micro Switch Division	Freeport, Ill.	96095	Hi-Q Div. of Aerovox Corp.	Olean, N.Y.
85454	Boonton Molding Company	Boonton, N.J.	91961	Nahm-Bros. Spring Co.	Oakland, Cal.	96256	Thordarson-Meissner Inc.	Mt. Carmel, Ill.
85471	A. B. Boyd Co.	San Francisco, Cal.	92180	Tru-Connector Corp.	Peabody, Mass.	96296	Solar Mfg. Co.	Los Angeles, Cal.
85474	R. M. Bracamonte & Co.	San Francisco, Cal.	92367	Elgeet Optical Co., Inc.	Rochester, N.Y.	96396	Microswitch, Div. of	Freeport, Ill.
85660	Koiled Kords, Inc.	Hamden, Conn.	92607	Tensolite Insulated Wire Co., Inc.	Tarrytown, N.Y.	96330	Carlton Screw Co.	Chicago, Ill.
85911	Seamless Rubber Co.	Chicago, Ill.	92702	IMC Magnetics Corp.	Westbury, L.I., N.Y.	96341	Microwave Associates, Inc.	Burlington, Mass.
86174	Fafnir Bearing Co.	Los Angeles, Calif.	92966	Hudson Lamp Co.	Kearney, N.J.	96501	Excel Transformer Co.	Oakland, Cal.
86197	Clifton Precision Products Co., Inc.	Clifton Heights, Pa.	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	96508	Xcelite, Inc.	Orchard Park, N.Y.
86579	Precision Rubber Products Corp.	Dayton, Ohio	93369	Robbins & Myers Inc.	Pallisades Park, N.J.	96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
86684	Radio Corp. of America, Electronic Comp. & Devices Division	Harrison, N.J.	93410	Stemco Controls, Div. of Essex Wire Corp.	Mansfield, Ohio	96881	Thomson Ind. Inc.	Long Island, N.Y.
86928	Seastrom Mfg. Co.	Glendale, Cal.	93632	Waters Mfg. Co.	Culver City, Cal.	97464	Industrial Retaining Ring Co.	Irvington, N.J.
87034	Marco Industries	Anaheim, Cal.	93929	G. V. Controls	Livingston, N.J.	97539	Automatic & Precision Mfg.	Englewood, N.J.
87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	94137	General Cable Corp.	Bayonne, N.J.	97979	Reon Resistor Corp.	Yonkers, N.Y.
87473	Western Fibrous Glass Products Co.	San Francisco, Cal.	94144	Raytheon Co., Comp. Div., Ind. Comp. Operations	Quincy, Mass.	97983	Litton System Inc., Adler-Westrex Commun. Div.	New Rochelle, N.Y.
87664	Van Waters & Rogers Inc.	San Francisco, Cal.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	98141	R-Tronics, Inc.	Jamaica, N.Y.
87930	Tower Mfg. Corp.	Providence, R.I.	94154	Wagner Elect. Corp., Tung-Sol Div.	Newark, N.J.	98159	Rubber Teck, Inc.	Gardena, Cal.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94197	Curtiss-Wright Corp., Electronics Div.	East Patterson, N.J.	98220	Hewlett-Packard Co., Medical Elec. Div.	Pasadena, Cal.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94222	South Chester Corp.	Chester, Pa.	98278	Microdot, Inc.	So. Pasadena, Cal.
88698	General Mills, Inc.	Buffalo, N.Y.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98291	Sealectro Corp.	Mamaronech, N.Y.
89231	Graybar Electric Co.	Oakland, Cal.	94375	Automatic Metal Products Co.	Brooklyn, N.Y.	98376	Zero Mfg. Co.	Burbank, Cal.
89473	G. E. Distributing Corp.	Schenectady, N.Y.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	98410	Etc. Inc.	Cleveland, Ohio
89479	Security Co.	Detroit, Mich.	94696	Magnecraft Electric Co.	Chicago, Ill.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
89665	United Transformer Co.	Chicago, Ill.	95023	George A. Philbrick Researchers, Inc.	Boston, Mass.	98734	Paeco Division of Hewlett-Packard Co.	Palo Alto, Cal.
90030	United Shoe Machinery Corp.	Beverly, Mass.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	98821	North Hills Electronics, Inc.	Glen Cove, N.Y.
90179	U. S. Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N.J.	95236	Allies Products Corp.	Dania, Fla.	98978	International Electronic Research Corp.	Burbank, Cal.
90365	Belleville Speciality Tool Mfg., Inc.	Belleville, Ill.	95238	Continental Connector Corp.	Woodside, N.Y.	99109	Columbia Technical Corp.	New York, N.Y.
90763	United Carr Fastener Corp.	Chicago, Ill.	95263	Leecraft Mfg. Co., Inc.	Long Island, N.Y.	99313	Varian Associates	Palo Alto, Cal.
90970	Bearing Engineering Co.	San Francisco, Cal.	95265	National Coil Co.	Sheridan, Wyo.	99378	Atlee Corp.	Winchester, Mass.
91146	ITT Cannon Elect. Inc., Salem Div.	Salem, Mass.	95275	Vitramon, Inc.	Bridgeport, Conn.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
91260	Connor Spring Mfg. Co.	San Francisco, Cal.	95348	Gordos Corp.	Bloomfield, N.J.	99707	Control Switch Division, Controls Co. of America	El Segundo, Cal.
91345	Miller Dial & Nameplate Co.	El Monte, Cal.	95354	Methode Mfg. Co.	Rolling Meadows, Ill.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
91418	Radio Materials Co.	Chicago, Ill.	95566	Arnold Engineering Co.	Marengo, Ill.	99848	Wilco Corporation	Indianapolis, Ind.
91506	Augat Inc.	Attleboro, Mass.	95712	Dage Electric Co., Inc.	Franklin, Ind.	99928	Branson Corp.	Whippany, N.J.
91637	Dale Electronics, Inc.	Columbus, Nebr.	95984	Siemon Mfg. Co.	Wayne, Ill.	99934	Rembrandt, Inc.	Boston, Mass.
91662	Elco Corp.	Willow Grove, Pa.	95987	Weckesser Co.	Chicago, Ill.	99942	Hoffman Electronics Corp., Semiconductor Division	El Monte, Cal.
91673	Epiphone Inc.	New York, N.Y.	96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.	99957	Technology-Instrument Corp. of California	Newbury Park, Cal.
91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.						
91827	K F Development Co.	Redwood City, Cal.						
91886	Malco Mfg., Inc.	Chicago, Ill.						

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado Springs Div.	Colorado Springs, Colorado	000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N.J.	000MM	Rubber Eng. & Development	Hayward, Cal.	000WW	California Eastern Lab.	Burlington, Cal.
000AB	ETA	England	000NN	A "N" D Mfg. Co.	San Jose, Cal.	000YY	S. K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.						

SUPPLEMENTAL CODE LIST OF MANUFACTURERS

Code No.	Manufacturer	Address
12040	NATIONAL SEMICONDUCTOR CORP.	DANBURY, CONN.
23880	STANFORD APPLIED ENGINEERING	SANTA CLARA, CALIF.

ELECTRONIC

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA
P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
TWX: 910-951-1330

5737 East Broadway
Tucson 85711
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA
1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
TWX: 910-592-1288

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

6305 Arizona Place
Los Angeles 90045
Tel: (213) 649-2511
TWX: 910-328-6148

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-5500
TWX: 910-373-1280

2220 Watt Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

9606 Aero Drive
San Diego 92123
Tel: (714) 279-3200
TWX: 910-335-2000

COLORADO
7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA
P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando, 32809
Tel: (305) 859-2900
TWX: 810-850-0113

GEORGIA
P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

HAWAII
2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455

ILLINOIS
5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA
3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA
P.O. Box 856
3239 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-9157

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN
21840 West Nine Mile Road
Southfield 48075
Tel: (313) 353-9100
TWX: 810-224-4882

MINNESOTA
2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

148 Weldon Parkway
Maryland Heights 63043
Tel: (314) 567-1455
TWX: 910-764-0830

***NEVADA**
Las Vegas
Tel: (702) 382-5777

NEW JERSEY
W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

1060 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO
P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 265-3713
TWX: 910-989-1665

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-441-8270

1219 Campville Road
Endicott 13750
Tel: (607) 754-0050
TWX: 510-252-0890

New York City
Manhattan, Bronx
Contact Paramus, NJ Office
Tel: (201) 285-5000
Brooklyn, Queens, Richmond
Contact Woodbury, NY Office
Tel: (516) 921-0300

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
TWX: 510-221-2168

NORTH CAROLINA
P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 510-926-1516

OHIO
25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

3460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

1120 Morse Road
Columbus 43229
Tel: (614) 846-1300

OKLAHOMA
P.O. Box 32008
Oklahoma City 73132
Tel: (405) 721-0200
TWX: 910-830-6862

OREGON
17890 SW Boones Ferry Road
Tualatin 97062
Tel: (503) 620-3350
TWX: 910-467-8714

PENNSYLVANIA
2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

RHODE ISLAND
873 Waterman Ave.
East Providence 02914
Tel: (401) 434-5535
TWX: 710-381-7573

***TENNESSEE**
Memphis
Tel: (901) 274-7472

TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

P.O. Box 27409
6300 Westpark Drive
Suite 100
Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645

231 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH
2890 South Main Street
Salt Lake City 84115
Tel: (801) 482-0715
TWX: 910-925-5681

VIRGINIA
P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 285-3431
TWX: 710-956-0157

WASHINGTON
433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

***WEST VIRGINIA**
Charleston
Tel: (304) 768-1232

WISCONSIN
9431 W. Beloit Road
Suite 117
Milwaukee 53227
Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED:
Contact the regional office nearest you: Atlanta, Georgia... North Hollywood, California... Paramus, New Jersey... Skokie, Illinois. Their complete addresses are listed above.
***Service Only**

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11748 Kingsway Ave.
Edmonton
Tel: (403) 452-3670
TWX: 610-831-2431

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
4519 Canada Way
North Burnaby 2
Tel: (604) 433-8213
TWX: 610-922-5059

MANITOBA
Hewlett-Packard (Canada) Ltd.
513 Century St.
Winnipeg
Tel: (204) 785-7581
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 206
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO
Hewlett-Packard (Canada) Ltd.
1785 Woodward Dr.
Ottawa 3
Tel: (613) 255-6180, 255-6530
TWX: 610-562-8968

Hewlett-Packard (Canada) Ltd.
50 Galaxy Blvd.
Rexdale
Tel: (416) 677-9611
TWX: 610-492-4246

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina
S.A.C.e.I.
Lavalle 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0341
Telex: 012-1009
Cable: HEWPACK ARG

BRAZIL
Hewlett-Packard Do Brasil
I.E.C. LTDA.
Rua Frei Caneca 1119
01307-Sao Paulo - 3, SP
Tel: 288-7111, 287-5858
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil
I.E.C. LTDA.
Praça Dom Feliciano 78
Salas 806/808
9000-Porto Alegre RS
Rio Grande do Sul (RS)-Brasil
Tel: 25-8470
Cable: HEWPACK Porto Alegre

Hewlett-Packard Do Brasil
I.E.C. LTDA.
Rua da Matriz 29
2000-Rio de Janeiro, GB
Tel: 265-2643
Cable: HEWPACK Rio de Janeiro

BOLIVIA
Stambuk & Mark (Bolivia) LTDA.
Av. Mariscal, Santa Cruz 1342
La Paz
Tel: 40626, 53163, 52421
Telex: 3560014
Cable: BUXMAR

CHILE
Héctor Calcagni y Cia, Ltda.
Casilla 16.475
Santiago
Tel: 423 96
Cable: CALCAGNI Santiago

COLOMBIA
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-59
Apartado Aéreo 6287
Bogotá, 1 D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogotá
Telex: 44400INSTCO

COSTA RICA
Lic. Alfredo Callegos Gudián
Apartado 10159
San José
Tel: 21-85-13
Cable: GALTUR San José

ECUADOR
Laboratorios de Radio-Ingeniería
Calle Guayaquil 1246
Post Office Box 3139
Quito
Tel: 212-496; 219-185
Cable: HORVATH Quito

EL SALVADOR
Electronic Associates
Apartado Postal 1682
Centro Comercial Gigante
San Salvador, El Salvador C.A.
Paseo Escalón 4649-4° Piso
Tel: 23-44-60, 23-32-37
Cable: ELECAS

GUATEMALA
IPESA
Sa via 2-01, Zona 4
Guatemala City
Tel: 63-6-27 & 64-7-86
Telex: 4192 TELTRO GU

MEXICO
Hewlett-Packard Mexicana, S.A.
de C.V.
Adolfo Prieto 622
Col. del Valle
Mexico 12, D.F.
Tel: 543-4232; 523-1874
Telex: 017-74-507

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA
Electrónico Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 230833
Telex: 3481003, Curundu,
Canal Zone
Cable: ELECTRON Panama City

***PARAGUAY**
Z.J. Melamed S.R.L.
Division: Aparatos y Equipos
Médicos
Salón de Exposición y Escritorio:
Chile 482
Edificio Victoria—Planta Baja
Asunción, Paraguay
Tel: 4-5069, 4-6272
Cable: RAMEL

PERU
Compañía Electro Médica S.A.
Ave. Enrique Canaval 312
San Isidro
Casilla 1030
Lima
Tel: 22-3900
Cable: ELMED Lima

PUERTO RICO
San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3-PTA de Tierra
San Juan 00906
Tel: (809) 725-3342, 722-3342
Cable: SATRONICS San Juan
Telex: SATRON 3450 332

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard De Venezuela
C.A.
Apartado 50933
Caracas
Tel: 71.88.05, 71.88.69, 71.99.30
Cable: HEWPACK Caracas
Telex: 21146 HEWPACK

FOR AREAS NOT LISTED,

CONTACT:
Hewlett-Packard
Inter-Americas
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 493-1501
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

EUROPE

AUSTRIA

Hewlett-Packard Ges.m.b.H.
Handelskassa 52/3
P.O. Box 7
A-1205 Vienna
Tel: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BELGIUM

Hewlett-Packard Benelux
S.A. N.V.
Avenue du Col-Vert, 1
B-1170 Brussels
Tel: 102 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494 paloben brv

DENMARK

Hewlett-Packard A/S
Datavej 38
DK-3460 Birkerød
Tel: (01) 81 66 40
Cable: HEWPAK AS
Telex: 166 40 hp as

FINLAND

Hewlett-Packard Oy
Bulevardi 26
P.O. Box 12185
SF-00120 Helsinki 12
Tel: (80) 13730
Cable: HEWPAK OY Helsinki
Telex: 12-15363 hel

FRANCE

Hewlett-Packard France
Quartier de Courtabœuf
Boite Postale No. 6
F-91401 Orsay
Tel: (1) 907 78 25
Cable: HEWPAK Orsay
Telex: 60048

GERMANY

Hewlett-Packard France
4 Quai des Etoiles
F-69321 Lyon Cedex 1
Tel: (78) 42 63 45
Cable: HEWPAK Lyon
Telex: 31617

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Börnerstrasse 117
Postfach 560 140
D-6000 Frankfurt 56
Tel: (0611) 50 04-1
Cable: HEWPAKSA Frankfurt
Telex: 41 32 49 fra

IRELAND

Hewlett-Packard GmbH
Vertriebsbüro Böhlingen
Herrenbergstrasse 110
D-7030 Böhlingen, Württemberg
Tel: (07031) 66 72 87
Cable: HEPAK Böhlingen
Telex: 72 85 739 bbn

NETHERLANDS

Hewlett-Packard GmbH
Vertriebsbüro Düsseldorf
Vogelsanger Weg 38
D-4000 Düsseldorf
Tel: (0211) 63 80 31 35
Cable: HEWPAKSA Hamburg
Telex: 85/86 533 hppd d

NETHERLANDS

Hewlett-Packard GmbH
Vertriebsbüro Hamburg
Wendenstr. 23
D-2000 Hamburg 1
Tel: (0411) 24 05 51/52
Cable: HEWPAKSA Hamburg
Telex: 21 63 032 hpph d

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

NETHERLANDS

Hewlett-Packard Italiana S.p.A.
Via Meravigli 117
I-20124 Milan
Tel: (02) 6751 (10 lines)
Cable: HEWPAKITA Milan
Telex: 32046

AFRICA, ASIA, AUSTRALIA

ANGOLA

Teletra Empresa Técnica
de Equipamentos Eléctricos
SAR
Rua de Barbosa Rodrigues
42-1°
Box 6487
Luanda
Cable: TELETRA Luanda

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20-1371 (6 lines)
Cable: HEWPAK Melbourne
Telex: 31 024

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
Corner Bridge & West Streets
Pymble, New South Wales, 2073
Tel: 449 6566
Cable: HEWPAK Sydney
Telex: 21561

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 65-2366
Cable: HEWPAK Adelaide
Telex: 21561

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, Suite 13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 25-6800
Cable: HEWPAK Perth
Telex: 21561

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
10 Woolley Street
P.O. Box 191
Dickson A.C.T. 2602
Tel: 49-8194
Cable: HEWPAK Canberra ACT
Telex: 21561

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, 49 Gregory Terrace
Brisbane, Queensland, 4000
Tel: 29 1544

CEYLON

United Electricals Ltd.
P.O. Box 681
60, Park St.
Colombo 2
Tel: 26696
Cable: HOTPOINT Colombo
Telex: 26696

CYPRUS

Kyprionics
39 Gregorios & Xenopoulos Road
P.O. Box 1152
CY-Nicosia
Tel: 45628/29
Cable: KYPRONICS PANDEHIS
Telex: 45628/29

ETHIOPIA

African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa
Telex: 12285

HONG KONG

Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building 15th Floor
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong
Telex: 240168

INDIA

Blue Star Ltd.
Kasturi Buildings
Jamsheji Tata Rd.
Bombay 400 020
Tel: 29 50 21
Telex: 3751
Cable: BLUESTAR
Telex: 3751

INDIA

Blue Star Ltd.
Band Box House
Prabhadevi
Bombay 400 025
Tel: 45 73 01
Telex: 3751
Cable: BLUESTAR
Telex: 3751

INDIA

Blue Star Ltd.
14/40 Civil Lines
Kampur 208 001
Tel: 6 88 82
Cable: BLUESTAR
Telex: 3751

INDIA

Blue Star Ltd.
Blue Star House,
34 Ring Road
Lajpat Nagar
New Delhi 110 024
Tel: 62 32 76
Telex: 463
Cable: BLUESTAR
Telex: 463

INDIA

Blue Star Ltd.
Blue Star House,
11/11A Mayapath Road
Bangalore 560 025
Tel: 51473
Telex: 430
Cable: BLUESTAR
Telex: 430

INDIA

Blue Star Ltd.
1-1-117/1
Sarajin Devi Road
Secunderabad 500 003
Tel: 7 63 91, 7 73 93
Cable: BLUEFROST
Telex: 459

INDIA

Blue Star Ltd.
23 24 Second Line Beach
Madras 600 001
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR
Telex: 379

INDIA

Blue Star Ltd.
18 Kaiser Bungalow
Dindli Road
Jamshedpur 831 001
Tel: 38 04
Cable: BLUESTAR
Telex: 240

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Blue Star Ltd.
1-1-117/1
Sarajin Devi Road
Secunderabad 500 003
Tel: 7 63 91, 7 73 93
Cable: BLUEFROST
Telex: 459

INDONESIA

Blue Star Ltd.
23 24 Second Line Beach
Madras 600 001
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR
Telex: 379

INDONESIA

Blue Star Ltd.
18 Kaiser Bungalow
Dindli Road
Jamshedpur 831 001
Tel: 38 04
Cable: BLUESTAR
Telex: 240

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Blue Star Ltd.
1-1-117/1
Sarajin Devi Road
Secunderabad 500 003
Tel: 7 63 91, 7 73 93
Cable: BLUEFROST
Telex: 459

INDONESIA

Blue Star Ltd.
23 24 Second Line Beach
Madras 600 001
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR
Telex: 379

INDONESIA

Blue Star Ltd.
18 Kaiser Bungalow
Dindli Road
Jamshedpur 831 001
Tel: 38 04
Cable: BLUESTAR
Telex: 240

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Blue Star Ltd.
1-1-117/1
Sarajin Devi Road
Secunderabad 500 003
Tel: 7 63 91, 7 73 93
Cable: BLUEFROST
Telex: 459

INDONESIA

Blue Star Ltd.
23 24 Second Line Beach
Madras 600 001
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR
Telex: 379

INDONESIA

Blue Star Ltd.
18 Kaiser Bungalow
Dindli Road
Jamshedpur 831 001
Tel: 38 04
Cable: BLUESTAR
Telex: 240

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915, 51560
Cable: ILMU
Telex: 08-809