


3745 Communication Controller All Models
3746 Nways Multiprotocol Controller Model 900



Console Setup Guide

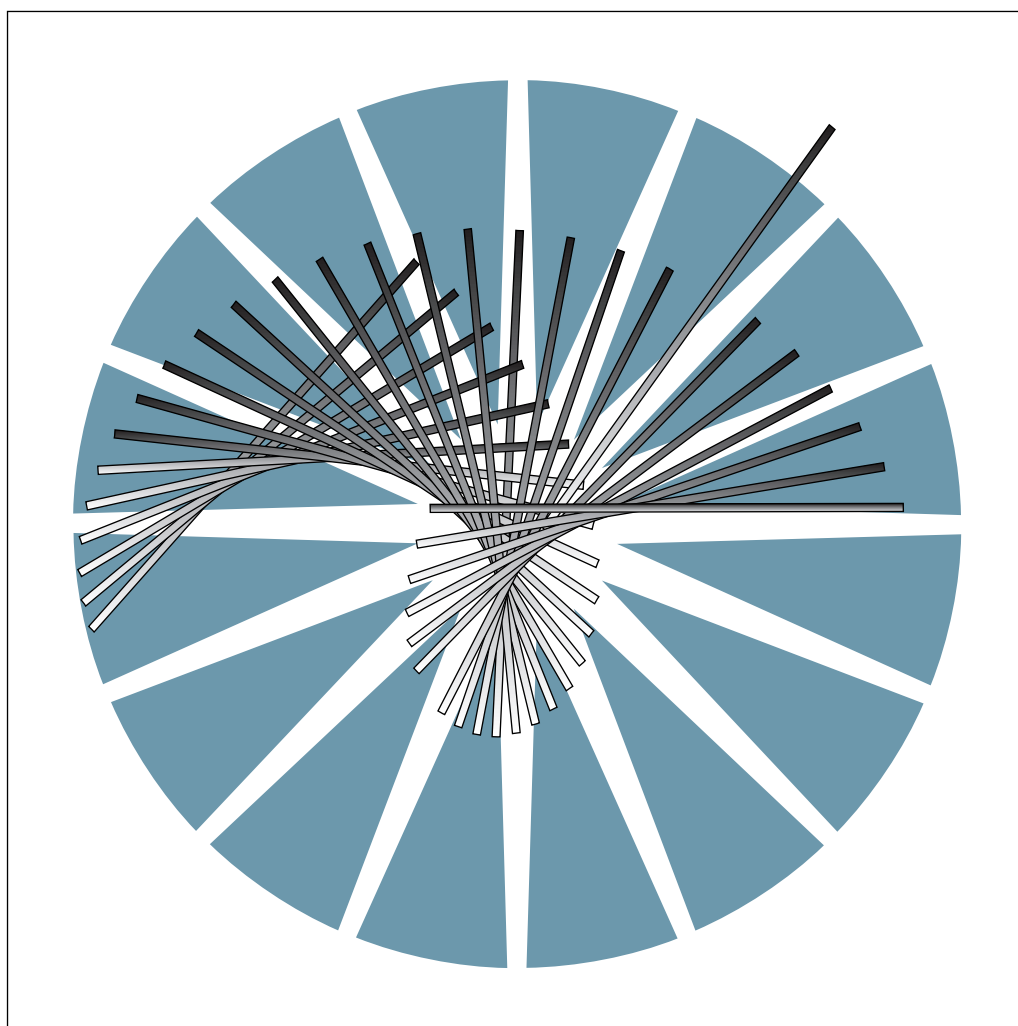

3745 Communication Controller All Models
3746 Nways Multiprotocol Controller Model 900



Console Setup Guide

Note!

Before using this information and the product it supports, be sure to read the general information under "Notices" on page ix.

Ninth Edition (September 1997)

The information contained in this manual is subject to change from time to time. Any such changes will be reported in later revisions.

Order publications through your IBM* representative or the IBM branch office serving your locality. Publications are not stocked at the address given below.

A form for readers' comments appears at the back of this publication. If the form has been removed, address your comments to:

IBM France
Centre d'Etudes et Recherches
Service 0798 - BP 79
06610 La Gaude
France

- FAX: (33) 4 93 24 77 97
- E-mail: FRIBMQF5 at IBMMAIL
- IBM Internal Use: LGERCF at LGEPROFS
- Internet: rcf_lagaude:@vnet.ibm.com

When you send information to IBM, you grant IBM a non-exclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

© **Copyright International Business Machines Corporation 1989, 1997. All rights reserved.**

Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Contents

Figures	vii
Tables	vii
Notices	ix
European Union (EU) Statement	ix
Electronic Emission Notices	ix
Trademarks and Service Marks	xi
Safety	xi
About this Guide	xiii
Conventions Used in this Guide	xiii
Who Should Use this Guide	xiv
How this Guide is Organized	xiv
What is New in this Guide	xv
3746-9x0 Performance and Availability	xv
Multiprotocol Support	xv
Network Management	xv
Where to Find More Information	xvi
World Wide Web	xvi

Part 1. 3745 Models A and 3746 Model 900

Chapter 1. Introduction to Consoles and DCAF	1-1
Consoles	1-1
Diskettes with Example Configurations	1-3
DCAF Logon Password and Service Processor Security	1-3
Regaining Control of the Service Processor	1-4
Minimum Workstation Configuration	1-4
Programming Requirements	1-4
Hardware Requirements and Recommendations	1-5
Chapter 2. DCAF Session Installation	2-1
Summary of Procedures	2-1
Preparation	2-2
Physical Installation	2-2
Installing DCAF	2-2
Upgrading DCAF	2-3
Installing TCP/IP	2-3
Customizing CS/2 and CM/2	2-3
Customizing a Remote Workstation	2-4
Configuring Data Link Control (DLC) for a Service Processor	2-5
Chapter 3. Using DCAF to Remotely Log On to the Service Processor	3-1
Starting a Session	3-1
Closing a Session	3-3
Chapter 4. LAN-Attached (TCP/IP Type) Remote Workstation	4-1
Installing a Remote Workstation (LAN-Attached TCP/IP Type)	4-2

Customizing DCAF	4-2
Installing a Target Service Processor	4-5
Chapter 5. LAN-Attached (APPC Type) Remote Workstation	5-1
Installing a Remote Workstation (LAN-Attached APPC Type)	5-2
Installing a Target Service Processor	5-10
Chapter 6. Modem-Attached Remote Workstation	6-1
Configuring Modems in CS/2 and CM/2	6-2
Setting Parameter Values for Modems	6-2
CS/2 and CM/2 Configuration Files	6-2
Modem Configuration	6-3
Tables of Procedures for Configuring Modems	6-3
Modem 7855 in Synchronous Mode to Service Processor 9577, 9585, and 3172 via MPA Card in Synchronous Mode	6-5
Procedure 1 - Configuration File I7855SYN	6-5
Modem 7855 in Asynchronous Mode to Service Processor 9577, 9585, 3172, and 7585 via Serial Port	6-10
Procedure 2 - Configuration File I7855ASY	6-10
Modem 7857 in Synchronous Mode to Service Processor 9577, 9585, and 3172 via MPA Card in Synchronous Mode	6-15
Procedure 3 - Configuration File I7857SYN	6-15
Modem 7857 in Asynchronous Mode to Service Processor 9577, 9585, 3172, and 7585 via Serial Port	6-21
Procedure 4 - Configuration file I7857ASY	6-21
Modem 7857 in Auto-Synchronous Mode to Service Processor 9577, 9585, and 3172 via MPA Card in Synchronous Mode	6-26
Procedure 5 - Configuration file I7857AUT	6-26
Hayes Modem in Asynchronous Mode to Service Processor 9577, 9585, 3172, and 7585 via Serial Port	6-31
Procedure 6 - Configuration file HAYESASY	6-31
Hayes Modem in Auto-Synchronous Mode to Service Processor 9577, 9585, and 3172 via MPA Card in Synchronous Mode	6-36
Procedure 7 - Configuration file HAYESAUT	6-36
Customizing DCAF	6-41
Chapter 7. SNA-Attached Remote Workstation	7-1
Installing a Remote Workstation (SNA-Attached)	7-2
NCP Definitions	7-10
Remote Controlling Workstation	7-10
Target Service Processor	7-11
VTAM Definitions	7-12
Start Definitions	7-12
Logmode Table	7-12
Major Node Definitions	7-13
Chapter 8. APPN-Attached Remote Workstation	8-1
Installing a Remote Workstation (APPN-Attached)	8-2
Installing a Target Service Processor	8-11
CCM Definitions for DCAF	8-13
Chapter 9. Telnet-attached Remote Workstation	9-1
Introduction	9-1
Consoles	9-1

Logon Password	9-2
Programming Requirements	9-2
Hardware Requirements and Recommendations	9-2
Installation	9-2
Using Telnet to Remotely Log On to the Network Node Processor	9-2
Starting a Session	9-2
Closing a Session	9-2

Part 2. 3745 Models 130 to 610

Chapter 10. Setting Up a Local or an Alternate Console	10-1
General Information on Local or Alternate consoles	10-1
3151 in Native Mode (Local or Alternate)	10-2
3151 in 3101 Emulation Mode (Local or Alternate)	10-3
3153 in 3151 Emulation Mode (Local or Alternate)	10-5
Starting the Console Configuration	10-5
Leaving the Console Configuration	10-6
3161 or 3163 (Local or Alternate)	10-6
IBM PS/2 (Local or Alternate)	10-6
MOSS Local or Alternate Console Emulation with CM/2 and Softerm	10-9
3727	10-9
Testing a Connection with the Local or Alternate Console	10-10
Chapter 11. Setting Up a Remote Console	11-1
General Information (Remote)	11-1
3151 in Native Mode (Remote)	11-2
3151 in 3101 Emulation Mode (Remote)	11-3
3153 in 3151 Emulation Mode (Remote)	11-5
Starting the Console Configuration	11-5
Closing the Console Configuration	11-6
3161 or 3163 (Remote)	11-6
IBM PC	11-6
IBM PS/2 (Remote)	11-7
MOSS Remote Console Emulation with CM/2 and Softerm	11-10
Starting Custom Plus	11-10
Defining a New Session	11-10
Ending Definition of a New Session	11-12
Other Types of Consoles	11-13
Testing the Modem Connection to a Remote Console	11-13
Chapter 12. Setting Up Modems	12-1
Modems for 3745 Models 130 to 160	12-1
Setting Up	12-1
Switch Settings for IBM Modems 5841, 5842, and 5853	12-2
Modems for 3745 Models A	12-2
Settings for IBM Modems 7855, 7857, and 7858	12-2
Chapter 13. RSF Modems	13-1
IBM 5858 Modem	13-1
IBM 7855 Modem	13-1
IBM 7857 Modem	13-1

Part 3. Appendixes for 3745 Model A and 3746 Model 900

Appendix A. Configuration for a Two-Target Remote Workstation	A-1
NCP Definitions	A-2
VTAM Definitions	A-2
Start List	A-2
Logmode Table	A-3
Switched Major Nodes	A-3
DCAF Remote Workstation Configuration	A-4
 Appendix B. Configuring DLC for DCAF	 B-1

Part 4. Appendixes for 3745 Models 130 to 610

Appendix C. Location of 3745 Console Connectors	C-1
3745 Communication Controller Models 130, 150, 160, and 170	C-1
3745 Communication Controller Models 210, 310, 410, and 610	C-1
 Appendix D. Console and RSF Interface Cables	 D-1
Cable from the 3745 to a Local Console	D-1
Cable from the 3745 to an Alternate Console	D-2
Cable Adapters for Local/Alternate Console	D-2
Console Connection through the IBM 7427 Console Switching Unit	D-3
Cable from the 3745 to the 7427 Switching Unit (A)	D-3
Cable from the 7427 to a 31xx, PS/2, or PC Console (B)	D-3
Cable from the 7427 to a 3727 Console (B)	D-3
Remote Console Cable	D-4
Cable to Modem for RSF	D-4

Part 5. Bibliography, Abbreviations, Glossary, and Index

Bibliography	X-1
Customer Documentation for the IBM 3745 (Models 210, 310, 410, 610, 21A, 31A, 41A, and 61A), and 3746 (Model 900)	X-1
Additional Customer Documentation for the IBM 3745 Models 130, 150, 160, 170, and 17A	X-5
 List of Abbreviations	 X-1
 Glossary	 X-3
 Index	 X-7

Figures

1-1.	DCAF Console Attachments	1-2
4-1.	Token-Ring LAN (TCP/IP Type) Configuration	4-1
5-1.	Token-Ring LAN (APPC Type) Configuration	5-1
6-1.	Modem-Attached Configuration	6-1
7-1.	SNA Configuration	7-1
8-1.	APPN Configuration	8-1
9-1.	Telnet Workstation Configuration	9-1
A-1.	A Two-Target Configuration	A-1

Tables

2-1.	DCAF Session Installation Procedures	2-1
6-1.	Modem Connections between a Remote Workstation and Target Service Processors 9577 and 9585	6-3
6-2.	Modem Connections between a Remote Workstation and a Target Service Processor 3172	6-4
6-3.	Modem Connections between a Remote Workstation and a Target Service Processor 7585	6-5
X-1.	Customer Documentation for the 3745 Models x10 and x1A, and 3746 Model 900	X-1
X-2.	Additional Customer Documentation for the 3745 Models 1x0 and 17A	X-5

Notices

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of IBM's intellectual property rights may be used instead of the IBM product, program, or service. Evaluation and verification of operation in conjunction with other products, except those expressly designated by IBM, is the user's responsibility.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the IBM Director of Licensing, IBM Corporation, 500 Columbus Avenue, Thornwood, New York 10594, U.S.A.

European Union (EU) Statement

This product is in conformity with the protection requirements of EU Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM can not accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

Electronic Emission Notices

Federal Communications Commission (FCC) Statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Compliance Statement

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis de conformité aux normes d'Industrie Canada

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Japanese Voluntary Control Council For Interference (VCCI) Statement

This equipment is in the 1st Class category (information equipment to be used in commercial and/or industrial areas) and conforms to the standards set by the Voluntary Control Council for Interference by Information Technology Equipment aimed at preventing radio interference in commercial and industrial areas.

Consequently, when used in a residential area or in an adjacent area thereto, radio interference may be caused to radios and TV receivers, and so on.

Read the instructions for correct handling.

Korean Communications Statement

Please note that this device has been approved for business purpose with regard to electromagnetic interference. If you find this is not suitable for your use, you may exchange it for a non-business one.

New Zealand Radiocommunications (Radio) Regulations

Attention: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Trademarks and Service Marks

The following terms, denoted by an asterisk (*), used in this publication, are trademarks or service marks of IBM Corporation in the United States or other countries:

AIX
APPN
CM/2
CS/2
DCAF
HPR
IBM
NetView
Nways

OS/2
PC/AT
PC/XT
PS/2
RETAIN
S/390
Softterm
VTAM

Safety

This product meets IBM Safety standards as referred to in *Safety Information*, GA33-0400.

About this Guide

This guide includes information about:

- Installing and using the IBM Distributed Console Access Facility (DCAF*) program for remote consoles of 3745 Model A and the 3746-900. The service processor operates as a DCAF target workstation for the IBM 3745 Communication Controller Models 17A to 61A and IBM 3726 Nways Multiprotocol Controller Model 900.
- Installing, upgrading, and customizing Communications Server (CS/2*) or Communications Manager/2 (CM/2*) for the Local Area Network (LAN) - Advanced Program-to-Program Communication (APPC), Modem, System Network Architecture (SNA), and Advanced Peer-to-Peer Networking (APPN*)/High Performance Routing (HPR*) links.
- Installing, upgrading, and customizing DCAF for LAN-APPC, LAN-TCP/IP, Modem, SNA, and APPN/HPR links.
- Configuring the Remote Support Facility (RSF) modem of the service processor for links with workstation modems.
- Installing and using Telnet Client in remote consoles to access network node processors for Internet Protocol (IP) communications.

Conventions Used in this Guide

When used in this guide, the term:

3745	Refers to the IBM 3745 Models 130 to 170 and 210 to 610 with 3746 Expansion Unit Models A11, A12, L13, L14, and L15.
3745 Model A	Refers to the IBM 3745 Models 17A, 21A, 31A, 41A and 61A with a service processor.
3746-900	Refers to the IBM 3746 Nways Multiprotocol Model 900.
3746-900NN	Refers to a function of the IBM 3746-900 operating as an APPN/HPR Network Node.
3746-900IP	Refers to a function of the IBM 3746-900 operating as an IP router.

Who Should Use this Guide

This guide is intended for non-IBM personnel such as:

- Network engineers
- System programmers
- System service personnel.

These personnel would be responsible for configuring:

- Local, alternate, or remote MOSS operator consoles for the 3745.
- Remote consoles connected to the service processor for a 3745 Model A or an 3746 Model 900. The service processor runs the Maintenance and Operating Subsystem-Extended (MOSS-E).

The user should have an understanding of teleprocessing, modem operations, APPN/HPR, and IP networking. Teleprocessing specialists can also access online resources (help, guides and other materials) for information on:

- MOSS-E
- Controller Configuration and Management (CCM) application
- APPN/HPR and IP Control Point functions
- DCAF
- TCP/IP environment.

For more information, see the publications listed in “Bibliography.”

How this Guide is Organized

This guide has been divided into the following parts:

Part 1, “3745 Models A and 3746 Model 900”

Describes how to configure remote consoles in DCAF as remote workstations for monitoring and controlling the service processor running MOSS-E. Example configurations are given of five types of link (LAN-APPC, LAN-TCP/IP, Modem, SNA, and APPN) via DCAF to a target service processor.

Also describes how to configure a remote console as a Telnet remote workstation, with access to the Network Node Processor (NNP) for IP communications.

Part 2, “3745 Models 130 to 610”

Describes how to configure the IBM 3151 and 3153 Display Station, IBM 3163 and IBM 3161 ASCII Display Station, IBM Personal System/2* (Models 30 286, 50, 50Z, 60, 70, or 80), IBM Personal Computer (PC), IBM Personal Computer AT*, and IBM Personal Computer XT* Model 286, to function as a local, alternate, or remote MOSS console attached to an IBM 3745 Communication Controller.

Part 3, “Appendixes for 3745 Model A and 3746 Model 900”

Contains the appendixes for Part 1.

Part 4, “Appendixes for 3745 Models 130 to 610”

Contains the appendixes for Part 2.

Part 5, “Bibliography, Abbreviations, Glossary, and Index.”

What is New in this Guide

This revised edition provides information about the performance, connectivity, availability, multi-protocol support, and network management enhancements of the 3746 Model 900.

3746-9x0 Performance and Availability

The significant improvements of HPR, together with the use of a Dual Network Node Processor (DNNP) and improved connectivity, has made the 3746-9x0 the best network access equipment for S/390* Servers in the Parallel SYSPLEX environment.

Multiprotocol Support

The multi-protocol capabilities of the 3746 Model 900 is widely extended through support of APPN/HPR and IP routing, attachment to Ethernet LANs, and support for Frame-relay RFC1490, including Boundary Access Node (BAN)/Boundary Network Node (BNN).

For Europe, the 3746 Model 900 uses a primary Integrated Services Digital Network (ISDN) adapter to support Euro-ISDN standards and operate with Advanced Communications Function (ACF) / Network Control Program (NCP). This allows SNA equipment to communicate with ACF/NCP over ISDN connections.

Network Management

Network Management for the 3746 Model 900 is extended to new protocols and functions via NetView/390 for the 3746 Network Node (NN) and NetView/6000 for the IBM 3746 IP router. These new capabilities consist of graphic displays for IP and APPN/HPR network topologies, automated operator commands triggered by NetView/390 alerts, and reports on the hardware and network utilization of the 3746.

Where to Find More Information

For more information, see the "Bibliography" on page X-1 and the additional publications listed below:

- *DCAF: Installation and Configuration Guide*, SH19-4068.
- *TCP/IP Guide*.

For the 3151, 3153, 3161, and 3163 display stations, refer to the terminal documentation.

For the PS/2* and OS/2*, consult the following publications. These books are delivered as part of the OS/2 package.

- *IBM Operating System/2* Extended Edition: Guide to Information*, P/N 90X7655 (a complete OS/2 bibliography).
- *IBM Operating System/2 Extended Edition: Guide to Information*, P/N 90X7655.
- *IBM Operating System/2 Extended Edition: Getting Started*, P/N 90X7659.
- *IBM Operating System/2 Extended Edition: Commands Reference*, P/N 90X7664.
- *IBM Operating System/2 Extended Edition: System Editor*, P/N 90X7665.
- *IBM Operating System/2 Extended Edition: Keyboard Layouts*, P/N 90X7657.
- *IBM Operating System/2 Extended Edition: User's Guide*, P/N 90X7657.

The following book should not normally be needed for setting up a PS/2 as a MOSS console; it does however contain supplementary information that you may find useful:

- *IBM Operating System/2 Extended Edition: System Administrator's Guide for Communications*, P/N 90X7908.

World Wide Web

You can access the latest news and information about IBM network products, customer service and support, and microcode upgrade via Internet at the Uniform Resource Locator (URL):

<http://www.ibm.com>

Part 1. 3745 Models A and 3746 Model 900

Chapter 1 to Chapter 8 refers to DCAF consoles.

Chapter 9 refers to Telnet consoles for IBM 3746-900 IP routers.

Chapter 1. Introduction to Consoles and DCAF

Chapter 1 to Chapter 8 and Part 3 of this guide includes:

- Information about the parameters needed to configure consoles as remote (controlling) workstations.
- Procedures for configuring remote (controlling) workstations.


PS/2 (or equivalent) workstations can be used to remotely access the service processor. These workstations access the service processor MOSS-E and Controller Configuration and Management (CCM) functions by using DCAF. The operator at a remote workstation using DCAF can either:

- Control the target service processor input in a DCAF active session, and use the remote workstation keyboard and mouse to operate the service processor.
- Monitor the target service processor display in a DCAF monitor session, and view the service processor display in a remote workstation DCAF window.

The **remote workstation operates** as a DCAF **controlling workstation** and the **service processor** as a DCAF **target workstation**. When an active session connection is established between a remote workstation and the service processor, you can perform MOSS-E, CCM, APPN and IP functions as though seated in front of the service processor.

Notes:

- When remotely controlled, a service processor blocks the operation of the keyboard and mouse. However, you can regain control of the keyboard and mouse by using DCAF hot keys. The default hot keys are pressing



together.

If you think that the service processor is not working, check that it is not under the control of the DCAF remote console.

- Only one remote workstation can control the service processor at the same time.
- A remote workstation can be configured to have access to more than one service processor.
- The service processor is shipped pre-configured as a DCAF target workstation.
- DCAF is a separate product from the IBM Communication Controllers. Installing DCAF on a PS/2 (or equivalent) workstation is the customer's responsibility. See Chapter 2, "DCAF Session Installation" for details.

Consoles

There are five types of remote consoles that can use DCAF, where each type defines how the console is connected to the service processor. Refer to Figure 1-1 on page 1-2.

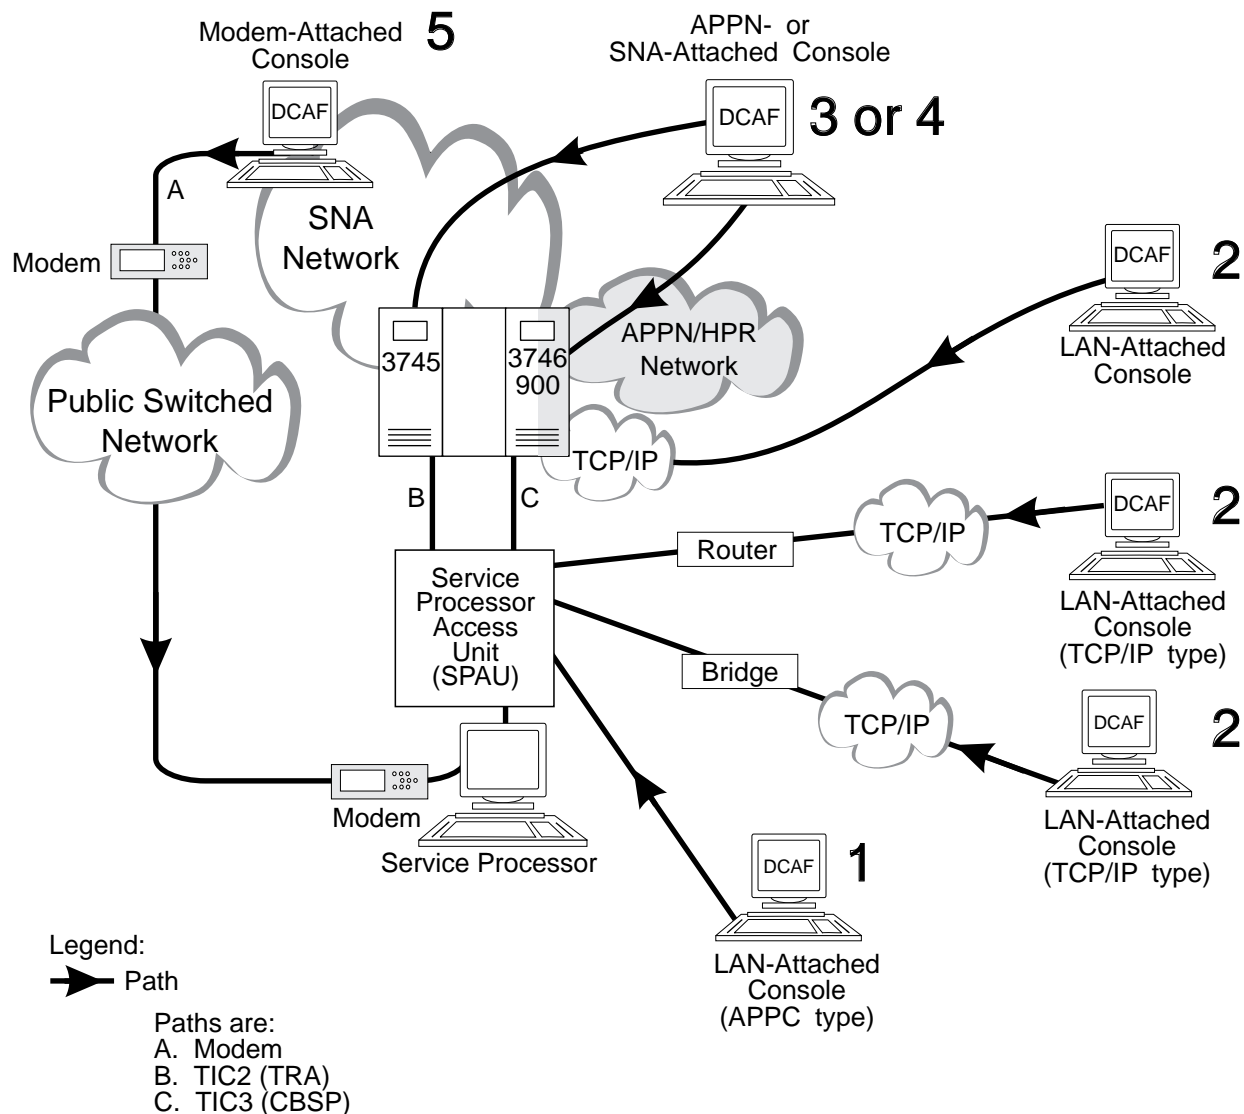


Figure 1-1. DCAF Console Attachments

The numbers in the figure above represent the following console connections to the service processor:

- 1**, **LAN-attached** (APPC type) console attached directly to the Service Processor Access Unit (SPAU), or indirectly through a token-ring LAN bridge.
- 2**, **LAN-attached** (TCP/IP type) console attached to the SPAU via a bridge with appropriate filtering.
- 3**, **SNA-attached** console communicating with the service processor via an Logical Unit (LU) 6.2 session over the network backbone.
- 4**, **APPN-attached** console communicating with the service processor via an LU6.2 session over the network backbone.
- 5**, **Modem-attached** consoles that use the public switched telephone network to access the service processor via an Synchronous Data Link Control (SDLC) port and modem.

Note: The port and modem can also be used for Remote Support Facility (RSF), Remote Technical Assistance Information Network (RETAIN*), and Alert calls.

A remote console can be configured for all categories of access. This means that a single console at a central control site could be LAN-attached to a local service processor while providing APPN and modem access to other service processors.

Attention

Sending an alert to NetView via a service processor SDLC port or calling RSF has a higher priority for the MOSS-E than DCAF, SDLC, or SNA remote sessions.

Note: The target service processor MOSS-E engineering change (EC) level should be less than D22482 and the MOSS EC level less than D39894. Otherwise, the DCAF session may be affected, and the following occur:

- The remote operator using a modem-attached workstation has to end the remote session to free the service processor SDLC port.
- The SNA-attached workstation automatically disconnects without warning. The DCAF session is interrupted and the remote operator has to manually re-establish it.

The LAN-attached workstation is not affected.

Diskettes with Example Configurations

Included with this guide are diskettes 02L3825 for CS/2 and 02L3851 for CM/2. These diskettes contain example configurations that you can load into your CMLIB directory. These configuration files are primarily designed to help you with configuring modem attached workstations. However, if you are using another configuration for your workstation, (LAN-attached, for example) any of the configuration files in the CMLIB directory will help you. To load the configuration files from diskette, see "Customizing CS/2 and CM/2" on page 2-3 for details.

Information on how to configure CS/2, CM/2, DCAF, and CCM, is contained in the following Chapters:

- Chapter 5, "LAN-Attached (APPC Type) Remote Workstation"
- Chapter 6, "Modem-Attached Remote Workstation"
- Chapter 7, "SNA-Attached Remote Workstation"
- Chapter 8, "APPN-Attached Remote Workstation."


A more complex two-target (two service processors) configuration described in Appendix A, "Configuration for a Two-Target Remote Workstation." Each target uses LAN, Modem, and SNA categories of link to the remote workstation.

DCAF Logon Password and Service Processor Security

To access a target service processor using a remote workstation, you must first establish a DCAF link with certain parameters unique to the target service processor. This is explained later in this guide.

A series of passwords provides additional security for the service processor:

1. DCAF target password to establish a link for accessing the target service processor (can be unique for each target service processor).

There is no factory default password. Press  when you are asked for the password. To install or change a password, use **Customize DCAF Target Settings** on the service processor **Configuration Management** menu.

2. You must enter a **local MOSS-E password** (controller or service processor password) to log onto the MOSS-E and remotely control the service processor. See the *Planning Guide*, GA33-0457 for more information on these passwords.

Note: The security level of the DCAF sessions between a remote console and the service processor is password-only (or non-secure). The security administrator and authentication components of DCAF are not used with the service processor.

Regaining Control of the Service Processor

During an active DCAF session, the remote workstation will prevent the target service processor from responding to input from the keyboard or mouse.

However, the service processor local operator can use a hot key combination to override the controlling workstation and regain control of the service processor.

The default hot keys are   pressed together.

Minimum Workstation Configuration

This section contains an overview of the system requirements for remote workstations. For detailed information refer to the *DCAF Installation and Configuration Guide*, SH19-4068, provided with the DCAF installation diskettes.

Programming Requirements

You need the following minimum program levels on your workstation to remotely access the service processor:

- DCAF, Version 1.3.3 (also known as TME10 Remote Control, PN 5697RCL).
- OS/2 Version 2.1 or higher with Warp 3.x and LAPS Version 5.10, or Warp 4.x, with Multiple Protocol Transport Services (MPTS) for OS/2 4.x.
- CM/2 Version 1.11 or higher.
- CS/2 Version 4.1, with Warp, MPTS, and TCP/IP.
- MPTS Version 2.2 or higher for LAN-attached workstations.
- Transmission Control Protocol/Internet Protocol (TCP/IP) Version 2.0 or higher for TCP/IP-attached workstations.

The following additional program support is needed for specific types of console attachment:

- Network Transport Services/2 (NTS/2) for LAN-attached and SNA-attached consoles that connect to SNA networks via a LAN.
- To access the service processor via an SNA or APPN network backbone, check that the following programming support is available:

1. DCAF remote workstations and gateway workstations are configured as physical units (PUs) type 2.1. If the DCAF workstation is downstream from a 3174 control unit, then the 3174 must have one of the following:
 - Configuration Support B plus 8Q0800 Programming Request for Price Quotation (PRPQ).
 - Configuration Support C (APPN feature).
2. NCP V5R2 (or higher), operating under Virtual Telecommunications Access Method (VTAM*) Version 3R2 (or higher) for 3720 and 3745 Communication Controllers on the network backbone.
3. NCP V4R3 (or higher), operating under VTAM V3R2 (or higher) for 3725 Communication Controllers on the network backbone.

Later releases of these programs may be used unless otherwise stated.

Hardware Requirements and Recommendations

For remote workstations, IBM recommends using the following items:

- PS/2s (or equivalent) with at least a 80386 microprocessor and Video Graphics Adapter (VGA) display such as an IBM 8515 color display.
- A hard disk of at least 80 MB and at least 10 MB of Random Access Memory (RAM).
- A pointing device (usually a mouse).
- A QWERTY keyboard is necessary. If this type of keyboard is not available, then the QWERTY equivalent keys must be used. For example, on an AZERTY keyboard you must use the Q key when you want to type an A.

To find the equivalent keys on IBM non-QWERTY keyboards, refer to OS/2 documentation for keyboard layouts or codes.

The following is recommended for different types of console attachments:



- LAN-attached console (APPC or TCP/IP type), an IBM Token-Ring Network Adapter/A operating at 16 Mbps.
- Modem-attached console, a synchronous modem (such as IBM 7857 or equivalent) and a multi-protocol adapter (MPA) card.
- SNA- or APPN-attached modem, an IBM token-ring network adapter with a MPA card.

Technical information on the service processor is provided in the *Planning Guide*.

Chapter 2. DCAF Session Installation

Summary of Procedures

First collect the *Planning Guide*, GA33-0457 worksheets at your workstation, then consult the summary of procedures in the table below.

Table 2-1. DCAF Session Installation Procedures		
Procedures	For the Remote Workstation	For the Service Processor
Verifying hardware and programming requirements.	See Chapter 1, "Introduction to Consoles and DCAF."	Pre-configured as a DCAF target workstation.
DCAF program installation or upgrade.	See "Installing DCAF" on page 2-2.	Non applicable. Already pre-configured.
TCP/IP program installation or upgrade.	See <i>TCP/IP Installation Guide</i> delivered with the program.	Non applicable.
CS/2 and CM/2 customization.	See "Customizing CS/2 and CM/2" on page 2-3 and Chapter 5 to Chapter 8, according to the type of session.	See Chapter 5 to Chapter 8 according to the type of session.
DCAF customization.	According to the type of session, see Chapter 5 to Chapter 8.	Not applicable.
TCP/IP customization.	See Chapter 4.	Done by IBM representative at installation.
CCM definitions.	Not applicable.	Available for APPN sessions only. See Chapter 8.
Opening a session.	See Chapter 3, "Using DCAF to Remotely Log On to the Service Processor."	Not applicable.
Closing a session.	See Chapter 3, "Using DCAF to Remotely Log On to the Service Processor."	Use DCAF hotkeys  

For more information, see the *DCAF: Installation and Configuration Guide*, SH19-4068 that comes with DCAF.

Important

Installing DCAF may require modifying CS/2 or CM/2 and re-starting the workstation.

Preparation

Before starting the installation process, make sure that you have the workstation already installed and running OS/2 (see “Minimum Workstation Configuration” on page 1-4).

Use the OS/2 command **SYSLEVEL** to verify the programs you have already installed on the workstation and the Service Pak levels you are using.

Prepare the following:

- Installation diskettes for CS/2 Version 4.1 or higher or CM/2 Version 1.11 or higher.
- LAPS Version 2.2 or higher.
- DCAF Version 1.3 or higher installation diskettes.
- TCP/IP Version 2.0 or higher installation diskettes.
- Diskettes shipped with this *Console Setup Guide*, SA33-0158
- Information from the *Planning Guide* worksheets.

Physical Installation

Any remote console or associated modem is installed by using procedures in the documentation provided with the product. See “Modem Configuration” on page 6-3 for IBM 7855, 7857, 7858, or Hayes Modems.

Installing DCAF

Important

DCAF is also known as TME10 Remote Control, PN 5697RCL.

The DCAF secure (or password-only security) target component is automatically installed in the MOSS-E during delivery of the service processor.

The remote console is a DCAF controlling component. Follow the procedure below to install DCAF on the remote workstation:

- Step 1.** Insert the DCAF diskette 1 into drive A.
- Step 2.** Open an OS/2 full screen or window.
- Step 3.** Change to drive A.
- Step 4.** Type `install` and press **Enter**.
- Step 5.** Double-click **Controller**.
- Step 6.** Select **Install with defaults**, then click **OK**.
- Step 7.** Wait until **Ready to install** is displayed under **Status** field.
- Step 8.** In the **Install** pull-down menu, click **Install included component(s)**.
- Step 9.** At this step you may define your own DCAF path and backup CONFIG.SYS file. Record this information, and click **OK**.
- Step 10.** Change the diskette and click **OK** when you are prompted.
- Step 11.** When a message displays saying that the installation was successful, click **OK**. A new **Distributed Console Access Facility** icon appears.

- Step 12.** Verify that there is no diskette in drive A.
- Step 13.** Shutdown and restart your workstation.
- Step 14.** Go to “Customizing CS/2 and CM/2.”

Upgrading DCAF

Attention

If the DCAF on your workstation is a level lower than 1.3, de-install it and then install DCAF 1.3.3. See “Installing DCAF” on page 2-2.

This section describes how to upgrade DCAF 1.3 with the CSD UB20924.

- Step 1.** Insert DCAF diskette 1 into drive A.
- Step 2.** Open an OS/2 full screen or window.
- Step 3.** Change to drive A.
- Step 4.** Type service and press **ENTER**.
- Step 5.** Follow the prompts:
- a. Insert DCAF diskette 1.
 - b. Insert DCAF diskette 2.
 - c. Insert DCAF diskette 3. (Also called CSD diskette 1)
 - d. Click **Service**.
 - e. Click **OK**.
 - f. Insert DCAF diskette 4. (Also called CSD diskette 2)
- Step 6.** Click **OK**.
- Step 7.** Click **No**.
- Step 8.** Click **Cancel**.
- Step 9.** Click **OK**.
- Step 10.** Use Desktop Manager to shut down and restart the workstation.

Important

After upgrading DCAF, it is recommended that you access the following URL to download any required fixes and APARs:

<ftp://ftp.software.ibm.com/ps/products/dcaf/fixes/v133/us-english/apar/>

Installing TCP/IP

See *TCP/IP Installation Guide*.

Customizing CS/2 and CM/2

This procedure will help you navigate from a remote workstation to the service processor and complete the customization of DCAF. For more information, see the *Planning Guide*.

Customizing a Remote Workstation

Important

The procedure below is the same in CM/2 unless otherwise indicated.

The procedures in this section apply to the following types of consoles:

- LAN APPC
- SNA
- APPN
- Modem-attached.

The CS/2 and CM/2 configuration files loaded onto your workstation during the installation process include one example of each type of remote DCAF console.

Step 1. From **Desktop Manager**, double-click the **CS/2** icon.




Step 2. Double-click the **Communications Manager Setup** icon.

Step 3. Click **Setup**.

Step 4. Select a file from the **Configurations** list, and click **OK**.

Note: Each file contains example configurations of a modem type and all other types of workstation attachment, for example, LAN-attached.

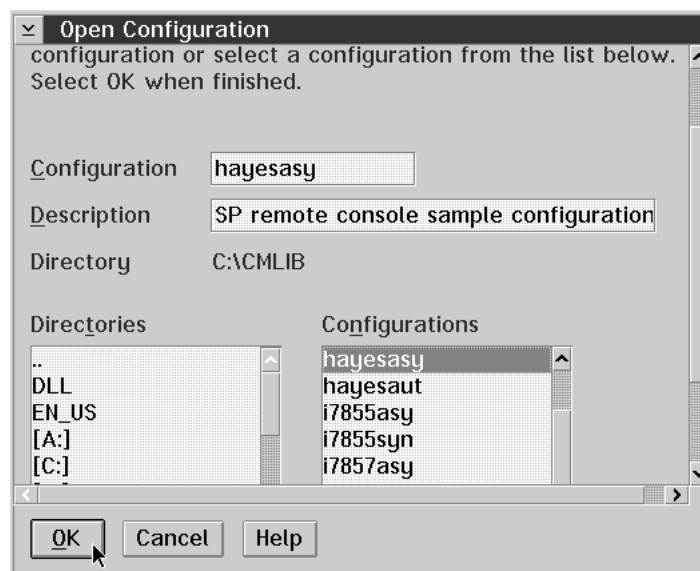

Step 5. Depending on the console type you are installing, go to:

- Chapter 5, “LAN-Attached (APPC Type) Remote Workstation.”
- Chapter 6, “Modem-Attached Remote Workstation.”
- Chapter 7, “SNA-Attached Remote Workstation.”
- Chapter 8, “APPN-Attached Remote Workstation.”

Configuring Data Link Control (DLC) for a Service Processor

For more information on configuring Data Link Control (DLC) see Appendix B, "Configuring DLC for DCAF."

Chapter 3. Using DCAF to Remotely Log On to the Service Processor

For more information about DCAF functions, including opening multiple concurrent sessions, switching between sessions, and keyboard shortcuts, see the *DCAF: Installation and Configuration Guide*, SH19-4068.

For the purpose of this procedure, the service processor is the DCAF target workstation, and the remote console is the DCAF controlling workstation.

Starting a Session

Use the following procedure to install a DCAF session that controls the service processor and the network node processor (NNP).

Important


The procedure below is the same in CM/2 unless otherwise indicated.

Note: For DCAF TCP/IP sessions, start at Step 11 on page 3-2.

Step 1. Double-click the **CS/2** icon (for CM/2, double-click the **CM/2** icon and go to Step 3).

Step 2. Double-click the **Administration** icon.

Step 3. Double-click **Subsystem Management**.

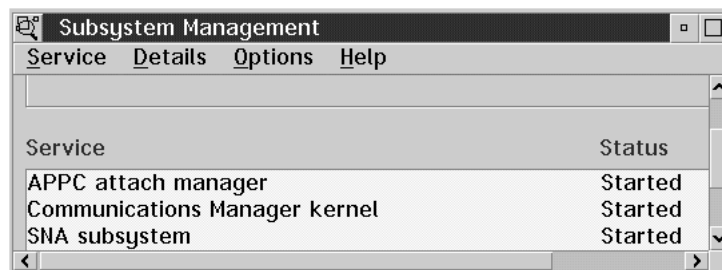


Step 4. Check that all of the services have a **Started** status. If not, click the **Service** pull down menu, then:

- Start **Communications Manager kernel**
- Start **SNA subsystem**. **APPC attach manager** starts automatically.
- Continue with next step.

Step 5. Double-click **SNA subsystem**.


- Step 6.** Select **Details** from the main menu, **SNA subsystem** and **Logical links**.
(for CM/2, select **Details** from the **Service** menu and continue as above.)

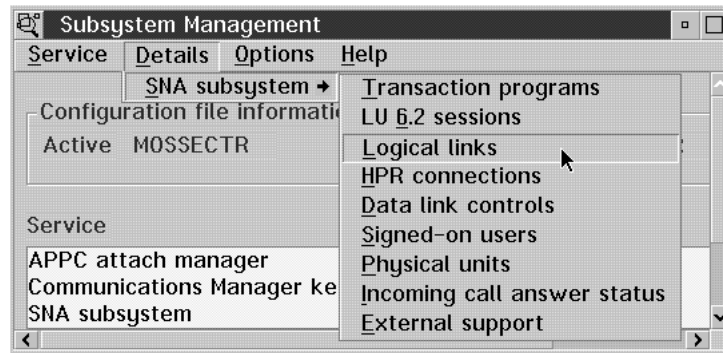

- Step 7.** If the link shows the status of **Active**, go to Step 9. If the link shows the status of **Inactive**, continue with next step.

Partner Network ID	Partner Name	Partner TG Number	Partner Type	Active Sessions	Link Status
SYSTST	DCAFLAN		NN	0	Inactive
SYSTST	DCAFLAN		LEN	0	Inactive
SYSTST	DCAFS DLC	1	LEN	0	Inactive
SYSTST	DCAFSNA		LEN	0	Inactive

- Step 8.** Click **Link** on the main menu and click **Activate**. The link displays a **pending active** message, followed by an **active** message.

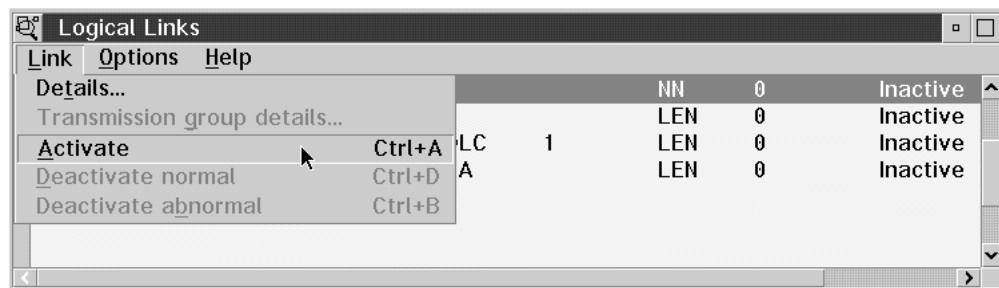


- Step 9.** Exit CS/2.
- Step 10.** Make sure that communications have been started on the controller side.
- Step 11.** Double-click the **Distributed Console Access Facility** icon.



- Step 12.** Double-click the **DCAF Controller** icon.

Step 13. In the **Session** pull-down menu, select **Open Workstation directory**.

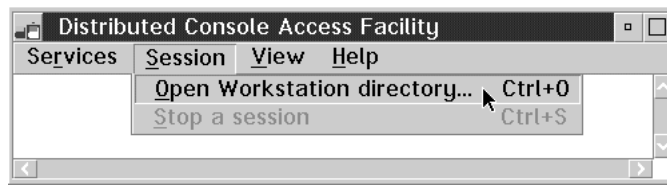

Step 14. Double-click the icon of the target service processor that you want.

Step 15. Enter the DCAF target password defined at “DCAF Logon Password and Service Processor Security” on page 1-3. If there is no password for the target workstation, click **OK**.

Step 16. Click **Yes** if you have a non-QWERTY keyboard (see “Hardware Requirements and Recommendations” on page 1-5).

Step 17. Click **Start a session** from the **Session** pull-down menu.

Step 18. Maximize the window to see the target service processor screen.

Note: If you are using an SDLC link that seems too slow, check your modem speed. If it is not at full speed, close the DCAF session and try a new SDLC connection. A better line might reduce the target response time.

Closing a Session

From the Remote Workstation

In the **Session** pull-down menu on the DCAF window action bar, click **Stop a session**.

Attention

Do not close the session by de-selecting “Enable DCAF Link/Operations” from the “SP Customization” function.

From the Target Service Processor

To close the session of the target service processor, use the DCAF hot keys,

  pressed together.

Note

When your DCAF session is finished, make sure that SDLC has ended. This frees SDLC resources for other tasks.

Chapter 4. LAN-Attached (TCP/IP Type) Remote Workstation

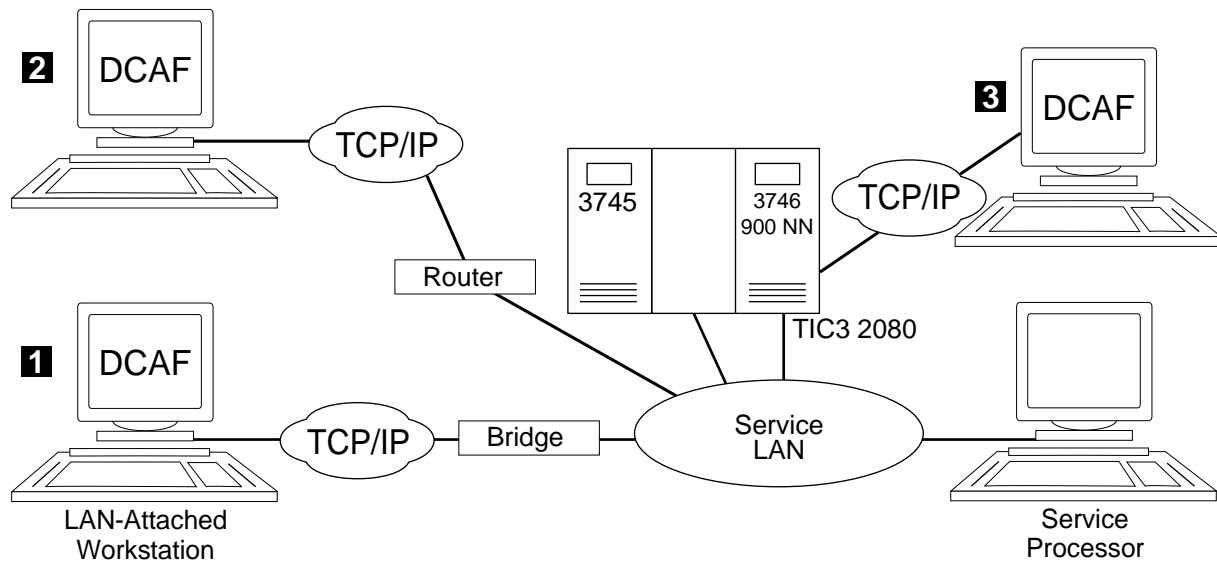


Figure 4-1. Token-Ring LAN (TCP/IP Type) Configuration

This chapter shows you how to do the following:

- Navigate from a remote workstation to a service processor in a TCP/IP environment via a bridge or router of a LAN.
- Configure a DCAF session for controlling the target service processor.

The paths between the controlling workstation and the service processor include the following:

- Bridge with filtering to the service processor LAN (see **1** in the figure above).
- Router to the service processor LAN (see **2** in the figure above).
- NN IP address on the 3746 to the service processor LAN (see **3** in the figure above).

Note: The configuration described in this chapter only applies to a service processor with a 3746 NN or a 3746-950 connected to the service LAN.

Installing a Remote Workstation (LAN-Attached TCP/IP Type)

The following procedure shows you how to establish a link between a controlling workstation and the target service processor.

Important

Use the *Planning Guide* worksheets to fill in the address and name fields.


Customizing DCAF

- Step 1.** From Desktop Manager, double-click the **Distributed Console Access Facility** icon.




- Step 2.** Double-click the **DCAF Controller** icon.

- Step 3.** Click **Session**, then **Open workstation directory**.

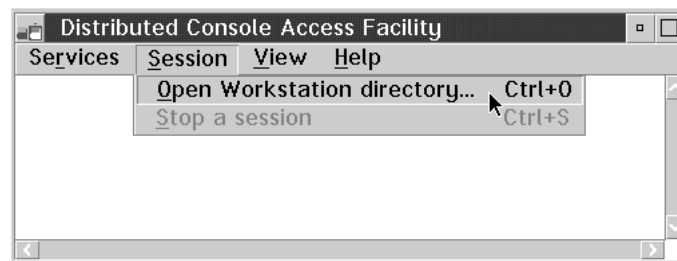


- Step 4.** Click **OK** for a first installation. Otherwise continue with next step.


- Step 5.** From the DCAF Directory window, click **Workstation** then on **Add**.

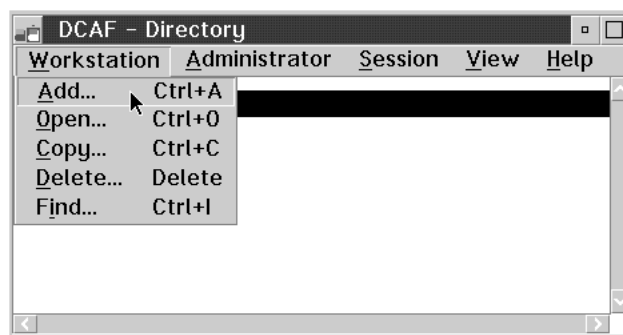

Step 6. Fill in the **Workstation name** field, select **TCP/IP** and click **Protocol**.

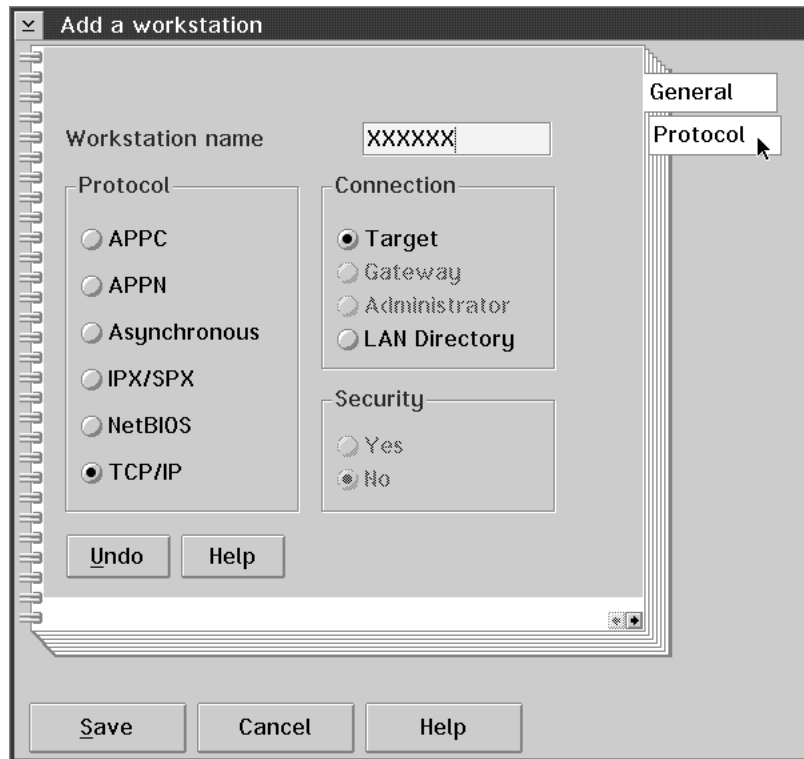

Step 7. Fill in the **Remote host name** (the IP address of the target service processor) and **Port number** fields. Then click **Save** and **Cancel**.

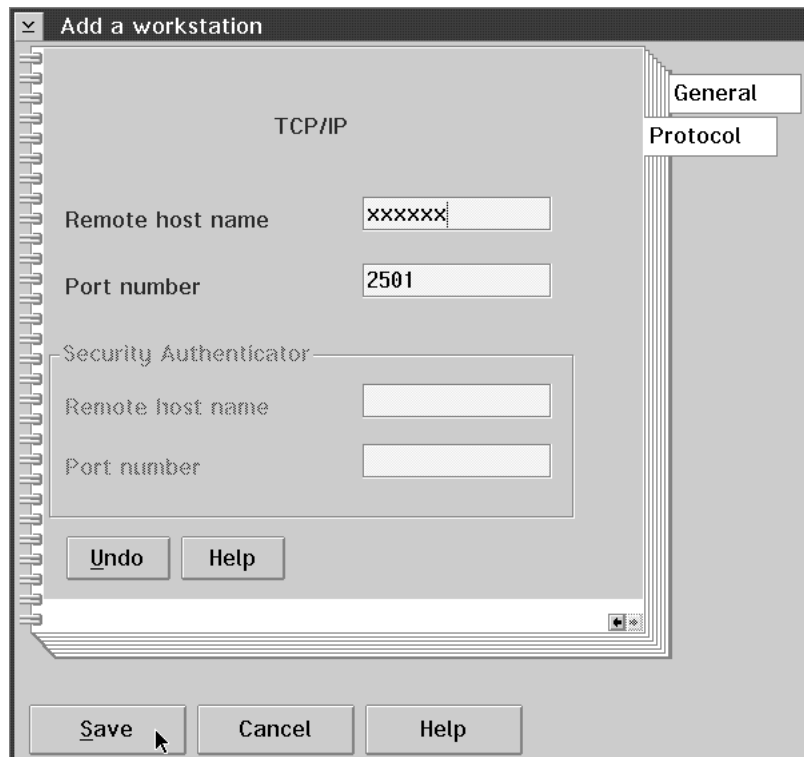

Step 8. Continue with “Customizing TCP/IP” on page 4-4.


Customizing TCP/IP

The following is the procedure for customizing TCP/IP for the remote workstation.


Step 1. Double click the **TCP/IP Configuration** icon on your desktop.

Step 2. Click **Host names**, open **page 2**, and click **Add**.

Note: If you are using an earlier version of TC/IP, click **Services** and select **page 3 of 3**.

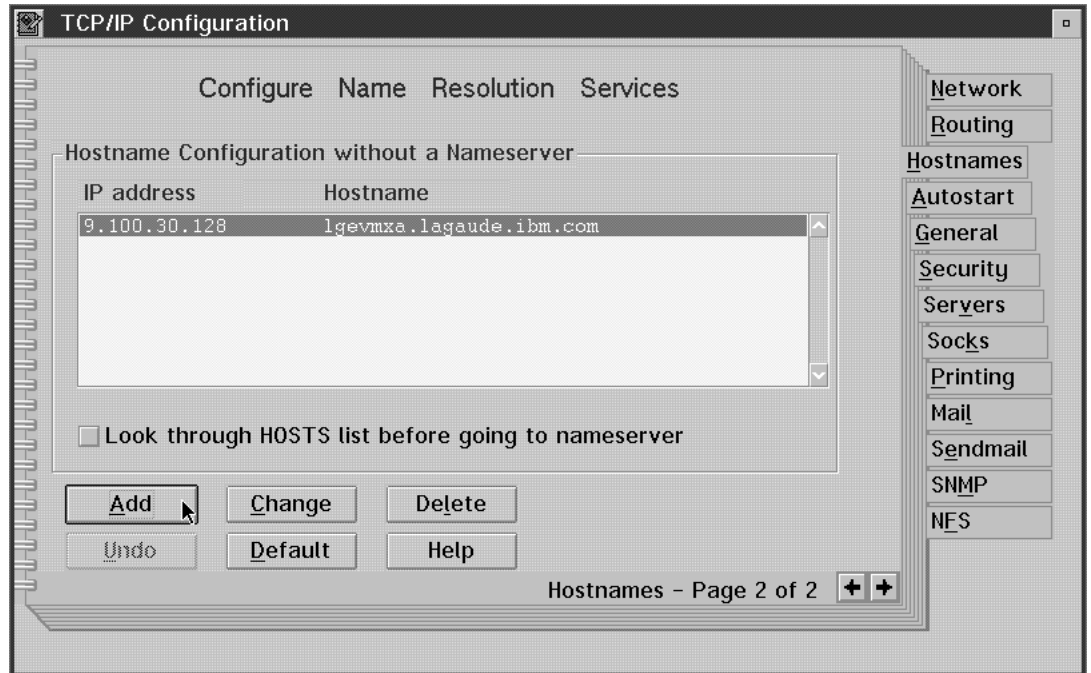

Step 3. Fill in the **IP address** field of the target workstation (the IP address of the TIC 2080), the **Host name** field (optional) and click **Add**.

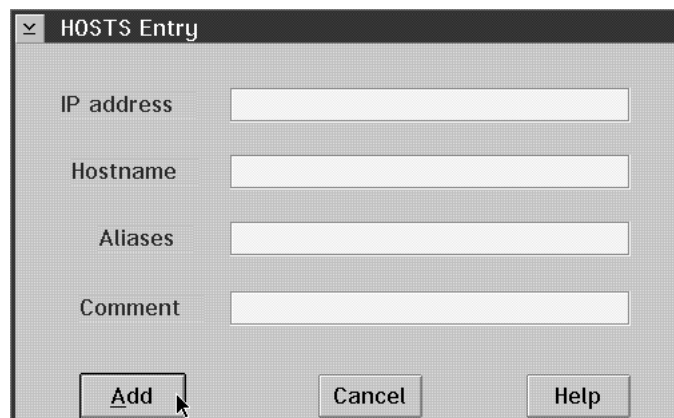

Step 4. Close the TCP/IP window.

Step 5. Click **Save**.

Step 6. Continue with “Installing a Target Service Processor” on page 4-5.


Installing a Target Service Processor

You can install a target service processor in MOSS-E.


Step 1. Open the **Service Processor Menu**.

Step 2. Click **Configuration Management**.

Step 3. Double-click **SP Customization**.

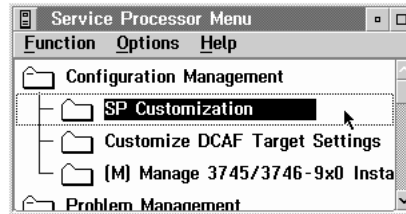

Step 4. Select **Service LAN Addresses** in the **View Customize** button list and click **Next**.

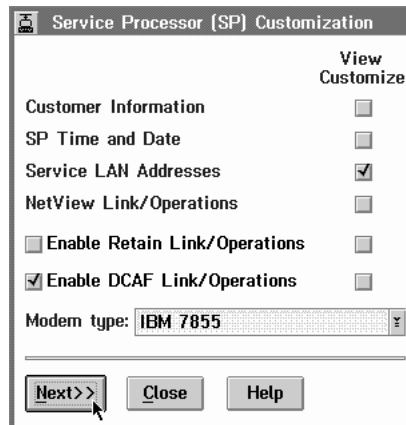

Step 5. Click **Next** to display the **Service LAN Addresses** screen.

	IP address	Subnet mask	Hostname	UAA/LAA
Service Processor:	9.100.76.41	255.255.255.0	SP11111	400000901111
NNP-A:	9.100.76.42	255.255.255.0	CA133333	
NNP-B:	not installed			
TIC3 2080:	9.100.76.43	255.255.255.0		
SP default router:	9.100.76.43			
MAE:	9.100.76.44			

LAN Manager

Do you have a LAN manager? ☐ Yes ☒ No C&SM LAN ID: MOSSE

<<Previous Next>> Help

Step 6. If you have a link type **3** (Figure 4-1 on page 4-1), enter the TIC3 2080 address in the **SP default router** and click **Next** and **Close**. Otherwise, click **Next** and **Close**.

Step 7. Open an OS/2 window.

Step 8. At the prompt type the following line:
route add default xxxxxxxx
where xxxxxxxx is the IP address of the TIC3 2080. Then press **Enter**.

Step 9. Close the OS/2 window.

Chapter 5. LAN-Attached (APPC Type) Remote Workstation

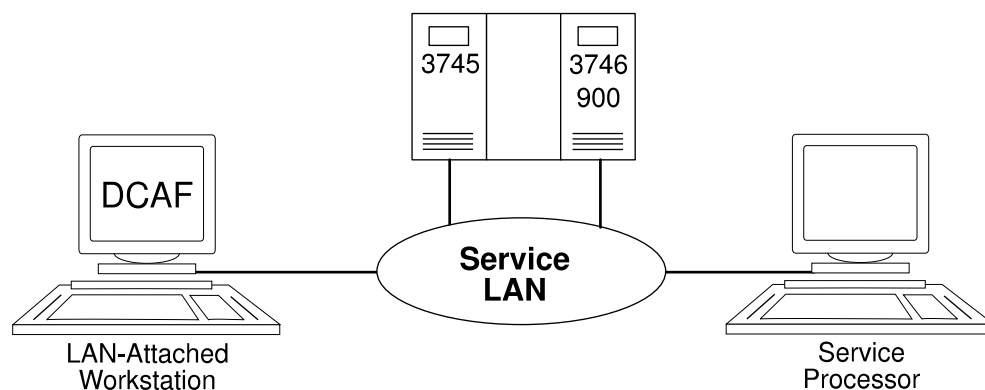


Figure 5-1. Token-Ring LAN (APPC Type) Configuration

This chapter describes how to do the following:

- Navigate from a remote workstation to a service processor via a token-ring bridge of a LAN.
- Configure a DCAF session for controlling the service processor (see Figure 5-1).

Parameters

The parameter values of your remote workstation must match the parameter values of the service processor. For more information, refer to the Appendix of the *Planning Guide*, GA33-0457.

If you have **more than one** target processor, you must follow the same parameter-matching rules. For more information, refer to Appendix A, "Configuration for a Two-Target Remote Workstation."

Installing a Remote Workstation (LAN-Attached APPC Type)

The following procedure shows you how to establish a link between the controlling workstation and a service processor, using an APPC type LAN environment.

Important

Use the *Planning Guide* worksheets to fill in the address and name fields.


Customizing CS/2

Important


The procedure below is the same in CM/2 unless otherwise indicated.

Step 1. Perform Steps 1 to 5 on page 2-4.

Step 2. Select **Additional definitions, Token-ring or other LAN types, APPC APIs**, and click **Configure**.

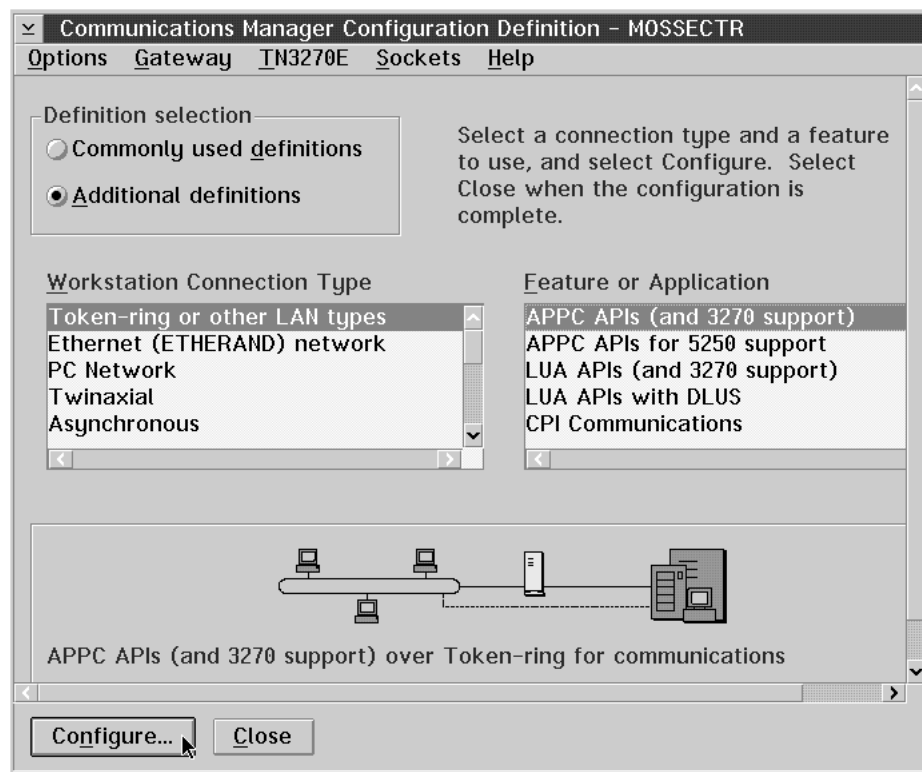


Step 3. Select **DLC - Token-ring or other LAN types** and click **Configure**.

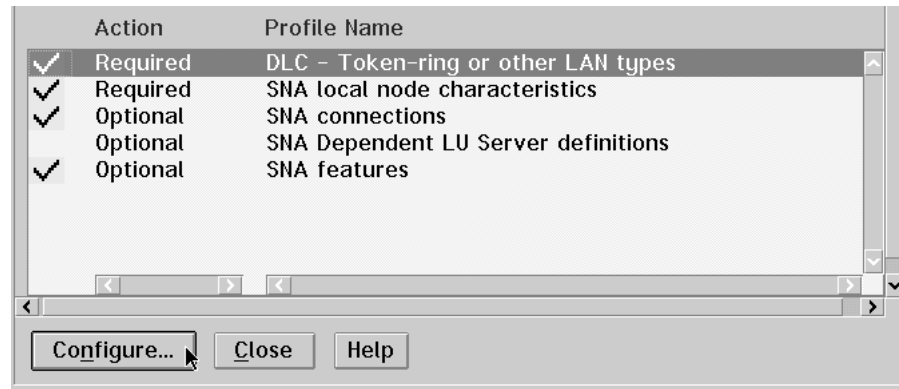


Step 4. Select **Free unused links** (in CM/2, select **Free unused links** and click **OK**). From the **Additional Parameters** list, highlight and check the following, using the **Change** button.

- Select **HPR parameters** and de-select **HPR support**.
- Check that the defaults apply to **Link station protocol parameters**, **Network management parameters**, and **Resource management parameters**.


Then click **OK**.

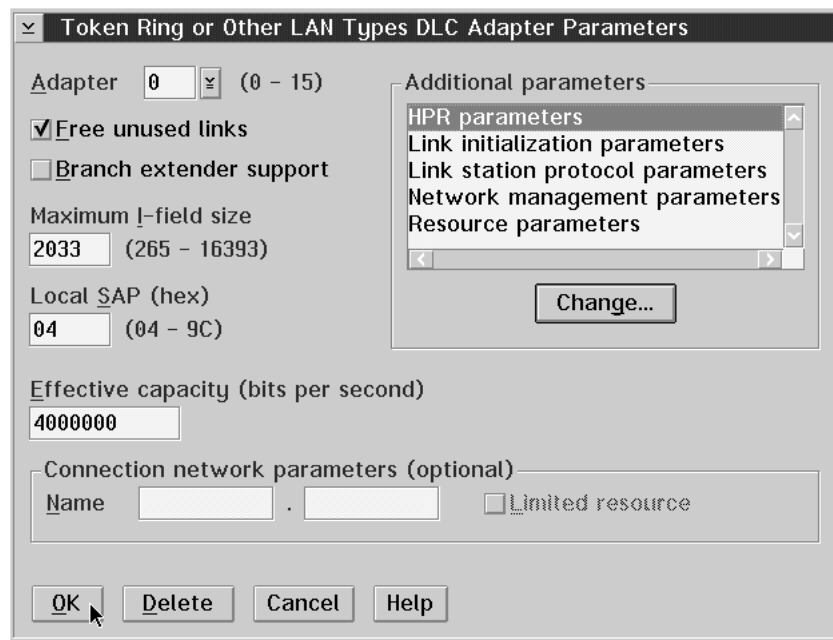


Step 5. Select **SNA local node characteristics** and click **Configure**.

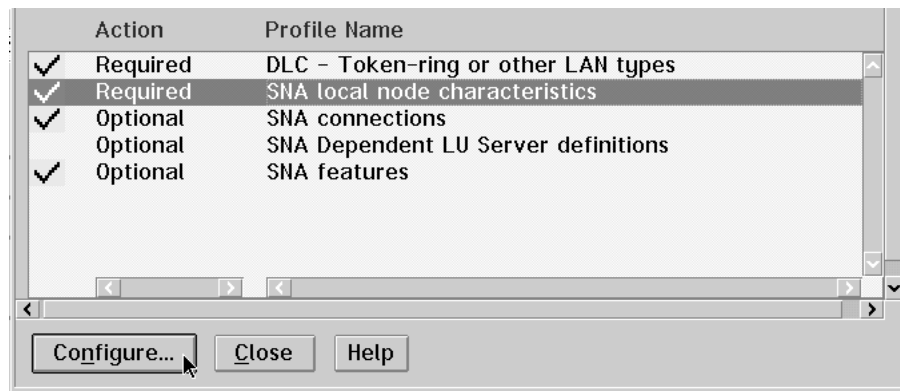


Step 6. Modify the **Network ID** and **Local node name** fields, select **End node** and click **OK**.

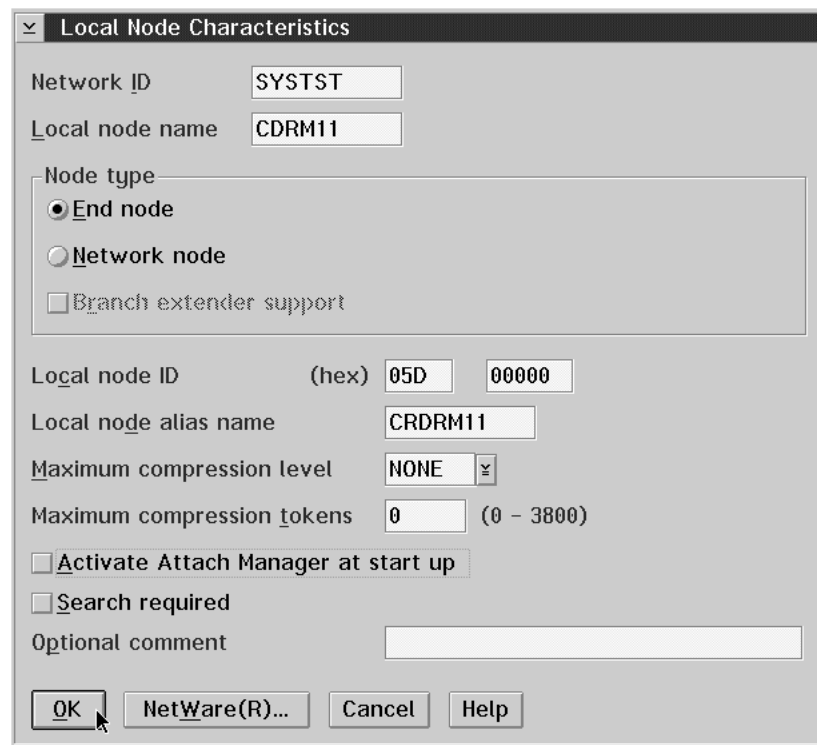


Step 7. Select **SNA connections** and click **Configure**.

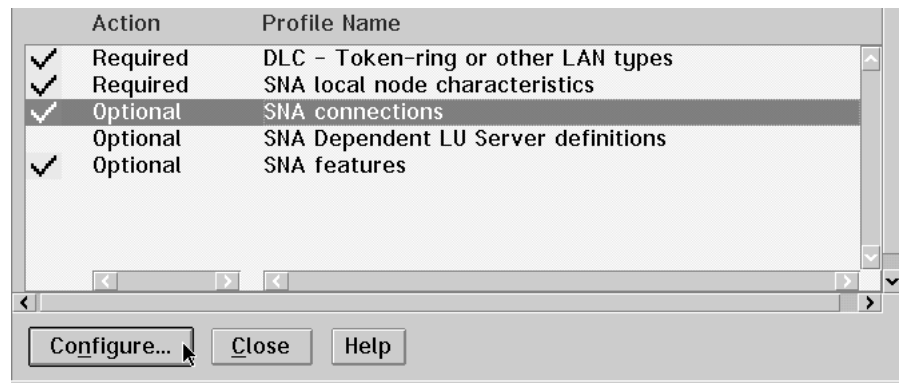


Step 8. Click **To peer node**, select **DCAFLAN** from the list and click **Change**.

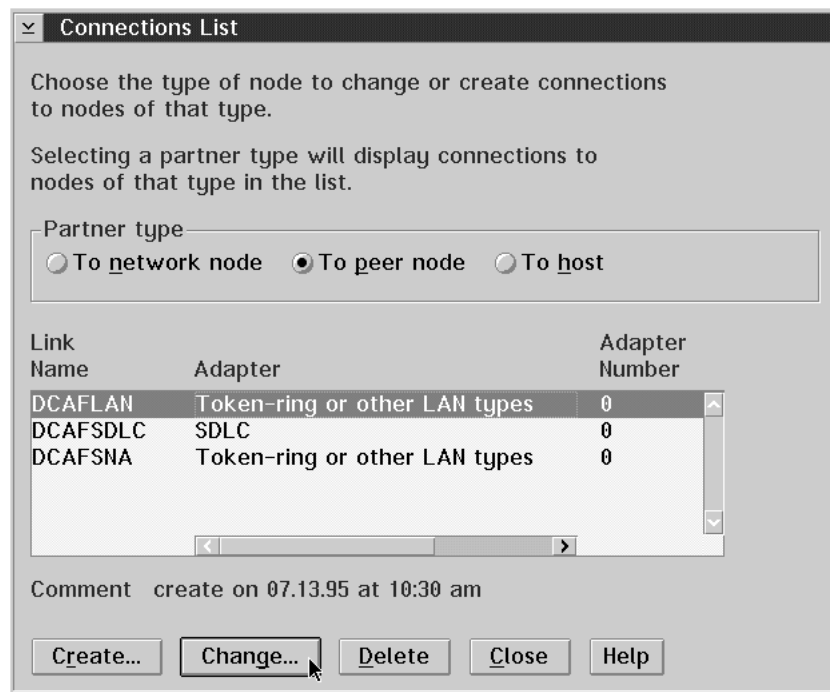

Step 9. Select **Token-ring or other LAN types** and click **Continue**.

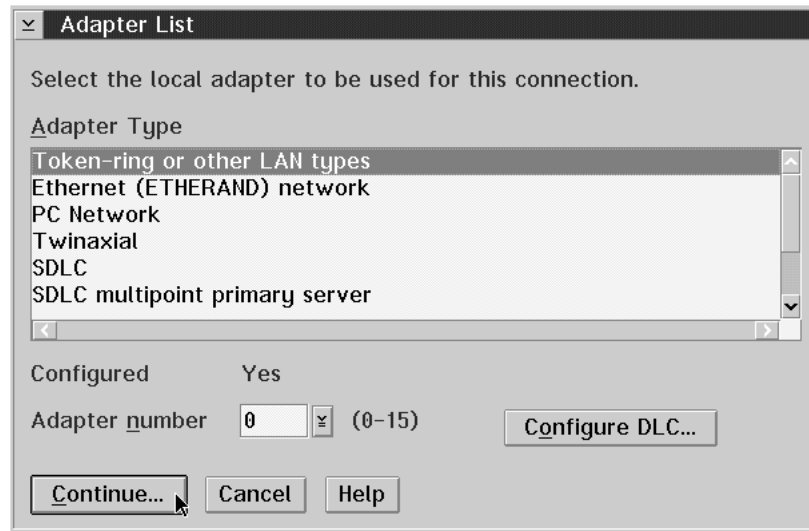

Step 10. Fill in the **LAN destination address** field (the address of the service processor), the **Remote SAP** field, the **Partner network ID** (the network name) field, the **Partner node name** (the network that contains the target service processor) field, and click **Define Partner LUs**.

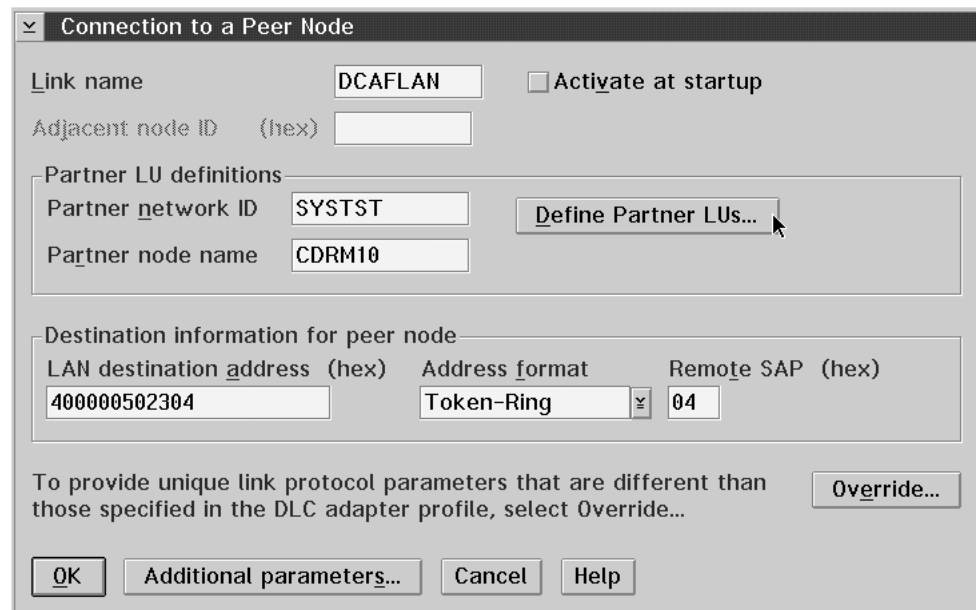

Step 11. Fill in **Network ID**, **LU name** (see Step 10 on page 5-6), and **Alias** fields (these should be the same as the LU and alias names on the service processor in Step 4 on page 5-11). Then click **Add** and **OK**.

Partner LUs

To add a Partner LU, enter the LU name, alias, and comment. Then select Add.

To change a Partner LU, select an LU from the list, change the LU name, alias, and/or comment fields and select Change.

To delete a Partner LU, select an LU from the list and select Delete.

Network ID: SYSTST

LU name: DCAFLAN

Alias: DCAFLAN

Dependent partner LU

☐ Partner LU is dependent

Uninterpreted name:

Optional comment:

Add

OK Cancel Help

LU name	Alias
SYSTST.DCAFLAN	DCAFLAN

Change Delete


Step 12. Click **OK** and then **Close**.

Step 13. Select **SNA features** and click **Configure**.


Action	Profile Name
✓ Required	DLC - Token-ring or other LAN types
✓ Required	SNA local node characteristics
✓ Optional	SNA connections
Optional	SNA Dependent LU Server definitions
✓ Optional	SNA features

Configure... Close Help

Step 14. Select **Local LUs**, **CTRLLAN** and click **Change**.

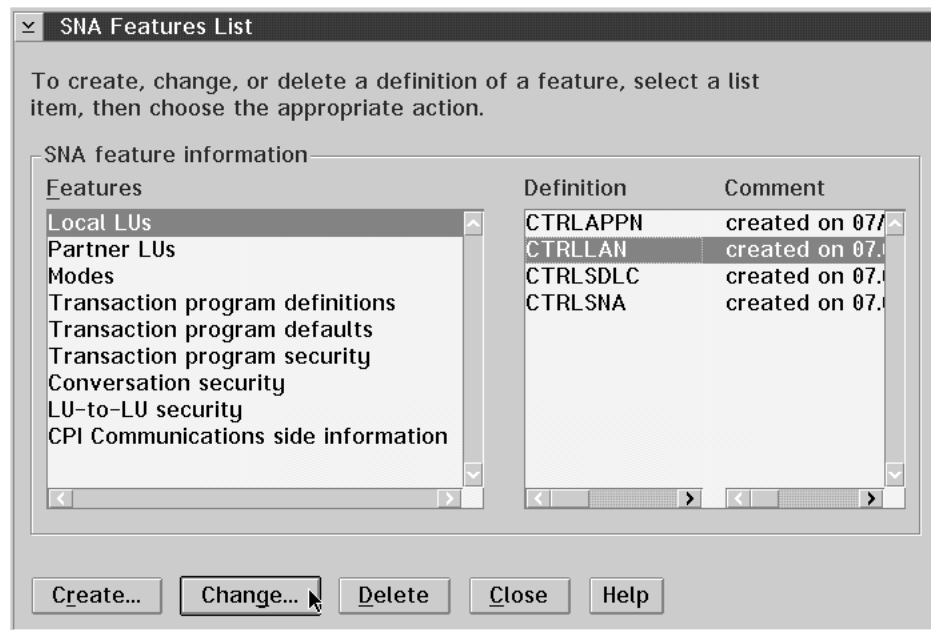

Step 15. Fill in the **LU name** and **Alias** fields, select **use this local LU as your default local LU alias** and click **OK**.

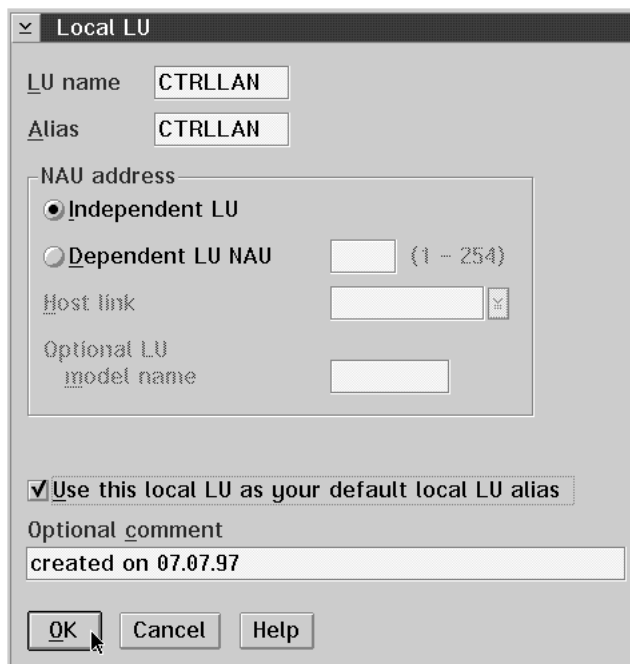

Step 16. Click **Close** on each subsequent screen until you exit CS/2.

Step 17. Continue with "Customizing DCAF" on page 5-9.

Customizing DCAF

Step 1. From **Desktop Manager**, double-click the **Distributed Console Access Facility** icon.




Step 2. Double-click the **DCAF Controller** icon.


Step 3. Click **Session**, then **Open workstation directory**.

Step 4. Click **OK** for a first installation. Otherwise, continue with next step.


Step 5. Click **Add** in the **Workstation** directory.

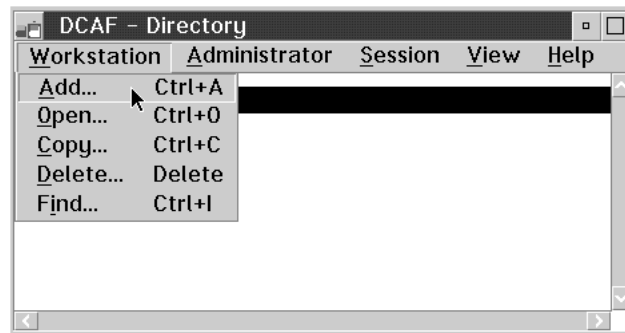

Step 6. Fill in the **Workstation name** field (see Step 15 on page 5-8), select **APPC**, **Target**, and click **Protocol**.

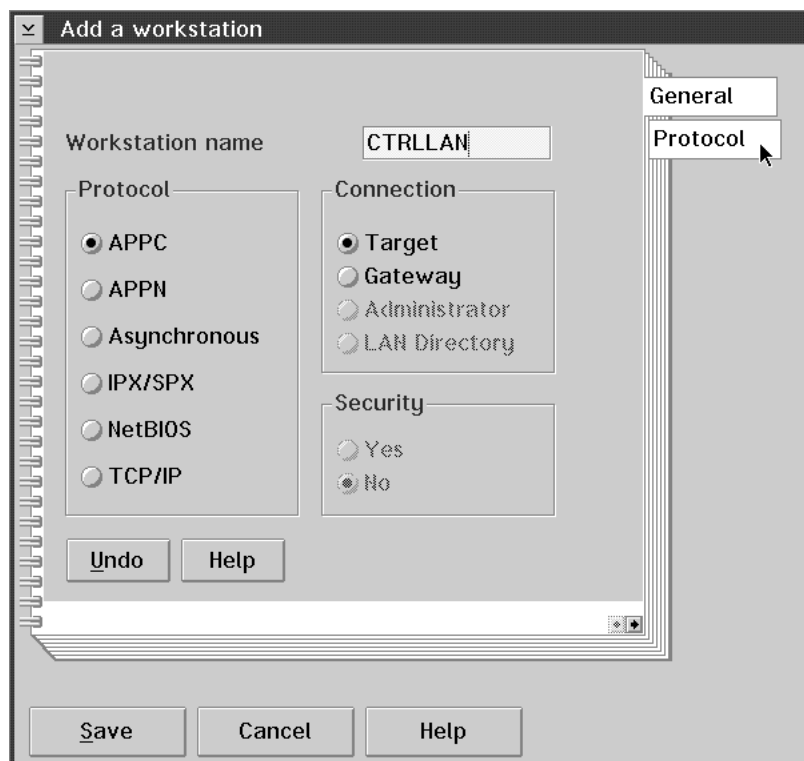

- Step 7.** Fill in the **Local LU alias** (see Step 15 on page 5-8), **Partner LU alias** (see Step 11 on page 5-7), and **Mode name** fields. Then click **Save**, **OK** (on the subsequent window), and **Cancel**.

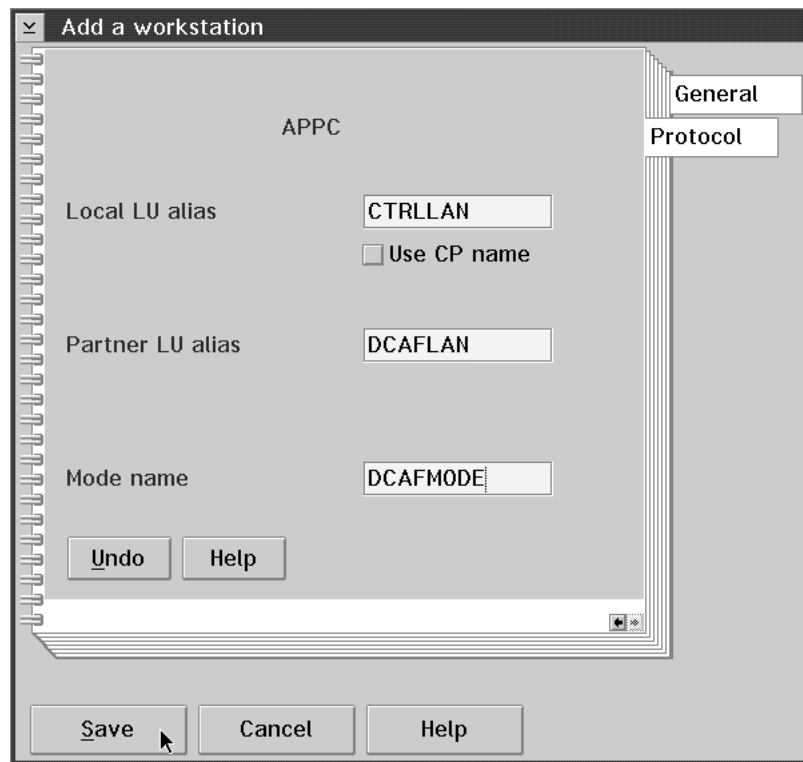


- Step 8.** From Desktop Manager, shutdown and restart the workstation.

- Step 9.** Continue with “Installing a Target Service Processor.”

Installing a Target Service Processor


This section describes how to customize your target service processor for a DCAF link to the communication controller.

- Step 1.** In the **Service Processor Menu** click **SP Configuration**.

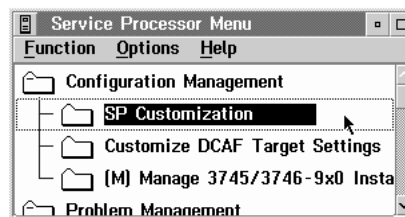


Step 2. Double-click **SP Customization**.

Step 3. Select **Enable DCAF Link/Operations** in the **View Customize** button list and click **Next**.

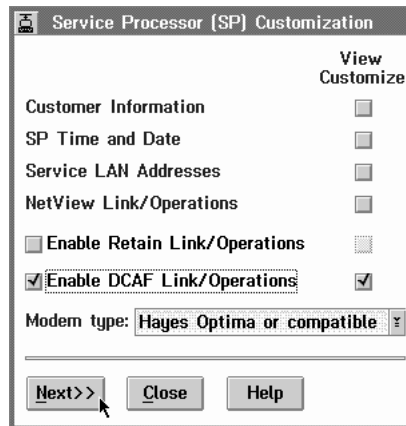

Step 4. Select **LAN**, fill in the adjoining field under the **LU name** list, and click **Next**.

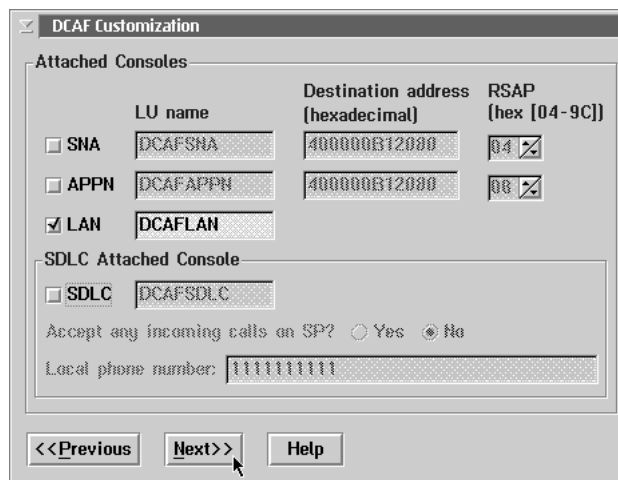

Step 5. Click **Close**.

Step 6. The installation is complete.

Step 7. From Desktop Manager, shutdown and restart the service processor.

Step 8. Go to Chapter 3, "Using DCAF to Remotely Log On to the Service Processor" for using this new DCAF session.

Chapter 6. Modem-Attached Remote Workstation

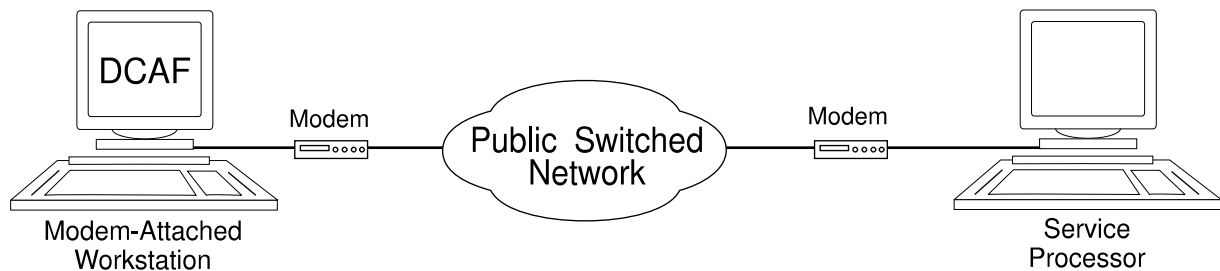


Figure 6-1. Modem-Attached Configuration

This chapter shows you how to do the following:

- Navigate a path from a remote workstation to a service processor, via public switched networks with SDLC links to modems.
- Configure a DCAF session for controlling the service processor (see Figure 6-1).

Parameters

The parameter values of your remote workstation must match the parameter values of the service processor. For more information, see the Appendix of the *Planning Guide*, GA33-0457.

If you have **more than one** target service processor, you must respect the same parameter-matching rules. For more information, refer to Appendix A, "Configuration for a Two-Target Remote Workstation."

Modem Settings

Modem configurations in CS/2 will not work unless your modem is set correctly. To set your modem, see the following in "Settings for IBM Modems 7855, 7857, and 7858" on page 12-2.

- 7855 modem, see "Setting the IBM 7855 Modem" on page 12-2.
- 7857 modem connected to MPA card, see "Setting the IBM 7857 Modem Connected to MPA Card (SYN)" on page 12-4.
- 7857 modem connected to COM1, see "Setting the 7857 Modem Connected to COM1 (ASYN)" on page 12-5.
- 7857 modem connected to COM2, see "Setting the 7857 Modem Connected to MPA Card on COM2 (ASYN)" on page 12-5.
- 7858 modem, see "Setting the IBM 7858 Modem Connected to MPA Card (SYN)" on page 12-6.
- 7858 modem connected to COM1, see "Setting the 7858 Modem Connected to COM1 (ASYN)" on page 12-6.
- 7858 modem connected to COM2, see "Setting the 7858 Modem Connected to MPA Card on COM2 (ASYN)" on page 12-6.

Configuring Modems in CS/2 and CM/2

The procedures for configuring your modem differ slightly if you are using CS/2 or CM/2. The procedures for CS/2 are described here; any differences from CM/2 are noted accordingly. As a guide to configuring the different types of modem, configuration files on diskette are included with this book (see “CS/2 and CM/2 Configuration Files” below).

Setting Parameter Values for Modems

You must match the parameter values in the following procedures with the matching values in MOSS-E. Entries in the **Network ID** of the **Netview Link(s)/Reporting Customization** screen and the **SDLC** field of the **DCAF Customization** screen (see figures below) must be the same as the values in the **Connection to a Peer Node** screen (see Step 19 on page 6-10). For more information, see *Service Processor Installation and Maintenance*, SY33-2120 and SY33-2115.

The image shows two side-by-side screenshots of configuration windows. The left window is titled 'NetView Link(s)/Reporting Customization' and contains sections for 'Generate alerts', 'NetView Link(s)', 'Machine Identification', 'Local Node Characteristics', 'LAN Link', and 'Switched SDLC Link Telephone Number'. The right window is titled 'DCAF Customization' and contains sections for 'Attached Consoles' and 'SDLC Attached Console'. Both windows have navigation buttons at the bottom: '<<Previous', 'Next>>', and 'Help'.

CS/2 and CM/2 Configuration Files

Configuration files on diskette are included with this book to help you with configuring modems. The CS/2 configuration diskette 02L3852 and the CM/2 configuration diskette 02L3851 contain the following configuration directories:

- I7855SYN for 7855 modems in synchronous mode.
- I7855ASY for 7855 modems in asynchronous mode.
- I7857SYN for 7857 modems in synchronous mode.
- I7857ASY for 7857 modems in asynchronous mode.
- I7857AUT for 7857 modems in auto-synchronous mode.
- HAYESASY for Hayes modems in asynchronous mode.
- HAYESAUT for Hayes modems in auto-synchronous mode.

Important

Load these configuration files into the CMLIB directory of your hard disk before configuring your modem.

Modem Configuration

Tables of Procedures for Configuring Modems

The tables below apply to the following types of service processors:

- Table 6-1 for service processors 9577 and 9585.
- Table 6-2 on page 6-4 for service processor 3172.
- Table 6-3 on page 6-5 for service processor 7585.

Each table contains the page numbers of procedures that apply to your modem.

Table of Procedures for Service Processors 9577 and 9585

Table 6-1. Modem Connections between a Remote Workstation and Target Service Processors 9577 and 9585											
9585 and 9577 (Connection Type and Mode)	Modem Type	Remote Workstation DCAF Modem Type									
		MPA Card Connection			COM1 Port Connection						
		7855	7857	7858	7855	7857		7858		Hayes	
		SYNC			ASY	ASY	AUTO	ASY	AUTO	ASY	AUTO
MPA Card SYNC	7855	Page 6-5	Page 6-10	Page 6-10	-	-	Page 6-26	-	Page 6-26	-	Page 6-36
	7857	Page 6-5	Page 6-10	Page 6-10	-	-	Page 6-26	-	Page 6-26	-	Page 6-36
	7858	Page 6-5	Page 6-10	Page 6-10	-	-	Page 6-26	-	Page 6-26	-	Page 6-36
	INT	Page 6-5	Page 6-10	Page 6-10	-	-	Page 6-26	-	Page 6-26	-	Page 6-36
COM1 ASY	7857	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
	7858	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
	Hayes	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
Note: MPA Multi-protocol Adapter Card SYNC Synchronous Mode ASY Asynchronous Mode AUTO Auto-Synchronous Mode											

Table of Procedures for Service Processor 3172

Table 6-2. Modem Connections between a Remote Workstation and a Target Service Processor 3172

3172 (Connection Type and Mode)	Modem Type	Remote Workstation DCAF Modem Type									
		MPA Card Connection			COM1 Port Connection						
		7855	7857	7858	7855	7857		7858		Hayes	
		SYNC			ASY	ASY	AUTO	ASY	AUTO	ASY	AUTO
MPA Card SYNC	7855	Page 6-5	Page 6-10	Page 6-10	-	-	Page 6-26	-	Page 6-26	-	Page 6-36
	7857	Page 6-5	Page 6-10	Page 6-10	-	-	Page 6-26	-	Page 6-26	-	Page 6-36
	7858	Page 6-5	Page 6-10	Page 6-10	-	-	Page 6-26	-	Page 6-26	-	Page 6-36
COM1 ASY	7857	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
	7858	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
	Hayes	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
MPA Card COM2	7857	-	-	-	Page 6-15	Page 6-15	-	Page 6-21	-	Page 6-31	-
	7858	-	-	-	Page 6-15	Page 6-15	-	Page 6-21	-	Page 6-31	-
Note: MPA Multi-protocol Adapter Card SYNC Synchronous Mode ASY Asynchronous Mode AUTO Auto-Synchronous Mode											

Table of Procedures for Service Processor 7585

Table 6-3. Modem Connections between a Remote Workstation and a Target Service Processor 7585


7585 (Connection Type and Mode)	Modem Type	Remote Workstation DCAF Modem Type									
		MPA Card Connection			COM1 Port Connection						
		7855	7857	7858	7855	7857		7858		Hayes	
		SYNC			ASY	ASY	AUTO	ASY	AUTO	ASY	AUTO
COM1 ASY	7857	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
	7858	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
	Hayes	-	-	-	Page 6-15	Page 6-21	-	Page 6-21	-	Page 6-31	-
Note: MPA Multi-protocol Adapter Card SYNC Synchronous Mode ASY Asynchronous Mode AUTO Auto-Synchronous Mode											

Modem 7855 in Synchronous Mode to Service Processor 9577, 9585, and 3172 via MPA Card in Synchronous Mode


Procedure 1 - Configuration File I7855SYN

- Step 1.** Double-click the **Communications Server** icon on your desktop.
- Step 2.** Click **Setup**.
- Step 3.** Under **Directories**, double-click the CMLIB directory and double-click **I7855SYN** to display the configuration file.
- Step 4.** Click **OK**. A message prompts you to select the configuration file for your workstation. Click **OK** and then **Continue**.
- Step 5.** Select **SDLC** (in CM/2, **SDLC using SNA Phone Connections**), **APPC APIs**, and click **Configure**.


Step 6. Select **SNA Phone Connect - Port Connection Manager**, click **Configure** and **Continue**.

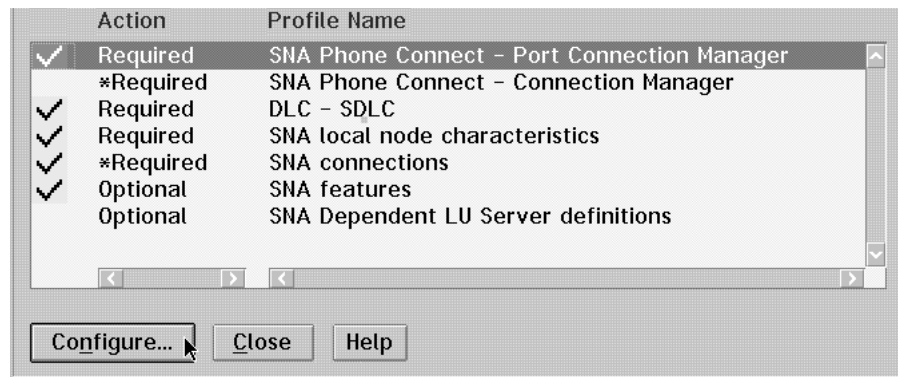

Step 7. Select **Synchronous switched**, a modem type and click **Configure**.

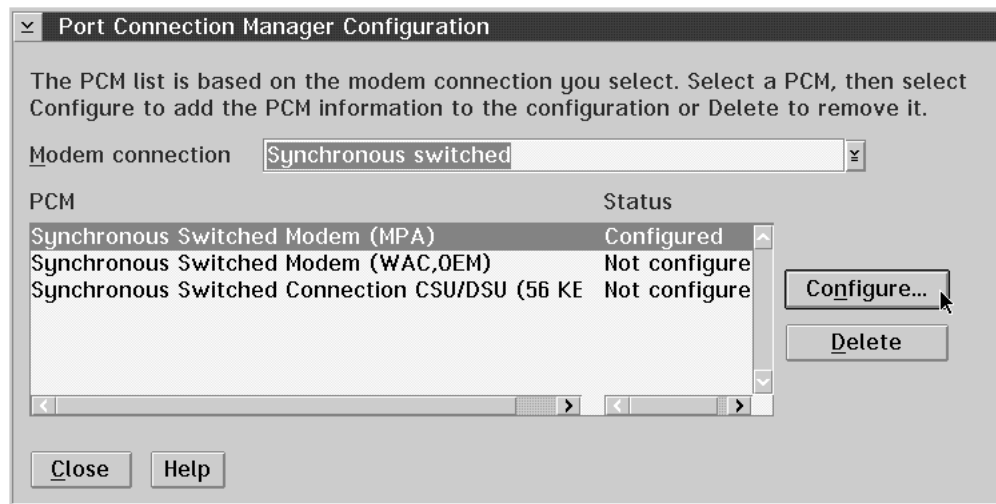

- Step 8.** Enter the MPA number in the **Port name** field, the number of your modem in the **Local phone number** field, click **OK** and **Close**.

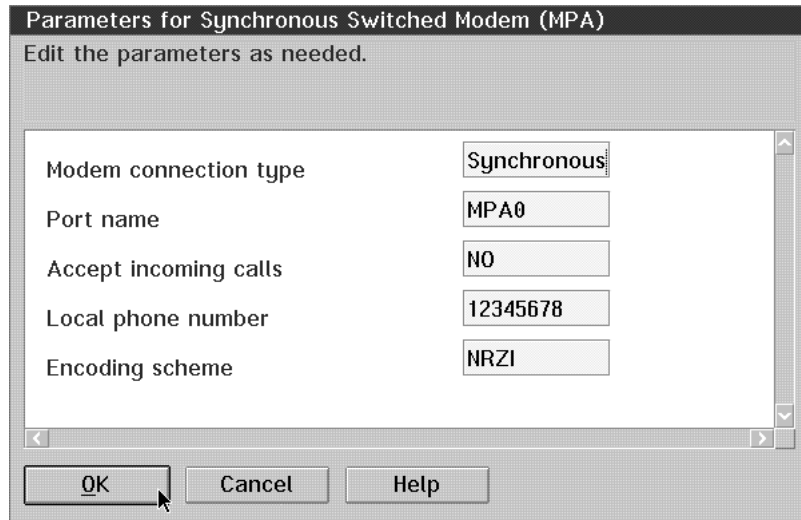


A dialog box titled "Parameters for Synchronous Switched Modem (MPA)" with the instruction "Edit the parameters as needed." It contains five text input fields: "Modem connection type" (Synchronous), "Port name" (MPA0), "Accept incoming calls" (NO), "Local phone number" (12345678), and "Encoding scheme" (NRZI). At the bottom are "OK", "Cancel", and "Help" buttons. A mouse cursor is pointing at the "OK" button.

- Step 9.** Select **SNA Phone Connect - Connection Manager** and click **Configure**.


- Step 10.** Select **SP123456** and click **Change**.

Note: The directory entry file contains information on the target service processor that you are dialing. You can use **SP123456** and rename it for your own purposes. If you add a new workstation, you must create a new name.

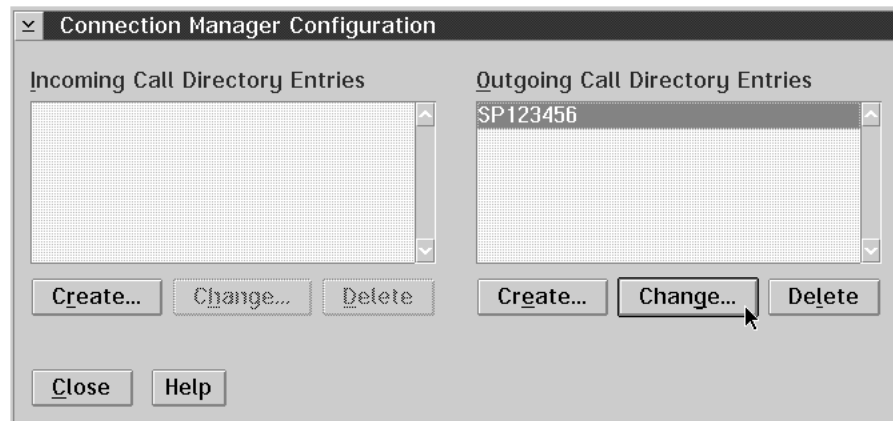

A dialog box titled "Connection Manager Configuration" with two list boxes: "Incoming Call Directory Entries" (empty) and "Outgoing Call Directory Entries" (containing "SP123456"). Below each list box are "Create...", "Change...", and "Delete" buttons. At the bottom are "Close" and "Help" buttons. A mouse cursor is pointing at the "Change..." button under the "Outgoing Call Directory Entries" list.

Step 11. Select **Modem/Line Characteristics** and click **Change**.

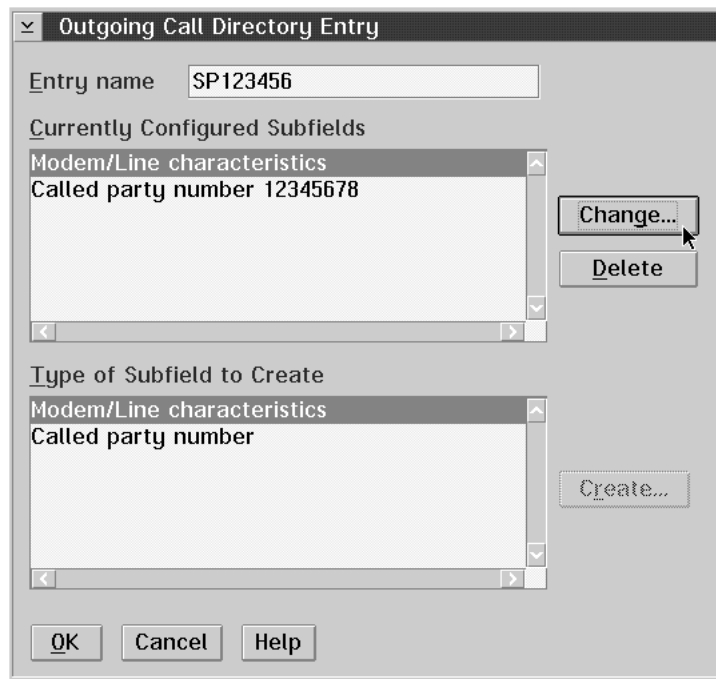

Step 12. Select **Synchronous, NRZI** for the encoding scheme and click **OK**.


Step 13. Select the **Called party number** (in CM/2, this is **SP123456**) and click **Change**.

Step 14. Enter the phone-number of the service processor modem and click **OK**, then **OK** again on the subsequent screen.



Step 15. Select **SNA local node characteristics**, click **Configure** and **Continue**.

Step 16. Modify the **Network ID** and **Local node name** fields for your remote workstation and click **OK**.

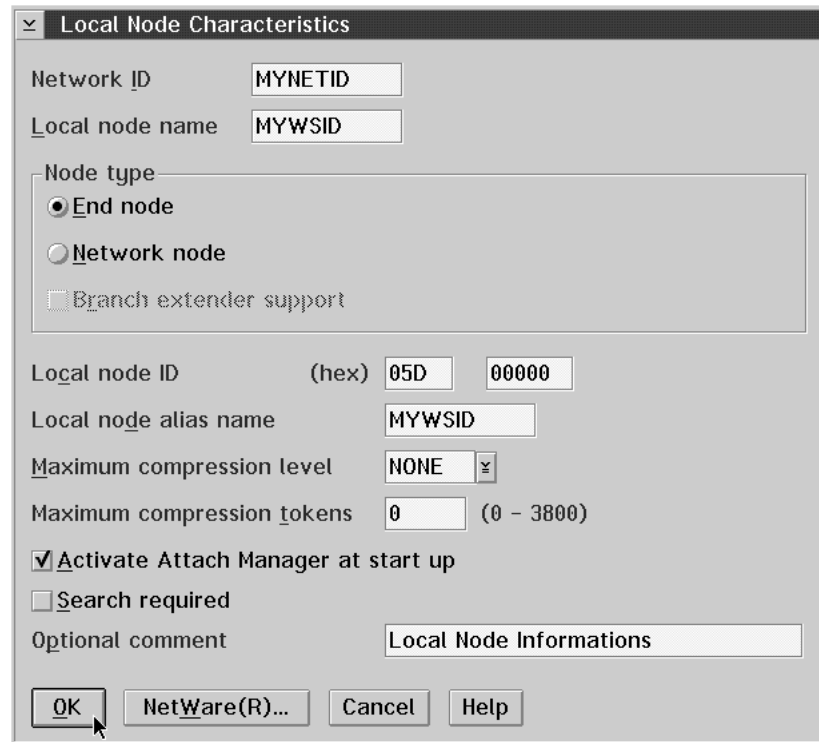


The 'Local Node Characteristics' dialog box contains the following fields and options:

- Network ID:** MYNETID
- Local node name:** MYWSID
- Node type:**
 - ☒ End node
 - ☐ Network node
 - ☐ Branch extender support
- Local node ID (hex):** 05D 00000
- Local node alias name:** MYWSID
- Maximum compression level:** NONE
- Maximum compression tokens:** 0 (0 - 3800)
- ☒ Activate Attach Manager at start up
- ☐ Search required
- Optional comment:** Local Node Informations
- Buttons:** OK, NetWare(R)..., Cancel, Help

Step 17. Select **SNA connections**, click **Configure** and **Continue**.

Step 18. Select **To peer node**, the service processor link name and click **Change** and **Continue**.

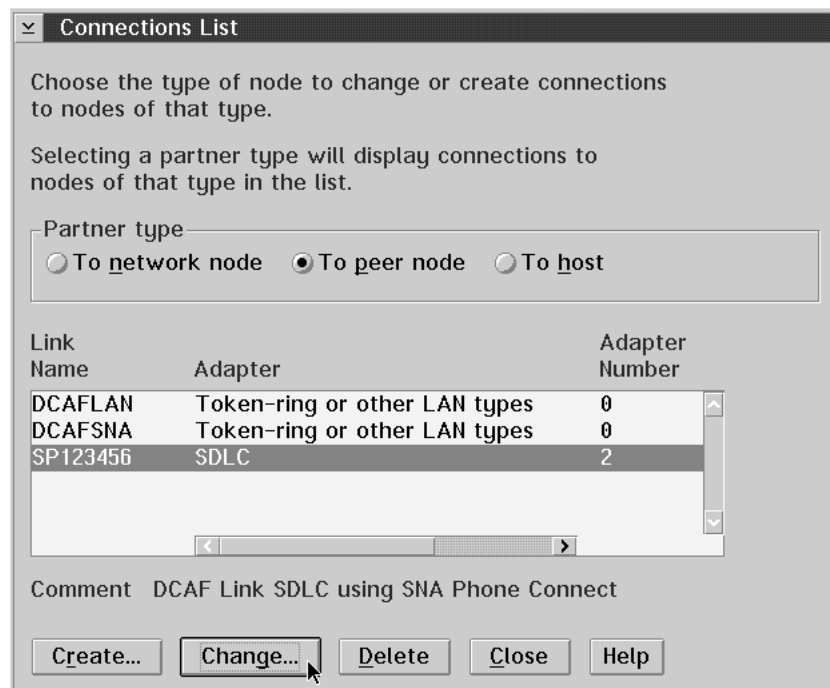

The 'Connections List' dialog box contains the following elements:

- Instructions:**
 - Choose the type of node to change or create connections to nodes of that type.
 - Selecting a partner type will display connections to nodes of that type in the list.
- Partner type:**
 - ☐ To network node
 - ☒ To peer node
 - ☐ To host
- Table:**

Link Name	Adapter	Adapter Number
DCAFLAN	Token-ring or other LAN types	0
DCAFSNA	Token-ring or other LAN types	0
SP123456	SDLC	2
- Comment:** DCAF Link SDLC using SNA Phone Connect
- Buttons:** Create..., Change..., Delete, Close, Help

- Step 19.** Check that the entries in the **Partner network ID** and **Partner node name** fields match the entries in MOSS-E (see “Setting Parameter Values for Modems” on page 6-2). Select the service processor directory name in the **Outgoing call directory entry** field and click **OK**.

Connection to a Peer Node

Link name SP123456 ☐ Activate at startup

Adjacent node ID (hex)

Partner network ID SYSTST

Partner node name DCAFS DLC (Required for partner LU definition)

☐ Permanent connection

Permanent connection name ☐

Outgoing call directory entry SP123456

Optional comment DCAF Link SDLC using SNA Phone Connect

OK Define Partner LUs... Cancel Help

- Step 20.** Close the subsequent screens until you exit CS/2.


- Step 21.** See “Customizing DCAF” on page 6-41 for installing a target service processor.

Modem 7855 in Asynchronous Mode to Service Processor 9577, 9585, 3172, and 7585 via Serial Port


Procedure 2 - Configuration File I7855ASY

- Step 1.** Double-click the **Communications Server** icon on your desktop.
- Step 2.** Click **Setup**.
- Step 3.** Under **Directories**, double-click the CMLIB directory and double-click **I7855ASY** to display the configuration file.
- Step 4.** Click **OK**. A message prompts you to select the configuration file for your workstation. Click **OK** and then **Continue**.
- Step 5.** Select **SDLC** (in CM/2, **SDLC using SNA Phone Connections**), **APPC APIs**, and click **Configure**.


Step 6. Select **SNA Phone Connect - Port Connection Manager**, click **Configure** and **Continue**.

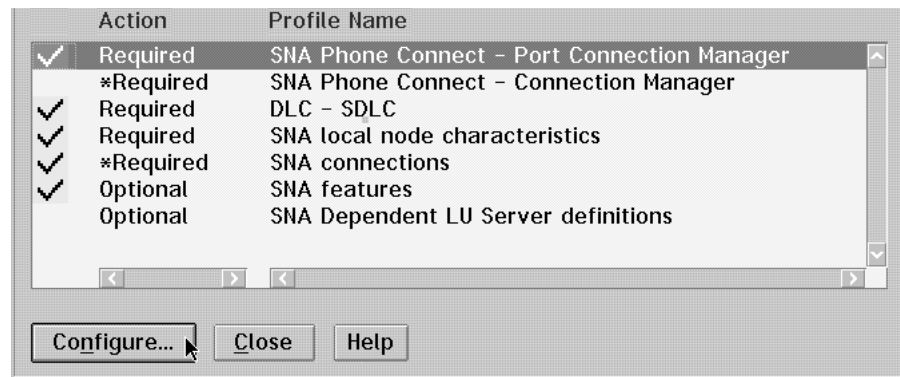

Step 7. Select **Asynchronous switched**, a 7855 modem type and click **Configure**.

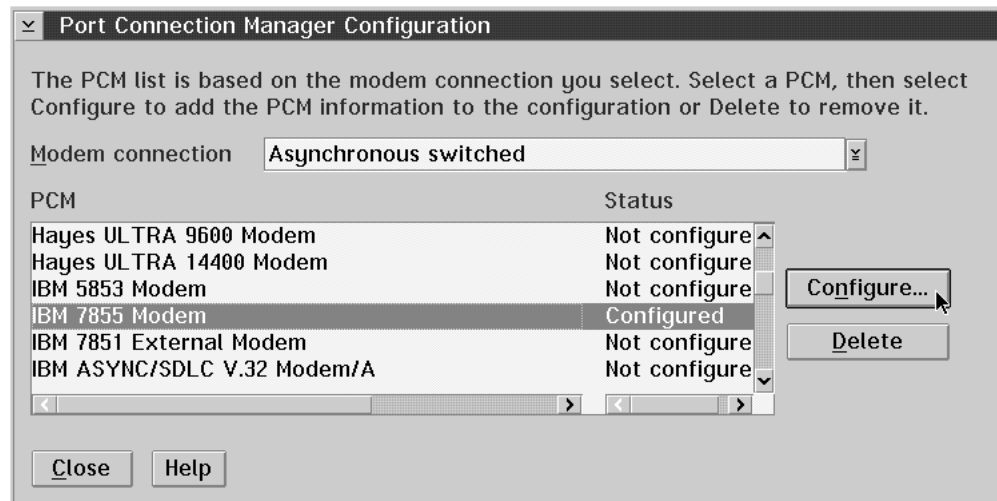

- Step 8.** Enter the port number in the **Port name** field, the number of your modem in the **Local phone number** field, click **OK** and **Close**.

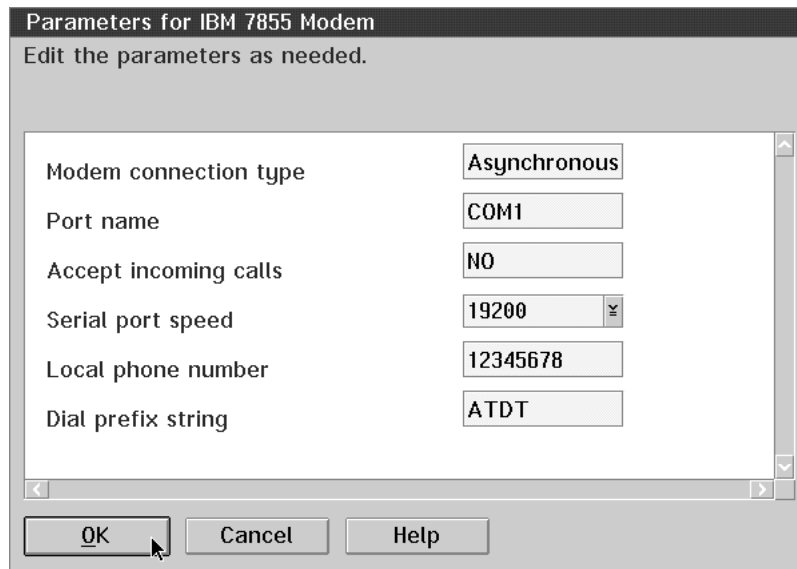


The dialog box is titled "Parameters for IBM 7855 Modem" and contains the instruction "Edit the parameters as needed." It features several input fields: "Modem connection type" (Asynchronous), "Port name" (COM1), "Accept incoming calls" (NO), "Serial port speed" (19200), "Local phone number" (12345678), and "Dial prefix string" (ATDT). At the bottom are "OK", "Cancel", and "Help" buttons.

Modem connection type	Asynchronous
Port name	COM1
Accept incoming calls	NO
Serial port speed	19200
Local phone number	12345678
Dial prefix string	ATDT

- Step 9.** Select **SNA Phone Connect - Connection Manager** and click **Configure**.

- Step 10.** Select **SP123456** and click **Change**.


Note: The directory entry file contains information on the target service processor that you are dialing. You can use **SP123456** and rename it for your own purposes. If you add a new workstation, you must create a new name.

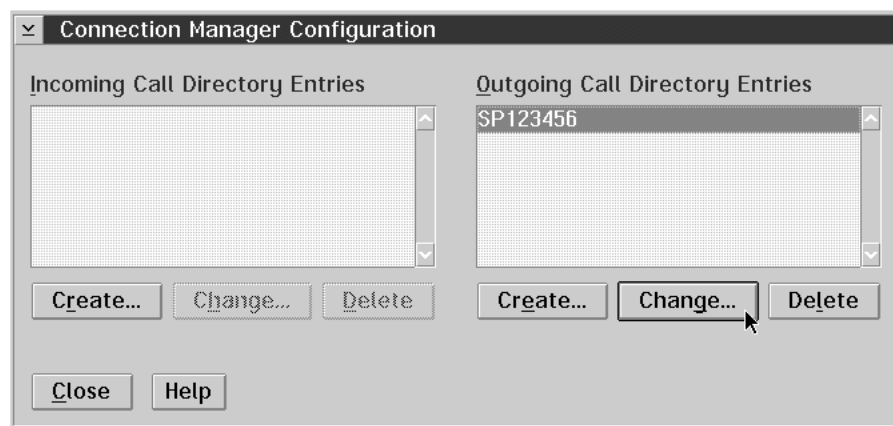

The dialog box is titled "Connection Manager Configuration" and is divided into two sections: "Incoming Call Directory Entries" and "Outgoing Call Directory Entries". The "Outgoing Call Directory Entries" section contains a list with the entry "SP123456". Below each list are "Create...", "Change...", and "Delete" buttons. At the bottom are "Close" and "Help" buttons.

Incoming Call Directory Entries	Outgoing Call Directory Entries
	SP123456


Step 11. Select **Modem/Line Characteristics** and click **Change**.

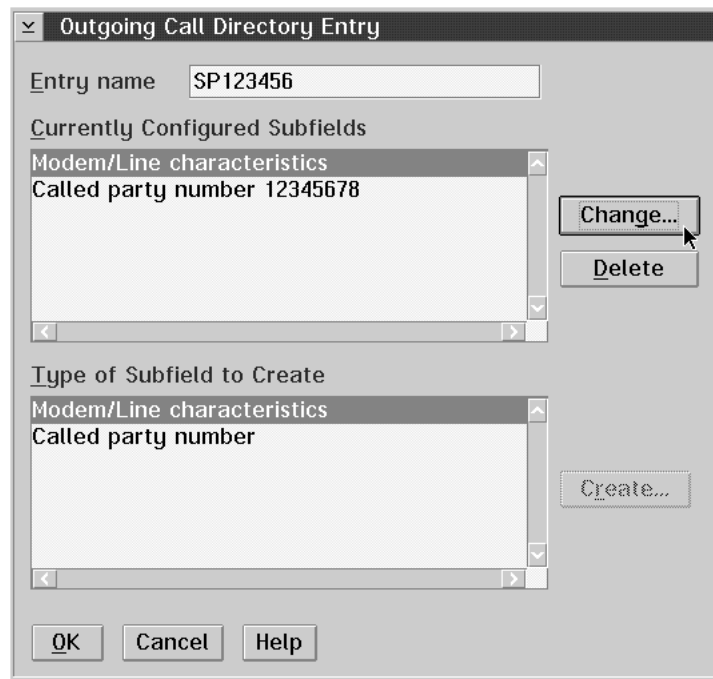

Step 12. Select **Asynchronous, ISO3309** as the framing standard and click **OK**.


Step 13. Select the **Called party number** (in CM/2, this is **SP123456**) and click **Change**.

Step 14. Enter the phone-number of the service processor modem and click **OK**, then **OK** again on the subsequent screen.

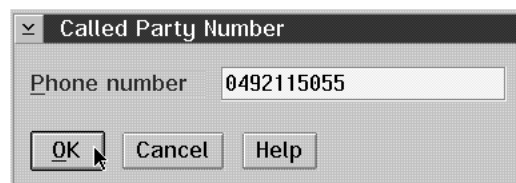

Step 15. Select **SNA local node characteristics** and click **Configure** and **Continue**.

Step 16. Modify the **Network ID** and **Local node name** fields for your remote workstation and click **OK**.

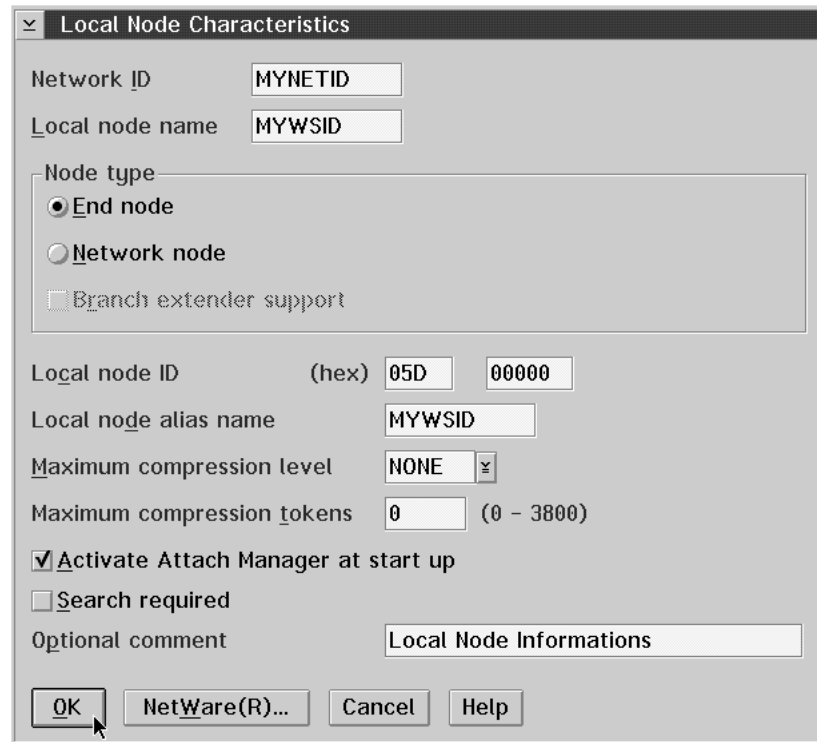


The 'Local Node Characteristics' dialog box contains the following fields and options:

- Network ID:** MYNETID
- Local node name:** MYWSID
- Node type:**
 - ☒ End node
 - ☐ Network node
 - ☐ Branch extender support
- Local node ID (hex):** 05D 00000
- Local node alias name:** MYWSID
- Maximum compression level:** NONE
- Maximum compression tokens:** 0 (0 - 3800)
- ☒ Activate Attach Manager at start up
- ☐ Search required
- Optional comment:** Local Node Informations
- Buttons:** OK, NetWare(R)..., Cancel, Help

Step 17. Select **SNA connections**, click **Configure** and **Continue**.

Step 18. Select **To peer node**, the service processor link name and click **Change** and **Continue**.

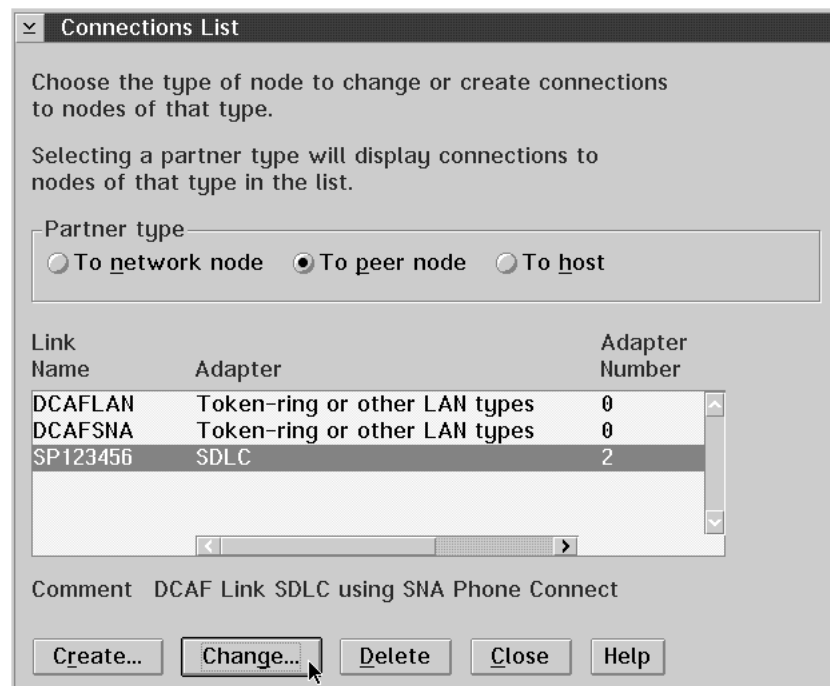

The 'Connections List' dialog box contains the following elements:

- Instructions:**
 - Choose the type of node to change or create connections to nodes of that type.
 - Selecting a partner type will display connections to nodes of that type in the list.
- Partner type:**
 - ☐ To network node
 - ☒ To peer node
 - ☐ To host
- Table:**

Link Name	Adapter	Adapter Number
DCAFLAN	Token-ring or other LAN types	0
DCAFSNA	Token-ring or other LAN types	0
SP123456	SDLC	2
- Comment:** DCAF Link SDLC using SNA Phone Connect
- Buttons:** Create..., Change..., Delete, Close, Help

- Step 19.** Check that the entries in the **Partner network ID** and **Partner node name** fields match the entries in MOSS-E (see “Setting Parameter Values for Modems” on page 6-2). Select the service processor directory name in the **Outgoing call directory entry** field and click **OK**.

Connection to a Peer Node

Link name SP123456 ☐ Activate at startup

Adjacent node ID (hex)

Partner network ID SYSTST

Partner node name DCAFS DLC (Required for partner LU definition)

☐ Permanent connection

Permanent connection name ☐

Outgoing call directory entry SP123456

Optional comment

DCAF Link SDLC using SNA Phone Connect

- Step 20.** Close the subsequent screens until you exit CS/2.


- Step 21.** See “Customizing DCAF” on page 6-41 for installing a target service processor.

Modem 7857 in Synchronous Mode to Service Processor 9577, 9585, and 3172 via MPA Card in Synchronous Mode


Procedure 3 - Configuration File I7857SYN

- Step 1.** Double-click the **Communications Server** icon on your desktop.
- Step 2.** Click **Setup**.
- Step 3.** Under **Directories**, double-click the CMLIB directory and double-click **I7857SYN** to display the configuration file.
- Step 4.** Click **OK**. A message prompts you to select the configuration file for your workstation. Click **OK** and then **Continue**.
- Step 5.** Select **SDLC** (in CM/2, **SDLC using SNA Phone Connections**), **APPC APIs**, and click **Configure**.


Step 6. Select **SNA Phone Connect - Port Connection Manager** and click **Configure** and **Continue**.

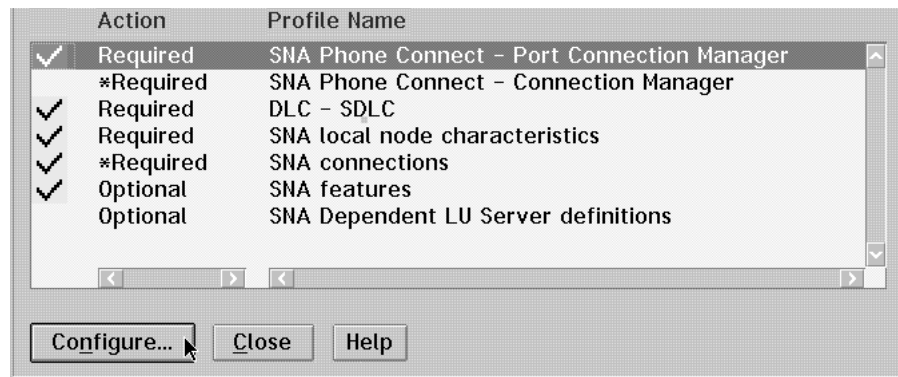

Step 7. Select **Synchronous switched, CSU/DSU** modem type and click **Configure**.

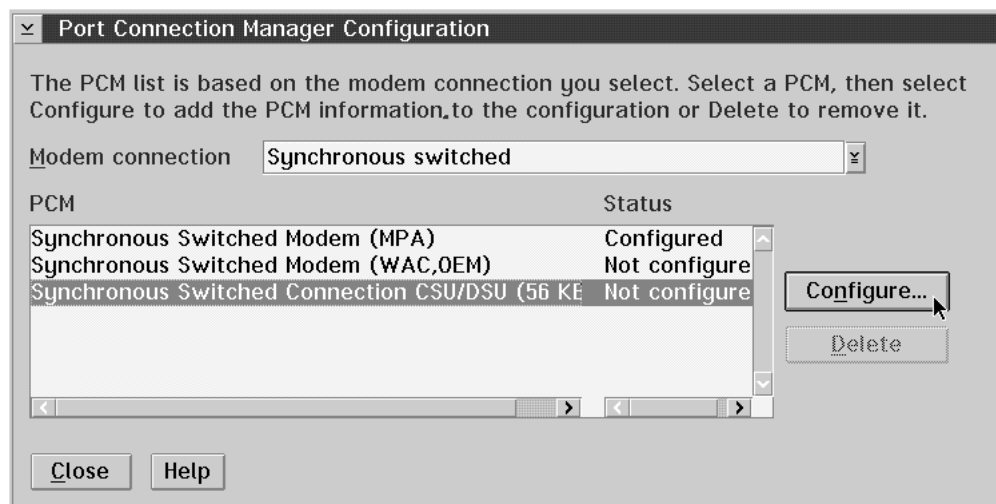

- Step 8.** Enter the MPA number in the **Port name** field, the number of your modem in the **Local phone number** field, click **OK** and **Close**.

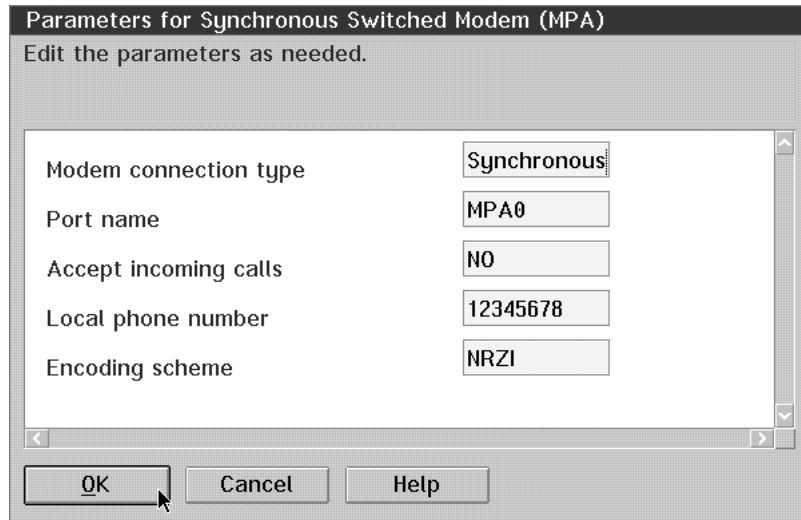

Parameters for Synchronous Switched Modem (MPA)
Edit the parameters as needed.


Modem connection type	Synchronous
Port name	MPA0
Accept incoming calls	NO
Local phone number	12345678
Encoding scheme	NRZI

OK Cancel Help

- Step 9.** Select **SNA Phone Connect - Connection Manager** and click **Configure**.

- Step 10.** Select **SP123456** and click **Change**.


Note: The directory entry file contains information on the target service processor that you are dialing. You can use **SP123456** and rename it for your own purposes. If you add a new workstation, you must create a new name.

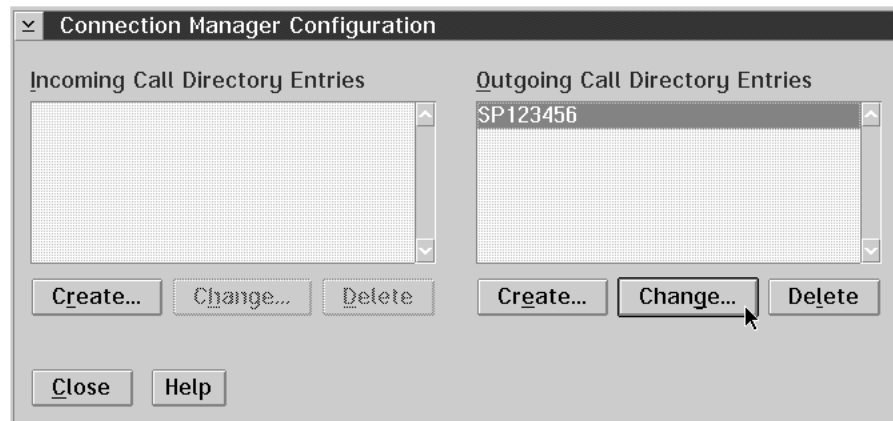


Connection Manager Configuration

Incoming Call Directory Entries	Outgoing Call Directory Entries
	SP123456
Create... Change... Delete	Create... Change... Delete
Close Help	

Step 11. Select **Modem/Line Characteristics** and click **Change**.

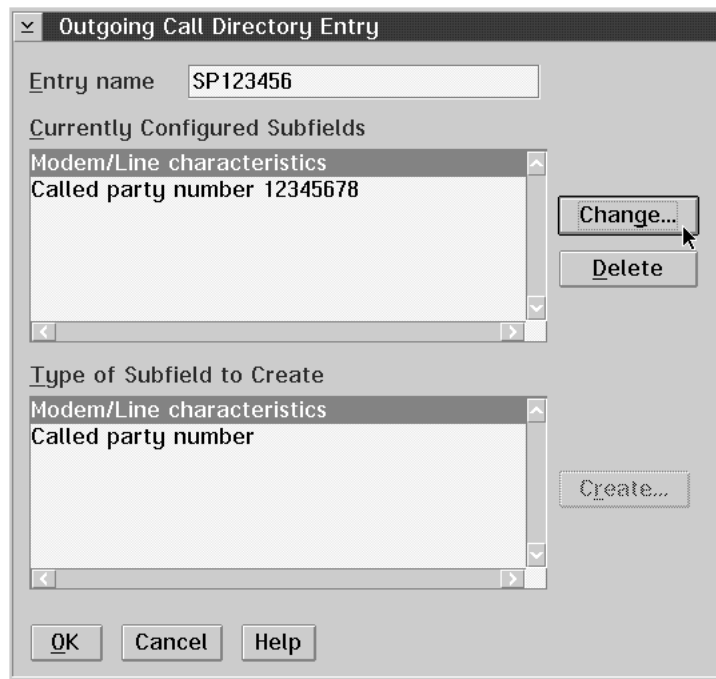


Step 12. Select **Synchronous**, **NRZI** for the encoding scheme and click **OK**.

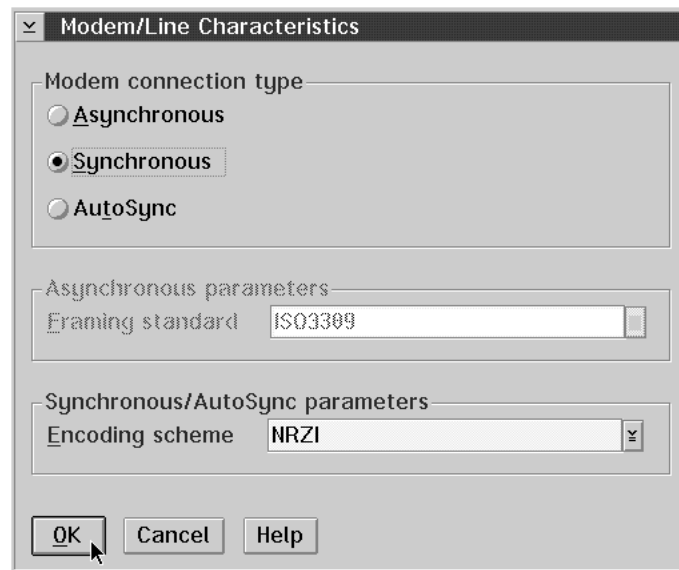

- Step 13.** Select the **Called party number** (in CM/2, this is **SP123456**) and click **Change**.
- Step 14.** Enter the phone-number of the service processor modem and click **OK**, then **OK** again on the subsequent screen.



- Step 15.** Select **SNA local node characteristics** and click **Configure** and **Continue**.
- Step 16.** Modify the **Network ID** and **Local node name** fields for your remote workstation and click **OK**.

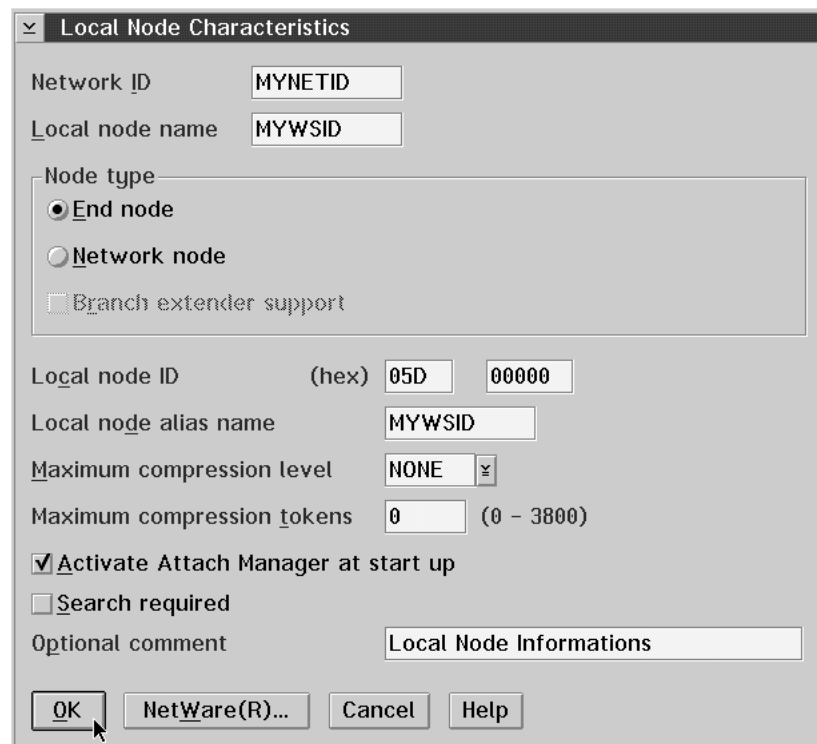

- Step 17.** Select **SNA connections**, click **Configure** and **Continue**.

Step 18. Select **To peer node**, the service processor link name and click **Change** and **Continue**.

Connections List

Choose the type of node to change or create connections to nodes of that type.

Selecting a partner type will display connections to nodes of that type in the list.

Partner type

☐ To network node ☒ To peer node ☐ To host

Link Name	Adapter	Adapter Number
DCAFLAN	Token-ring or other LAN types	0
DCAFSNA	Token-ring or other LAN types	0
SP123456	SDLC	2

Comment DCAF Link SDLC using SNA Phone Connect

Create... Change... Delete Close Help

Step 19. Check that the entries in the **Partner network ID** and **Partner node name** fields match the entries in MOSS-E (see “Setting Parameter Values for Modems” on page 6-2). Select the service processor directory name in the **Outgoing call directory entry** field and click **OK**.

Connection to a Peer Node

Link name SP123456 ☐ Activate at startup

Adjacent node ID (hex)

Partner network ID SYSTST

Partner node name DCAFSDLC (Required for partner LU definition)

☐ Permanent connection

Permanent connection name

Outgoing call directory entry SP123456

Optional comment DCAF Link SDLC using SNA Phone Connect

OK Define Partner LUs... Cancel Help


Step 20. Close the subsequent screens until you exit CS/2.

Step 21. See “Customizing DCAF” on page 6-41 for installing a target service processor.


Modem 7857 in Asynchronous Mode to Service Processor 9577, 9585, 3172, and 7585 via Serial Port

Procedure 4 - Configuration file I7857ASY


- Step 1.** Double-click the **Communications Server** icon on your desktop.
- Step 2.** Click **Setup**.
- Step 3.** Under **Directories**, double-click the CMLIB directory and double-click **I7857ASY** to display the configuration file.
- Step 4.** Click **OK**. A message prompts you to select the configuration file for your workstation. Click **OK** and then **Continue**.
- Step 5.** Select **SDLC** (in CM/2, **SDLC using SNA Phone Connections**), **APPC APIs**, and click **Configure**.
- Step 6.** Select **SNA Phone Connect - Port Connection Manager**, click **Configure** and **Continue**.

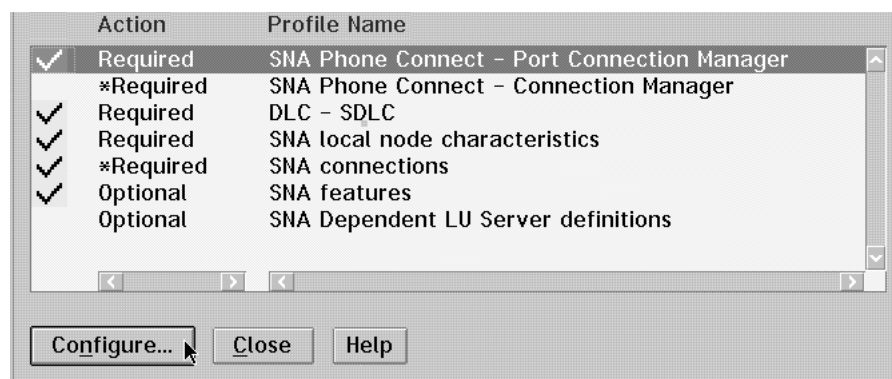

- Step 7.** Select **Asynchronous switched, User defined** and click **Configure**.

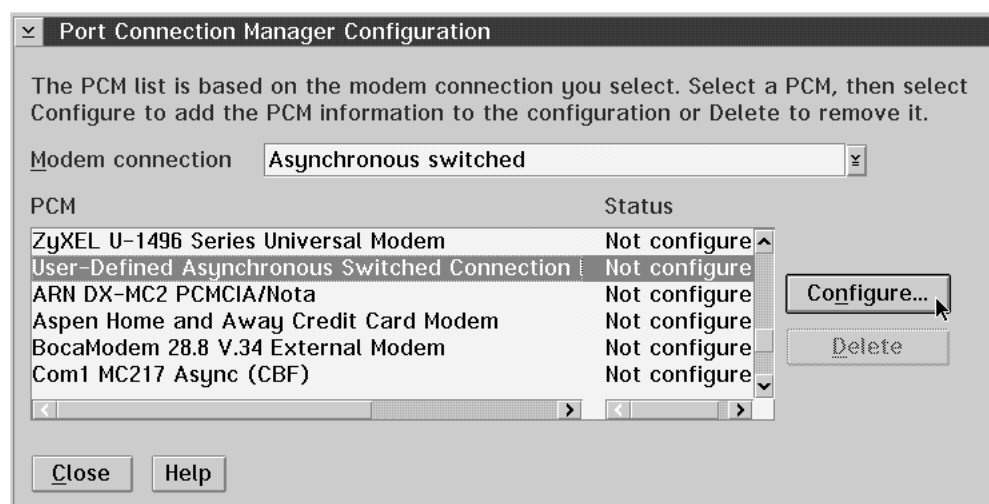

- Step 8.** Enter the port number in the **Port name** field, the number of your modem in the **Local phone number** field, click **OK** and **Close**.

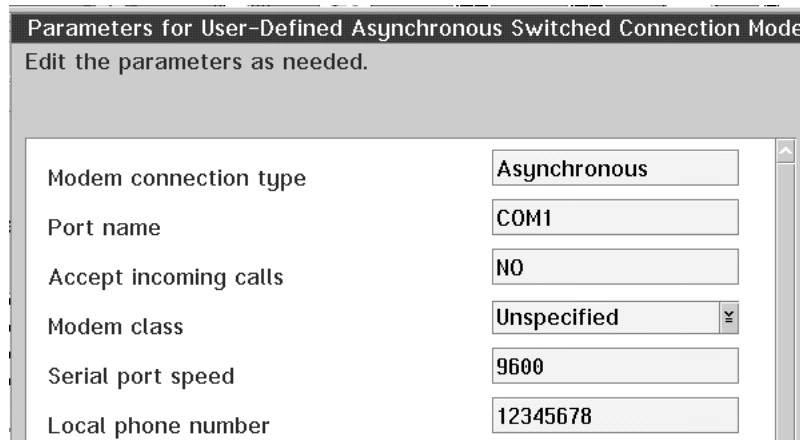


Parameters for User-Defined Asynchronous Switched Connection Mode
Edit the parameters as needed.

Modem connection type	Asynchronous
Port name	COM1
Accept incoming calls	NO
Modem class	Unspecified
Serial port speed	9600
Local phone number	12345678

- Step 9.** Select **SNA Phone Connect - Connection Manager** and click **Configure**.

- Step 10.** Select **SP123456** and click **Change**.


Note: The directory entry file contains information on the target service processor that you are dialing. You can use **SP123456** and rename it for your own purposes. If you add a new workstation, you must create a new name.

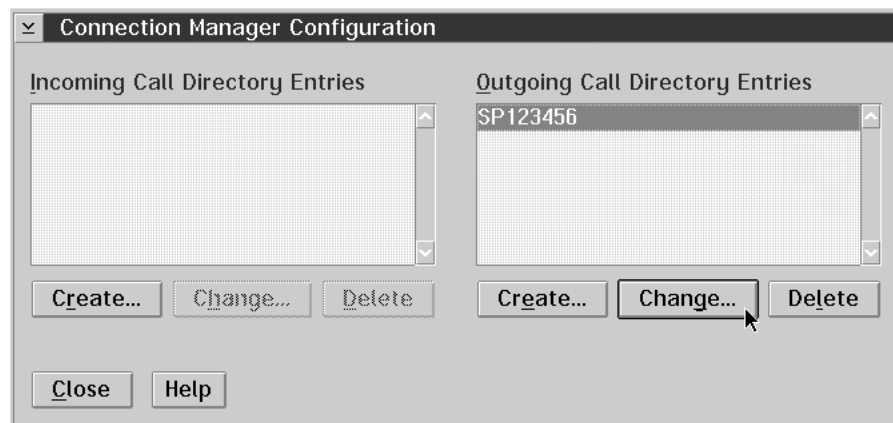


Connection Manager Configuration

Incoming Call Directory Entries	Outgoing Call Directory Entries
	SP123456
Create... Change... Delete	Create... Change... Delete
Close Help	

Step 11. Select **Modem/Line Characteristics** and click **Change**.

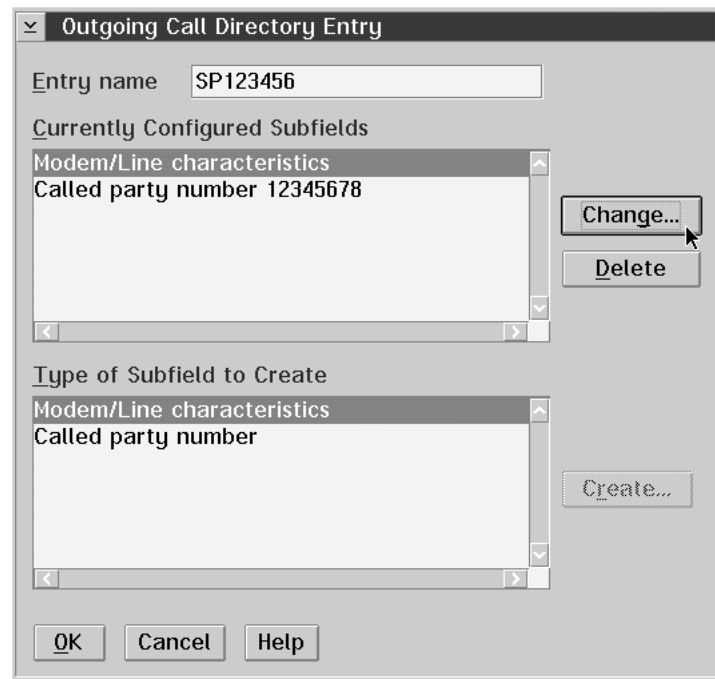

Step 12. Select **Asynchronous, ISO3309** as the framing standard and click **OK**.

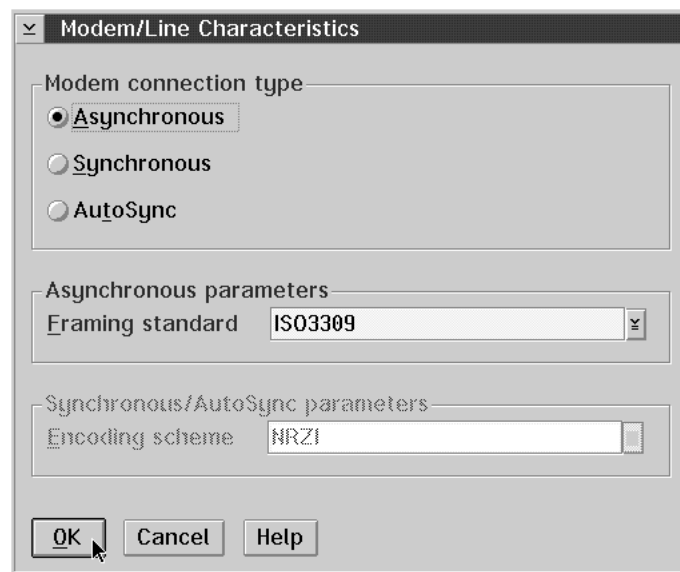

Step 13. Select the **Called party number** (in CM/2, this is **SP123456**) and click **Change**.

Step 14. Enter the phone-number of the service processor modem and click **OK**, then **OK** again on the subsequent screen.

A dialog box titled "Called Party Number" with a close button (X) in the top-left corner. It contains a text field labeled "Phone number" with the value "0492115055". At the bottom, there are three buttons: "OK", "Cancel", and "Help". A mouse cursor is pointing at the "OK" button.


Called Party Number

Phone number 0492115055

OK Cancel Help

Step 15. Select **SNA local node characteristics**, click **Configure** and **Continue**.

Step 16. Modify the **Network ID** and **Local node name** fields for your remote workstation and click **OK**.

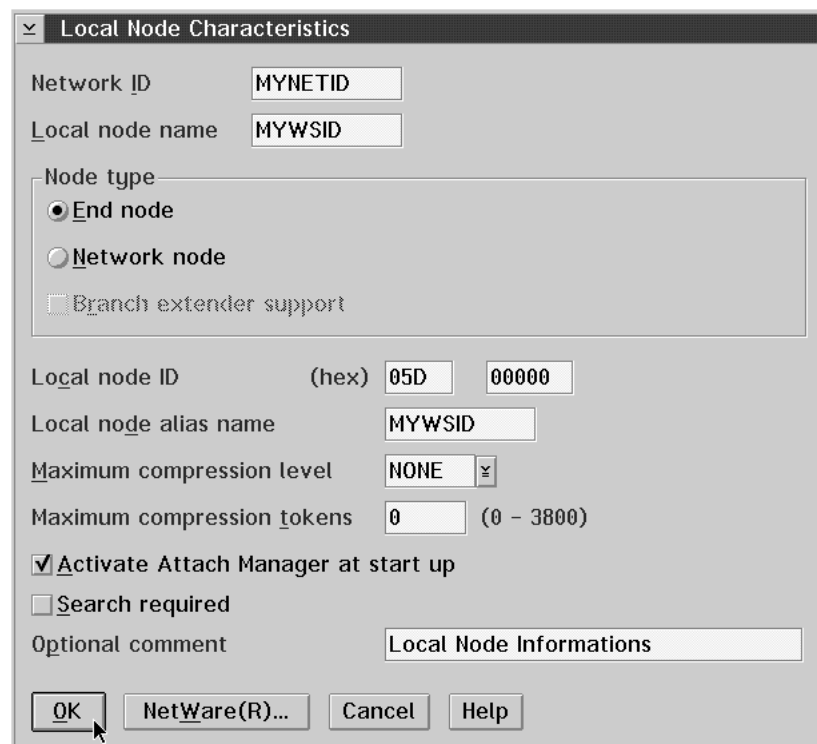A dialog box titled "Local Node Characteristics" with a close button (X) in the top-left corner. It contains several fields and options: "Network ID" (MYNETID), "Local node name" (MYWSID), "Node type" (radio buttons for "End node" and "Network node", with "End node" selected, and a checkbox for "Branch extender support"), "Local node ID (hex)" (05D and 00000), "Local node alias name" (MYWSID), "Maximum compression level" (NONE), "Maximum compression tokens" (0, with a range of 0 - 3800), a checked checkbox for "Activate Attach Manager at start up", an unchecked checkbox for "Search required", and an "Optional comment" field (Local Node Informations). At the bottom, there are four buttons: "OK", "NetWare(R)...", "Cancel", and "Help". A mouse cursor is pointing at the "OK" button.

Local Node Characteristics

Network ID MYNETID

Local node name MYWSID

Node type

☒ End node

☐ Network node

☐ Branch extender support

Local node ID (hex) 05D 00000

Local node alias name MYWSID

Maximum compression level NONE

Maximum compression tokens 0 (0 - 3800)

☒ Activate Attach Manager at start up


☐ Search required

Optional comment Local Node Informations


OK NetWare(R)... Cancel Help

Step 17. Select **SNA connections**, click **Configure** and **Continue**.

Step 18. Select **To peer node**, the service processor link name and click **Change** and **Continue**.

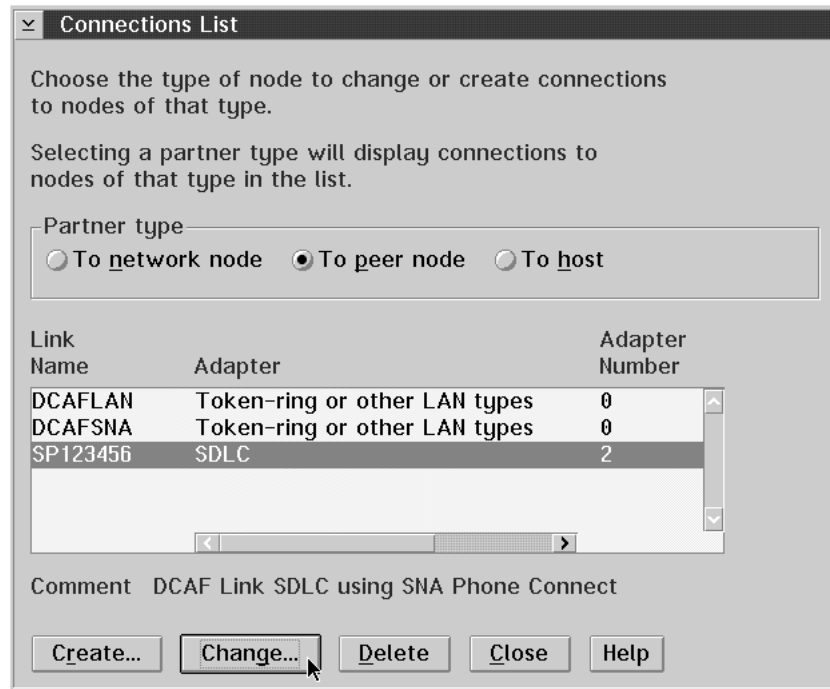

Step 19. Check that the entries in the **Partner network ID** and **Partner node name** fields match the entries in MOSS-E (see “Setting Parameter Values for Modems” on page 6-2). Select the service processor directory name in the **Outgoing call directory entry** field and click **OK**.

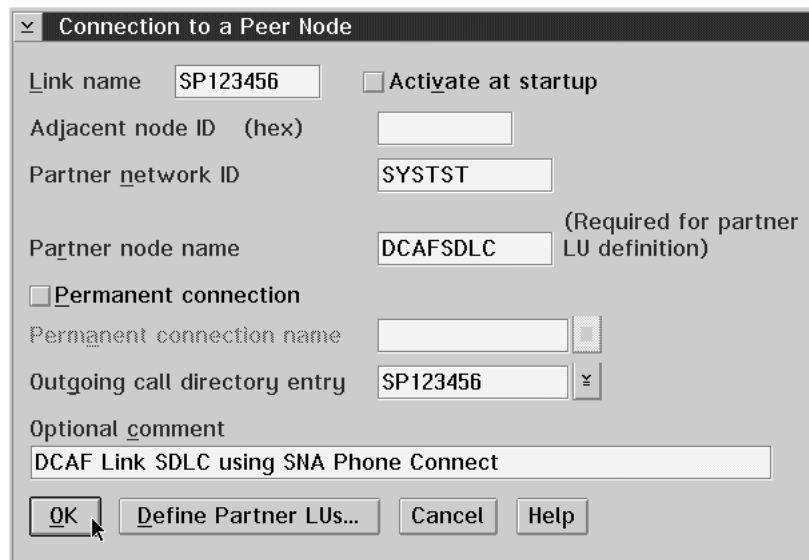


Step 20. Close the subsequent screens until you exit CS/2.

Step 21. See “Customizing DCAF” on page 6-41 for installing a target service processor.


Modem 7857 in Auto-Synchronous Mode to Service Processor 9577, 9585, and 3172 via MPA Card in Synchronous Mode

Procedure 5 - Configuration file I7857AUT


- Step 1.** Double-click the **Communications Server** icon on your desktop.
- Step 2.** Click **Setup**.
- Step 3.** Under **Directories**, double-click the CMLIB directory and double-click **I7857AUT** to display the configuration file.
- Step 4.** Click **OK**. A message prompts you to select the configuration file for your workstation. Click **OK** and then **Continue**.
- Step 5.** Select **SDLC** (in CM/2, **SDLC using SNA Phone Connections**), **APPC APIs**, and click **Configure**.
- Step 6.** Select **SNA Phone Connect - Port Connection Manager**, click **Configure** and **Continue**.

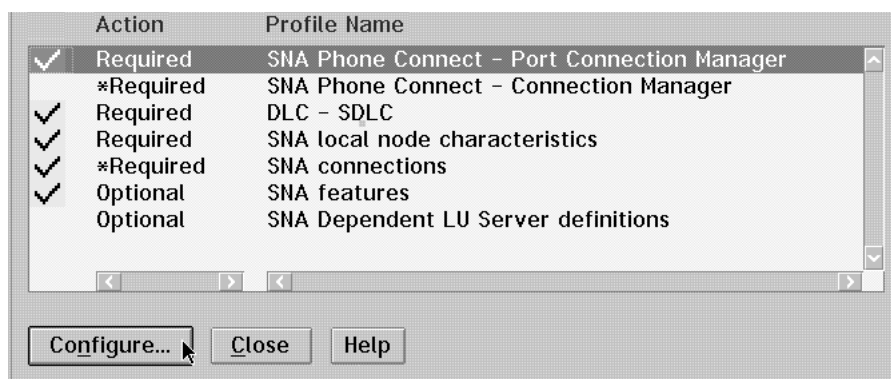

- Step 7.** Select **AutoSync, User defined** and click **Configure**.

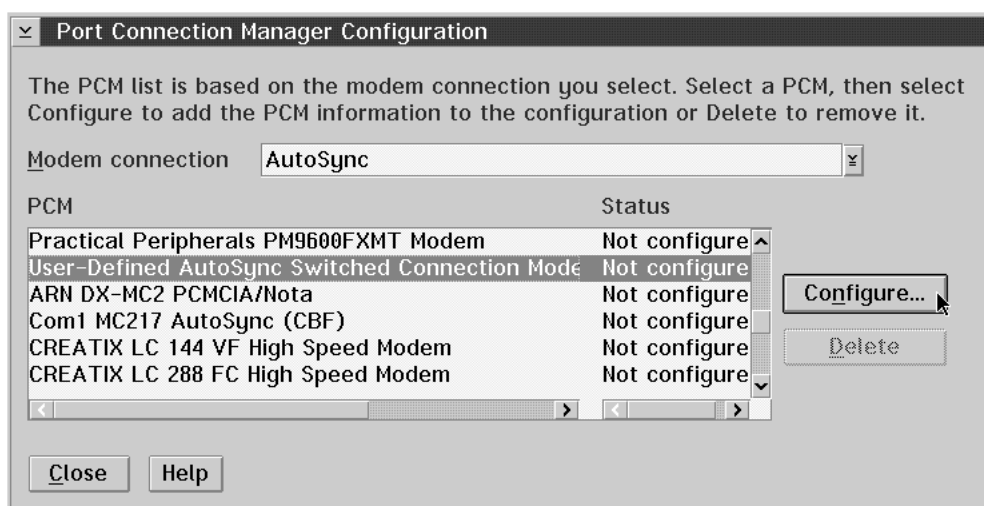

- Step 8.** Enter the MPA number in the **Port name** field, the number of your modem in the **Local phone number** field, click **OK** and **Close**.

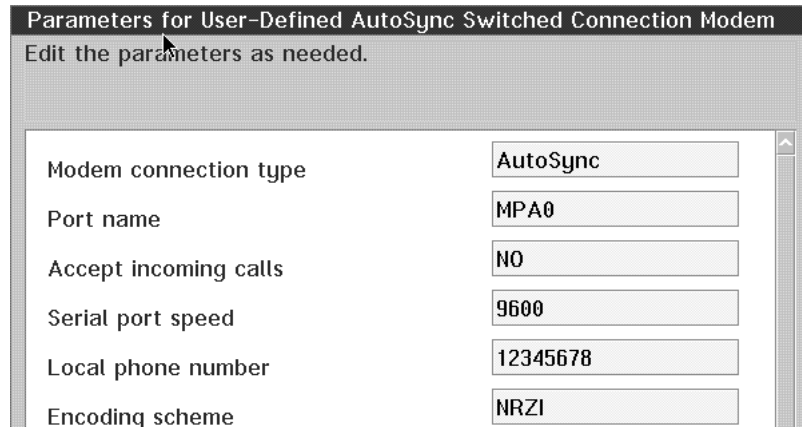


Parameters for User-Defined AutoSync Switched Connection Modem
Edit the parameters as needed.

Modem connection type	AutoSync
Port name	MPA0
Accept incoming calls	NO
Serial port speed	9600
Local phone number	12345678
Encoding scheme	NRZI

- Step 9.** Select **SNA Phone Connect - Connection Manager** and click **Configure**.

- Step 10.** Select **SP123456** and click **Change**.


Note: The directory entry file contains information on the target service processor that you are dialing. You can use **SP123456** and rename it for your own purposes. If you add a new workstation, you must create a new name.

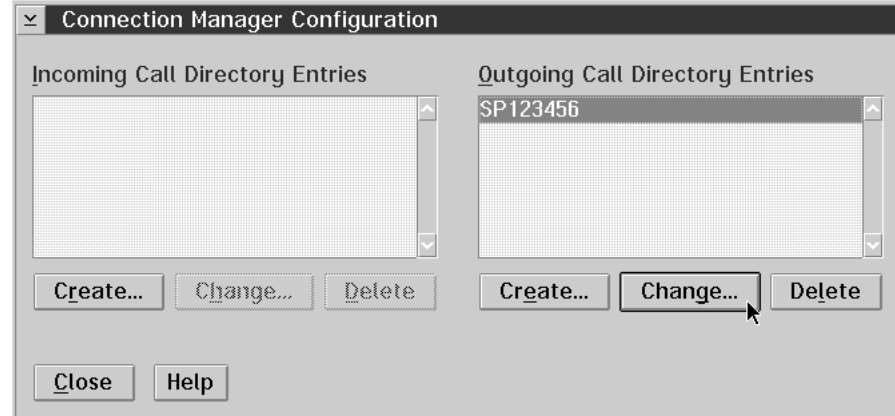


Connection Manager Configuration

Incoming Call Directory Entries	Outgoing Call Directory Entries
	SP123456
Create... Change... Delete	Create... Change... Delete
Close Help	

Step 11. Select **Modem/Line Characteristics** and click **Change**.

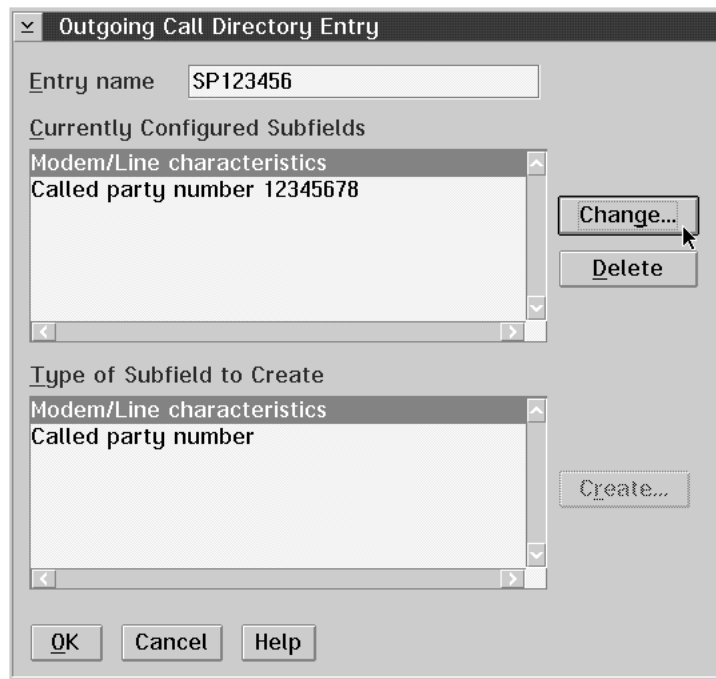

Step 12. Select **AutoSync**, **NRZI** as the encoding scheme and click **OK**.

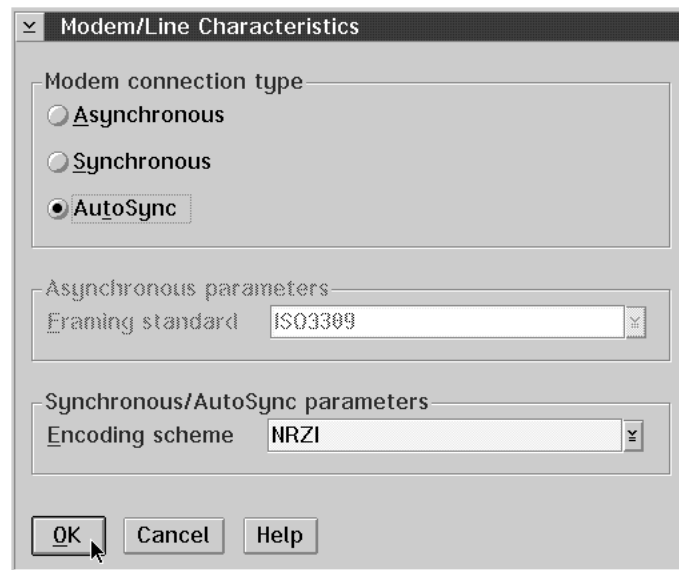

Step 13. Select the **Called party number** (in CM/2, this is **SP123456**) and click **Change**.


Step 14. Enter the phone-number of the service processor modem and click **OK**, then **OK** again on the subsequent screen.



A dialog box titled "Called Party Number" with a close button (X) in the top-left corner. It contains a text field labeled "Phone number" with the value "0492115055". At the bottom are three buttons: "OK", "Cancel", and "Help". A mouse cursor is pointing at the "OK" button.

Step 15. Select **SNA local node characteristics**, click **Configure** and **Continue**.

Step 16. Modify the **Network ID** and **Local node name** fields for your remote workstation and click **OK**.

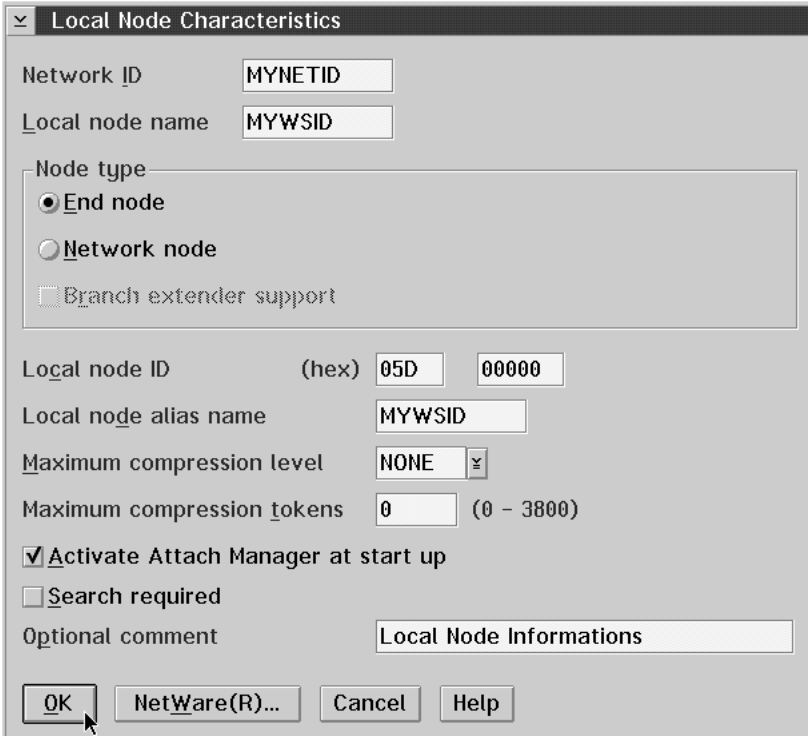

A dialog box titled "Local Node Characteristics" with a close button (X) in the top-left corner. It contains several fields and options:

- Network ID:** A text field containing "MYNETID".
- Local node name:** A text field containing "MYWSID".
- Node type:** A group box containing three radio buttons: "End node" (selected), "Network node", and "Branch extender support".
- Local node ID (hex):** Two text fields containing "05D" and "00000".
- Local node alias name:** A text field containing "MYWSID".
- Maximum compression level:** A dropdown menu set to "NONE".
- Maximum compression tokens:** A text field containing "0" and a range indicator "(0 - 3800)".
- Activate Attach Manager at start up:** A checked checkbox.
- Search required:** An unchecked checkbox.
- Optional comment:** A text field containing "Local Node Informations".

At the bottom are four buttons: "OK", "NetWare(R)...", "Cancel", and "Help". A mouse cursor is pointing at the "OK" button.

Step 17. Select **SNA connections**, click **Configure** and **Continue**.

Step 18. Select **To peer node**, the service processor link name and click **Change** and **Continue**.

Connections List

Choose the type of node to change or create connections to nodes of that type.

Selecting a partner type will display connections to nodes of that type in the list.

Partner type

☐ To network node ☒ To peer node ☐ To host

Link Name	Adapter	Adapter Number
DCAFLAN	Token-ring or other LAN types	0
DCAFSNA	Token-ring or other LAN types	0
SP123456	SDLC	2

Comment DCAF Link SDLC using SNA Phone Connect

Create... Change... Delete Close Help

Step 19. Check that the entries in the **Partner network ID** and **Partner node name** fields match the entries in MOSS-E (see “Setting Parameter Values for Modems” on page 6-2). Select the service processor directory name in the **Outgoing call directory entry** field and click **OK**.

Connection to a Peer Node

Link name SP123456 ☐ Activate at startup

Adjacent node ID (hex)

Partner network ID SYSTST

Partner node name DCAFSDLC (Required for partner LU definition)

☐ Permanent connection

Permanent connection name

Outgoing call directory entry SP123456

Optional comment DCAF Link SDLC using SNA Phone Connect

OK Define Partner LUs... Cancel Help


Step 20. Close the subsequent screens until you exit CS/2.

Step 21. See “Customizing DCAF” on page 6-41 for installing a target service processor.


Hayes Modem in Asynchronous Mode to Service Processor 9577, 9585, 3172, and 7585 via Serial Port

Procedure 6 - Configuration file HAYESASY


- Step 1.** Double-click the **Communications Server** icon on your desktop.
- Step 2.** Click **Setup**.
- Step 3.** Under **Directories**, double-click the CMLIB directory and double-click **HAYESASY** to display the configuration file.
- Step 4.** Click **OK**. A message prompts you to select the configuration file for your workstation. Click **OK** and then **Continue**.
- Step 5.** Select **SDLC** (in CM/2, **SDLC using SNA Phone Connections**), **APPC APIs**, and click **Configure**.
- Step 6.** Select **SNA Phone Connect - Port Connection Manager**, click **Configure** and **Continue**.

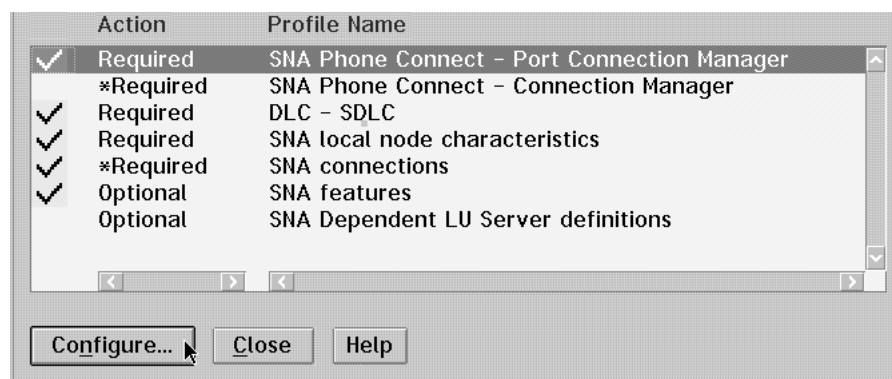

- Step 7.** Select **Asynchronous switched**, a Hayes modem type and click **Configure**.

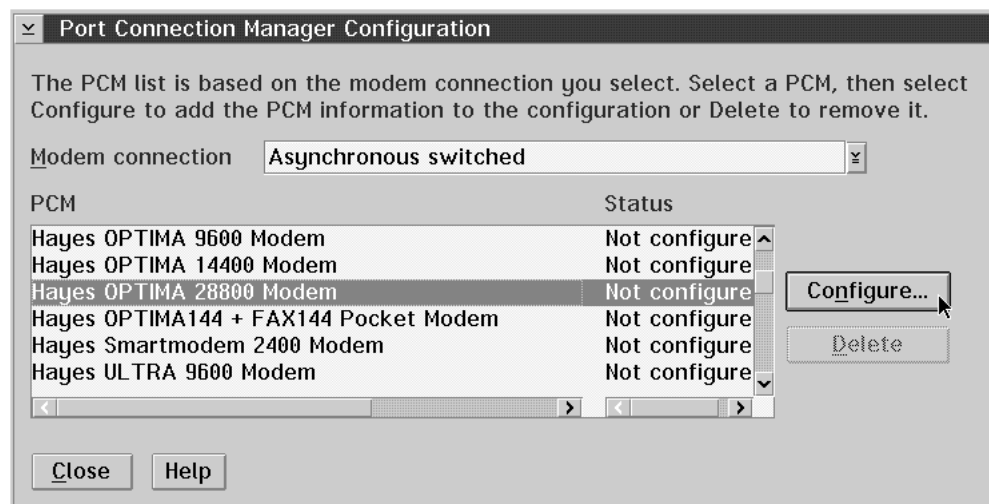

- Step 8.** Enter the port number in the **Port name** field, the number of your modem in the **Local phone number** field, click **OK** and **Close**.

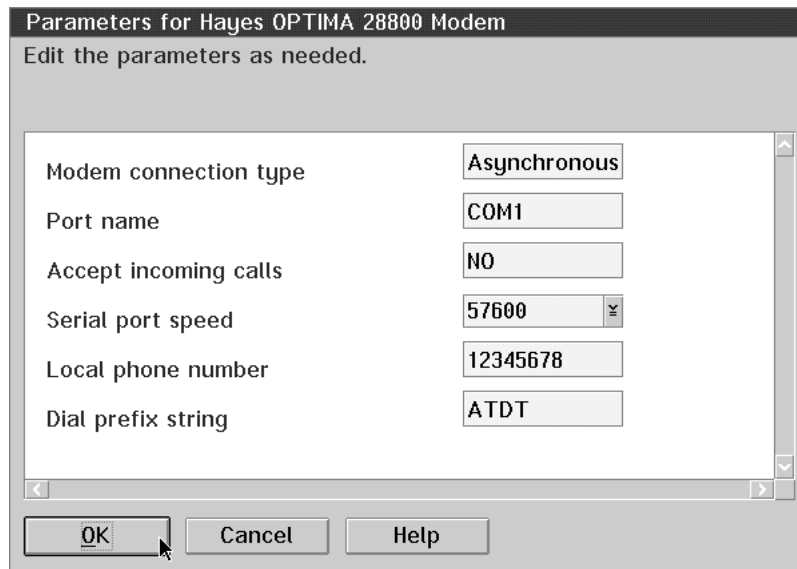

Parameters for Hayes OPTIMA 28800 Modem
Edit the parameters as needed.


Modem connection type	Asynchronous
Port name	COM1
Accept incoming calls	NO
Serial port speed	57600
Local phone number	12345678
Dial prefix string	ATDT

OK Cancel Help

- Step 9.** Select **SNA Phone Connect - Connection Manager** and click **Configure**.

- Step 10.** Select **SP123456** and click **Change**.


Note: The directory entry file contains information on the target service processor that you are dialing. You can use **SP123456** and rename it for your own purposes. If you add a new workstation, you must create a new name.

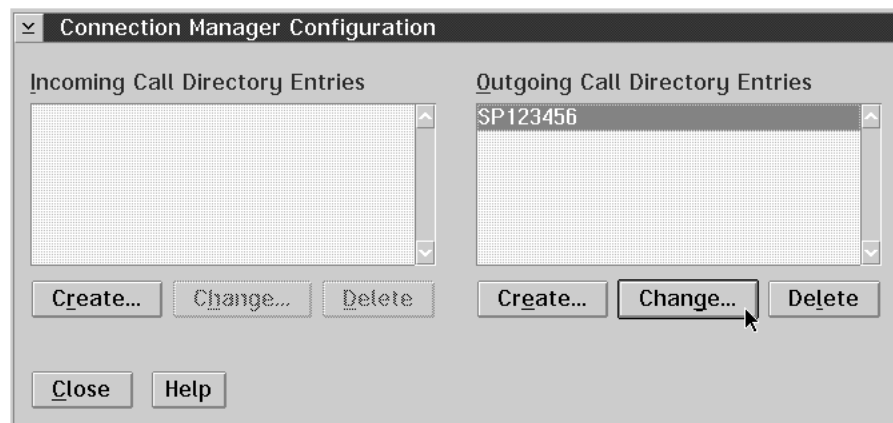


Connection Manager Configuration

Incoming Call Directory Entries	Outgoing Call Directory Entries
	SP123456
Create... Change... Delete	Create... Change... Delete
Close Help	

Step 11. Select **Modem/Line Characteristics** and click **Change**.

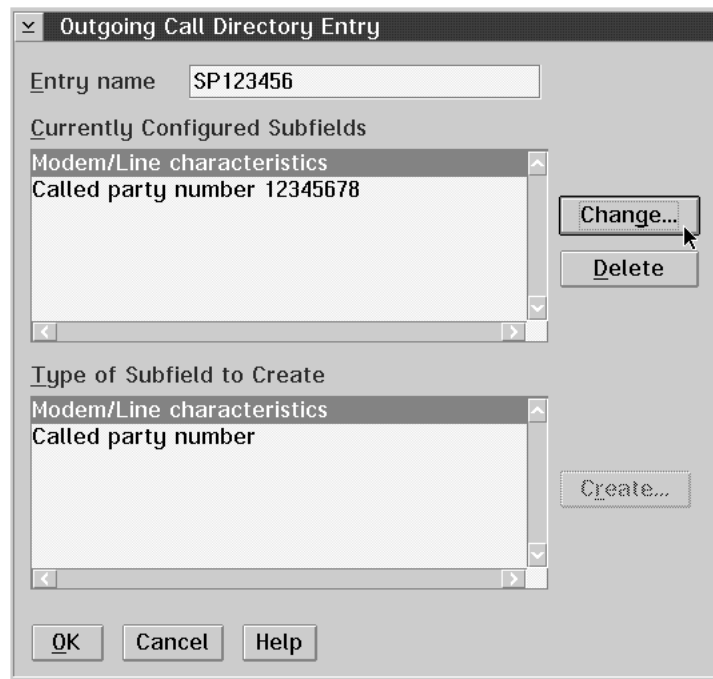

Step 12. Select **Asynchronous, ISO3309** as the framing standard and click **OK**.

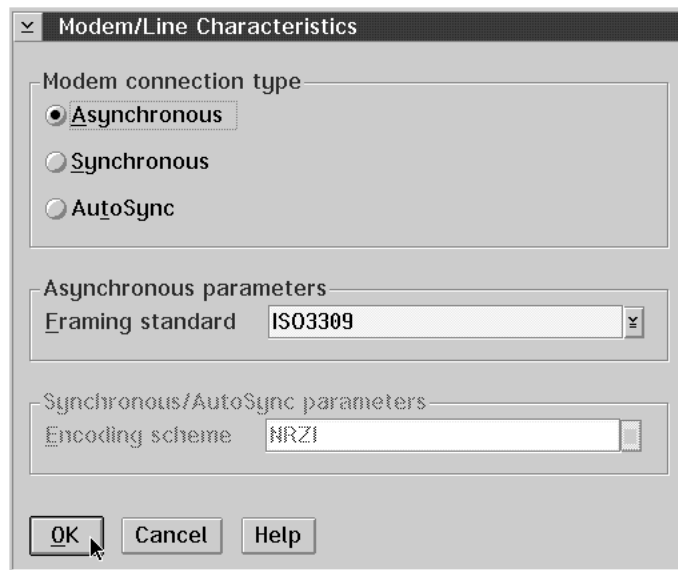

Step 13. Select **Called party number** (in CM2, this is **SP123456**) and click **Change**.


Step 14. Enter the phone-number of the service processor modem and click **OK**, then **OK** again on the subsequent screen.



A dialog box titled "Called Party Number" with a close button (X) in the top-left corner. It contains a text field labeled "Phone number" with the value "0492115055". At the bottom are three buttons: "OK", "Cancel", and "Help". A mouse cursor is pointing at the "OK" button.

Step 15. Select **SNA local node characteristics**, click **Configure** and **Continue**.

Step 16. Modify the **Network ID** and **Local node name** fields for your remote workstation and click **OK**.

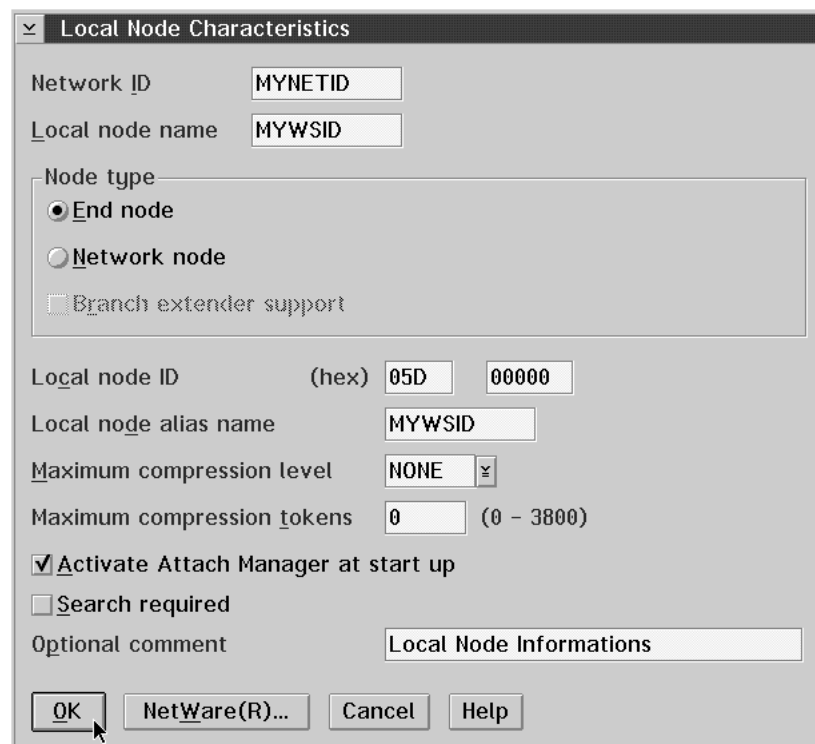


A dialog box titled "Local Node Characteristics" with a close button (X) in the top-left corner. It contains several fields and options:

- Network ID:** A text field containing "MYNETID".
- Local node name:** A text field containing "MYWSID".
- Node type:** A group box containing three radio buttons: "End node" (selected), "Network node", and "Branch extender support".
- Local node ID (hex):** Two text fields containing "05D" and "00000".
- Local node alias name:** A text field containing "MYWSID".
- Maximum compression level:** A dropdown menu showing "NONE".
- Maximum compression tokens:** A text field containing "0" and a range indicator "(0 - 3800)".
- Activate Attach Manager at start up:** A checked checkbox.
- Search required:** An unchecked checkbox.
- Optional comment:** A text field containing "Local Node Informations".


At the bottom are four buttons: "OK", "NetWare(R)...", "Cancel", and "Help". A mouse cursor is pointing at the "OK" button.

Step 17. Select **SNA connections**, click **Configure** and **Continue**.

Step 18. Select **To peer node**, the service processor link name and click **Change** and **Continue**.

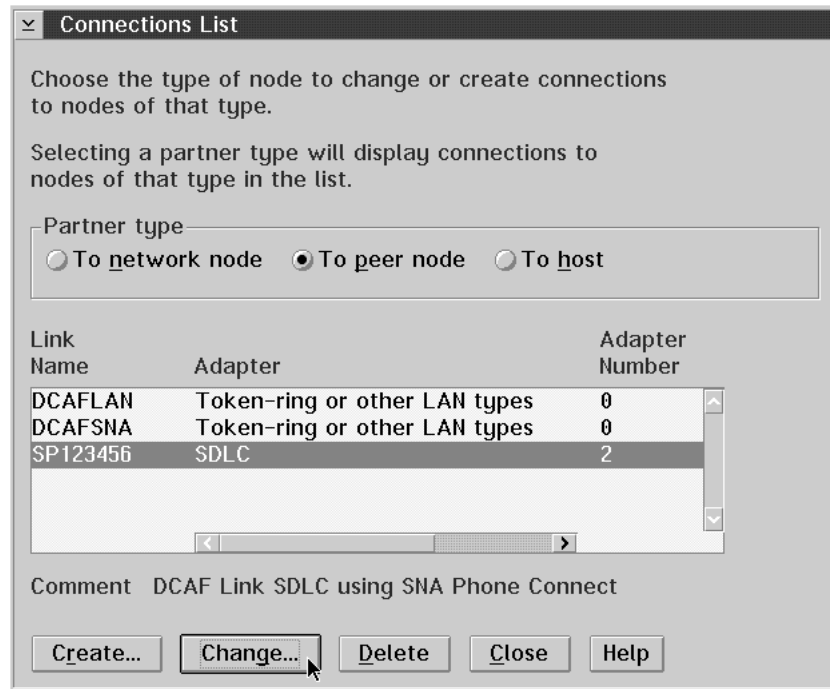

Step 19. Check that the entries in the **Partner network ID** and **Partner node name** fields match the entries in MOSS-E (see “Setting Parameter Values for Modems” on page 6-2). Select the service processor directory name in the **Outgoing call directory entry** field and click **OK**.

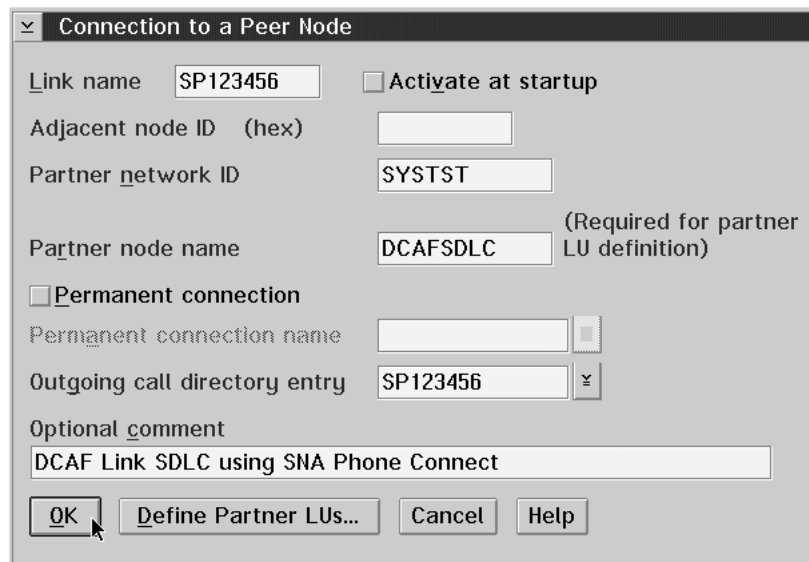


Step 20. Close the subsequent screens until you exit CS/2.

Step 21. See “Customizing DCAF” on page 6-41 for installing a target service processor.


Hayes Modem in Auto-Synchronous Mode to Service Processor 9577, 9585, and 3172 via MPA Card in Synchronous Mode

Procedure 7 - Configuration file HAYESAUT


- Step 1.** Double-click the **Communications Server** icon on your desktop.
- Step 2.** Click **Setup**.
- Step 3.** Under **Directories**, double-click the CMLIB directory and double-click **HAYESAUT** to display the configuration file.
- Step 4.** Click **OK**. A message prompts you to select the configuration file for your workstation. Click **OK** and then **Continue**.
- Step 5.** Select **SDLC** (in CM/2, **SDLC using SNA Phone Connections**), **APPC APIs**, and click **Configure**.
- Step 6.** Select **SNA Phone Connect - Port Connection Manager**, click **Configure** and **Continue**.

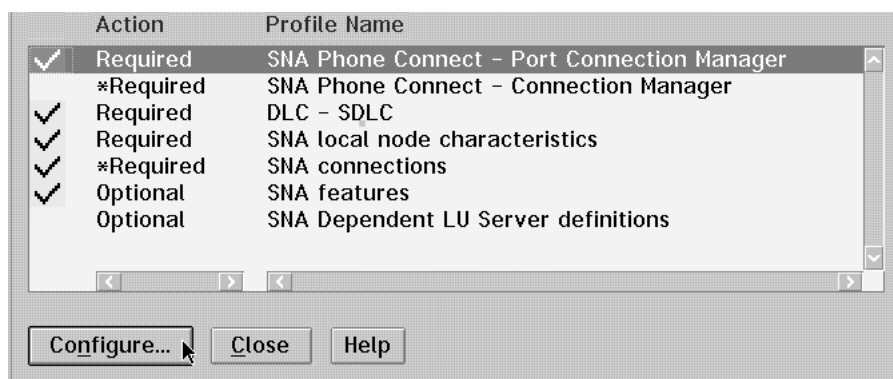

- Step 7.** Select **AutoSync**, a Hayes modem type and click **Configure**.

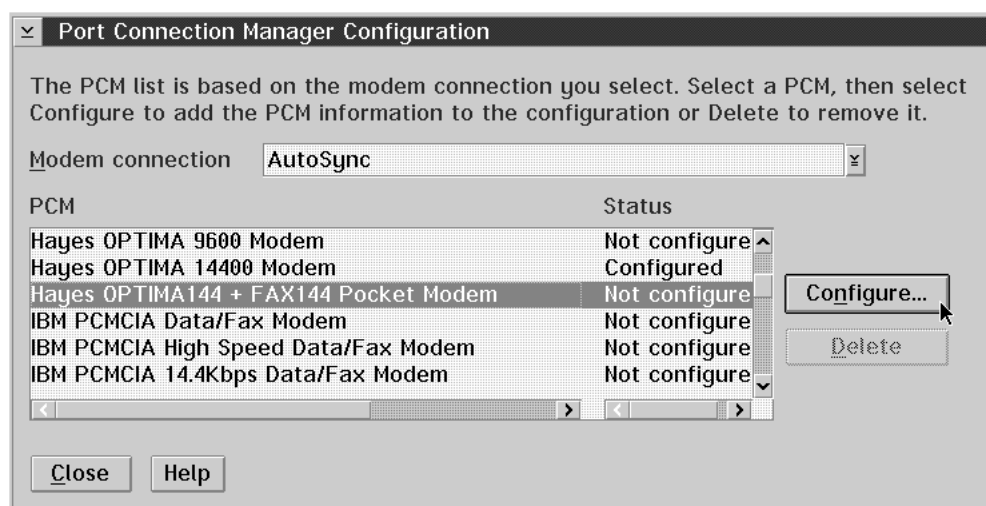


- Step 8.** Enter the MPA number in the **Port name** field, the number of your modem in the **Local phone number** field, click **OK** and **Close**.

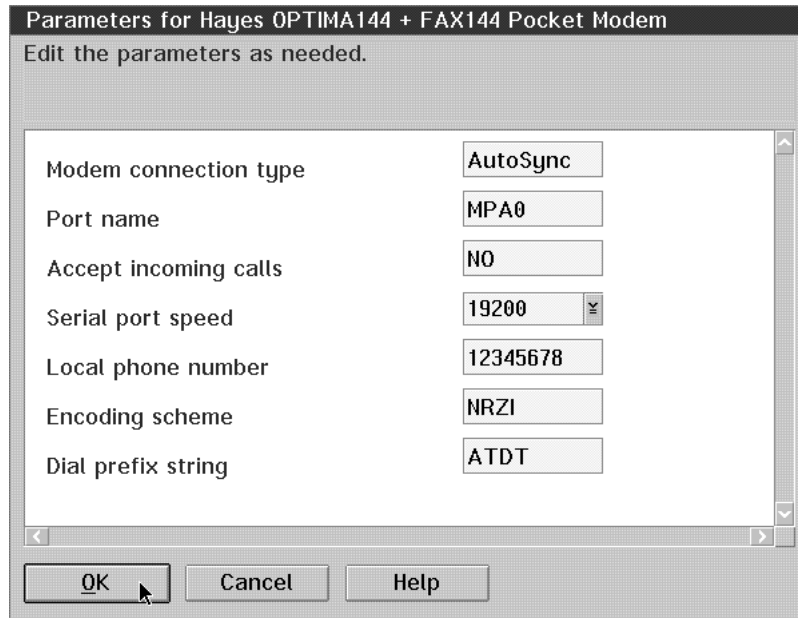


- Step 9.** Select **SNA Phone Connect - Connection Manager** and click **Configure**.

- Step 10.** Select **SP123456** and click **Change**.


Note: The directory entry file contains information on the target service processor that you are dialing. You can use **SP123456** and rename it for your own purposes. If you add a new workstation, you must create a new name.

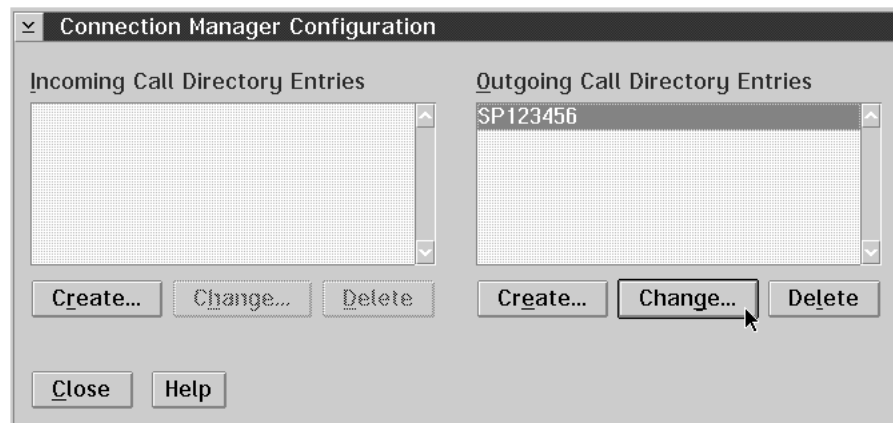

Step 11. Select **Modem/Line Characteristics** and click **Change**.

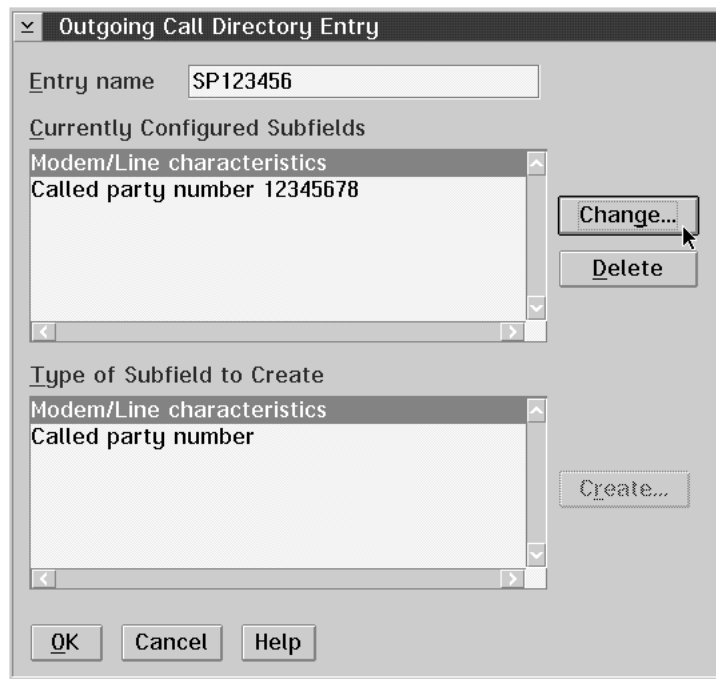

Step 12. Select **AutoSync**, **NRZI** as the encoding scheme and click **OK**.

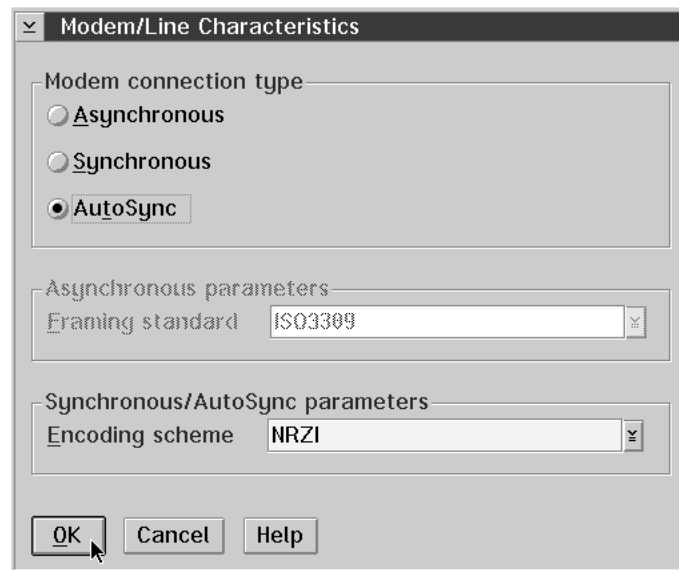

Step 13. Select the **Called party number** (in CM/2, this is **SP123456**) and click **Change**.


Step 14. Enter the phone-number of the service processor modem and click **OK**, then **OK** again on the subsequent screen.



A dialog box titled "Called Party Number" with a "Phone number" field containing "0492115055". At the bottom are "OK", "Cancel", and "Help" buttons. A mouse cursor is pointing at the "OK" button.

Step 15. Select **SNA local node characteristics**, click **Configure** and **Continue**.

Step 16. Modify the **Network ID** and **Local node name** fields for your remote workstation and click **OK**.

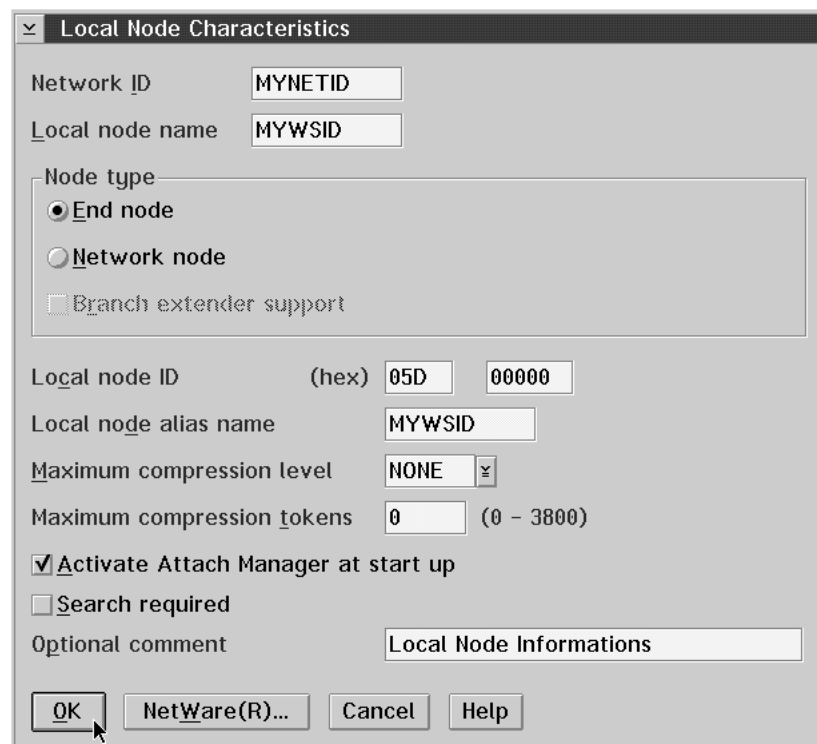

A dialog box titled "Local Node Characteristics" with the following fields and options:

- Network ID:** MYNETID
- Local node name:** MYWSID
- Node type:**
 - ☒ End node
 - ☐ Network node
 - ☐ Branch extender support
- Local node ID (hex):** 05D 00000
- Local node alias name:** MYWSID
- Maximum compression level:** NONE
- Maximum compression tokens:** 0 (0 - 3800)
- ☒ Activate Attach Manager at start up
- ☐ Search required
- Optional comment:** Local Node Informations

At the bottom are "OK", "NetWare(R)...", "Cancel", and "Help" buttons. A mouse cursor is pointing at the "OK" button.

Step 17. Select **SNA connections**, click **Configure** and **Continue**.

Step 18. Select **To peer node**, the service processor link name and click **Change** and **Continue**.

Connections List

Choose the type of node to change or create connections to nodes of that type.

Selecting a partner type will display connections to nodes of that type in the list.

Partner type

☐ To network node ☒ To peer node ☐ To host

Link Name	Adapter	Adapter Number
DCAFLAN	Token-ring or other LAN types	0
DCAFSNA	Token-ring or other LAN types	0
SP123456	SDLC	2

Comment DCAF Link SDLC using SNA Phone Connect

Create... Change... Delete Close Help

Step 19. Check that the entries in the **Partner network ID** and **Partner node name** fields match the entries in MOSS-E (see “Setting Parameter Values for Modems” on page 6-2). Select the service processor directory name in the **Outgoing call directory entry** field and click **OK**.

Connection to a Peer Node

Link name SP123456 ☐ Activate at startup

Adjacent node ID (hex)

Partner network ID SYSTST

Partner node name DCAFSDLC (Required for partner LU definition)

☐ Permanent connection

Permanent connection name

Outgoing call directory entry SP123456

Optional comment DCAF Link SDLC using SNA Phone Connect

OK Define Partner LUs... Cancel Help

Step 20. Close the subsequent screens until you exit CS/2.

Step 21. See “Customizing DCAF” on page 6-41 for installing a target service processor in DCAF.

Customizing DCAF

- Step 1.** From Desktop Manager, double-click the **Distributed Console Access Facility** icon.




- Step 2.** Double-click the **DCAF Controller** icon.


- Step 3.** Select **Session** then **Open workstation directory**.

- Step 4.** Click **OK** for a first installation. Otherwise continue with next step.


- Step 5.** In the DCAF Directory window, select **Workstation** then **Add**.

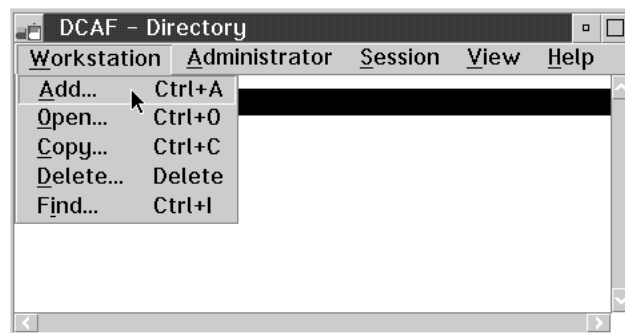


- Step 6.** Enter a name in the **Workstation name** field and click **Protocol**.

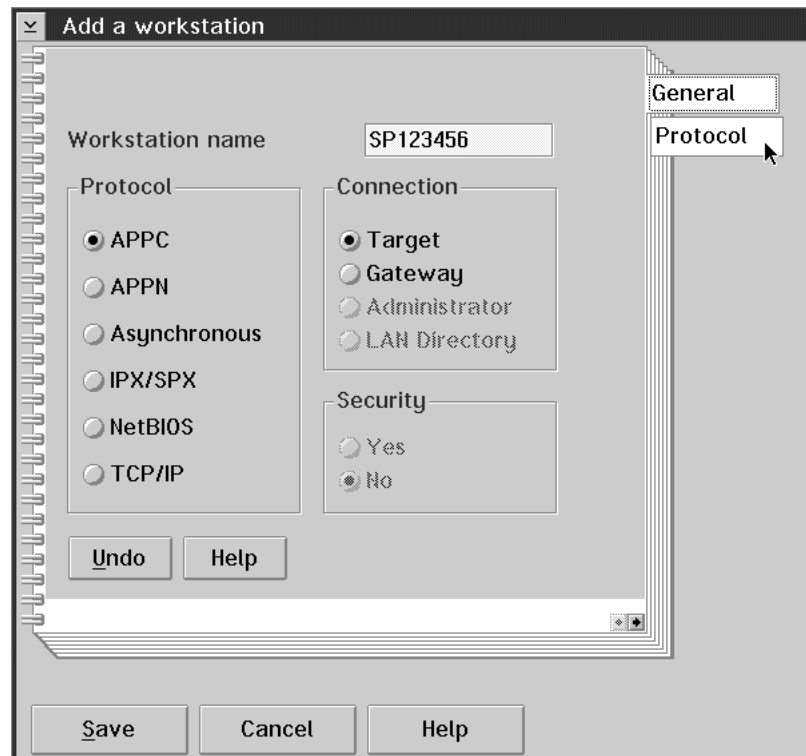

- Step 7.** Modify the **Local LU alias** field, the **Partner LU alias** field (same as the **SDLC** field in the **DCAF Customization** screen; see “Setting Parameter Values for Modems” on page 6-2). Enter DCAFMODE in the **Mode name** field, click **Save** and **Cancel**. The new workstation icon appears in the DCAF Directory window.

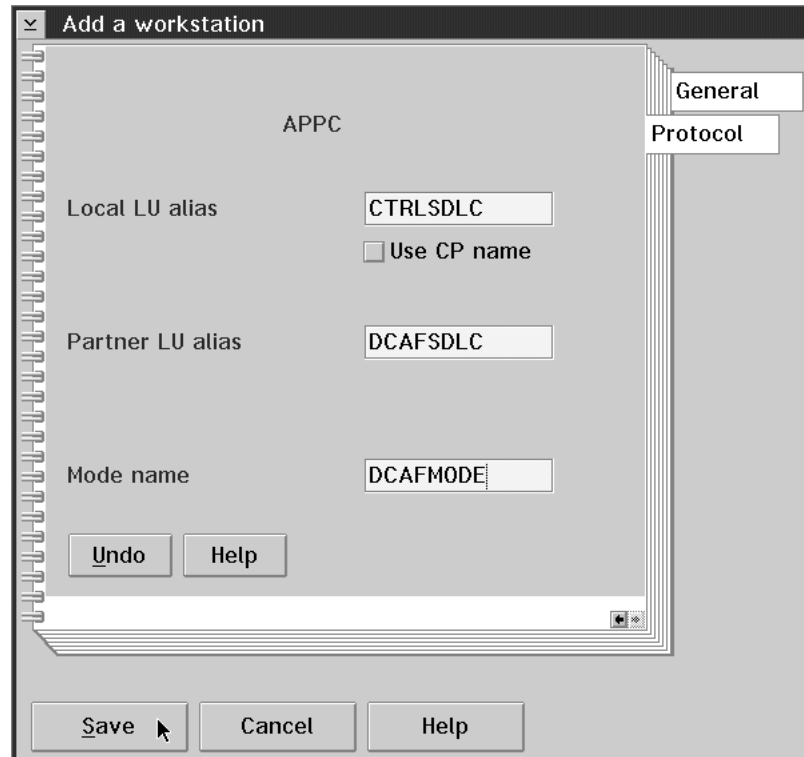

- Step 8.** Double-click the workstation icon to initiate communications with the service processor.

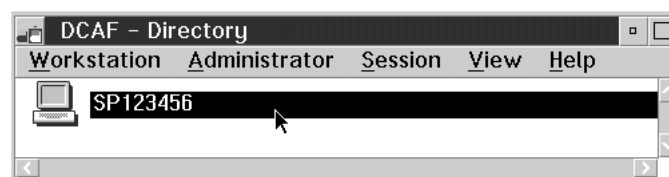

Chapter 7. SNA-Attached Remote Workstation

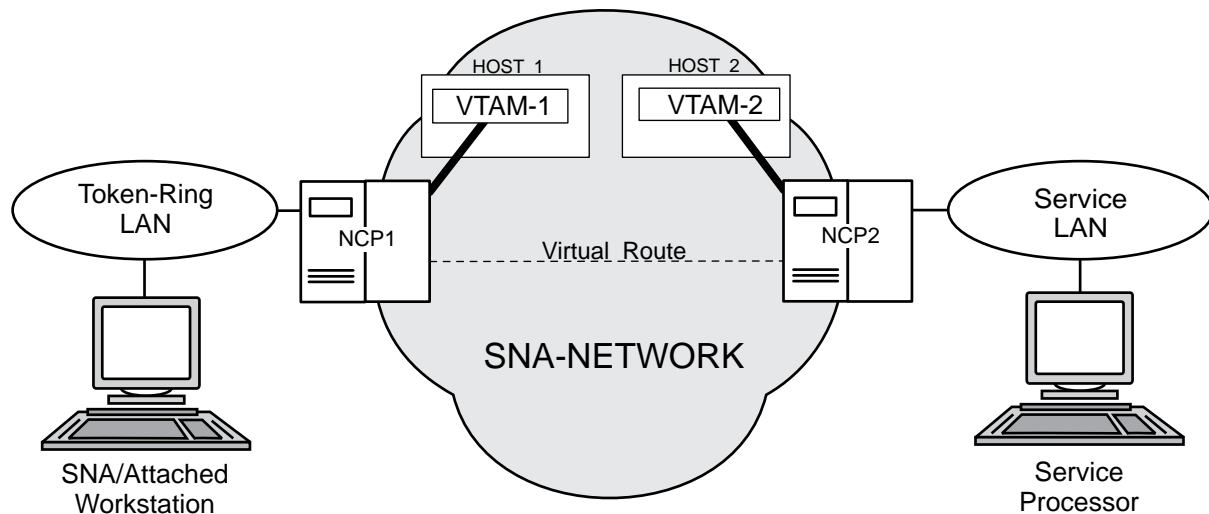


Figure 7-1. SNA Configuration

This chapter shows you how to do the following:

- Navigate from a remote workstation to a service processor via a token-ring LAN on an SNA backbone.
- Configure a DCAF session for controlling the service processor (see Figure 7-1).

Parameters

The parameter values of your remote workstation must match the parameter values of the service processor. For more information, see the Appendix of the *Planning Guide*, GA33-0457.

If you have **more than one** target service processor, you must respect the same parameter-matching rules. For more information, see Appendix A, "Configuration for a Two-Target Remote Workstation."

Installing a Remote Workstation (SNA-Attached)

The following procedure shows you how to establish a link between the controlling workstation and the target service processor.

Important

Use the *Planning Guide* worksheets to fill in the address and name fields.


Customizing CS/2

Important


The procedure below is the same in CM/2 unless otherwise indicated.

Step 1. Perform Steps 1 to 5 on page 2-4.

Step 2. Select **Additional definitions, Token-ring or other LAN types, APPC APIs**, and click **Configure**.

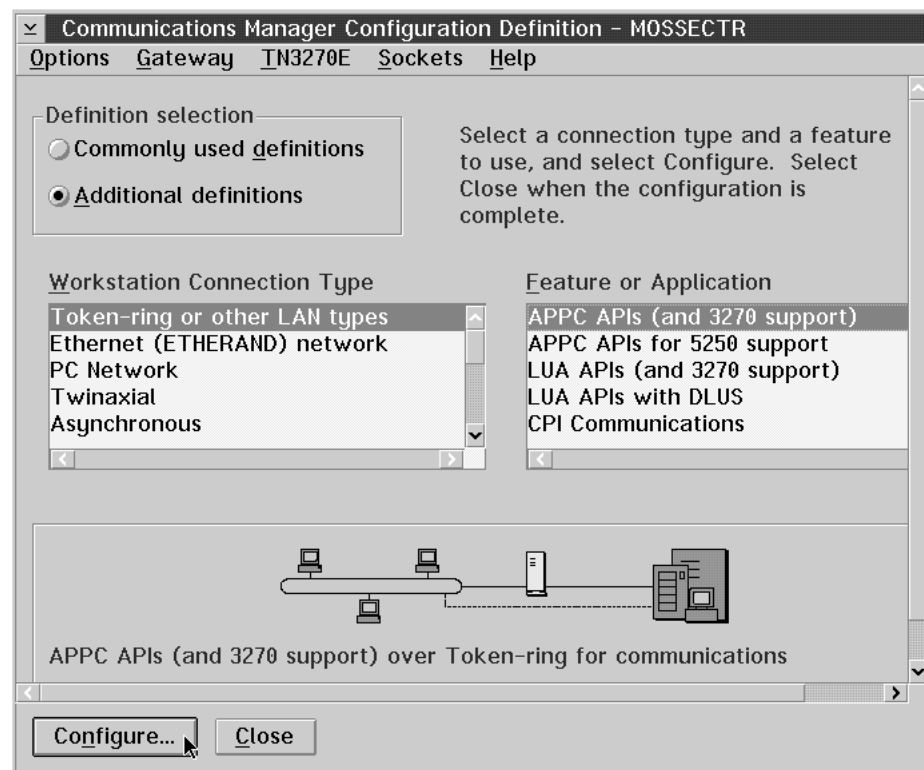


Step 3. Select **DLC - Token-ring or other LAN types** and click **Configure**.

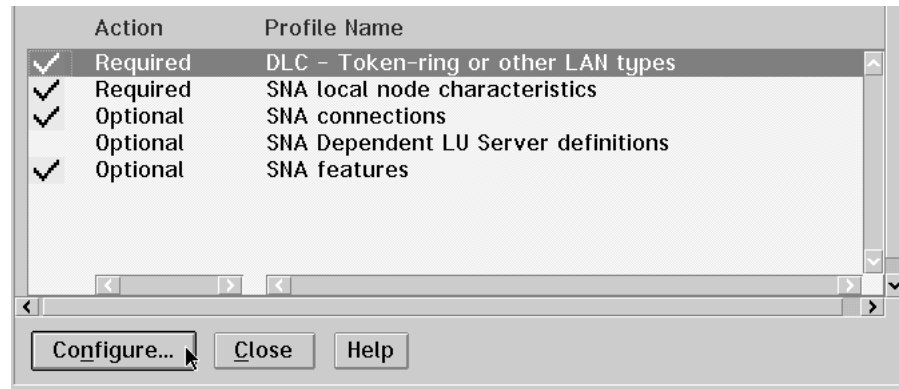


Step 4. Select **Free unused links** (in CM/2, select **Free unused links** and click **OK**). From the **Additional Parameters** list, highlight and check the following, using the **Change** button.

- Select **HPR parameters** and de-select **HPR support**.
- Check that the defaults apply to **Link station protocol parameters**, **Network management parameters**, and **Resource management parameters**.


Then click **OK**.

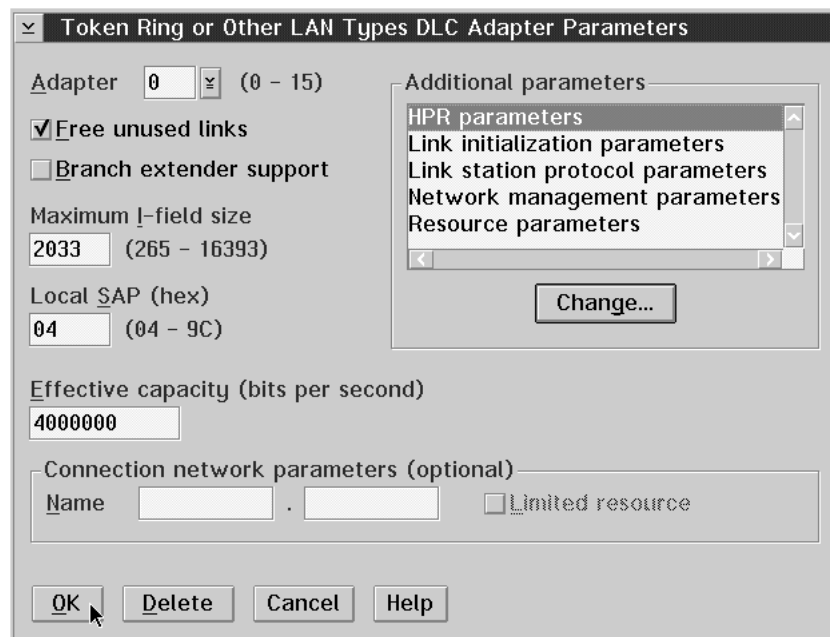


Step 5. Select **SNA local node characteristics** and click **Configure**.

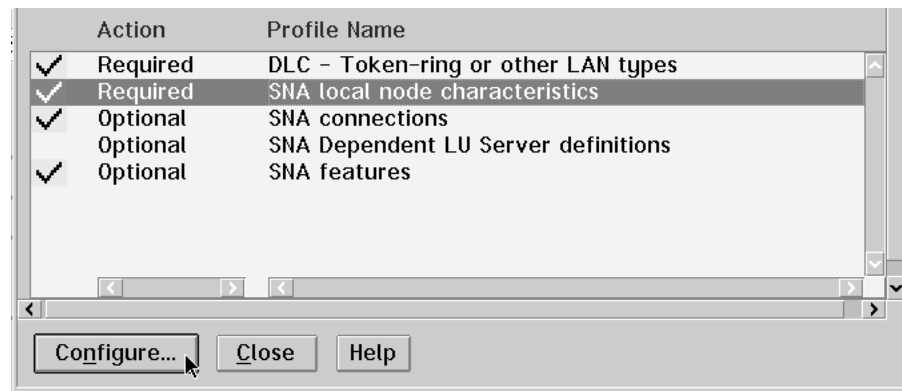


Step 6. Fill in the **Network ID** and **Local node name** fields, select **End node** and click **OK**.

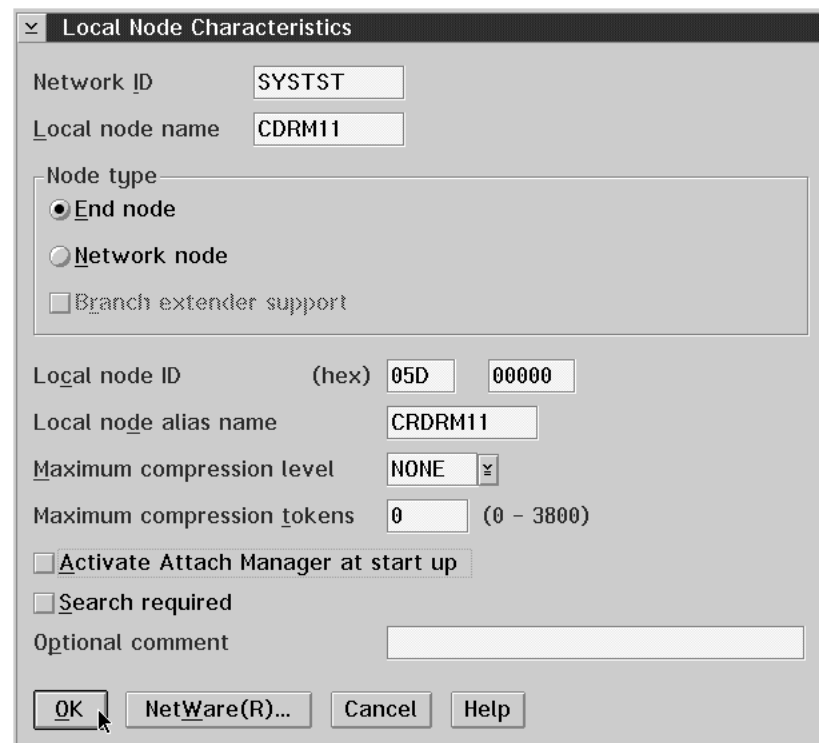


Step 7. Select **SNA connections** and click **Configure**.

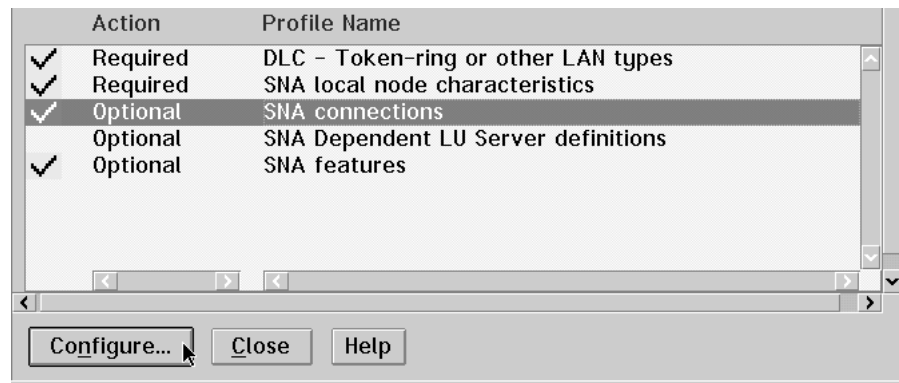


Step 8. Click **To peer node**, select **DCAFSNA** from the list and click **Change**.

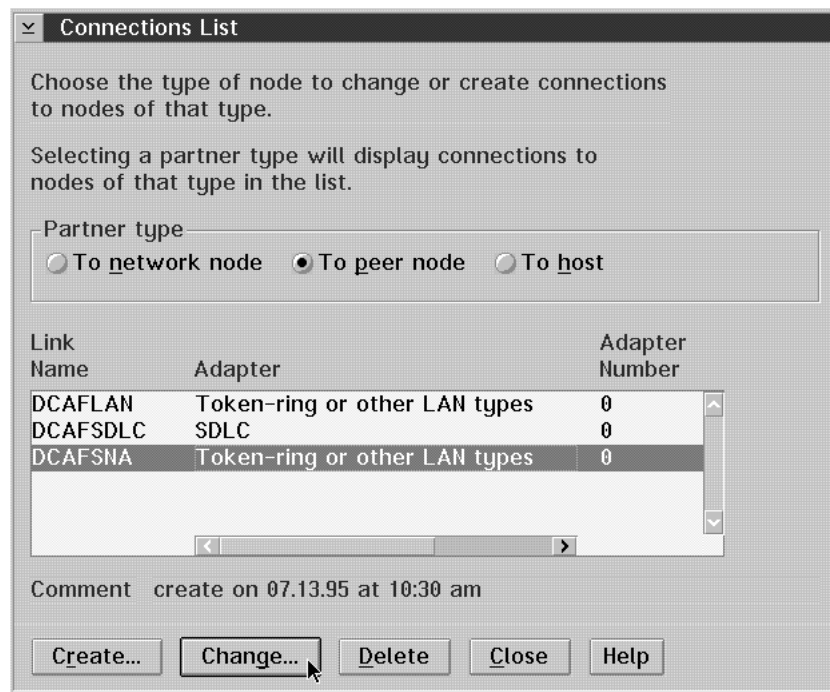


Step 9. Select **Token-ring or other LAN types** and click **Continue**.

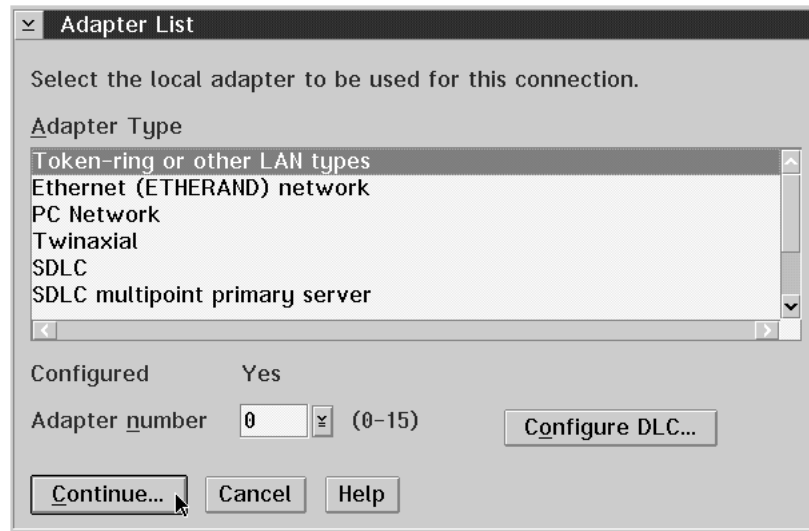

Step 10. Fill in the **Partner network ID** (the network name) field, the **Partner node name** (the network that contains the target processor) field, the **LAN destination address** field (the address of the target service processor), the **Remote SAP** field, and click **Define Partner LUs**.

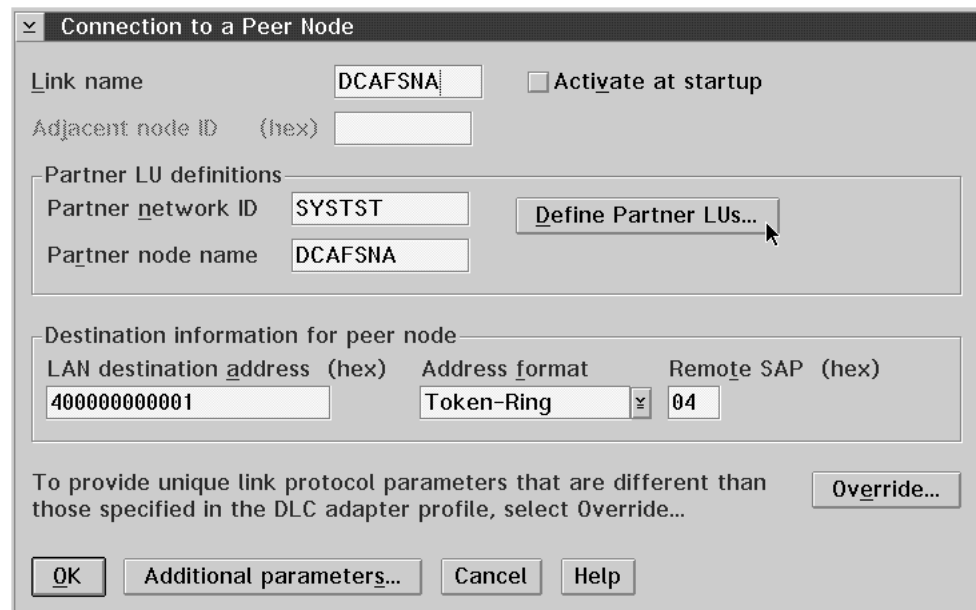

Step 11. Fill in **Network ID**, the **LU name** (the service processor LU name), and the **Alias** fields. Then click **Add** and **OK**.

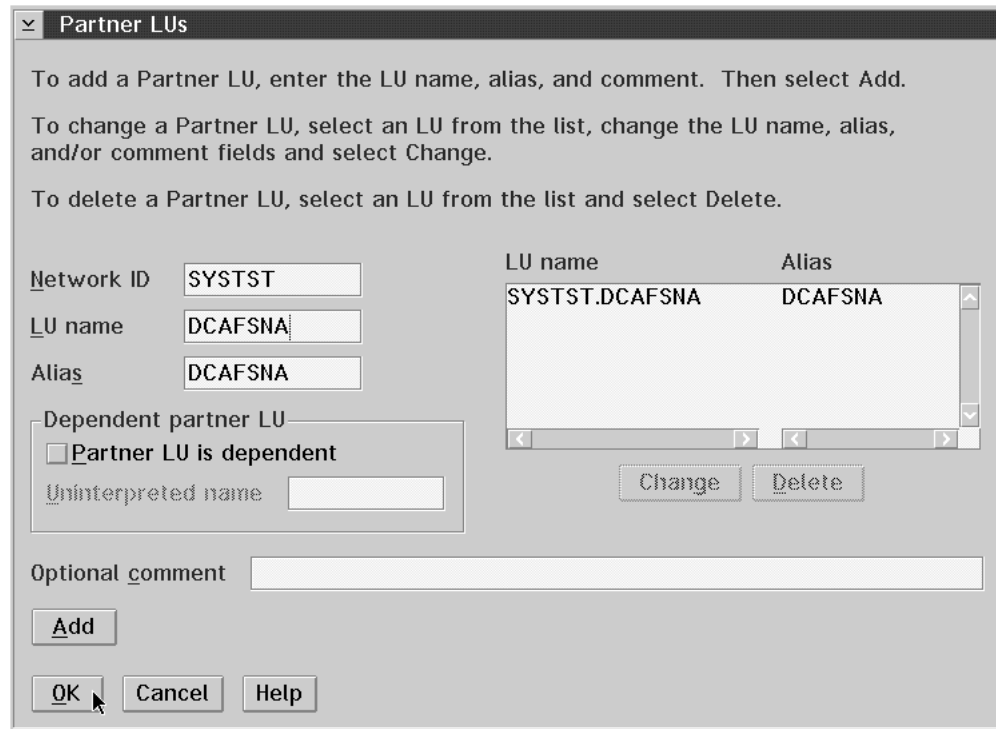

The 'Partner LUs' dialog box contains instructions and input fields for managing Partner LUs. It includes fields for Network ID, LU name, and Alias, a list of existing LUs, and buttons for Add, Change, Delete, OK, Cancel, and Help.

To add a Partner LU, enter the LU name, alias, and comment. Then select Add.

To change a Partner LU, select an LU from the list, change the LU name, alias, and/or comment fields and select Change.

To delete a Partner LU, select an LU from the list and select Delete.

Network ID	LU name	Alias
SYSTST	SYSTST.DCAFSNA	DCAFSNA


Dependent partner LU
☐ Partner LU is dependent
 Uninterpreted name

Optional comment

Buttons: Add, OK, Cancel, Help, Change, Delete

Step 12. Click **OK** on the intermediate window and **Close**.

Step 13. Select **SNA features** and click **Configure**.

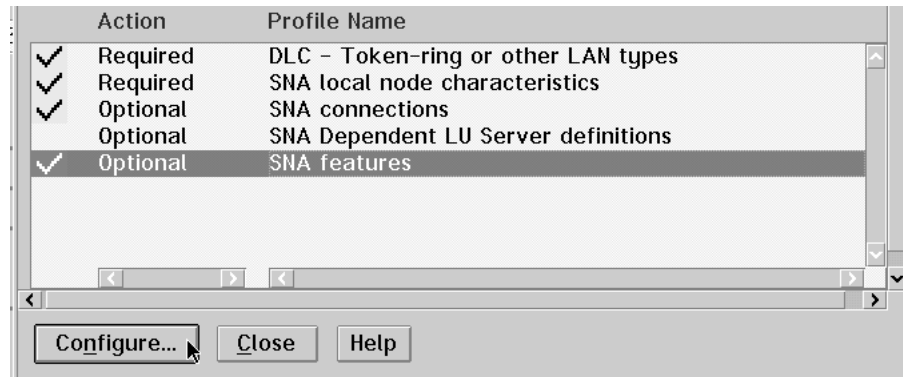


The 'SNA features' configuration dialog box shows a list of features with checkboxes and buttons for configuration, close, and help.


Action	Profile Name
<input checked="" type="checkbox"/> Required	DLC - Token-ring or other LAN types
<input checked="" type="checkbox"/> Required	SNA local node characteristics
<input checked="" type="checkbox"/> Optional	SNA connections
<input type="checkbox"/> Optional	SNA Dependent LU Server definitions
<input checked="" type="checkbox"/> Optional	SNA features

Buttons: Configure..., Close, Help

Step 14. Select **Local LUs**, **CTRLSNA** and click **Change**.

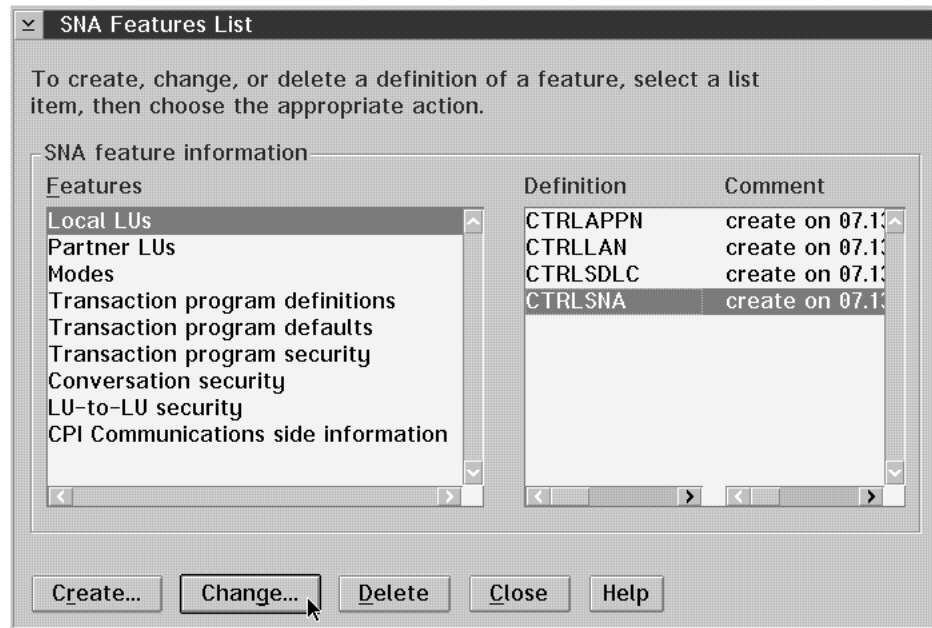

Step 15. Fill in the **LU name** and **Alias** fields, select **use this local LU as your default local LU alias** and click **OK**.

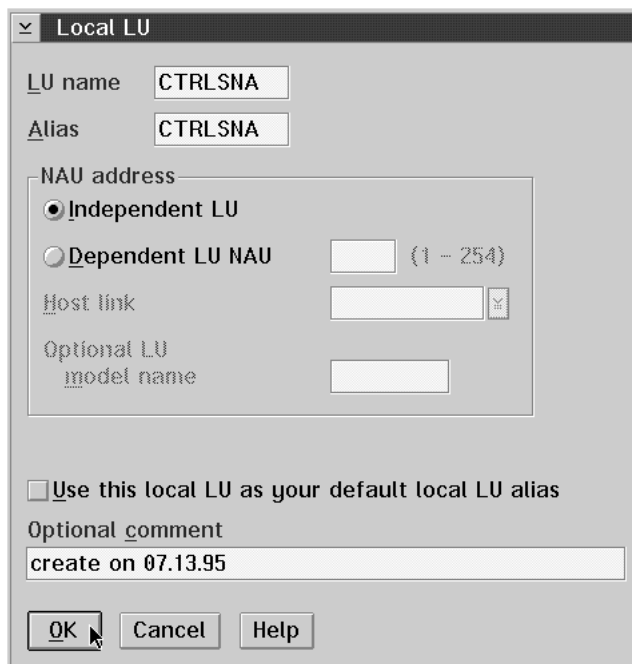

Step 16. Click **Close** on each subsequent screen until you exit CS/2.

Step 17. Continue with "Customizing DCAF" on page 7-9.

Customizing DCAF

Step 1. From Desktop Manager, double-click the **Distributed Console Access Facility** icon.




Step 2. Double-click the **DCAF Controller** icon.


Step 3. Click **Session** and **Open workstation directory**.

Step 4. Click **OK** for a first installation, otherwise continue with next step.

Step 5. Click **Workstation**, then **Add**.

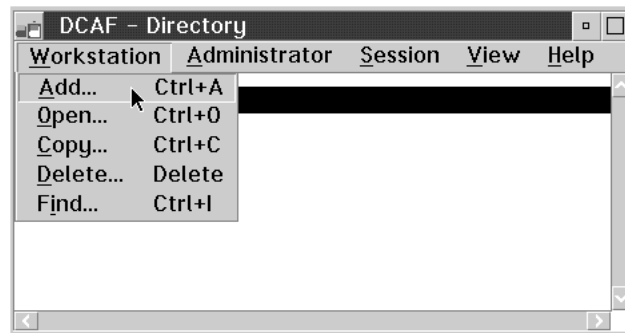


Step 6. Fill in the **Workstation name** field (see Step 15 on page 7-8), select **APPC**, **Target**, and click **Protocol**.

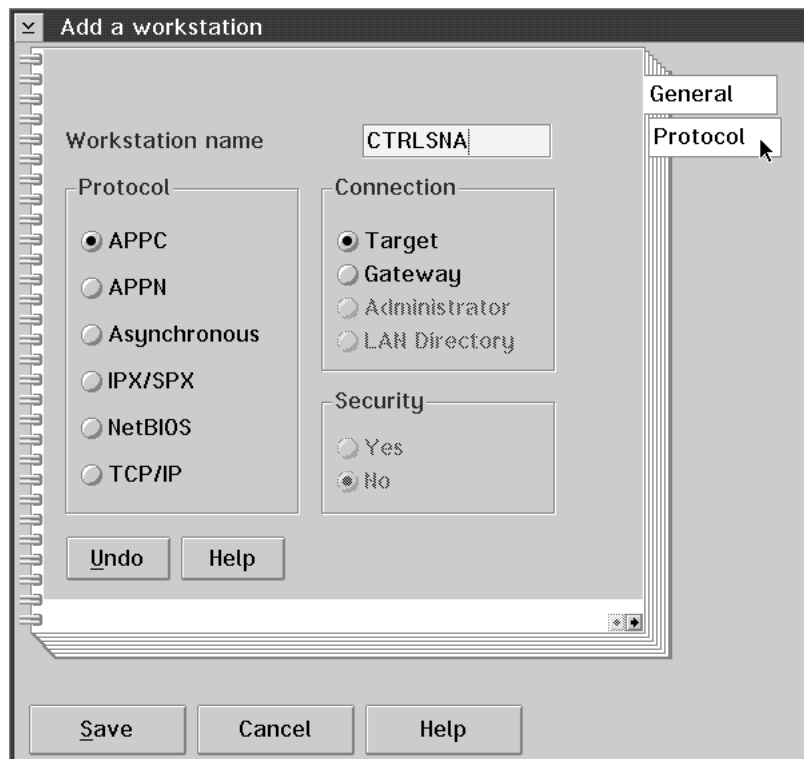

Step 7. Fill in the **Local LU alias** (see Step 15 on page 7-8), **Partner LU alias** and **Mode name** fields. Then click **Save**, **OK** (on the subsequent window), and **Cancel**.

Note: Write down the Partner LU alias. You will need this for the Local LU when you customize CS/2 on the target service processor.

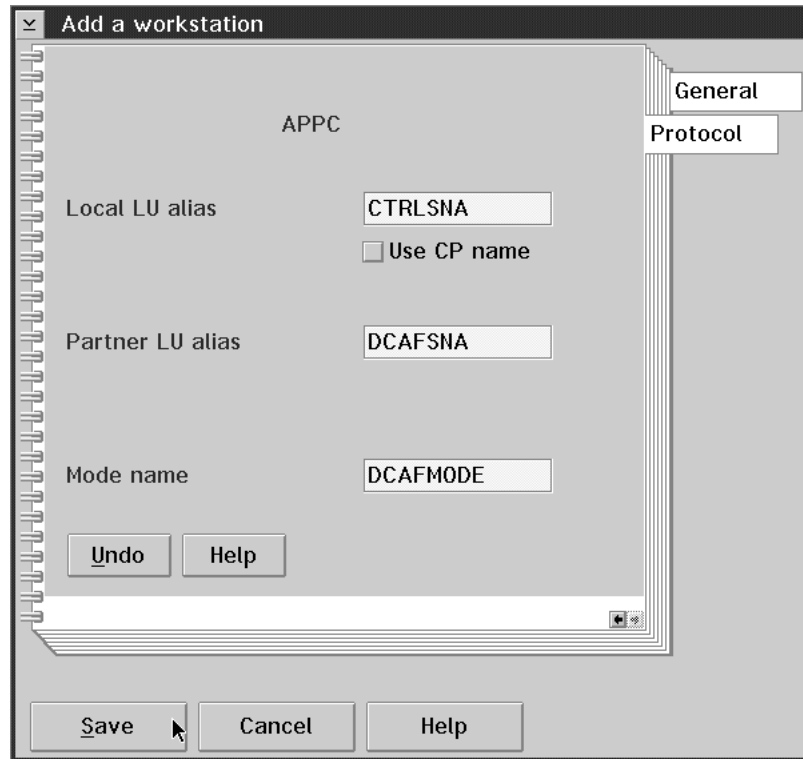

Step 8. From **Desktop Manager**, shutdown and restart the workstation.

NCP Definitions

The NCP definitions in this section apply to Version 6 Release 2.

All NCP generations attached to LUs that support LU 6.2 DCAF sessions must contain the following statement:

LUDRPOOL NUMILU=(any number > 0)

Remote Controlling Workstation

The following definitions apply to NCP1 between the controlling workstation LAN and the SNA network (see Figure 7-1 on page 7-1).

The address must be the same as defined in Step 10 on page 5-6.

1. Physical line and physical PU:

```

.
.
*-----*
* TIC3 BNN/INN:  PORT 2144                                     *
*-----*
K23C2144 LINE  ADDRESS=(2144,FULL),PORTADD=0,LOCADD=400000232144 *
                MAXTSL=16732,LSPRI=PU,PUTYPE=1,ANS=CONTINUE,    *
                ADAPTER=TIC3,TRSPEED=16,TRANSFR=254             *
S23C2144 PU    ADDR=01,                                         *
                INNPORT=YES                                     *
.
.

```

2. Logical group with at least one LINE/PU to be used by the service processor:

```

.
.
*****
*
* TIC3          GROUP L23G2144: LAN LOGICAL DEFINITIONS FOR 37CS *
*
*
*****
L23G2144 GROUP DIAL=YES,LNCTL=SDLC,TYPE=NCP,ECLTYPE=(LOGICAL,PER), *
                CALL=INOUT,PHYSRSC=S23C2144,                      *
                LINEAUT=YES,                                       *
                MAXPU=1,                                           *
                NPACOLL=NO,                                        *
                PUTYPE=2,                                          *
                RETRIES=(6,0,0,6)                                  *
R23A0001 LINE
Z23A0001 PU
.
.

```

Target Service Processor

The following definitions apply to NCP2 between the service LAN and the SNA network (see Figure 7-1 on page 7-1).

1. Physical line and physical PU:

```

.
.
*-----*
* TIC3 BNN/INN:  PORT 2080 ATT TO CONTROLLER FF  PORT 1092 - PHYSICAL *
*-----*
K50C2080 LINE  ADDRESS=(2080,FULL),PORTADD= 0 P,LOCADD=400000502080,*
                MAXTSL=16732,LSPRI=PU,PUTYPE=1,ANS=CONTINUE,    *
                ADAPTER=TIC3,TRSPEED=16,TRANSFR=254             *
S50C2080 PU    ADDR=01,*                                         *
                INNPORT=YES                                     *
.
.

```

2. Logical group with at least one LINE/PU to be used by the service processor:

```

      .
      .
*****
*
*   TIC3          GROUP L78G2080: LAN  LOGICAL  DEFINITIONS FOR 37CS
*
*
*
*****
L50G2080 N GROUP DIAL=YES, LNCTL=SDLC, TYPE=NCP, ECLTYPE=(LOGICAL, PER), *
          CALL=INOUT, PHYSRSC=S50C2080,
          LINEAUT=YES,
          MAXPU=1,
          NPACOLL=NO,
          PUTYPE=2,
          RETRIES=(6,0,0,6)
R50A0001 LINE
Z50A0001 PU
      .
      .
      .

```

VTAM Definitions

The VTAM* definitions in this section are for Version 3 Release 4.1.

Start Definitions

The following VTAM start definitions must be used in both VTAM1 and VTAM2, as shown in Figure 7-1 on page 7-1:

```

*
*           VTAM START DEFINITIONS
*
HOSTSA=10,SSCPID=10,MAXSUBA=63,
CONFIG=10,NETID= SYSTST A ,SSCPNAME=CDRM12,

XNETALS=YES,DYNLU=YES,

NOPROMPT,DLRTCB=32,SUPP=NOSUP,NOTNSTAT,NOTRACE,TYPE=VTAM,
LPBUF=(120,,0,,60,60),      LARGE GENERAL PURPOSE _ PAGEABLE
LFBUF=(96,,0,,24,10),       LARGE GENERAL PURPOSE _ FIXED
SFBUF=(128,,0,,32,10),      SMALL GENERAL PURPOSE _ FIXED
CRPLBUF=(160,,13,,80,80),   RPL_COPY _ PAGEABLE
IOBUF=(256,256,34,,68,68)  I/O BUFFERS _ FIXED (NP & PP BUF REMOVED)

```

Logmode Table

The following VTAM logmode table must be used in both VTAM1 and VTAM2 as shown in Figure 7-1 on page 7-1:


```

SOCMOTAB M  MODETAB
DCAFMODE MODEENT LOGMODE=DCAFMODE I ,
        TYPE=0,
        FMPROF=X'13',
        TSPROF=X'07',
        PRIPROT=X'B0',
        SECPROT=X'B0',
        COMPROT=X'50B1',
        SSNDPAC=X'08',
        SRCVPAC=X'08',
        RUSIZES=X'8787',
        PSNDPAC=X'08',
        PSERVIC=X'060200000000000000002F00'
MODEEND
END  SOCMOTAB

```

Major Node Definitions

Remote Workstation

The following VTAM major node definitions must be used in VTAM1 as shown in Figure 7-1 on page 7-1:

```

*****
*
*      MAJNODE FOR CONNECTION :  Remote console <==> VTAM V3R4
*
*
*
*****
NTVCTRL  VBUILD TYPE=SWNET,MAXGRP=1,MAXNO=1
-----*
CTRL     PU      ADDR=04,PUTYPE=2,NETID=SYSTST E ,CPNAME=CPCTRL F      X
          MAXPATH=8,MAXDATA=265,MAXOUT=1,
          DISCNT=NO,
CTRL1    LU      LOCADDR=0,MODETAB=SOCMOTAB M

```

Target Service Processor

The following VTAM major node definitions must be used in VTAM-2, shown in Figure 7-1 on page 7-1:

```

*****
*
*      MAJNODE FOR CONNECTION :  MOSS-E <==> VTAM V3R4
*
*
*
*****
NTVMOSSE VBUILD TYPE=SWNET,MAXGRP=1,MAXNO=1
-----*
MOSSE    PU      ADDR=04,PUTYPE=2,NETID= SYSTST A ,CPNAME= MOSSNMVT      X C
          MAXPATH=8,MAXDATA=265,MAXOUT=1,
          DISCNT=NO,
PATHMOSS PATH    DIALNO= P 00 04 400000000007 D ,GRPNM=L50G2080 N
DCAFSNA B LU      LOCADDR=0,MODETAB=SOCMOTAB M

```


Chapter 8. APPN-Attached Remote Workstation

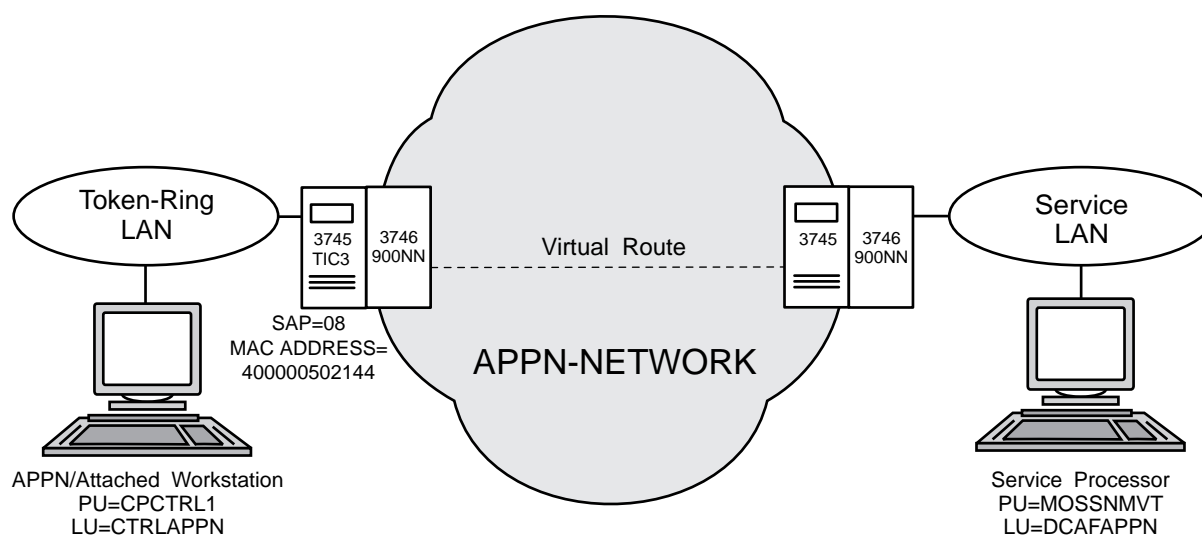


Figure 8-1. APPN Configuration

This chapter shows you how to do the following:

- Navigate from a remote workstation to a service processor via an APPN backbone.
- Configure a DCAF session for controlling the service processor (see Figure 8-1 above).

Parameters

The parameter values of your remote workstation must match the parameter values of the service processor. For more information, see the Appendix of the *Planning Guide*, GA33-0457.

If you have **more than one** target service processor, you must respect the same parameter-matching rules. For more information, see Appendix A, "Configuration for a Two-Target Remote Workstation."

Installing a Remote Workstation (APPN-Attached)

The following procedure shows you how to establish a link between a controlling workstation and the target service processor.

Important

Use the *Planning Guide* worksheets to fill in the address and name fields.


Customizing CS/2

Important


The procedure below is the same in CM/2 unless otherwise indicated.

Step 1. Perform steps 1 to 5 on page 2-4

Step 2. Select **Additional definitions, Token-ring or other LAN types, APPC APIs** and click **Configure**.

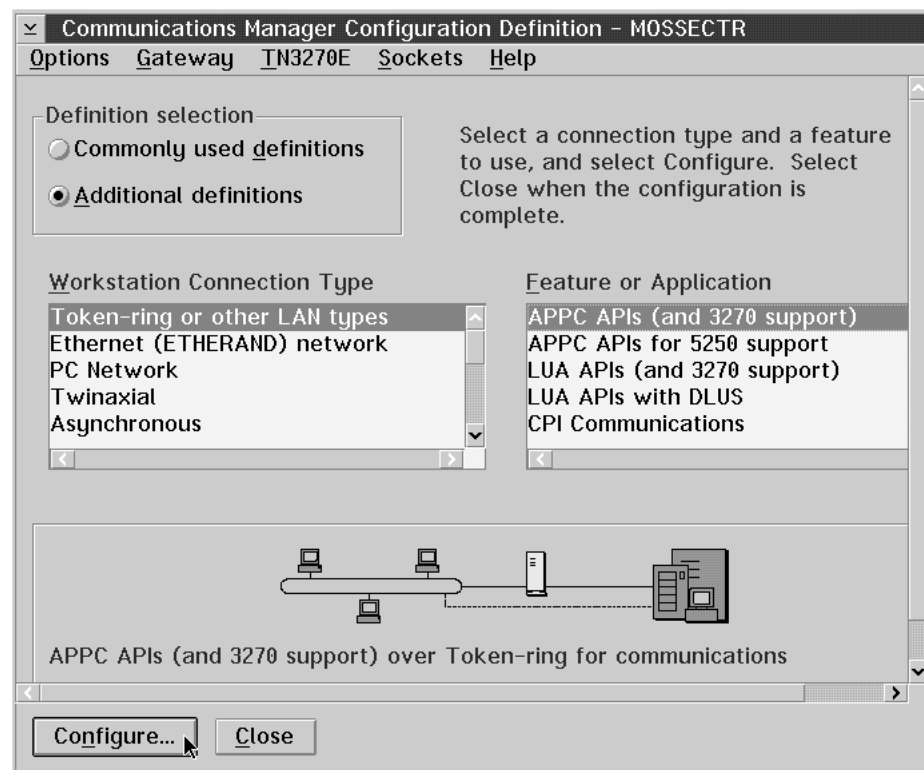


Step 3. Select **DLC - Token-ring or other LAN types** and click **Configure**.

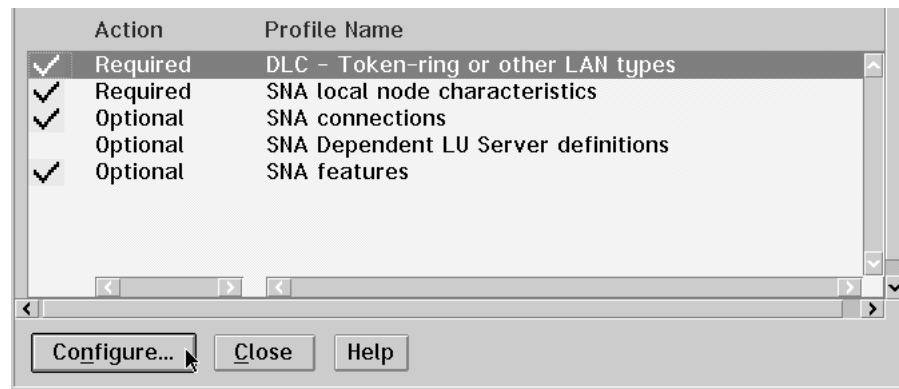


Step 4. Select **Free unused links** (in CM/2, select **Free unused links** and click **OK**). From the **Additional Parameters** list, highlight and check the following using the **Change** button.

- Select **HPR parameters** and de-select **HPR support**.
- Check that the defaults apply to **Link station protocol parameters**, **Network management parameters**, and **Resource management parameters**.

Then click **OK**.

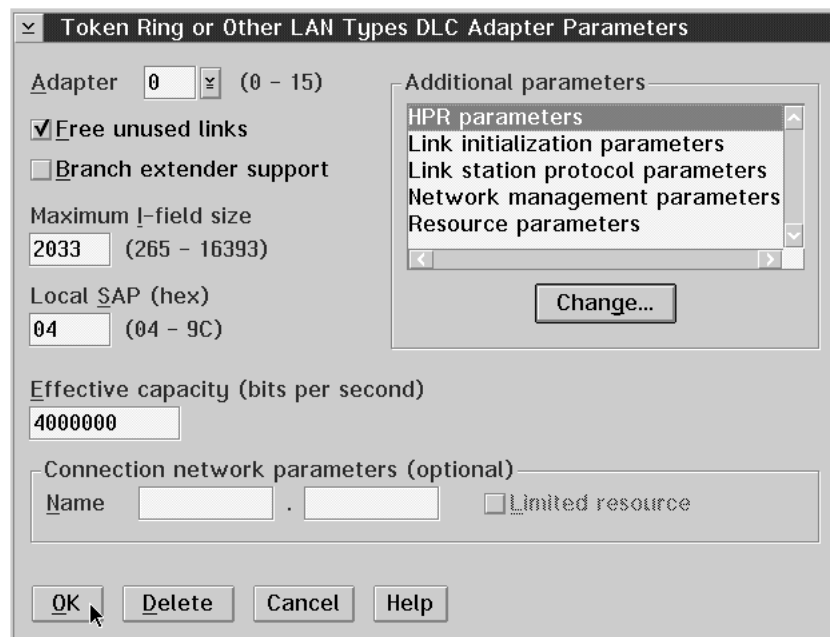


Step 5. Select **SNA local node characteristics** and click **Configure**.

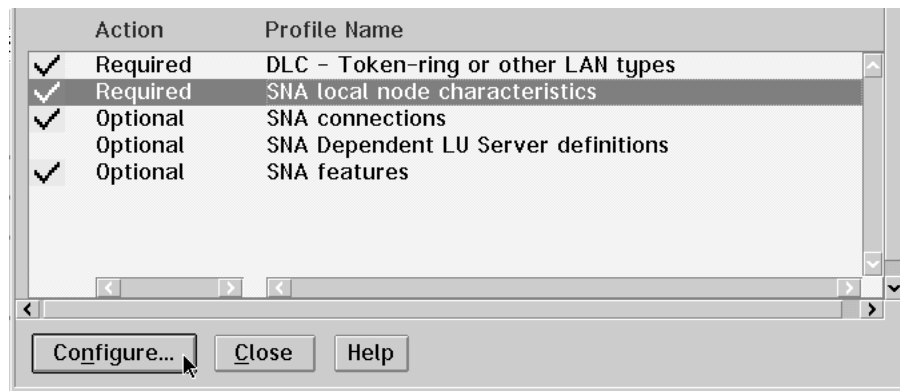


Step 6. Enter a name in **Network ID** field (the name of the network that you are trying to reach) and **Local node name** field (this can be anything you want), select **End node** and click **OK**.

A screenshot of the 'Local Node Characteristics' dialog box. The 'Network ID' field contains 'SYSTST'. The 'Local node name' field contains 'CDRM11'. The 'Node type' section has three radio buttons: 'End node' (selected), 'Network node', and 'Branch extender support'. Below this, the 'Local node ID (hex)' field contains '05D' and '00000'. The 'Local node alias name' field contains 'CRDRM11'. The 'Maximum compression level' dropdown is set to 'NONE'. The 'Maximum compression tokens' field contains '0' with a range '(0 - 3800)' next to it. There are two unchecked checkboxes: 'Activate Attach Manager at start up' and 'Search required'. An 'Optional comment' field is empty. At the bottom are four buttons: 'OK', 'NetWare(R)...', 'Cancel', and 'Help'. The 'OK' button is highlighted with a mouse cursor.


Step 7. Select **SNA connections** and click **Configure**.

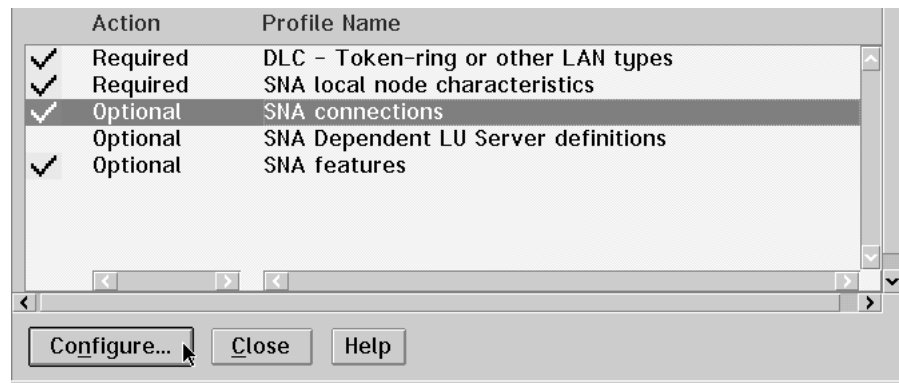


Step 8. Select **To network node**, **DCAFAPPN** in the **Link name** list, and click **Change**.

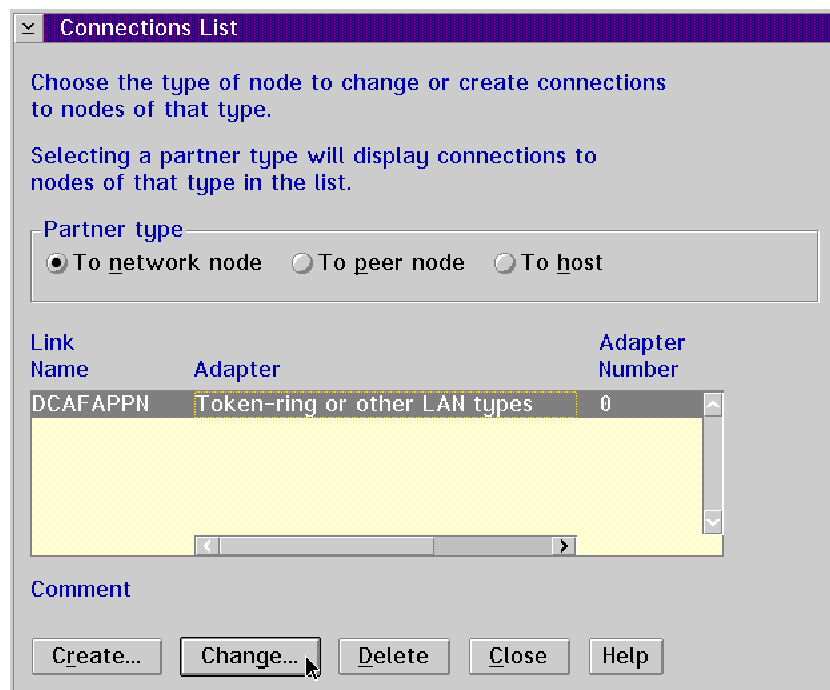

Step 9. Select **Token-ring or other LAN types** and click **Continue**.

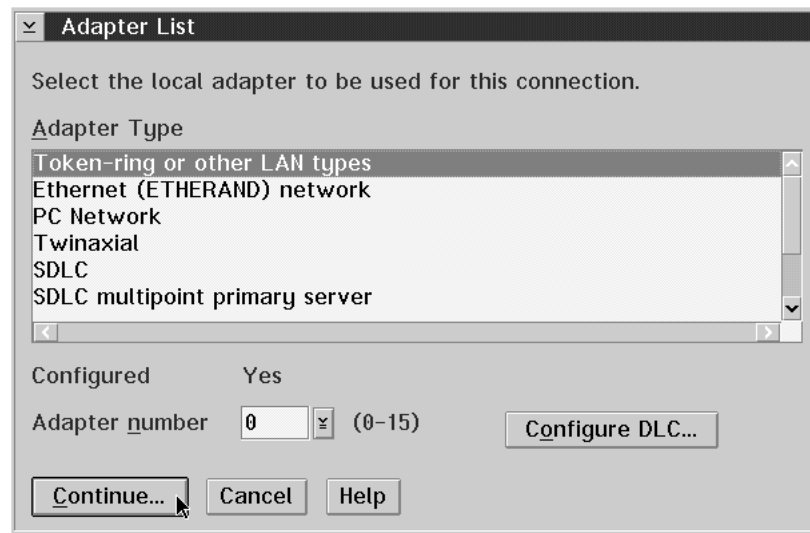


Step 10. Enter a name in the **Link name** field, a hex number in the **LAN destination address**, a number in the **Remote SAP** field, and click **OK**.

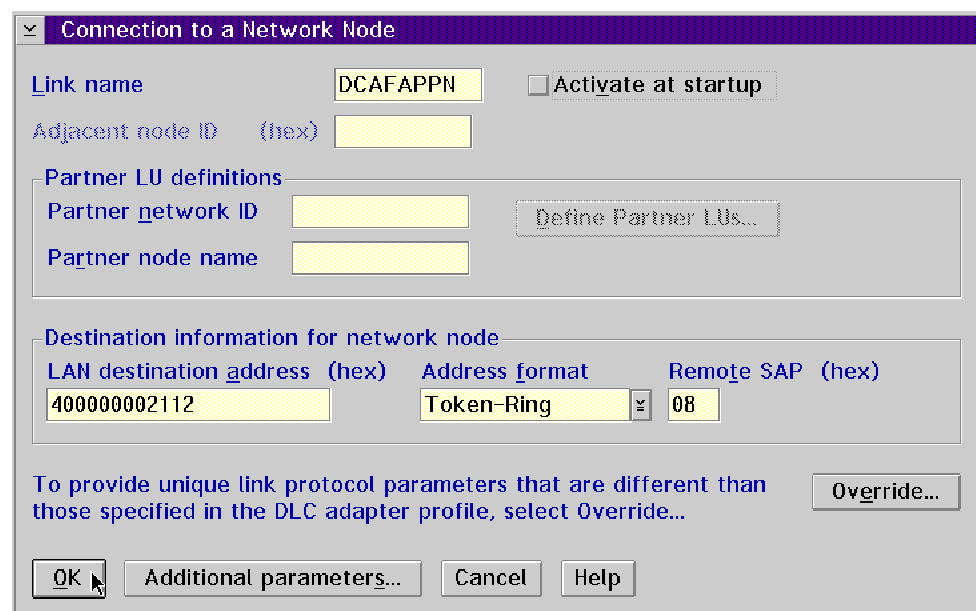


Step 11. Click **Close** on the intermediate window.


Step 12. Select **SNA features** and click **Configure**.

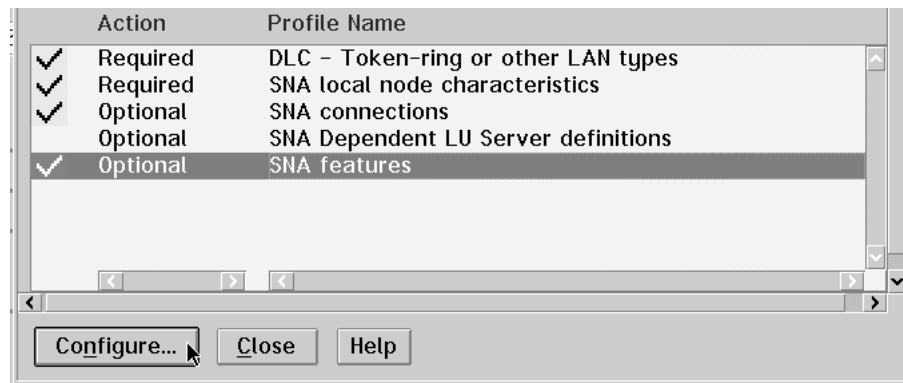

Step 13. Select **Local LUs** in the **Features** list, **CTRLAPPN** in the **Definition** list, and click **Change**.

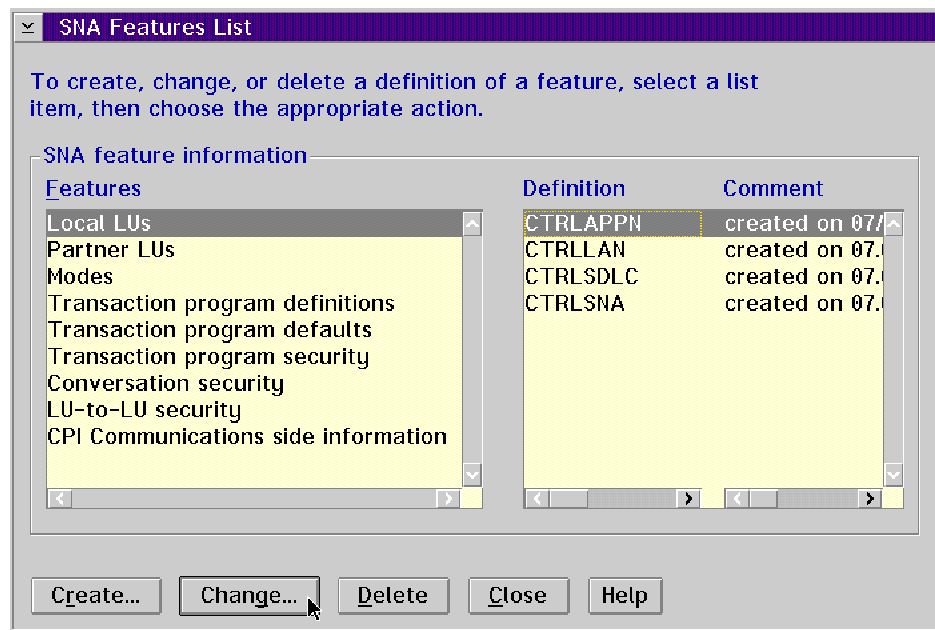

Step 14. Modify the **LU name** and **Alias** fields and select **use this local LU as default local LU alias**. Then select **Independent LU** and click **OK**.

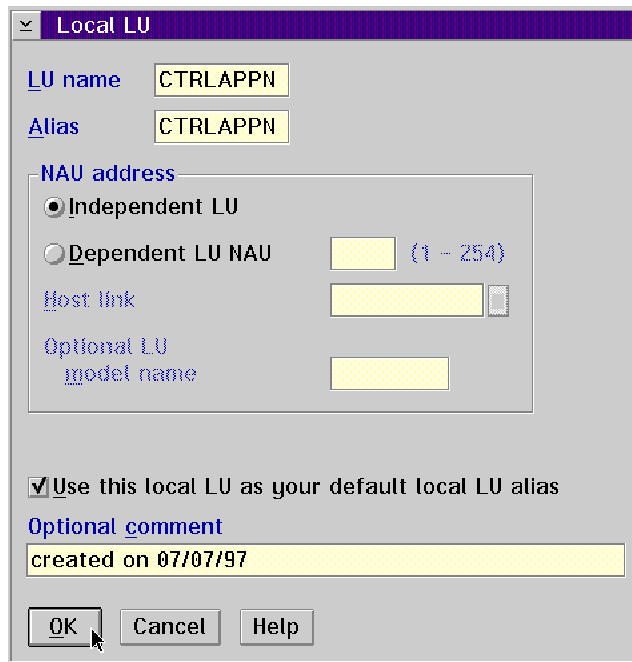


The 'Local LU' dialog box has a title bar with a dropdown arrow. It contains the following fields and options:

- LU name:** A text box containing 'CTRLAPPN'.
- Alias:** A text box containing 'CTRLAPPN'.
- NAU address:** A group box containing:
 - ☒ **Independent LU**
 - ☐ **Dependent LU NAU** with a text box containing '(1 - 254)'.
 - Host link:** A text box.
 - Optional LU model name:** A text box.
- ☒ **Use this local LU as your default local LU alias**
- Optional comment:** A text box containing 'created on 07/07/97'.
- Buttons: **OK**, **Cancel**, and **Help**.

Step 15. Select **Modes** and verify that **DCAFMODE** is in the **Definition** list. If you do not find **DCAFMODE**, add it to the list with the **Create** button.

Step 16. Select **Transaction program definitions** from the **SNA Features List** and click **Create**.

Step 17. Enter the command line in the **Transaction program (TP) name** field, the path of the DCAF directory in the **OS/2 program path and file name** field, and click **Continue**.

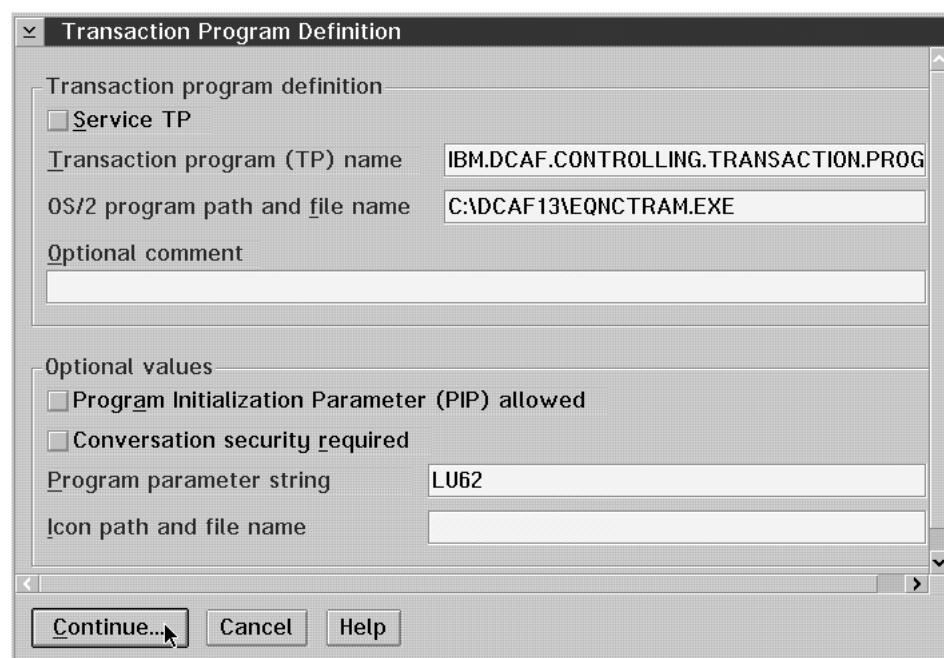

The 'Transaction Program Definition' dialog box has a title bar with a dropdown arrow. It contains the following fields and options:

- Transaction program definition:**
 - ☐ **Service TP**
 - Transaction program (TP) name:** A text box containing 'IBM.DCAF.CONTROLLING.TRANSACTION.PROG'.
 - OS/2 program path and file name:** A text box containing 'C:\DCAF13\EQNCTRAM.EXE'.
 - Optional comment:** A text box.
- Optional values:**
 - ☐ **Program Initialization Parameter (PIP) allowed**
 - ☐ **Conversation security required**
 - Program parameter string:** A text box containing 'LU62'.
 - Icon path and file name:** A text box.
- Buttons: **Continue...**, **Cancel**, and **Help**.

Step 18. Click **Close** on the subsequent screens until you exit CS/2.

Step 19. Continue with “Customizing DCAF.”

Customizing DCAF

Step 1. From **Desktop Manager**, double-click the **Distributed Console Access Facility** icon.




Step 2. Double-click the **DCAF Controller** icon.


Step 3. Click **Session**, then **Open workstation directory**.

Step 4. Click **OK** for a first installation. Otherwise continue with next step.

Step 5. From the DCAF Directory window, click **Workstation**, then on **Add**.

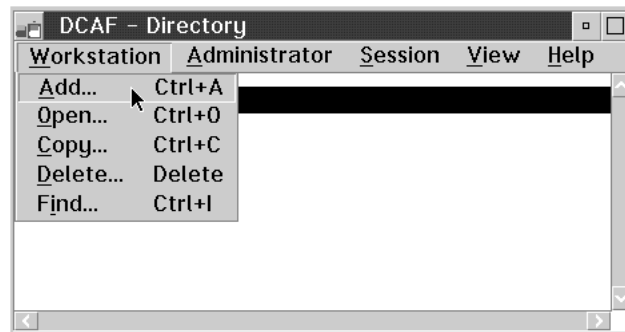


Step 6. Fill in the **Workstation name** field, select **APPN**, **Target**, and click **Protocol**.

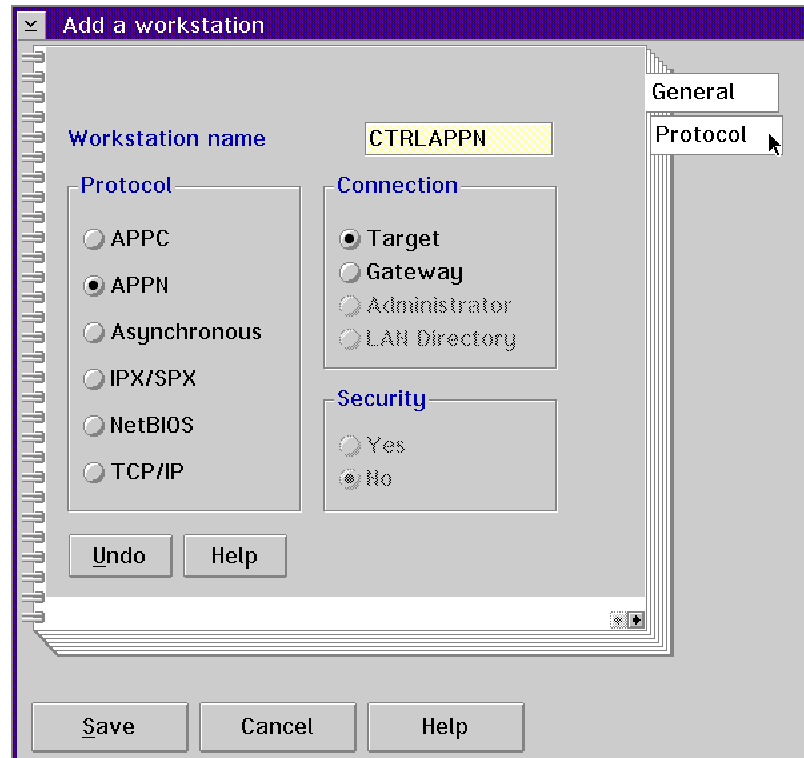

- Step 7.** Fill in the **Local LU alias** (see Step 14 on page 8-8), **Fully qualified PLU** (for the first part, see Step 6 on page 8-4 and for the second part, see Step 6 on page 8-12) fields. Enter DCAFMODE in the **Mode name** fields, click **Save**, **OK** (on the subsequent window), and **Cancel**.

Note: Write down the PLU information. You will need this for the **Local LU** when you customize CS/2 on the target service processor.

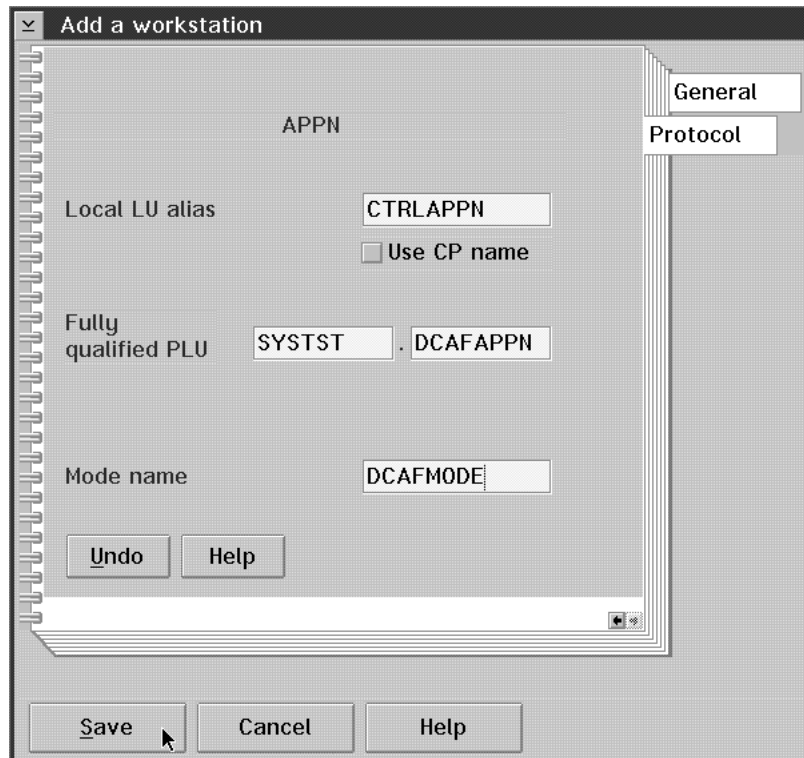

- Step 8.** In **Desktop Manager**, shutdown and restart the workstation.


- Step 9.** Continue with “Installing a Target Service Processor.”

Installing a Target Service Processor


- Step 1.** Open the **Service Processor Menu**.
- Step 2.** Click **Configuration Management**.
- Step 3.** Select **Communications Manager/2**.
- Step 4.** Double-click **SP Customization**.



Step 5. Select **Enable DCAF Link/Operations** in the **View Customize** button list and click **Next**.

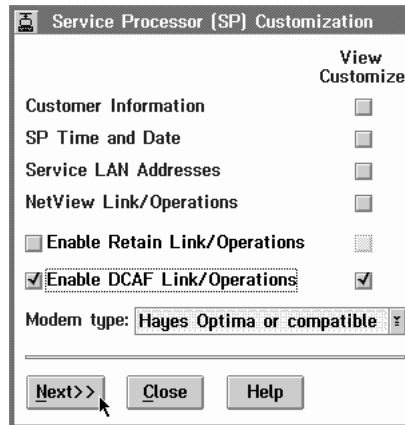

Step 6. Select **APPN** and click **Next**.

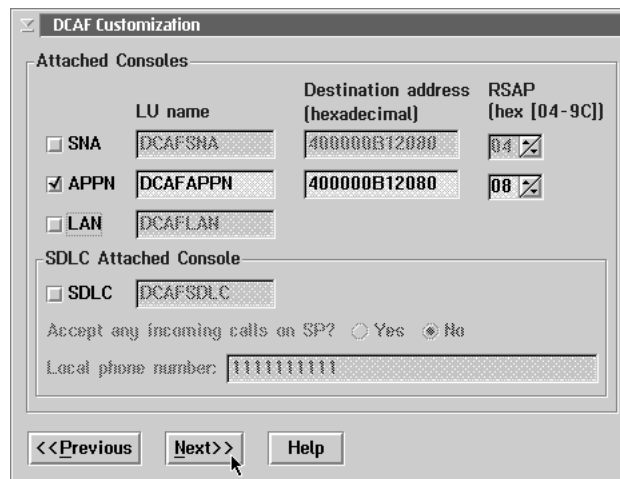


Step 7. Click **Close**.

Step 8. From Desktop Manager, shutdown and restart the service processor.

Note: For an alternative method of configuring the target service processor, see "CCM Definitions for DCAF" on page 8-13.


CCM Definitions for DCAF

- Step 1.** From the 3746-950 menu, click **Network Node Processor (NNP) Management**, then double-click **CCM - Controller Configuration and Management**.

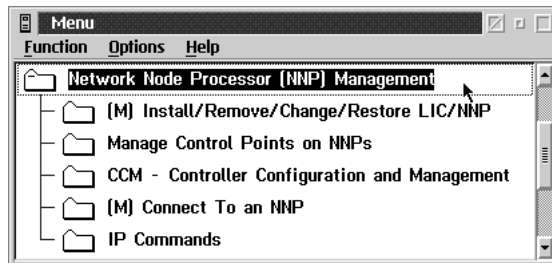


- Step 2.** Click **OK**.

- Step 3.** From the **CCM** main window, select **File** and **Open**.

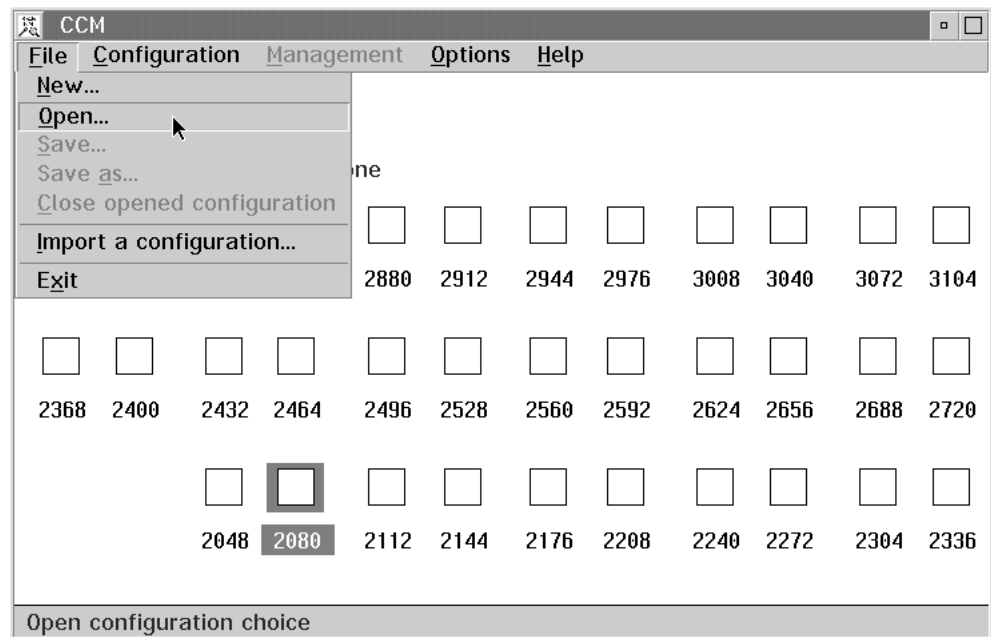


- Step 4.** You can customize the new DCAF session by modifying an existing file, or creating a new one (see the *CCM: Users Guide*, SH11-3081).

Step 5. From **CCM**, select the **TIC3 2080**. Then click **Configuration** and **Coupler**.

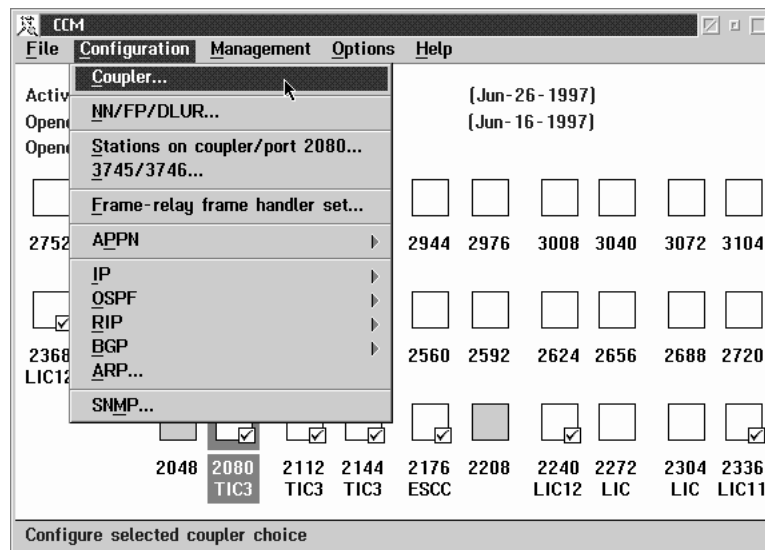


Step 6. Select **APPN** and click **OK**.

Step 7. Fill in the **Name**, and check the **Local MAC address** and **Local SAP** fields, then click **Stations**.

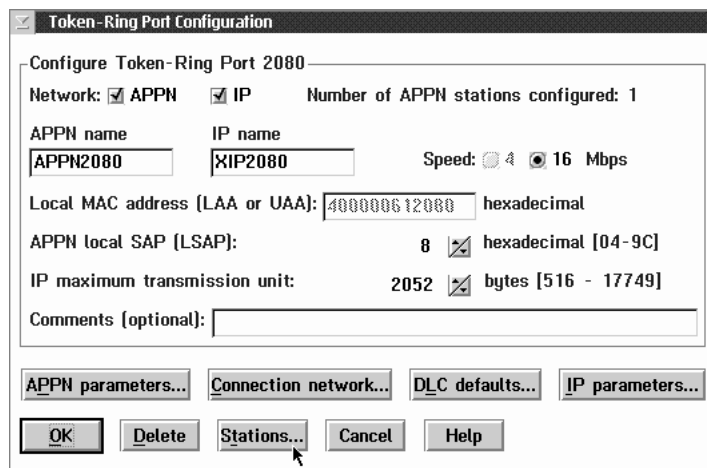

Step 8. Check that the **Remote MAC address** field matches the LAN address and the **Remote SAP** field matches the number in the **Local sap** field (see the *Planning Guide*).

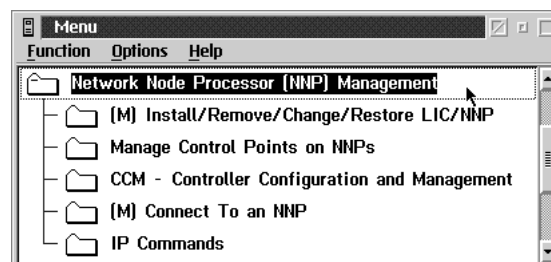

Step 9. Select **DLC parameters** or **APPN parameters** to customize your configuration and click **OK**.

Step 10. Click **OK** on the intermediate window.

Step 11. Refer to the *CCM: Users Guide* for saving and activating your new configuration.

The customization is now complete. Go to Chapter 3, “Using DCAF to Remotely Log On to the Service Processor” for working with your remote workstation.

Chapter 9. Telnet-attached Remote Workstation

Introduction

Any workstation that runs the Telnet Client program can remotely access the IP functions of a network node processor. If you use Telnet on a remote workstation, you can configure and manage the IP functions without disturbing the operations of the service processor.

However, if you use Telnet, the following applies:

- You will not be able to access any MOSS-E functions.
- You can only have one remote workstation at a time access a network node processor.
- Any remote workstation can access a network node processor.

Notes:

TCP/IP and Telnet Client programs are separate products from IBM applications for Communication Controllers. See the documentation that comes with these products for information on installation procedures.

Consoles

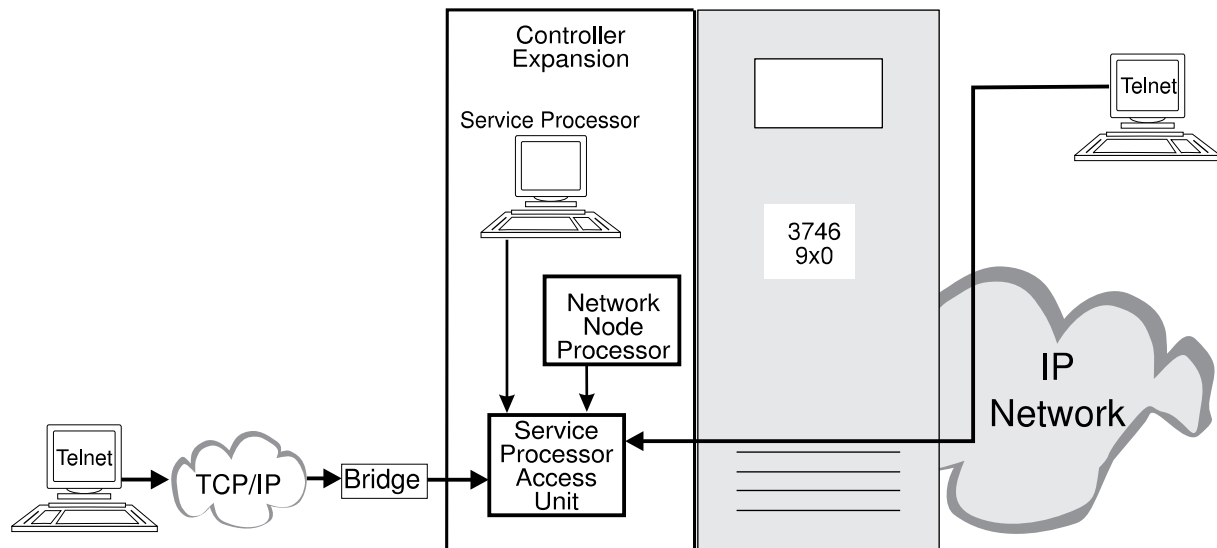


Figure 9-1. Telnet Workstation Configuration

A Telnet remote console can be attached to the service LAN via a bridge with appropriate filtering, or via an IP network controlled by the target Network Node Processor (NNP). See Figure 9-1 above.

These attachments can be through the following:

- LAN (Token-ring, Ethernet)
- WAN links (Frame-relay, Point-to-Point Protocol).

Logon Password

Telnet passwords are defined for access to the service processor during the installation of the network node processor. If you have problems, see your network administrator.

Programming Requirements

For remote access to the functions of a network node processor, your workstation must have an operating system (OS/2, for example) that can run TCP/IP.

Hardware Requirements and Recommendations

Any remote workstation supporting IP with the Telnet Client program.

Installation

Before you begin the installation procedure for the network node processor, make sure that your workstation can run TCP/IP.

For installing or upgrading the TCP/IP application including the **Telnet Client program**, refer to the *Installation Guide* that comes with TCP/IP.

Using Telnet to Remotely Log On to the Network Node Processor

Starting a Session

Important

Use the *Planning Guide*, GA33-0457 worksheets to fill in any required address and name fields.

- Step 1.** Open an operating system window (OS/2, for example).
- Step 2.** On the command line, type `telnet` followed by the IP address or nickname of the network node processor.
- Step 3.** Enter the Telnet password. The Telnet user session starts automatically.
- Step 4.** For the next step, enter one of the following:
- T 6. for a configuration
 - T 5. for management.

For more information, refer to the *Basic Operations Guide*, SA33-0177.

Closing a Session

To close the session, press  and  together.

Part 2. 3745 Models 130 to 610

Chapter 10. Setting Up a Local or an Alternate Console

This chapter applies to **3745 Models 130 to 610**. It does not apply to **Model A**.

General Information on Local or Alternate consoles

A local console is required, while an alternate console is optional. You can use any of the following:

- An IBM 3151 Display Station (Models 110, 160, 310, 360, 410, or 460) in native mode (recommended) or in IBM 3101 emulation mode.

Note: Models which do not support block mode cannot be used as consoles for the IBM 3745 Communication Controller.

- An IBM 3153 Display Station in IBM 3151 emulation mode.
- An IBM 3161 ASCII Display Station (Model 11, 12, 21, or 22) in IBM 3101 emulation mode.
- An IBM 3163 ASCII Display Station (Model 11, 12, 21, or 22) in IBM 3101 emulation mode (feature code 8235).
- An IBM PS/2, running OS/2 Extended Edition, Release 1.1 or higher.
- An IBM 3727 Operator Console with adhesive keypad labels (part number 03F7773), or any equipment providing equivalent functions (including cable and keyboard).

Check your console cables (for more information, refer to Appendix C in this manual, and the *Technical News Letter*, GN22-5490 part of *Input/Output Equipment Installation Manual - Physical Planning*, GN22-5490).

If a cable or console does not work correctly, contact your installation coordinator.

Notes:

1. Consoles can be shared by an IBM 7427 Console Switching Unit. A maximum of four IBM 3745 or IBM 3725 Communication Controllers can share a local console. The maximum distance is 7 meters (23 feet). A maximum of six 3745 or 3725 Communication Controllers can share an alternate console. The maximum distance is 122 meters (400 feet).
2. If you set up certain consoles in an established system, you will need to reload MOSS (IML). Refer to the *Advanced Operations Guide*, SA33-0097.

3151 in Native Mode (Local or Alternate)

Notes:

1. **Native mode is the recommended mode of operation.**
2. The 3151 Model 110 can only be used in native mode because it does not support 3101 emulation.
3. The MOSS function keys are PF1 through PF8.
4. The line **not Model 110** does not appear on the Model 110 menu.

Setting Up

1. Hold down the Ctrl key (bottom left) and press the Setup key (top right) to display the Setup menu.

Note: If the 3151 is new, the Setup menu appears automatically when you power ON.

2. Fill in the fields as follows, using the ↑ and ↓ keys to move between items and the spacebar to select the parameter values:

Machine Mode	IBM3151
Screen	NORMAL
Row and Column	24 X 80
Scroll	JUMP
Auto LF	ON
CRT Saver	OFF
Line Wrap	ON
Forcing Insert	OFF
Tab	FIELD

3. Press Send for the next menu.
4. Open the Setup Menu and fill in the fields as follows:

Operating Mode	BLOCK
Line Speed (bps)	2400
Word Length (bits)	7
Parity	EVEN
Stop Bit	1
Turnaround Character	DC3
Line Control	PRTS
Break Signal (ms)	500
Send Null Suppress	ON

5. Press Send.

6. Open the Keyboard/Printer Menu and fill in the fields as follows:

Keyboard

Enter	RETURN (not Model 110)
Return	FIELD
New line	CR
Send	PAGE
Insert character	MODE

Printer

Line speed	2400
Word length (bits)	7
Parity	EVEN
Stop bit	1
Characters	NATIONAL (not Model 110)

7. Press Enter.
8. Use the arrow keys to highlight **Save data**.
9. Press the spacebar to save the configuration.
10. Hold down the Ctrl key (bottom left) and press the Setup key (top right) to return.
11. Go to "Testing a Connection with the Local or Alternate Console" on page 10-10 and check the connection to the 3745.

3151 in 3101 Emulation Mode (Local or Alternate)

Notes:

1. **Native mode is the recommended mode of operation.**
2. The 3151 Model 110 must be used in native mode because it does not support 3101 emulation.
3. The line **not Model 110** does not appear on the Model 110 menu.

Setting Up

1. Hold down the Ctrl key (bottom left) and press the Setup key (top right) to obtain the Setup display.

Note: If the 3151 is new, Setup displays automatically when you turn the power ON.

2. Fill in the fields as follows, using the ↑ and ↓ keys to move between items and the spacebar to select the parameter values:

Machine Mode	IBM3101
Screen	NORMAL
Row and Column	24 X 80
Scroll	NO
Auto LF	ON
CRT Saver	OFF
Line Wrap	ON
Forcing Insert	OFF
Tab	FIELD

3. Press Send for the next menu.

4. Open the Setup Menu and enter the following:

Operating Mode	BLOCK
Line Speed (bps)	2400
Word Length (bits)	7
Parity	EVEN
Stop Bit	1
Turnaround Character	DC3
Line Control	PRTS
Break Signal (ms)	500
Send Null Suppress	ON
Pacing	OFF

(Pacing is set to ON in native mode)

5. Open the Keyboard/Printer Menu and enter the following:

Keyboard

Enter	RETURN (not Model 110)
Return	FIELD
New line	CR
Send	PAGE
Insert character	MODE

Printer

Line speed	2400
Word length (bits)	7
Parity	EVEN
Stop bit	1
Characters	NATIONAL (not Model 110)

6. Press Enter.

7. Use the arrow keys to highlight **Save data**.

8. Press the spacebar to save the configuration.

9. Hold down the Ctrl key (bottom left) and press the Setup key (top right) to return.

10. Go to "Testing a Connection with the Local or Alternate Console" on page 10-10 and check the connection to the 3745.

3153 in 3151 Emulation Mode (Local or Alternate)

Recommended Settings

Refer to the *Users Guide*, SA33-0356 for information on console settings in the country where you reside.

Starting the Console Configuration

To start the Setup menu, hold down **Ctrl** and press **Minus** on the numeric keypad.

Key F1 (QUICK)

Emulation=3151	EIA Baud Rate=2400	EIA Data Format=7/1/E
Enhanced=OFF N/A	AUX Baud Rate=2400	Aux Data Format=7/1/E
Comm Mode=FULL BLOCK	Language=US	Sessions=ONE
Host/Printer=EIA/AUX		

Key F2 (GENERAL)

Emulation=3151	Enhanced=OFF N/A	Auto Wrap=0N
Curs Dir= LEFT TO RIGHT	Auto Scroll=0N	Monitor Mode=OFF
Screen Saver=OFF	Bell Vol=06	Warning Bell=0N
Bell Length=140ms	Setup Lang=US	Sessions=ONE

Key F3 (DISPLAY)

Display Cursor=0N	Cursor=STEADY BLOCK	Viewports=ONE
Pages=01	Page Length=24	Screen Video=NORMAL
Columns=80	Scroll=JUMP	Overscan Borders=0N
Width Change Clear=OFF	Speed=FAST	Refresh Rate=71 HZ

Key F4 (KEYBOARD)

Language=US	Char Set=NATIONAL	Key Mode=ASCII
KeyClick=OFF	Key Repeat=0N	Key Rate=20 CPS
Margin Bell=OFF	Key Lock=CAPS	Caps Lock=TOGGLE
Num Lock=TOGGLE		

Key F5 (KEYS)

Return Key=field	Enter Key=RETURN	New Line=CR
Send Key=PAGE	Insert Character=MODE	Backspace=BS BS
Desk Acc=ctrl <-	Pound Key=US	Return Key REPEAT=OFF
UDKS=EMUL DEPENDENT		

Key F6 (PORTS)

EIA Baud Rate=2400	EIA Data Format=7/1/E	EIA Parity Check=off
AUX Baud Rate=2400	AUX Data Format=7/1/E	Aux Parity Check=off
EIA Xmt=Xon-Xoff	EIA Recv= Xon-Xoff(XPC)	EIA Xmt Pace= Baud
Aux Xmt=Xon-Xoff	Aux Recv= Xon-Xoff(XPC)	Aux Xmt Pace= Baud

Key F7 (HOST)

Comm Mode= FULL BLOCK	Local= OFF	Null Suppress=OFF
Break= 500MS	Line Control=PRTS	Disconnect=2 SEC
Recv <CR>=<CR><LF>	Recv =IGNORE	Send Ack=OFF
Alt Input DATA=0N	Turnaround Char=DC3	Send Null=0N

Leaving the Console Configuration

1. Press Ctrl and the Minus key on the numeric keypad.
 - Type Y to save the configuration.
 - Type N to cancel the new configuration or keep the previous one.
 - Type C to review the configuration.

3161 or 3163 (Local or Alternate)

1. Hold down the Ctrl key (bottom left) and press the Setup key (top right).
2. Fill in the fields as follows, using the ↑ and ↓ keys to move between items and the spacebar to select the parameter values:

Machine Mode	IBM3101
Operating Mode	BLOCK
Interface	RS232C
Line Control	PRTS
Line Speed (bps)	2400
Parity	EVEN
Turnaround Character	DC3
Stop Bit	1
Word Length (bits)	7 (3161 only)
Response Delay	100 (3161 only)
Break Signal (ms)	500 (3161 only)

3. Press Send.
4. Press Select.
5. Use the spacebar to enter as follows:

Scroll=OFF	Return=CR	Line Wrap=ON
AutoLf=ON	Send=PAGE	Null Supp=ON
6. Press Select to return.
7. Go to "Testing a Connection with the Local or Alternate Console" on page 10-10 for checking the connection to the 3745.

IBM PS/2 (Local or Alternate)

Note: To complete this procedure successfully, you must be running OS/2 Extended Edition, Version 1.1 or higher, at SYSLEVEL 03030 or higher. If you are not sure of the level, refer to Appendix A.

To configure a PS/2 as a local or alternate console, do the following:

1. Open an OS/2 screen.
2. Type CD \CMLIB at the prompt.
3. Type COPY ACSCFG.CFG MOSSL0C.CFG. at the prompt.

4. Edit CONFIG.SYS to add the following line:

```
DEVICE=C:\CMLIB\ASYNCDDB.SYS COM1
```

Notes:

- a. If you are using a PC/AT* or a PC/XT* equipped with an 80286 microprocessor, use ASYNCDDBA.SYS instead of ASYNCDDB.SYS.

- b. Open your CONFIG.SYS file and search for the line:

```
DEVICE=C:\OS2\COMxx.SYS (where xx = 01, 02, or 03)
```

If you find it, insert this line before it:

```
ASYNCDDB/A
```

5. Press Ctrl and Esc to go to Task Manager.
6. Select Start Programs to display the main menu.
7. Select Communication Manager (this takes ten seconds to load).
8. When the CMM Menu appears, go to the top of the screen and select **Advanced**.
9. Select **Configuration**.
10. Type MOSSL0C, then press **Enter**. The Communications Configuration menu displays.
11. Select **Workstation profile**.
12. Select **Change** and customize as follows:

Error log file name	ERROR.DAT (for example)
Error log size	16 (for example)
Error log overflow option	WRAP
Message log file name	MESSAGE.DAT (for example)
Message log size	500 (for example)
Message log overflow option	WRAP
Enable auto-start options	YES

13. Press **Enter** to go to the next screen, and continue with the Auto-Start Options:

- ACDI service
- ASCII terminal emulation
- 3270 terminal emulation (DFT)
- 3270 terminal emulation (SDLC)

Display this screen first:

- Communication Manager main menu
- ASCII Terminal Emulation
- 3270 Terminal Emulation

14. Press **Enter**. The message **The profile has been saved** displays.
15. Select **Asynchronous feature profiles**.
16. Select **Asynchronous communication port profile**.

17. Select **Create** and enter the following:

Country code	xxx
(where xxx is your country code)	
Profile name	COM1

18. Press **Enter**, then select **Other modem or device**.

19. Press **Enter** and a window opens. Select **NON-SWITCHED**.

20. Press **Enter**. The message **The profile has been saved** displays.

21. Select **ASCII terminal emulation profiles**.

22. Select **ASCII terminal emulation profiles** again.

23. Select **Create**. Use model profile name **M6** and new profile name **MOSSL**.

24. Press **Enter**.

25. Customize the **MOSSL** profile as follows:

Communication port name	COM1
(same as port profile name)	
Emulation mode	IBM 3101
Line speed	2400
Bits per character	7
Parity type	EVEN
Number of stop bits	1
Local display	NO
Auto return	YES
Enter key	CR/LF
Line ending control	YES

26. Press F8 and enter the following:

Turnaround character	DC3
Scrolling	NO
Mode	BLOCK
Null suppression	YES

27. Press Enter and enter the following:

Type of connection	DIRECT
Automatic XON/XOFF flow control	YES
Minimum time for break signal	500
Enhanced keyboard profile name	ACSAENUS *
At keyboard profile name	ACSAATUS *
Transfer to IBM protocol converter	NO
Change parameters for ASCII text files	NO
Data capture file name	CAPTURE.XXX (for example)
Auto-start data capture	NO
Auto-activate data filter	YES

* These are the default U.S.A. profiles. For other countries, use F4 to select the relevant profile. For more information, see Appendix A.

28. Press Enter.

29. Select **Default ASCII terminal emulation profile name**.

30. Type MOSSL and press Enter. The message **The profile has been saved** displays.

31. Press **Esc** twice to display the Communications Configuration menu.
 32. Select **Verify**, then **Run Verify**. The **Verified** message displays. If the message does not display, check that you have entered the data correctly. Press Enter.
 33. Select **Exit**.
 34. Select **Exit communication configuration**.
 35. Select **Exit**.
 36. Select **Exit Communication Manager**.
 37. Select **Yes**.
 38. When the **Display Feature Status** screen disappears, select **F3=Exit**.
 39. The Start Programs menu displays.
 40. Select **OS/2 full-screen command prompt**.
 41. Use the system editor to create a STARTUP.CMD file with the following lines:

```
@ECHO OFF
CD\CMLIB
START "COMM.MGR MOSSL" /FS /N DMPC ACS.CNF /A:ACS ACS.EXE
EXIT
```
 42. Restart the system by simultaneously pressing Ctrl, Alt, and Del.
 43. Go to "Testing a Connection with the Local or Alternate Console" on page 10-10 and check the connection to the 3745.
- Note:** When you finish a communications task, CM/2 should be closed carefully. For more information, refer to Appendix A.

MOSS Local or Alternate Console Emulation with CM/2 and Softerm

For a description of how to set up a 3101 terminal emulator, using CM/2 and Softerm as a connections to 3745 MOSS, see "MOSS Remote Console Emulation with CM/2 and Softerm" on page 11-10.

Attention

The Baud Rate for a local or alternate console is 2400 bps.

3727

Call your IBM service representative.

Testing a Connection with the Local or Alternate Console

1. Turn on the operator console.
2. A **CA INTERFACE DISPLAY** screen similar to the following one should be displayed (for the alternate console, wait 25 seconds):

----- mm/dd/yy/ hh : mm						
CA INTERFACE DISPLAY						
INTERFACE NUMBER	CHANGE E/D REQ	E/D REQUEST	INTERFACE STATUS SWITCH	HOST OR UNIT ADDRESS	CHANNEL ADDRESS	NSC
1A		-	-			
2A		-	-			
3A		-	-			
4A		-	-			
5A	=>	E	ENABLED			40
5B	=>	D	DISABLED			41
7A	=>	D	DISABLED			42
8A		-	-			
- TYPE E OR D TO CHANGE THE ENABLE/DISABLE REQUEST, THEN PRESS SEND						
F4: MOSS FUNCTIONS			F5: UPDATE			

3. If this screen displays, the console setup was successful.
4. If the screen is not displayed, check that the console cables are connected, and that power is on, then try again to connect.

Other possible causes of a faulty console setup are as follows:

- The console is set to 1200 bps instead of 2400.
- The cable adapter P/N 54F0490 is plugged wrongly. Check that the arrow on the adapter points toward the console.
- The 3151 console is set up in both native and emulation modes.

If the problem continues, refer to the *Problem Determination Guide*, SA33-0096.

Note: You can also diagnose problems by using the console link test, as described in the *Problem Determination Guide*.

Chapter 11. Setting Up a Remote Console

This chapter applies to **3745 Models 130 to 610**. It does not apply to **Model A**.

General Information (Remote)

A remote console is optional. You can use any of the following:

- 3151 Display Station (Models 110, 160, 310, 360, 410, and 460) in native mode (recommended) or in 3101 emulation mode.

Note: Models which do not support block mode cannot be used as consoles for the 3745 Communication Controller.

- 3153 Display Station in 3151 emulation mode.
- 3161 ASCII Display Station (Model 11, 12, 21, or 22) in 3101 emulation mode.
- 3163 ASCII Display Station (Model 11, 12, 21, or 22) in 3101 emulation mode (feature code 8235).
- PS/2 running with an OS/2 Extended Edition, Release 1.1 or higher.
- Personal Computer with an asynchronous communications adapter (or equivalent), running in 3101 emulation mode.

Note: If an adapter card is installed in slot 8 of the PC/XT or Portable or in an expansion unit, you must also install signal jumper (J13).

- Any equipment that can emulate the 3101 with an EIA 232D or ITU-T V.24 interface.

Check your console cables (for more information, refer to Appendix C in this manual, and the *Technical News Letter*, GN22-5490 part of *Input/Output Equipment Installation Manual - Physical Planning*, GN22-5490).

If a cable or console is not correct, contact your Installation coordinator.

Note: If you setup certain consoles in an already established system, you will need to reload MOSS (IML). Refer to the *Advanced Operations Guide*, SA33-0097.

3151 in Native Mode (Remote)

Important Note: If you have difficulty in using the 3151 as a remote console for a 3745 Model 210 or 410, contact your IBM service representative to ensure that you have the correct MOSS Console Adapter (MCA) card installed.

Notes:

1. **Native mode is the recommended mode of operation.**
2. The 3151 Model 110 can only be used in native mode because it does not support 3101 emulation.
3. The MOSS function keys are PF1 through PF8.
4. The line **not Model 110** does not appear on the Model 110 menu.

Setting Up

1. Hold down the Ctrl key (bottom left) and press the Setup key (top right).

Note: If the 3151 is new, Setup displays automatically when you power ON.

2. Fill in the fields as follows (use the ↑ and ↓ to move between items and the spacebar to select parameter values):

Machine Mode	IBM3151
Screen	NORMAL
Row and Column	24 X 80
Scroll	JUMP
Auto LF	ON
CRT Saver	OFF
Line Wrap	ON
Forcing Insert	OFF
Tab	FIELD

3. Press Send to get the next menu.
4. Open the Setup Menu and fill in the fields as follows:

Operating Mode	BLOCK
Line Speed (bps)	1200
Word Length (bits)	7
Parity	EVEN
Stop Bit	1
Turnaround Character	DC3
Line Control	PRTS
Break Signal (ms)	500
Send Null Suppress	ON

5. Press Send.

6. Open the Keyboard/Printer Menu and fill in the fields as follows:

Keyboard

Enter	RETURN (not Model 110)
Return	FIELD
New line	CR
Send	PAGE
Insert character	MODE

Printer

Line speed	2400
Word length (bits)	7
Parity	EVEN
Stop bit	1
Characters	NATIONAL (not Model 110)

7. Press Enter.
8. Use the arrow keys to highlight **Save data**.
9. Press the spacebar to save the configuration.
10. Hold down the Ctrl key (bottom left) and press the Setup key (top right) to return.
11. Go to "Testing the Modem Connection to a Remote Console" on page 11-13 and check the connection to the 3745.

3151 in 3101 Emulation Mode (Remote)

Important Note: If you have difficulty in using the 3151 as a remote console for a 3745 Model 210 or 410, contact your IBM service representative to ensure that you have the correct MCA card installed.

Notes:

1. **Native mode is the recommended mode of operation.**
2. The 3151 Model 110 can only be used in native mode because it does not support 3101 emulation.
3. The line **not Model 110** does not appear on the Model 110 menu.

Setting Up

1. Hold down the Ctrl key (bottom left) and press the Setup key (top right).

Note: If the 3151 is new, Setup displays automatically when you power ON.

2. Fill in the fields as follows (use the ↑ and ↓ keys to move between items and the spacebar to select parameter values):

Machine Mode	IBM3101
Screen	NORMAL
Row and Column	24 X 80
Scroll	NO
Auto LF	ON
CRT Saver	OFF
Line Wrap	ON
Forcing Insert	OFF
Tab	FIELD

3. Press Send for the next menu.

4. Open the Setup Menu and fill in the fields as follows:

Operating Mode	BLOCK
Line Speed (bps)	1200
Word Length (bits)	7
Parity	EVEN
Stop Bit	1
Turnaround Character	DC3
Line Control	PRTS
Break Signal (ms)	500
Send Null Suppress	ON
Pacing	OFF

5. Press Send.

6. Open the Keyboard/Printer Menu and fill in the fields as follows:

Keyboard

Enter	RETURN (not Model 110)
Return	FIELD
New line	CR
Send	PAGE
Insert character	MODE

Printer

Line speed	2400
Word length (bits)	7
Parity	EVEN
Stop bit	1
Characters	NATIONAL (not Model 110)

7. Press Enter.
8. Use the arrow keys to highlight **Save data**.
9. Press the spacebar to save the configuration.
10. Hold down the Ctrl key (bottom left) and press the Setup key (top right) to return.
11. Go to "Testing the Modem Connection to a Remote Console" on page 11-13 and check the connection to the 3745.

3153 in 3151 Emulation Mode (Remote)

Recommended Settings

Refer to the *Users Guide*, SA33-0356 for information on console settings in the country where you reside.

Starting the Console Configuration

See the example below for an IBM 5842 Modem configuration.

To display Setup, press Ctrl and the Minus key on the number keypad.

Key F1 (QUICK)

Emulation=3151	EIA Baud Rate=1200	EIA Data Format=7/1/E
Enhanced=OFF N/A	AUX Baud Rate=2400	Aux Data Format=7/1/E
Comm Mode=HALF BLOCK	Language=US	Sessions=ONE
Host/Printer=EIA/AUX		

Key F2 (GENERAL)

Emulation=3151	Enhanced=OFF N/A	Auto Wrap=0N
Curs Dir= LEFT TO RIGHT	Auto Scroll=ON	Monitor Mode=OFF
Screen Saver=OFF	Bell Vol=06	Warning Bell=ON
Bell Length=140ms	Setup Lang=US	Sessions=ONE

Key F3 (DISPLAY)

Display Cursor=ON	Cursor=STEADY BLOCK	Viewports=ONE
Pages=01	Page Length=24	Screen Video=NORMAL
Columns=80	Scroll=JUMP	Overscan Borders=ON
Width Change Clear=OFF	Speed=FAST	Refresh Rate=71 HZ

Key F4 (KEYBOARD)

Language=US	Char Set=NATIONAL	Key Mode=ASCII
KeyClick=OFF	Key Repeat=ON	Key Rate=20 CPS
Margin Bell=OFF	Key Lock=CAPS	Caps Lock=TOGGLE
Num Lock=TOGGLE		

Key F5 (KEYS)

Return Key=field	Enter Key=RETURN	New Line=CR
Send Key=PAGE	Insert Character=MODE	Backspace=BS BS
Desk Acc=ctrl <-	Pound Key=US	Return Key REPEAT=OFF
UDKS=EMUL DEPENDENT		

Key F6 (PORTS)

EIA Baud Rate=1200	EIA Data Format=7/1/E	EIA Parity Check=off
AUX Baud Rate=2400	AUX Data Format=7/1/E	Aux Parity Check=off
EIA Xmt= No Protocol	EIA Recv= No Protocol	EIA Xmt Pace= Baud
Aux Xmt=Xon-Xoff	Aux Recv= Xon-Xoff(XPC)	Aux Xmt Pace= Baud

Key F7 (HOST)

Comm Mode= HALF BLOCK	Local= OFF	Null Suppress=OFF
Break= 500MS	Line Control=PRTS	Disconnect=2 SEC
Recv <CR>=<CR><LF>	Recv =IGNORE	Send Ack=OFF
Alt Input DATA=ON	Turnaround Char=DC3	Send Null=ON

Closing the Console Configuration

1. Press Ctrl and the minus key on the number keypad.
 - a. Type Y to save the configuration
 - b. Type N to cancel the new configuration or keep the previous one
 - c. Type C to review the configuration.

3161 or 3163 (Remote)

1. Hold down the Ctrl key (bottom left) and press the Setup key (top right).
2. Fill in the fields as follows (use the ↑ and ↓ to move between items, and the spacebar to select parameter values):

Machine Mode	IBM3101
Operating Mode	BLOCK
Interface	RS232C
Line Control	PRTS
Line Speed (bps)	1200
Parity	EVEN
Turnaround Character	DC3
Stop Bit	2
Word Length (bits)	7 (3161 only)
Response Delay	100 (3161 only)
Break Signal (ms)	500 (3161 only)

3. Press Send.
4. Press Select.
5. Use the spacebar to fill in the fields as follows:

Scroll=OFF	Return=CR	Line Wrap=ON
Autoff=ON	Send=PAGE	Null Supp=ON
6. Press Select to return.
7. Go to "Testing the Modem Connection to a Remote Console" on page 11-13 and check the connection to the 3745.

IBM PC

1. Start a 3101 emulation session.
2. Type 3 to create a specification file. Fill in the fields as follows:

Line Speed	1200
Block Mode	Y (yes)
Parity	E (even)
Stop Bits	2
Automatic Line Feed	Y (yes)
Carriage Return	Y (CR/LF)
Null Suppress	ON
Character at End	4 (XOFF)
Scrolling	N (no)

3. After entering the change and key definitions, enter the file name, for example REMMOSS.
4. Enter 1 to select a specification file and enter REMMOSS for the file name.
5. Go to "Testing the Modem Connection to a Remote Console" on page 11-13 and check the connection to the 3745.

Note: The asynchronous communications adapter should be configured as COM1 (the primary adapter) for EIA 232-D operations.

IBM PS/2 (Remote)

Note: To successfully complete this procedure, you must have installed OS/2 Extended Edition, Version 1.1 or higher, at SYSLEVEL 03030 or higher. If you are not sure of the level, refer to Appendix A.

To configure a PS/2 as a remote console, do the following:

1. Open an OS/2 full screen.
2. Type `CD \CMLIB`.
3. Type `COPY ACSCFG.CFG MOSSREMM.CFG`.
4. Type `CD \`.
5. Edit the CONFIG.SYS file by adding the following line at the end:
`DEVICE=C:\CMLIB\ASYNCDDB.SYS COM1`
6. Save the CONFIG.SYS file.

Notes:

- a. If you are using a PC/AT or a PC/XT equipped with an 80286 microprocessor, type ASYNCDDB.SYS instead of ASYNCDDB.SYS.
- b. Open your CONFIG.SYS file and look for the line (or lines):
`DEVICE=C:\OS2\COMxx.SYS` (where xx = 01, 02, or 03)

If you find it, insert this line before it:

`ASYNCDDB/A`

7. Open Desktop Manager.
8. Double-click Communication Manager/2 (this takes ten seconds to load).
9. In the CM/2 main menu, select **Advanced**.
10. Select **Configuration**.
11. Type MOSSREMM and press Enter.
12. The Communications Configuration menu displays.
13. Select **Workstation profile**.
14. Select **Change** and fill in the fields as follows:

Error log file name	ERROR.DAT (for example)
Error log size	16 (for example)
Error log overflow option	WRAP
Message log file name	MESSAGE.DAT (for example)
Message log size	500 (for example)
Message log overflow option	WRAP
Enable auto-start options	YES

15. If you need to, press **Enter** to display the Auto-Start Options menu and fill in the following fields:

- ACDI service
 - ASCII terminal emulation
 - 3270 terminal emulation (DFT)
 - 3270 terminal emulation (SDLC)

16. Fill in the fields as follows:

- Communication Manager main menu
 - ASCII Terminal Emulation
 - 3270 Terminal Emulation

17. Press **Enter**, and a message **The profile has been saved** displays.

18. Select **Asynchronous feature profiles**.

19. Select **Asynchronous communication port profile**.

20. Select **Create** and customize as follows:

Country code	xxx
Profile name	COM1

21. Press **Enter**, then select **Other modem or device**.

22. Press **Enter**.

23. In the following window, select **SWITCHED** and press Enter.

24. When the message displays **Data Set Ready Always Asserted**, select **YES**.

25. Press **Enter** and the message **The profile has been saved** displays.

26. Select **ASCII terminal emulation profiles** in the next two screens.

27. Select **Create**. Enter the model profile name as M6 and the new profile name as MOSSR.

28. Press **Enter**.

29. Fill in the **MOSSR** profile fields as follows:

Communication port name	COM1
(port profile name)	
Emulation mode	IBM 3101
Line speed	1200
Bits per character	7
Parity type	EVEN
Number of stop bits	2
Local display	NO
Auto return	YES
Enter key	CR/LF
Line ending control	YES

30. Press F8 to continue.

Turnaround character	DC3
Scrolling	NO
Mode	BLOCK
Null suppression	YES

31. Press Enter to continue.

Type of connection	DIRECT
Automatic XON/XOFF flow control	YES
Minimum time for break signal	500
Enhanced keyboard profile name	ACSAENUS *
AT keyboard profile name	ACSAATUS *
Transfer to IBM protocol converter	NO
Change parameters for ASCII text files	NO
Data capture file name	CAPTURE.XXX (for example)
Auto-start data capture	NO
Auto-activate data filter	YES

* These are the default U.S.A. profiles. For other country profiles, press **F4**. For more information, refer to Appendix A.

32. Press Enter.

33. Select **Default ASCII terminal emulation profile name**.

34. Type MOSSR and press **Enter**.

The message **The profile has been saved** displays.

35. Press **Esc** twice to display the Communications Configuration menu.

36. Select **Verify**, then **Run Verify**.

The **Verified** message displays.

If the message does not display, check that you have entered the data correctly.

Press Enter.

37. Select **Exit**.

38. Select **Exit Communication Configuration**.

39. Select **Exit**.

40. Select **Exit Communication Manager**.

41. Select **Yes**.

42. When the **Display Feature Status** screen closes, select **F3=Exit**.

43. The Start Programs menu displays.

44. Select **OS/2 full-screen command prompt**.

45. Use the system editor to create STARTUP.CMD file, containing the following lines:

```
@ECHO OFF
CD\CMLIB
START "COMM.MGR MOSSR" /FS /N DMPC ACS.CNF /A:ACS ACS.EXE
EXIT
```

46. Restart the system by pressing Ctrl, Alt, and Del.

47. Go to "Testing the Modem Connection to a Remote Console" on page 11-13 for information on checking the connections to the 3745.

Note: When a communications task is finished, close CM/2 carefully.

MOSS Remote Console Emulation with CM/2 and Softerm

The following is the setup procedure for a 3101 terminal emulator connection with a 3745 MOSS, using CM/2 and Softerm. To install Softerm, use the following procedure:

- Step 1.** Open an OS/2 window or screen.
- Step 2.** Insert the Softerm diskette into drive A.
- Step 3.** Type a: and press Enter.
- Step 4.** Type cd\ and press Enter.
- Step 5.** Type a:\install and press Enter.
- Step 6.** Wait for the installation to complete. A new **Custom Plus** icon displays.

Note: In the following procedure, window displays are indicated by an ⇒ followed by the title of the window.

Starting Custom Plus

- Step 1.** To start, click the **Custom Plus** icon twice.
⇒ window **Custom Plus - Icon View**
- Step 2.** Click twice on **Custom Plus** icon.
⇒ window **Softerm Session Manager - CUSTOM.MDB**

This window lists several predefined sessions.

Defining a New Session

- Step 1.** Click **Session** and then **Add**.
⇒ window **Add Session - Untitled**
- Step 2.** Click **Setup Profiles**.
⇒ window **Setup Profiles**

There are two setup profiles, Terminal Emulation and Connection Path.

See the following procedures to setup the Terminal Emulation profile, and the Connection Path profile.

Defining the Terminal Emulation Profile

- Step 1.** Click **Terminal**.
⇒ window **Terminal Emulation Profile Module - CUSTOM.MDB**
- Step 2.** Click **Add**.
⇒ window **Terminal Emulation**
- Step 3.** In the terminal types list, select **3101-2X** and click **OK**.
⇒ window **Terminal Emulation Settings - Untitled**
- Step 4.** In the **Comment** entry field, type: 3101-2X Settings for MOSS Console.
For the keyboard profile:
 - a. Click **Setup**.

⇒ window **Keyboard Profile Module - CUSTOM.MDB**

b. Click **Add**.

⇒ window **Add keyboard**

c. In the keyboard type list, select **AT 84 key**, or **101 Enhanced** or **102 Enhanced** depending on your key board.

d. In the terminal keyboard type list, select **IBM 3101-2X**.

e. In the nationality list, select the country where you reside.

f. Click **OK**.

⇒ window **Keyboard Settings - Untitled**

The default keyboard mapping is displayed. The Control, Alt and Function keys are used for 3101 functions.

Note: Function keys F1 to F10 correspond to the same keys, and F11 to F20 correspond to Shift-F1 through Shift-F10.

If you want to change the keyboard mapping, use the following procedure:

1) On window **Keyboard Settings - Untitled**, click **Change**.

⇒ window **Keyboard Remap**

2) When the keyboard map displays on the screen, click a key to see the corresponding 3101 definition. For example, if you want to remap the **Send** key to **Enter** instead of the default **Control-F1**, click the **Enter** key on the map, and then click **Open Base**.

⇒ window **Open/Edit Key**

3) In the **Key contents** entry field, delete Return and type Send.

4) Click **OK**. You can remap any other key(s).

g. When you have finished, click **Remap**.

⇒ window **Keyboard Settings - Untitled**

h. Click **Save as** to save the keyboard profile.

⇒ window **Save Keyboard - CUSTOM.MDB**

i. Enter the keyboard profile name, for example, 3101 keyboard.

j. Click **Save**.

⇒ window **Keyboard Profile Module - CUSTOM.MDB**

k. Click **Close**.

⇒ window **Terminal Emulation Profile Module - CUSTOM.MDB**

Step 5. Customize the 3101 terminal settings, and change the following parameters:

- Operating mode,
- Line Turn Around Character.

All the other parameters keep their default values.

Step 6. In **Terminal Emulation Settings** list, select the parameter and click **Change**:

- For Operating mode, click **Block** and then **OK**.
- For Line Turn Around Character, click **Xoff(\$13)** and **OK**.

- Step 7.** Click **Save as**.
⇒ window **Save Terminal Emulation - CUSTOM.MDB**
- Step 8.** Enter the terminal emulation profile name, for example, 3101 emulation.
- Step 9.** Click **Save**.
⇒ window **Terminal Emulation Profile Module - CUSTOM.MDB**
- Step 10.** Click **Close**.

Defining Connection Path Profile

Click **Setup Profiles**.
⇒ window **Setup Profiles**

- Step 1.** Click **Connection**.
⇒ window **Connection Path Profile Module - CUSTOM.MDB**
- Step 2.** Click **Add** twice.
⇒ window **Add Connection Path**
- Step 3.** Enter Standard COM for the communication interface and click **OK**.
⇒ window **Connection Path Settings - Untitled**
- COM1 (default setting) for the COM port
 - Select **(None)** for the modem profile name.
- Note:** You can add a customized profile with modem-supported features, such as auto-dial and auto-answer.
- Connection Path Settings:
 - Select an item in the list and click **Change** then **OK**.
 - Communications parameters:
 - Baud rate = 1200
 - Data bits = 7
 - Stop bits = 1
 - Parity = Even
 - Flow Control: None (default setting).
- Step 4.** Click **Save as**.
⇒ window **Save Connection Path - CUSTOM.MDB**
- Step 5.** Enter the connection path profile name, for example connection.
- Step 6.** Click **Save**.
⇒ window **Connection Path Profile Module - CUSTOM.MDB**
- Step 7.** Click **Close**.

Ending Definition of a New Session

- Step 1.** In the ⇒ window **Add Session - Untitled**, click **Add**.
⇒ window **Admittance data**
- Step 2.** Click **Save as**.
⇒ window **Save Session**
- Step 3.** Enter the session name, for example MOSS Console.
- Step 4.** Click **Save**.
⇒ window **Softerm Session Manager - CUSTOM.MDB**

Notes:

This window includes a **MOSS Console** session. You can start the session by double-clicking it. If you want to remotely connect to MOSS, attach a modem (1200 or 2400 bauds) to the COM1 port of your PS/2, and establish a connection to the 3745 modem.

Other Types of Consoles

Refer to the console's documentation, and use the information in the preceding sections to setup any operating characteristics.

Testing the Modem Connection to a Remote Console

1. Make sure that the modem associated with your remote console is powered ON and in voice mode.
2. Turn on the console.
3. Dial the telephone number of the 3745 with your modem.

You will hear the **ringback** tone. When you hear the **answer** tone (steady tone), go to the next Step.

If you do not hear the answer tone, the local console could be logged on. Try again later.

4. Set the modem associated with your remote console to data mode.
5. Hang up the handset, and the following screen displays:

```
3745 MICROCODE (C) COPYRIGHT IBM CORP. 1988  
MAXIMUM ADAPTER CONFIGURATION: CHANNEL ADAPTERS 5,6,7,8  
                                LINE   ADAPTERS 1,2,3,9,10,11,12  
  
ENTER PASSWORD ==>  
  
F4: CHANNEL INTERFACE DISPLAY
```

6. If this screen is displayed, setup was successful.
7. If the screen is not displayed, check that the console cables are connected and that power is ON to both console and modem, then try to connect again.

Other possible causes of a faulty console setup are as follows:

- The console is set to 2400 bps instead of 1200.
- The 3151 console is set in both native and emulation modes.

If the problem still persists, refer to the *Problem Determination Guide*, SA33-0096.

Note: You can also diagnose problems by using the console link test, described in the *Problem Determination Guide*.

Chapter 12. Setting Up Modems

Modems for 3745 Models 130 to 160

The following is a list of modems that can be set up to operate between the remote console and the 3745:

In the U.S.A.:

- IBM 5841 Modem.
- IBM 5842 Modem.

In the U.S.A., Canada, and Japan:

- IBM 5853 Modem (set to half speed).
- Equivalent compatible with Bell 212 A or ITU-T V.22 (1200 bps).

In other countries:

- Modems compatible with ITU-T V.22 alternative B (1200 bps).

For information about setting up RSF modems, refer to Chapter 13, "RSF Modems" on page 13-1.

Setting Up

For the modem to be compatible between the remote console and the 3745, refer to the modem's documentation and set the following modem characteristics:

- Switched line connection
- Duplex operation
- Asynchronous operation
- 1200 bps speed
- 3745 modem set to auto-answer
- Remote console modem set to manual dialing.

Notes:

1. Review the modem documentation to ensure compatibility with the 3745. In particular, check the following:
 - Error Checking Link (ECL) is disabled.
 - If the modem has a 'Test Mode', turn it off at the 3745 end.
 - If the modem is programmable, set the control of the Data Set Ready (DSR) signal to normal, so that it does not get raised by the Data Terminal Ready (DTR).
2. Some IBM PC modems disconnect from the switched network when the carrier signal drops. To prevent this, set the modem at the PC end to RTS Permanent. For more information, refer to your modem documentation.

Switch Settings for IBM Modems 5841, 5842, and 5853

IBM 5841 Modem

Set the modem switches of the remote console as follows:

1. Set back panel DIP switches SW7 and 8 DOWN, all others UP.
2. Set all front panel switches OUT.

Set the modem switches of the 3745 as follows:

1. Set back panel DIP switches SW7 and 8 DOWN, all others UP.
2. Set all front panel switches OUT.

IBM 5842 Modem

Set the switches at the remote console site as follows:

1. Set back panel DIP switches SW7 and 8 DOWN, all others UP.
2. Set front panel switches FS IN, all others OUT.

Set the switches at the 3745 site as follows:

1. Set back panel DIP switches SW7 and 8 DOWN, all others UP.
2. Set front panel switches FS IN, all others OUT.

IBM 5853 Modem

Set the switches at the 3745 site as follows:

1. Set back panel DIP switches to UP.
2. Set front panel switches FS IN, all others OUT.

Set the switches at the remote console site as follows:

1. Set back panel DIP switches to UP.
2. Set front panel switches FS IN, all others OUT.

Note: Before you set any modem configurations, make sure that both modems have been initialized and then do the following:

1. Push in all the front panel switches.
2. Turn power ON and wait five seconds.
3. Turn power OFF.
4. Set the front panel switches as described above.
5. Turn power ON again.

Modems for 3745 Models A

Settings for IBM Modems 7855, 7857, and 7858

Setting the IBM 7855 Modem

1. Press both the ← and → buttons on the front panel of the modem. The modem displays the message '<Exit Enter>'.
2. Press the → button. If the modem displays View Only, go to Step 3. If the modem displays 'Password.....■■■■', use the → and the ↑ buttons to change the display to 'Password....B293' by changing one character at a time. Press

- the → button one more time, and then check the display again to make sure it shows 'View Only'.
3. Press and release the ↑ or ↓ button as needed to change the display to 'First Setup'.
 4. Press the → button **once**, press and release the ↑ or ↓ button to change the display to 'Reset to Factory'.
 5. Press the ← button. The lights on the front panel flash briefly.
 6. Set the modem speed to 12000 bps by doing the following:
 - a. Press both the ← and → buttons. The modem displays: '<Exit Enter>'.
 - b. Press and release the → button. The modem displays: 'View Only'.
 - c. Press the ↓ button **twice**. The modem displays: 'Quick Customize'.
 - d. Press the → button. The modem displays: 'DTE interface'.
 - e. Press the ↓ button **twice**. The modem displays: 'PSN Telco speed'.
 - f. Press the → button. The modem displays: 'PSN Bps 9600'.
 - g. Press the ↓ button. The modem displays: 'PSN Bps 12 000'.
 - h. Press the ← button **6 times**. The modem displays: 'SYNC INT 12 000'.
 7. Turn the modem off.

Setting and Saving the Target Service Processor Phone Number

1. Press both the ← and → buttons on the front panel of the modem. The modem displays the message '<Exit Enter>'.
2. Press the → button. If the modem displays 'View Only', go to Step 3. If the modem displays 'Password.....■■■■', use the → button and the ↑ button to change the display to 'Password....B293' by changing one character at a time. Press the → button one more time, and then check the display again to make sure it shows 'View Only'.
3. Press and release the ↑ or ↓ button as needed to change the display to 'Directories'.
4. Press the → button to display 'No Password'. If the display shows 'Password needed', use the ↑ button and the ↑ button once to change the display to 'Local Pass B293' by changing one character at a time.
5. Press the → button to display 'Store and View'.
6. Press the → button to display 'Directories xx'.
7. Set the target service processor phone number with the ↑ and ↓ buttons. Switch to the next number with the → button.
8. Press the ← button 8 times to exit.

Setting the IBM 7857 Modem Connected to MPA Card (SYN)

1. Press the ↓ key until the 'CONFIG' message displays at the top of the screen.
2. Press the → key until the 'Sel Factory' message displays at the bottom of the screen.
3. Press **Enter**.
4. Press the ↑ key until '3' displays.
5. Press **Enter** to load the predefined factory configuration 3.
6. Press the ↑ key until 'U1' displays at the top of the screen.
7. Press the → key until 'Sync mode 3' displays. Press **Enter** to validate.
8. Press the ↑ key until 'U2' displays.
9. Press the → key until 'Internal' displays. Press **Enter** to validate.
10. Press the ↑ key until 'U3' displays.
11. Press the → key until 'Autobaud' displays. Press **Enter** to validate.
12. Press the ↑ key until 'U4' displays.
13. Press the → key until 'CCITT' displays. Press **Enter** to validate.
14. Press the ↑ key until 'U5' displays.
15. Press the → key until '9600 V32' displays. Press **Enter** to validate.
16. Press the ↑ key until 'U6' displays.
17. Press the → key until 'V42Bis/MNP5 Enabled' displays. Press **Enter** to validate.
18. Press the ↑ key until 'U7' displays.
19. Press the → key until 'Auto Reliable/V42/MNP' displays. Press **Enter** to validate.
20. Press the ↑ key until 'U8' displays.
21. Press the → key until 'Xon/Xoff passed' displays. Press **Enter** to validate.
22. Press the ↑ key until 'U9' displays.
23. Press the → key until 'Xon/Xoff' displays. Press **Enter** to validate.
24. Press the ↑ key until 'U10' displays.
25. Press the → key until 'C108/2' displays. Press **Enter** to validate.
26. Press the ↑ key until 'U11' displays.
27. Press the → key until 'C106 Always follow C105' displays. Press **Enter** to validate.
28. Press the ↑ key until 'U12' displays.
29. Press the → key until 'C107/C109 Normal Mode' displays. Press **Enter** to validate.
30. Press the ↑ key until 'U13' displays.
31. Press the → key until 'C107 Follow C109(CD)' displays. Press **Enter** to validate.
32. Press ↓ until 'Mode' displays.

33. Press → until the message 'V25HDL NRZIASC' displays.

34. Press **Enter**.

The modem is now in ITU-T V.25 bis synchronous mode. See "Saving the Modem Configuration" below.

Setting the 7857 Modem Connected to COM1 (ASYN)

1. Power OFF the modem
2. Press and hold the ↑ key while power ON the modem.
3. The modem is set to Factory 0 in AT command mode.

See "Saving the Modem Configuration" below.

Setting the 7857 Modem Connected to MPA Card on COM2 (ASYN)

1. Power OFF the modem
2. Press and hold the ↑ key while power ON the modem.
3. The modem is set to Factory 0 in AT command mode.

See "Saving the Modem Configuration" below.

Saving the Modem Configuration

1. Press the ↓ key until the 'CONFIG' message displays at the top of the screen.
2. Press the → key until the 'Store User Conf' message displays at the bottom of the screen.
3. Press **Enter**.
4. Press the ↑ key, to select the User Configuration Location (0 to 9) where you want to save the configuration.
5. Press **Enter** to save the current modem configuration.

The defined configuration is now active and saved. Every time the modem is reset (powered ON), this configuration is loaded.

Transmission Speed The IBM 7857 uses an **Adaptive line rate facility** which can automatically decrease or increase the modem's transmission speeds. This means that if telecommunication line conditions deteriorate, the modem can still function at the highest possible efficiency.

Setting and Saving the Target Service Processor Phone Number

1. Press the ↓ key until 'Store phone number' displays at the top of the screen.
2. Press the → key to select the first location number.
3. Press **Enter**.
4. Press the ↑ key to select a digit. Press the → key to move to the next position (↓ key can be used for backspacing).
5. Press **Enter** twice to save the target service processor's phone number.

Setting the IBM 7858 Modem Connected to MPA Card (SYN)

1. Press the ↓ key until the 'CONFIG' message displays at the top of the screen.
2. Press the → key until the 'Sel Factory' message displays at the bottom of the screen.
3. Press **Enter**.
4. Press the ↑ key until 3 displays.
5. Press **Enter** to load the predefined factory configuration 3.
6. Press the ↑ key until 'U4' displays at the top of the screen.
7. Press the → key until '9600bps V32' displays. Press **Enter** to validate.
8. Press the ↑ key until 'U7' displays.
9. Press the → key until 'Xon/Xoff Passed' displays. Press **Enter** to validate.
10. Press the ↑ key until 'U8' displays.
11. Press the → key until 'Xon / Xoff' displays. Press **Enter** to validate.
12. Press the ↑ key until 'U10' displays.
13. Press the → key until 'Follow RTS' displays. Press **Enter** to validate.
14. Press the ↑ key until 'U12' displays.
15. Press the → key until Follow CD displays. Press **Enter** twice to select this option.
16. Press ↓ until 'Mode' displays.
17. Press → until the message 'V25HDLC NRZIASC' displays.
18. Press **Enter** twice.

The modem is now in V.25 bis synchronous mode. See "Saving the Modem Configuration" below.

Setting the 7858 Modem Connected to COM1 (ASYN)

1. Power OFF the modem
2. Press and hold the ↑ key while power ON the modem.
3. The modem is set to Factory 0 in AT command mode.

See "Saving the Modem Configuration" below.

Setting the 7858 Modem Connected to MPA Card on COM2 (ASYN)

1. Power OFF the modem
2. Press and hold the ↑ key while power ON the modem.
3. The modem is set to Factory 0 in AT command mode.

See "Saving the Modem Configuration" below.

Saving the Modem Configuration

1. Press the ↓ key until the 'CONFIG' message displays at the top of the screen.
2. Press the → key until the 'Store User Conf.' message displays at the bottom of the screen.

3. Press **Enter**.
4. Press the ↑ key, to select the User Configuration Location (0 to 9) where you want to save the configuration.
5. Press **Enter** to save the current modem configuration.

The defined configuration is now active and saved. Every time the modem is reset (powered ON), this configuration is loaded.

Transmission Speed The IBM 7858 uses an **Adaptive line rate facility** which can automatically decrease or increase the modem's transmission speeds. This means that if telecommunication line conditions deteriorate, the modem can still function at the highest possible efficiency.

Setting and Saving the Target Service Processor Phone Number

1. Press the ↓ key until 'Store phone number' display at the top of the screen.
2. Press the → key to select the first location number.
3. Press **Enter**.
4. Press the ↑ key to select a digit. Press the → key to move to the next position (↓ key can be used for backspacing).
5. Press **Enter** twice to save the target service processor's phone number.

Chapter 13. RSF Modems

This chapter applies to **3745 Models 130 to 610**. It does not apply to **Model A**.

If you have an RSF link to the Remote Technical Assistance Information Network (RETAIN), your IBM service representative will install the RSF modem.

If a RSF modem is not provided with the 3745, follow the installation procedure below for compatibility with ITU-T V.23. This will set your modem in half-duplex mode, with BSC protocol set at 1200 bps, and without clocking.

Note: Operating characteristics for RSF modems are country-dependent.

IBM 5858 Modem

1. Set the rear panel switches for a V.23 modem as below:

U			U	U			U		U	U	U	U	U	U	U
	D	D				D	D		D						
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8

2. Set all the front panel switches to OUT.

IBM 7855 Modem

Refer to "Setting the 7857 Modem Connected to COM1 (ASYN)" on page 12-5.

IBM 7857 Modem

Refer to "Modems for 3745 Models 130 to 160" on page 12-1.

Part 3. Appendixes for 3745 Model A and 3746 Model 900

Appendix A. Configuration for a Two-Target Remote Workstation

The following example shows the configuration for a remote workstation controlling two target service processors, ERS1 and BS12 (see Figure A-1 below).

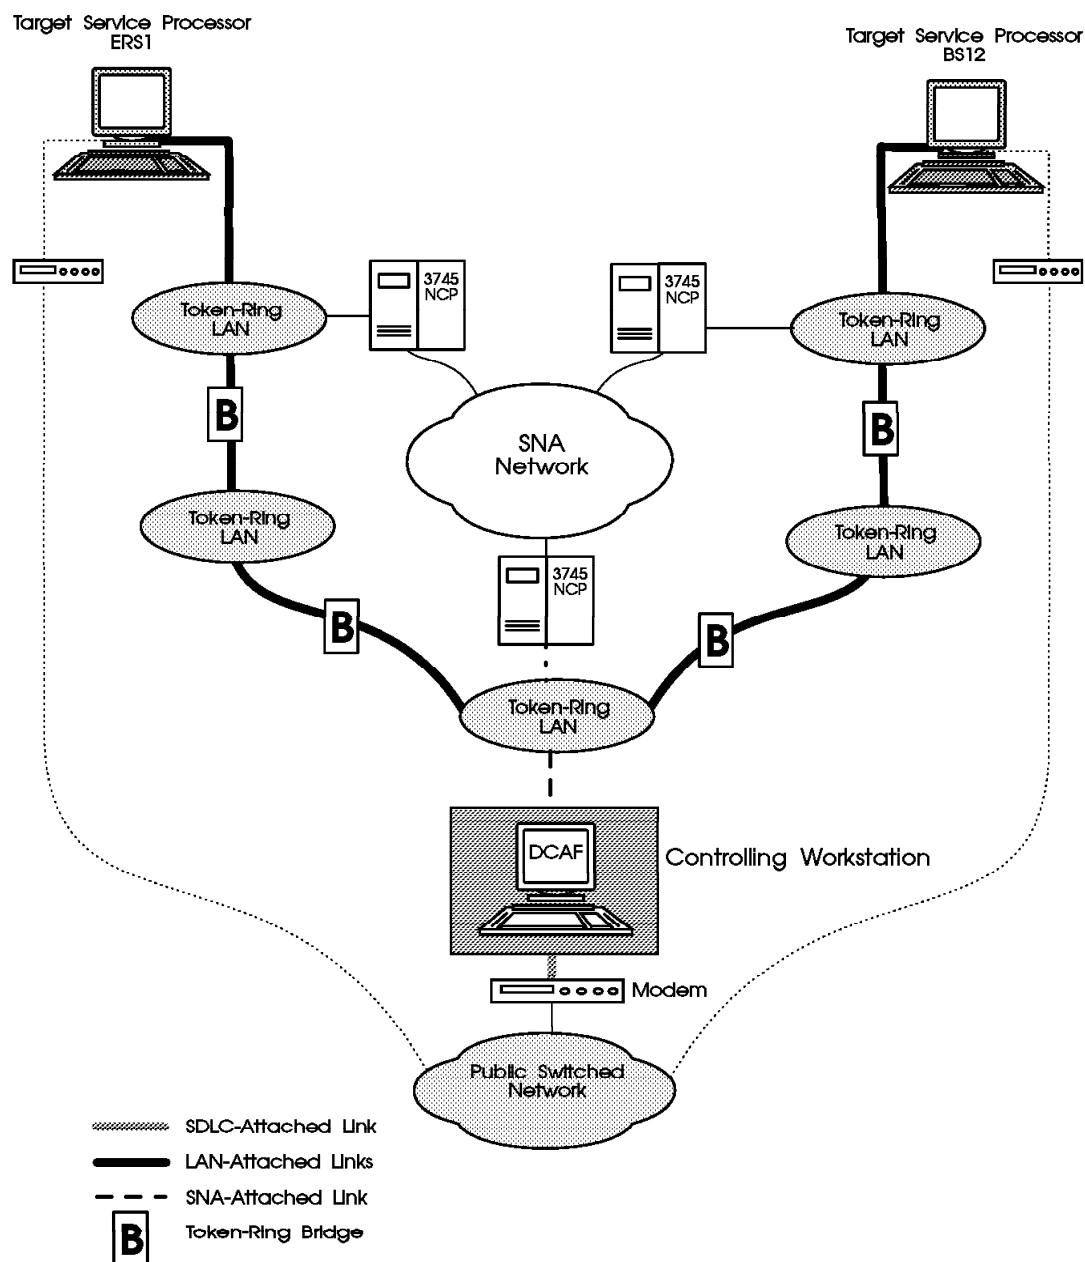


Figure A-1. A Two-Target Configuration

The example in Figure A-1 on page A-1 assumes that the workstation is running:

- CS/2 or CM/2.
- NCP Version 6, Release 2 or higher with 3746-900 features.
- VTAM Version 3, Release 4.1.

NCP Definitions

NCP must contain definitions for the TIC2 or TIC3. These ports are used to attach the controlling workstation and the two service processors to token-ring LANs.

The only other requirement is to manage dynamic LUs by entering the following definition:

```
LUDRPOOL NUMILU=(a number > 0)
```

VTAM Definitions

Start List

The VTAM start list below should contain the XNETALS=YES statement to enable the cross-network SSCP-PU session activation (without SNI), and the statement DYNLU=YES to handle dynamic LUs (see the example below).

```
HOSTSA=10,SSCPID=10,MAXSUBA=63
CONFIG=10,NETID=SYSTST,SSCPNAME=CDRM20,
XNETALS=YES,DYNLU=YES,
NOPROMPT,DLRTCB=32,SUPP=NOSUP,NOTNSTAT,NOTRACE,TYPE=VTAM,
LPBUF=(120,,0,,60,60), LARGE GENERAL PURPOSE_PAGEABLE
LFBUF=(96,,0,,24,10), LARGE GENERAL PURPOSE_FIXED
LFBUF=(128,,0,,32,10), SMALL GENERAL PURPOSE_FIXED
CRPLBUF=(160,,13,,80,80), RPL_COPY_PAGEABLE
IOBUF=(256,256,34,,68,68) I/O BUFFERS_FIXED (NP&PP BUF REMOVED)
```

Logmode Table

The logmode table below is called SOCMOTAB:

```
DCAFMODE MODEENT LOGMODE=DCAFMODE 22 ,
      TYPE = 0,
      FMPROF = X'13',
      TSPROF = X'07',
      PRIPROT = X'B0',
      SECPROT = X'B0',
      COMPROT = X'50B1',
      SSNDPAC = X'08',
      SRCVPAC = X'08',
      RUSIZES = X'8787',
      PSNDPAC = X'08',
      PSERVIC = X'060200000000000000002F00'
```

Switched Major Nodes


```
*****
*
*      MAJNODE FOR CONNECTION :  CONTROLLING  <==>  NETVIEW V2R3
*
*
*
*****
DCAFCTRL  VBUILD  TYPE=SWNET,MAXGRP=1,MAXNO=1
*-----*
CPCTRL    PU      ADDR=04,PUTYPE=2,NETID=SYSTST 1 ,CPNAME=CPCTRL 2 ,      X
            MAXPATH=8,MAXDATA=265,MAXOUT=1,                                X
            DISCNT=NO
CTRL1     LU      LOCADDR=0,MODETAB=SOCMOTAB

*****
*
*      MAJNODE FOR CONNECTION :  MOSS-E ERS1  <==>  NETVIEW V2R3
*
*
*
*****
NTVERS1   VBUILD  TYPE=SWNET,MAXGRP=1,MAXNO=1
*-----*
CPERS1    PU      ADDR=04,PUTYPE=2,NETID=SYSTST 10 ,CPNAME=CPERS1 23 ,   X
            MAXPATH=8,MAXDATA=265,MAXOUT=1,                                X
            DISCNT=NO
PATHERS1  PATH    DIALNO=0204400000761111,GRPNM=L76G2080
MOSSERS1  LU      LOCADDR=0,MODETAB=SOCMOTAB


*****
*
*      MAJNODE FOR CONNECTION :  MOSS-E BS12  <==>  NETVIEW V2R3
*
*
*
*****
NTVBS12   VBUILD  TYPE=SWNET,MAXGRP=1,MAXNO=1
*-----*
CPBS12    PU      ADDR=04,PUTYPE=2,NETID=SYSTST 10 ,CPNAME=CPBS12 22 ,   X
            MAXPATH=8,MAXDATA=265,MAXOUT=1,                                X
            DISCNT=NO
PATHBS12  PATH    DIALNO=0204400000761112,GRPNM=L76G1088
MOSSBS12  LU      LOCADDR=0,MODETAB=SOCMOTAB
```

DCAF Remote Workstation Configuration


- Step 1.** From Desktop Manager, double-click the Distributed Console Access Facility icon.
- Step 2.** Double-click the DCAF Controller icon.
- Step 3.** Click **Session**, then **Open workstation directory**.
- Step 4.** Click **OK** for a first installation. Otherwise continue with next step.
- Step 5.** From the DCAF Directory window, click **Workstation** then **Add**.

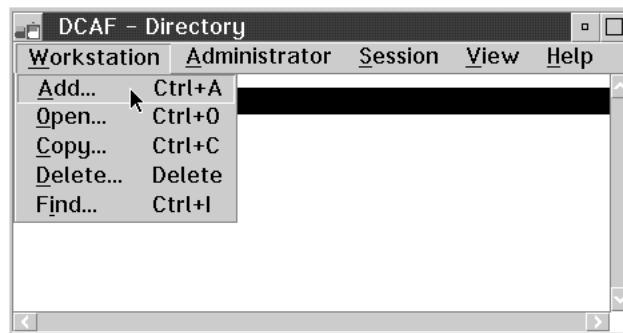

- Step 6.** Enter ERS1SNA in the **Workstation name** field and click **Protocol**.

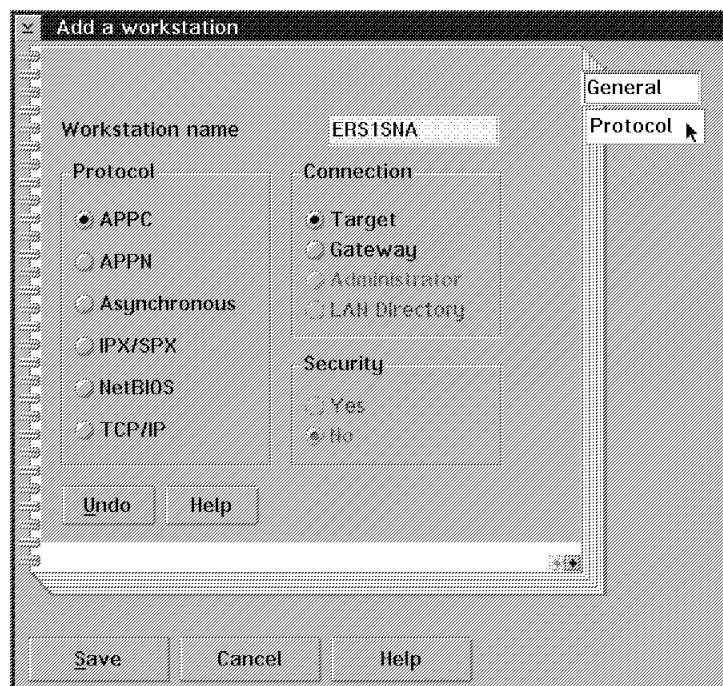

Step 7. Fill in the **Local LU alias**, **Partner LU alias**, and **Mode name** fields respectively with CTRL1, ERS1SNA, DCAFMODE, and click **Save**.

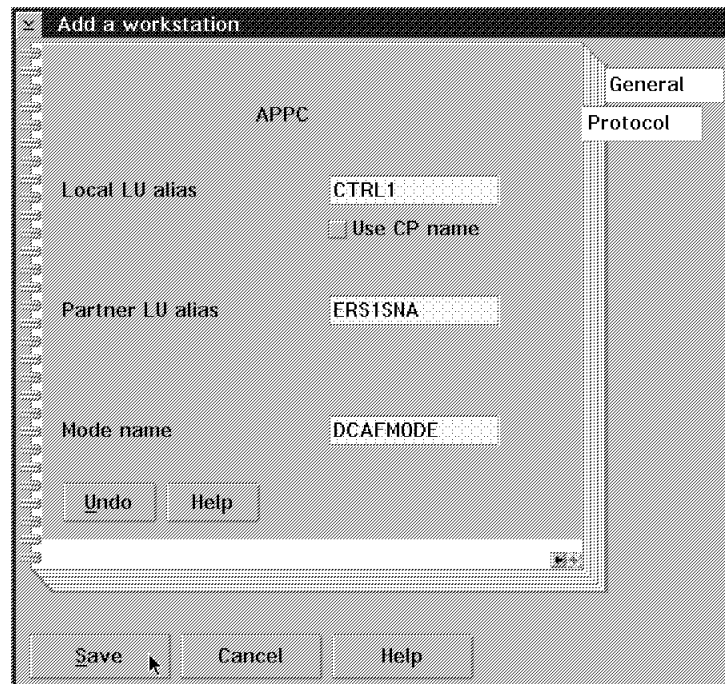

Step 8. Repeat Step 6 and Step 7 by entering the following in the **Workstation name** and **Partner LU alias** fields:

- a. ERS1SDLC, then click **Save**.
- b. ERS1LAN, then click **Save**.
- c. BS12SNA, then click **Save**.
- d. BS12SDLC, then click **Save**.
- e. BS12LAN, then click **Save**.

Step 9. Click **Cancel** to finish.

Step 10. Run the EQNSFPAR program to verify link records.

Appendix B. Configuring DLC for DCAF

The following is a list of recommended CM/2 and CS/2 parameters for a remote workstation, enabling it to correspond with the DLC definitions of the service processor. Although they are a guide to help you with selecting parameters, you must supply the actual values that correspond to your network.

Create or Change the Token-Ring Network DLC Adapter Profile

The parameters for this screen apply to LAN- (APPC-type), SNA-, and APPN- (via a LAN) attached consoles.

<i>Adapter number</i>	0
<i>Load DLC</i>	Yes
<i>Maximum number of link stations</i>	4
<i>Percent of incoming calls</i>	50
<i>Free unused link</i>	No
<i>Congestion tolerance</i>	80
<i>Maximum RU size</i>	2024
<i>Send Window Count</i>	4
<i>Receive Window Count</i>	4
<i>C&SM LAN ID</i>	(Customer defined)
<i>Send alert for beaconing</i>	Yes

Create or Change the SDLC DLC Adapter Profile

The parameters for this screen apply to modem- and SNA- (SDLC) attached consoles.


<i>Adapter number</i>	0
<i>Load DLC</i>	Yes
<i>Free unused link</i>	No
<i>Maximum RU size</i>	4096
<i>Send Window Count</i>	4
<i>Receive Window Count</i>	4
<i>Line type</i>	Switched
<i>Link station role</i>	Primary
<i>Line mode</i>	Constant request to send
<i>NRZI</i>	Yes
<i>Modem rate</i>	Full speed
<i>Data set ready timeout</i>	5
<i>XID repoll count</i>	10
<i>Non-XID repoll count</i>	7

Part 4. Appendixes for 3745 Models 130 to 610


Appendix C. Location of 3745 Console Connectors

This appendix applies to 3745 Models 130 to 610.

3745 Communication Controller Models 130, 150, 160, and 170

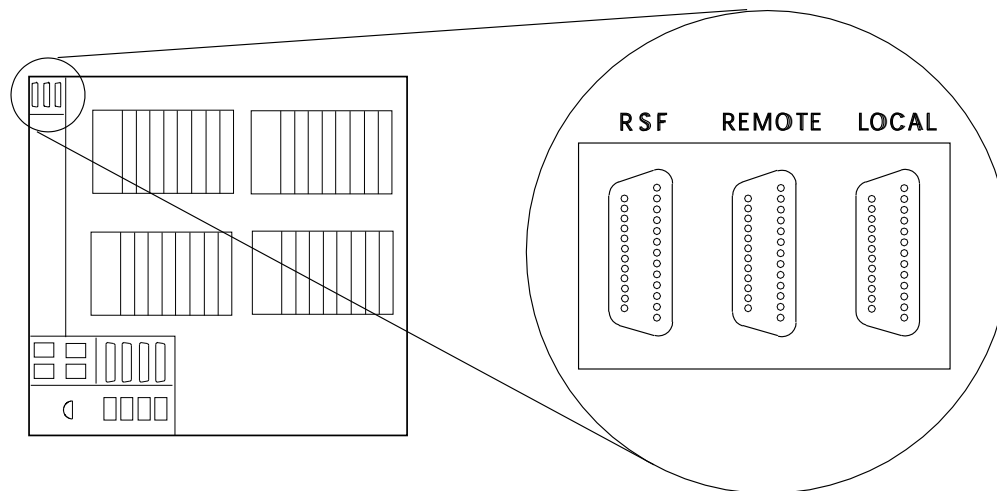


3745 Communication Controller Models 210, 310, 410, and 610

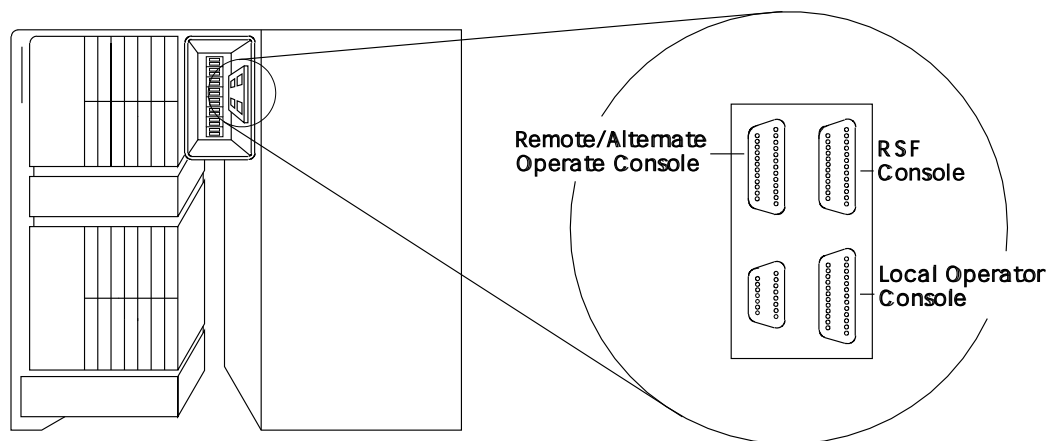

Appendix D. Console and RSF Interface Cables

This appendix applies to **3745 Models 130 to 610**.

Cable from the 3745 to a Local Console

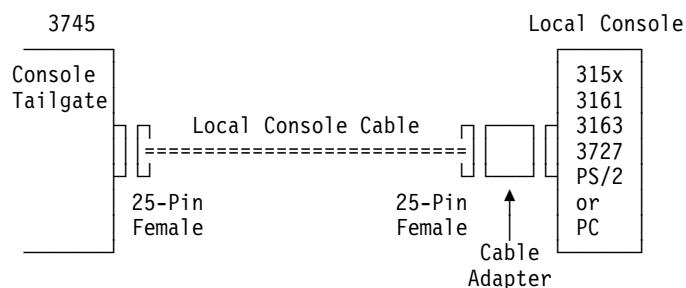

Local Console Cable Assembly

This cable assembly is for a 3745-to-7427 with three adapters to connect with 31xx, 3727, and PS/2 or PC consoles (see “Cable Adapters for Local/Alternate Console” on page D-2).


World Trade Only

3745 Model	Cable Type	Length, m (ft)	Cable Group	Assembly PN	Cable PN
130/150/160/170	Fixed Length	7 m (23)	Shipped	26F1794	03F4948
210/310/410/610	Fixed Length	7 m (23)	Shipped	26F1792	03F4487

U.S.A. Only

3745 Model	Cable Type	Length, m (ft)	Cable Group	Assembly PN	Cable PN
130/150/160/170	Fixed Length	7 m (23)	Shipped	76F8600	76F8639
210/310/410/610	Fixed Length	7 m (23)	Shipped	76F8607	76F8640

Cable from the 3745 to an Alternate Console

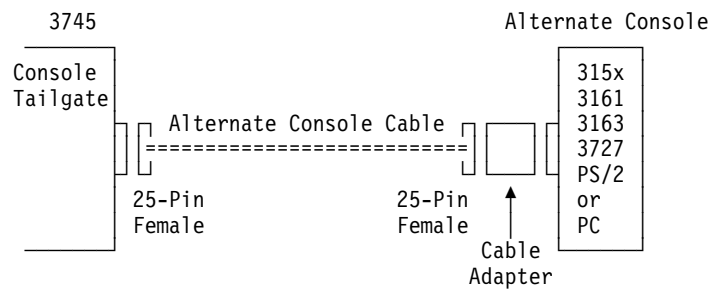


Alternate Console Cable Assembly

This cable assembly is a variable length with three adapters to connect with 31xx, 3727, and PS/2 or PC consoles (see “Cable Adapters for Local/Alternate Console”).

3745 Model	Cable Type	Length, m (ft)	Cable Group	Assembly PN	Cable PN
130/150/160/170	Variable Length	Up to 35 m (115) Up to 122 m (400)	6147 NA	26F1799 26F1799	03F5026 03F5026
210/310/410/610	Variable Length	Up to 35 m (115) Up to 122 m (400)	5826 NA	34F1262 34F1262	65X8984 65X8984

Cable Adapters for Local/Alternate Console

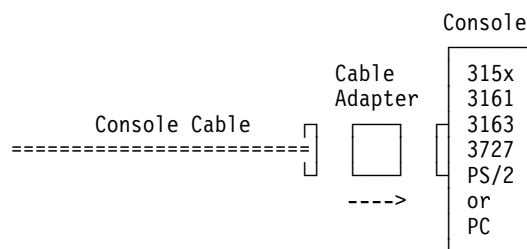


Notes:

For console 3727, use Cable Adapter P/N 54F0488. For console PS/2 or PC, use Cable Adapter P/N 54F0490. For console 31xx, use Cable Adapter P/N 54F0489.

Warning: When you install the 31xx adapter (P/N 54F0489), ensure that the arrow on the side of the adapter points towards the console. If the arrow is reversed, the console will not work.

Console Connection through the IBM 7427 Console Switching Unit

The 7427 can switch one console (3151/3153/3161/3163/3727, PS/2, or PC) to as many as four 3745s for a local console, or up to six 3745s for an alternate console.

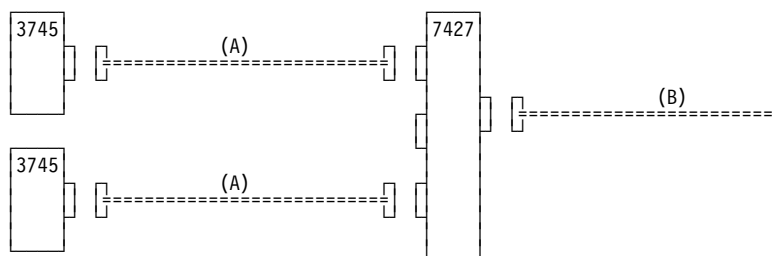

Cable from the 3745 to the 7427 Switching Unit (A)

Cable Assembly for Local Console

Refer to “Local Console Cable Assembly” on page D-1. The cable is used without any console adapter.

Cable Assembly for Alternate Console

Refer to “Alternate Console Cable Assembly” on page D-2. The cable is used without any console adapter.

Cable from the 7427 to a 31xx, PS/2, or PC Console (B)

Cable Assembly for 31xx Console

3745 Model	Cable Type	Length, m (ft)	Cable Group	Cable PN
All Models	Fixed Length	1 (3)	5828	65X8985

Cable Assembly for PS/2 or PC Console

3745 Model	Cable Type	Length, m (ft)	Cable Group	Cable PN
All Models	Fixed Length	2 (6.5)	8148	26F0317


Cable from the 7427 to a 3727 Console (B)

Cable Assembly

The cable for the 3727 console is delivered with the 7427 switching unit.

3745 Model	Cable Type	Length, m (ft)	Cable Group	Cable PN
All Models	Fixed Length	1 (3)	NA	6081308


Remote Console Cable

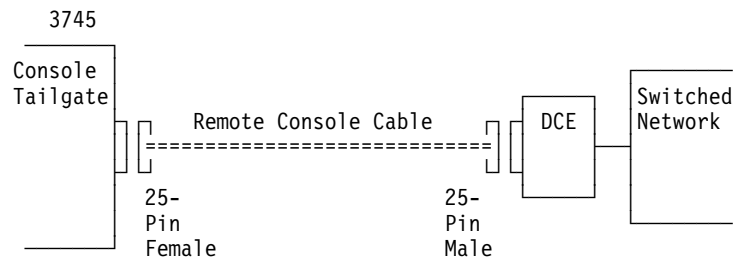

Cable to Modem for Remote Console

3745 Model	Cable Type	Length, m (ft)	Cable Group	Cable PN
130/150/160/170	Variable Length	Up to 13.5 m (45) Up to 122 m (400)	6148 NA	03F5027 03F5028
210/310/410/610	Variable Length	Up to 13.5 m (45) Up to 122 m (400)	6153 NA	03F4404 03F4405

Cable to Modem for RSF

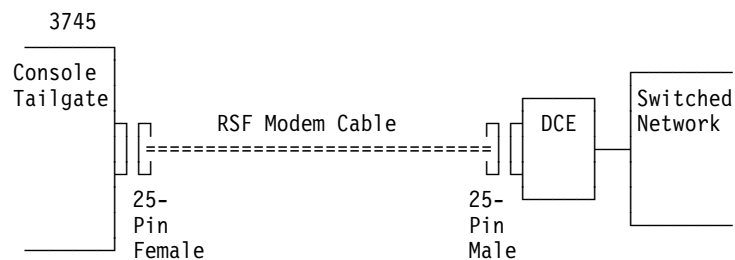

RSF Modem Cable

World Trade Only

3745 Model	Cable Type	Length, m (ft)	Cable Group	Cable PN
130/150/160/170	Fixed Length	13.5 m (45)	Shipped	03F4945
210/310/410/610	Fixed Length	13.5 m (45)	Shipped	65X8920

U.S.A. Only

3745 Model	Cable Type	Length, m (ft)	Cable Group	Cable PN
130/150/160/170	Fixed Length	13.5 m (45)	Shipped	76F8604
210/310/410/610	Fixed Length	13.5 m (45)	Shipped	76F8611


Part 5. Bibliography, Abbreviations, Glossary, and Index

Bibliography

Customer Documentation for the IBM 3745 (Models 210, 310, 410, 610, 21A, 31A, 41A, and 61A), and 3746 (Model 900)

Table X-1 (Page 1 of 4). Customer Documentation for the 3745 Models x10 and x1A, and 3746 Model 900

This customer documentation has the following formats:

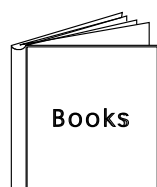

Finding Information

3745 Models A and 3746 Books

Starting with engineering change (EC) F12380, all of the books in the 3745 Models A and 3746 library are available on the CD-ROM that contains the Licensed Internal Code (LIC) for this EC.



SA33-0172

**IBM 3745 Communication Controller
Models 210 to 61A
IBM 3746 Expansion Unit Model 900
Customer Master Index¹**

Provides references for finding information in the customer documentation library.

Evaluating and Configuring



GA33-0092

**IBM 3745 Communication Controller
Models 210, 310, 410, and 610
Introduction**

Gives an introduction about the IBM Models 210 to 610 capabilities.

For Models A refer to the *Overview*, GA33-0180.



GA33-0180

**IBM 3745 Communication Controller Models A²
IBM 3746 Nways Multiprotocol Controller
Models 900 and 950**

Overview

Gives an overview of connectivity capabilities within SNA, APPN, and IP networking.



GA33-0457

**IBM 3745 Communication Controller Models A²
IBM 3746 Expansion Unit Model 900
Models 900 and 950**

Planning Guide

Planning for:

- Field upgrades
- Service processor and alert management configuration
- Network integration (NCP, APPN, and IP control)
- Physical installation.

Table X-1 (Page 2 of 4). Customer Documentation for the 3745 Models x10 and x1A, and 3746 Model 900








Preparing Your Site		
	GC22-7064	<p>IBM System/360, System/370, 4300 Processor</p> <p>Input/Output Equipment Installation Manual-Physical Planning (Including Technical News Letter GN22-5490)</p> <p>Provides information for physical installation of the 3745 Models 130 to 610. For 3745 Models A and 3746 Model 900, refer to the <i>Planning Guide</i>, GA33-0457.</p>
	GA33-0127	<p>IBM 3745 Communication Controller Models 210, 310, 410, and 610</p> <p>Preparing for Connection</p> <p>Helps for preparing the 3745 Models 210 to 610 cable installation. For 3745 Models A refer to the <i>Connection and Integration Guide</i>, SA33-0129.</p>
Preparing for Operation		
	GA33-0400	<p>IBM 3745 Communication Controller All Models³ IBM 3746 Nways Multiprotocol Controller Models 900 and 950</p> <p>Safety Information¹</p> <p>Provides general safety guidelines.</p>
	SA33-0129	<p>IBM 3745 Communication Controller All Models³ IBM 3746 Nways Multiprotocol Controller Model 900</p> <p>Connection and Integration Guide¹</p> <p>Contains information for connecting hardware and integrating network of the 3745 and 3746-900 after installation.</p>
	SA33-0416	<p>Line Interface Coupler Type 5 and Type 6 Portable Keypad Display</p> <p>Migration and Integration Guide</p> <p>Contains information for moving and testing LIC types 5 and 6.</p>
	SA33-0158	<p>IBM 3745 Communication Controller All Models³ IBM 3746 Nways Multiprotocol Controller Model 900</p> <p>Console Setup Guide¹</p> <p>Provides information for:</p> <ul style="list-style-type: none"> • Installing local, alternate, or remote consoles for 3745 Models 130 to 610 • Configuring user workstations to remotely control the service processor for 3745 Models A and 3746 Model 900 using: <ul style="list-style-type: none"> – DCAF program – Telnet Client program.
Customizing Your Control Program		
	SA33-0178	<p>Guide to Timed IPL and Rename Load Module</p> <p>Provides VTAM procedures for:</p> <ul style="list-style-type: none"> • Scheduling an automatic reload of the 3745 • Getting 3745 load module changes transparent to the operations staff.
Operating and Testing		

Table X-1 (Page 3 of 4). Customer Documentation for the 3745 Models x10 and x1A, and 3746 Model 900








	SA33-0098	IBM 3745 Communication Controller All Models⁴ Basic Operations Guide¹ Provides instructions for daily routine operations on the 3745 Models 130 to 610.
	SA33-0177	IBM 3745 Communication Controller Models A² IBM 3746 Nways Multiprotocol Controller Model 900 Basic Operations Guide¹ Provides instructions for daily routine operations on the 3745 Models 17A to 61A, and 3746 Model 900 operating as an SNA node (using NCP), APPN/HPR Network Node, and IP Router.
	SA33-0097	IBM 3745 Communication Controller All Models³ Advanced Operations Guide¹ Provides instructions for advanced operations and testing, using the 3745 MOSS console.
	On-line Information	Controller Configuration and Management Application Provides a graphical user interface for configuring and managing a 3746 APPN/HPR Network Node and IP Router, and its resources. Is also available as a stand-alone application, using an OS/2 workstation. Defines and explains all the 3746 network node and IP configuration parameters through its on-line help.
	SH11-3081	IBM 3746 Nways Multiprotocol Controller Models 900 and 950 Controller Configuration and Management: User's Guide⁵ Explains how to use CCM and gives examples of the configuration process.
Managing Problems		
	SA33-0096	IBM 3745 Communication Controller All Models³ Problem Determination Guide¹ A guide to perform problem determination on the 3745 Models 130 to 61A.
	On-line Information	Problem Analysis Guide An on-line guide to analyze alarms, events, and control panel codes on: <ul style="list-style-type: none"> • IBM 3745 Communication Controller Models A² • IBM 3746 Nways Multiprotocol Controller Models 900 and 950.

Table X-1 (Page 4 of 4). Customer Documentation for the 3745 Models x10 and x1A, and 3746 Model 900



SA33-0175

IBM 3745 Communication Controller Models A²
IBM 3746 Expansion Unit Model 900
IBM 3746 Nways Multiprotocol Controller Model 950

Alert Reference Guide

Provides information about events or errors reported by alerts for:

- IBM 3745 Communication Controller Models A²
- IBM 3746 Nways Multiprotocol Controller Models 900 and 950.

¹ Documentation shipped with the 3745.





² 3745 Models 17A to 61A.

³ 3745 Models 130 to 61A.

⁴ Except 3745 Models A.

⁵ Documentation shipped with the 3746-900.

Additional Customer Documentation for the IBM 3745 Models 130, 150, 160, 170, and 17A

Table X-2. Additional Customer Documentation for the 3745 Models 1x0 and 17A		
This customer documentation has the following format:		
		
Finding Information		
	SA33-0142	<p>IBM 3745 Communication Controller Models 130, 150, 160, 170, and 17A</p> <p>IBM 3746 Expansion Unit Model 900</p> <p>Customer Master Index¹</p> <p>Provides references for finding information in the customer documentation library.</p>
Evaluating and Configuring		
	GA33-0138	<p>IBM 3745 Communication Controller Models 130, 150, and 170</p> <p>Introduction</p> <p>Gives an introduction about the IBM Models 130 to 170 capabilities, including Model 160.</p> <p>For Model 17A refer to the <i>Overview</i>, GA33-0180.</p>
Preparing Your Site		
	GA33-0140	<p>IBM 3745 Communication Controller Models 130, 150, 160, and 170</p> <p>Preparing for Connection</p> <p>Helps for preparing the 3745 Models 130 to 170 cable installation.</p> <p>For 3745 Model 17A refer to the <i>Connection and Integration Guide</i>, SA33-0129.</p>
<p>¹ Documentation shipped with the 3745.</p>		

List of Abbreviations

ac	Alternating Current	IP	Internet Protocol
ACF	Advanced Communications Function	IPL	Initial Program Load
APPC	Advanced Program-to-Program Communication	ISDN	Integrated Services Digital Network
APPN	Advanced Peer-to-Peer Networking	ITU-T	International Telecommunications Union-Telecommunications (Formerly: CCITT)
AUI	Attachment Unit Interface	LAN	Local Area Network
BAN	Boundary Access Node	LAPS	LAN Adapter Protocol Support
BNN	Boundary Network Node	LIC	Line Interface Coupler
bps	bits per second	LU	Logical Unit
Bps	Bytes per second	m	meter; 1.09 yards; 3.28 feet; 39.37 inches
BSC	Binary Synchronous Communication	MAC	Medium Access Control
CCM	Controller Configuration and Management	MAE	Multiaccess Enclosure
CCITT	Comité Consultatif International Télégraphique et Téléphonique The International Telegraph and Telephone Consultative Committee (Now: ITU-T)	MAU	Multistation Access Unit
CM	Communications Manager	Mbps	Megabits per second; 1 048 476 bits per second
CP	Control Point	MCA	MOSS Console Adapter
CSD	Corrective Service Diskette	MOSS	Maintenance and Operator Subsystem
DCAF	Distributed Console Access Facility	MOSS-E	Maintenance and Operator Subsystem-Extended
DLC	Data Link Control	MPA	Multi-protocol Adapter
DNNP	Dual Network Node Processor	MPTS	Multiple Protocol Transport Services
DTE	Data Terminal Equipment	NCP	Network Control Program
EC	Engineering Change	NDF	Network Definition File
ECL	Error Checking Link	NN	Network Node
EIA	Electronic Industries Association	NNP	Network Node Processor
ES	Extended Services	NPM	NetView Performance Monitor
ESCON	Enterprise System Connection	NZRI	Non-Return-to-Zero Inverted
FCC	Federal Communications Commission	NTS	Network Transport Services
HPR	High Performance Routing	OS	Operating System
IBM	International Business Machines Corporation	PE	Product Engineer
IDF	Internet Protocol Definition File	PLU	Partner Logical Unit
IML	Initial Microcode Load	PPP	Point-to-Point Protocol
		PRPQ	Programming Request for Price Quotation

PS	Personal System	SPAU	Service Processor Access Unit
PU	Physical Unit	TCP/IP	Transmission Control Protocol/Internet Protocol
RAM	Random Access Memory	TIC	Token-ring Interface Coupler
RETAIN	Remote Technical Assistance Information Network	TP	Transaction Program
RSF	Remote Support Facility	URL	Uniform Resource Locator
RTS	Ready To Send	VCCI	Japanese Voluntary Control Council for Interference
SAP	Service Access Point	VGA	Video Graphics Adapter
SDLC	Synchronous Data Link Control	VTAM	Virtual Telecommunications Access Method
SNA	Systems Network Architecture	WAN	Wide Area Network
SNI	SNA Network Interface? Switched Network Interface?		

Glossary

This glossary defines all new terms used in this manual. It also includes terms and definitions from the *IBM Dictionary of Computing*, SC20-1699.

addressing. Where a controlling workstation with access to DTEs sharing transmission lines, selects a DTE to send a message.

Advanced Program-to-Program

Communication (APPC). An implementation of the SNA/SDLC LU6.2 protocol that allows interconnected systems to communicate and share the processing of programs.

advanced peer-to-peer networking (APPN).

An extension of SNA featuring: (a) greater distributed network control that avoids critical hierarchical dependencies, thereby isolating the effects of single point failure; (b) dynamic exchange of network topology information to foster ease of connection reconfiguration, and adaptive route selection; (c) dynamic definition of network resources; and (d) automated resource registration and directory lookup. APPN extends the LU 6.2 peer orientation for end-user services to network control and supports multiple LU types, including LU 2, LU 3, and LU 6.2.

alarm. A message sent to the MOSS operator console. In case of an error, a reference code identifies the nature of the error.

alert. A message sent to the host console. In case of an error, a reference code identifies the nature of the error.

communication controller. A device that directs the transmission of data over the data links of a network; its operation can be controlled by a program in the processor connected to the controller is connected, or controlled by a program within the device. Examples are the IBM 3705, IBM 3720/3725/3726, IBM 3745 models 130 to 61A, and IBM 3746 models 900/950.

communications manager. A function of the OS/2, allowing a workstation to connect to a host computer and use the host resources and resources of other personal computers attached to the workstation, either directly or through the host.

configuration data file (CDF). A 3745 MOSS file that contains a description of all the hardware features (presence, type, address, and characteristics).

configuration data file - extended (CDF-E). A 3746 MOSS-E file that contains a description of all the hardware features (presence, type, address, and characteristics).

control panel. A panel of switches and indicators for the operator and service personnel.

control point (CP). A collection of tasks which provide the directory and route selection functions for APPN. An end node control point provides the configuration, session, and management services in conjunction with the control point of the serving network node. A network node control point provides session and routing services.

control program. A program designed to schedule and supervise the execution of programs for the controller.

Customer engineer. See: *IBM service representative*.

data link control (DLC). In SNA, a set of rules used by two nodes on a data link to accomplish an orderly exchange of information. Synonymous with line control.

data terminal equipment (DTE). That part of a data station that serves as a data source, data link, or both, and provides for the data communication control function according to protocols. For example, the IBM 3745 can be a DTE.

Distributed Console Access Facility (DCAF).

(1) This program product provides a remote console function that allows a user at one programmable PS/2 workstation to remotely control the keyboard input and monitor the display of output of another programmable workstation. The DCAF program does not affect the application programs that are running on the workstation that is being controlled. (2) An icon that represents the Distributed Console Access Facility.

host processor. (1) A processor that controls all or part of a user application network. (2) In a network, the processing unit in which the access method for the network resides. (3) In an SNA network, the processing unit that contains a system services control point (SSCP). (4) A processing unit that executes the access method for attached communication controllers. Also called *host*.

IBM service representative. An individual in IBM who carries out maintenance services for IBM products or systems. Also called the *Customer engineer*.

integrated services digital network (ISDN). A digital end-to-end telecommunication network that supports multiple services including, but not limited to, voice and data.

International Telecommunication Union (ITU). The specialized telecommunication agency of the United Nations, established to provide standardized communication procedures and practices, including frequency allocation and radio regulations worldwide. (Formerly CCITT).

Internet Protocol (IP). In TCP/IP, a protocol that routes data from its source to its destination in an Internet environment.

line interface coupler (LIC). A circuit that attaches up to four transmission cables to the controller (from DTEs, DCEs, or telecommunication lines).

local area network (LAN). A computer network located on a user's premises within a limited geographical area. Communication within a LAN is not subject to external regulation; however, communication across the LAN boundary may be subject to some form of regulation.

logical unit (LU). In SNA, a port through which an end user accesses the SNA network in order to communicate with another end user and through which the end user accesses the functions provided by system services control points (SSCPs). An LU can support at least two sessions, one with an SSCP and one with another LU, and may be capable of supporting many sessions with other logical units.

maintenance and operator subsystem - extended (MOSS-E). The licensed internal code loaded on the service processor hard disk to provide maintenance and operator facilities to the user and IBM service representative.

medium access control (MAC). For LAN, the method of determining which device has access to the transmission medium at any time.

microcode. A program that is loaded in a processor (for example, the MOSS-E processor) to replace a hardware function. The microcode is not accessible to the customer.

multistation access unit (MAU). In the IBM token-ring network, a wiring concentrator that connect up to eight lobes to a ring.

NetView Performance Monitor (NPM). An IBM licensed program that collects, monitors, analyses, and displays data relevant to the performance of a VTAM telecommunication network. It runs as an on-line VTAM application program.

network. See *user application network*.

Network Control Program (NCP). An IBM licensed program that provides communication controllers supports for single-domain, multiple domain, and interconnected network capability.

network node processor (NNP). The processor that is attached to the 3746-950 via a token-ring LAN, running the APPN Network Node functions.

on-line information and help. Information stored in a computer system than can be displayed, used, and sometimes modified in an interactive manner without any need to obtain a hard copy.

physical unit (PU). In SNA, the component that manages and monitors the resources, such as attached links and adjacent link stations, associated with a node, as requested by an SSCP via an SSCP-PU session. An SSCP activates a session with the physical unit in order to indirectly manage, through the PU, resources of the node such as attached links. This term applies to type 2.0, type 4, and type 5 nodes only.

received line signal detector (RLSD). A signal defined in the EIA-232 standard that indicates to the data terminal equipment (DTE) that it is

receiving a signal from the remote data circuit-terminating equipment (DCE).

remote console. A PS/2 attached to the IBM 3746-950 either by a switched line (with modems) or by one of communication lines of the user network.

remote support facility (RSF). RSF provides IBM maintenance assistance when requested via the public switched network. It is connected to the IBM RETAIN database system.

service processor. The processor that is attached to the 3746-950 via a token-ring LAN, running the MOSS-E functions.

shutdown. The process of ending a operation of a system or subsystem, following a defined procedure.

subarea network. Connected subareas, their directly attached peripheral nodes, and the lines that connect them.

Synchronous Data Link Control (SDLC). A discipline for managing synchronous, code transparent, serial-by-bit information transfer over a link connection. Transmission exchanges may be duplex or half-duplex over switched or nonswitched links. The configuration of the link connection may be point-to-point, multipoint, or loop. SDLC conforms to subsets of the Advanced Data Communication Control Procedures of the American National Standards Institute and High-Level Data Link Control (HDLC) of the International Standard Organization (ISO).

token ring. A network with a ring topology that passes tokens from one attaching device to another.

token-ring adapter (TRA). Line adapter for IBM Token-Ring Network, composed of one token-ring processor card (TRP), and two token-ring interface couplers (TICs).

token-ring interface coupler type 3 (TIC3). A circuit that attaches an IBM Token-Ring network to an IBM 3746-900 or 3746-950.

transmission interface. The interface between the controller and the user application network.

transmission line. The physical means for connecting two or more DTEs (via DCEs). It can be nonswitched or switched. Also called a *line*.

user application network. A configuration of data processing products, such as processors, controllers, and terminals, for data processing and information exchange. This configuration may use circuit-switched, packet-switched, and leased-circuit services provided by carriers or the PTT. Also called *user network*.

Virtual Telecommunication Access Method (VTAM). A set of programs that maintain control of the communication between terminals and application programs running under DOS, OS/1, and OS/2 operating systems.

V.24 and V35. ITU-T recommendations on transmission interfaces.

Index

Numerics

3151

- in 3101 emulation mode 10-3, 11-3
- in native mode 10-2, 11-2

3153 in 3151 emulation mode 10-5, 11-5

3161 10-6, 11-6

3163 10-6, 11-6

3727 10-9

7427 D-3

A

adapters

- for 3745 consoles D-2

alternate console (3745) D-2

APPN-attached DCAF workstation 1-2, 8-1

attached DCAF workstation

- via APPN backbone 1-2, 8-1
- via LAN (APPC-type) 1-2, 5-1
- via modem 1-2, 6-1
- via SNA backbone 1-2, 7-1
- via TCP/IP 1-2, 4-1

attached Telnet workstation

- via TCP/IP 9-1

C

cable

- 3745 alternate console D-2
- 3745 local console D-1
- adapters for 3745 consoles D-2
- to modem for 3745 remote console D-4

CCM

- definitions for DCAF 8-13

closing

- DCAF remote session 3-3
- Telnet remote session 9-2

communications manager/2

- customizing 2-3

configuration 6-3

- DLC for DCAF 2-5
- modem 13-1

configuration file HAYESASY 6-31

configuration file HAYESAUT 6-36

configuration file I7855ASY 6-10

configuration file I7855SYN 6-5

configuration file I7857ASY 6-21

configuration file I7857AUT 6-26

configuration file I7857SYN 6-15

configuration files 6-2

configuring modems in CM/2 6-2

configuring modems in CS/2 6-2

console

- 3151 10-2, 11-2
- 3153 10-5, 11-5
- 3161 10-6, 11-6
- 3163 10-6, 11-6

attachment

- alternate D-2
- local D-1
- remote D-4
- RSF D-4
- through 7427 D-3

DCAF

- attachment 1-1
- installation 2-2
- IBM PC 11-6
- IBM PS/2 10-6, 11-7
- Telnet attachment 9-1

customer

- Telnet consoles 9-1

customizing

- CM/2 on a DCAF remote workstation 2-4

customizing DCAF

D

DCAF 6-41

- APPN-attached workstation 8-1
- closing a remote session 3-3
- DCAF consoles 1-1
- hardware requirements and recommendations 1-5
- hot keys 1-1
- installing a remote workstation 2-1
- installing the program 2-2
- LAN-attached (APPC-type) workstation 5-1
- Modem-attached workstation 6-1
- preparation 2-2
- programming requirements 1-4
- remote logon password 1-3
- security level 1-4

DCAF *(continued)*

- service processor DLC configuration B-1
- service processor security 1-3
- SNA-attached workstation 7-1
- starting a remote session 3-1
- target service processor
 - NCP definitions 7-11
 - VTAM major node definitions 7-13
- TCP/IP-attached workstation 4-1
- upgrading the program 2-3

definitions

- NCP for DCAF 7-10
- VTAM
 - logmode table 7-12
 - major node for remote workstation 7-13
 - major node for target service processor 7-13
 - start 7-12

determining the OS/2 code level 2-2

diskette with example configurations 1-3

DLC configuration for service processor 2-5, B-1

E

example configurations diskette 1-3

H

hardware

- recommendations for DCAF 1-5
- recommendations for Telnet 9-2
- requirements for DCAF 1-5
- requirements for Telnet 9-2

hot keys 1-1

I

IBM 5858 modem 13-1

IBM 7855 modem setting 12-2

IBM 7857 modem setting 12-4

IBM 7858 modem setting 12-6

IBM PC as 3745 console 11-6

IBM PS/2 as 3745 console 10-6, 11-7

installing

- APPN-attached DCAF remote workstation 8-2
- DCAF
 - program 2-2
 - session 2-1
- SNA-attached DCAF remote workstation 7-2
- TCP/IP
 - attached DCAF remote workstation 4-2

installing *(continued)*

- TCP/IP *(continued)*
 - attached Telnet workstation 9-1
 - program 2-3

L

LAN-attached (APPC-type) DCAF

workstation 1-2, 5-1

local console connection (3745) D-1

locating

- 3745 console connectors C-1

logmode table, VTAM 7-12

logon

- from DCAF remote workstation 3-1

M

major node definitions

- DCAF remote workstation 7-13
- DCAF target service processor 7-13

minimum

- DCAF workstation configuration 1-4
- Telnet workstation configuration 9-2

modem

- 5858 setting 13-1
- 7855 setting 12-2
- 7857 setting 12-4
- 7858 setting 12-6

modem configuration

modem-attached DCAF workstation 1-2, 6-1

modems

N

NCP definitions

- DCAF remote workstation 7-10
- DCAF target service processor 7-11

P

password

- DCAF remote logon 1-3
- Telnet remote logon 9-2

procedure 1 6-5

procedure 2 6-10

procedure 3 6-15

procedure 4 6-21

procedure 5 6-26

procedure 6 6-31

- procedure 7 6-36
- procedure for service processor 3172 6-5, 6-10, 6-15, 6-21, 6-26, 6-31, 6-36
- procedure for service processor 7585 6-10, 6-21, 6-31
- procedure for service processor 9577 6-5, 6-10, 6-15, 6-21, 6-26, 6-36
- procedure for service processor 9585 6-5, 6-10, 6-15, 6-21, 6-26, 6-31, 6-36
- procedures for configuring modems 6-3
- procedures for service processor 3172 6-4
- procedures for service processor 7585 6-5
- procedures for service processors 9577 and 9585 6-3
- programming
 - requirements for DCAF 1-4
 - requirements for Telnet 9-2

R

recommendations

- for remote DCAF workstations 1-5
- for remote Telnet workstations 9-2

regaining control of the service processor 1-4

remote console

- 3745 connection D-4

remote DCAF workstation

- APPN-attached 1-2, 8-1
- installation 2-1
- LAN-attached (APPC-type) 1-2, 5-1
- Log On 3-1
- modem-attached 1-2, 6-1
- NCP definitions 7-10
- SNA-attached 1-2, 7-1
- TCP/IP-attached 1-2
- two-target configuration example A-1
- VTAM major node definitions 7-13

remote Telnet workstation

- TCP/IP-attached 9-1

RSF

- 3745 modem cable D-4
- 3745 modems 13-1

S

saving operations

- modem configuration 12-5, 12-6

service processor

- DCAF DLC configuration 2-5, B-1
- regaining control 1-4
- remote DCAF Log On 3-1

- service processor 3172 6-5, 6-10, 6-15, 6-21, 6-26, 6-31, 6-36

- service processor 7585 6-10, 6-21, 6-31

- service processor 9577 6-5, 6-10, 6-15, 6-21, 6-26, 6-31, 6-36

- service processor 9585 6-5, 6-10, 6-15, 6-21, 6-26, 6-31, 6-36

setting

- 3745 alternate console 10-1
- 3745 local console 10-1
- 3745 remote console 11-1
- 5858 modem configuration 13-1
- 7855 modem configuration 12-2
- other IBM modems 12-1

SNA-attached DCAF workstation 1-2, 7-1

start definitions, VTAM 7-12

starting

- DCAF remote session 3-1
- Telnet remote session 9-2

T

TCP/IP

- attached DCAF workstation 1-2, 4-1
- attached Telnet workstation 9-1
- installing the program 2-3

Telnet

- customer console 9-1
- hardware requirements and recommendations 9-2
- installing a remote workstation 9-1
- programming requirements 9-2
- remote logon password 9-2
- starting a remote session 9-2
- TCP/IP-attached workstation 9-1

testing connection

- from 3745 alternate console 10-10
- from 3745 local console 10-10
- from 3745 remote console 11-13

two-target DCAF configuration example A-1

U

upgrade

- DCAF program 2-3

V

VTAM

- logmode table 7-12
- major node for DCAF remote workstation 7-13

VTAM *(continued)*

- major node for DCAF target service
- processor 7-13
- start definitions 7-12

W

workstation (DCAF)

- APPN-attached 1-2, 8-1
- installation 2-1
- LAN-attached (APPC-type) 1-2, 5-1
- minimum configuration 1-4
- modem-attached 1-2, 6-1
- NCP definitions 7-10
- SNA-attached 1-2, 7-1
- TCP/IP-attached 1-2
- two-target configuration example A-1
- VTAM major node definitions 7-13

workstation (Telnet)

- TCP/IP-attached 9-1

Readers' Comments — We'd Like to Hear from You

3745 Communication Controller All Models
3746 Nways Multiprotocol Controller Model 900
Console Setup Guide

Publication No. SA33-0158-08

Please send us your comments concerning this book. We will greatly appreciate them and will consider them for later releases of the present book.

If you prefer sending comments by FAX or electronically, use:

- FAX: 33 4 93 24 77 97
- E-mail: FRIBMQF5 at IBMMAIL
- IBM Internal Use: LGERCF at LGEPROFS
- Internet: rcf_lagaude@vnet.ibm.com

In advance, thank you.

Your comments:

Name

Address

Company or Organization

Phone No.



Fold and Tape

Please do not staple

Fold and Tape

PLACE
POSTAGE
STAMP
HERE

IBM France
Centre d'Etudes et Recherches
Service 0798 - BP 79
06610 La Gaude
France

Fold and Tape


Please do not staple

Fold and Tape



Part Number: 34F1251

Printed by xxxx

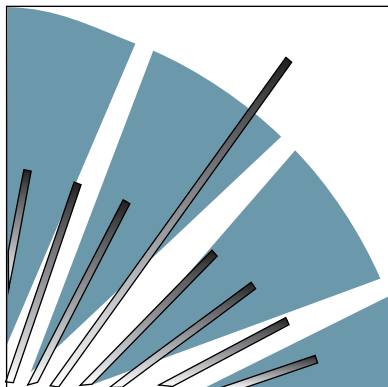

SA33-0158-08



34F1251

