

## **Installation of Field Feature Bill of Material (FFBM)**

**PN 43P1265**

### **Network Node Processor Upgrade to Type 5 (Based on 6578) Feature Code 5427 on IBM 3746 Models 900 and 950**

Written by: F. Martin  
Modified by: J. Maher  
Checked by: C. Franoux  
Approved by: M. Ardisson  
Reviewed by: J. Wicks

3745 FFBM	PN 99J6233 1 of 12	EC F64822 19 MAR 1999	EC F70083 04 JUN 1999	EC F70110 20 JAN 2000	EC F64810E 27 MAR 2000	EC H10024 02 MAR 2001
--------------	-----------------------	--------------------------	--------------------------	--------------------------	---------------------------	--------------------------

## Installation Instructions

3745  
FFBM

PN 99J6233 2 of 12	EC F64822 19 MAR 1999	EC F70083 04 JUN 1999	EC F70110 20 JAN 2000	EC F64810E 27 MAR 2000	EC H10024 02 MAR 2001
-----------------------	--------------------------	--------------------------	--------------------------	---------------------------	--------------------------

## Before Installation (Steps 1-8)

### 1.0 Machines Affected

- 3746 Model 900 and 950.

*This feature should only be applied on the machine serial for which it is specified.*

### 2.0 Related BMs and ECs

#### 2.1 Prerequisites

(Must be installed prior this installation)

Feature	Title
5054	Service Processor Type 6578 Model RAU
5054	Service Processor Type 6563 Model 65U
5053	Service Processor Type 6275 Model 56U or 83U
5052	Service Processor Type 7585-P02
5021	Service Processor Type 3172-P90

EC	Title
H10000A	Licensed Internal Code (Minimum level)

**Checkpoint:** Check that the TSP EC Level is H10004.009 or higher.

**Note:** Refer to the *SPIM* or the *Service User's Guide* shipped with the service processor, and verify that the code is at EC **H10000A** or above.

Use the procedure: **Displaying the EC Level of the Code installed on the hard disk**. If the EC of the code installed is prior to H10000A, use the installation instructions to install the new level of code shipped.

### 3.0 BMs to Be Installed

FFB/M	Title
43P1265	Install Network Node Processor Type 5 (6578)

### 4.0 Preparation

- Familiarize yourself with the purpose and details of the installation instruction before negotiating machine time with the customer.
- Check all items listed on the BMs to determine that all parts have been received.

3745 FFBM	PN 99J6233 3 of 12	EC F64822 19 MAR 1999	EC F70083 04 JUN 1999	EC F70110 20 JAN 2000	EC F64810E 27 MAR 2000	EC H10024 02 MAR 2001
--------------	-----------------------	--------------------------	--------------------------	--------------------------	---------------------------	--------------------------

- The set up of the Service Processor has no impact on customer operations.

## 5.0 Programming

None.

## 6.0 Purpose and Description

### 6.1 Purpose

To replace old Network Node Processor system unit by the new one based on NNP Type 6578.

### 6.2 Description

Install/replace a Network Node Processor.

## 7.0 Installation Time

FFBM	Machine Hrs.	System Hrs.	Nbr of CE
43P1265	See Note	00.0	1

**Note:** Machine time depends on configuration: from one hour up to two hours if NNP and MAE are present. Disruptive for customer operations.

## 8.0 Safety

None.

## 9.0 Details of Installation

Ask the customer to stop all the operations involving the Network Node Processor.

### 9.1 Removing the Previous NNPs

- \_\_\_ 1. Power OFF the NNPs installed.
- \_\_\_ 2. Disconnect the following cables at the rear of the installed NNPs:
  - a. The power cable
  - b. the LAN attachment cable.

See Figure 1 for NNP based on 6563, Figure 2 on page 6 for NNP based on 6275, Figure 3 on page 7 for NNP based on 7585, and Figure 4 on page 8 for NNP based on 3172.

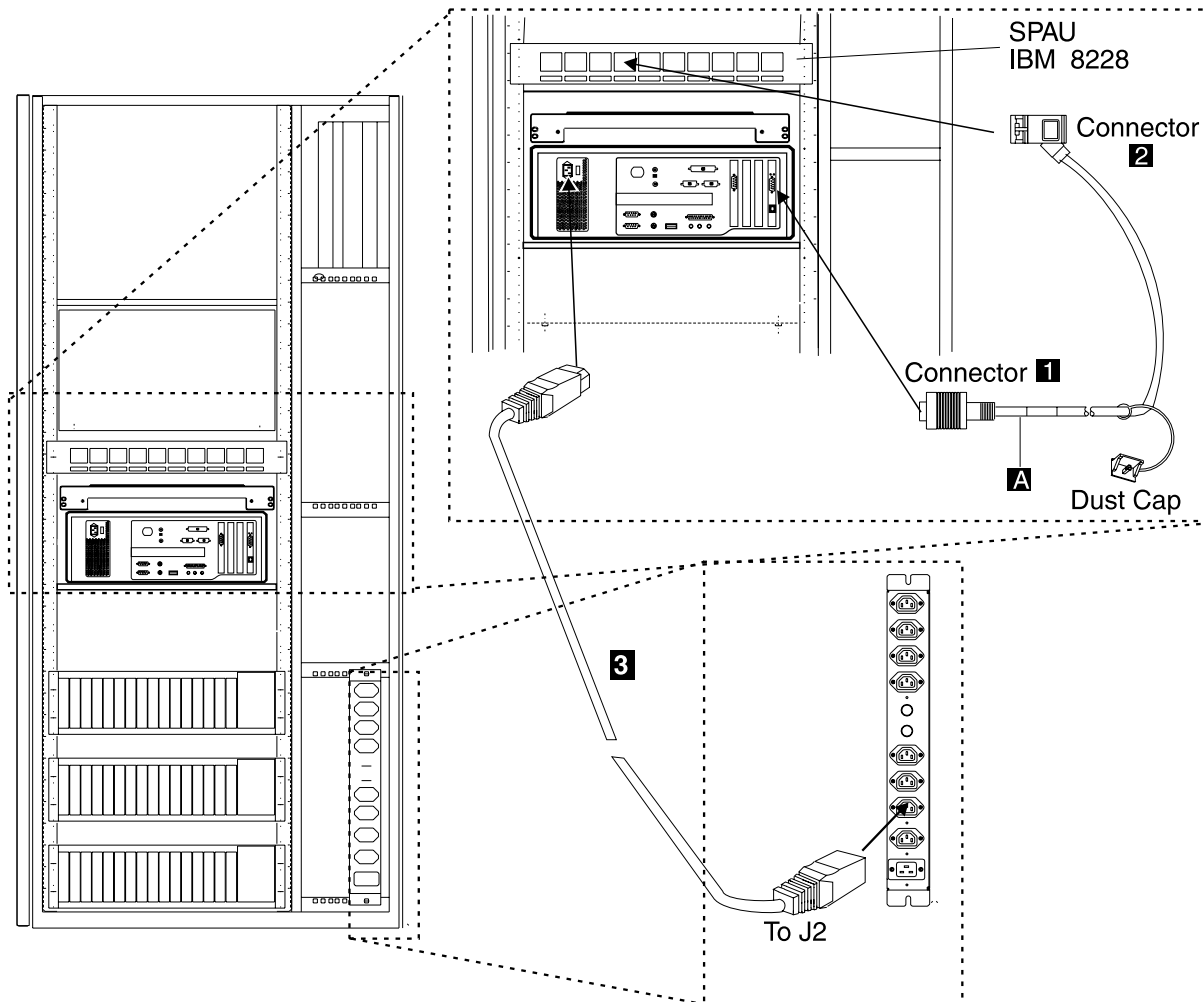


Figure 1. Removing Cables at the Rear of NNP Based on 6563

3745 FFBM	PN 99J6233 5 of 12	EC F64822 19 MAR 1999	EC F70083 04 JUN 1999	EC F70110 20 JAN 2000	EC F64810E 27 MAR 2000	EC H10024 02 MAR 2001
--------------	-----------------------	--------------------------	--------------------------	--------------------------	---------------------------	--------------------------

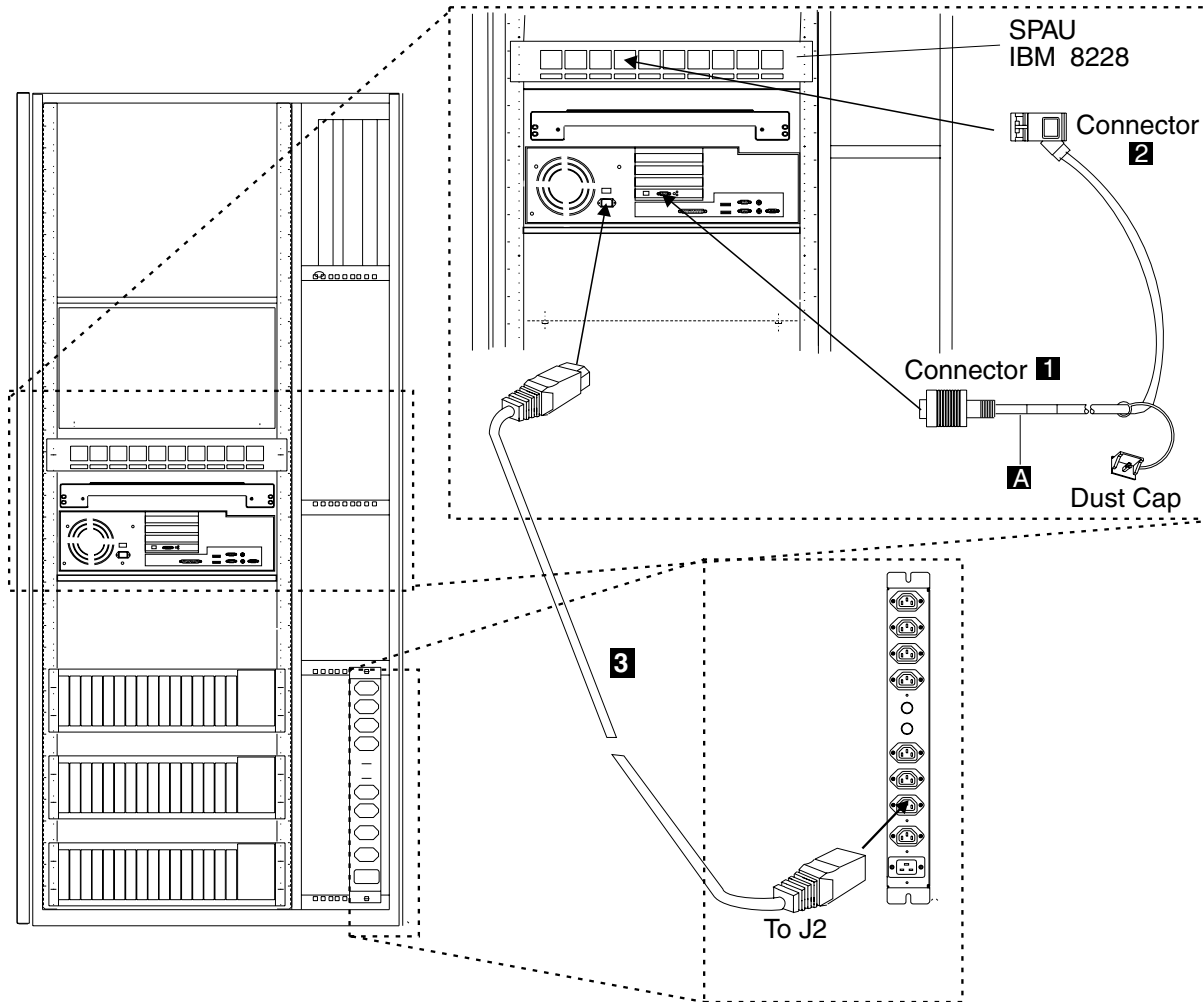


Figure 2. Removing Cables at the Rear of NNP Based on 6275

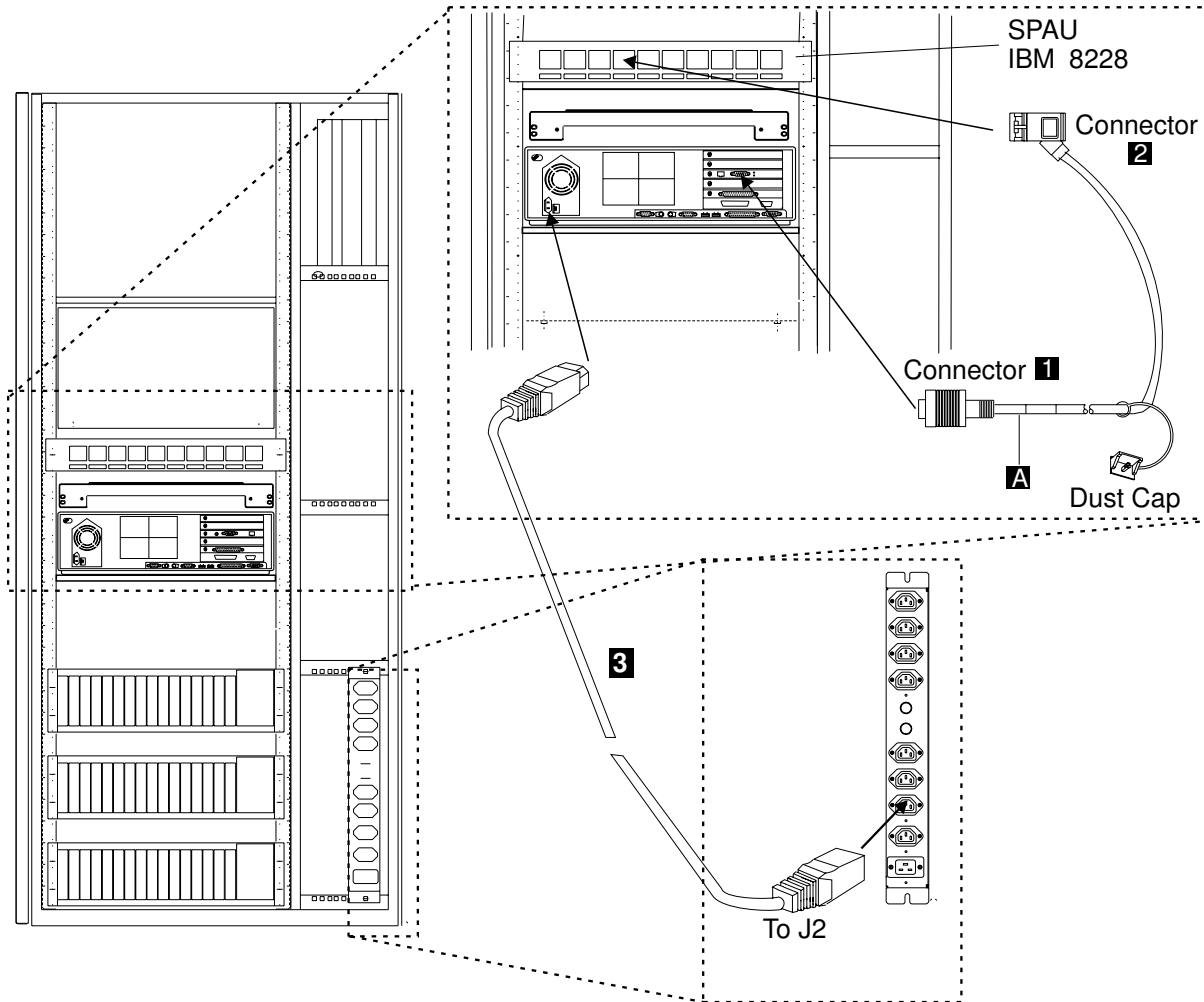


Figure 3. Removing Cables at the Rear of NNP Based on 7585

3745 FFBM	PN 99J6233 7 of 12	EC F64822 19 MAR 1999	EC F70083 04 JUN 1999	EC F70110 20 JAN 2000	EC F64810E 27 MAR 2000	EC H10024 02 MAR 2001
--------------	-----------------------	--------------------------	--------------------------	--------------------------	---------------------------	--------------------------

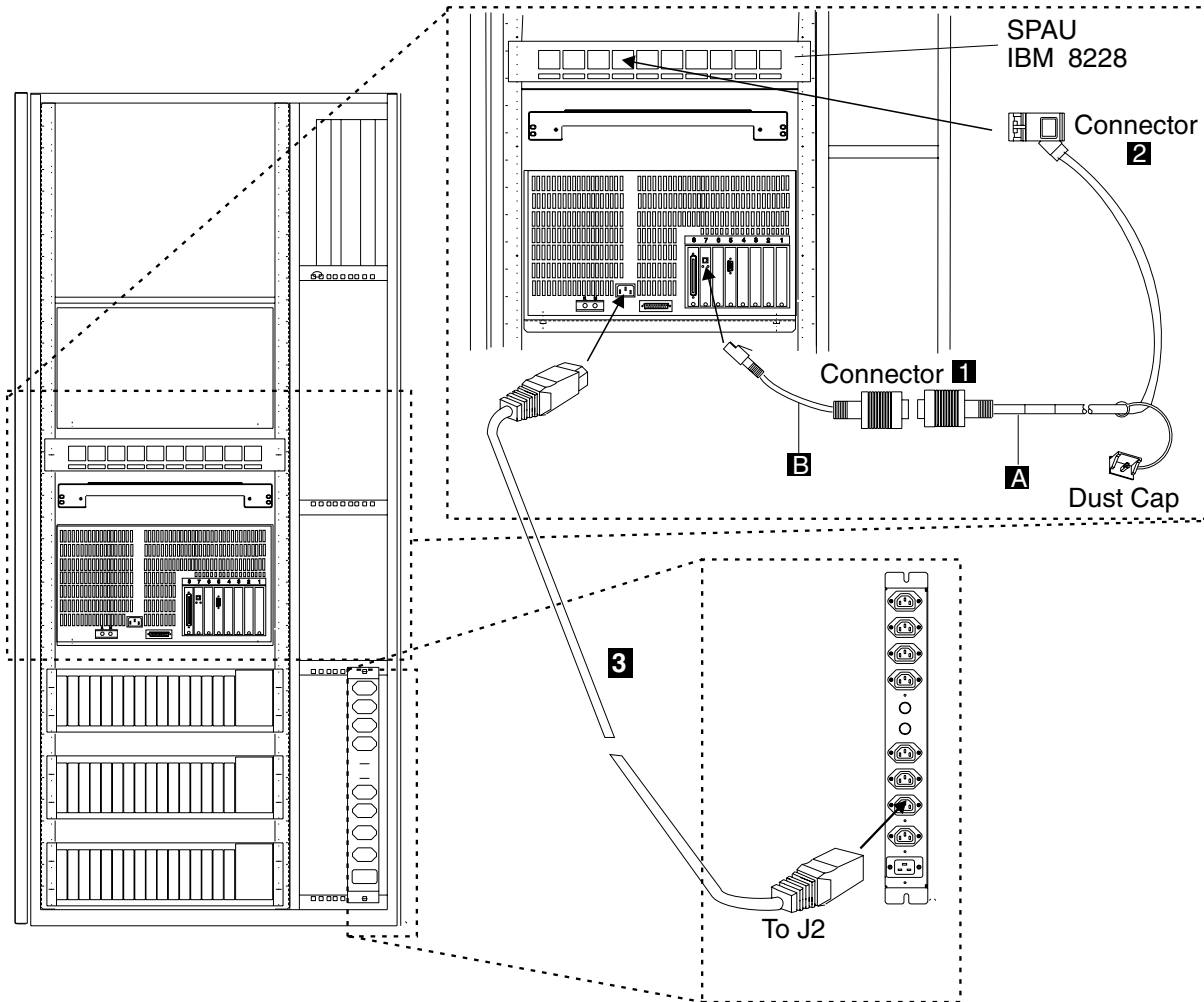


Figure 4. Removing Cables at the Rear of NNP Based on 3172

- \_\_\_ 3. If you remove a NNP based on 3172, from the rear of the rack, slide out the NNP.
- \_\_\_ 4. If you remove a NNP based on 7585, at the front side of the rack loosen the four screws A , then slide out the NNP (see Figure 5 on page 9).



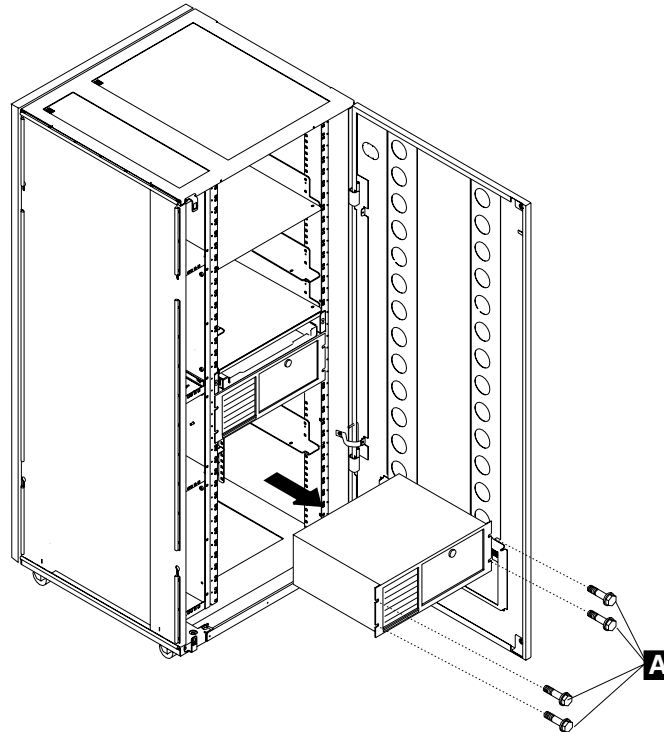


Figure 5. Removing the 7585 from the Controller Expansion

## 9.2 Installing the New Network Node Processor with Its Code

- \_\_\_ 1. Install the NNP and the associated code according to the instructions given in Chapter 1 of the *Network Node Processor Installation and Maintenance (Based on 6578)* GY27-0407 provided with the network node processor that you have to install. When completed continue with the next Step.
- \_\_\_ 2. To allow for the future use of dual level code, restore the non-active version with the same configuration parameters and same level of micro-code as the active version:
  - \_\_\_ a. Click on **Operation Management**.
  - \_\_\_ b. Double-click on **Manage Disks and Databases**.
  - \_\_\_ c. Use the radio button to select **Save databases on diskette** to save configuration parameters. When prompted, insert **Configuration Parameters diskette** (PN 02L3427) into the diskette drive.
  - \_\_\_ d. Click on **OK** and wait for completion.
  - \_\_\_ e. Remove the diskette, then click on **Cancel** to exit the function.
  - \_\_\_ f. Click on **Change Management**.

- \_\_\_ g. Insert the CD-ROM corresponding to the level of microcode checked or installed at the checkpoint indicated in **2.1 Prerequisites**.
- \_\_\_ h. Double-click on **Restore SP (Network Node Processor) µc on non-active version**, then follow the prompts.
- \_\_\_ 3. Ask the customer for a maintenance window on 3746-9X0 with traffic deactivated.
- \_\_\_ 4. Shutdown and restart the Service Processor and re-iml the 3746-9X0.

## 9.3 Returning the Machine to the Customer

Inform the Customer that the machine is now ready to restart the applications.

## 10.0 Test Procedures

No Test Required

## 11.0 Field Updating

None.

---

## After Installation (Steps 12-14)

### 12.0 Publications Update

None.

### 13.0 Parts Disposition

The removed part become the property of IBM. You **MUST RETURN** this part following the instructions given on the Returned Material Equipment Report (RMER) provided with this FFBM.

The following part must be returned to the address given on the RMER form.

Part Returned	Quantity
Control Unit	1

### 14.0 Machine Records

- Install the new **MACHINE HISTORY** supplied.
- Report installation and quality according to existing procedures.

**End of instructions.**

PN 99J6233 12 of 12	EC F64822 19 MAR 1999	EC F70083 04 JUN 1999	EC F70110 20 JAN 2000	EC F64810E 27 MAR 2000	EC H10024 02 MAR 2001
------------------------	--------------------------	--------------------------	--------------------------	---------------------------	--------------------------