

This manual is for reference and historical purposes, all rights reserved.

**This page is copyright© by M. Butkus, NJ.**

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

**If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.**

**This will allow me to continue to buy new manuals and pay their shipping costs.**

**It'll make you feel better, won't it?**

**If you use Pay Pal or wish to use your credit card,  
click on the secure site on my main page.**

# *Mamiya Universal*

**BLACK**



**INSTRUCTIONS**

# Contents

Special Pointers for Using Mamiya Universal .....	2	Roll Film Holder Model K .....	22
Main Features .....	3	Prior to Loading Roll Film Holder .....	22
Specifications .....	4	Loading Roll Film .....	22
Description of Parts .....	5	Focusing Hood .....	23
Assembling .....	7	Polaroid Land Pack Film Holder .....	24
Attaching the Lens .....	7	Short Course on Photography .....	24
Pulling Out the Lens from its Retracted Position .....	7	Accessories for Polaroid Land Pack Film Holder .....	25
Attaching the Hand Grip .....	8	Focusing Hood Model P .....	25
Stabilizing Plate .....	8	Optical Viewfinder Model P .....	25
Attaching the Back .....	9	Format Gauge .....	25
M Adapter .....	9	Focusing Screen Holder .....	26
G Adapter .....	10	Right-angle and Magnifying Focusing Backs .....	27
Polaroid Land Camera Back .....	10	Composing the Picture by Ground Glass Focusing Screen for	
Operating the Viewfinder .....	11	Film Pack or Cut Film .....	28
Selecting Brilliant Frame in the Viewfinder .....	11	Cut Film/Plate Holder Type J .....	29
Focusing with Coupled Rangefinder .....	11	Cut Film/Plate Holder Type A .....	30
Areas of Viewfinder Field to be Composed .....	12	Film Pack Adapter .....	30
When Using Roll Film Holder .....	12	Extension Rings .....	31
Distance Range Composed by Brilliant Frame .....	12	Spacer Set .....	33
When Using Polaroid Land Pack Film Holder .....	13	Life-size Photocopying Set .....	35
Depth of Field Scale and Infrared Photography .....	15	Duophoto Adapter and Tetraphoto Adapter .....	36
Depth of Field Scale .....	15	Accessories for the Viewfinder .....	37
Infrared Photography .....	15	Flashgun .....	38
Shutter Operation .....	16	Grip and Tripod Adapter .....	39
Press Focus Operation .....	16	Cases .....	41
ACCESSORIES .....	17	LENSES .....	42
Acceptable Photosensitive Material and Actual Picture Size .....	18	Angle of View Changes by Interchanging Lenses .....	43
Roll Film Holder (6×9, 6×7) .....	19	Lens Comparison Chart .....	45
Description of Parts .....	19	Shutter Operation .....	47
Prior to Loading Roll Film .....	20	Depth of Field Table .....	49
Loading Roll Film .....	20	System Chart for Mamiya Universal .....	53
Photographing .....	21		

- 1.** The 100 mm f/3.5 lens is a retracting type. When the lens has been retracted, focusing cannot be effected although the two images on the rangefinder coincide.

**Page 7**

- 2.** Be sure to cock the shutter before keeping the shutter open with the press focus lever. Disengage the lever lock button and turn the lever in the same direction as the shutter cock; then the shutter will remain open.

By pushing the lever back to its original position, the shutter will close.

**Page 16**

- 3.** When framing a 6×9 or 6×7 composition with the finder's brilliant frame, compose it within the inner edges of the frame width for short distances; use the outer edges as a guide for long distances.

**Page 12**

- 4.** When taking photographs with the vertical format camera position, on a tripod, use a tripod adapter on the hand grip socket for vertical format photography.

**Page 40**

- 5.** When taking photographs with the Polaroid® Land pack film holder, on a tripod, use tripod adapter type P.

**Page 40**

- 6.** When using the roll film holder for Mamiya RB or the various film holders and adapters for the 2 ¼ × 3 ¼ Graflok® back, made by GRAFLEX®, Inc., use the G adapter instead of the M adapter.

**Page 10**

# Main Features



The Mamiya Universal, the same unique breed as the Mamiya Press used by professional photographers both at home and abroad, is a large 6×9 film format camera with the functional features listed below. It offers the distinct advantage of its large film size not only for general photography, but also for news photography, commercial work, and scientific application.

- \* Large film size presents sharp, fine rendition of every detail.
- \* Variety of interchangeable lenses ranging from 50 mm wide angle to 250 mm telephoto.
- \* Quick interchangeability of lenses with bayonet ring mounting.
- \* Accurate focusing through coupled rangefinder (except 250 mm f/8 lens).
- \* Finder with bright, easy-to-see brilliant frame, featuring automatic parallax compensation (except 250 mm f/8 lens).
- \* Further accurate focusing through ground glass focusing screen possible.
- \* Quick photography with roll film holder (lever winding system).  
Available in 6×9 and 6×7 format for both 120 and 220 films.
- \* Roll film holder K enables photography in 6×9, 6×6, or 6×4.5 format.
- \* Also accepts dry plates and cut films, providing for single shots with these films.
- \* Film pack adapter makes possible successive photography with film packs.
- \* Extreme close-up photography through using spacer set and/or extension rings.
- \* Use of Polaroid Land pack film holder offers instant photographic prints in 3¼×4¼ inch format.
- \* The G adapter enables using the roll film holder and various film holders for Mamiya RB, in addition to the film holders of 2¼×3¼ Graflok back made by Graflex, Inc.
- \* Easy-to-grasp hand grip with cable release for added versatility.
- \* Many other accessories available for any type of photography.

# Specifications




Type	: Interchangeable lens type 6×9 format camera	100, and 127 mm lenses .
Picture size	: Photography with 6×9, 6×7, and 6×4.5 formats by using various holders. When using the POLAROID LAND pack film holder, actual picture size is 73 × 95 mm.	Back mount : Interchangeable back, three types (M adapter, G adapter, and Polaroid Land camera back ) can be attached.
Lens mount	: Breech lock bayonet mount type.	Grip : Removable hand grip with cable release.
Shutter	: SEIKO #0 shutter Shutter speed B, 1-1/500 second Flash synchronization, M and X selecting type. With press focus device (shutter blade arresting)	Others : Flashgun mounting socket, accessory shoe, camera body stabilizing plate, and tripod socket are provided.
Standard lens	: 100 mm f/3.5 retracting type, minimum aperture f/32, with lens hood. 127 mm f/4.7, minimum aperture f/64, with lens hood.	Physical dimensions : (Camera body, with 100 mm f/3.5 lens) Height: 6 19/32 in. (167 mm) Width: 4 25/32 in. (121 mm) without hand grip Depth: 4 1/2 in. (114 mm) lens in retracted position, distance scale at infinity
Rangefinder	: Reversed Galileian telescope, couples double-image coincidence type, instant coupling to selected lens.	( Camera body with 127mm f/4.7 lens) Height: 6 19/32 in. (167 mm) Width: 4 25/32 in. (121 mm) without hand grip
Viewfinder	: Adjustable brilliant frame fields for 100 mm, 150 mm, and 250 mm lenses; 6×9 and 6×7 formats; Automatic parallax compensation. Use exclusive optical viewfinders for 50 mm, 65 mm, and 75 mm lenses. When photographing through the Polaroid Land film pack size, use the optical viewfinder model P for 75,	Depth: 6 in. (152 mm) Weight: Camera body: 2 lbs. 1 1/2oz. (950 gr.) 100 mm f/3.5 lens: 1 lb. 1 oz. (480 gr.) 127 mm f/4.7 lens: 1 lb. 9/16 oz. (470 gr.) Hand grip: 10 9/16 oz. (300 gr.)

# Description of Parts

1. Accessory shoe
2. Strap eyelet
3. Flashgun mount
4. Flashgun mounting socket
5. Back locking slide
- 5'. Lock button
6. Bayonet ring
7. Stabilizing plate
8. Hand grip socket
9. Rangefinder coupling pin
10. Lens coupling mark
11. Cable release holder
12. Hand grip lock ring
13. Shutter release trigger
14. Hand grip
15. Cable release
16. Depth of field scale
17. Distance scale
18. Focusing ring
19. Shutter cocking lever



- 20. M-X selector
- 21. Shutter speed dial
- 22. Synchroflash terminal
- 23. Shutter release lever
- 24. Aperture control lever
- 25. Cable release socket
- 26. Press focus lever
- 26'. Press focus lever lock button
- 27. Indicator window for viewfinder field frame
- 28. Slide button for viewfinder field frame selection
- 29. Eyecup
- 30. Eyepiece
- 31. Tripod socket
- 32. M adapter
- 33. Locking knob
- 34. G adapter
- 35. Locking slide

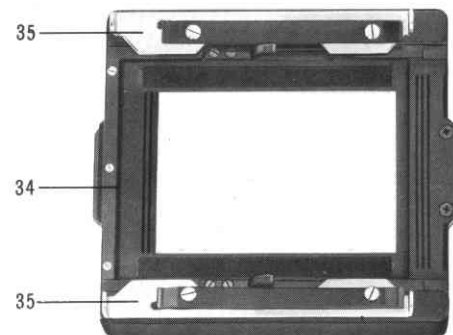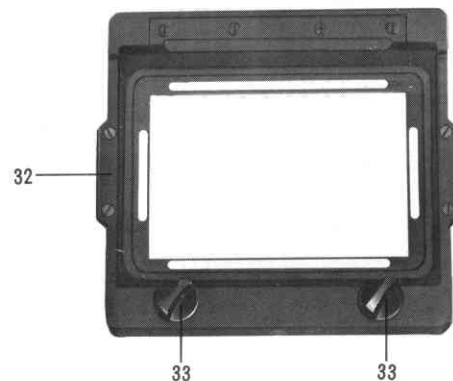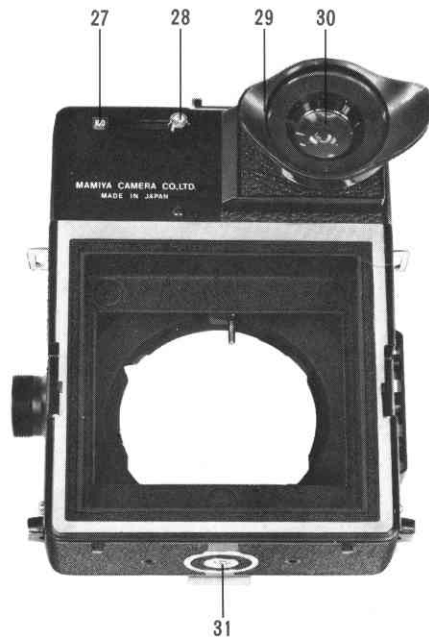






# Description of Parts

1. Accessory shoe
2. Strap eyelet
3. Flashgun mount
4. Flashgun mounting socket
5. Back locking slide
- 5'. Lock button
6. Bayonet ring
7. Stabilizing plate
8. Hand grip socket
9. Rangefinder coupling pin
10. Lens coupling mark
11. Cable release holder
12. Hand grip lock ring
13. Shutter release trigger
14. Hand grip
15. Cable release
16. Depth of field scale
17. Distance scale
18. Focusing ring
19. Shutter cocking lever



- 20. M-X selector
- 21. Shutter speed dial
- 22. Synchroflash terminal
- 23. Shutter release lever
- 24. Aperture control lever
- 25. Cable release socket
- 26. Press focus lever
- 26'. Press focus lever lock button
- 27. Indicator window for viewfinder field frame
- 28. Slide button for viewfinder field frame selection
- 29. Eyecup
- 30. Eyepiece
- 31. Tripod socket
- 32. M adapter
- 33. Locking knob
- 34. G adapter
- 35. Locking slide

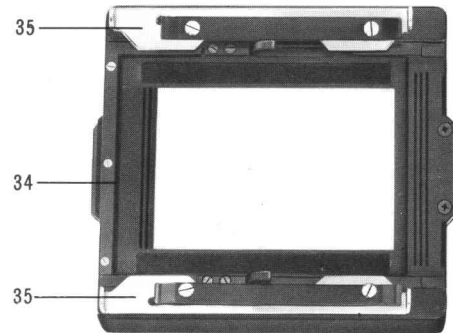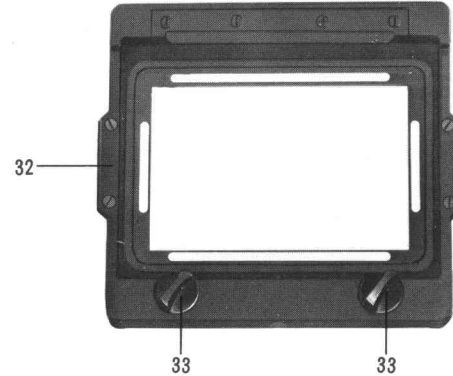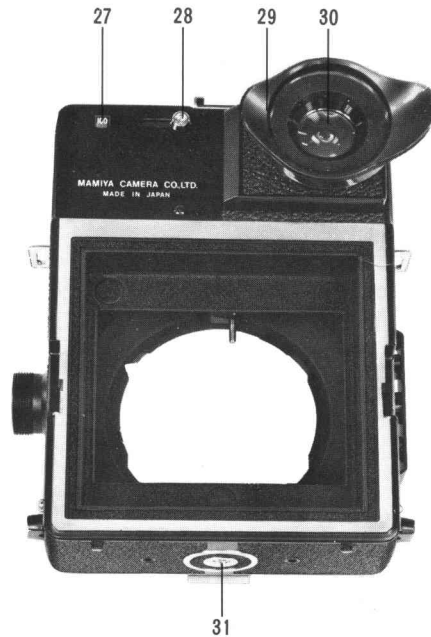

# Assembling

## Attaching the Lens



By rotating the bayonet ring counter clockwise until it stops, the red dot of the lens coupling mark on the bayonet ring comes to the top, and the dust cap on the front of the camera body can be removed. At this position of the bayonet ring, insert the lens, matching the red mark on the lens to the red mark on the bayonet ring. Then turn the bayonet ring clockwise, locking the lens in place.


Detaching the lens is done in a reverse order to that described above.

### PRECAUTION !

Do not touch the pin (9) on the camera body used to couple the lens to the rangefinder.

If the lens is changed while a loaded film holder is attached to the camera, be sure to insert a dark slide into the holder.

## Pulling Out the Lens from its Retracted Position

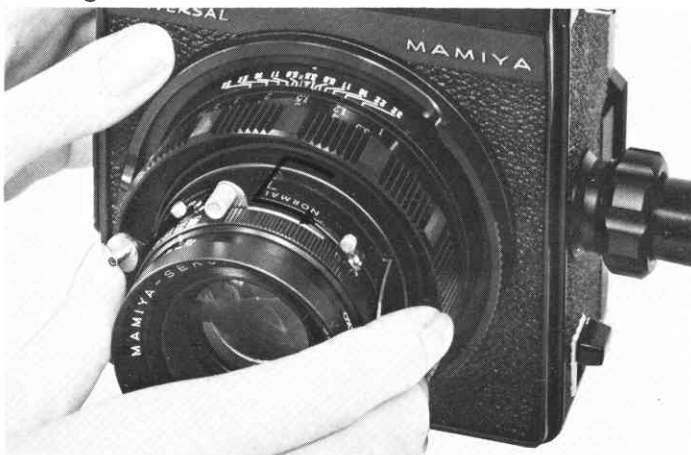


When using the 100mm f/3.5 standard lens, the lens-shutter assembly must be pulled out from its retracted position before taking general photographs. Grip the lens-shutter assembly firmly, turn it slightly counterclockwise, and pull it out; then, turn it clockwise (in the arrow direction) and secure it in place.

If the lens-shutter assembly is left in its retracted position, the coupled rangefinder will not function even when the two images coincide and form a single image.

Although the lens is not used for normal photography with the lens-shutter assembly in its retracted position, the lens is designed to allow its lens-shutter assembly to remain retracted so that it can be used even when extension rings are used.

Also lens retraction is necessary, when using this lens with another camera whose back mount can be extended, when taking a picture with the back mount tilted.

## Attaching the Hand Grip

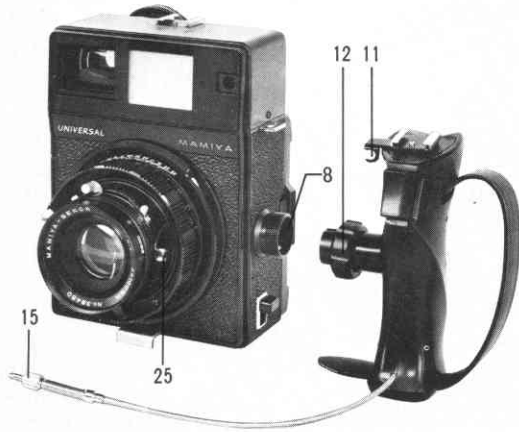


To attach the hand grip, insert the hand grip into the grip socket (8) of the camera body, and firmly turn the hand grip lock ring (12).

Screw the end of the cable release (15) extending from the hand grip into the release socket (25) of the lens-shutter assembly.

While dismounting a lens, hang the cable release on the cable release holder (11).


## Stabilizing Plate

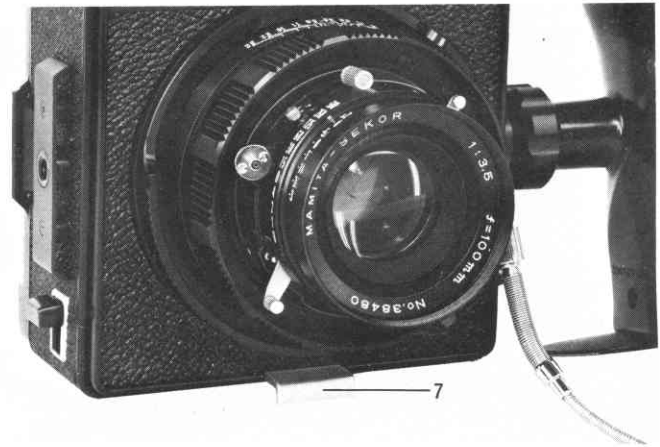

Pull out the stabilizing plate (7) on the bottom of the camera body when resting the camera on a desk, table, or other surface.

# Assembling

## Attaching to Back

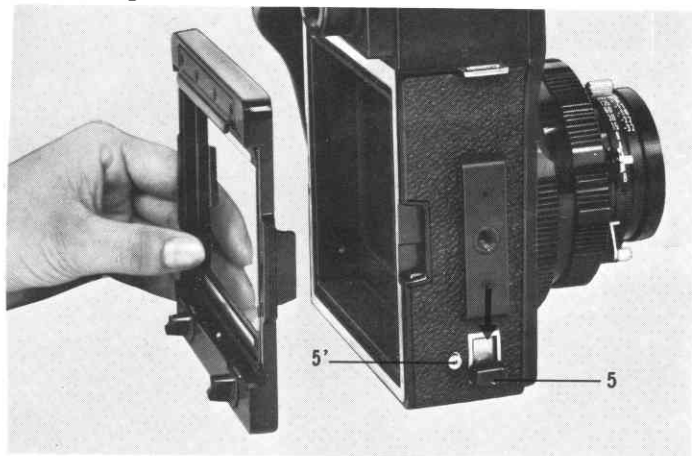

Before attaching the back, confirm that both side locking slides (5) are kept at their lowest position. If not, push down the locking slide while pushing in the lock button (5').

Align the red point on the M adapter, G adapter, or Polaroid Land camera back (Polaroid Land pack film holder and focusing hood model P) with the red point on the camera body, inserting both sides of the protruded portions to the indented portions on the camera body.

Securely push up the locking slide on both sides. While pushing up the slide, the lock button will spring out automatically. The lock button functions to prevent the back from being detached unexpectedly from the camera body.

Secure both sides of the back by using the locking slides (5). Do not raise the camera by holding the back in a condition that only one side is secured.

To remove the back, depress both side locking slides (5) while the lock buttons (5') are pushed in.

## M Adapter



When installing the M adapter on the camera back, the roll film holder for Mamiya Press, focusing screen holder, and so on can be used.

To attach the above-mentioned accessories to the adapter, keep the flattened edges of the two locking knobs of the M adapter parallel with the bottom line of the picture format, insert the top of the holder in the upper groove, and push in the bottom; then rotate the two knobs 90 degrees either to the right or left.

## G Adapter



When the G adapter is attached instead of the M adapter, the roll film holder for Mamiya RB and film pack adapter can be used. Furthermore, the roll film holder and the focusing panel made by GRAFLEX, Inc., and accessories for the GRAFLOK back can be employed.


## Polaroid® Land Camera Back



Remove the camera back adapter and attach the Polaroid Land camera back directly to the camera body. The Polaroid Land pack film holder and the focusing hood model P are available.

With the Polaroid Land pack film holder, use a Polaroid 8-exposure,  $3\frac{1}{4} \times 4\frac{1}{4}$  inch film pack. For color photography, use Polaroid Polacolor® film type 108; for black-and-white photography, use Polaroid 3000 speed film, type 107.

By attaching the focusing hood model P, direct focusing through the ground glass focusing screen of  $3\frac{1}{4} \times 4\frac{1}{4}$  inch format (ef-

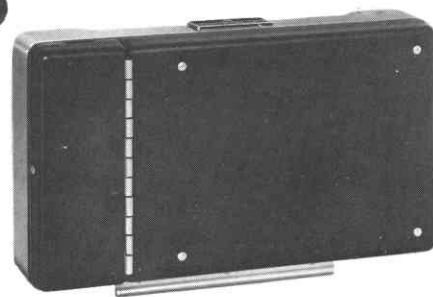


fective picture size of  $2\frac{1}{4} \times 3\frac{1}{4}$  inch, 73mm  $\times$  95mm) becomes possible. On the ground glass focusing screen are  $6 \times 9$  and  $6 \times 7$  format indicating lines.

### NOTE:

The back attaching system used on this camera is exclusive with Mamiya; thus, do not attempt to use other Polaroid Land camera backs.

# Operating the Viewfinder

## Selecting Brilliant Frame in the Viewfinder

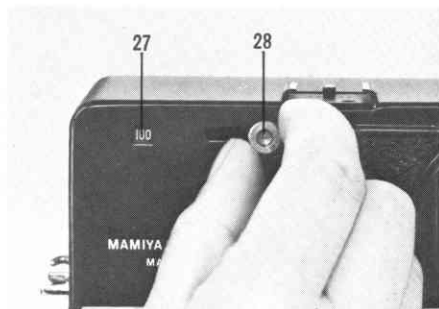

The viewfinder field frame, indicating the field for  $6 \times 9$  and  $6 \times 7$  formats, is adjustable for 100mm, 150mm and 250mm focal length lenses. By sliding over the slide button (28), adjust the number in the indicator window (27) to match the focal length of the using lens.

When using the 50mm, 65mm, or 75mm lens, attach the exclusive optical viewfinder of each lens to the accessory shoe on the camera body.

## Focusing with Coupled Rangefinder



Within the small circle in the center of the viewfinder field two images of the subject are visible. Turn the focusing ring so that these two images coincide.

When focusing, coincide the double images at the center of the circle. Looking through the center of the eyepiece is also a key point in accurate focusing. When turning the focusing ring of the lens barrel, be careful not to turn the bayonet ring of the camera body.

When the lens-shutter assembly is in a retracted position, or when extension rings are used, the rangefinder will not function even though the double images coincide.

## Parallax

Brilliant frames in the viewfinder for 100mm, 150mm and 250mm lenses are coupled with the rangefinder to automatically correct parallax. The 250mm f/8 lens cannot be coupled with the rangefinder.

# Areas of Viewfinder Field to be Composed

## When using Roll Film Holder

When composing the 6×9 or 6×7 format with the viewfinder frame, employ inside edges of the frame for subjects at close distance; use the outer edges of the frame for subjects further away.

## Distance Range Composed by Brilliant Frame


Focal length of lens	For close ranges, use inside edges of frame	For distances further away, use outside edges of frame
100mm f/2.8 f/3.5	3.5ft to approx. 6ft (1m) (2m)	approx. 6ft. to infinity (2m)
150mm f/5.6	6ft. to approx. 9ft. (2m) (3m)	approx. 9ft. to infinity (3m)
250mm f/5	—————	approx. 12ft. to infinity (4m)

The 250mm f/5 lens interlocks with the range-finder from distances of 12 ft (4m) to ∞ (infinity). The 250mm f/8 lens does not interlock with the rangefinder.

When photographing with the 6×6 format or 6×4.5 format by employing the roll film holder model K, use the attached finder mask. See page 23 for details.

### 6 × 9

For close range

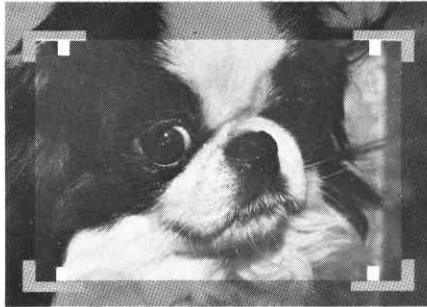


### 6 × 7


For close range



For distances further away

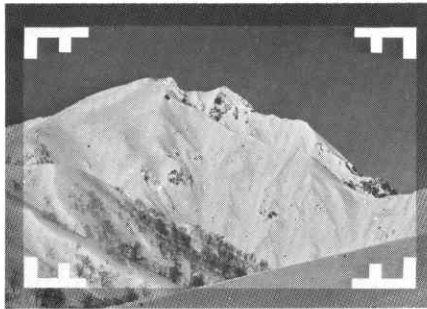


For distances further away

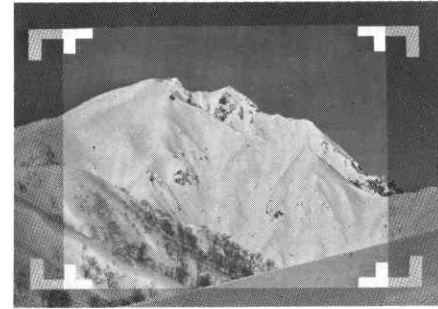




# Areas of Viewfinder Field to be Composed (cont.)

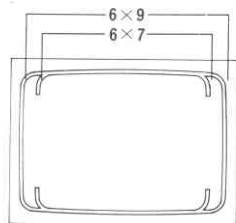


## 50mm Lens

Attach the optical viewfinder for 50mm lens on the accessory shoe. To correct parallax, turn the knob at the back of the viewfinder and select the same distance scale shown on the dial as the focused distance to subject.

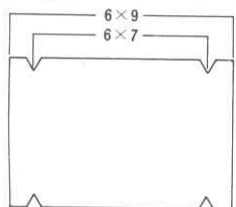


## 65mm Lens

Attach the optical viewfinder for 65mm lens to the accessory shoe. To correct parallax, move the finder eyepiece up and down until the distance scale of the eyepiece shows the distance to subject.

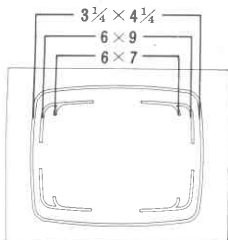

## 75mm Lens

Attach the optical viewfinder for 75mm lens to the accessory shoe. To correct parallax, turn the knob at the back of the viewfinder and select the same distance scale shown on the dial as the focused distance to subject. (The brilliant frame of  $3 \frac{3}{4} \times 4 \frac{3}{4}$  inch format indicates the field of view when photographing with the Polaroid Land pack film holder).

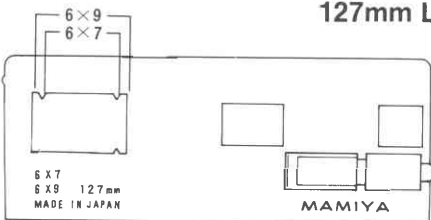

## 127mm Lens

Attach a finder mask to the viewfinder window of the camera body. For correcting parallax, select the brilliant frame of the viewfinder for 250mm lens, moving your eye about until the brilliant frame is centered in the viewfinder field.


## When Using Polaroid® Land Pack

### Deciding the Field Composition

Since the Polaroid film pack photographs a wider area than does the viewfinder field frame of the  $6 \times 9$  cm format, compensate the field composition in the following manner, depending on the focal length of the lens to be used. For accurate field composition, use the focusing hood model P. Also, the optical viewfinder model P for 75mm, 100mm, and 127mm lenses is available to ensure accurate field of view.


The 75mm and 127mm focal length lenses are designed to cover the entire picture area of the Polaroid film pack ( $3 \frac{3}{4} \times 4 \frac{3}{4}$  inch format). However, since other ordinary Mamiya Press lenses are designed for the  $6 \times 9$  cm format, if these lenses are used with the Polaroid film pack, the four corners of the format may be slightly darkened.

## Film Holder

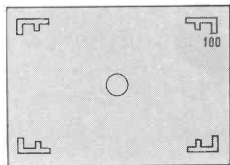


### With the 100mm lens:

Use the viewfinder entire area. In this case, the actual picture area covers a slightly wider field.

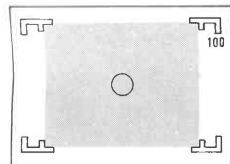


### With the 127mm lens:

By observing the camera viewfinder, determine the field of view by using the  $6 \times 7$  format brilliant frame for 100 mm lens as a guide.

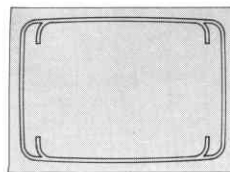


### With the 50mm lens:

Attach the optical viewfinder for 50 mm lens on the accessory shoe and observe the viewfinder entire area.

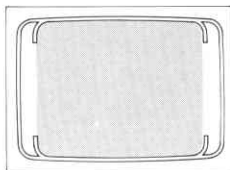


### With the 65mm lens:

Attach the optical viewfinder for 50 mm lens on the accessory shoe and use the frame for  $6 \times 7$  format in the viewfinder.

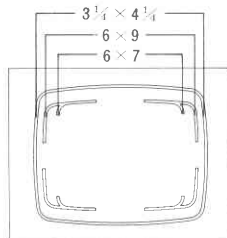


### With the 75mm lens:

Use the brilliant frame for  $3 \frac{1}{4} \times 4 \frac{1}{4}$  format in the optical viewfinder for 75mm lens.

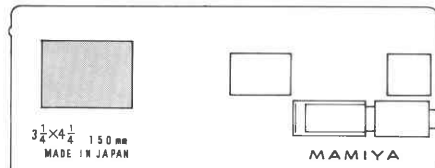

### With the 150mm lens:


Determine the field of view by covering the viewfinder mask for  $3 \frac{1}{4} \times 4 \frac{1}{4}$  format on the camera finder window.

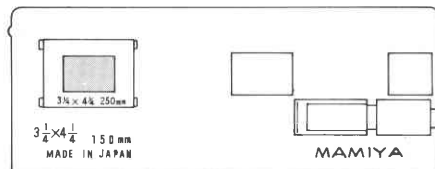

### With the 250mm lens:

Determine the field of view by inserting the mask for 250mm lens in the finder mask for 150 mm lens.

# Depth of Field Scale and Infrared Photography

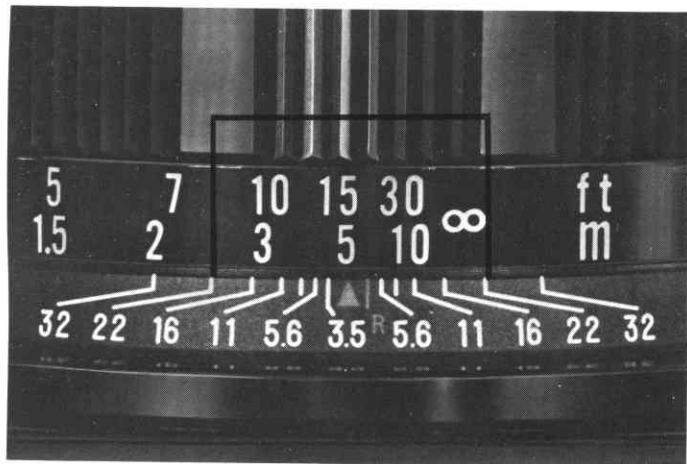

## Depth of Field Scale


Standard f-stop marks, indicating the depth of field for the aperture used, are located on both sides of the triangle mark (▲) on the depth of field ring. This indicates that subjects within a definite area will be in sharp focus on the photograph. For example, when focusing on a subject 15 feet (5 meters) away with a 100 mm standard lens at f/22, everything between 8 feet (2.5 meters) and infinity is in focus.

## Infrared Photography

When photographing with infrared film, the distance scale obtained by focusing with the rangefinder must be shifted by rotating the focusing ring slightly until the focused point on the distance scale is changed to align with the small red "R" on the depth of field ring.

Use a red filter when photographing with infrared film.

# Shutter Operation

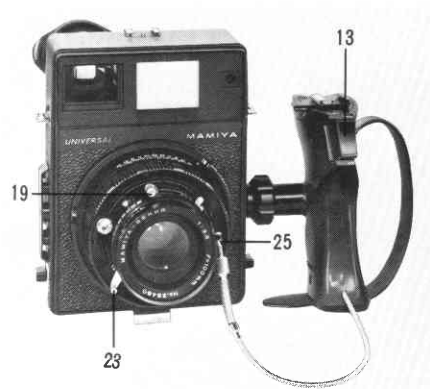

Cock the shutter by moving the shutter cocking lever (19).

Screw the end of the cable release which extends from the hand grip into the cable release socket (25).

To release the shutter, press the shutter release trigger of the hand grip with the left forefinger. Also, the shutter can be released by tripping the shutter release lever (23).

## Press Focus Operation



When focusing through the ground glass, keep the shutter open by the following method.

1. Cock the shutter, regardless of the shutter speed setting.
2. Disengage the lock button by thoroughly pushing it to the camera body side and turn the press focus lever in the shutter cock direction; then the shutter will remain open.



By pushing the press focus lever back to its original position, the shutter will close. There is no need to reset the shutter.

### PRECAUTION:

Be sure to operate the press focus lever AFTER cocking the shutter. While the shutter is kept opened, the shutter cannot be released with the shutter release button.

Applying an excessive force to the release button may cause shutter damage.



When the press focus lever is not used, be sure to engage the lock button to prevent inadvertently moving the lever.



# Acceptable Photosensitive Material and Actual Picture Size

Type of holder	Photosensitive material			
	Type	Nominal size	Actual picture size	Number of exposures
6 × 9 cm roll film holder	Roll film	120	2 $\frac{1}{4}$ × 3 $\frac{5}{16}$ in. 56 × 84mm	8
		220	"	16
6 × 7 cm roll film holder	Roll film	120	2 $\frac{1}{4}$ × 2 $\frac{4}{16}$ in. 56 × 68mm	10
		220	"	20
Roll film holder model K (6 × 9, 6 × 6, 6 × 4.5cm)	Roll film	120	2 $\frac{1}{4}$ × 2 $\frac{4}{16}$ in. 56 × 84mm	8
			2 $\frac{1}{4}$ × 2 $\frac{1}{16}$ in. 56 × 56mm	12
			1 $\frac{4}{16}$ × 2 $\frac{1}{16}$ in. 41.5 × 56mm	16
Cut film/plate holder (type J)	Plate	2 $\frac{1}{2}$ × 3 $\frac{1}{2}$ in. 6.5 × 9 cm	2 $\frac{1}{4}$ × 3 $\frac{5}{16}$ in. 57 × 84mm	1
	Cut film	2 $\frac{1}{2}$ × 3 $\frac{1}{2}$ in. 6.5 × 9 cm	"	
	Cut film	4 $\frac{3}{4}$ × 6 $\frac{1}{2}$ in. size divided into 4 equal parts	2 $\frac{1}{4}$ × 3 $\frac{1}{2}$ in. 57 × 77mm	
Cut film/plate holder (type A)	Plate	2 $\frac{1}{2}$ × 3 $\frac{1}{2}$ in. 6.5 × 9 cm	2 $\frac{1}{4}$ × 3 $\frac{5}{16}$ in. 57 × 84mm	1
	Cut film	2 $\frac{1}{4}$ × 3 $\frac{1}{4}$ in.	2 $\frac{3}{16}$ × 3 $\frac{7}{16}$ in. 52 × 79mm	
Film pack adapter	Film pack	2 $\frac{1}{2}$ × 3 $\frac{1}{2}$ in. 6.5 × 9 cm	Minimum size 2 $\frac{1}{4}$ × 3 $\frac{5}{16}$ in. 55 × 80mm	12
		2 $\frac{1}{4}$ × 3 $\frac{1}{4}$ in.	Minimum size 2 $\frac{1}{4}$ × 3 $\frac{5}{16}$ in. 57 × 80mm	16
		6 × 9 cm	Minimum size 2 $\frac{1}{4}$ × 3 $\frac{1}{16}$ in. 57 × 83mm	
Polaroid Land pack film holder	Polaroid film pack series 100	3 $\frac{1}{4}$ × 4 $\frac{1}{4}$ in. (8.3 × 10.8cm)	2 $\frac{7}{8}$ × 3 $\frac{3}{4}$ in. 73 × 95mm	8

# Roll Film Holder (6 × 9, 6 × 7)

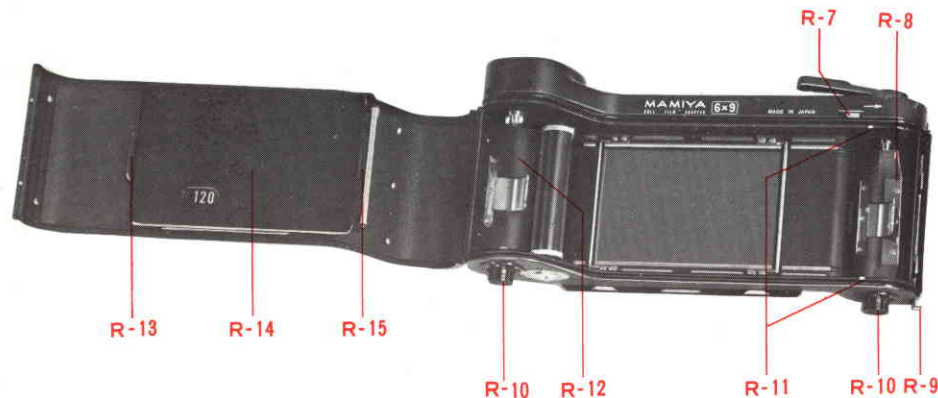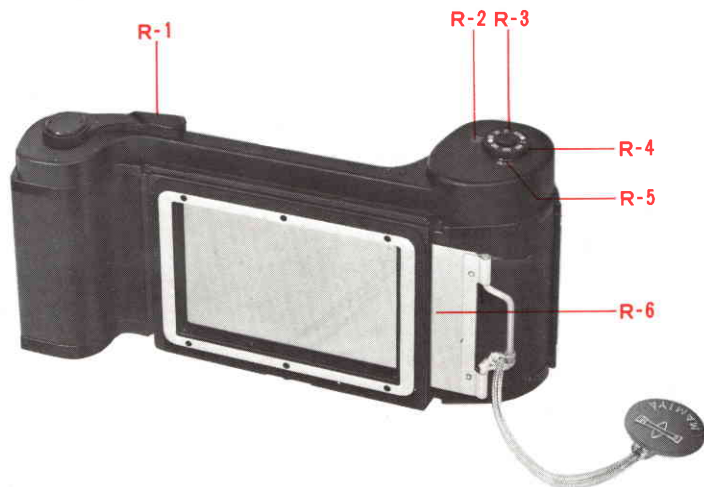

There are two types of roll film holders—one for 6 × 9 cm and the other for 6 × 7 cm formats. Both types accept 120 and 220 roll films.

Holder Type	Films	Number of exposure
6 × 9	120	8
	220	16
6 × 7	120	10
	220	20

## Description of Parts

- R - 1 Film Advance Lever
- R - 2 Film Counter Window
- R - 3 Film Sensitivity Reminder Dial
- R - 4 Counter Change-over Knob
- R - 5 Film indicator Window
- R - 6 Dark Slide
- R - 7 Film Wind-stop Release Lever
- R - 8 Film Chamber
- R - 9 Back Cover Latch
- R - 10 Spool Change Knob
- R - 11 Start Mark
- R - 12 Take-up Spool Chamber
- R - 13 Plate Catch (Left)
- R - 14 Pressure Plate
- R - 15 Plate Catch (Right)

## Prior to Loading Roll Film

Set the automatic film wind stop device for the film to be used (120 or 220).

Turn the counter change-over knob (R-4) either to the right or left until the figure appearing in the film indicator window (R-5) corresponds to that of the film to be used (120 or 220).

### Open the back cover

By pulling out the back cover latch while pressing the back cover to the holder, the back cover can be opened.

**Make sure that the correct side of the pressure plate corresponds to the film used.**

One side of the pressure plate (R-14) is for No. 120 roll film, and the other side is for No. 220. The figure "120" or "220" is indicated on the window of the pressure plate.

Reverse the pressure plate if it does not match the film

### Removing the Pressure Plate:

Remove the plate by pushing its right side to the left, pulling it out from the plate catch (R-15).

### Reattaching the plate:

While aligning the upper and lower edges of the plate with the flange, insert the groove into the plate catch (R-13) on the left, then hook the plate catch (R-15) on the right while pushing it slightly to the left. Always ascertain that the correct side of the pressure plate corresponds to the film used.

Use the convenient film sensitivity reminder dial (R-3) as a memo of film speed in the holder, turning the dial corresponding to the loaded film speed to the red mark.

## Loading Roll Film






Avoid direct sunlight while loading or unloading film. Do it in the shade.

Pull out the spool change knob (R-10) and place an empty spool into the spool chamber (R-12).


Pull out the other spool change knob (R-10) and place a roll film into the film chamber (R-8).

By turning the spool change knob either to the right or left after pulling it out, the knob will remain projected. By turning back the knob, the knob will snap back to its original retracted position.

The memo clip at the holder back cover can accommodate a film box lid or a blank paper pad for memorandum.

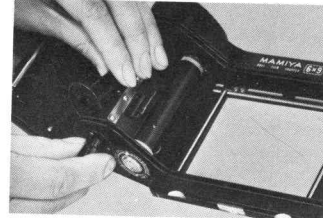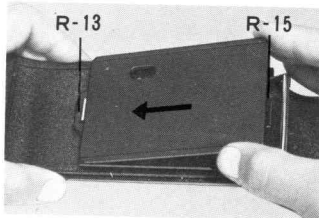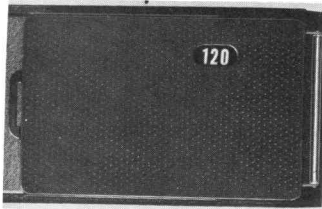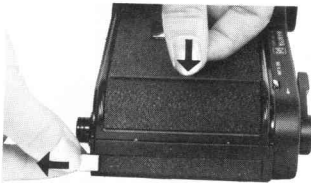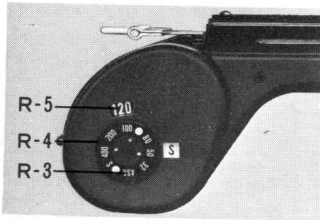



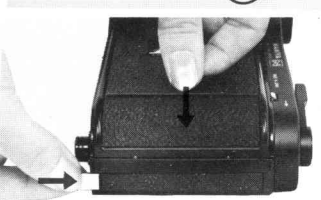

Draw out the end of the leader paper of the film, inserting the tip into the slit of the take-up spool.

If the spool is not in the proper position or the leader paper of the film is not correctly inserted into the take-up spool slit, film winding cannot be operated properly or smoothly.




Wind the film advance lever (R-1) gradually until the start mark on the leader paper aligns with the start marks (R-11) on the holder.

Close the back cover and push in the back cover latch, keeping the back cover pressed to the holder.

When the back cover is closed, the start marks will be slightly separated; however, this implies no bad effect whatsoever.

As the film advance lever is carefully wound, figure "1" appears in the film counter window and the lever stops winding. Even before figure "1" appears in the film counter window, a heavy drag may be felt; however, continue winding until the lever actually stops. Now the first film frame is now ready to be exposed.

## Photographing

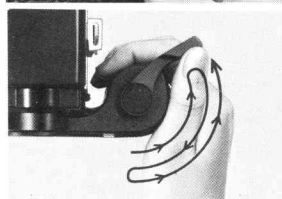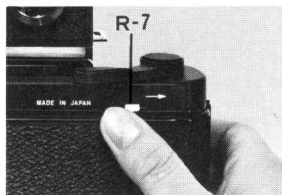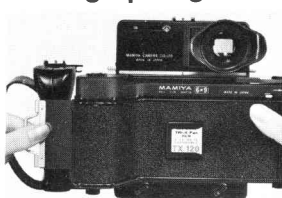

Attach the loaded roll film holder to the camera body.

Pull out the dark slide (R-6); now, start taking photographs.

After each exposure, by moving the film wind-stop release lever (R-7) in the direction of the arrow, the film can be advanced by turning the film advance lever.

**Since the film will not advance far enough with only one stroke of the film advance lever, turn the lever until it stops at the second stroke.** Winding may be accomplished by moving the lever with several short, definite strokes until the lever stops, although never wind the lever too rapidly.

After all frames have been exposed, move the wind-stop release lever (R-7) once, then continue turning the film advance lever until you feel tension on the advance lever lessen as the leader end of the film slips off the spool, finally turning it freely in the take-up chamber. Now open the back cover and remove the film.

Fully insert the dark slide when the roll film holder is to be detached or when the lens is interchanged before completing a roll of film.

Without a film loaded, turning the film advance lever will not advance the film counter which remains at the start (S) mark. When some other mark is visible in the film counter window, it is your assurance that a film is loaded.


# Roll Film Holder Model K



This holder is for taking 6 × 9, 6 × 6 and 6 × 4.5 format pictures with a 120 roll film. The film is advanced by turning the knob. The number of exposures are read on the back of the holder.

The memo clip at the holder back cover can accommodate a film box lid or a blank paper pad for memorandum.

## Prior to Loading Roll Film

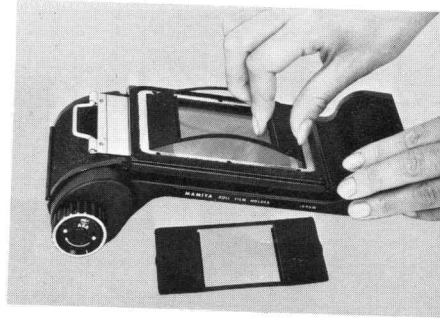


Unless photographing in 6 × 9 format, the viewfinder field as well as the picture format of the holder must be changed.

## Installing the Picture Frame

Attach the picture frame for 6 × 6 or 6 × 4.5 format into the holder while a dark slide is inserted in the holder. Insert the picture frame so that the folded portion enters the dark slide side (inner side). Insert the claws on both ends into the grooves of the picture frame of the holder while slightly bending the picture frame lengthwise (as shown in the photo).

## Loading Roll Film

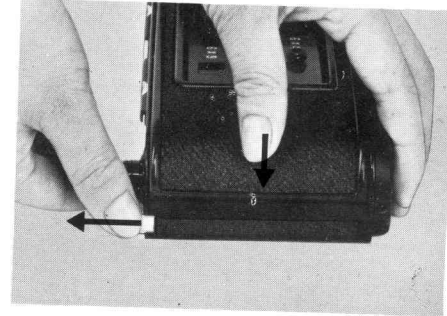

When loading or unloading a film, avoid direct sunlight. Do it in the shade.

By pulling out the back cover latch while pushing the back cover toward the holder, the back cover can be opened.

Pull out the spool change knob and place a roll film in the film chamber.

Pull out the leader paper of the film, insert the edge of the leader paper into the slit of the take-up spool and wind it around the spool once; then close the back cover. When closing the back cover, press the back cover toward the holder, pushing into the back cover latch.

While observing the window for the picture format to be photographed, turn the film advance knob clockwise until figure "1" appears in the window.


Avoid direct sunlight when opening the back window.

# Focusing Hood

Attach the holder to the camera body, pull out the dark slide, and start to photograph.

After each exposure, open the back window, and turn the film advance knob until the next figure appears in the window.

When removing the holder from the camera, be sure to insert the dark slide.

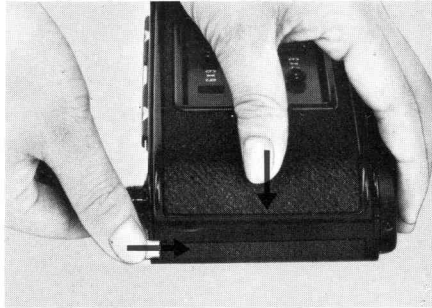


## Viewfinder Field for Photographing in 6 × 6 or 6 × 4.5 Format.

Attach a finder mask for 100mm lens to the viewfinder window of the camera body (this mask is for 6 × 6 format). For photographing in 6 × 4.5 format, insert the mask for 6 × 4.5 format into the back of the 6 × 6 format mask.




To attach the mask to the camera body, raise the flat spring attached in front of the mask by holding it with the thumb and forefinger, and apply the mask to the top cover front frame and releasing the raised flat spring.

To correct parallax, select the brilliant frame for 250mm lens, moving the eye around while looking into the viewfinder until the brilliant frame is centered in the entire viewfinder field.

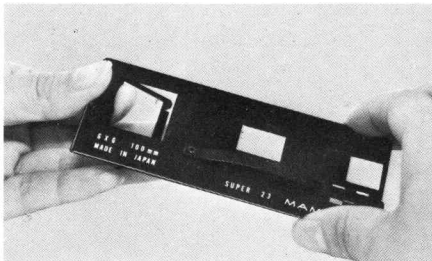

For accurate focusing or for confirming the depth of field, use the focusing hood. A Fresnel lens is used with this focusing hood to make the whole image brighter and easier to focus.

# Polaroid® Land Pack Film Holder

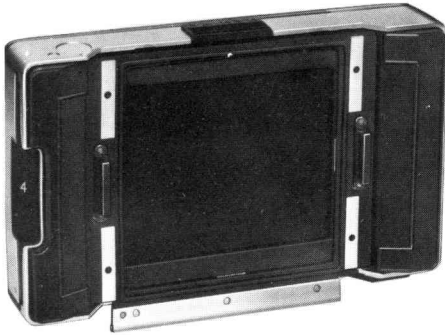

With a Polaroid Land film pack, you can obtain a color print in 60 seconds, and a black-and-white print in 15 seconds.

**For color pictures**, use Polaroid Polacolor film, Type 108.


**For black and white pictures**, use Polaroid 3000 speed film, Type 107.

Both color and black-and-white films are eight-exposure film packs.


Actual picture size is  $2\frac{1}{2} \times 3\frac{1}{8}$  inches (73 × 95mm). Install this holder directly on the camera body after removing the M adapter.

## “Short Course” on photography


**1** Install a holder containing film pack on the camera and take a picture after pulling out the dark slide.

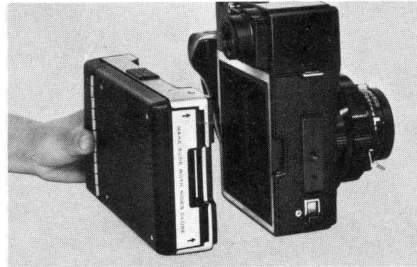


**2** Pull out the white tab, then a yellow tab pops out.

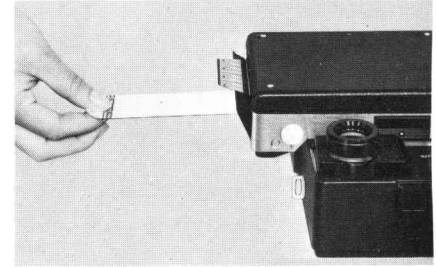

**3** Pull the yellow tab straight out of the holder and at a constant speed. Development starts from this operation.

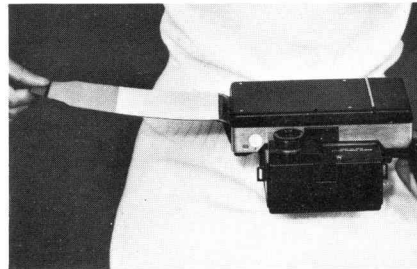

**4** After the recommended development time, strip off the white paper (the print). The photo will be completed.

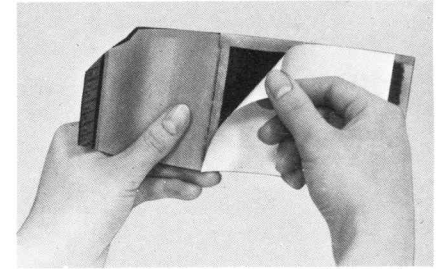

Further detailed explanation is provided with the purchased holder.

# Accessories for Polaroid® Land Pack Film Holder

## Focusing Hood Model P




This focusing hood has the same size format as the Polaroid Land film pack type 107 and type 108. The focusing screen has a Fresnel lens, offering a bright, sharp image on the screen. Use this focusing hood to confirm accurate focus or the actual picture format.

Since this focusing screen has indicating lines for  $6 \times 9$  and  $6 \times 7$  formats, it can be used as a focusing screen for composing with the roll film holder.

The hood can be separated from the focusing screen panel, by sliding the locking slides on both upper and lower edges.

## Optical Viewfinder Model P

for 75mm, 100mm, and 127mm Lenses

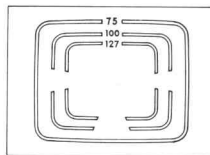


This optical viewfinder is especially designed for 75mm, 100mm, and 127mm lenses to permit observing an accurate field of view when taking pictures with the Polaroid Land film pack; series 100 ( $3 \frac{1}{4} \times 4 \frac{1}{4}$  inch).

By attaching the viewfinder to the accessory shoe, and looking through the viewfinder eyepiece, the field of view corresponding to the lens used can be determined.

To compensate for parallax, turn the knob on the back of the viewfinder, and set the focused distance to subject.

## Format gauge

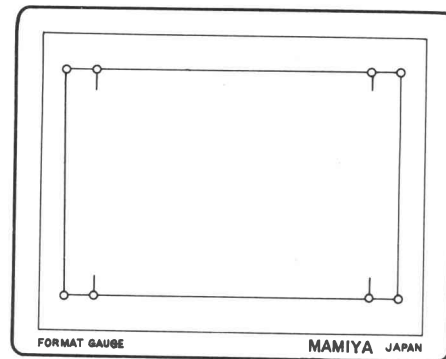


As a preparatory test when taking an important photograph, make a trial exposure with the Polaroid film pack to confirm lighting and composition of the actual object; then photograph the final picture on roll film and so on.

Employing this procedure, unexpected failures can be prevented.

In these cases, when placing this format gauge on the photographed subject, composition when photographing with a  $6 \times 9$  format or  $6 \times 7$  format can be ascertained in advance.

Since four corners of the outline indicating the respective size are perforated, the picture can be cut and checked after being marked through these holes.

# Focusing Screen Holder

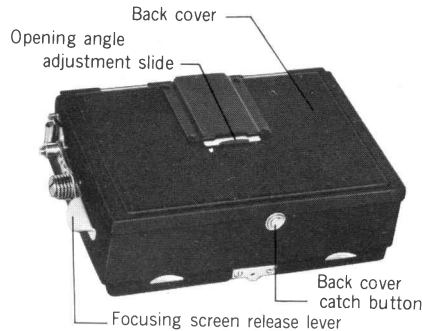

Immediately after focusing with the focusing screen, a cut film/plate holder or a film pack adapter can be inserted from one side of the focusing screen holder.

## How to Open the Back Cover

By moving the back cover catch button at the bottom of the back cover in the direction of the arrow, the back cover will open. With the opening angle adjustment slide kept UP, the back cover will open horizontally; and with the opening angle adjustment slide kept DOWN, the cover will open upward.

## Focusing




To focus with the ground glass image, keep the shutter open and the lens at its fullest aperture, focusing by rotating the focusing ring.

(When keeping the shutter open, follow the instructions on Page 16.)

Depth of field can be observed on the ground glass screen through stopping down the diaphragm by turning the aperture control lever.

Full size of the focusing ground glass is for 6×9cm format, the light vertical lines indicating the 6×7cm format.

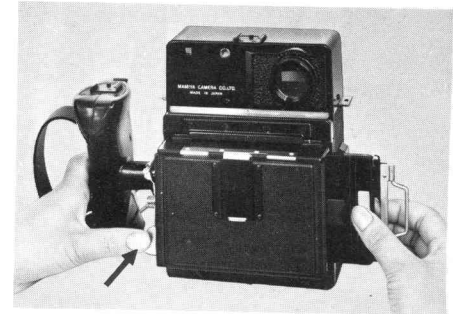

After focusing, press the focusing screen release lever to permit the screen to retract, and insert the cut film/plate holder or the film pack adapter from one side of the focusing screen holder.

To remove the film holder, press the focusing screen release lever with your left hand, hold the film holder or film pack adapter, and draw it out by pulling it toward you.

Be sure to close the shutter before attaching the film holder. Pull out the dark slide before photographing. Insert the dark slide before removing the film holder.