



1-BIN TRAY
(Machine Code: A684)

1. OVERALL MACHINE INFORMATION

1.1 SPECIFICATIONS


Paper Size:	A5 lengthwise to A3 HLT to DLT
Paper Weight:	60 g/m ² ~ 105 g/m ² , 16 lb ~ 28 lb
Tray Capacity:	125 sheets (80 g/m ² , 20 lb)
Power Source:	5 Vdc, 24 Vdc (from copier)
Power Consumption:	15 W
Weight:	4 kg
Size (W x D x H):	470 mm x 550 mm x 110 mm

1.2 MECHANICAL COMPONENT AND DRIVE LAYOUT

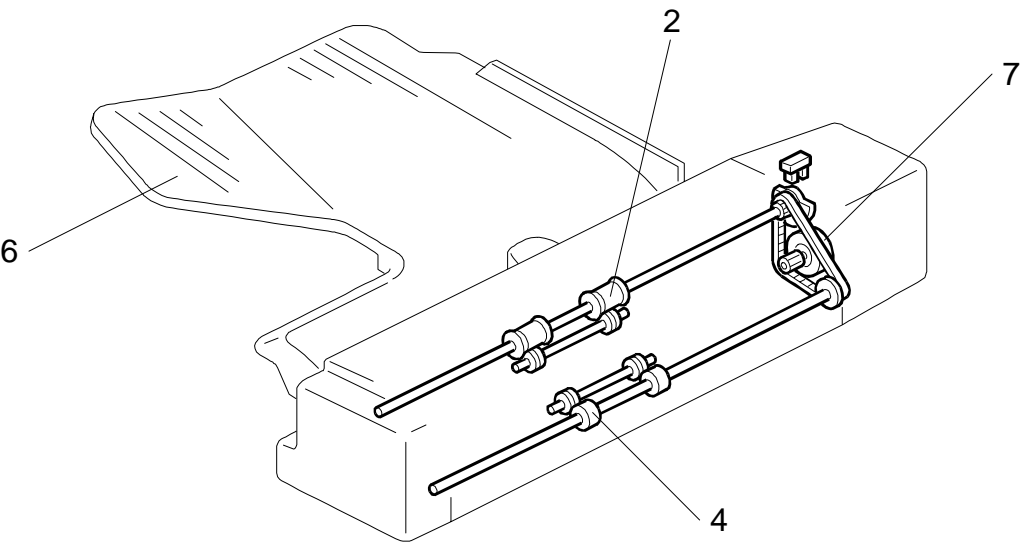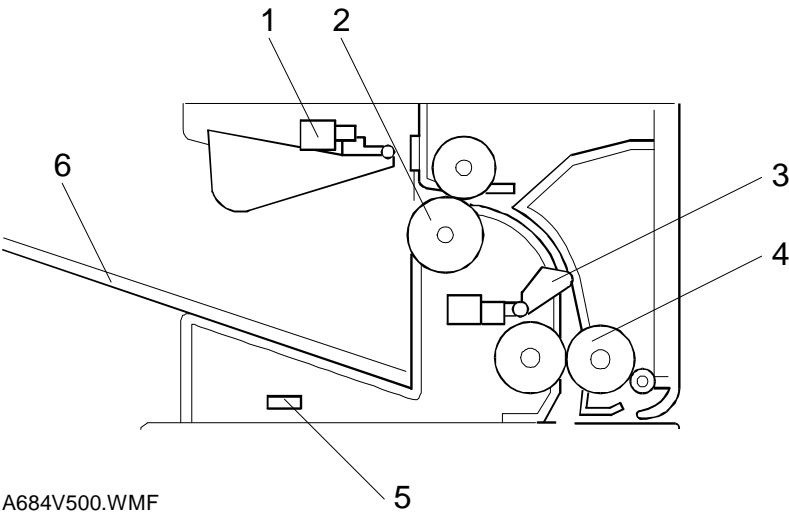

- | | |
|-----------------------|-----------------|
| 1. Paper Limit Sensor | 5. Paper Sensor |
| 2. Exit Roller | 6. Paper Tray |
| 3. Entrance Sensor | 7. Tray Motor |
| 4. Entrance Roller | |

1.3 ELECTRICAL COMPONENT LAYOUT

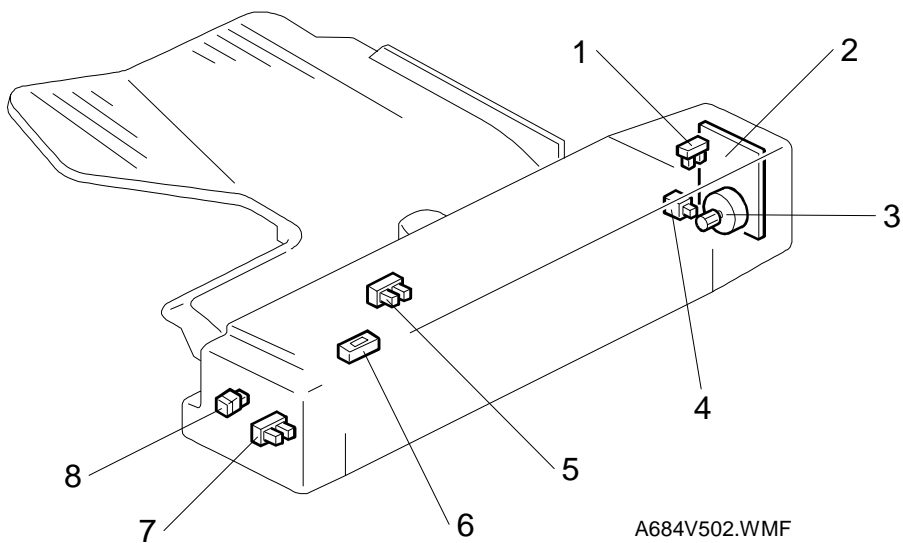

1. Motor Lock Sensor

2. Main Board

3. Tray Motor

4. Right Cover Switch
5. Paper Limit Sensor

6. Paper Sensor

7. Entrance Sensor

8. Paper Indicator


1.4 ELECTRICAL COMPONENT DESCRIPTION

Symbol	Name	Function	Index No.
Motors			
M1	Tray	Drives the entrance and exit rollers.	3
Sensors			
S1	Entrance	Checks for misfeeds.	7
S2	Paper Limit	Detects the paper stack limit in the tray.	5
S3	Paper	Detects whether there is paper in the tray.	6
S4	Motor Lock	Detects whether the tray motor is turning.	1
Switches			
SW1	Right Cover	Detects whether the right cover is opened.	4
PCBs			
PCB1	Main	Controls the 1-bin tray and communicates with the copier.	2
LEDs			
LED1	Paper Indicator	Indicates when there is paper in the tray.	8


Options

2. DETAILED DESCRIPTIONS

2.1 BASIC OPERATION

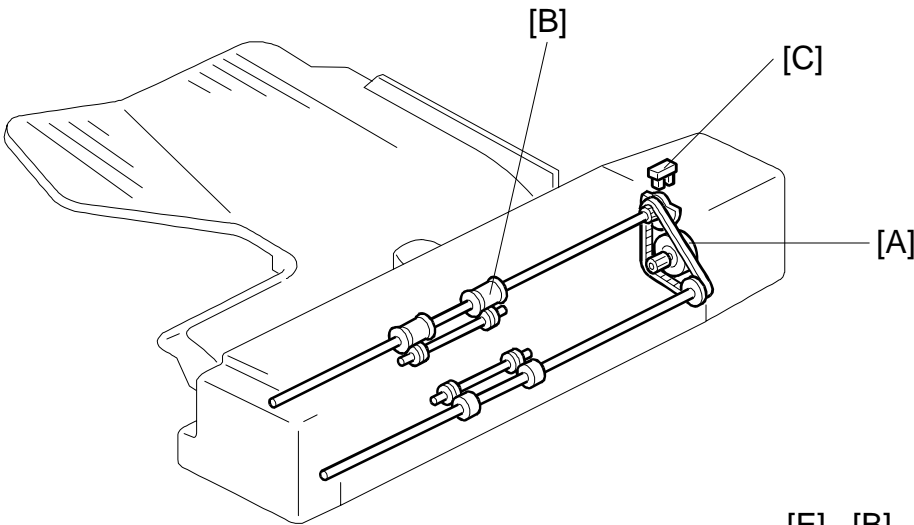

A684V501.WMF

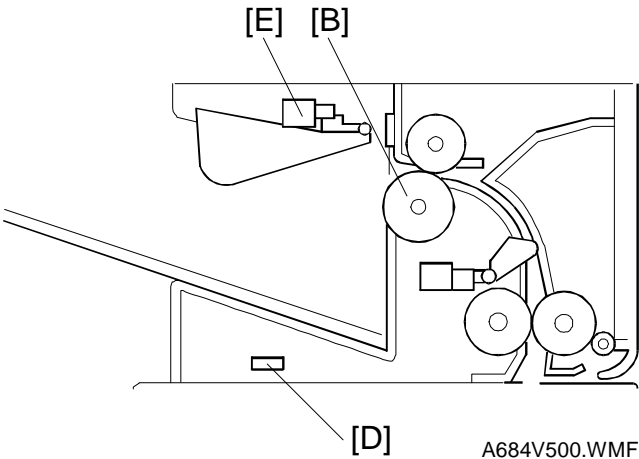

A684V500.WMF

When the leading edge of the first sheet of copy paper reaches the copier's hot roller, the tray motor [A] starts and turns off approximately 0.5 s after the trailing edge of the paper passes through the exit rollers [B].


The tray lock sensor [C] checks whether the tray motor rotates or not. When the tray lock sensor does not generate pulses for 300 ms while the tray motor is on, the copier will stop and display an SC code.

The paper sensor [D] checks whether there is paper in the tray or not. The paper sensor turns on when paper is stacked in the tray, and the paper indicator is turned on.

The paper limit sensor [E] detects when the tray is full. While a sheet of copy paper is passing this sensor, the sensor feeler is always pushed up by the paper. When the paper limit sensor stays on for more than the expected time (based on the copy speed and paper size), the copier indicates that the tray is full.

3. REPLACEMENT AND ADJUSTMENT

3.1 COVER REMOVAL

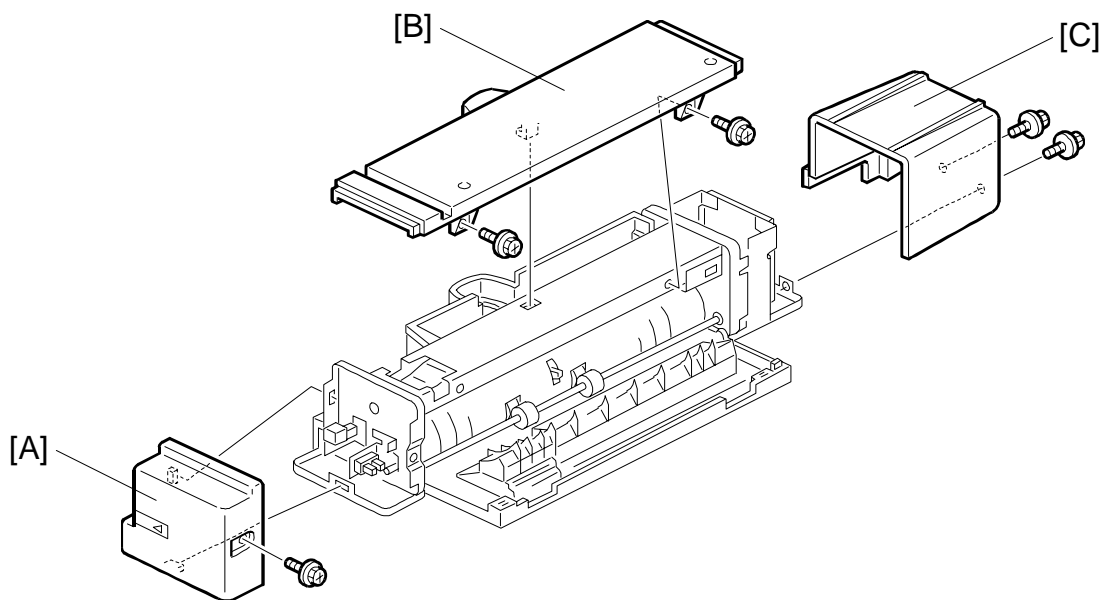

A684R500.WMF

Front Cover

1. Remove the scanner unit if it is at the front.
2. Remove the front cover [A] (1 screw).


Upper Cover

1. Remove the scanner unit.
2. Remove the upper cover [B] (2 screws).

Rear Cover

1. Remove the scanner unit.
2. Remove the rear cover [C] (2 screws).


3.2 PAPER SENSOR REPLACEMENT

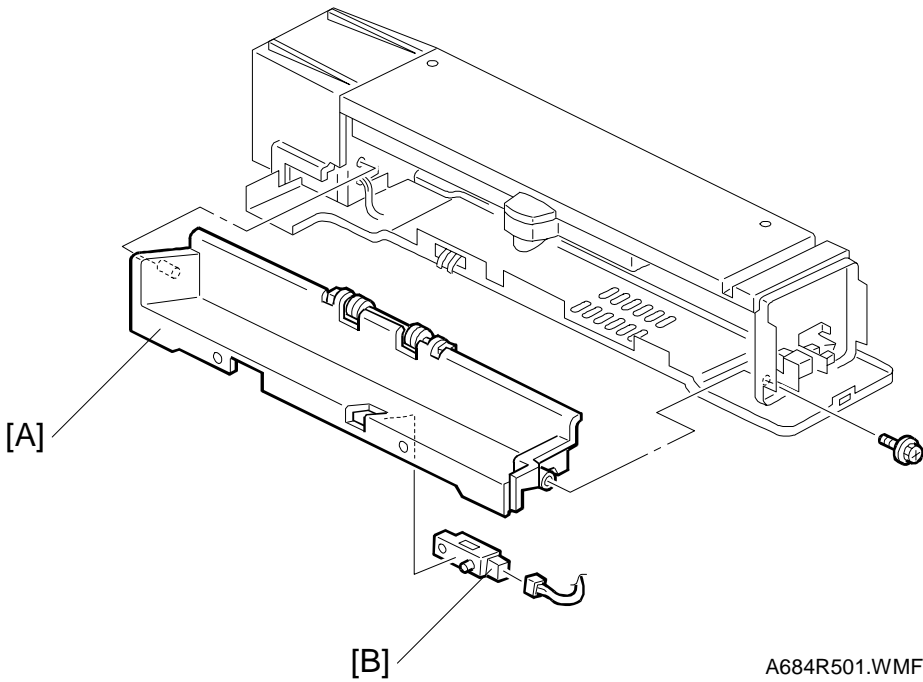

A684R501.WMF

- 1. Remove the front cover.
- 2. Remove the exit guide plate [A] (1 screw).
- 3. Replace the paper sensor [B] (1 connector).

3.3 ENTRANCE AND PAPER LIMIT SENSOR REPLACEMENT

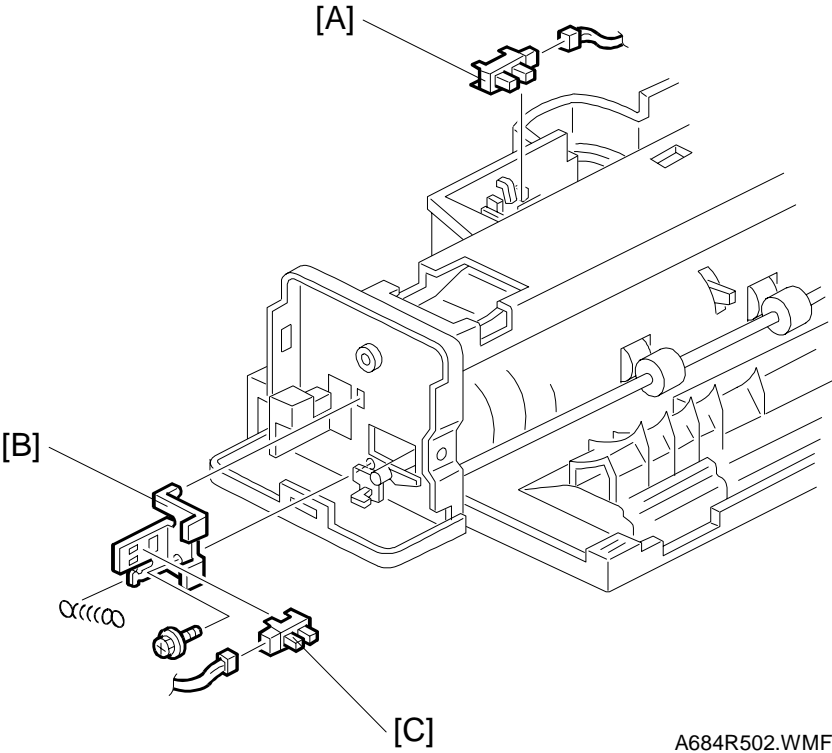

A684R502.WMF


1. Remove the front and upper covers.

Paper Limit Sensor


2. Replace the paper limit sensor [A] (1 connector).

Entrance Sensor

2. Remove the sensor bracket [B] (1 screw, 1 spring).
3. Replace the entrance sensor [C] (1 connector).

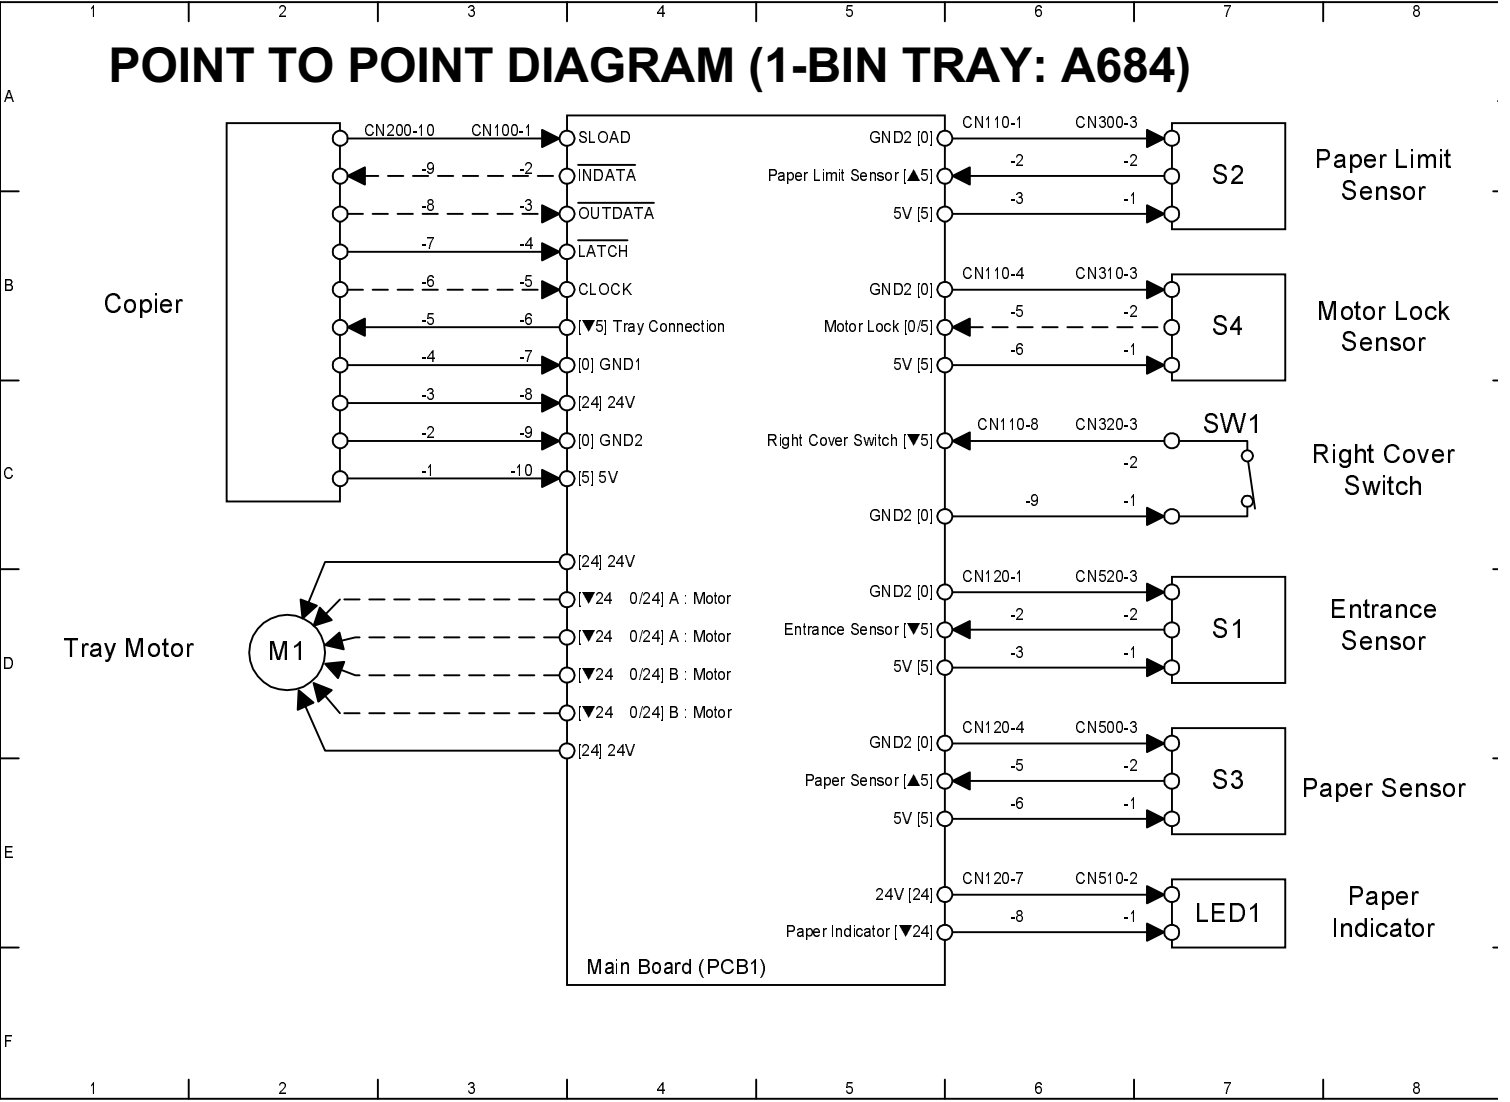

1-BIN TRAY (A684) ELECTRICAL COMPONENT LAYOUT

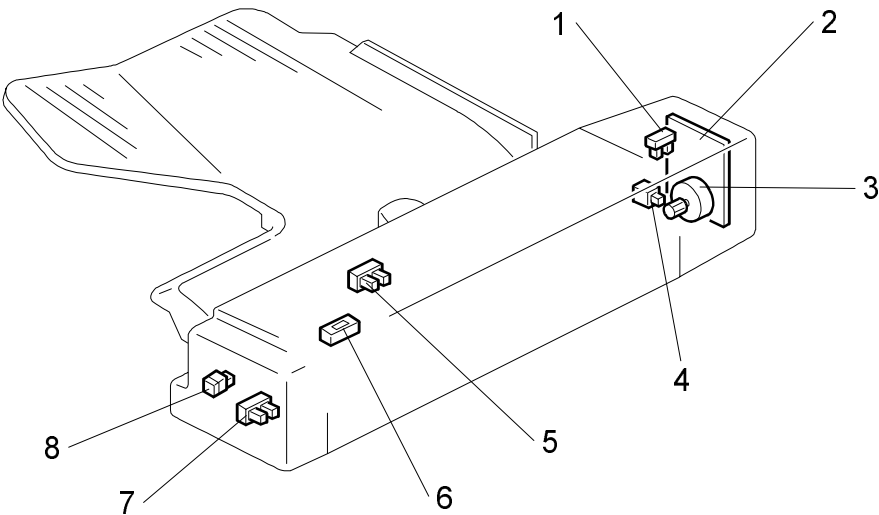

Symbol	Index No.	Description	P to P
Motor			
M1	3	Tray	D2
Sensors			
S1	7	Entrance	D7
S2	5	Paper Limit	A7
S3	6	Paper	E7
S4	1	Motor Lock	B7

Symbol	Index No.	Description	P to P
Switch			
SW1	4	Right Cover	C7
PCB			
PCB1	2	Main	A4
LED			
LED1	8	Paper Indicator	E7